













SIGNAL LINES

	: MAIN SIGNAL LINE		: PLAYBACK SIGNAL LINE		: FM & AM SIGNALS LINE
	: CD SIGNAL LINE		: RECORDING SIGNAL LINE		
() INDICATES THE PIN NO. OF THE RIGHT CHANNEL					