



#### Preparations:

- Check the MAIN POWER indicator is illuminated.
- Set the volume control [VOL. (-dB)] to the "∞" position.

#### 1 Press [POWER] button to select **ON**.

POWER indicator lights up.

Next, switch on the power of the power amplifier.

#### 2 Turn [TAPE MONITOR] to select **SOURCE**.

#### 3 Turn the selector to select the desired **source**.

**TAPE 2:** Set to this position to listen to tapes from the tape deck connected to the TAPE 2 terminals.

**TAPE 1:** Set to this position to listen to tapes from the tape deck connected to the TAPE 1 terminals.

**CD:** Set to this position to listen to compact discs from the CD player (or CD changer) connected to the CD terminals.

**LINE 1:** Set to this position to listen to equipment connected to the LINE 1 terminals.

**LINE 2:** Set to this position to listen to equipment connected to the LINE 2 terminals.

**PHONO:** Set to this position to listen to phono discs from the turntable connected to the PHONO terminals.

#### 4 Start the desired **source**.

Refer to the appropriate operating instructions for details.

#### 5 Adjust the **volume**.

#### After you are finished

1. Set the volume control [VOL. (-dB)] to the "∞" position.
2. Turn off the power of the power amplifier.
3. Turn the POWER to this and the other units off.

When using a timer, OPERATION should be left in the **AC/CHARGE** position.

#### Note

MAIN POWER should normally be left on when POWER is turned off.

