


SCHEMATIC DIAGRAM - 3

B MAIN CIRCUIT

— : +B SIGNAL LINE — : -B SIGNAL LINE : CD/DVD AUDIO INPUT SIGNAL LINE : AUX/MIC/TUNER/MUSIC PORT AUDIO INPUT SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE

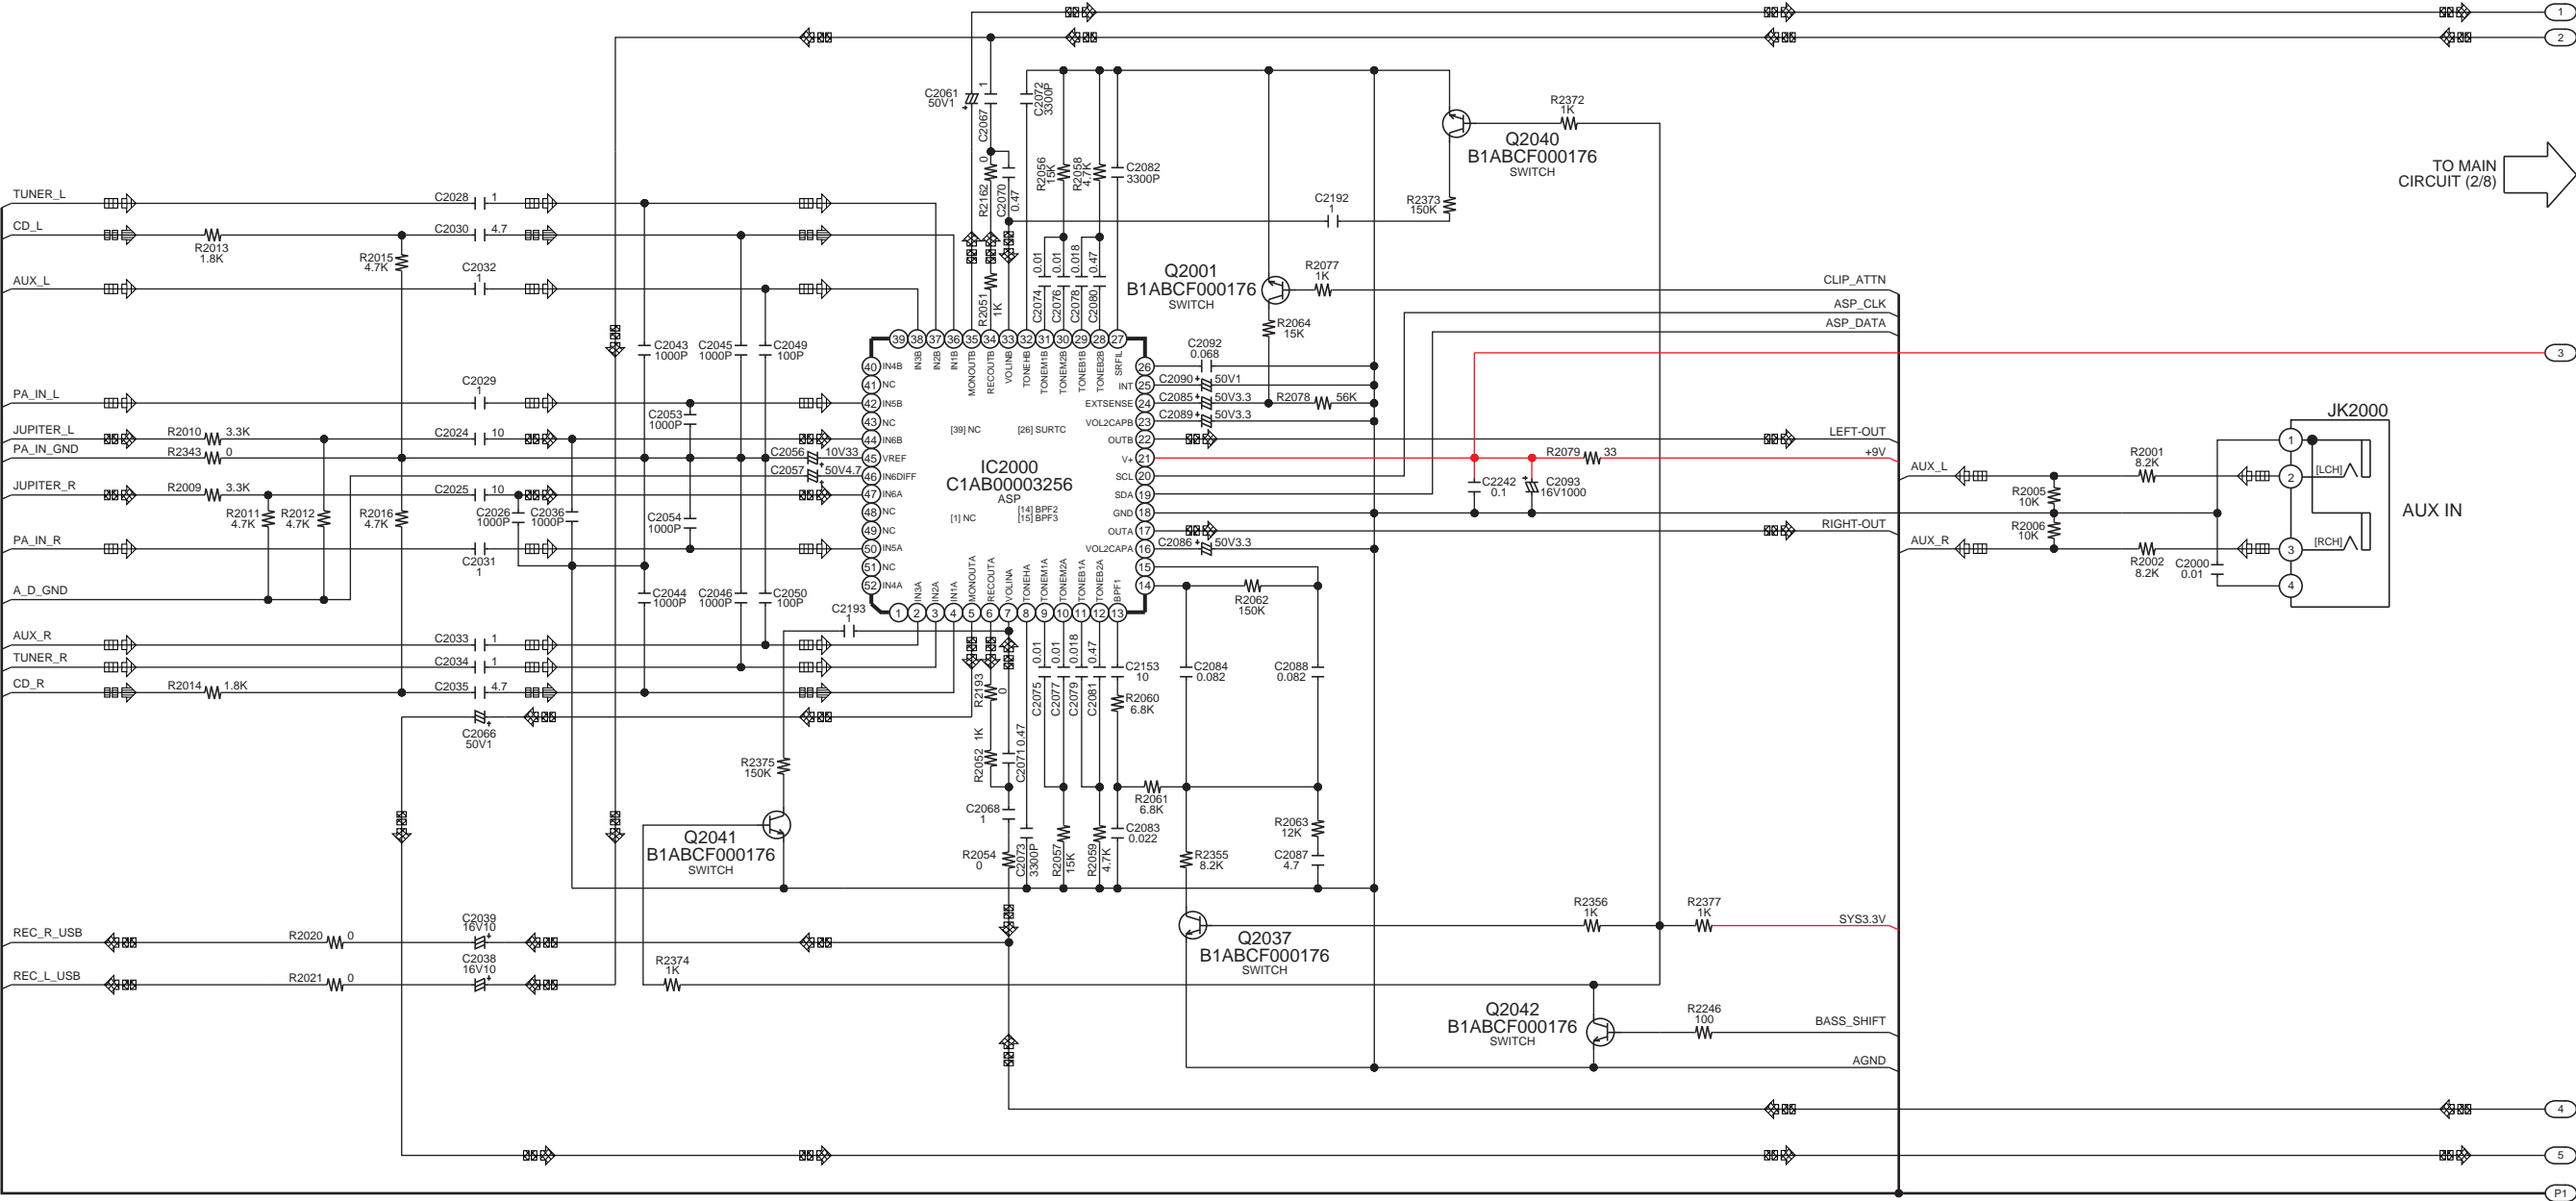

TO MAIN
CIRCUIT (5/8)

TO MAIN
CIRCUIT (2/8)

1/8	2/8	3/8	4/8
5/8	6/8	7/8	8/8

SA-AKX52EB/EG/GN MAIN CIRCUIT

SCHEMATIC DIAGRAM - 4

B MAIN CIRCUIT


— : +B SIGNAL LINE

——: -B SIGNAL LINE

 : CD/DVD AUDIO INPUT SIGNAL LINE

: AUX/MIC/TUNER/MUSIC PORT AUDIO INPUT SIGNAL LINE


 : AUDIO OUTPUT SIGNAL LINE

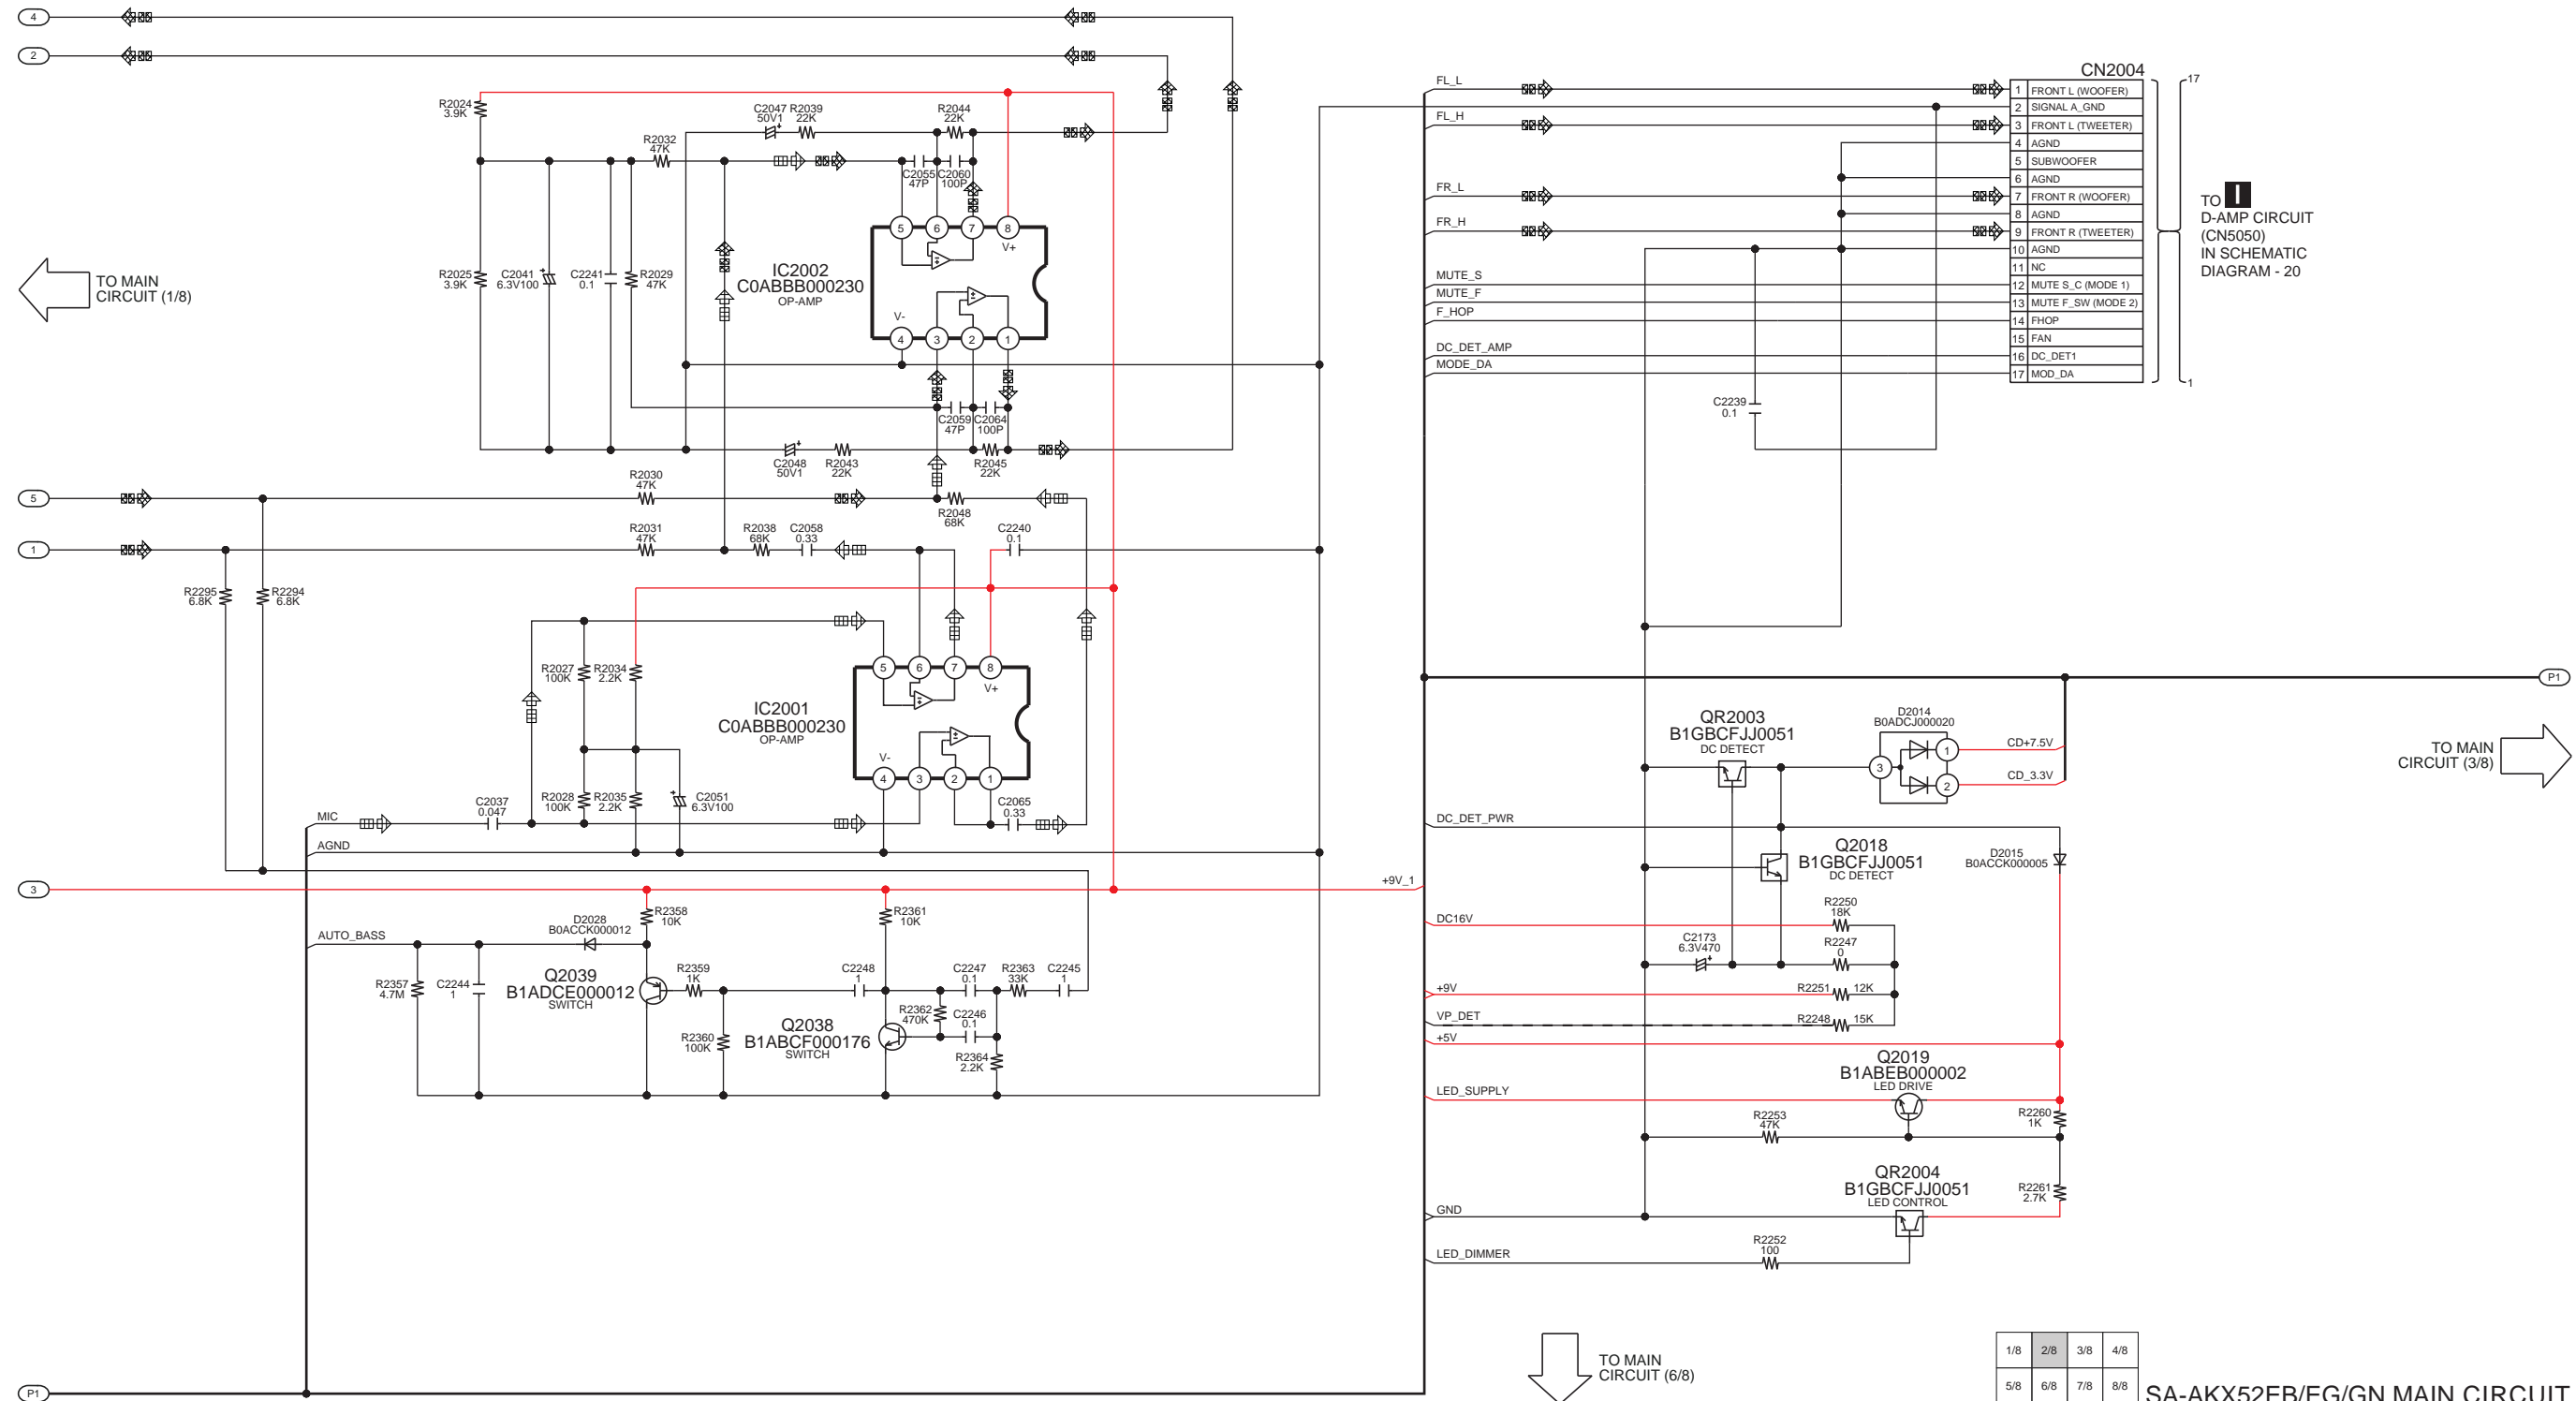

3/8 SA-AKX52EB/EG/GN MAIN CIRCUIT

SCHEMATIC DIAGRAM - 6
B MAIN CIRCUIT

— : +B SIGNAL LINE — : -B SIGNAL LINE : CD/DVD AUDIO INPUT SIGNAL LINE : AUX/MIC/TUNER/MUSIC PORT AUDIO INPUT SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE

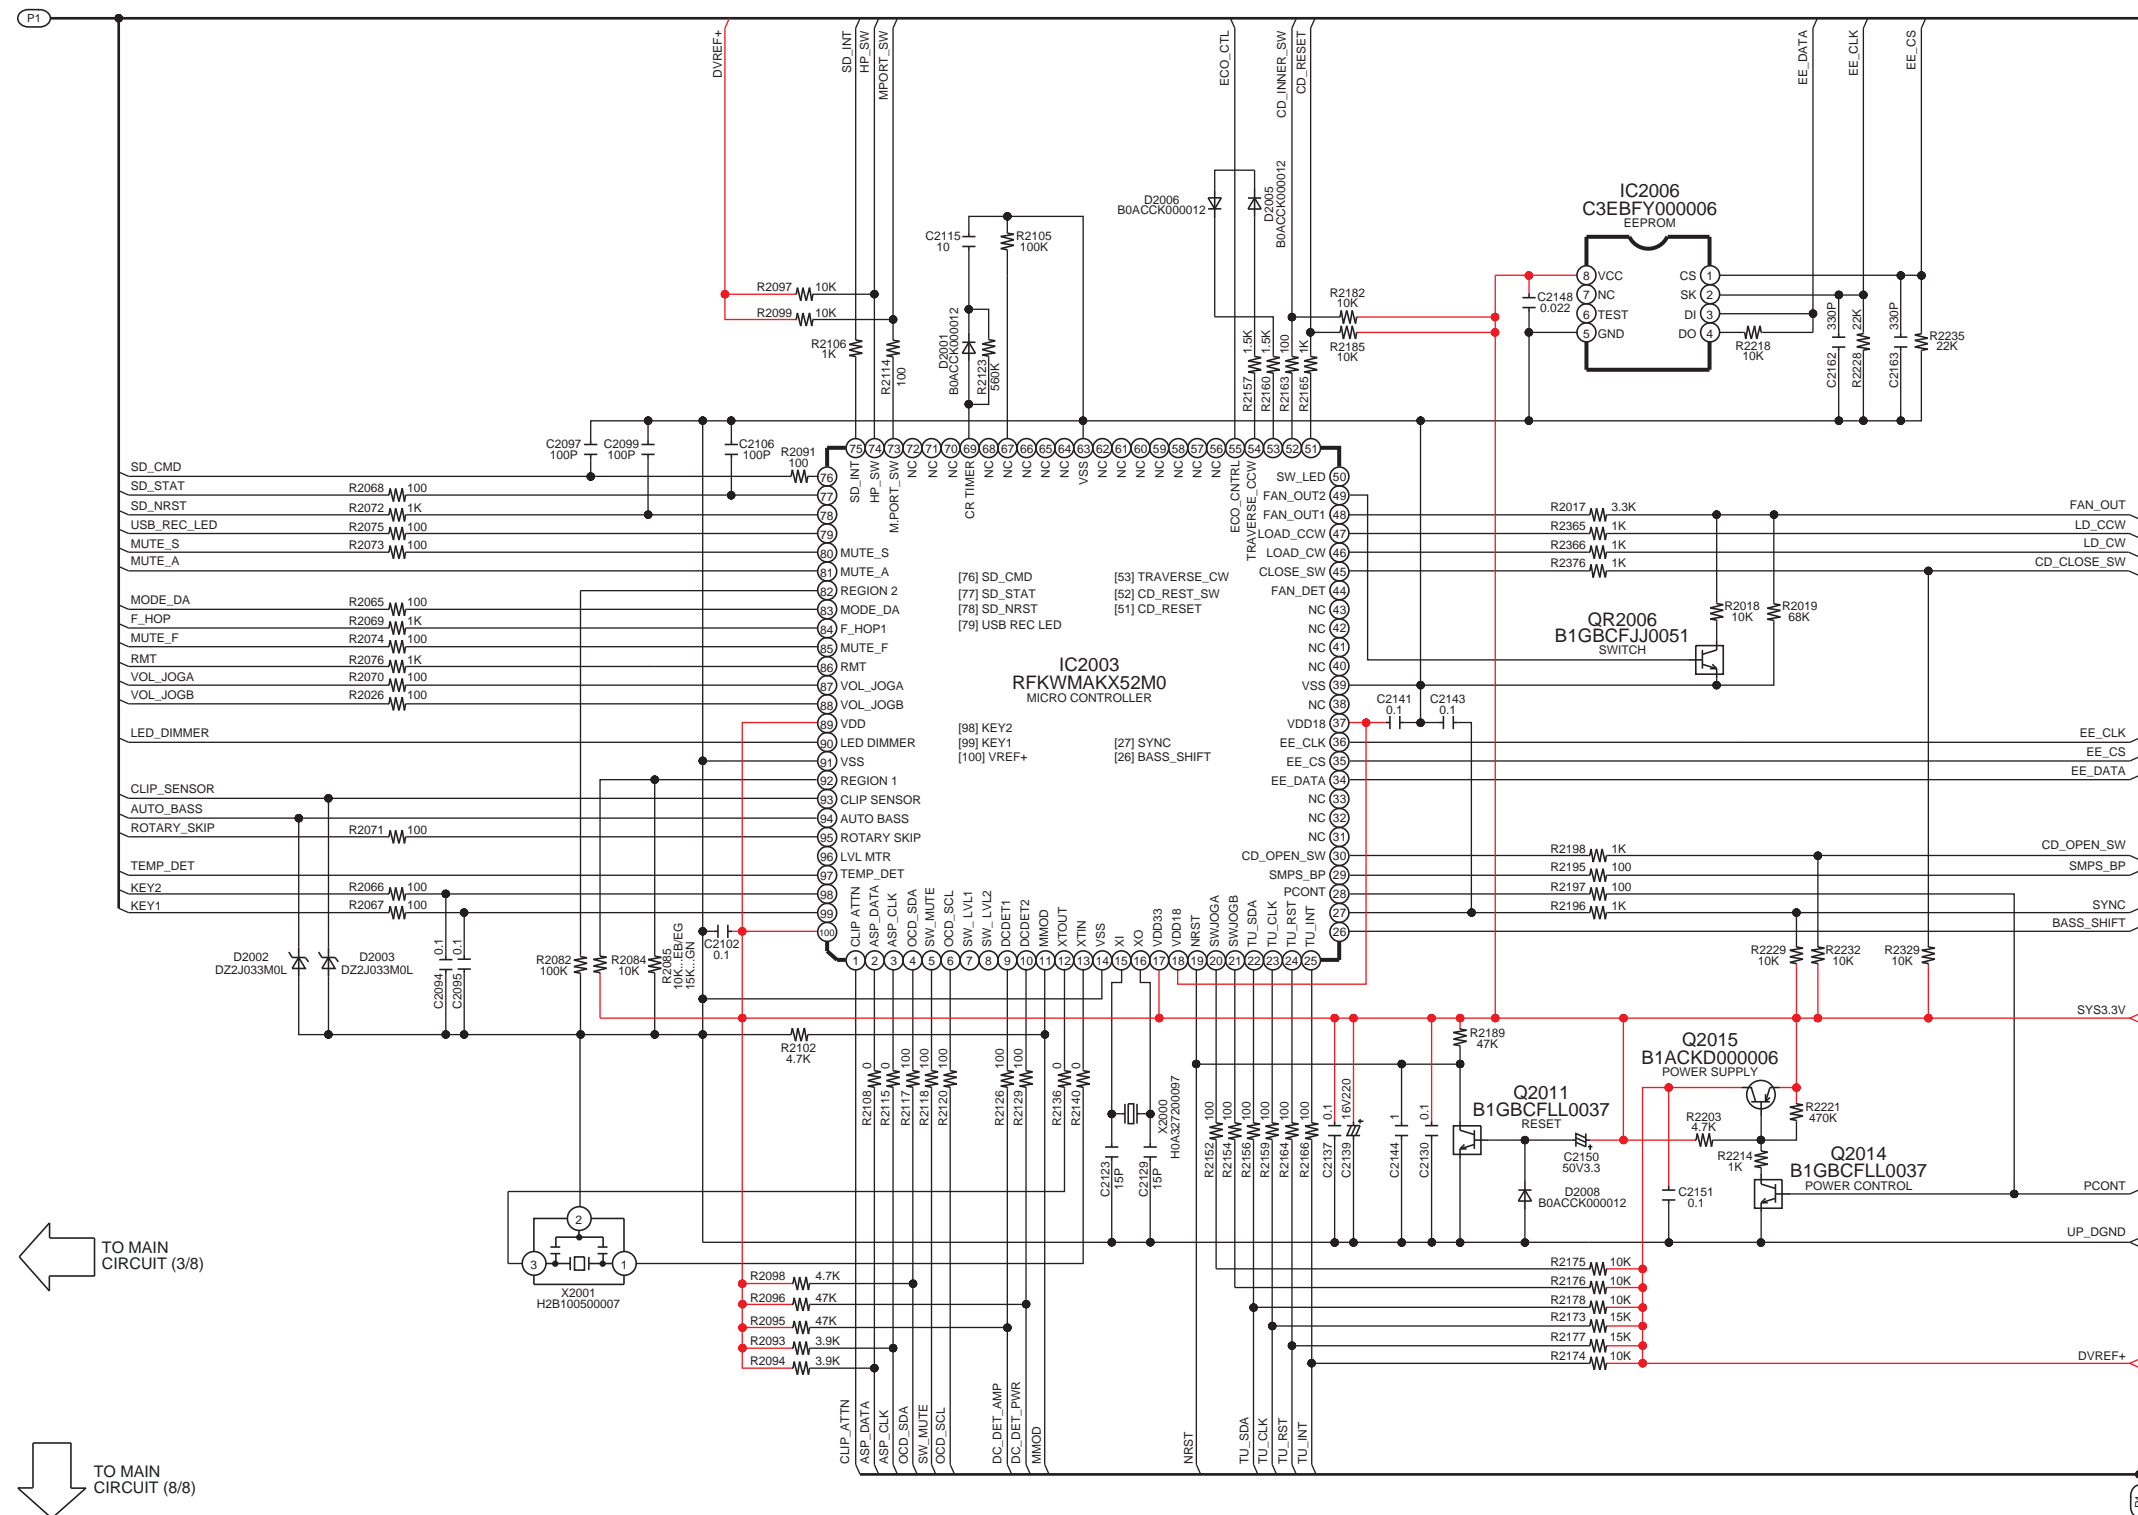

TO MAIN
CIRCUIT (3/8)

TO MAIN
CIRCUIT (8/8)

SCHEMATIC DIAGRAM - 7

B

MAIN CIRCUIT

: +B SIGNAL LINE

: -B SIGNAL LINE

: CD/DVD AUDIO INPUT SIGNAL LINE

: AUX/MIC/TUNER/MUSIC PORT AUDIO INPUT SIGNAL LINE



: AUDIO OUTPUT SIGNAL LINE

↑

TO MAIN
CIRCUIT (1/8)

→


TO MAIN
CIRCUIT (6/8)

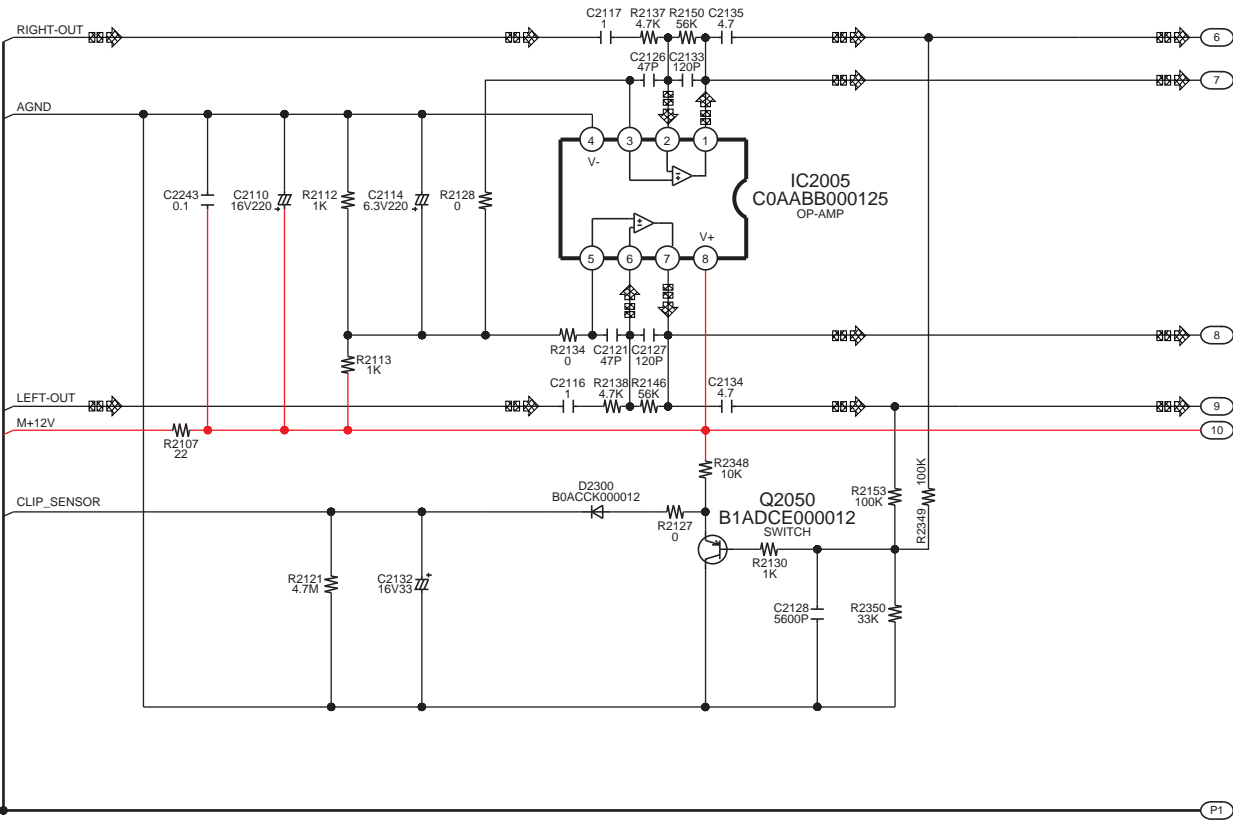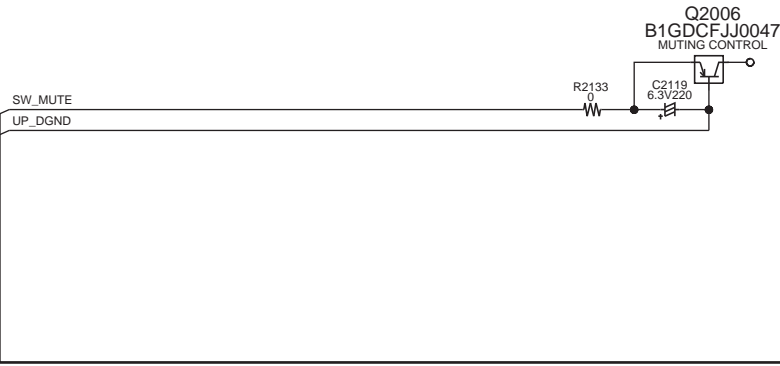

SCHEMATIC DIAGRAM - 8

B MAIN CIRCUIT


— : +B SIGNAL LINE — : -B SIGNAL LINE : CD/DVD AUDIO INPUT SIGNAL LINE : AUX/MIC/TUNER/MUSIC PORT AUDIO INPUT SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE

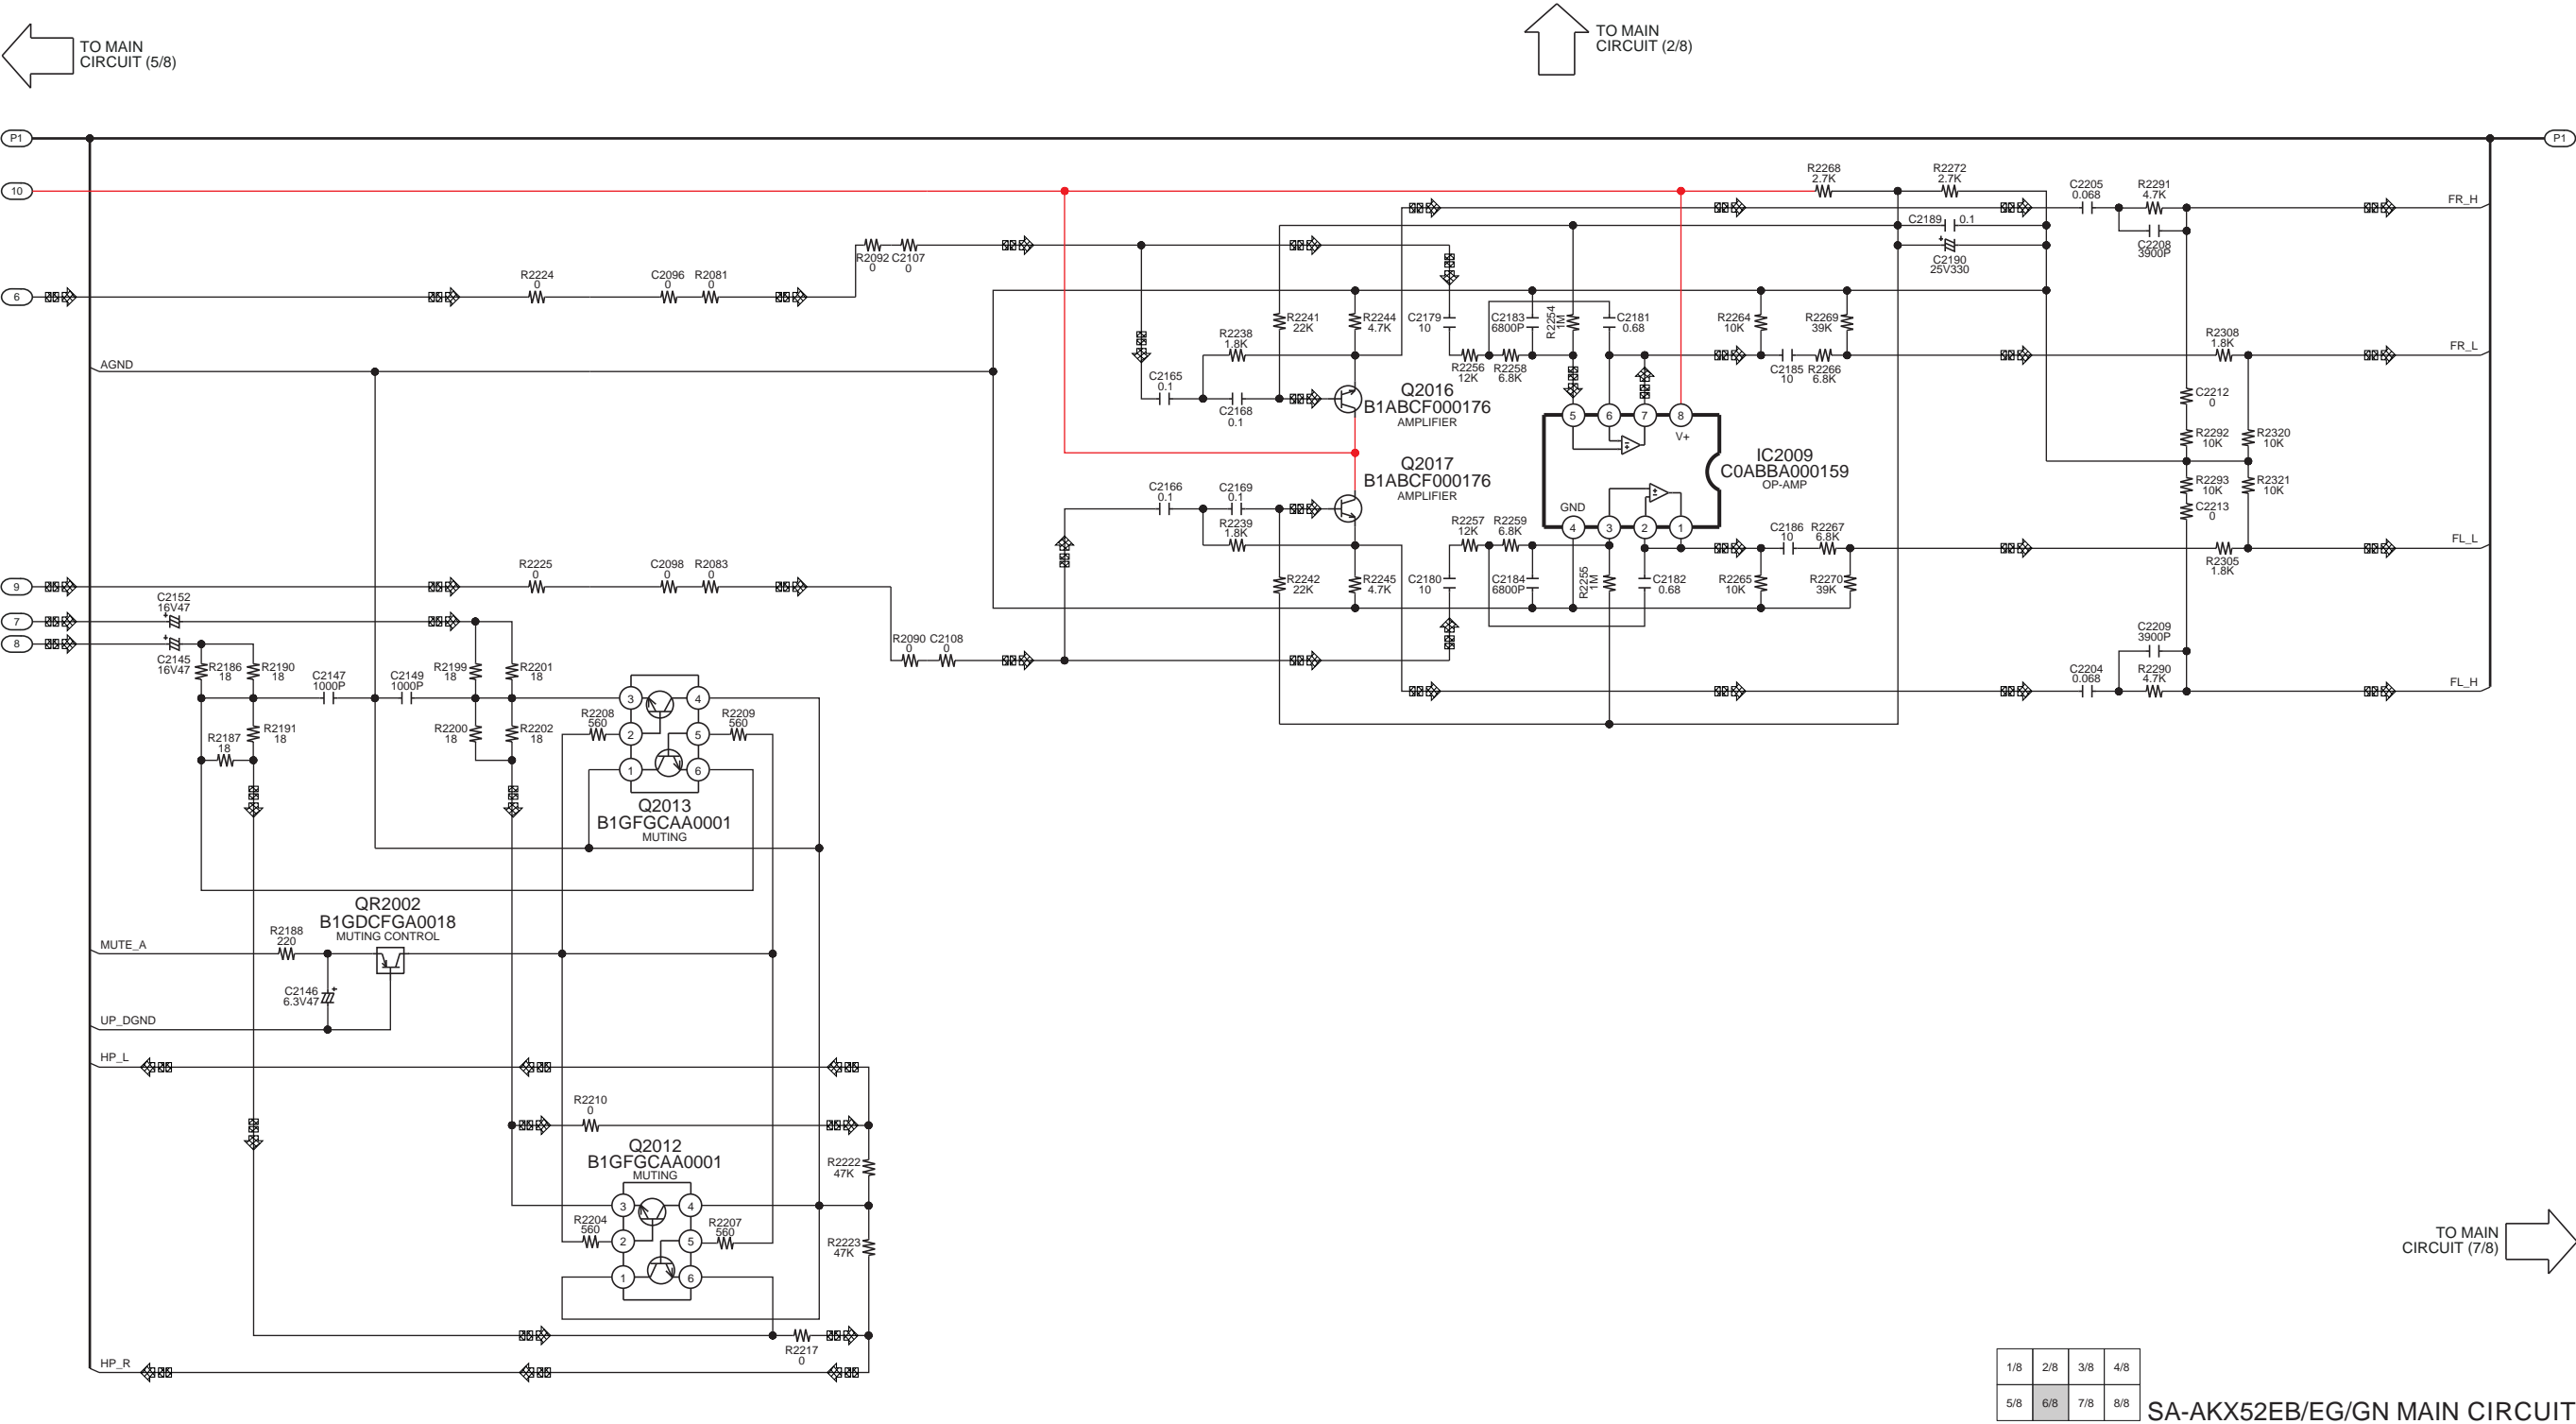

SCHEMATIC DIAGRAM - 9

B

MAIN CIRCUIT

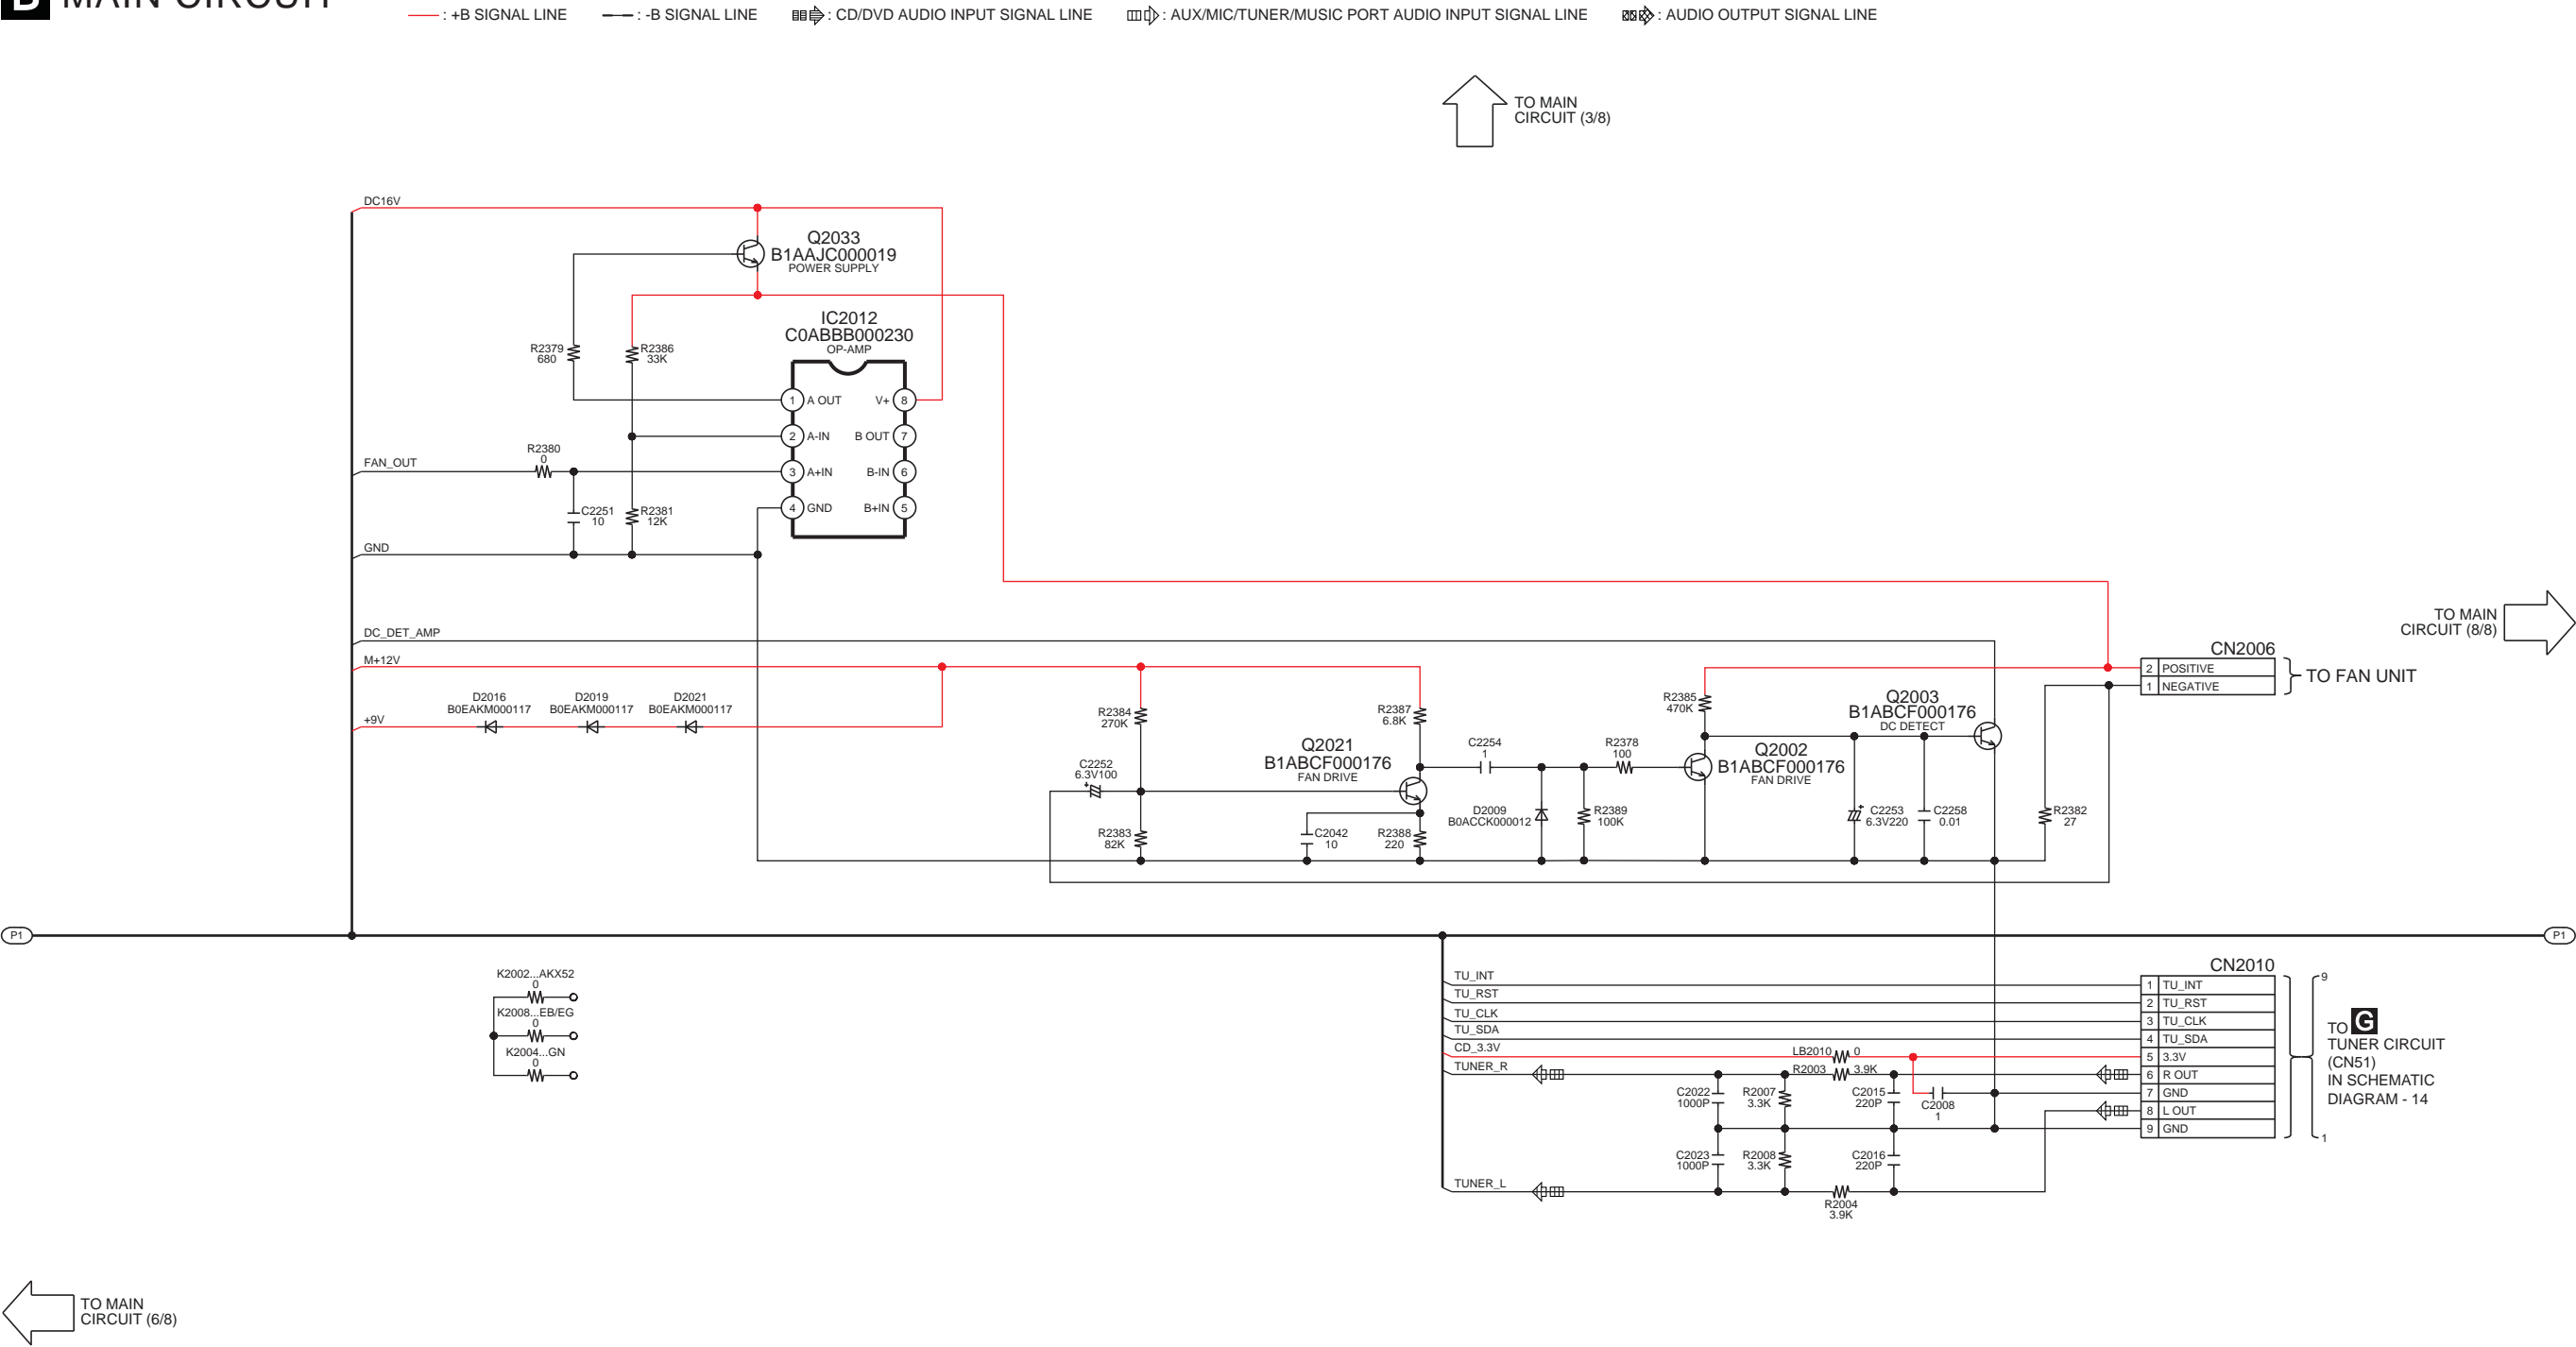

SCHEMATIC DIAGRAM - 10

B

MAIN CIRCUIT


— : +B SIGNAL LINE — : -B SIGNAL LINE : CD/DVD AUDIO INPUT SIGNAL LINE : AUX/MIC/TUNER/MUSIC PORT AUDIO INPUT SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE

↑
TO MAIN
CIRCUIT (4/8)

TO **A**
CD SERVO CIRCUIT
(CN7002)
IN SCHEMATIC
DIAGRAM - 1

←
TO MAIN
CIRCUIT (7/8)

TO **H**
JUPITER CIRCUIT
(CN601)
IN SCHEMATIC
DIAGRAM - 18

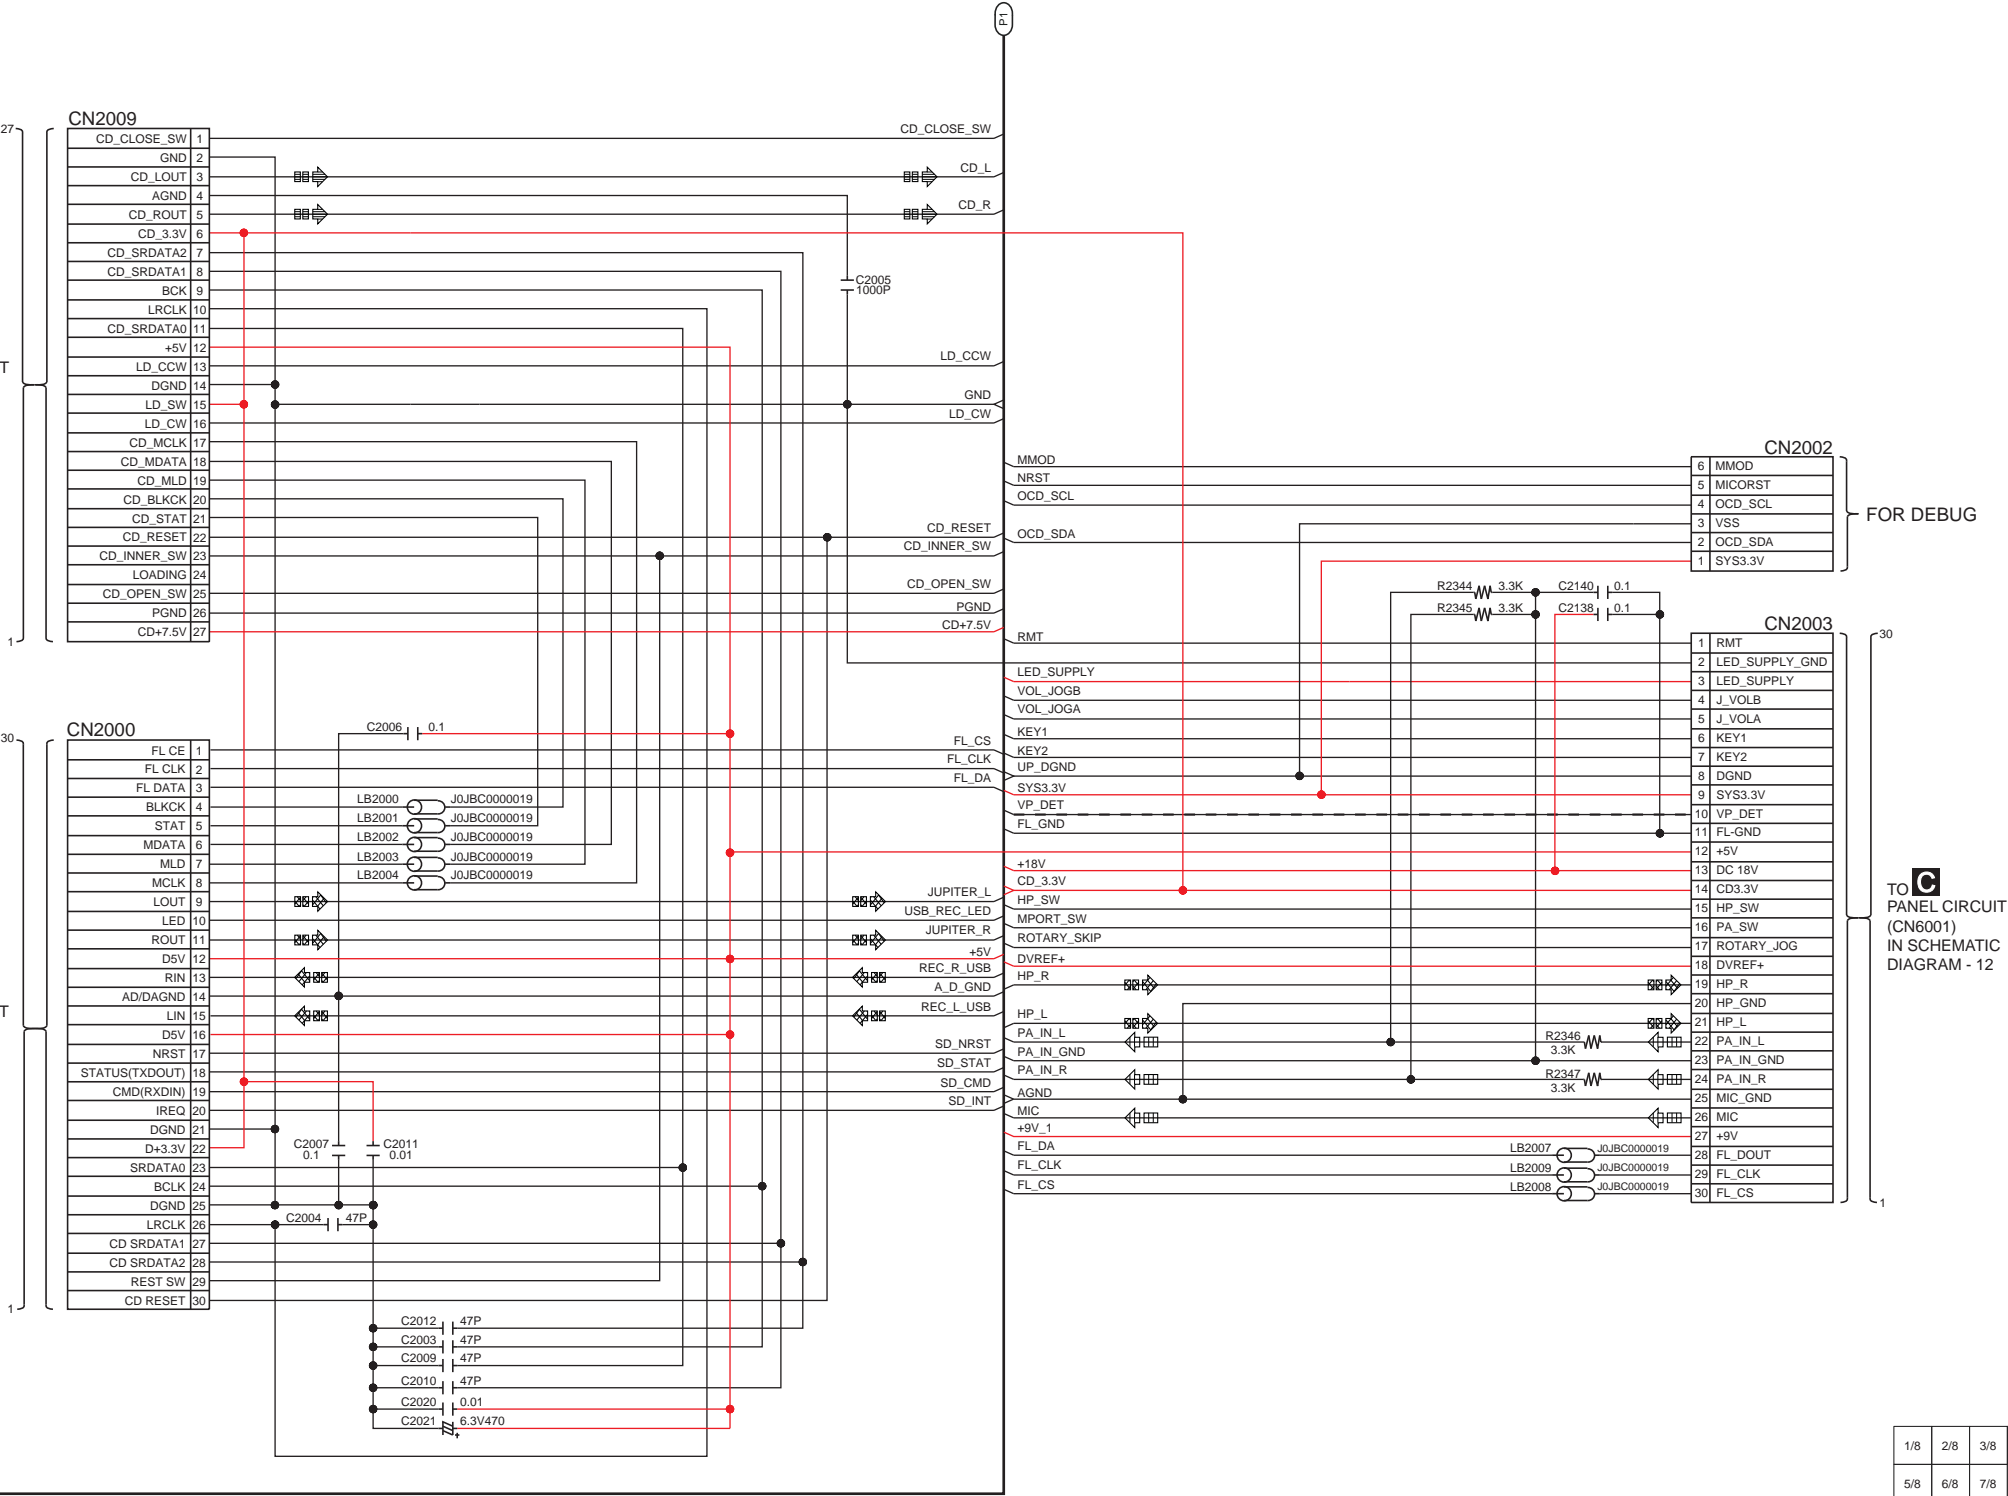

1/8	2/8	3/8	4/8
5/8	6/8	7/8	8/8

SA-AKX52EB/EG/GN MAIN CIRCUIT