


Operating Guide

Device tuning by entering codes

1. Turn on TV

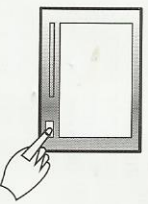


2. Press TV button and OK button together until the LED is on



3. Enter the three-digit code number from brand list. On each input, the LED blinks briefly. After the third digit, TV turns off. (If TV does not turn off, enter another three-digit code from the same brand.)

For example, if 3 digit codes is "052" press "0", "5", "2" in turn.

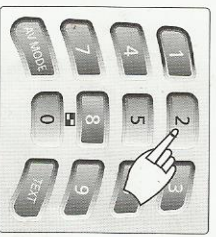

4. If TV turns off, press OK button. The LED will blink 2 times and go out. Press OK button within 1 minute. Otherwise, setup will not be done.



Note 1
It is possible that not all of the key function or do not function as indicated. In that case, repeat step 1 to step 4 until all buttons work properly.

Note 2
To turn on or off your device, please press TV or STB button over one second. TV or STB button operates as power button.

TV brand list

Maker (Brand) Name	Code Number(3digit) List
A.R. Systems	005 173 062 039
Accent	047 001 005 062
Acer	140 071 125
Adcom	009 035 043 013
ADL	024 019 005 062
Admiral	151 067 118
Adyson	019 024 058
AEA	001 005 062 019
AGB	038 003 044 033
Agashi	016 024 005 042
Aiko	062 092 018 083
Aim	100 082 161 149
Alm	033 018 038 150
Alwa	005 044 091 016
Akai	003 001 092 020
	089 085 013 058
	086 066 062 061
	049 072 019 024
	015 040 067 115
	161 048 076 129
	163
Akashi	108 001 020 025
Akiba	047 005 062
Akira	005 062 080 042
Akito	001 020 025 024
Akura	085 164 019
Alaron	005 115 062 085
Alba	001 043 037 038
	080 032 020 019
	023 013 052 004
	161 046 163
	003
Alkos	110 005 062
All-Tel	037 001 058
Allstar	024 038 020 005
Amplivision	062 044 042 034
Amstrad	115 076 164
	005 062 001 077
Anam	005 062 077
AnanNational	118 117 001 024
Anglo	001 024 005 062
Anitech	025
Ansonic	037 005 062 001

Maker (Brand) Name	Code Number(3digit) List
Apollo	080 039 013 041
ArcomCiel	023 145 048
Arcam	012 019 051
Ardem	085 005 073
	062
Aristona	062 005
ArthurMartin	013 013
ASA	010 165 006
Asberg	005 062
Asora	001
Asra	005 062
Asuka	020 019 024 025
ATT	081
Atlantic	005 062 019
Atori	001
Auchan	013
Audiosonic	001 005 039 103
	062 012 085 086
	037 024 020 051
Audition	051 037 024
AudioWorld	081
Autovox	023
AVP	161
AWA	002 004 001 039
	042 005 062 019
	067 011 024 142
	001
Axxent	085
Axxon	125
B&D	012 175 030 007
Baird	018 122
Barco	013
BasicLine	039 005 013 080
	062 001 020 025
	047 029 115
Bauer	100 001
	001 060 017 057
	005 062 016 033
	149
Beaumarck	015
Beko	085 003 051 037
	005 043 115 062
	067 086 101
Beison	168 166
Bennett	062 005
Beon	158
Berben	005 062 043
Best	080
Bestar	037
Bestar-Daewoo	005 062 037 039
BlackDiamond	039
BlackStar	118 103 115 062
BlackStrip	104 092
Blackway	023
Blaupunkt	023
BlueSky	023 020
	016 060 017 047
	014 004
	005 085 115 052
	080 086 162 062
	020 025 047 161
BlueSky	168 101 141
BlueSky	025
BlueStar	001
Bondstec	005 062 025
Boots	071 012 026 028
BPL	030 063
Brandt	026 028
Brandt Electronique	005 062 080 059
Brinmann	043 051

Maker (Brand) Name	Code Number(3digit) List
Brianvega	005 062 034
Britannia	019
Brother	024
Bruno	051
BSR	013 033
BTC	020
Bush	080 020 013 001
	004 005 038 025
	032 035 039 059
	024 033 115 052
	018 151 129 081
	062 085 159 161
	096
Canlon	020
Capsonic	024
Carrad	069 005 062 080
	115
Carena	047 005 062
Carrefour	004 006 005 062
Carver	014
Cascade	001 005 062
Casio	005 062 013
Cathay	005 062
CCE	005 062
Celestial	102 103 104
Centrex	097 113
Centurion	115
Century	005 062
CGE	023
Cineline	037 013 043 023
Cinex	001 020
City	076 151
Clartrox	001
Clatronc	043 005 062 085
	005 037 038 085
	020 024 062 023
	001 076 067 118
	115
Clayton	019
CMS	019
Cobolt	113
Combitech	161
Concorde	001
Condor	005 062 037 019
	001 025 023 043
	093 104 166 103
Conia	101
Conrac	005 062
Conrad	019 001 002 004
Contec	019 001 002 004
Continental Edison	012 026 052
Cosmel	001 005 062
Crosley	023 013
	001 084 037 051
	005 062 052 085
	067 086 043 018
	078 029 115
	019 020 023
CS Electronics	023
CTC	158
CTX	009
Curtis Mathes	136
Cyberton	005 164 062
Cytronix	036
D-Vision	074 039 162 055
Daewoo	079 005 062 001
	019 020 116 161
	112 138 153 110