


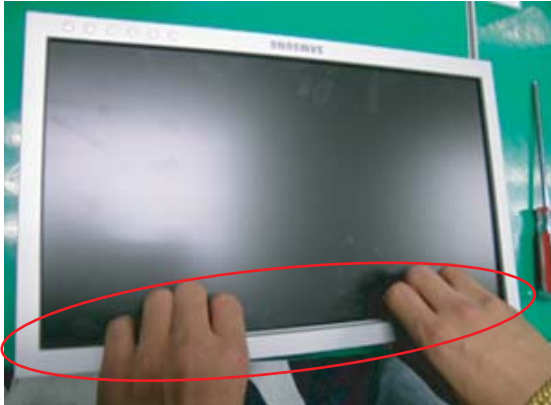

11 Disassembly and Reassembly





This section of the service manual describes the disassembly and reassembly procedures for the TFT-LCD monitors.

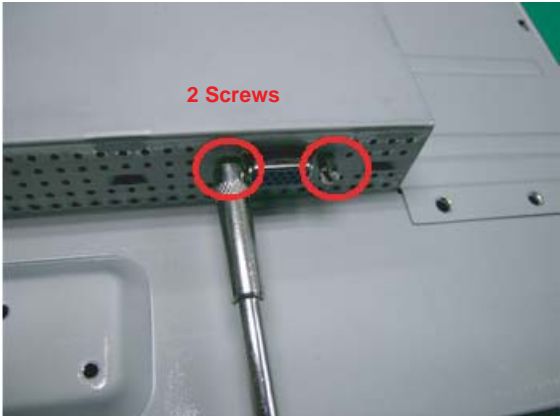
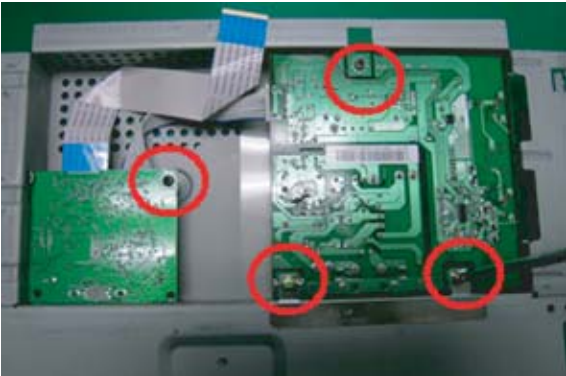

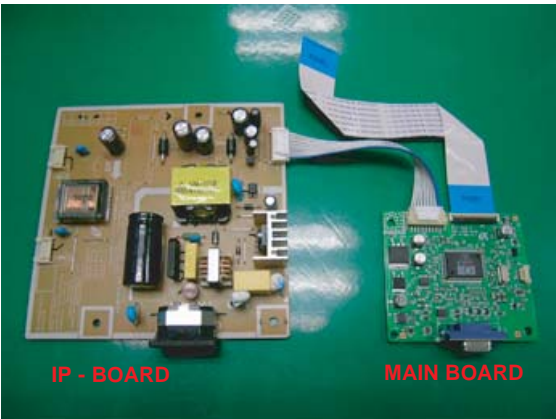
⚠ WARNING: This monitor contains electrostatically sensitive devices. Use caution when handling these components.

11-1 Disassembly

⚠ Cautions: 1. Disconnect the monitor from the power source before disassembly.

Description	Picture Description
1. Place monitor face down on cushioned table. Remove 3 screws from the stand.	
2. Remove stand and front cover.	 

Description	Picture Description
<p>3. Turn the monitor so the back of it is facing upwards. Lift up and remove the back cover.</p>	
<p>4. Use the jig to remove the shield lamp. (Be careful Shield.)</p>	
<p>5. Disconnect cables. (LVDS, INVERTER and FUNCTION cable)</p>	
<p>6. Disconnect FFC cable.</p>	

Description	Picture Description
7. Remove 2 screws.	
8. Remove 4 screws and Lift up the Protection Shield.	
	
9. Main PCB and IB Board	

11-2 Reassembly

Reassembly procedures are in the reverse order of disassembly procedures.