

POWER SUPPLY - ALIMENTATION - NETZTEIL - ALIMENTAZIONE - ALIMENTACIÓN

(5) : standby

Note :
During measurements in the power supply unit
- Use the primary power unit ground (PGND).

Attention :
Mesure dans le bloc alimentation
- Utiliser la masse du bloc alimentation (PGND).



Achtung :
Bei Messungen im Primärnetzteil
- Primärnetzteilmasse verwenden (PGND).

Attenzione :
misure nell'alimentatore primario
- usare massa alimentazione primario (PGND).

Cuidado :
Medida en el bloque de alimentacion
- Utilizar la masa del bloque de alimentacion (PGND).

Part of board connected to mains supply.
Partie du châssis reliée au secteur.
Primärseite des Netzteils.
Parte dello chassis collegata alla rete.
Parte del chassis conectar a la red.


(MAIN)
(PP)
17000
17004
17200
17300
17304
17900

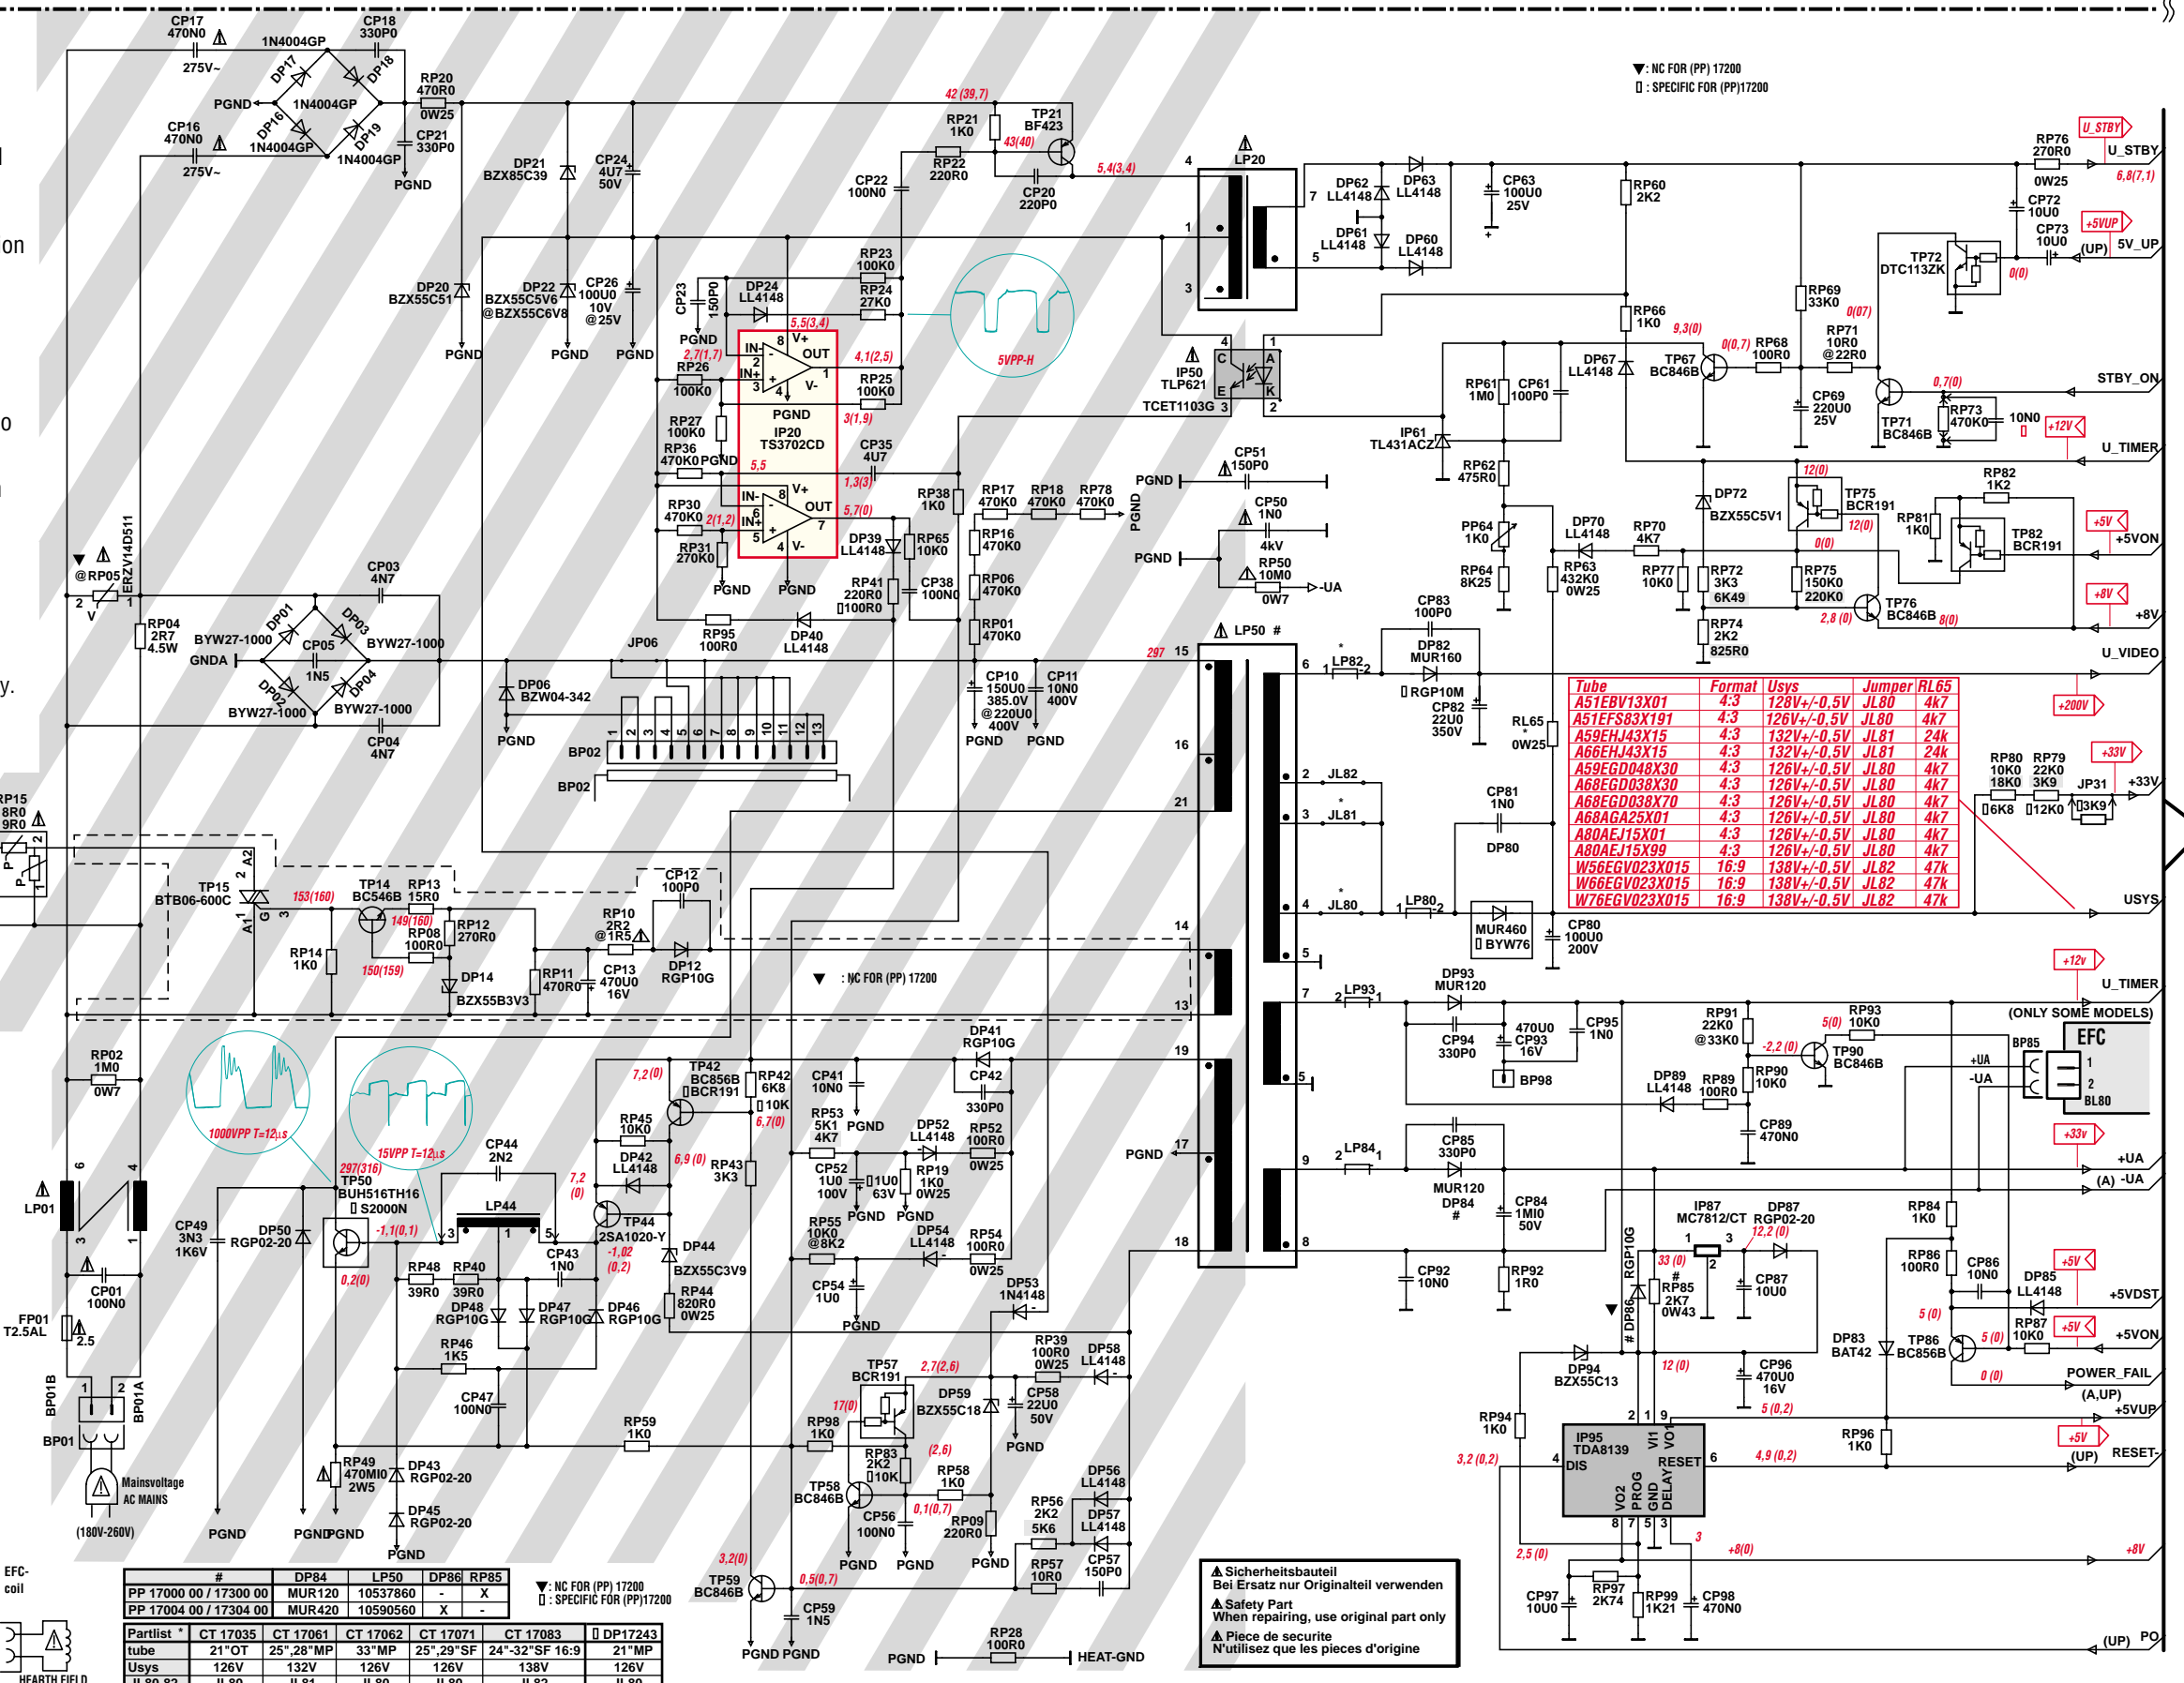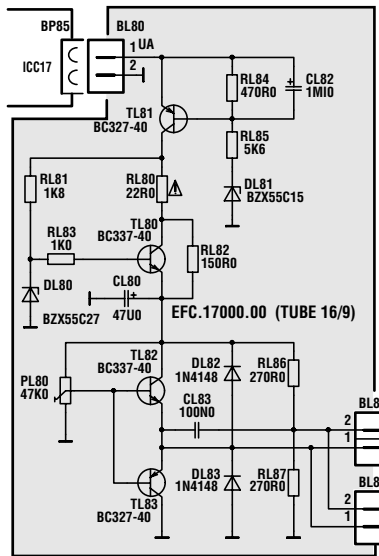

#	DP84	LP50	DP86	RP85
PP 17000 00 / 17300 00	MUR120	10537860	-	X
PP 17004 00 / 17304 00	MUR420	10590560	X	-

Partlist	CT 17035	CT 17061	CT 17062	CT 17071	CT 17083	DP17243
tube	21"OT	25"28"MP	33"MP	25"29"SF	24"-32"SF 16:9	21"MP
Usys	126V	132V	126V	126V	138V	126V
JL80-82	JL80	JL81	JL80	JL80	JL82	JL80
RL65	4K7	24K0	4K7	4K7	47K0	4K7

⚠ Sicherheitsbauteil
Bei Ersatz nur Originalteil verwenden
⚠ Safety Part
When repairing, use original part only
⚠ Piece de securite
N'utilisez que les pieces d'origine

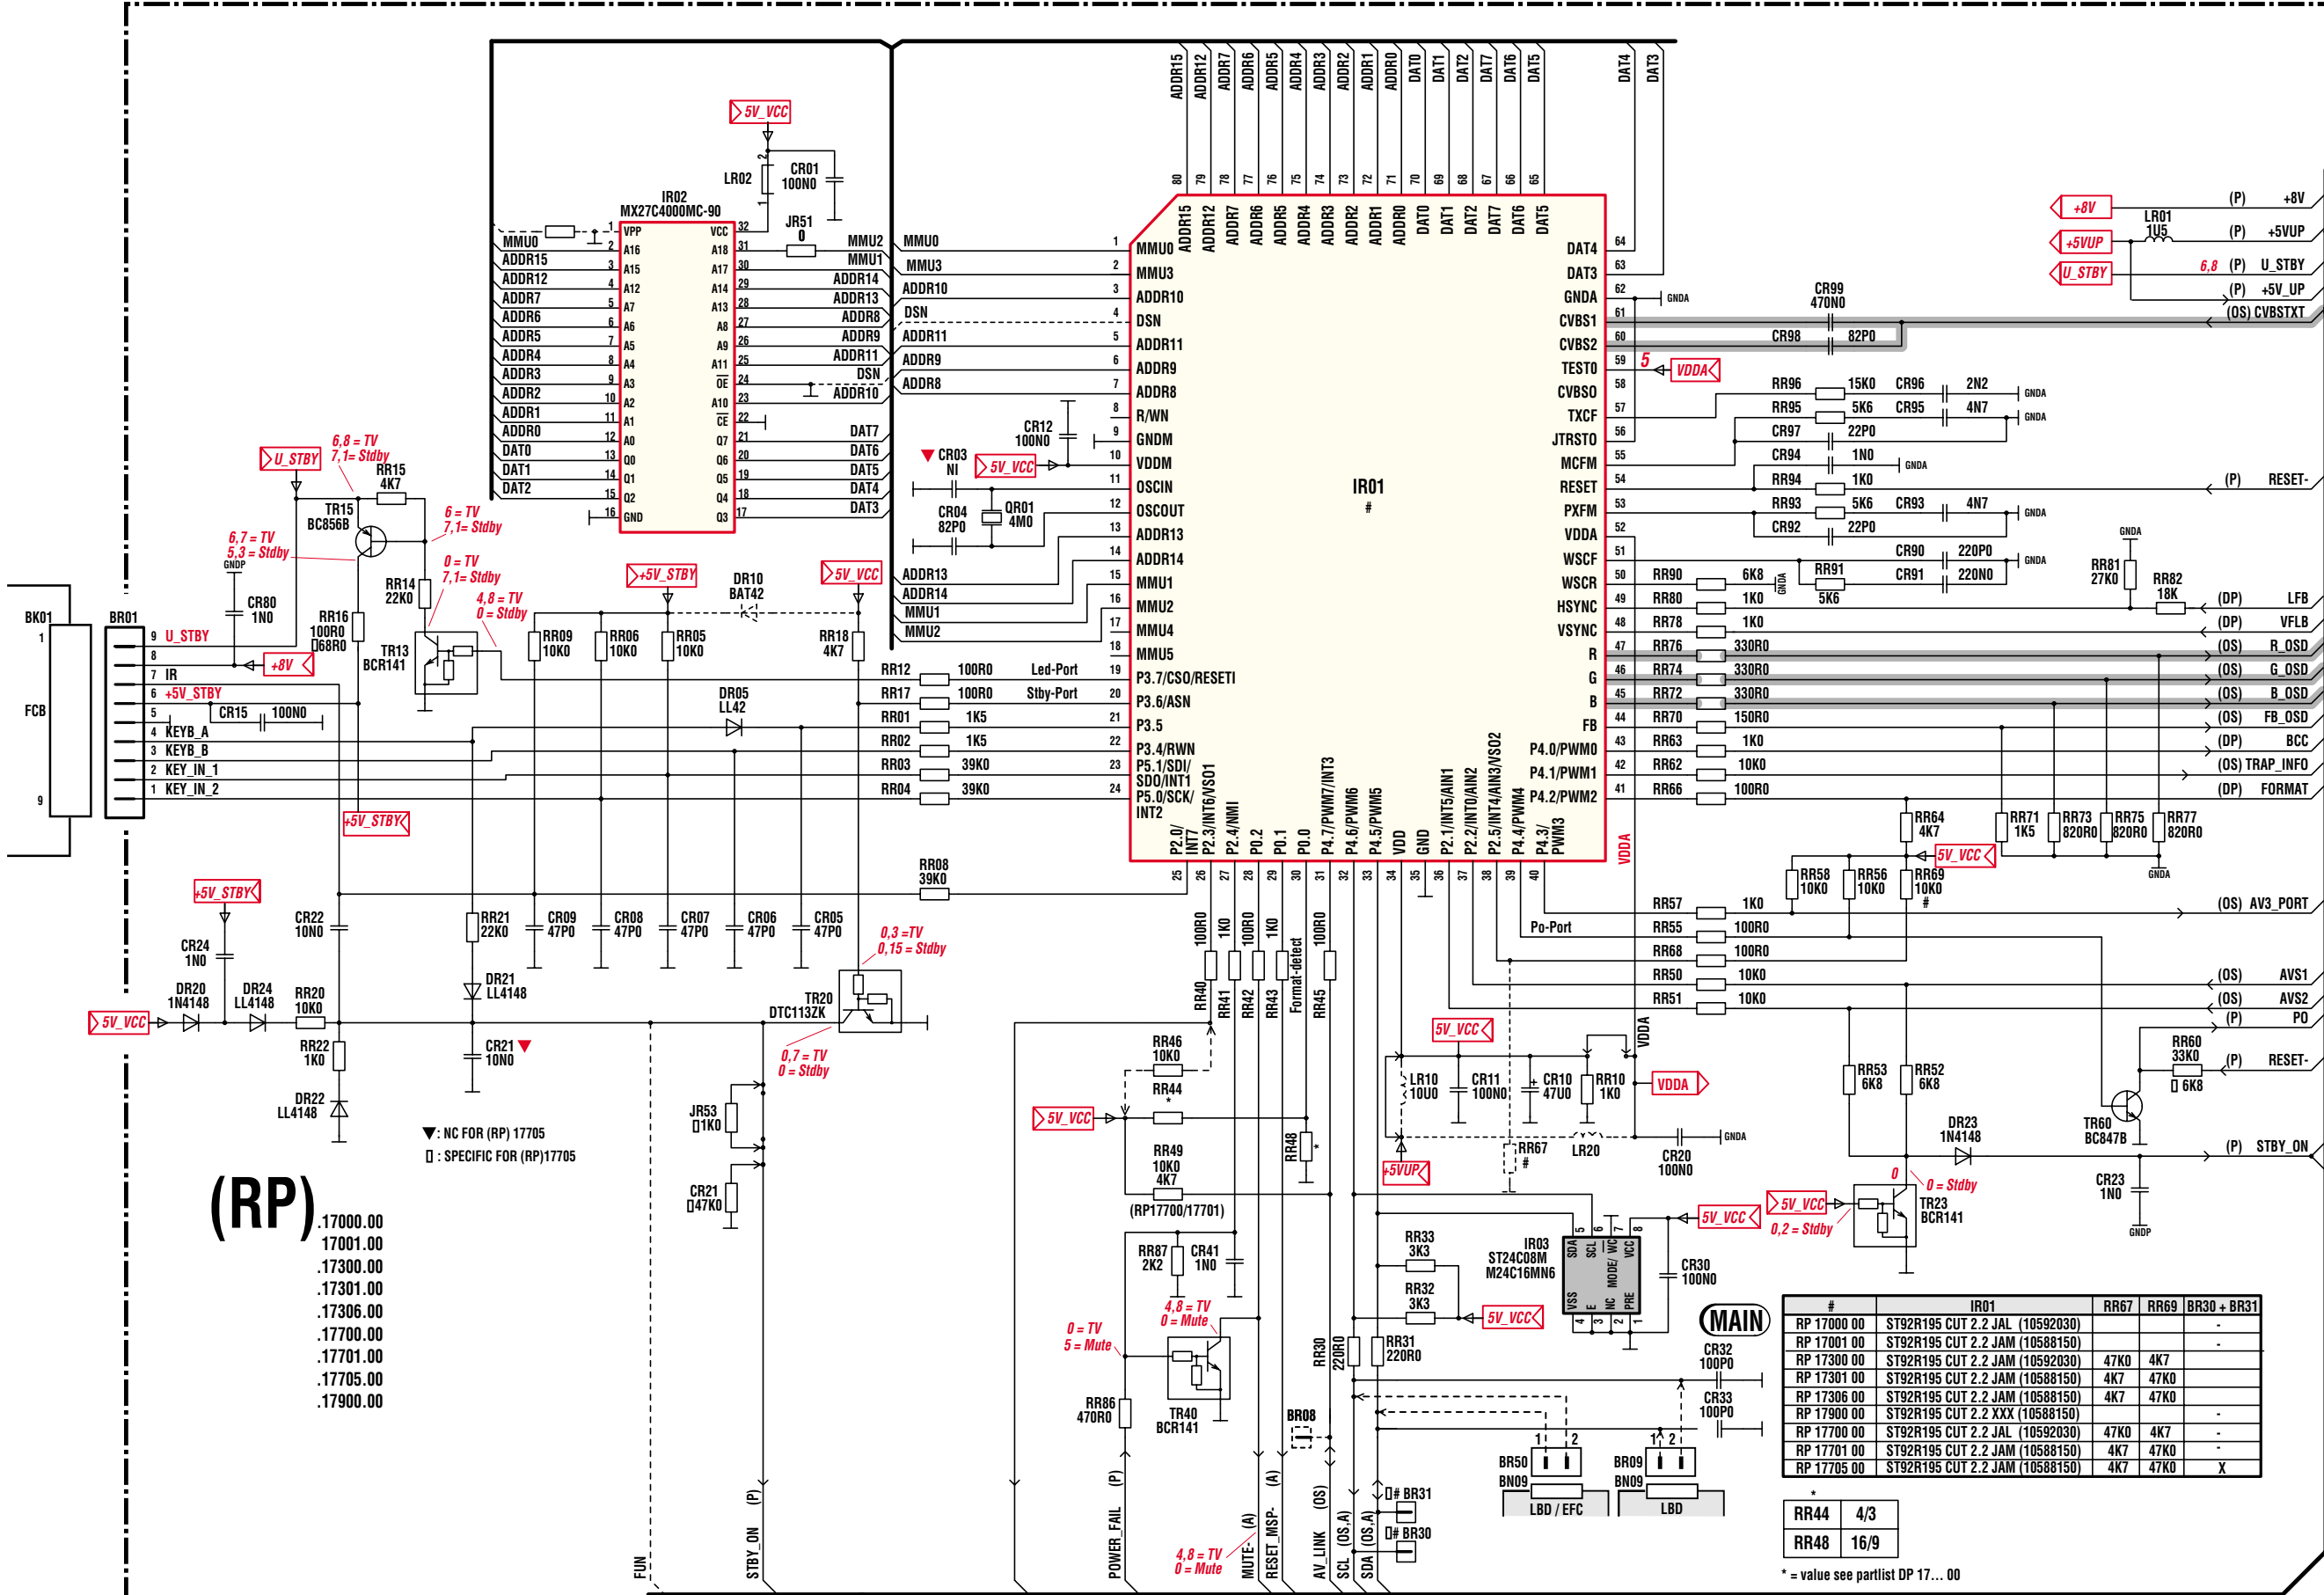

RF/FI/ SCART INTERFACE/VIDEO SIGNAL PROCESSING -HF/FI INTERFACE PERITELEVISION/TRAITEMENT LUMINANCE CHROMINANCE - HF/ZF/ SCART INTERFACE/VIDEO SIGNALVERARBEITUNG - RF/FI /PRESA PERITEL/ELABORAZIONE VIDEO - RF/FI /EUROCONECTOR/TRATAMENTO VIDEO

».

