




* 1 : w/ Dynamic Radar Cruise Control
 * 2 : w/o Dynamic Radar Cruise Control


A/C Amplifier Assembly

ECM

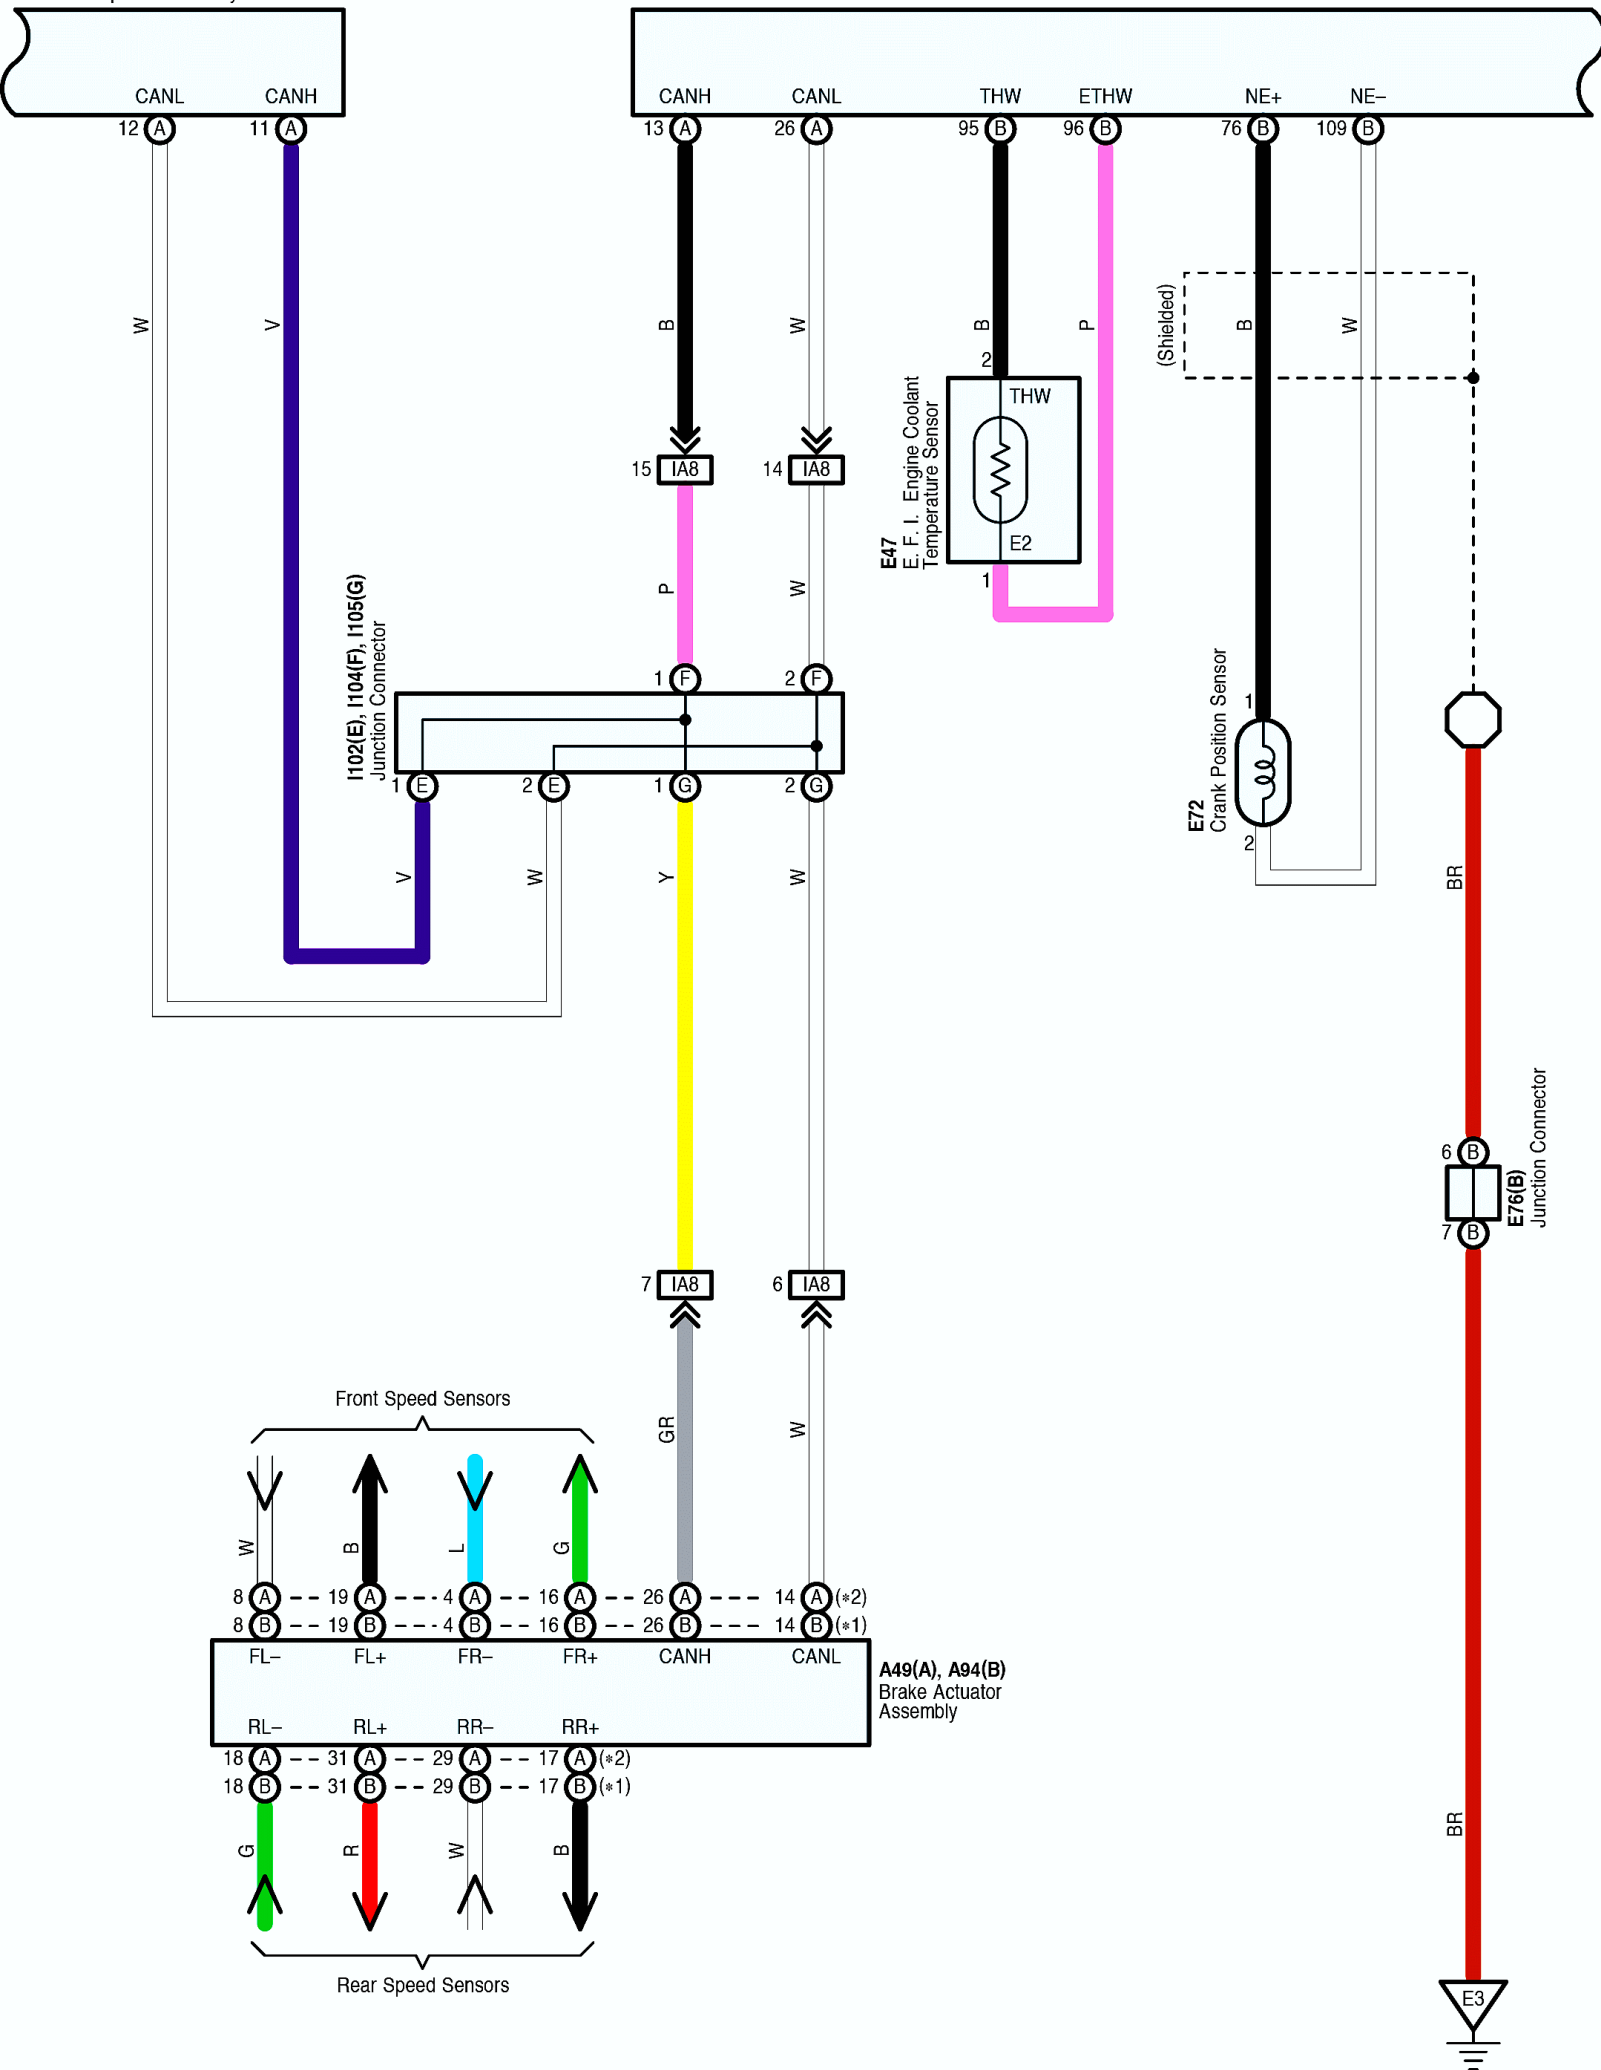


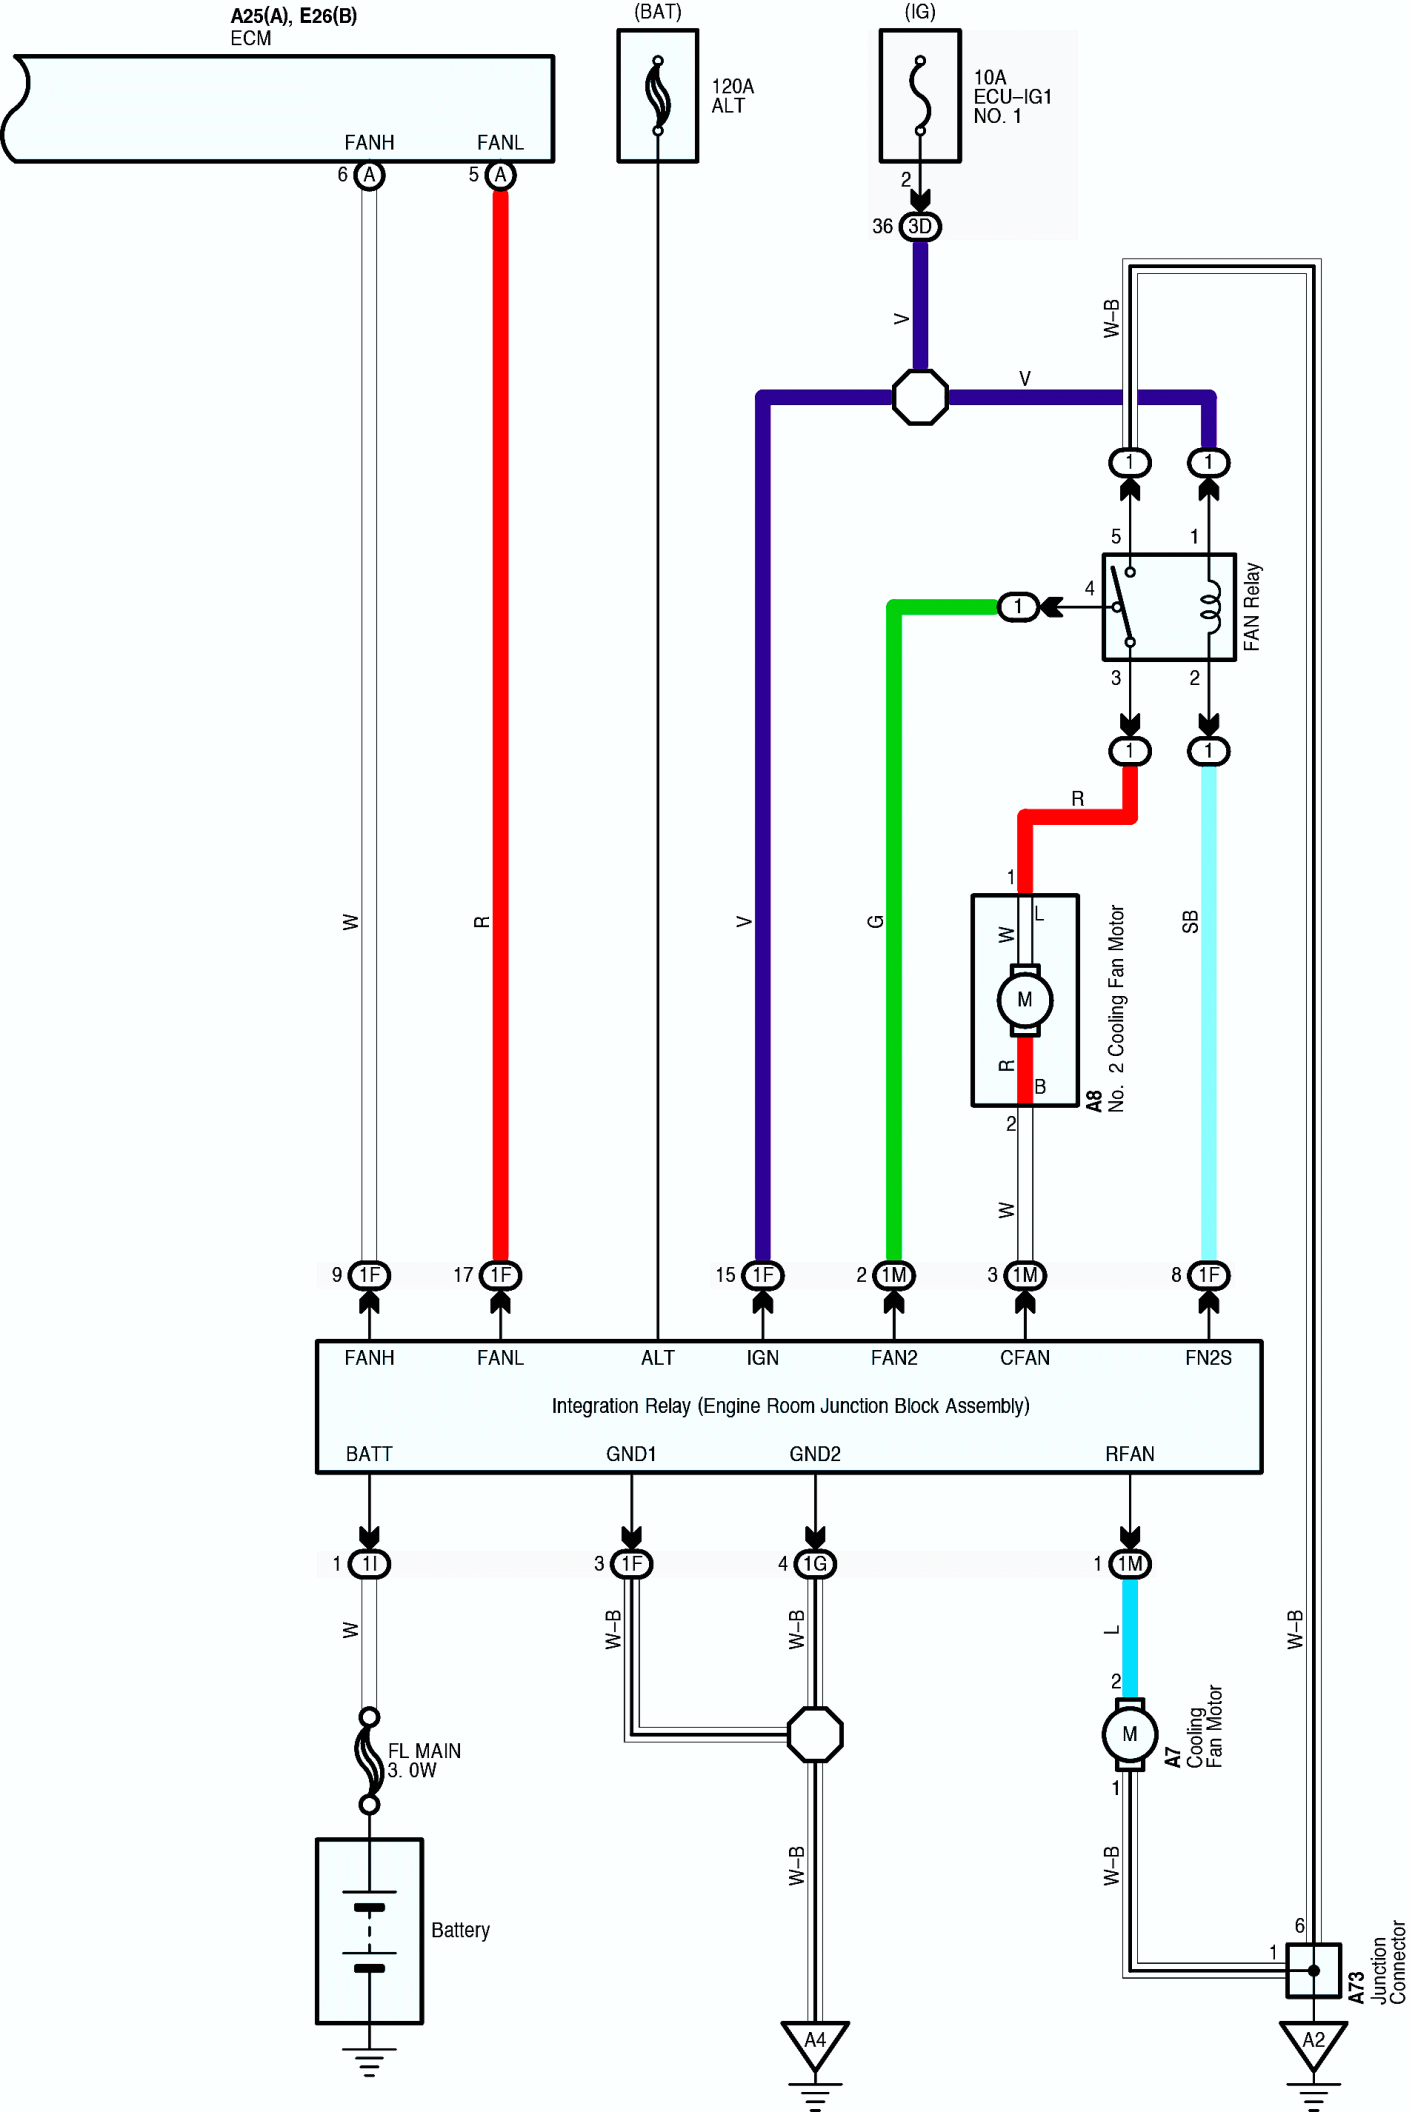

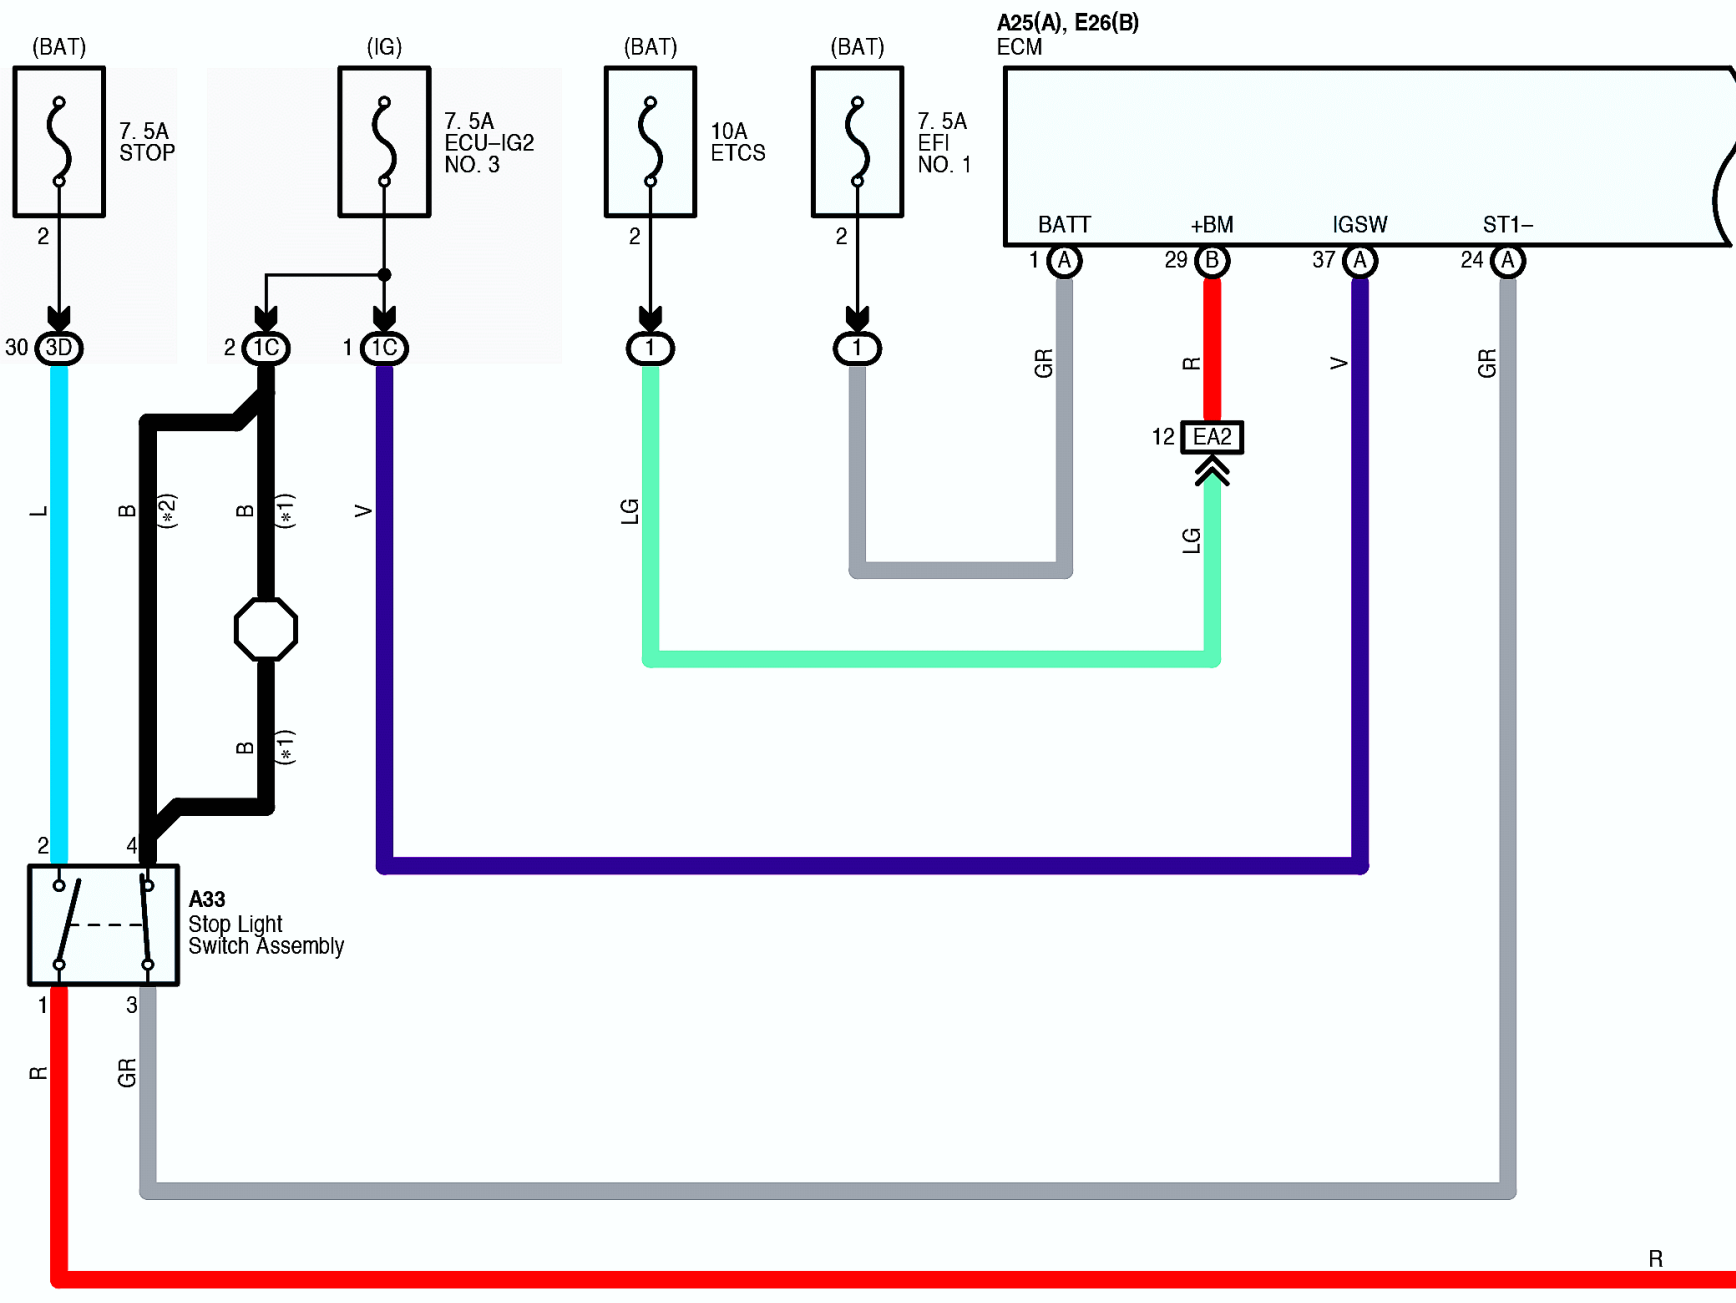


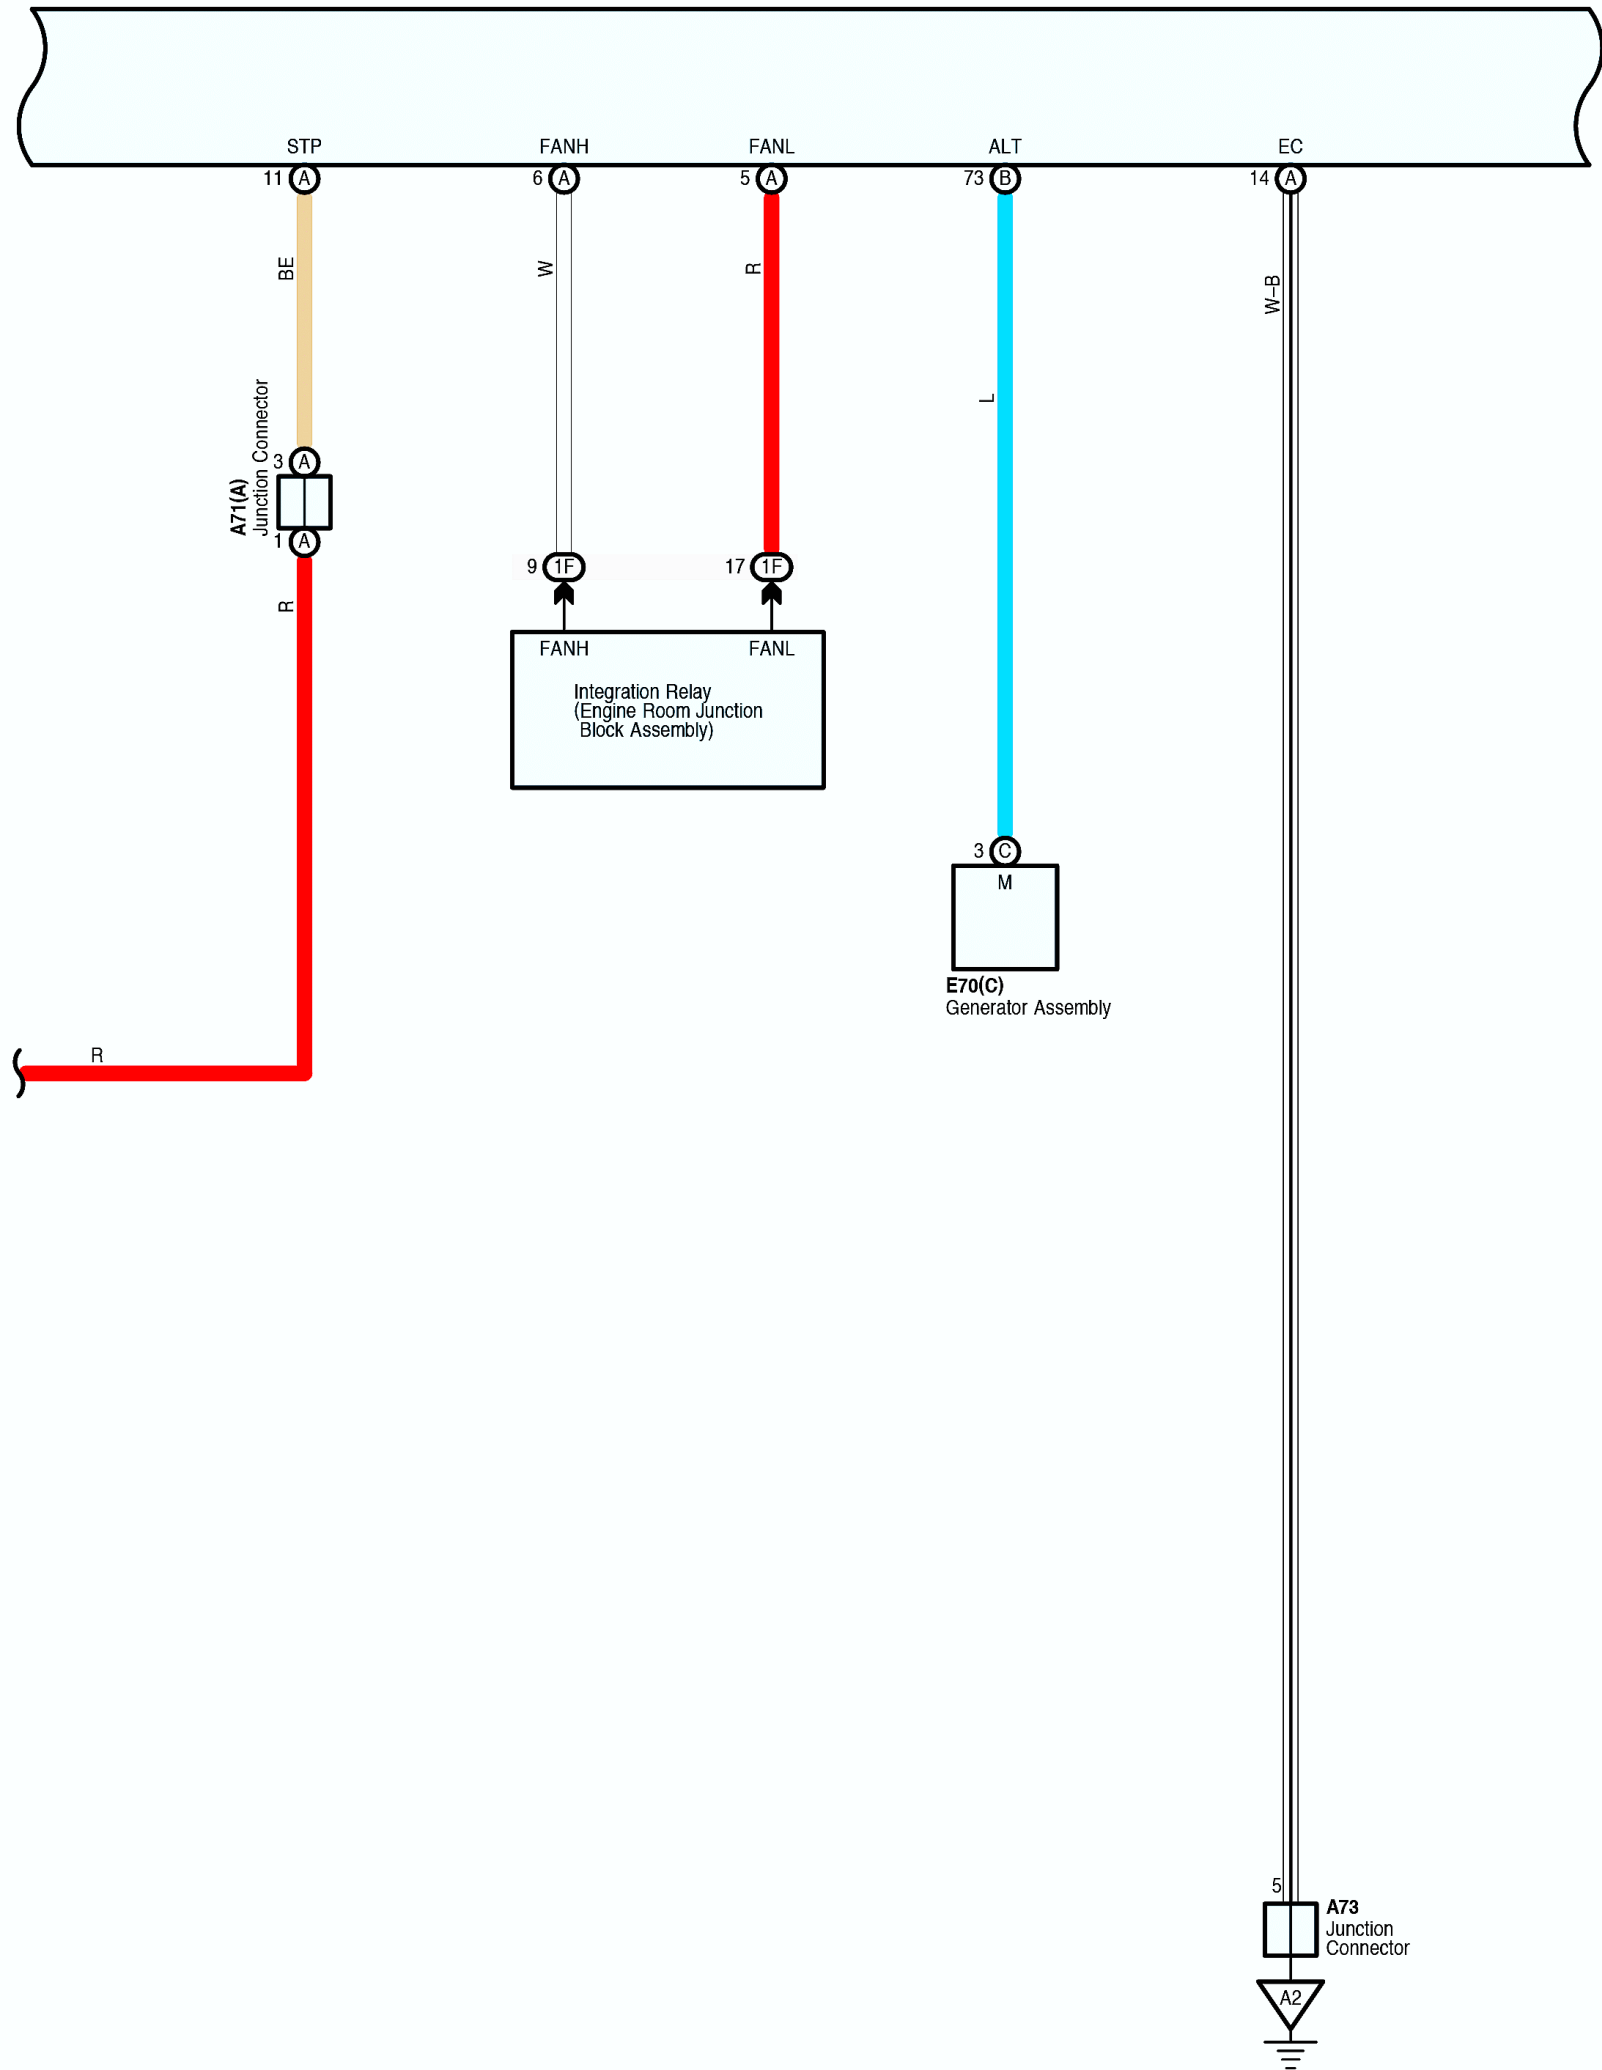



A25(A), E26(B)
ECM

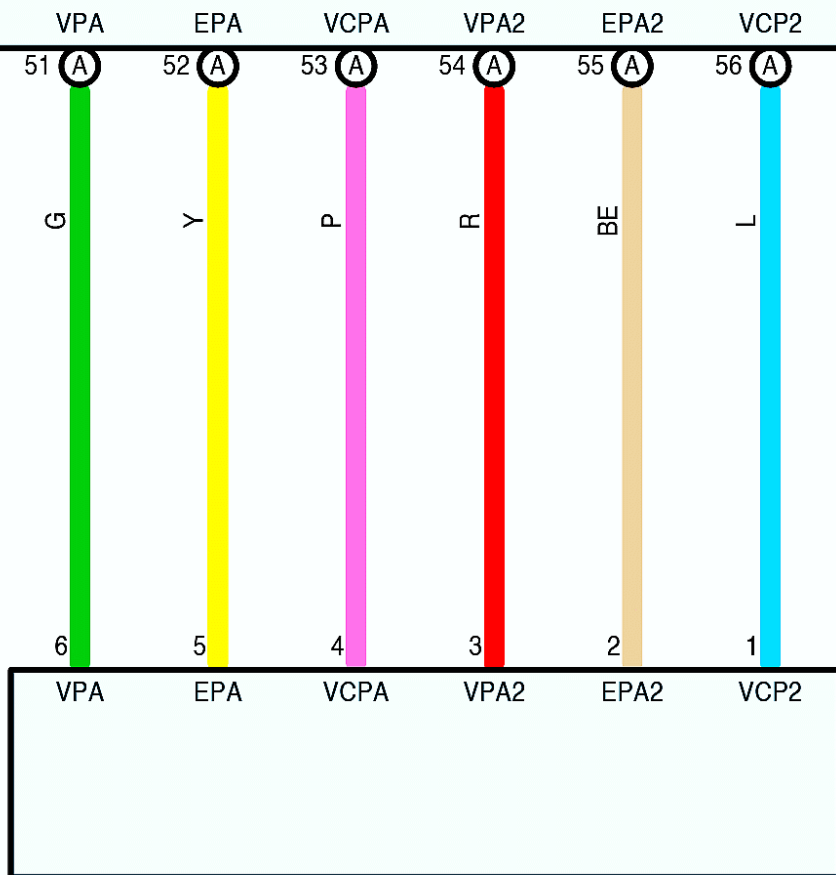



A36
Accelerator Pedal Sensor Assembly

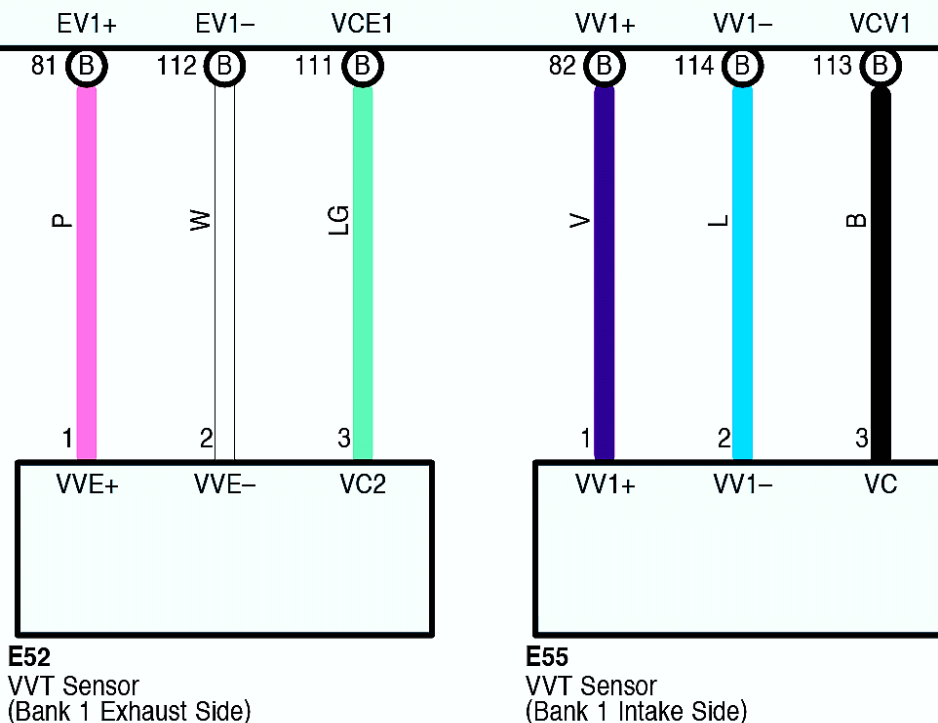


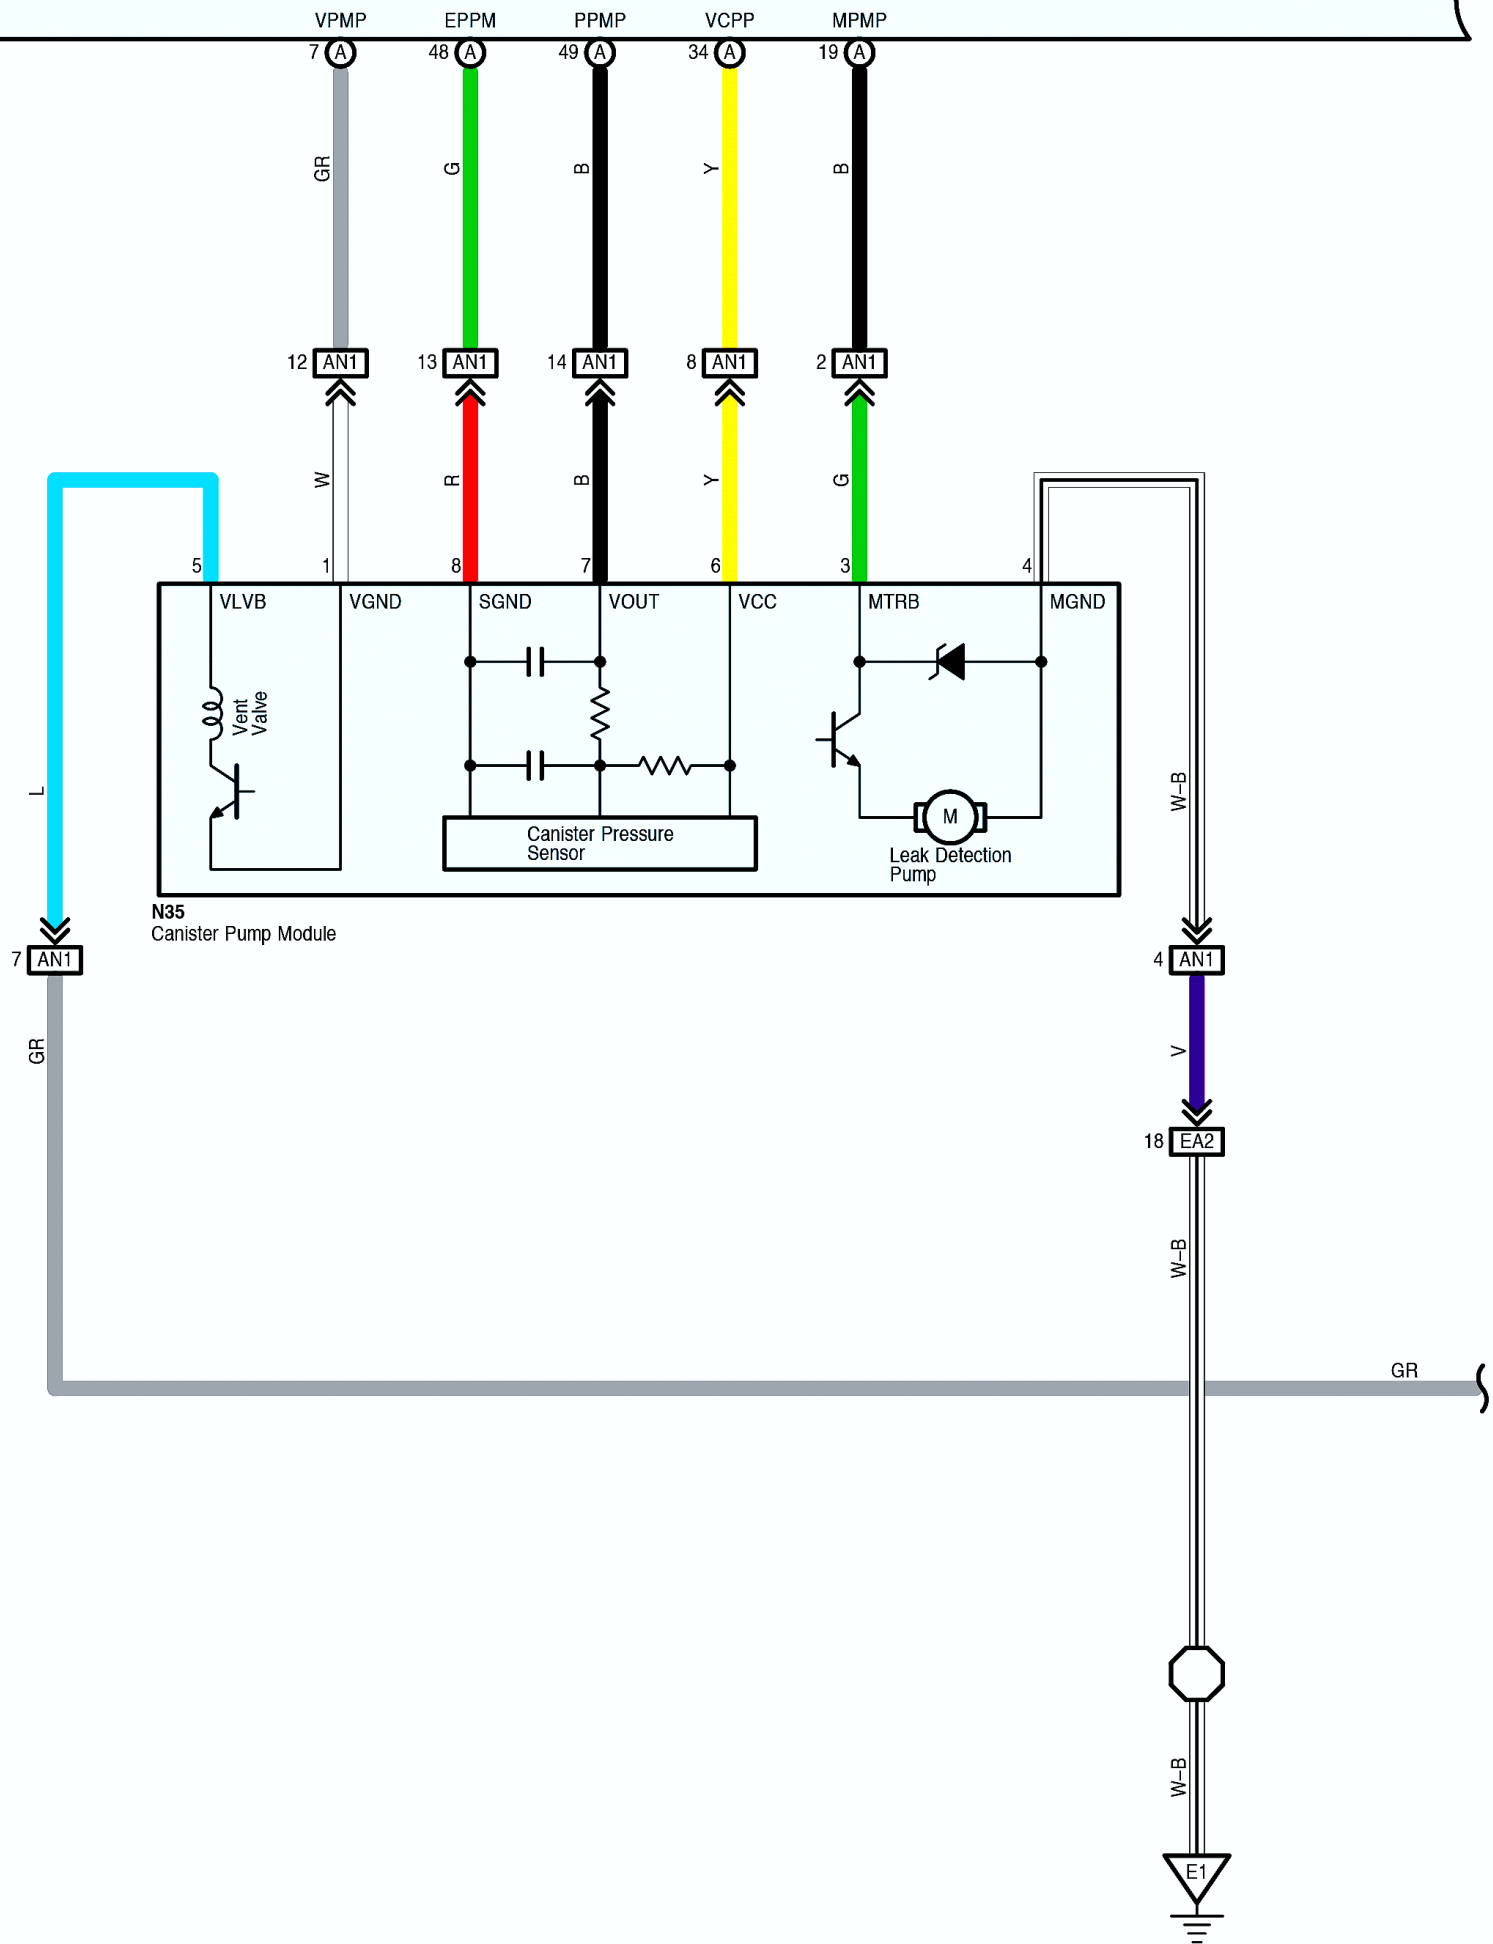


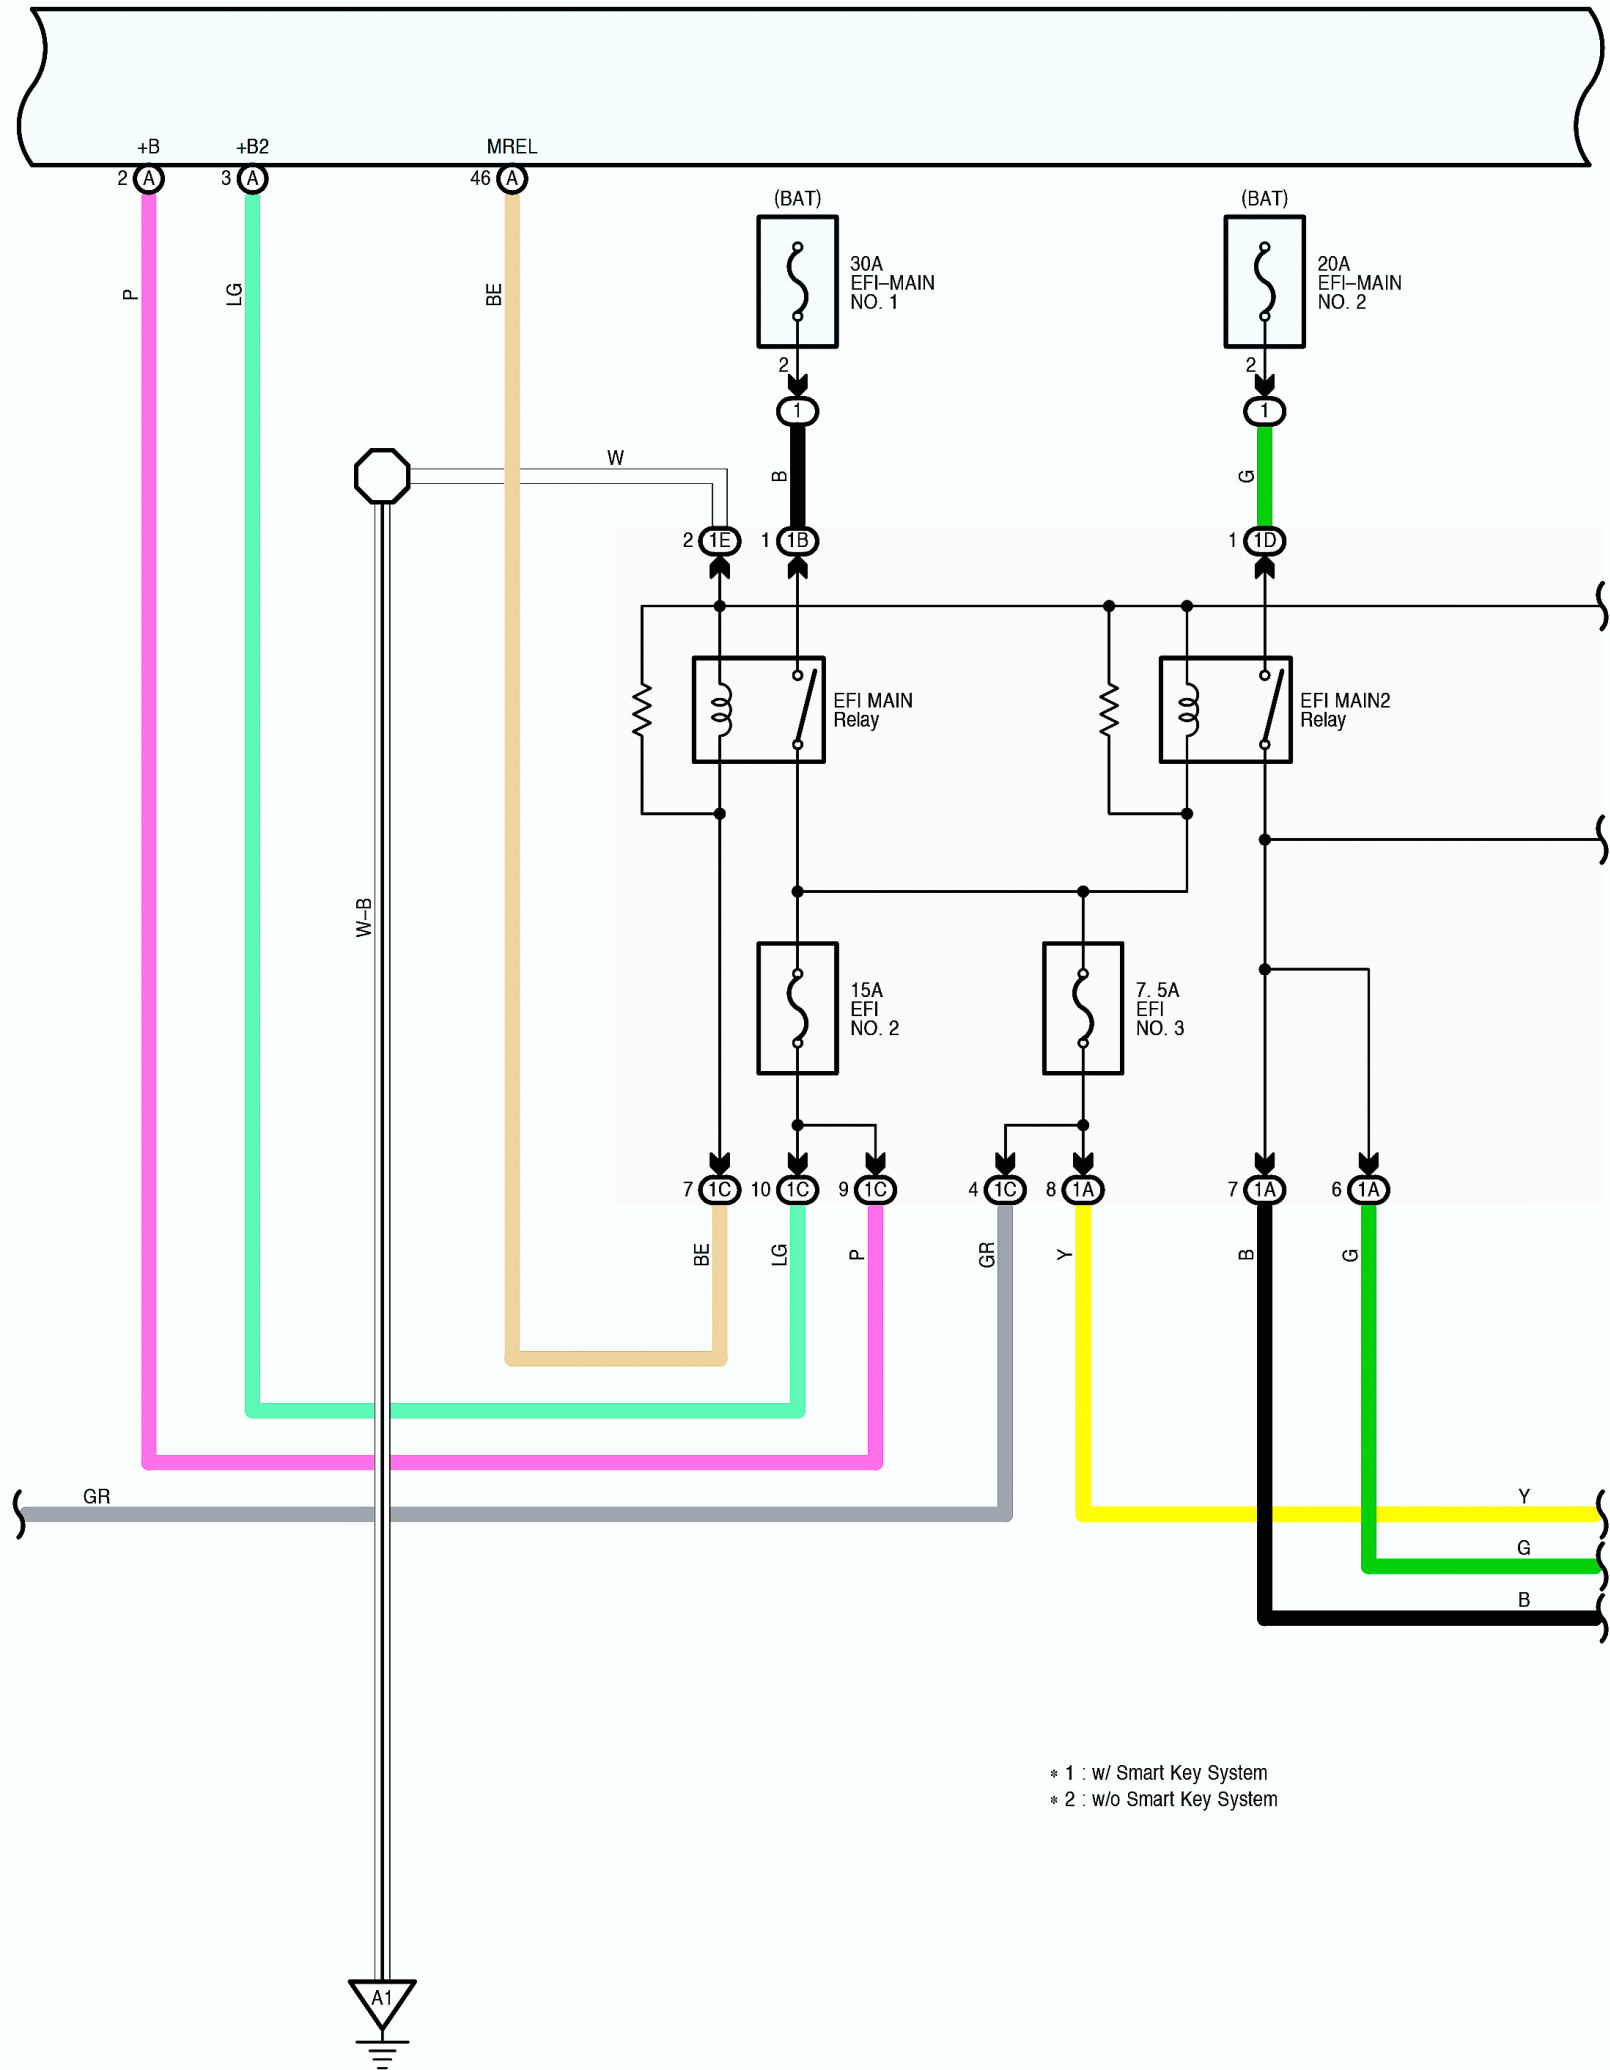


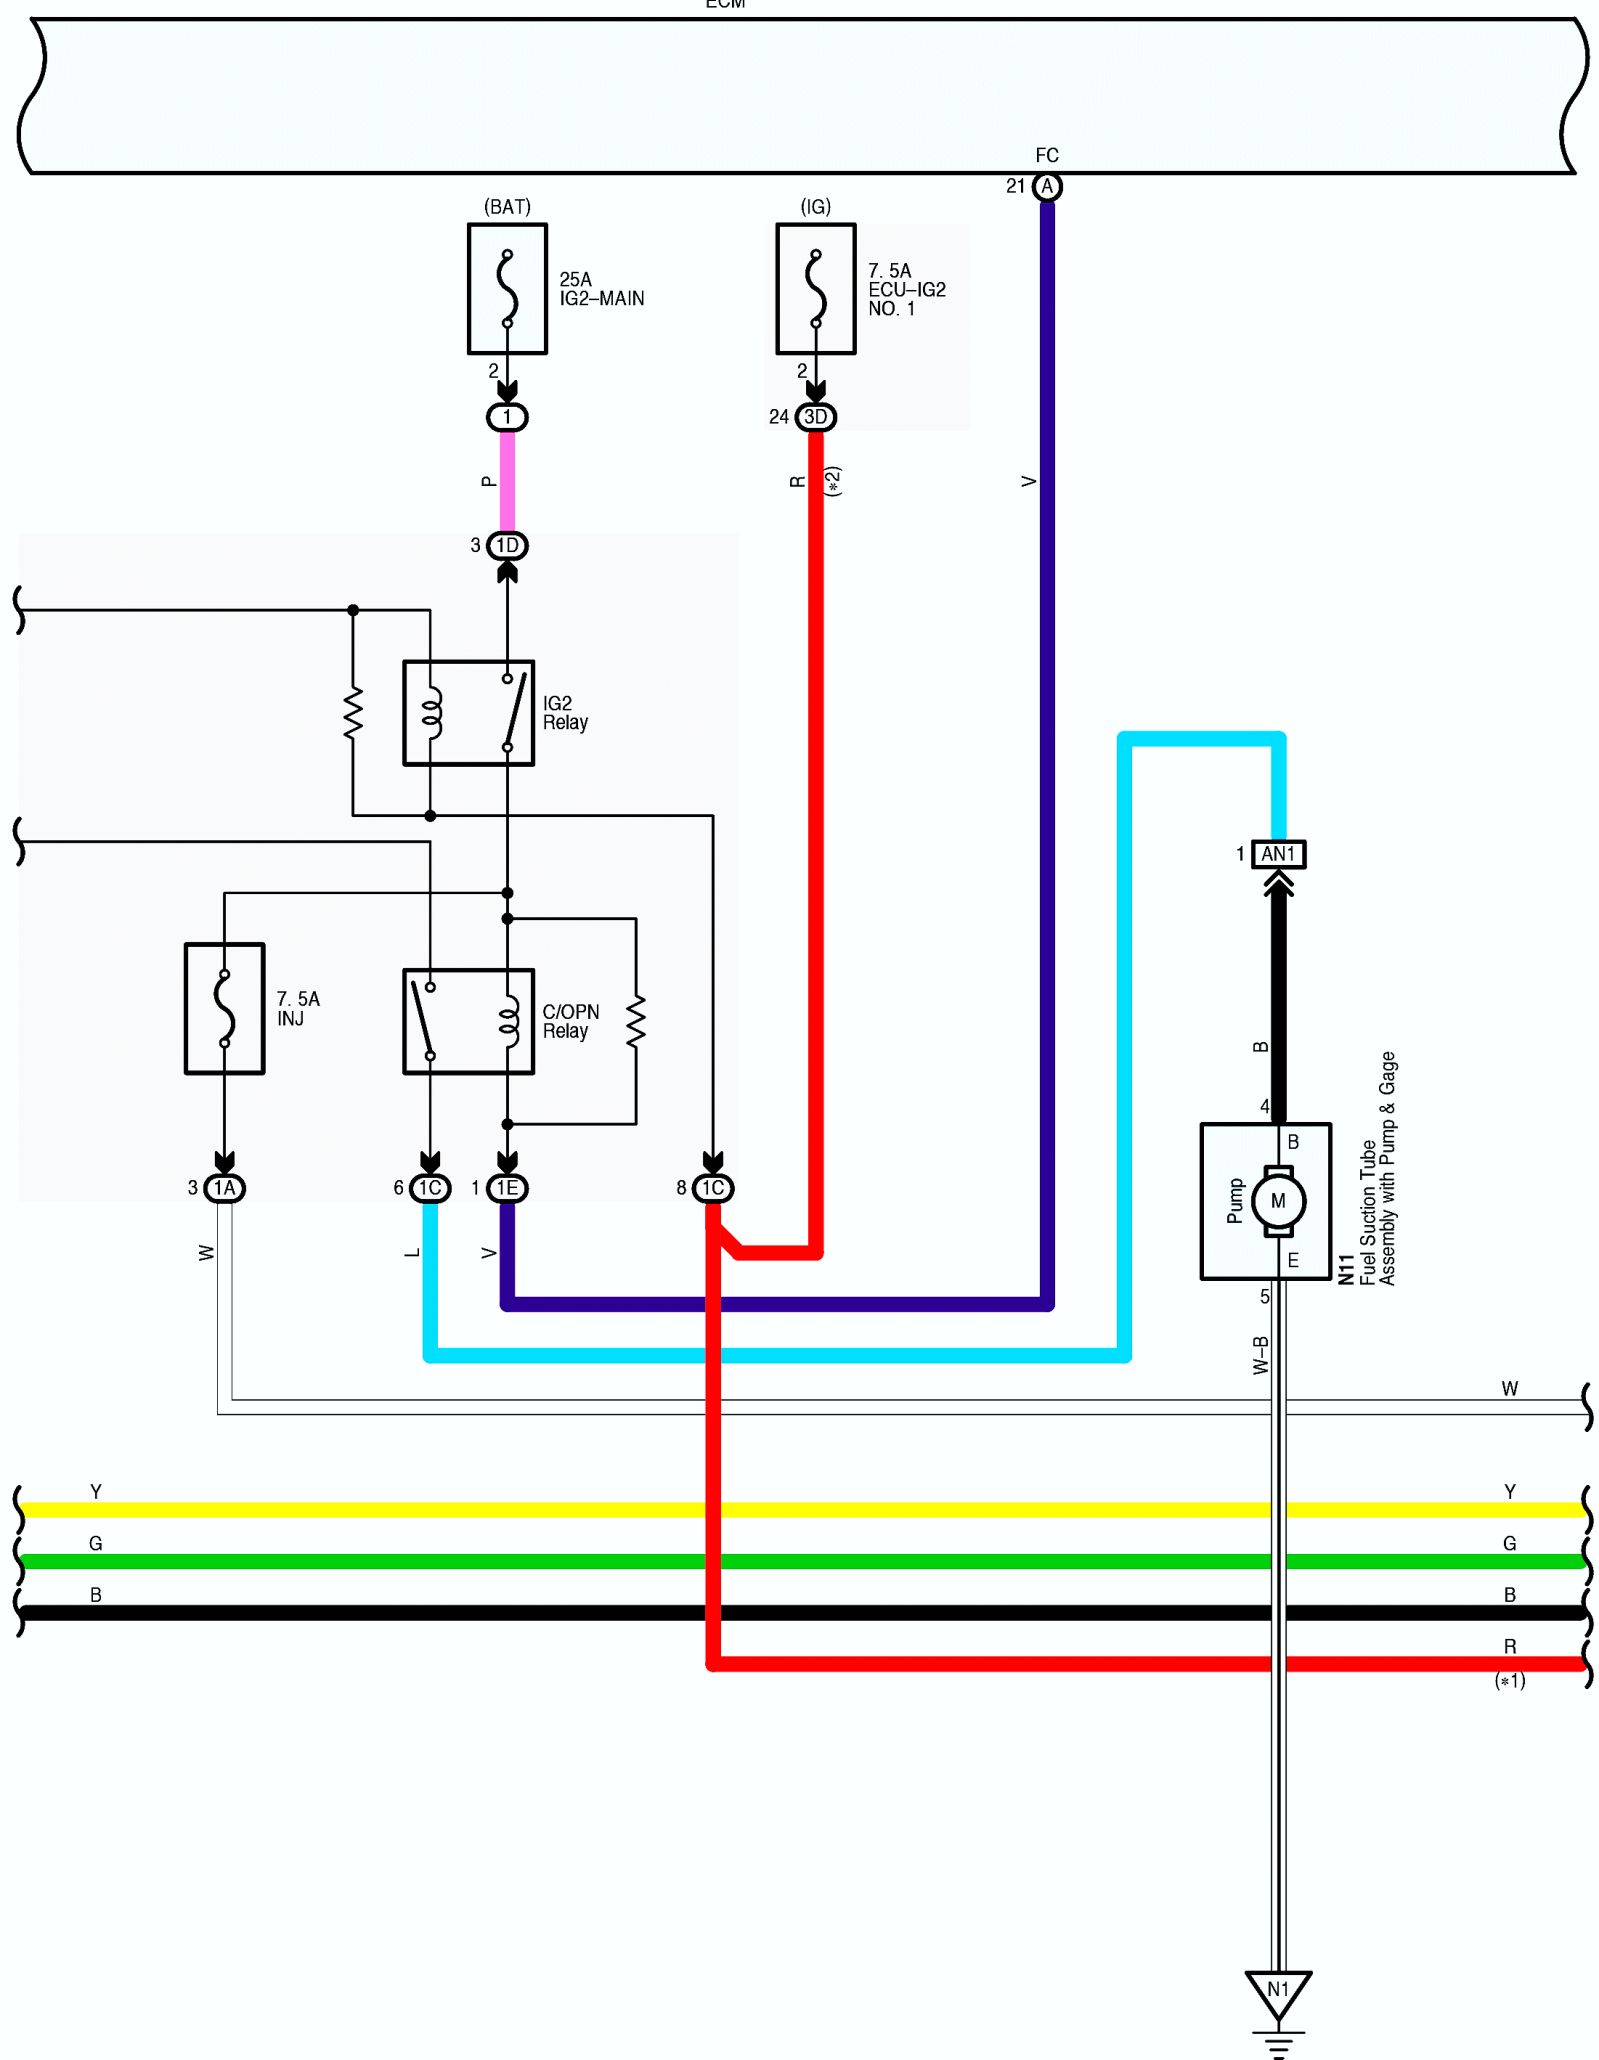

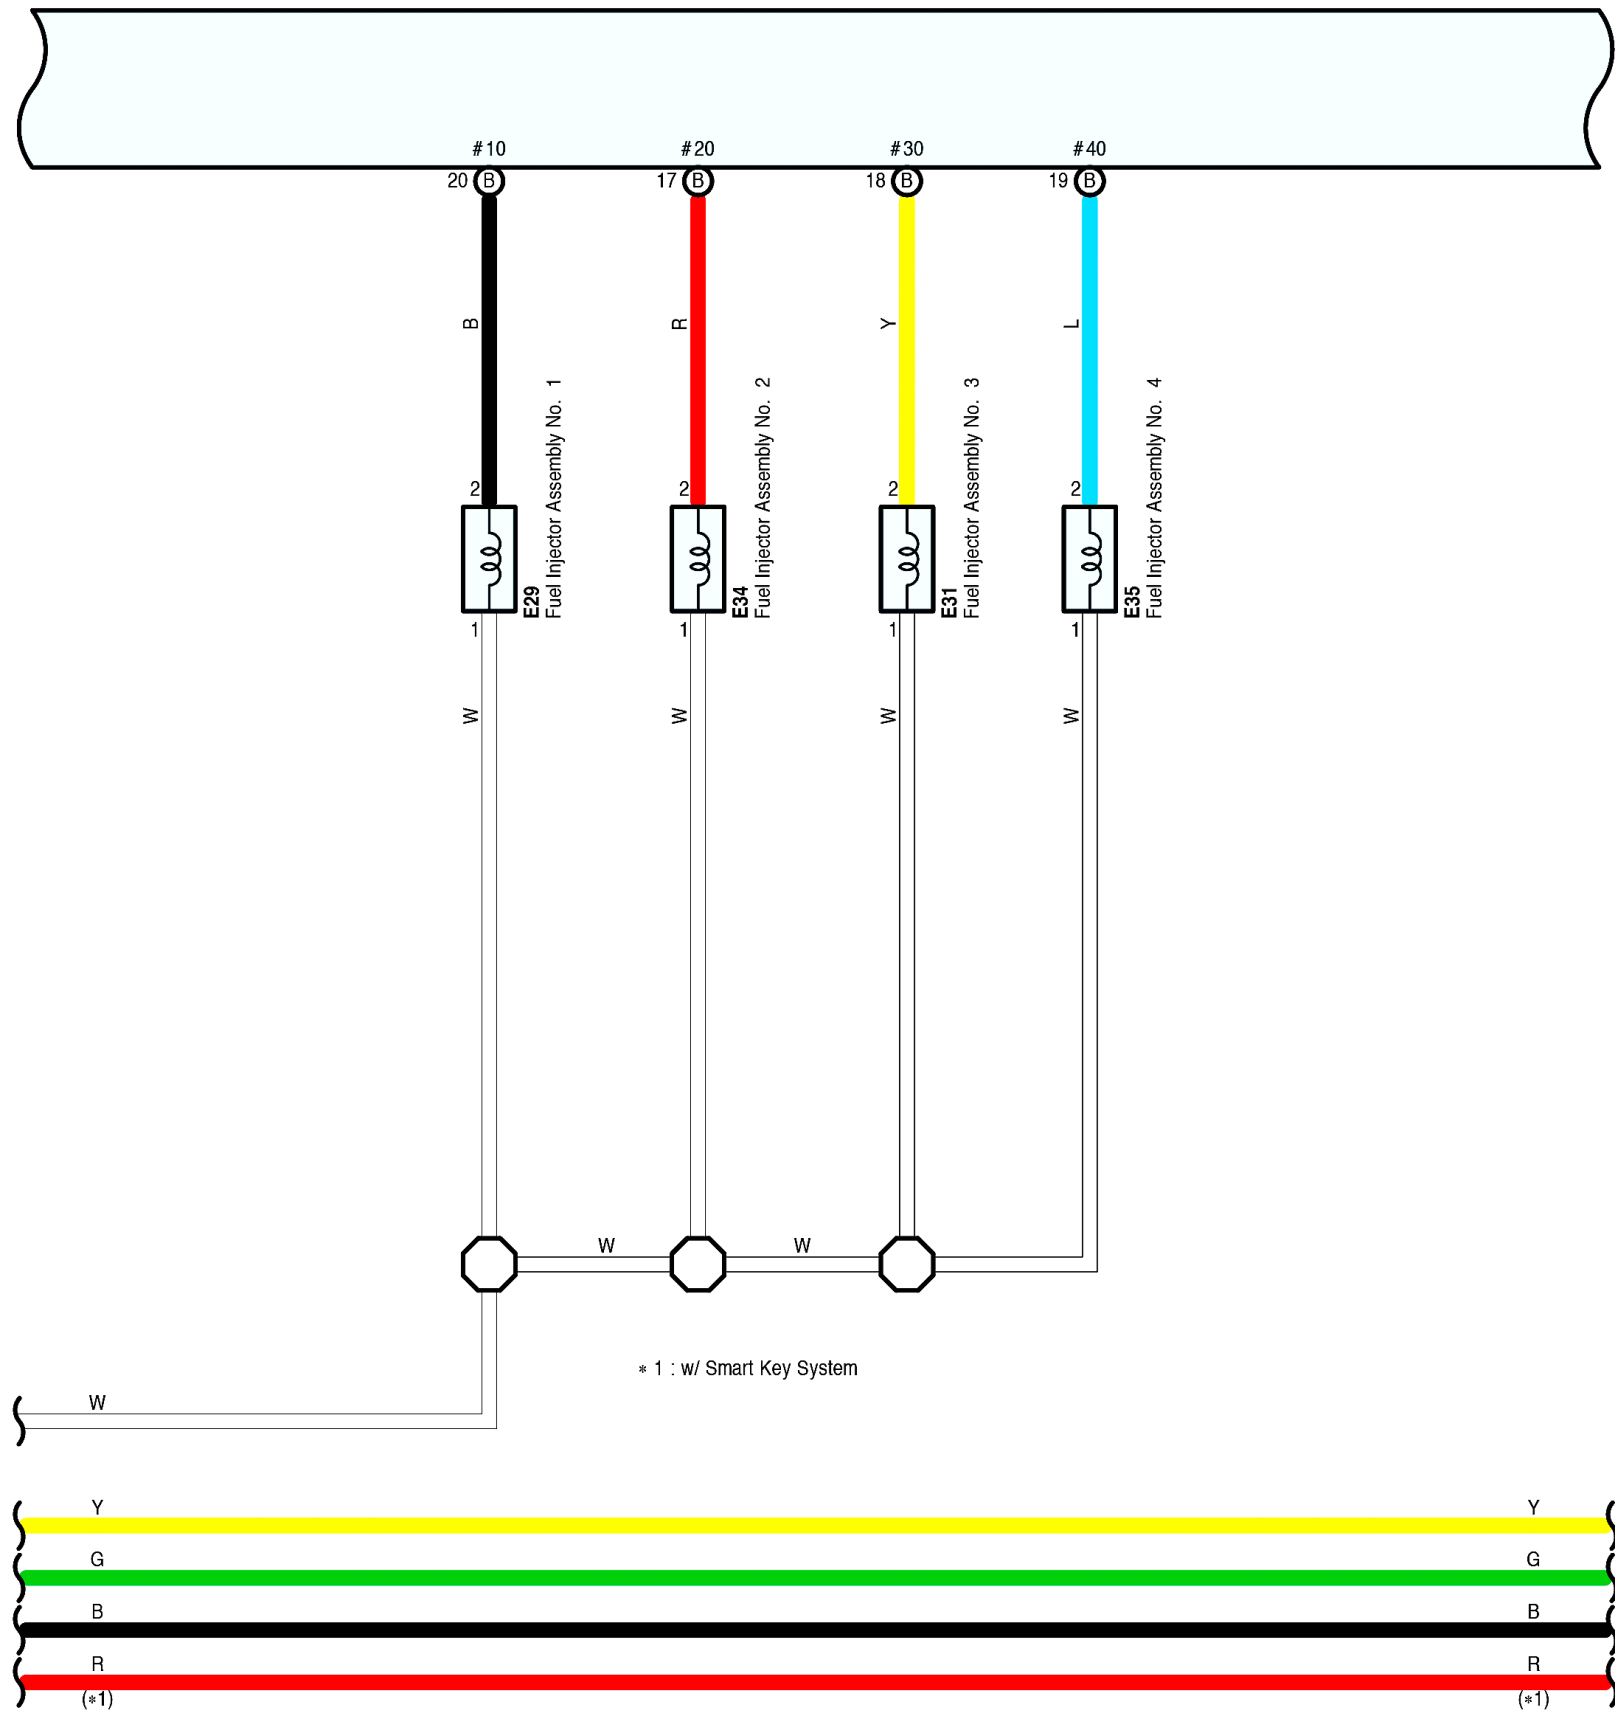

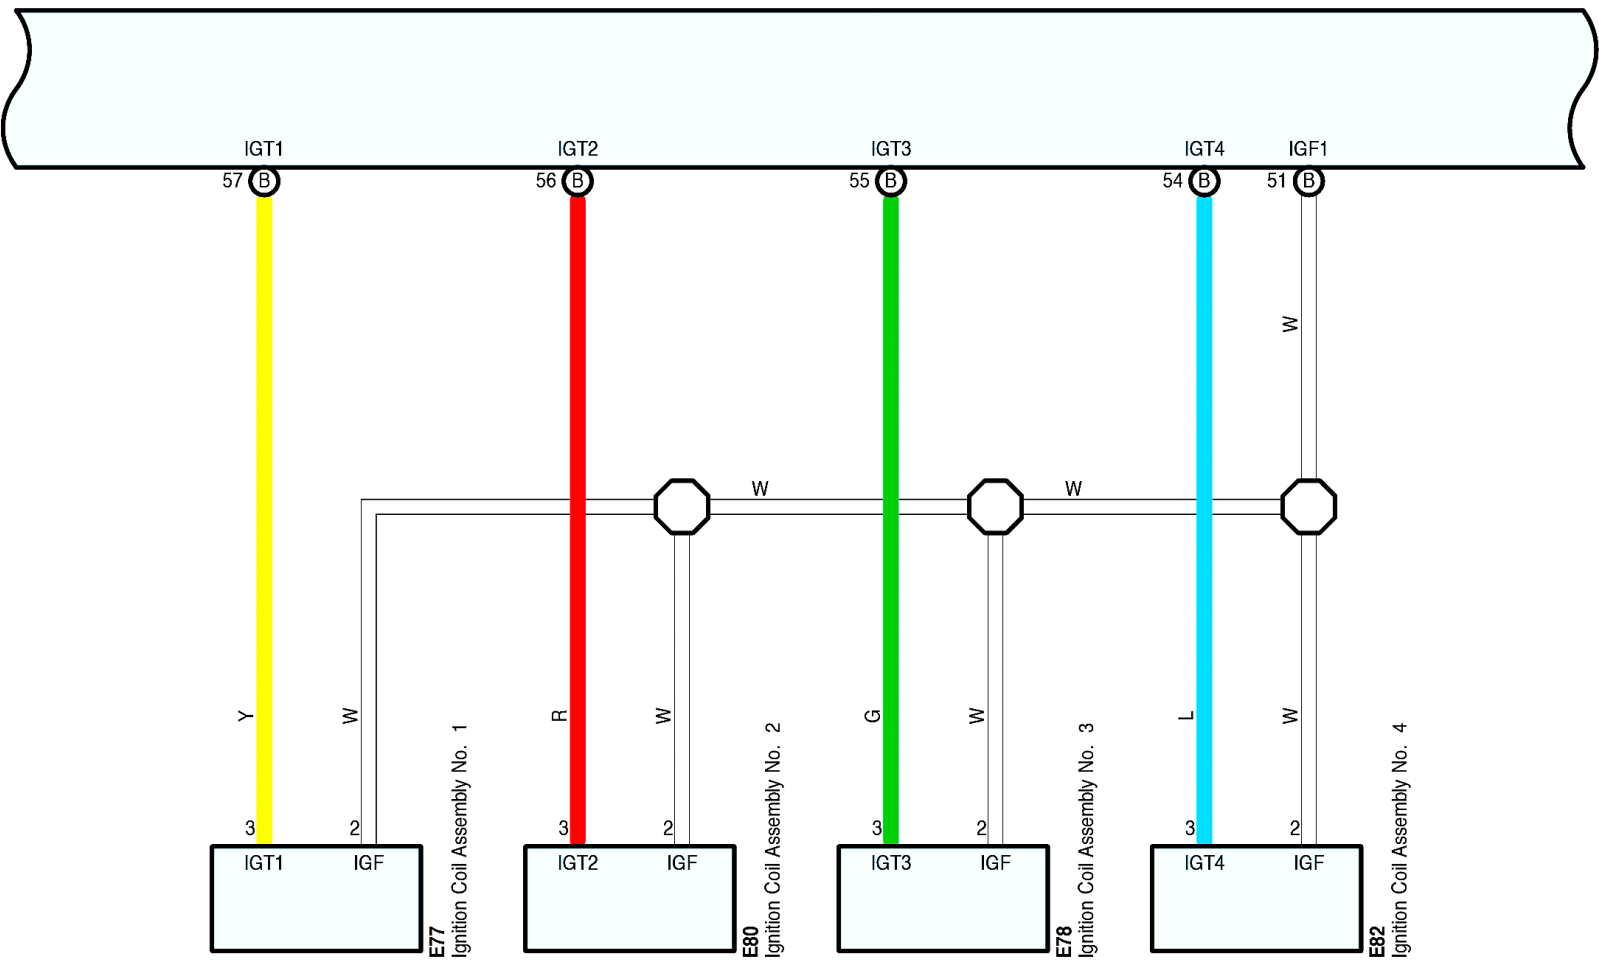


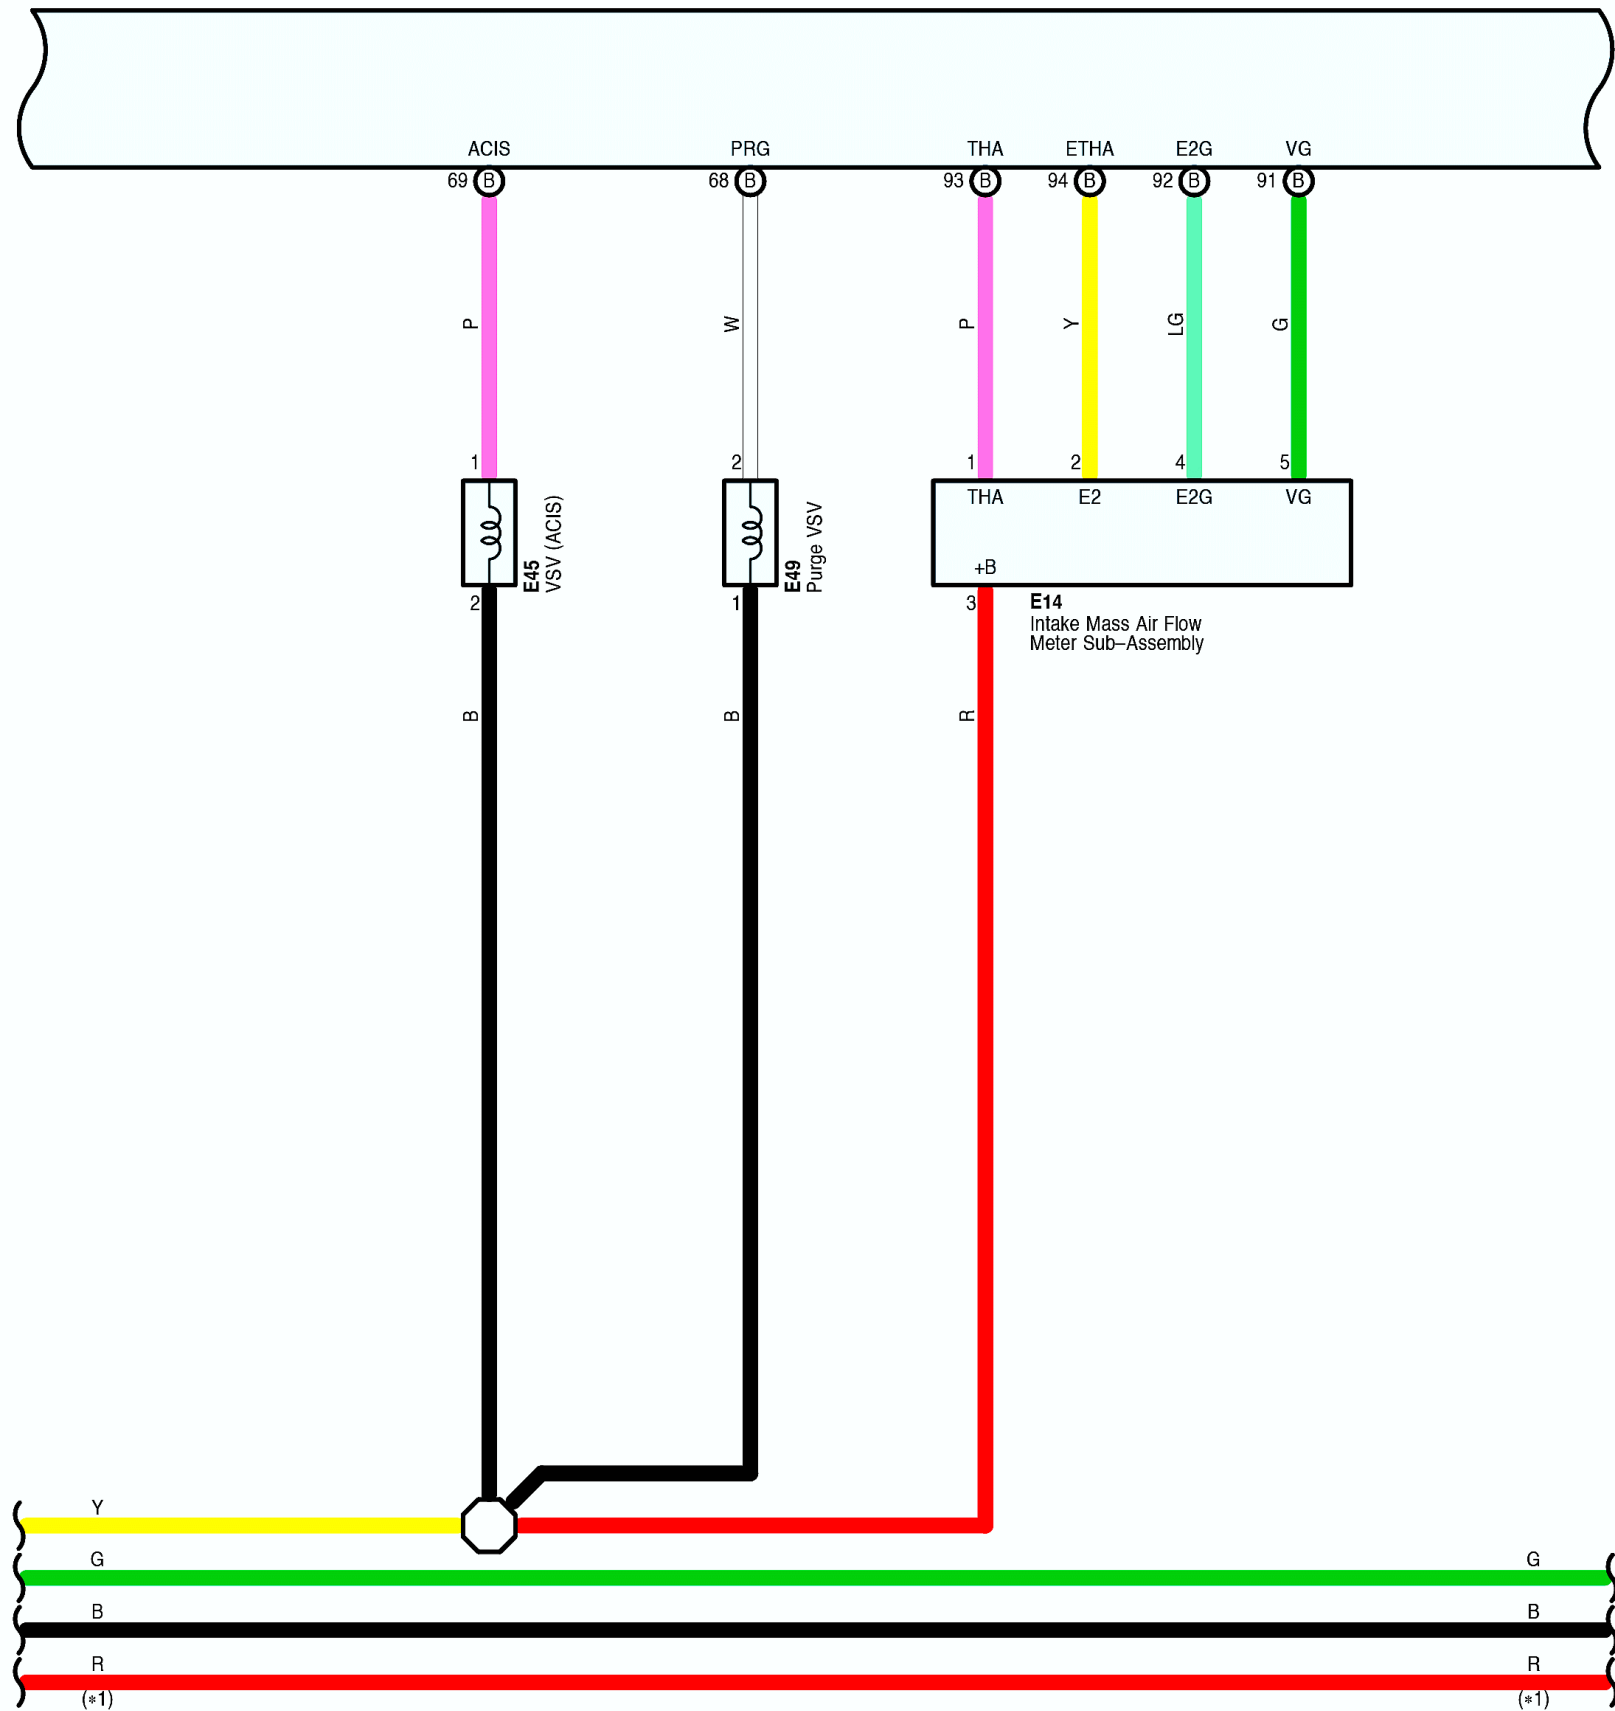


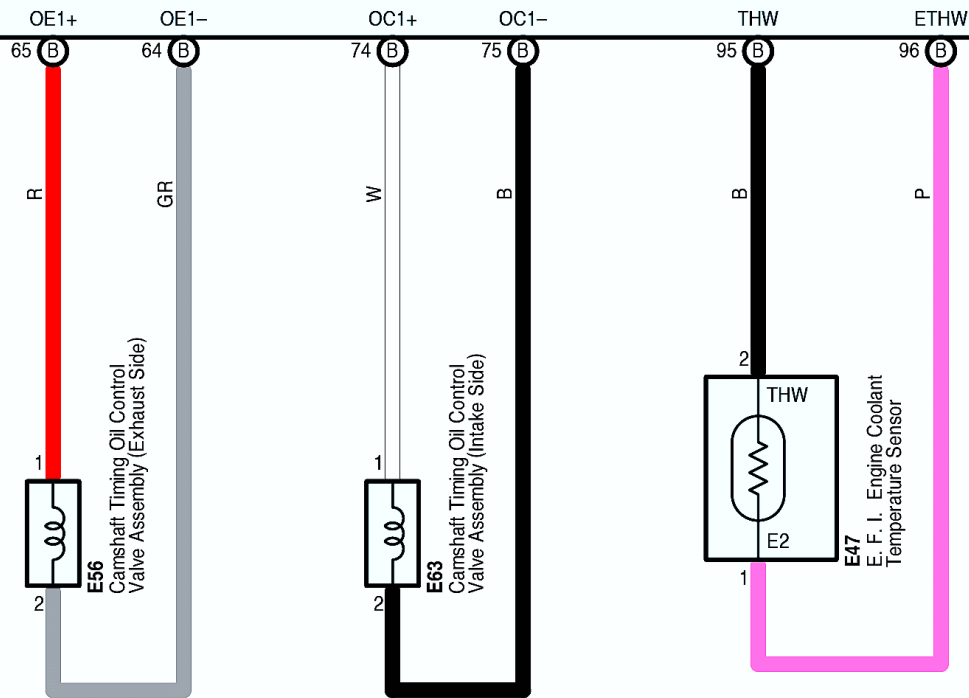


* 1 : w/ Smart Key System



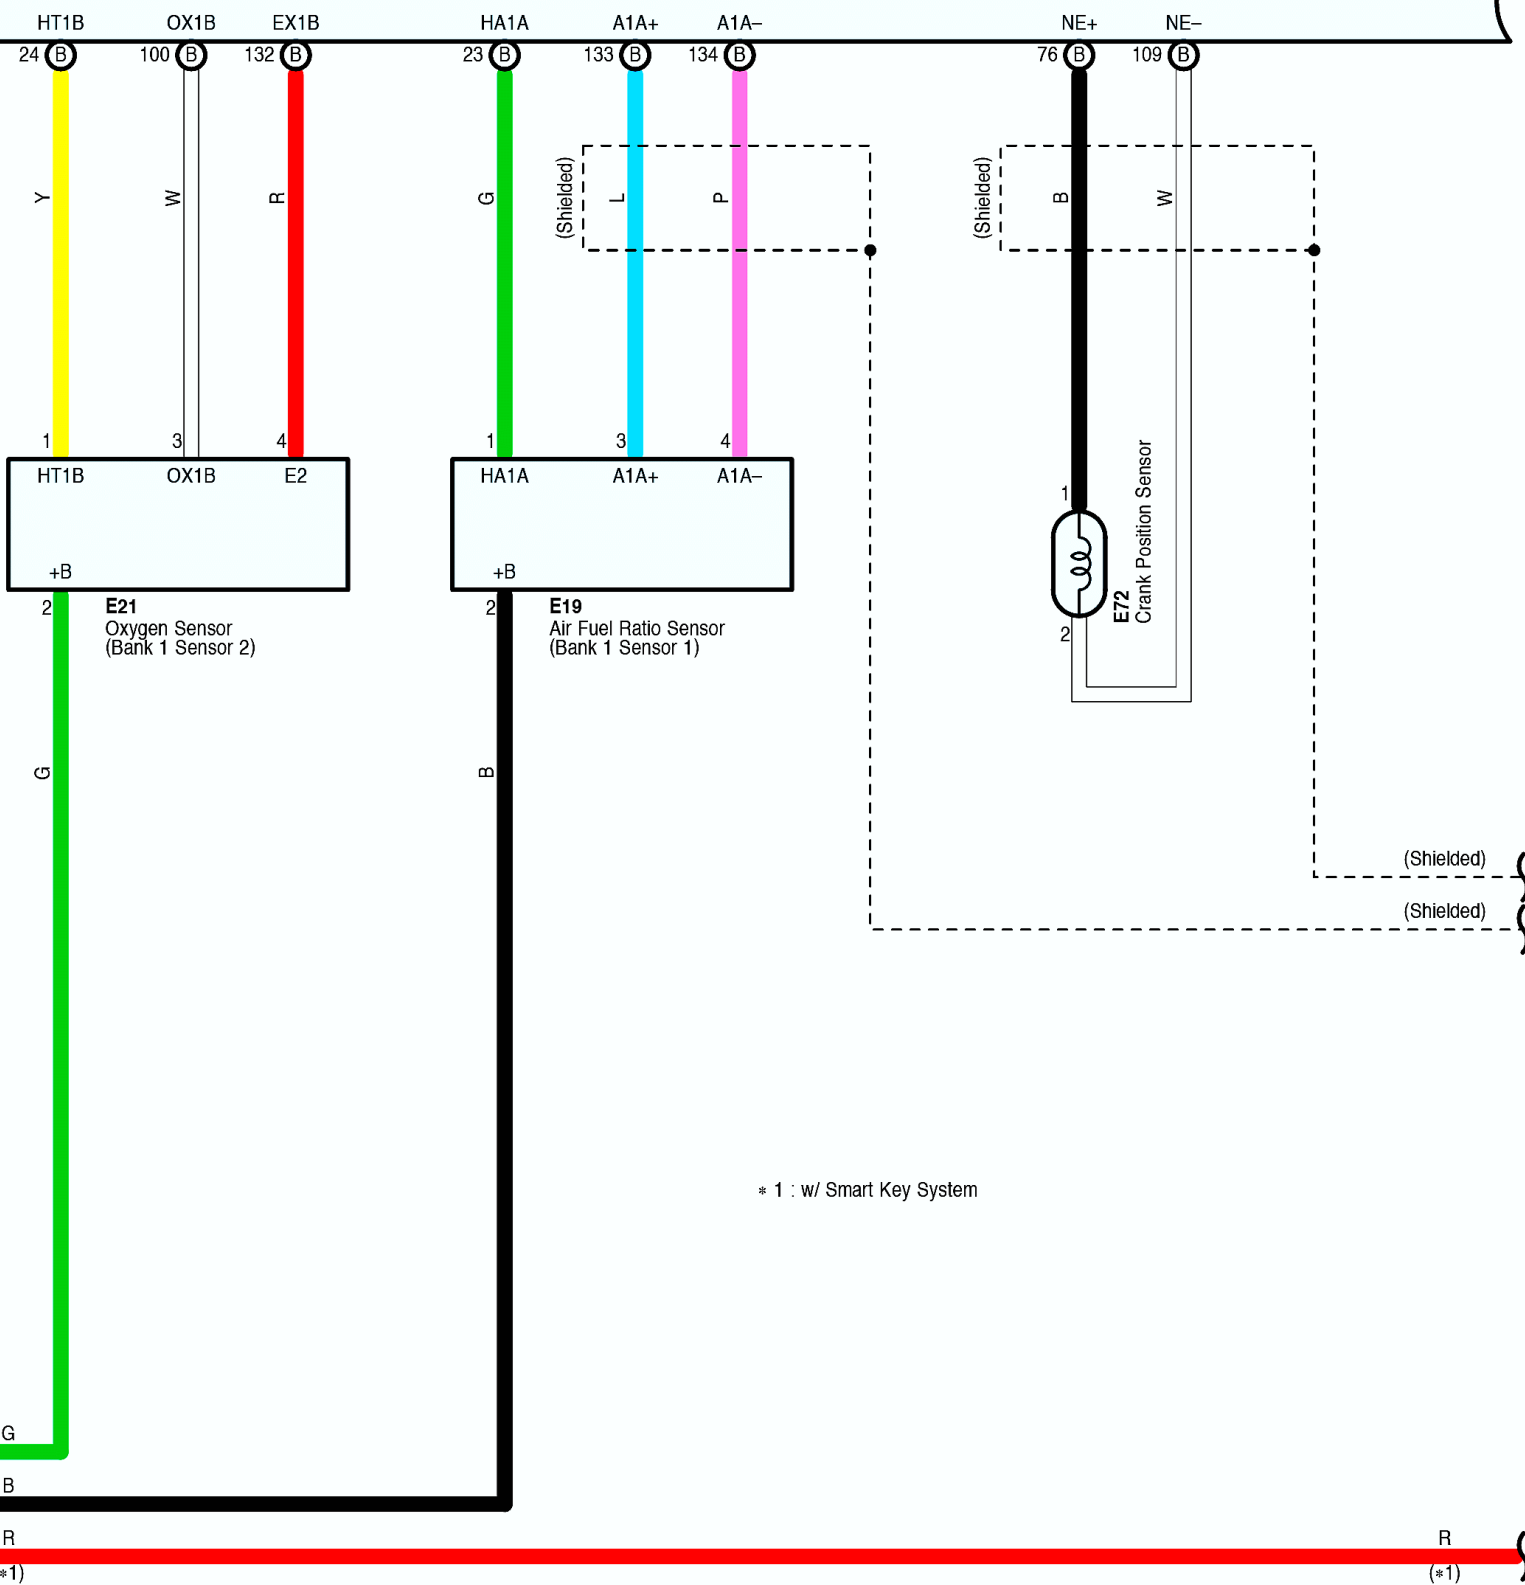

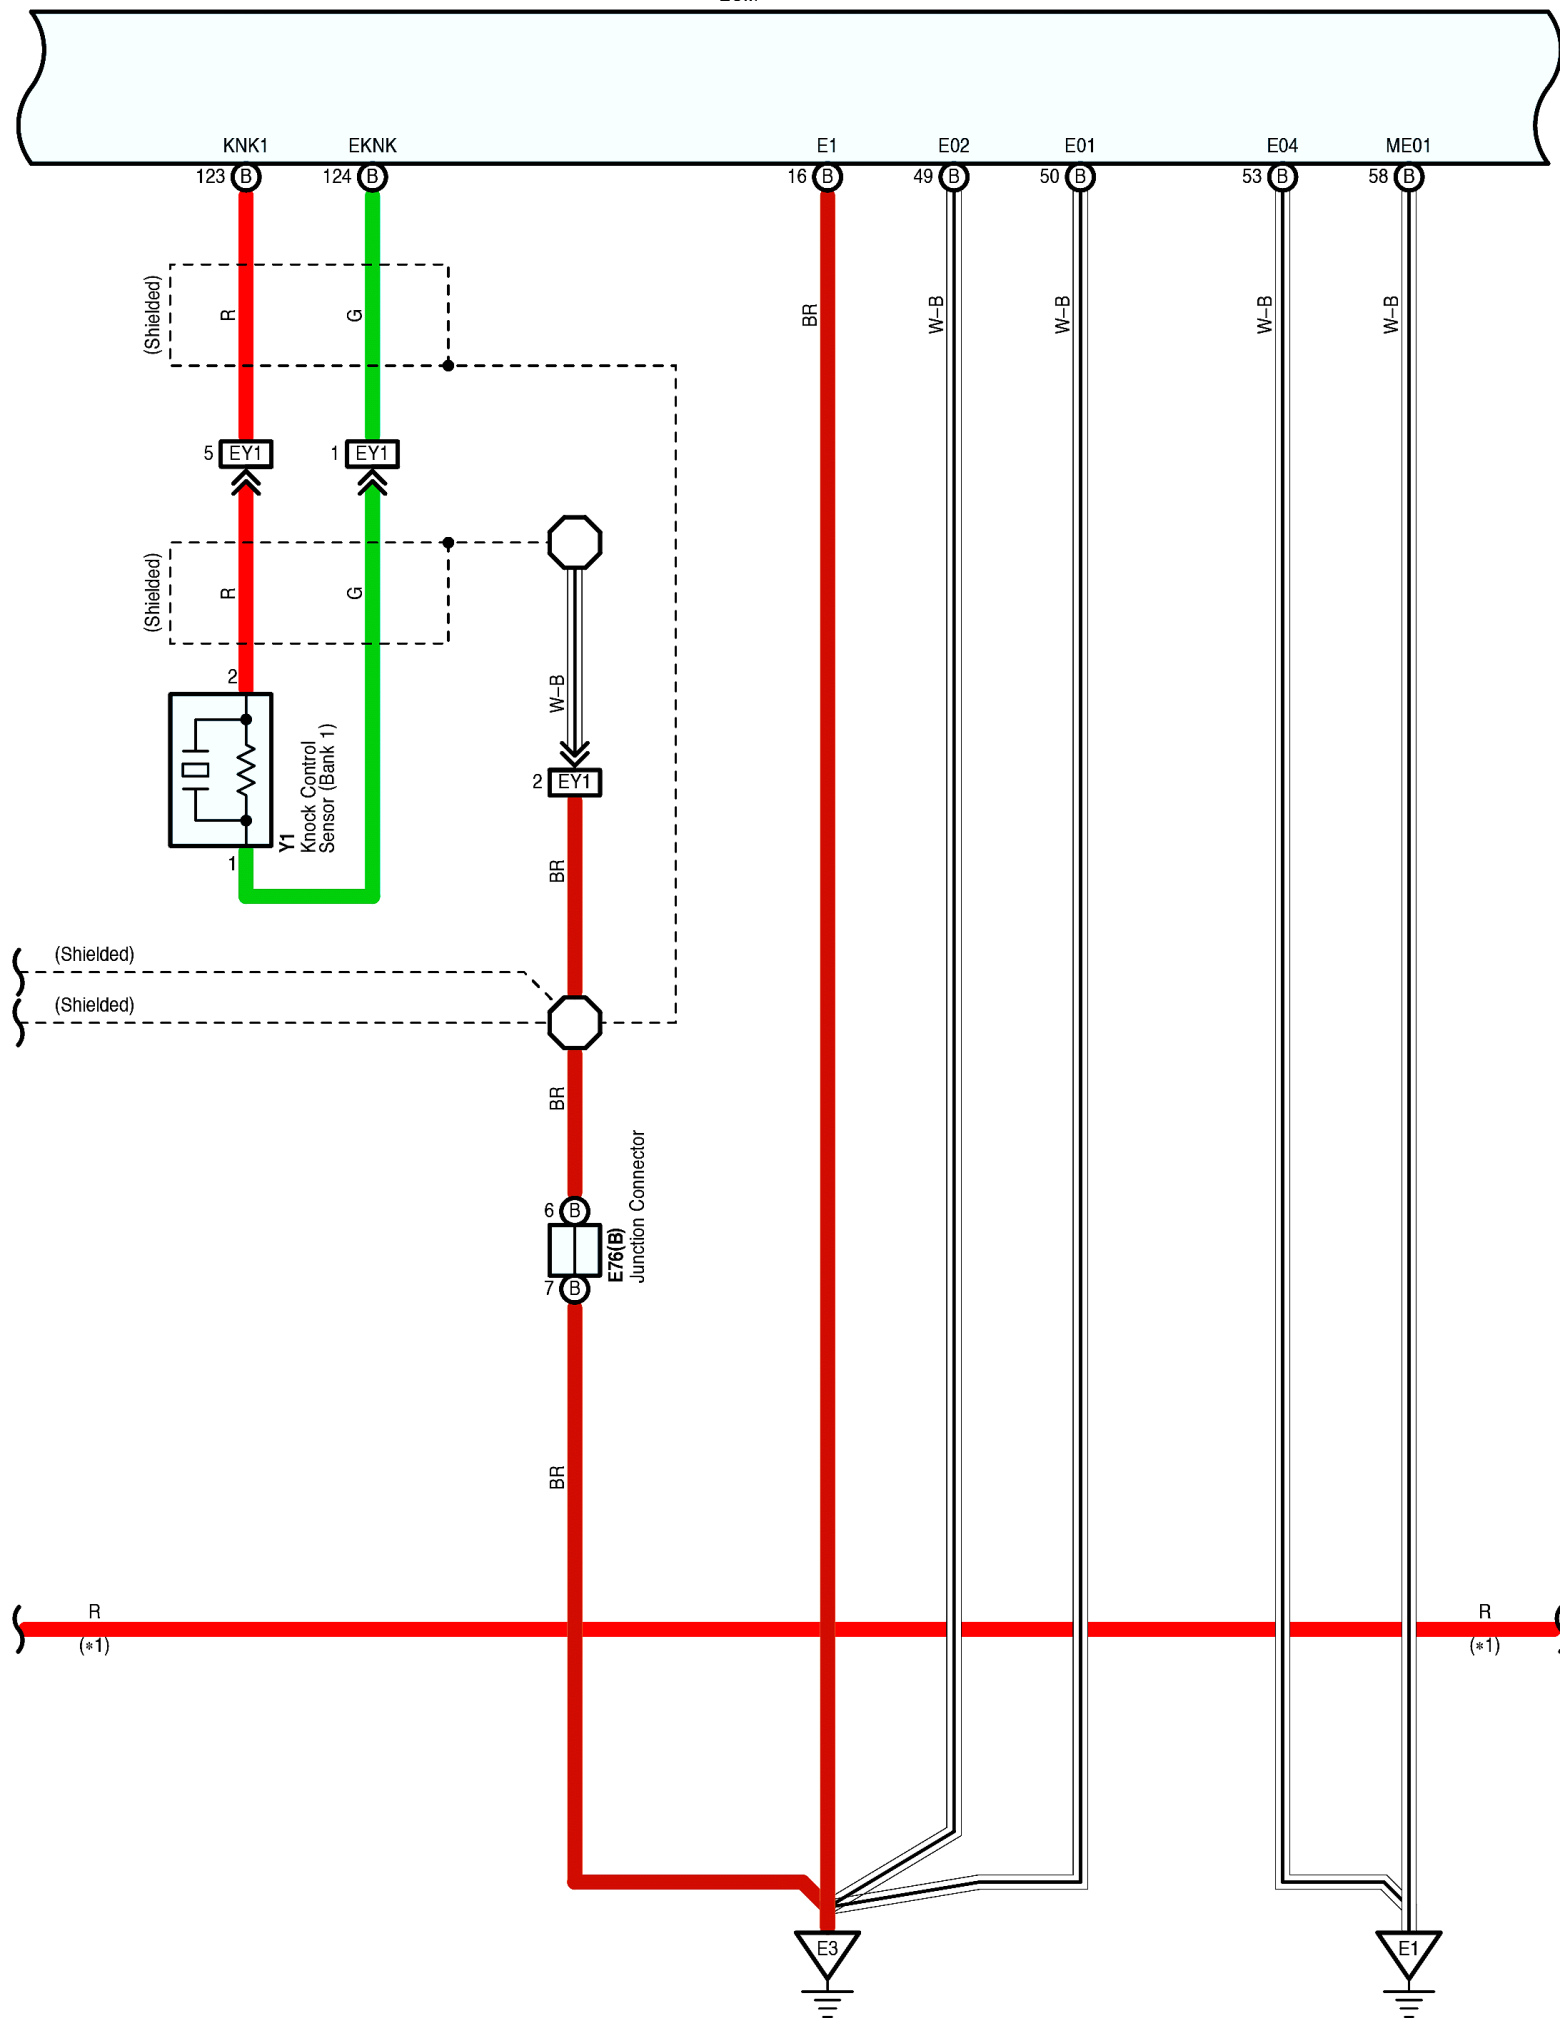

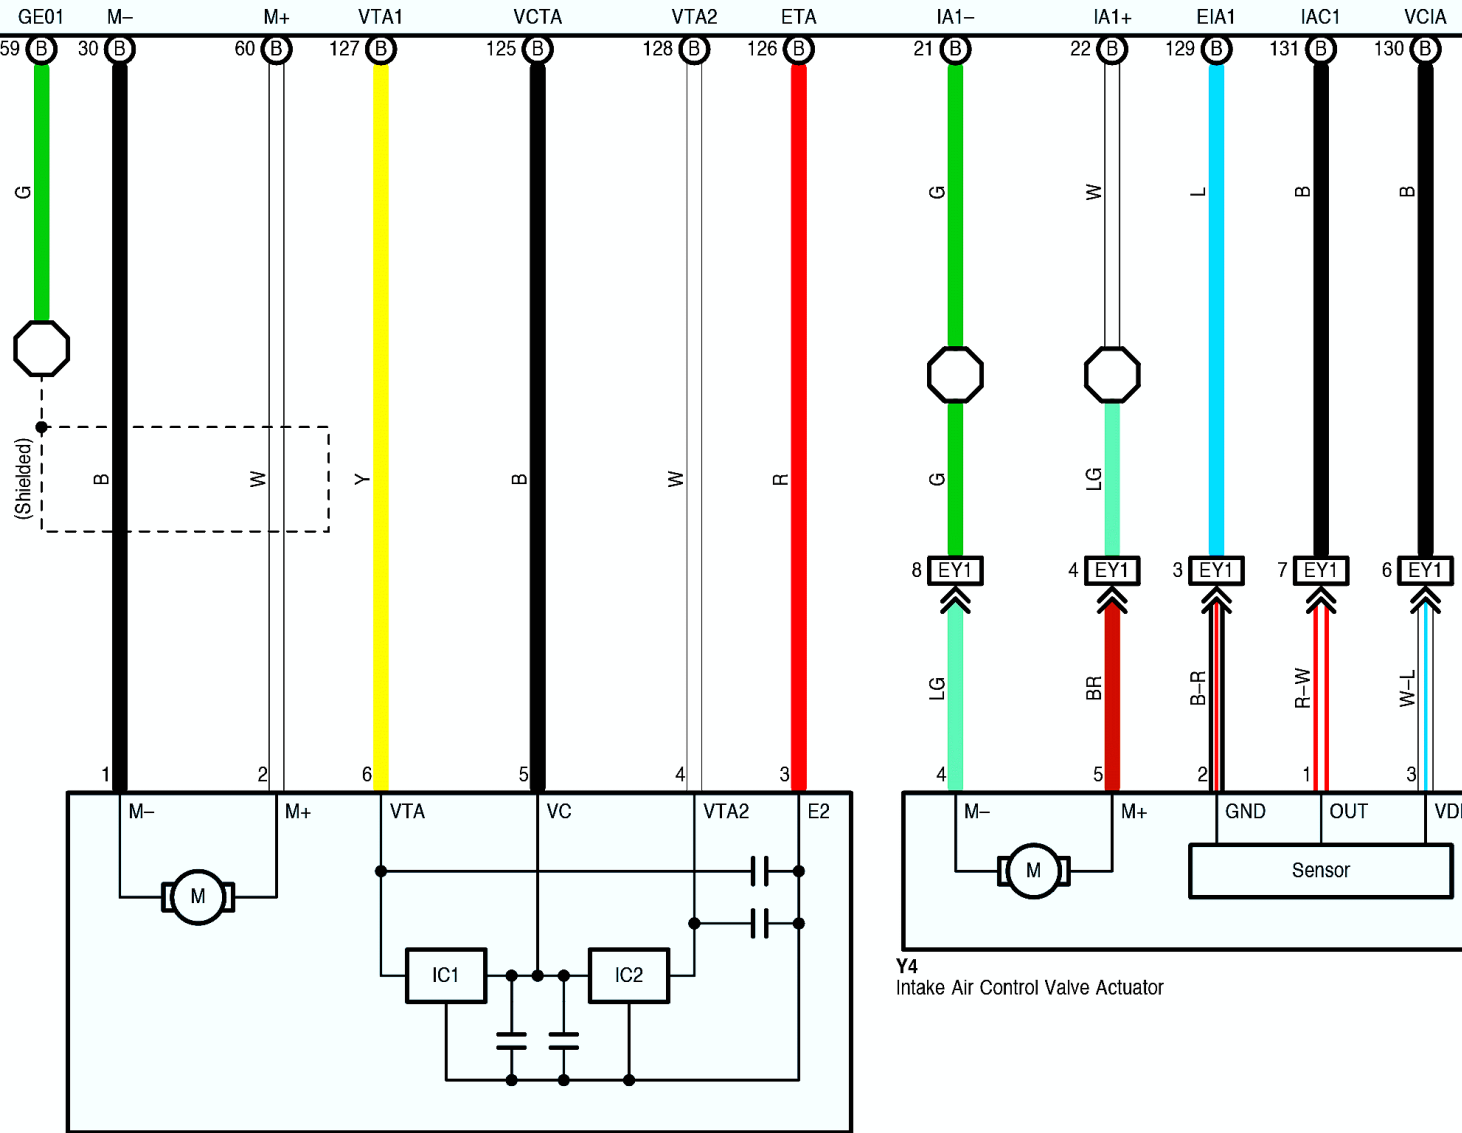


E16
Throttle Body Assembly with Motor


Y4
Intake Air Control Valve Actuator



- * 1 : w/ Smart Key System
- * 2 : w/o Smart Key System

R
(*1)


R
(*1)

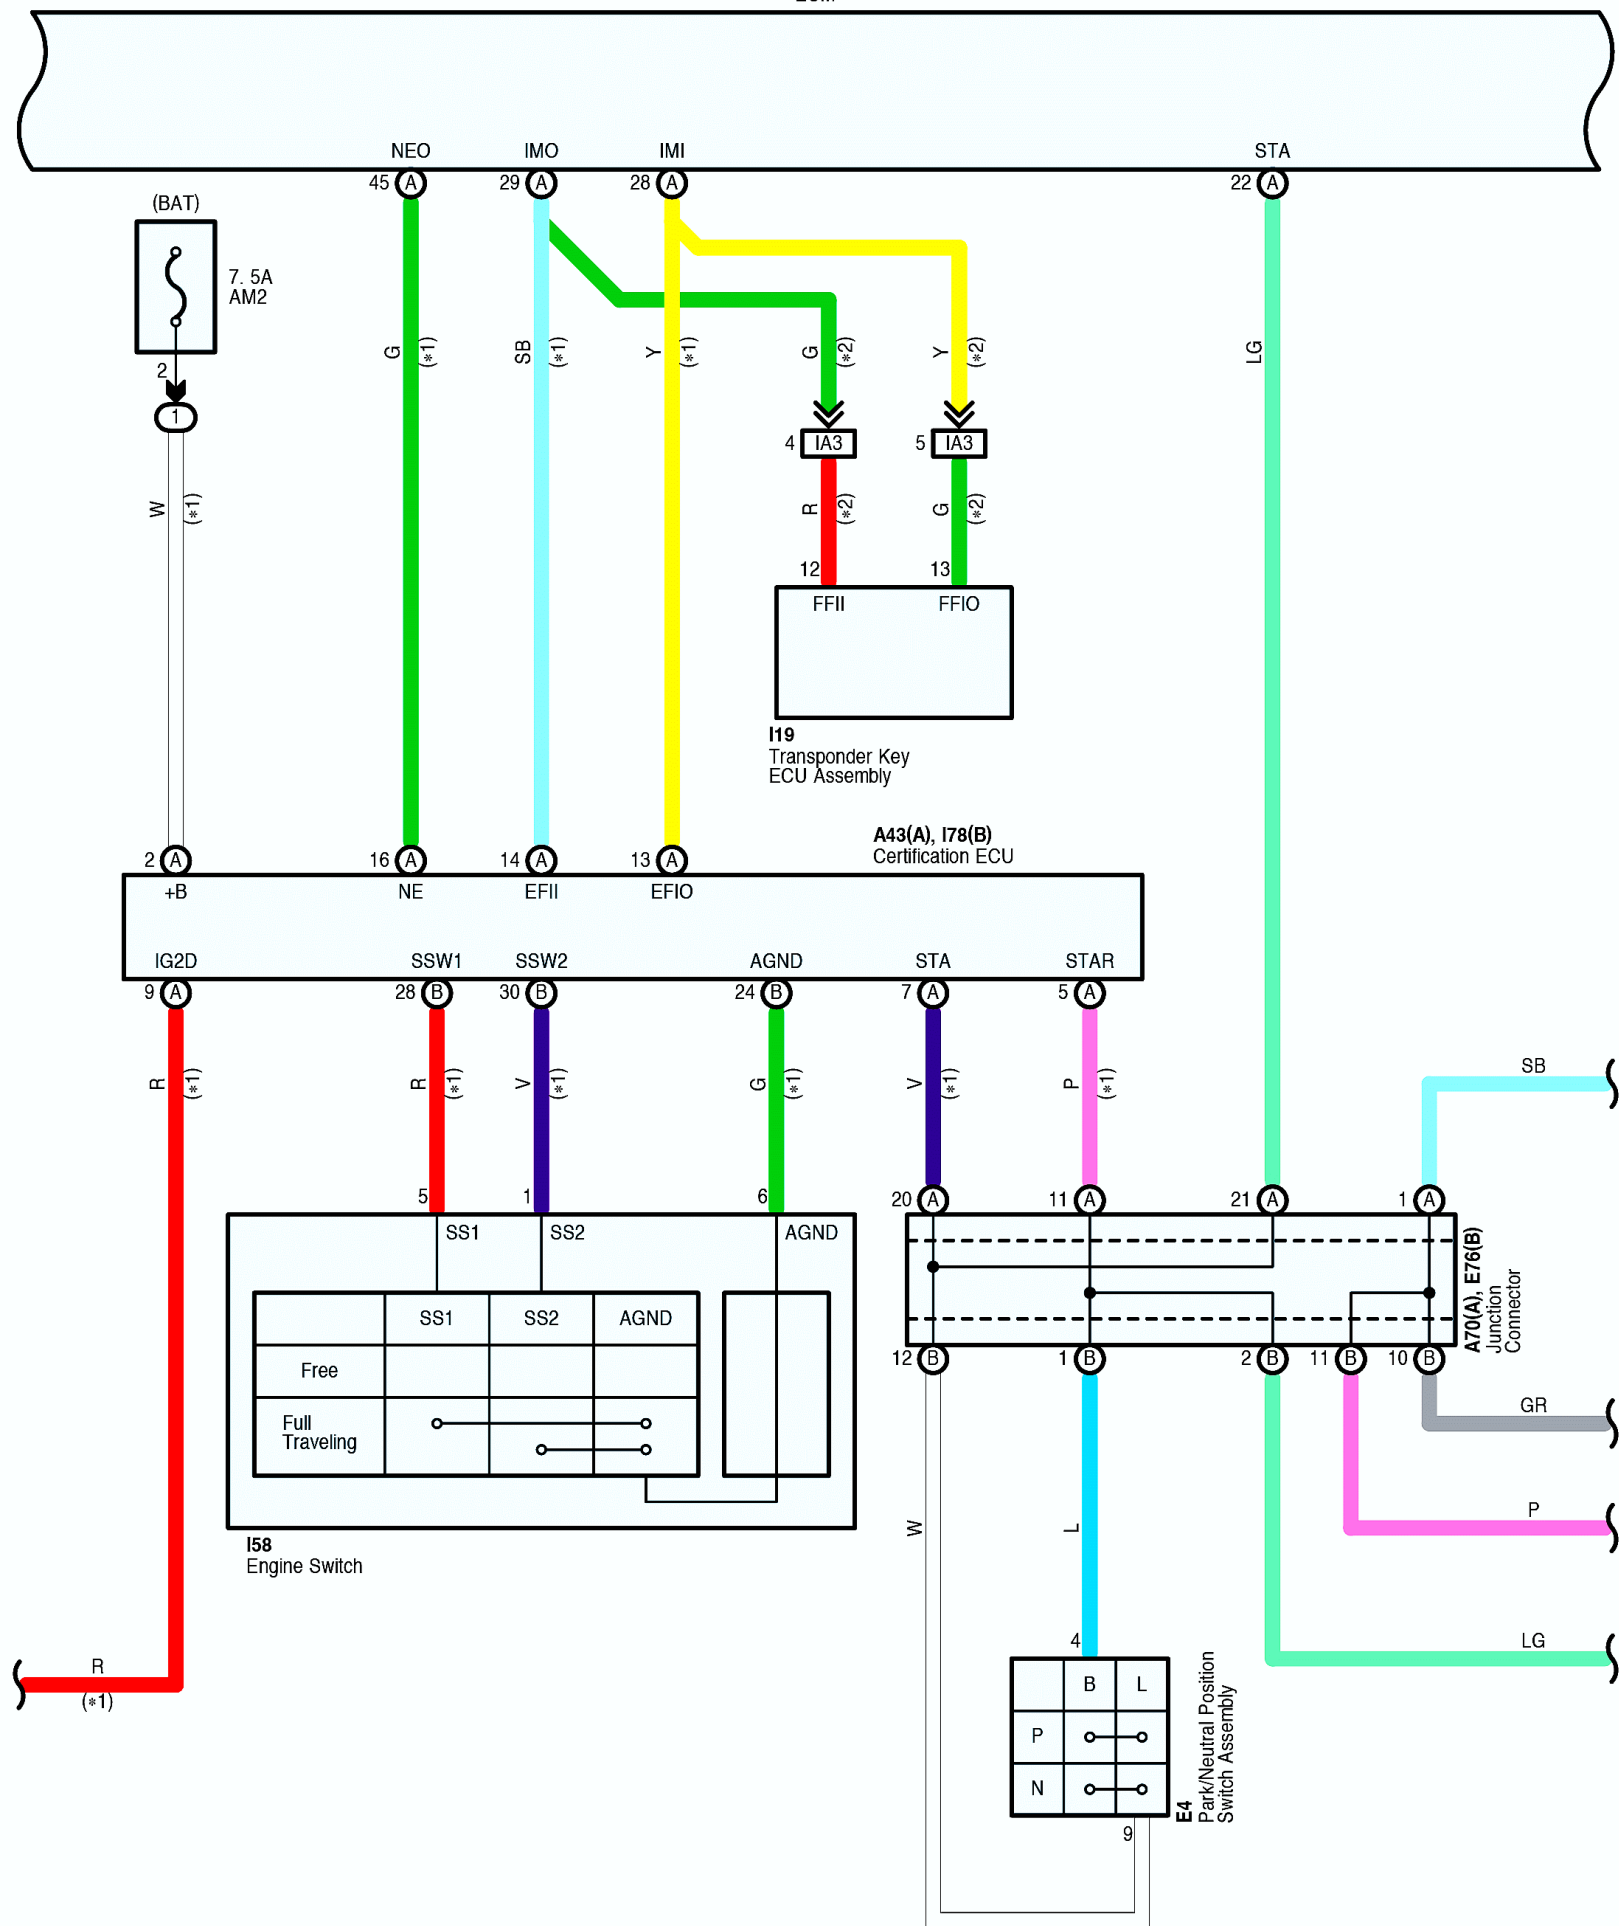

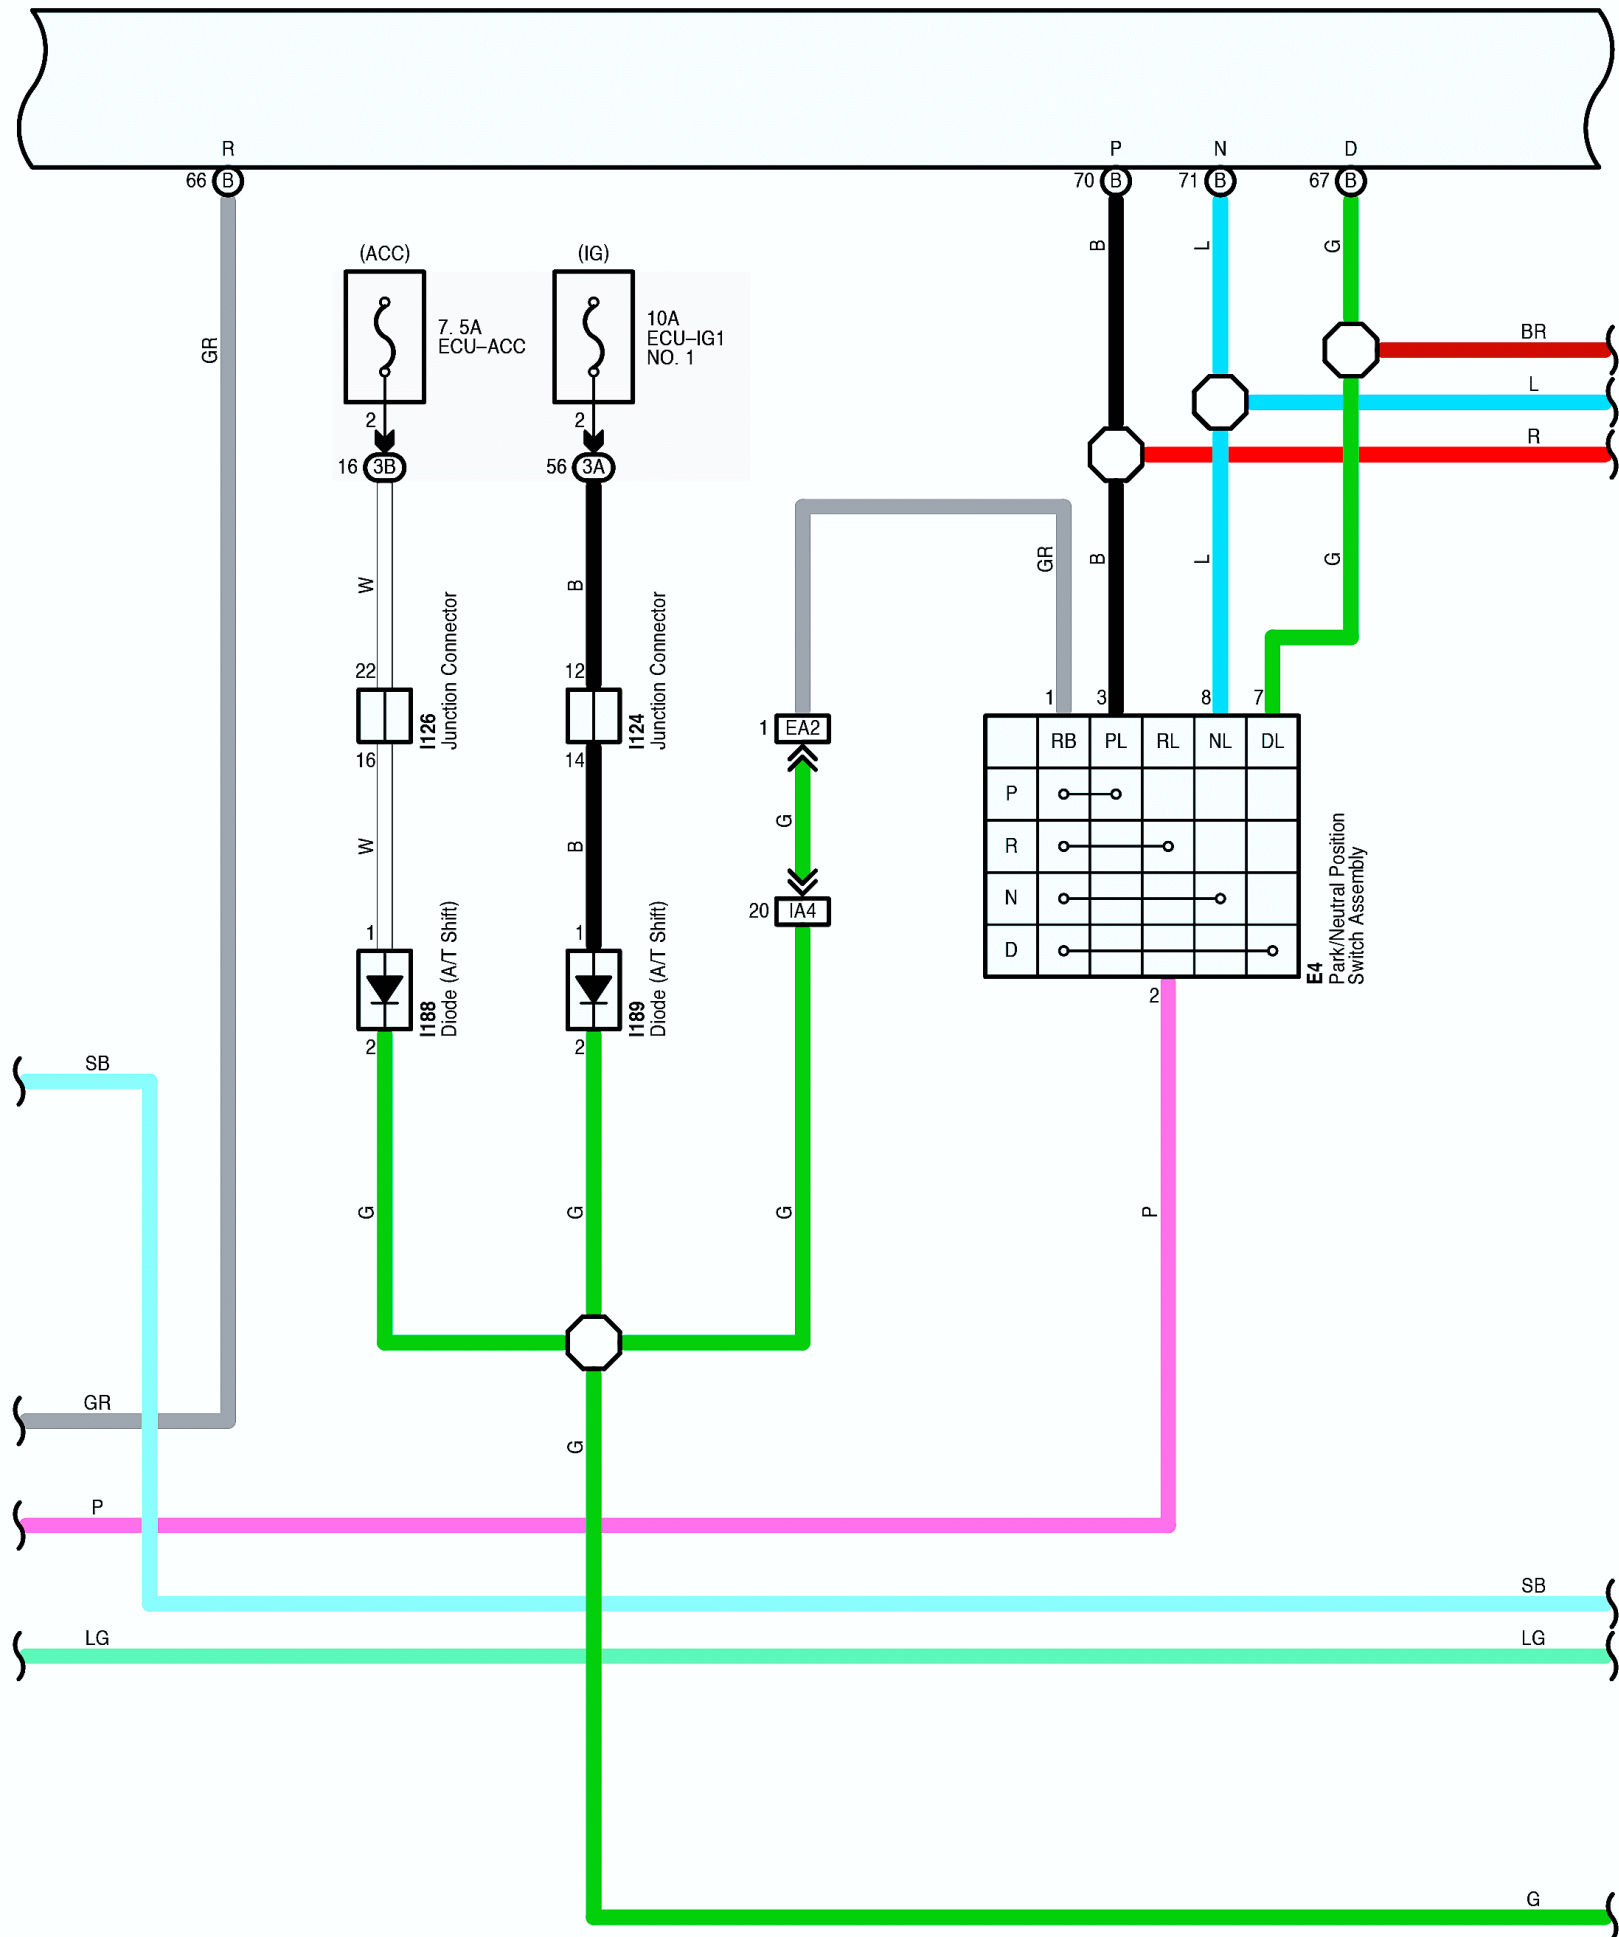

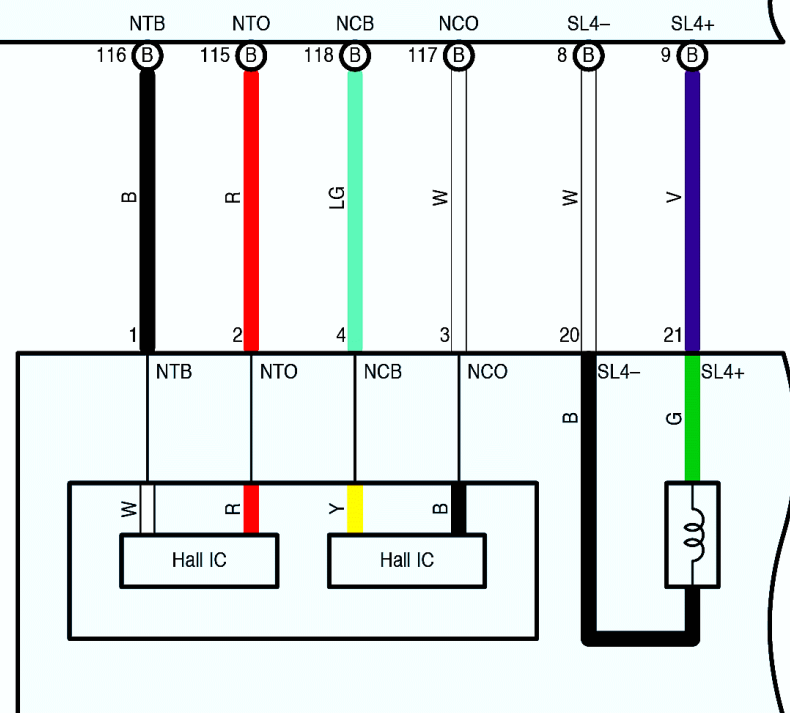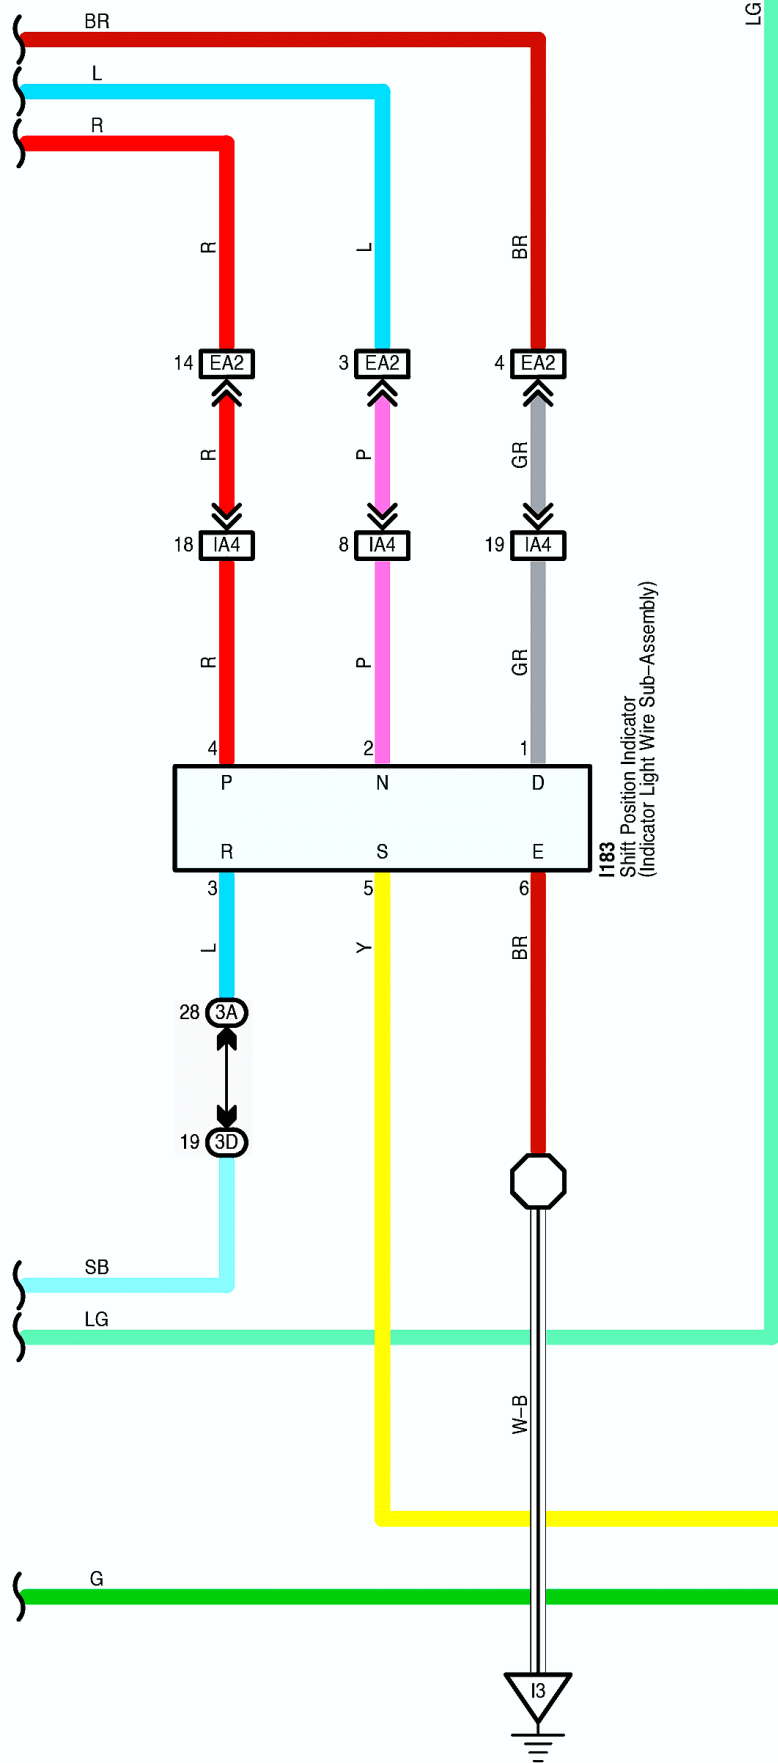

E8
Electronically Controlled Transmission
Solenoid (Transmission Wire)

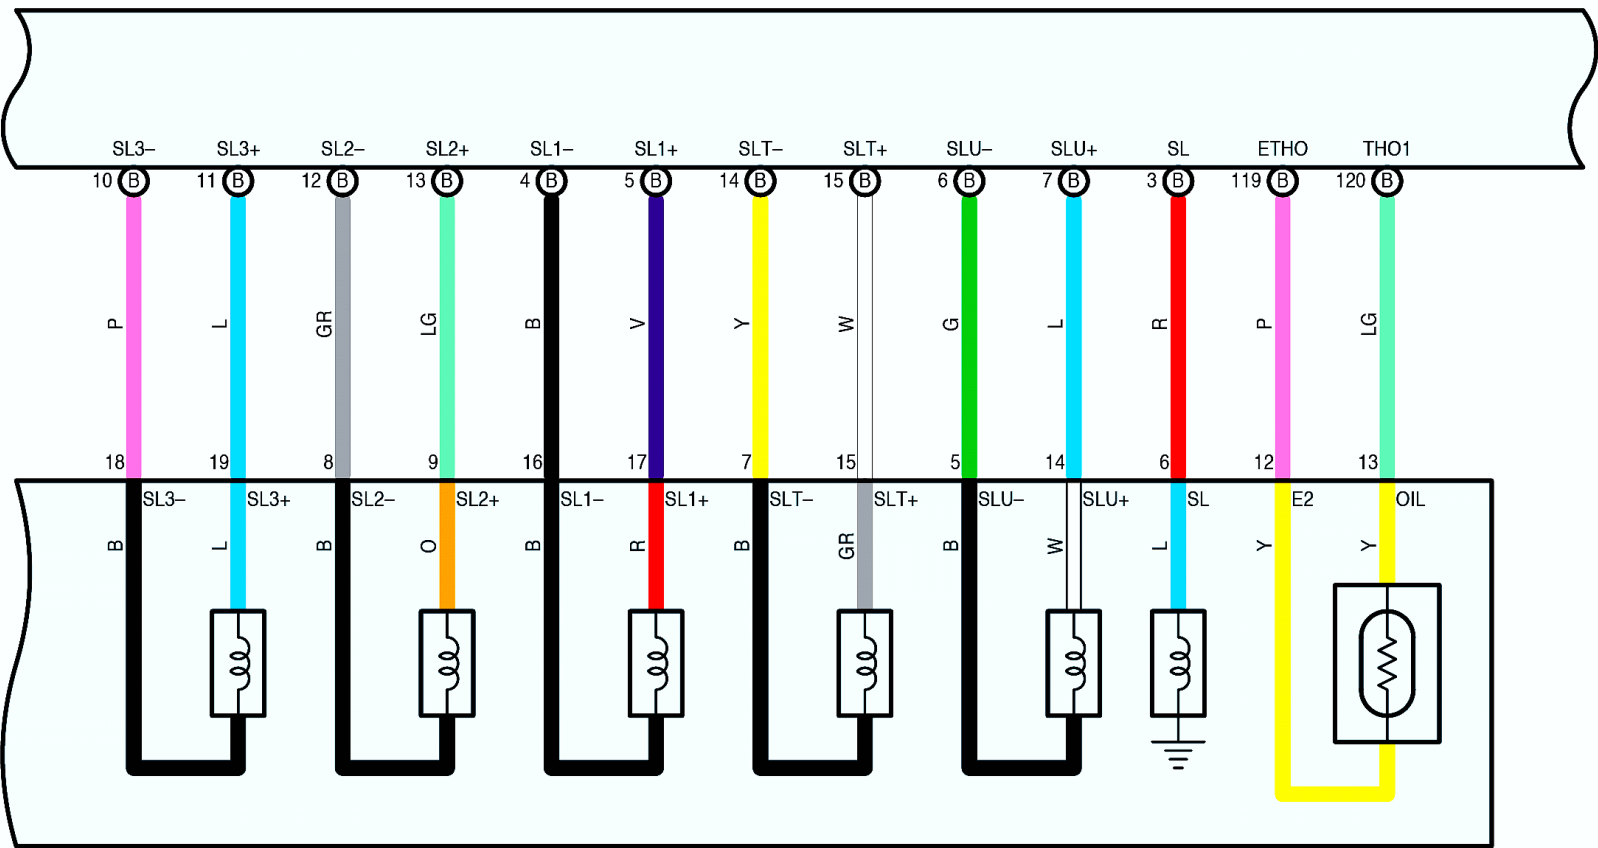



E8
Electronically Controlled Transmission
Solenoid (Transmission Wire)


* 3 : w/ Dynamic Radar Cruise Control
* 5 : w/ Paddle Shift Switch




A25(A), E26(B)
ECM

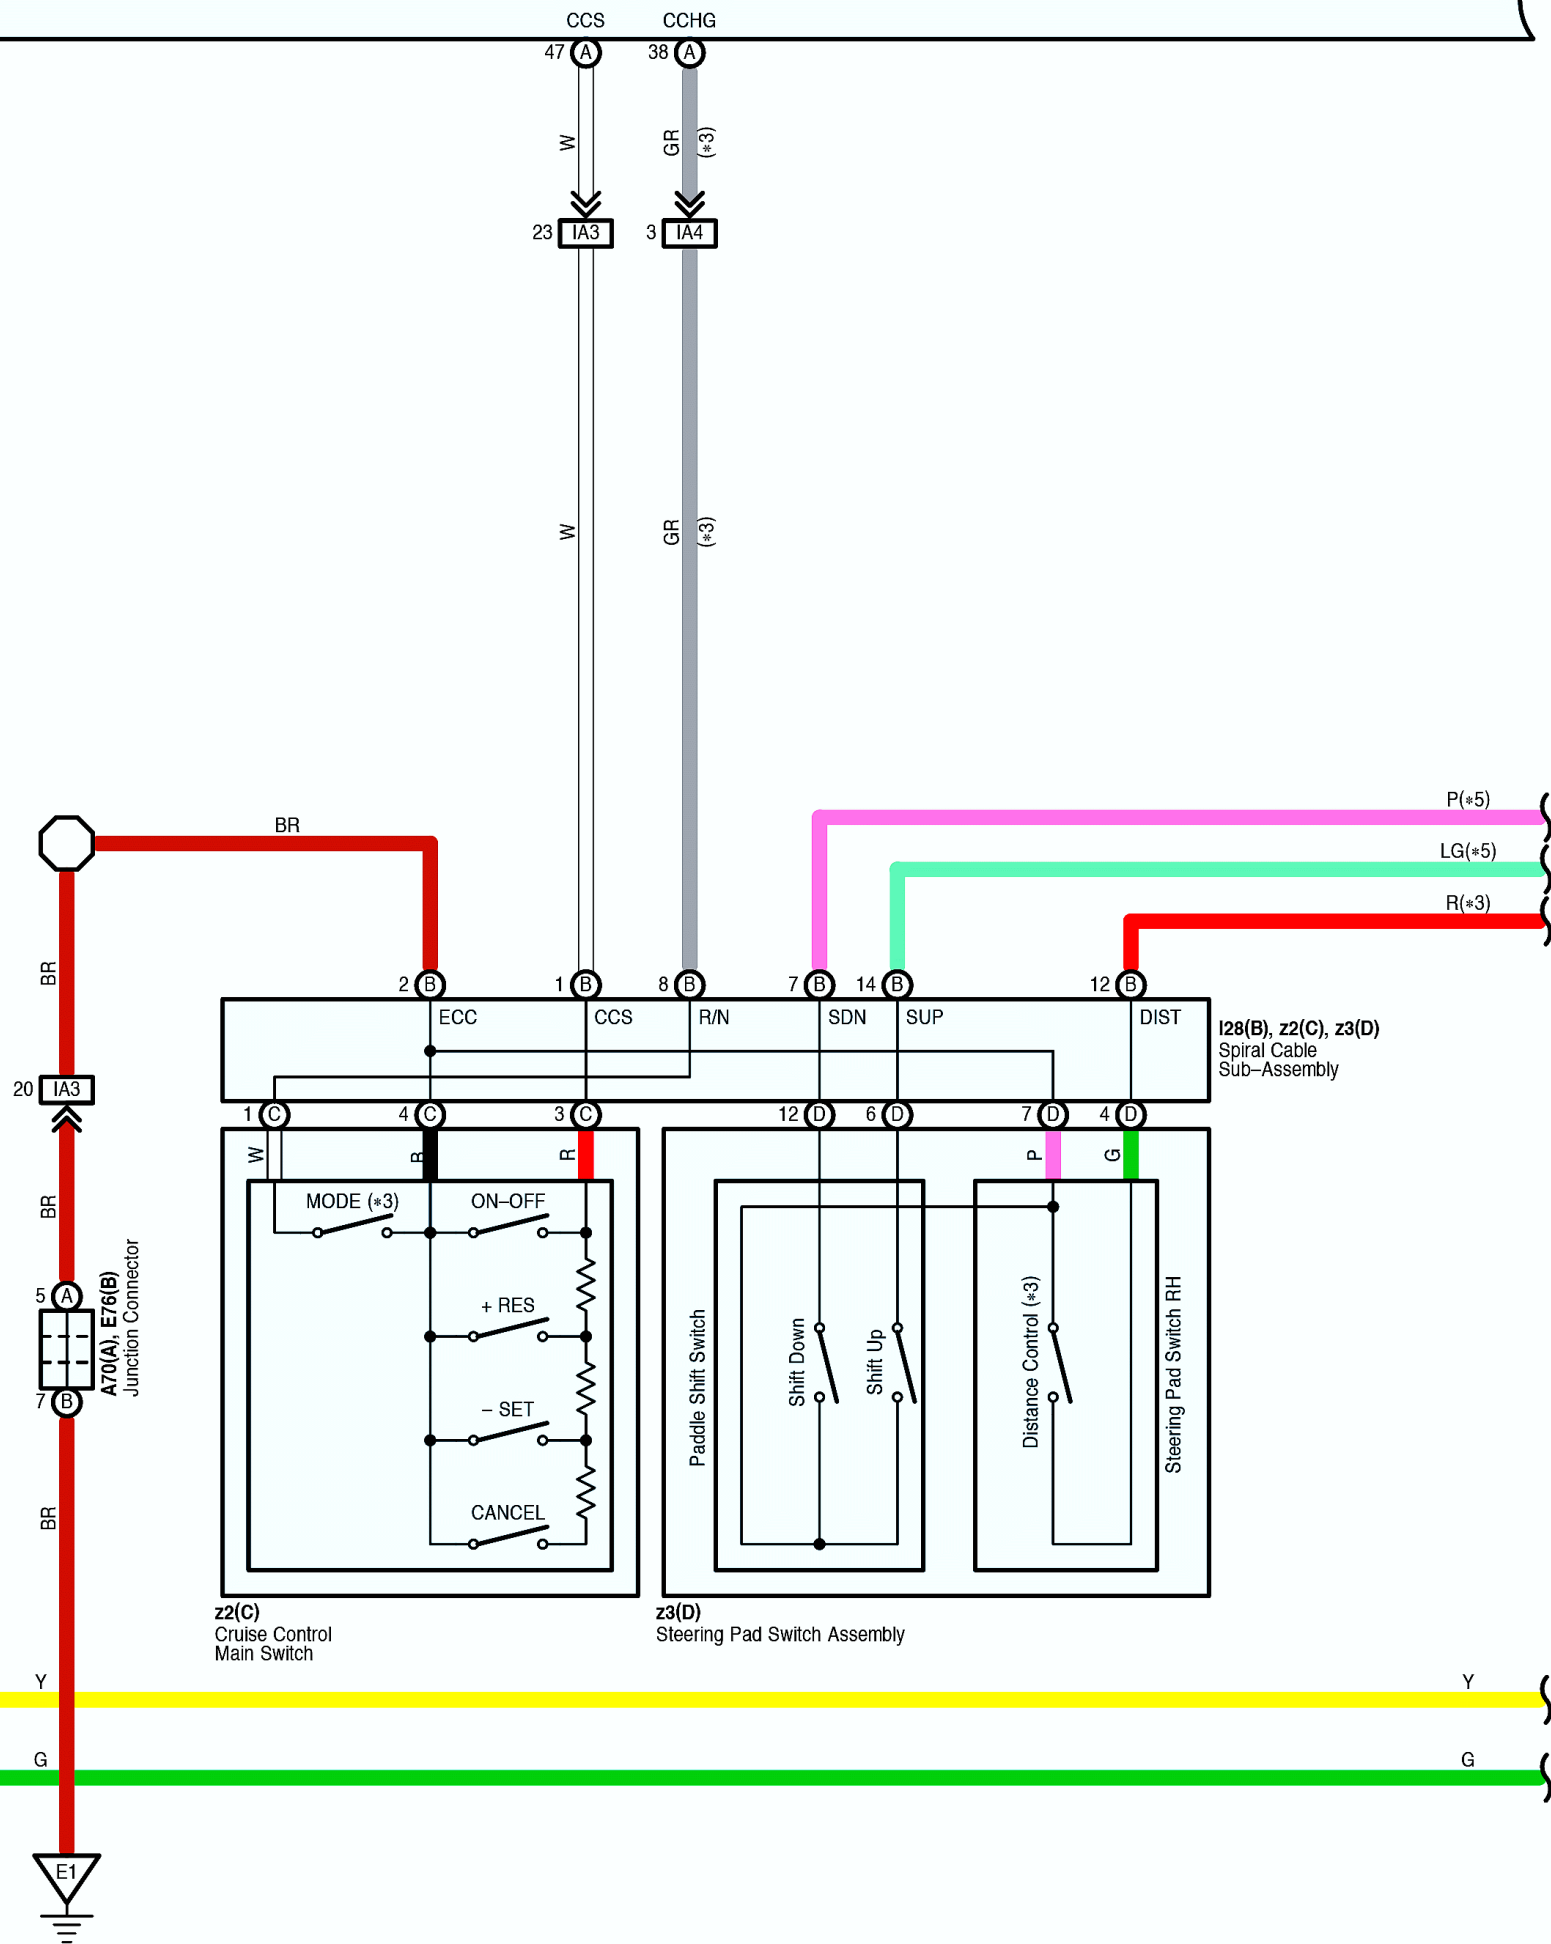

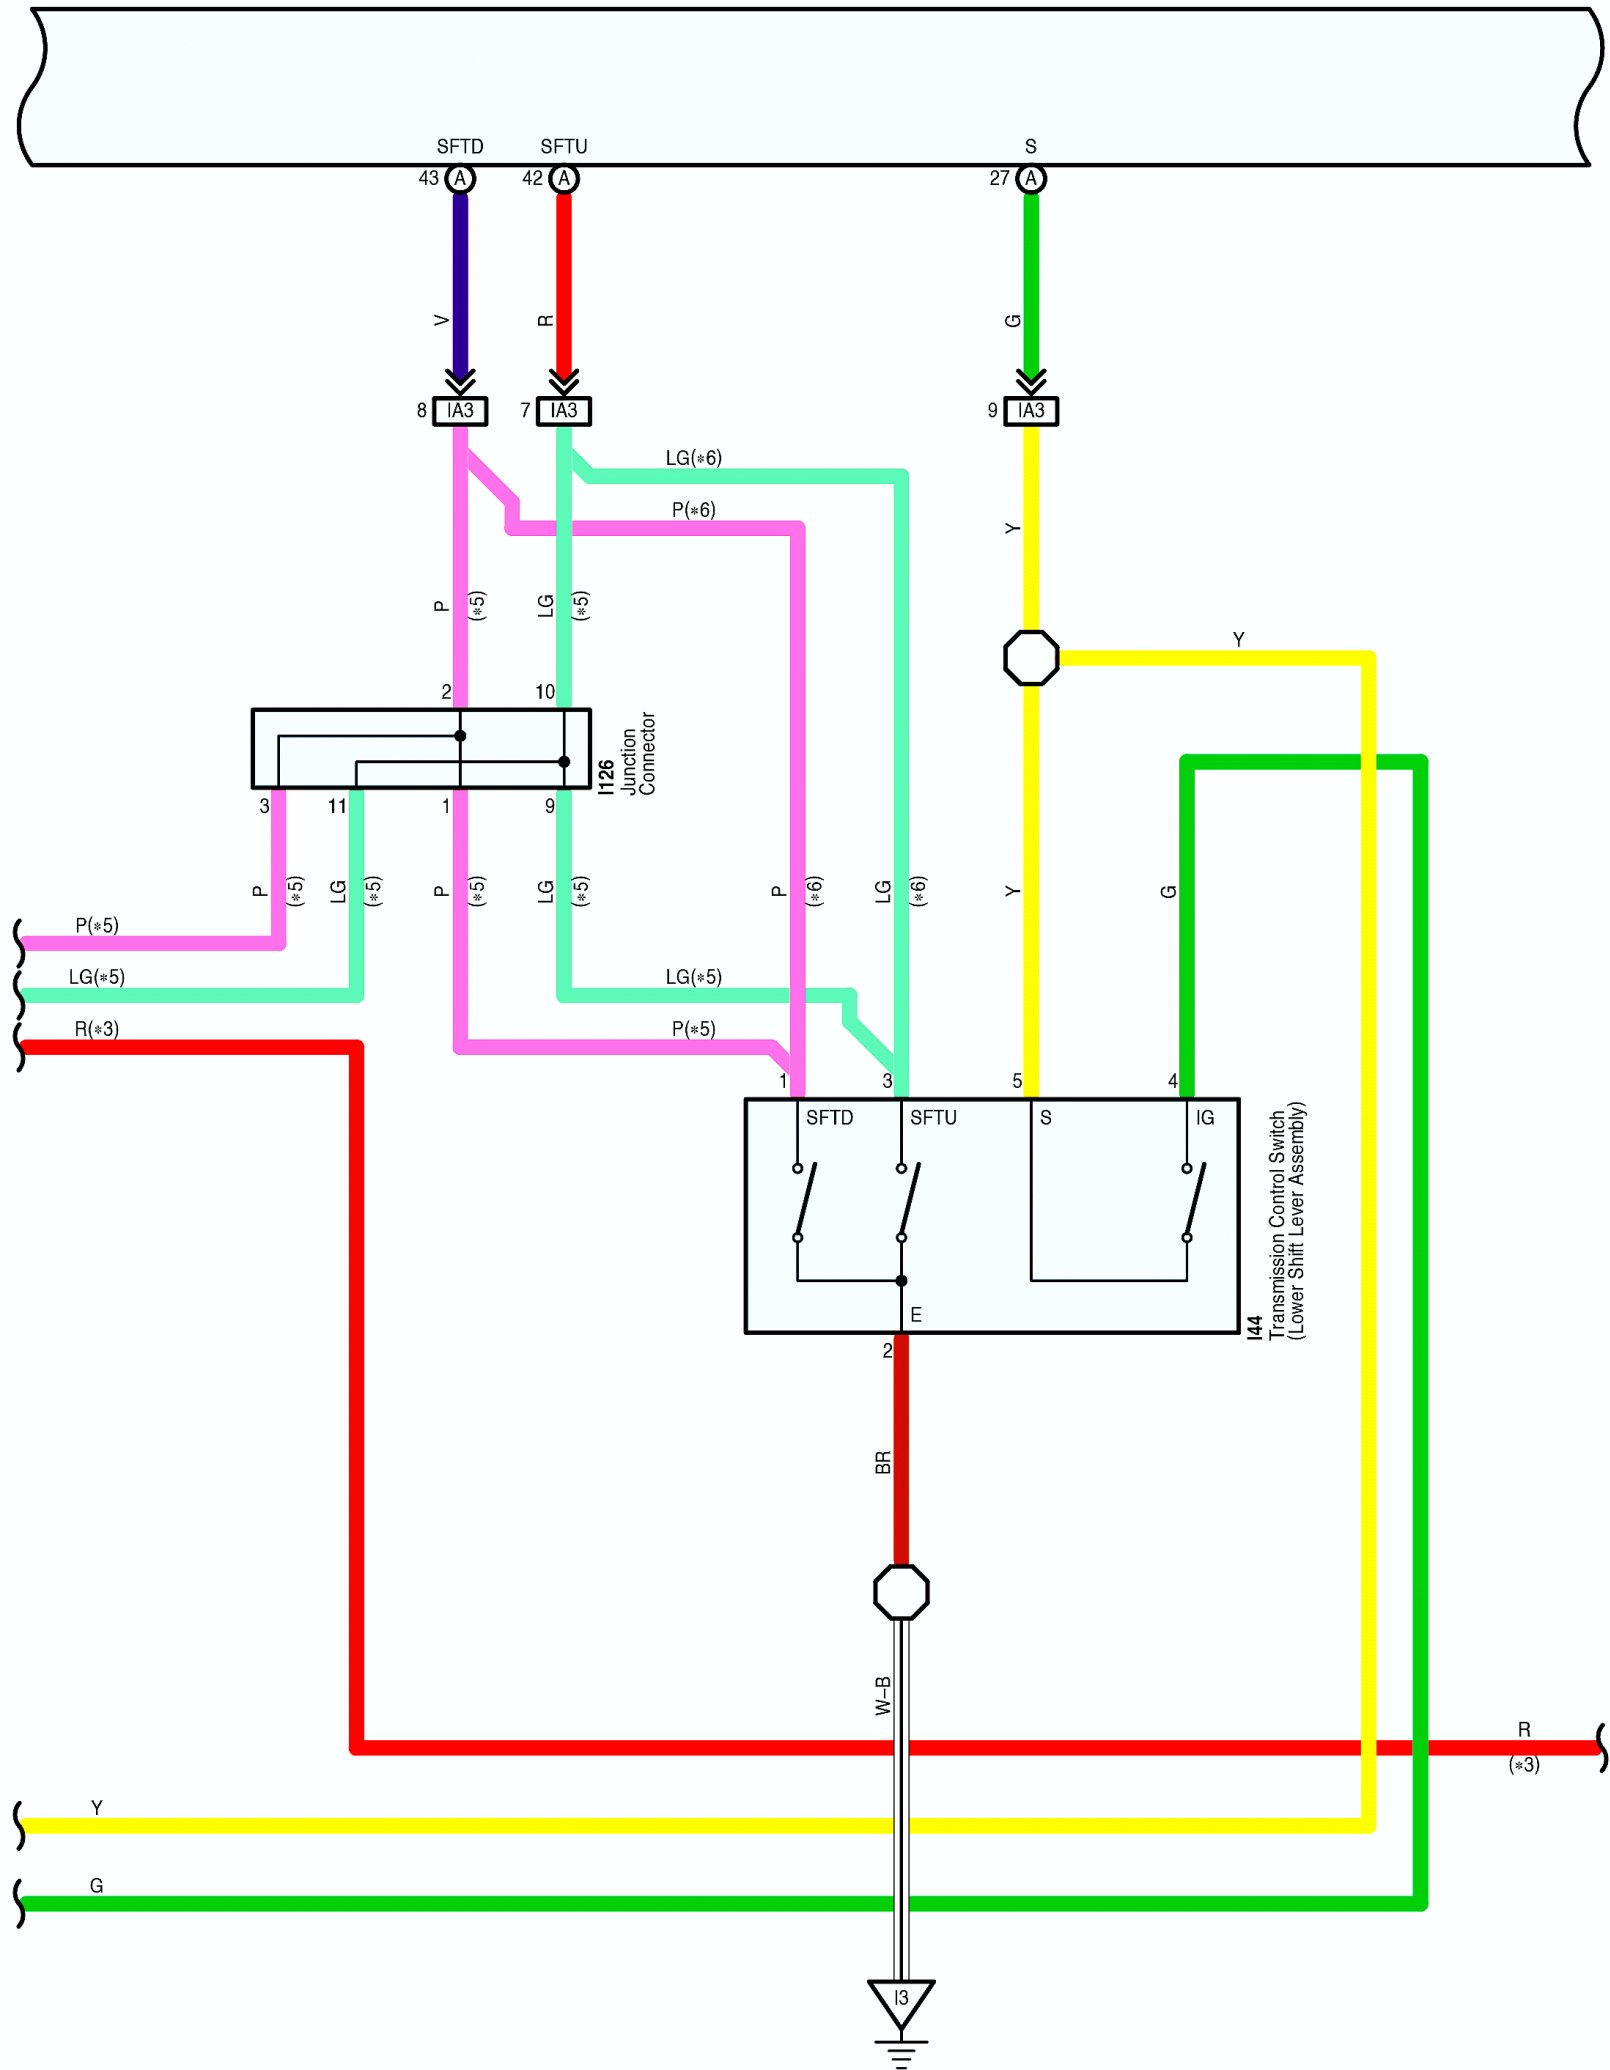

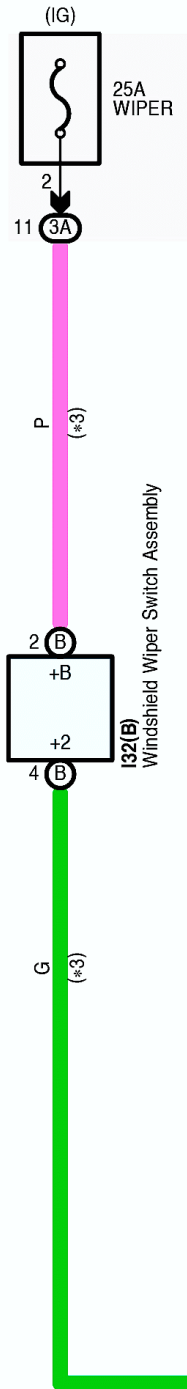



I187
Driving Support ECU Assembly

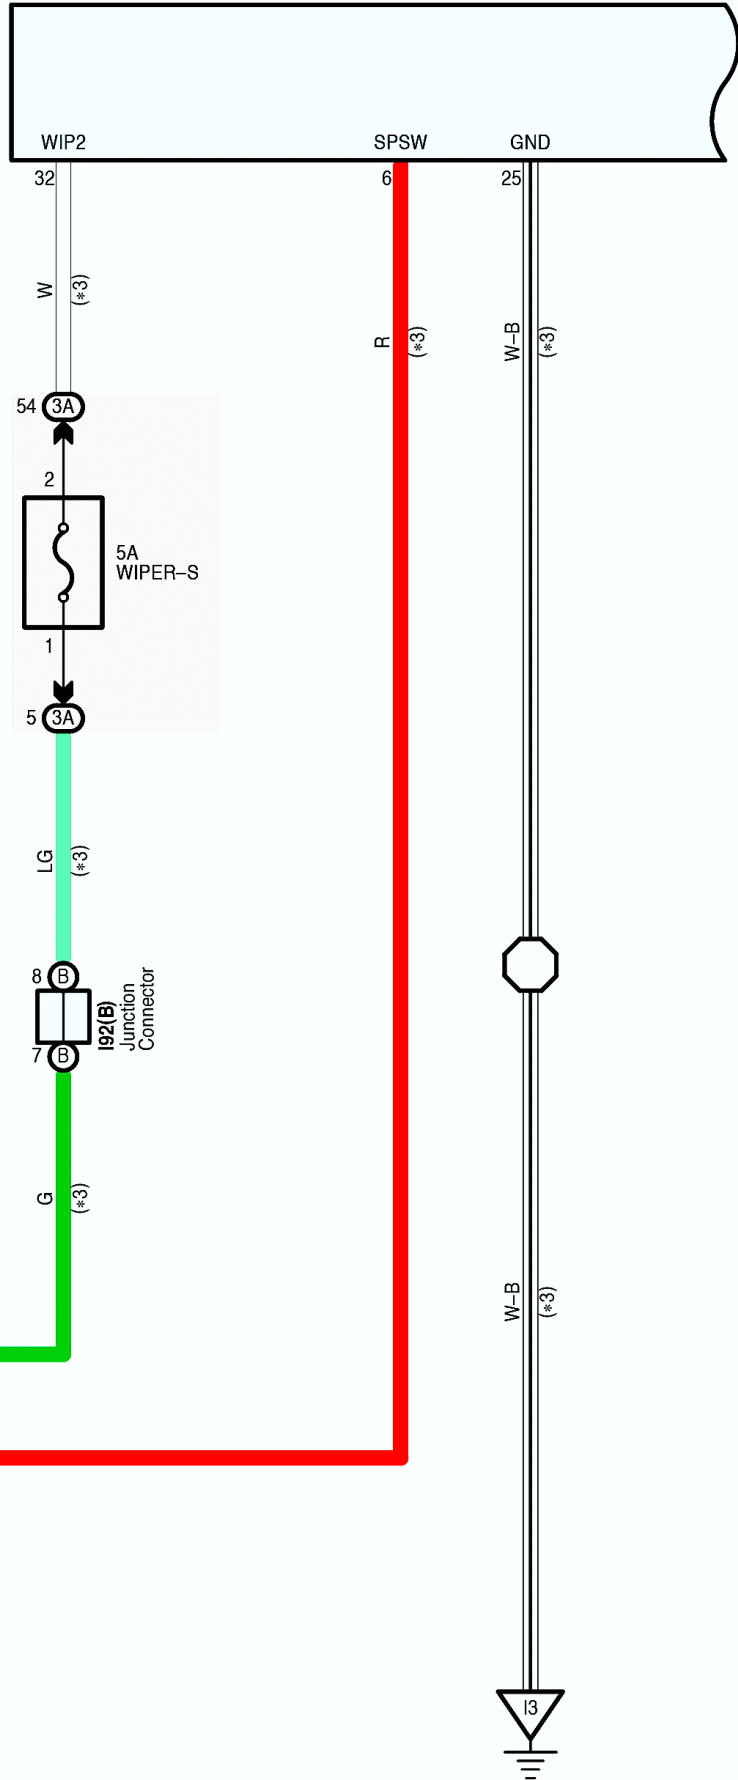



- * 3 : w/ Dynamic Radar Cruise Control
- * 5 : w/ Paddle Shift Switch
- * 6 : w/o Paddle Shift Switch

I187
Driving Support ECU Assembly

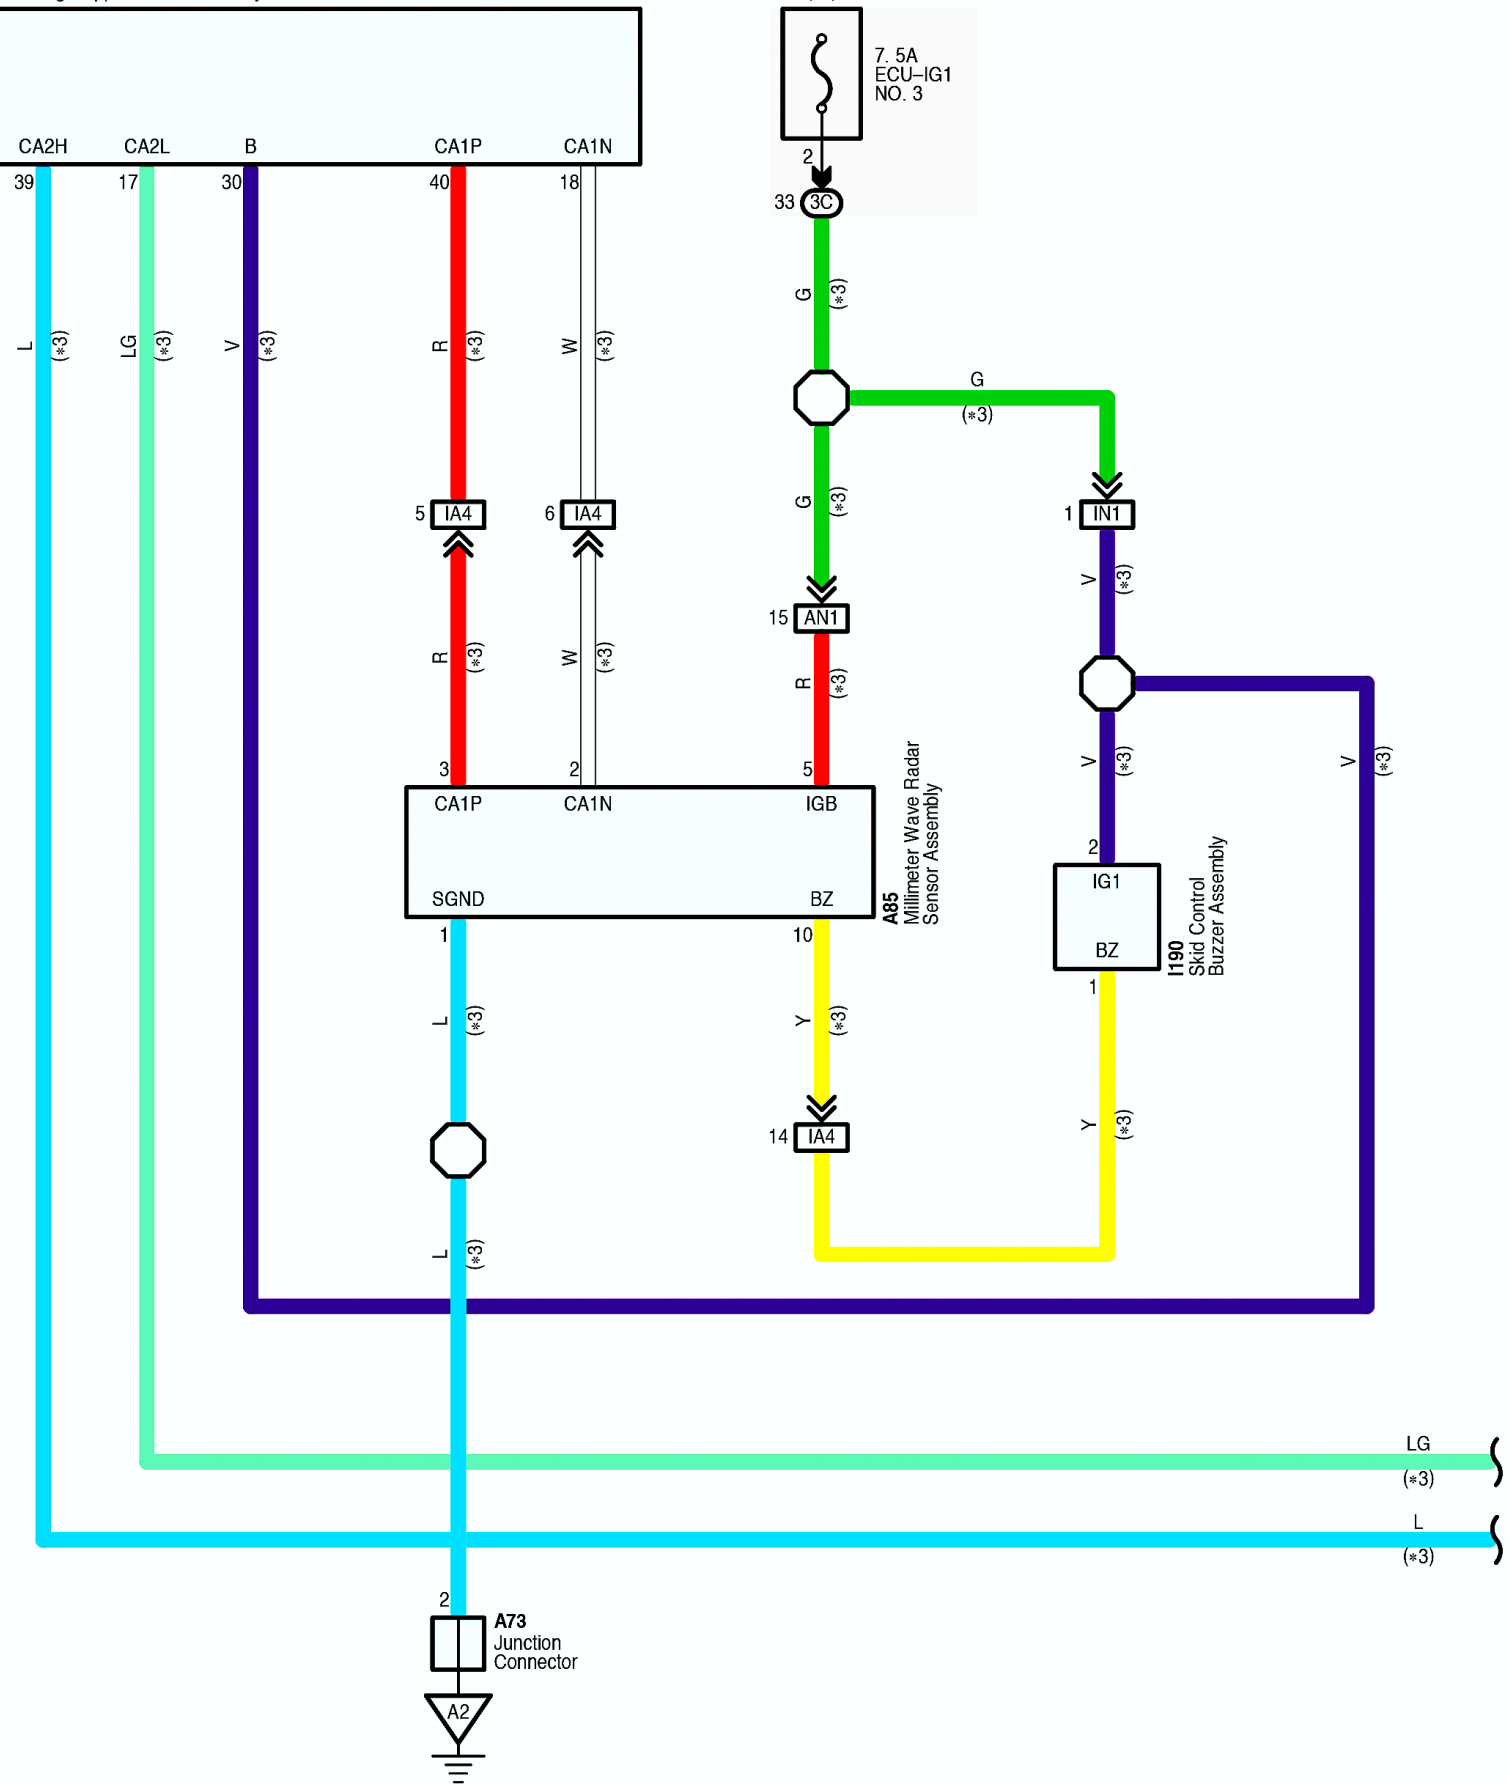

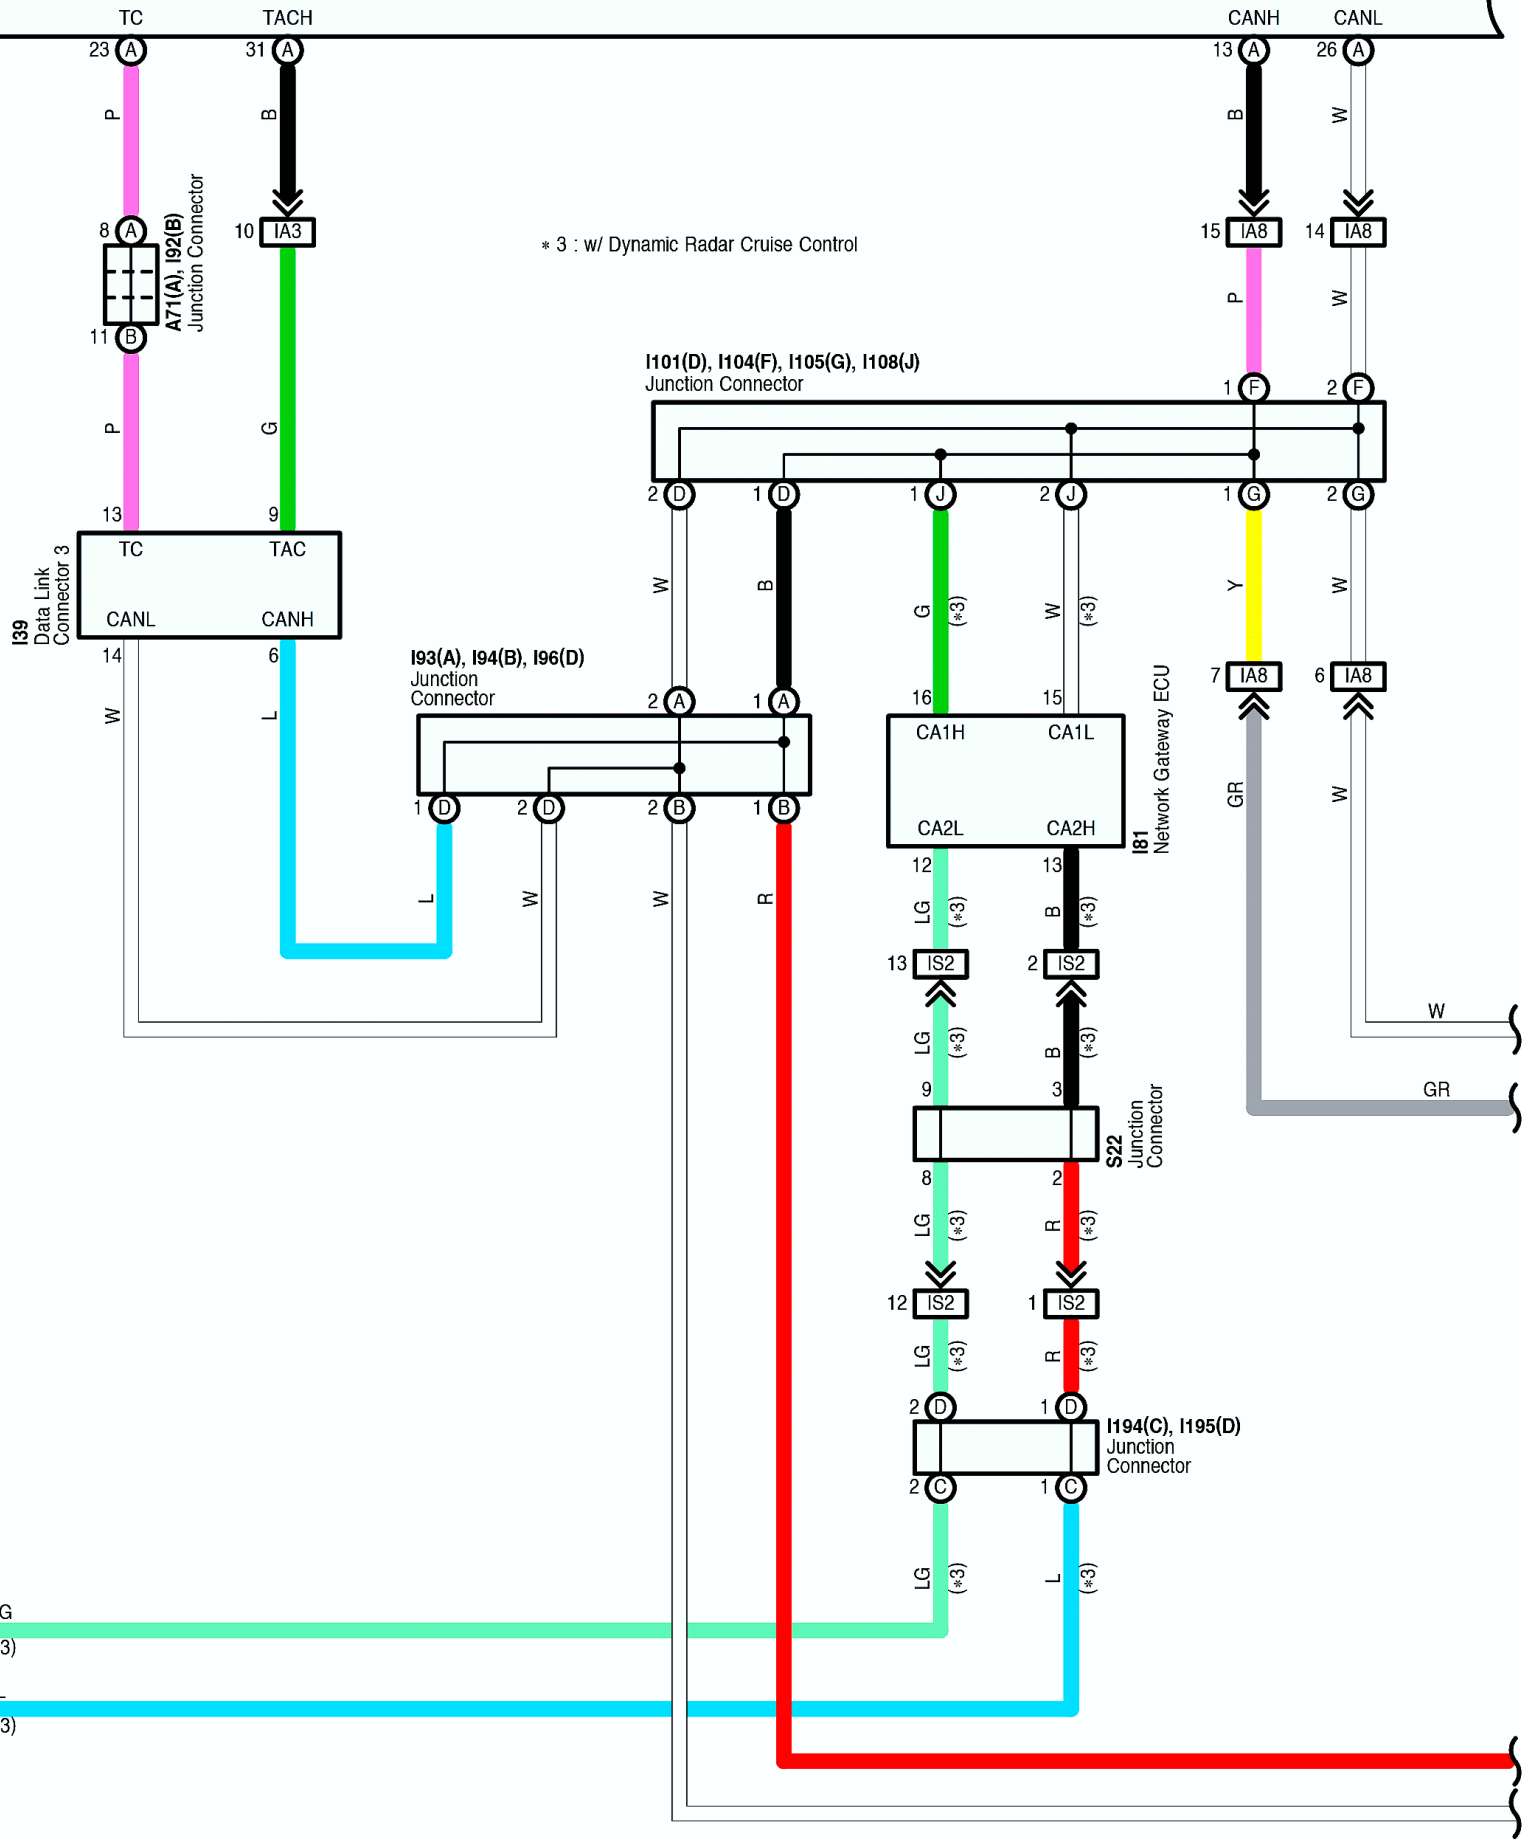


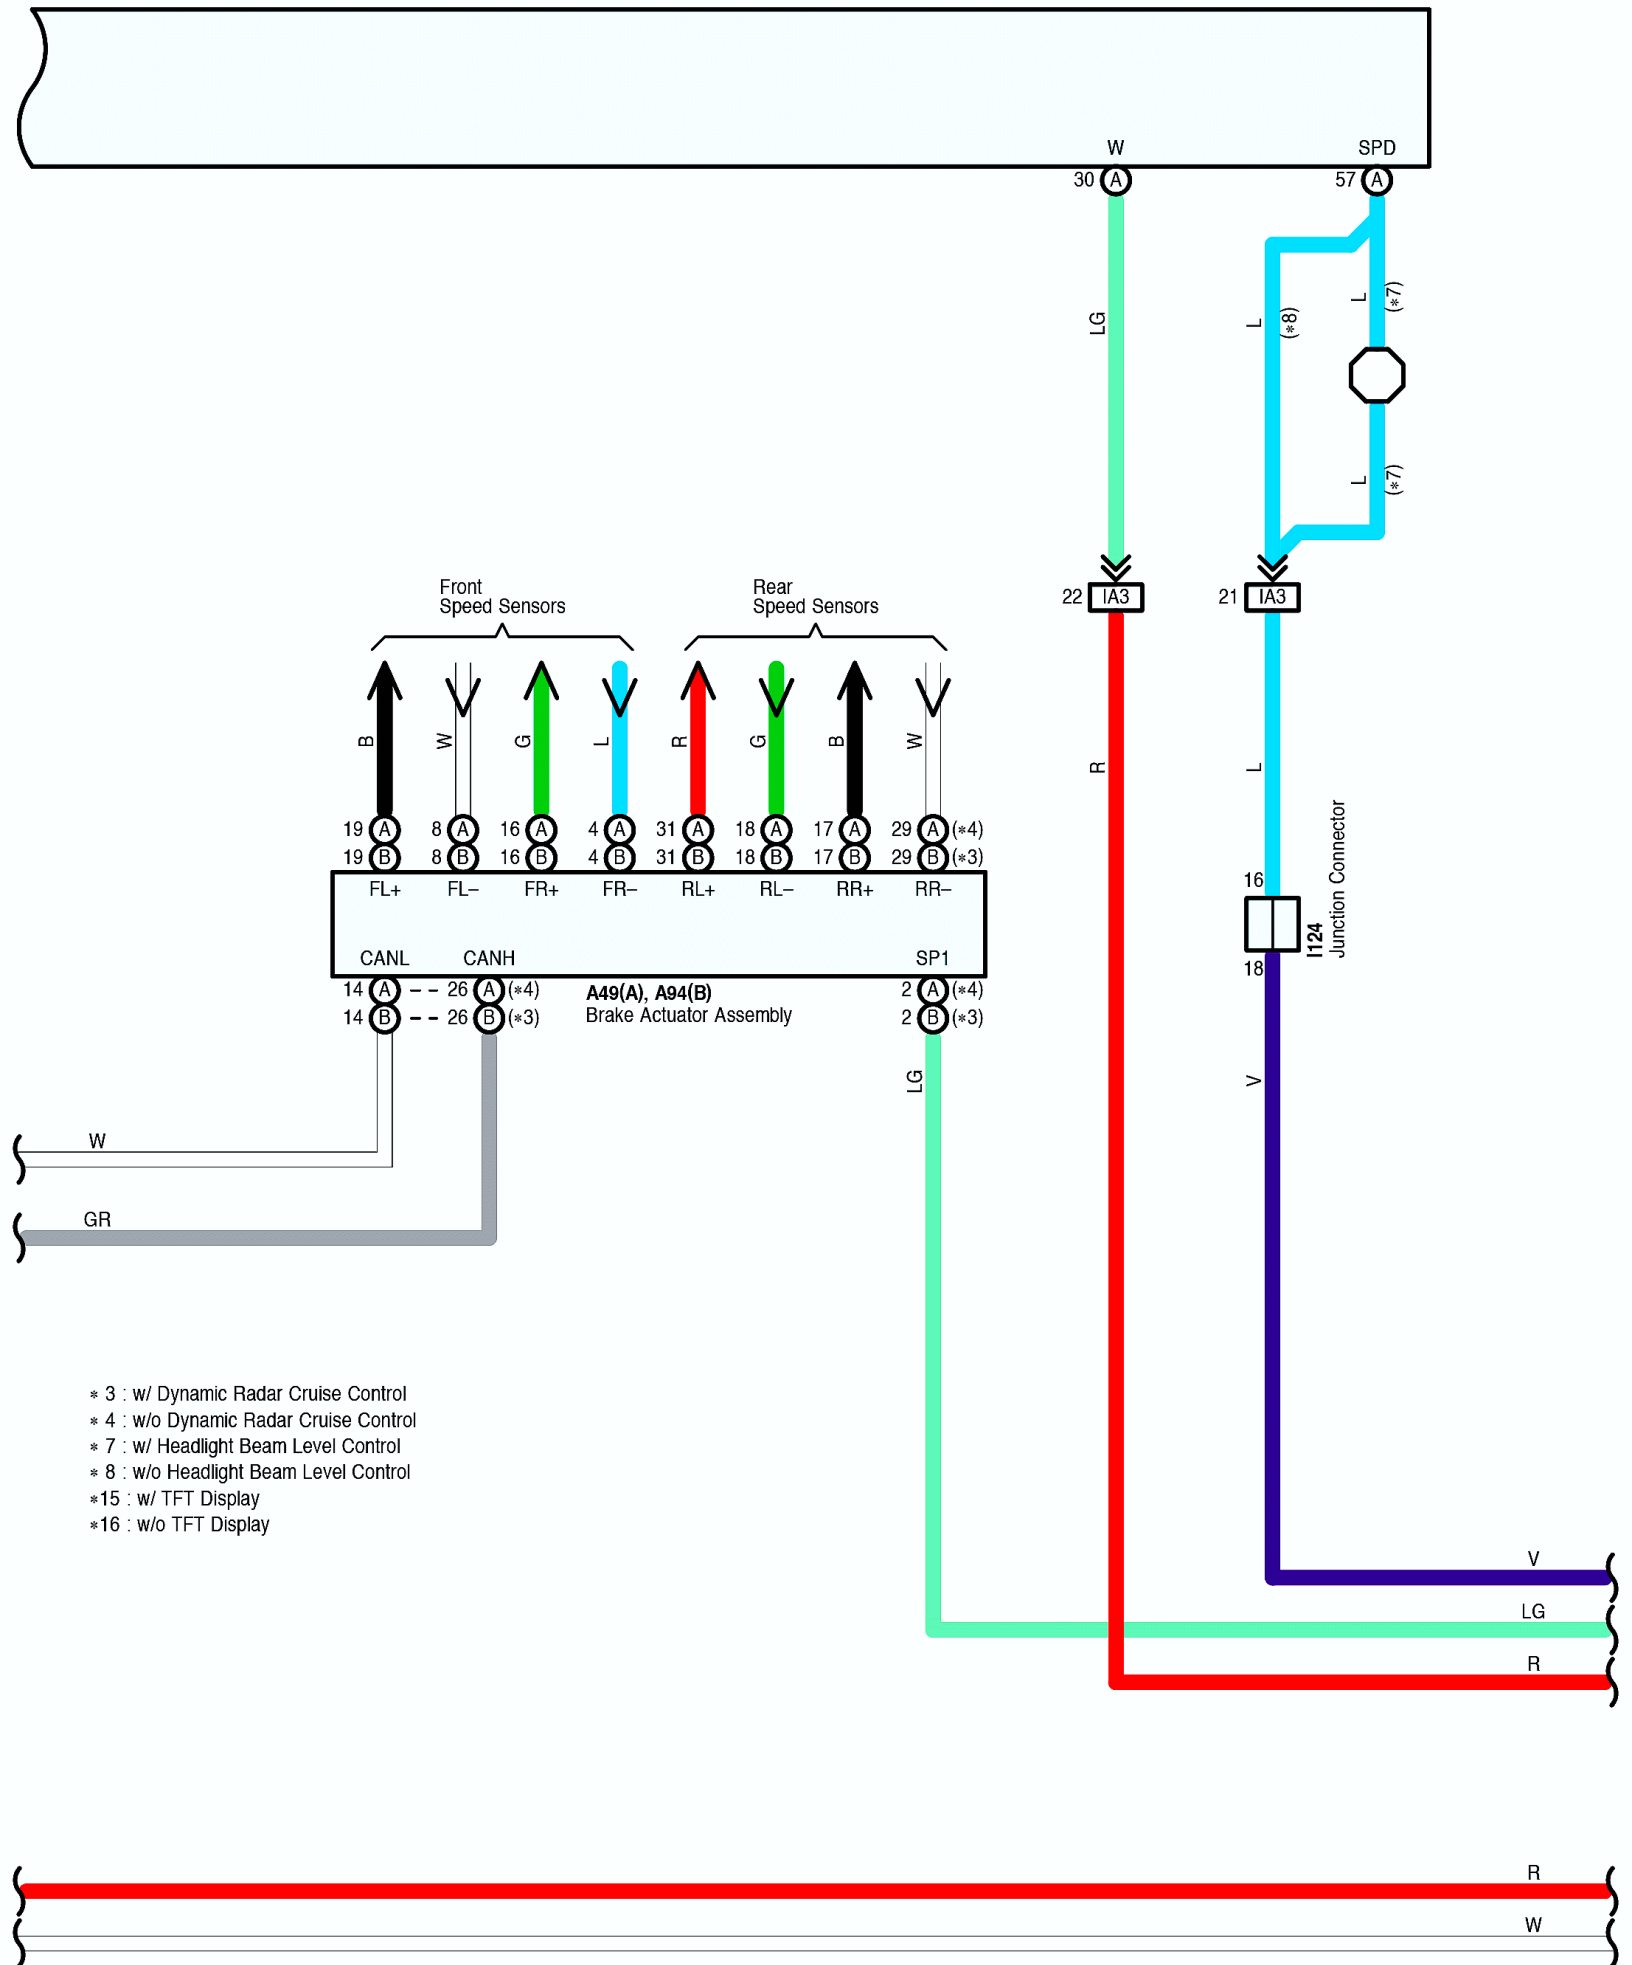


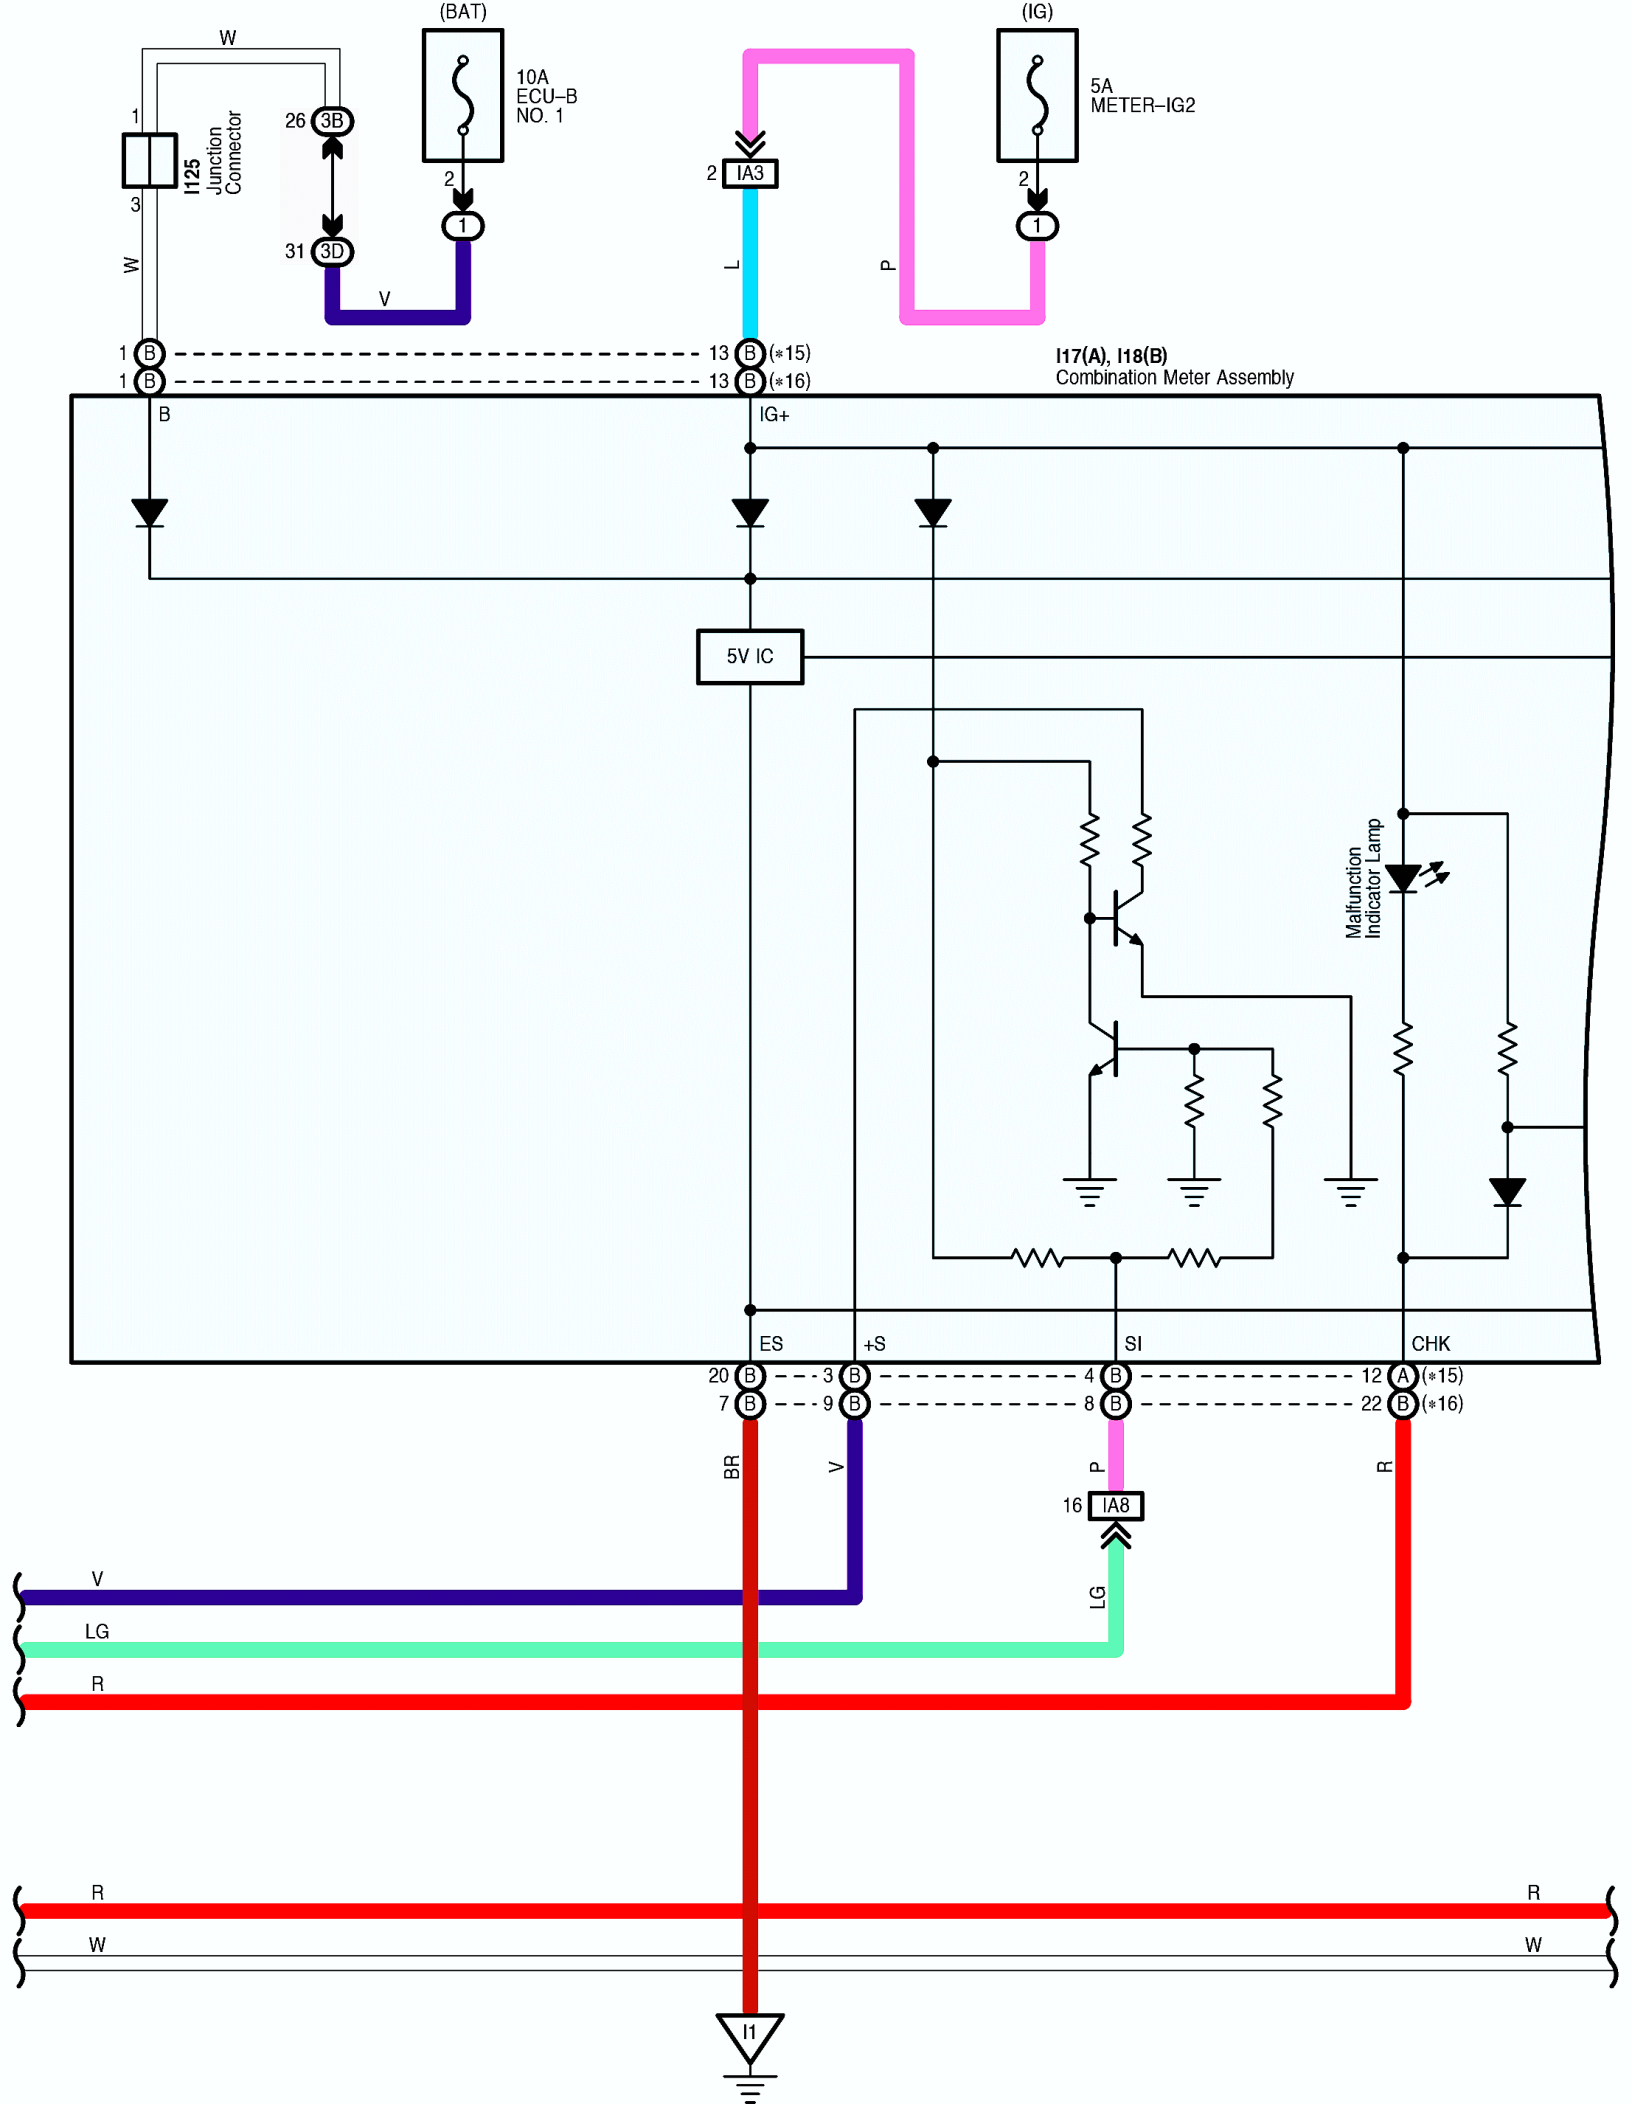


*15 : w/ TFT Display
*16 : w/o TFT Display


I17(A), I18(B)
Combination Meter Assembly

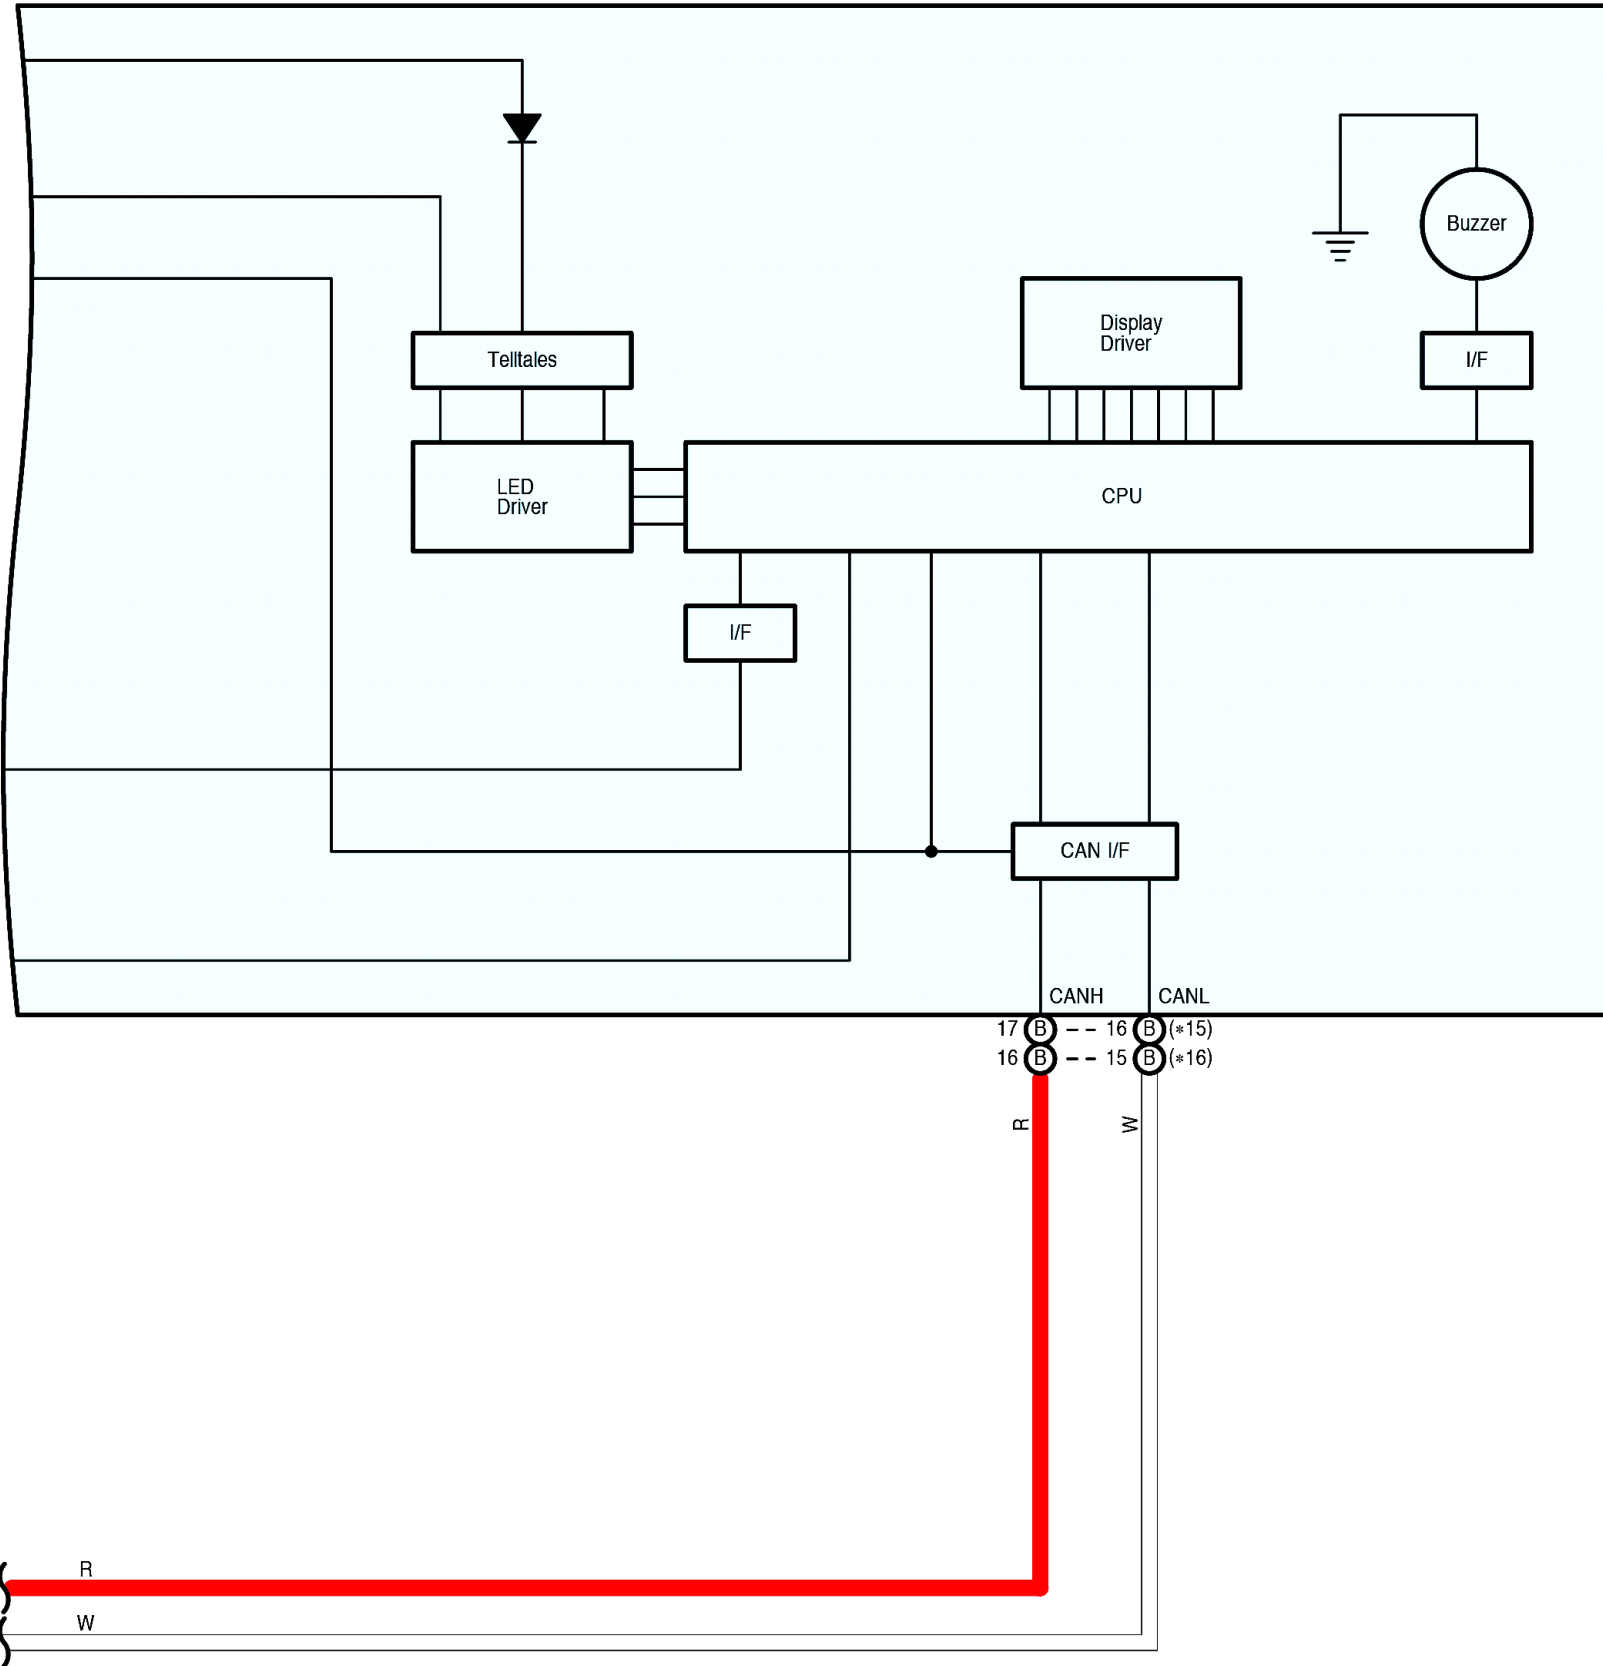

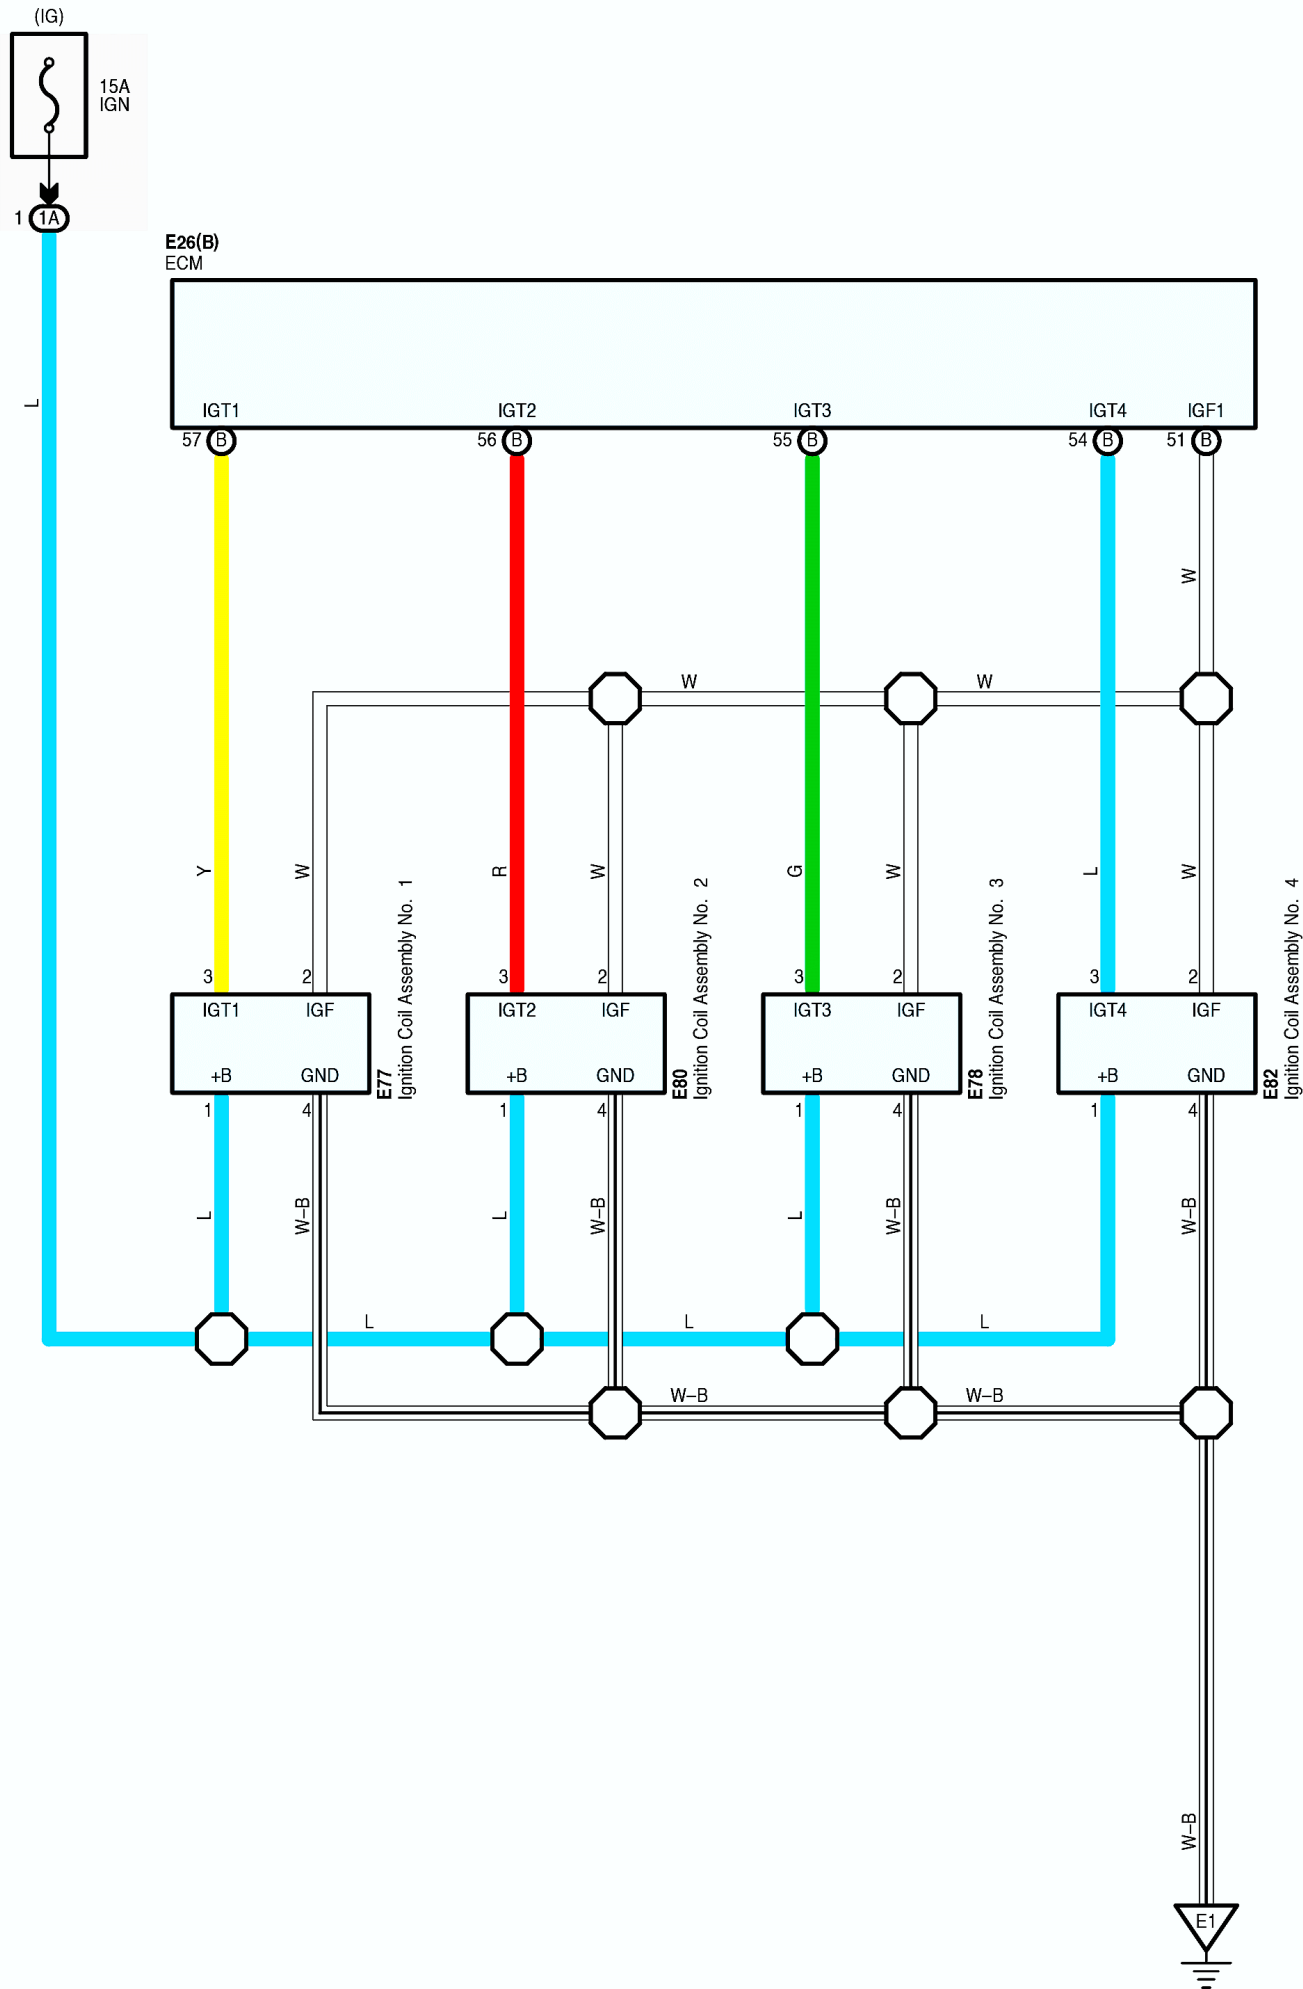


w/ Smart Key System


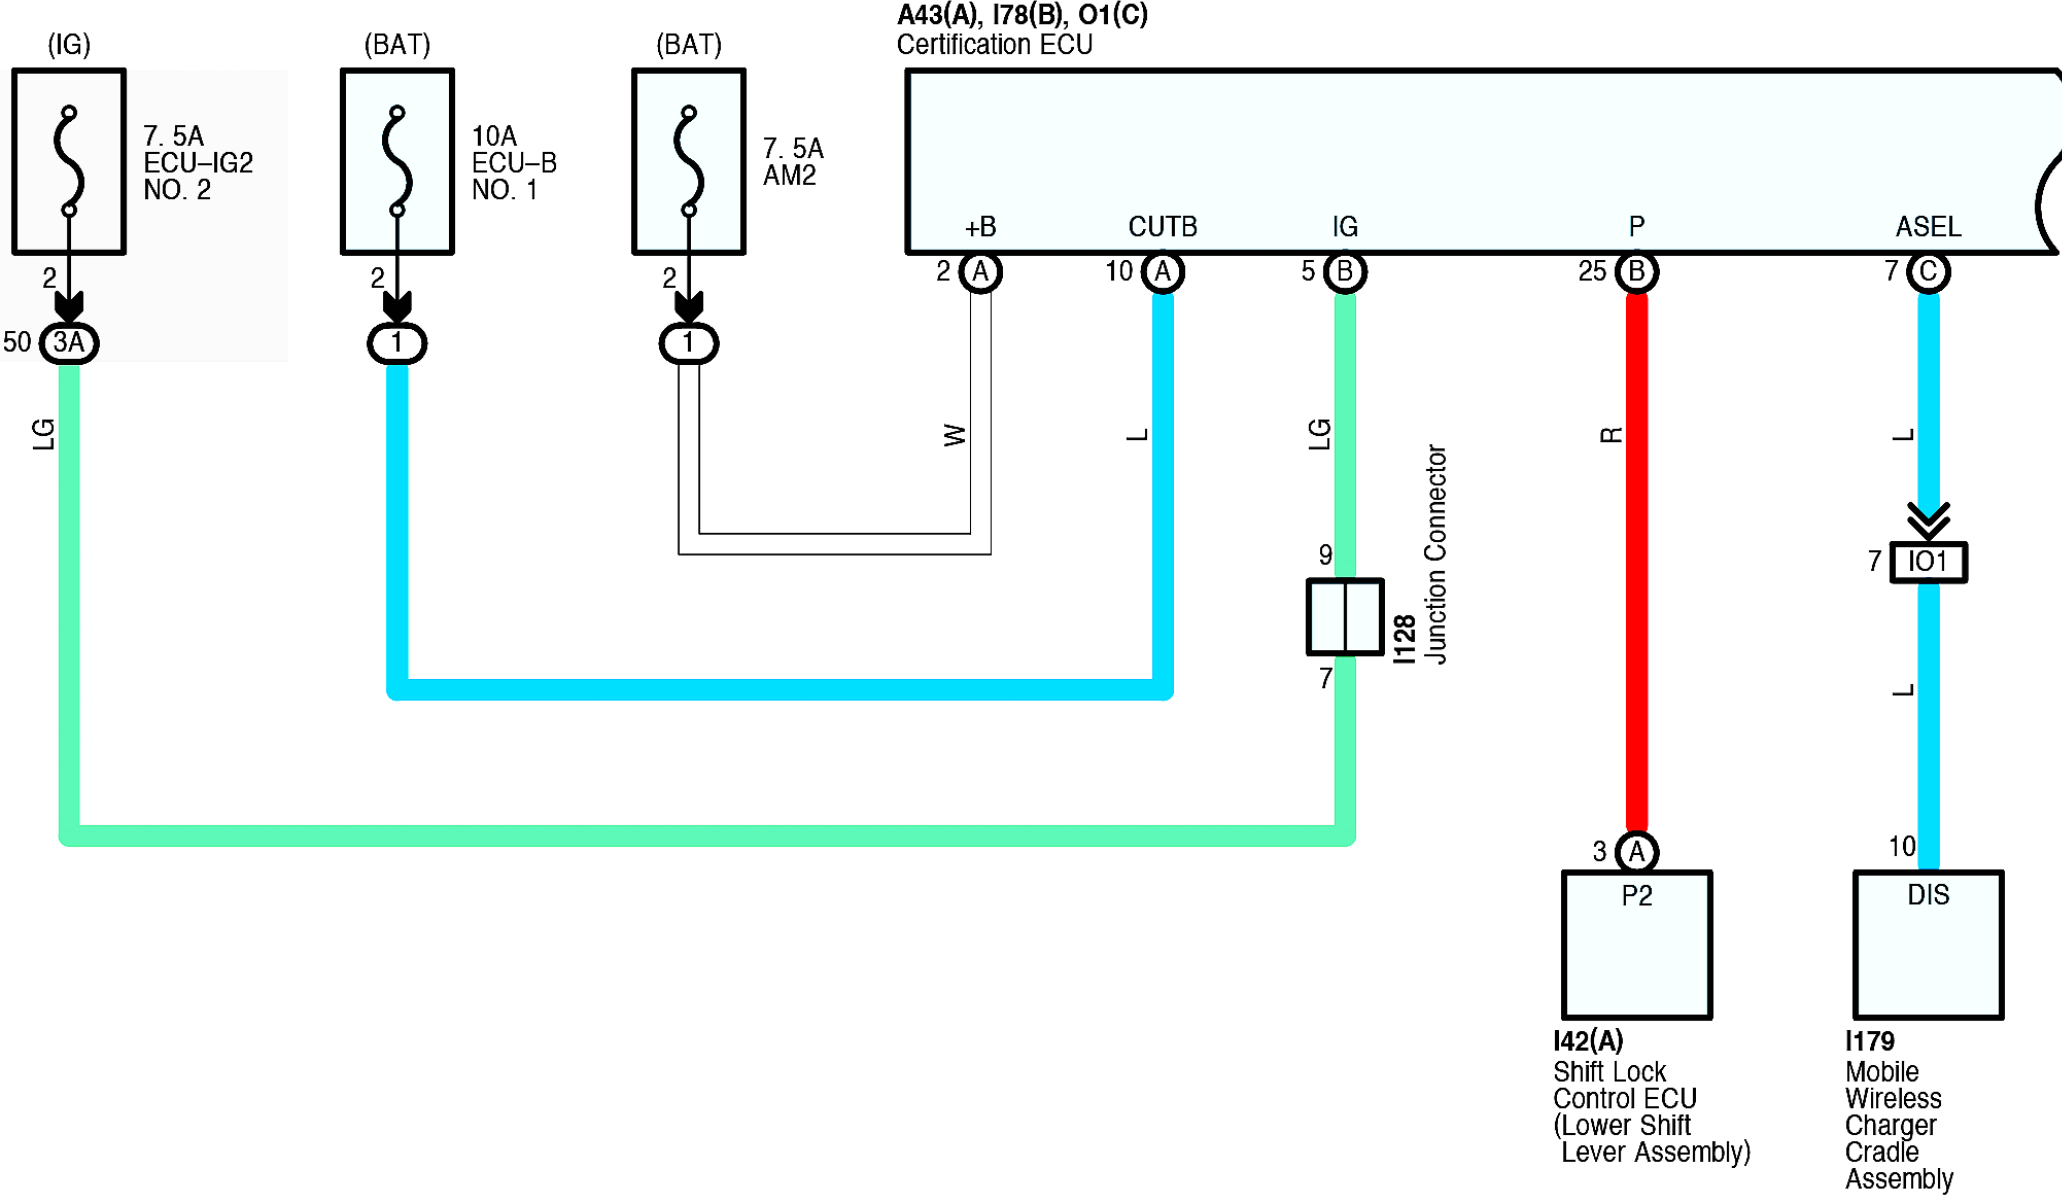


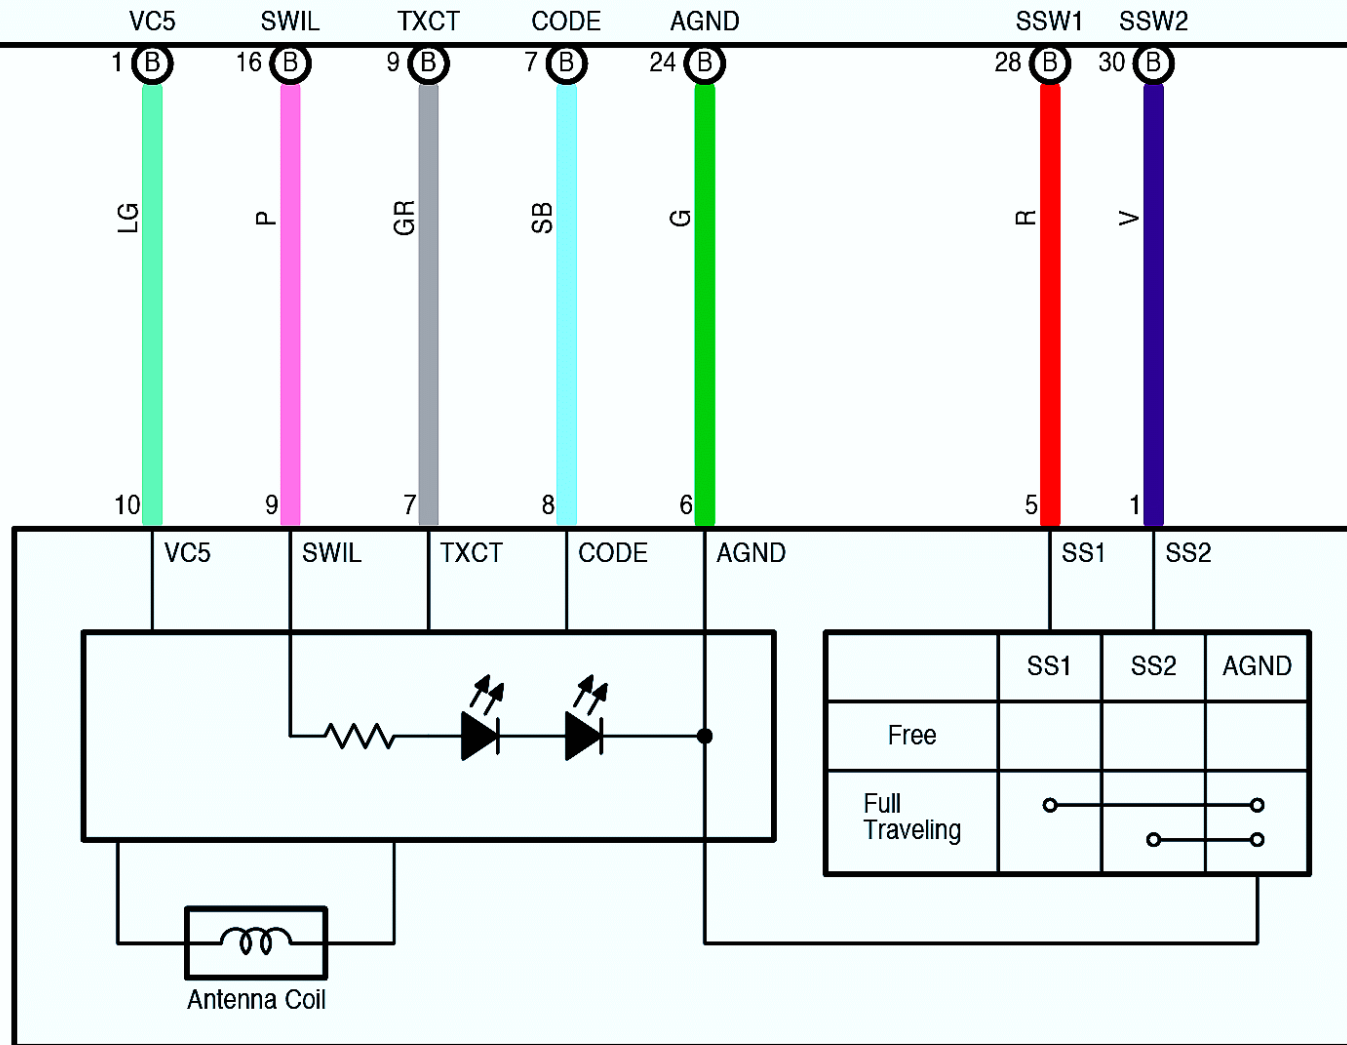


I58
Engine Switch

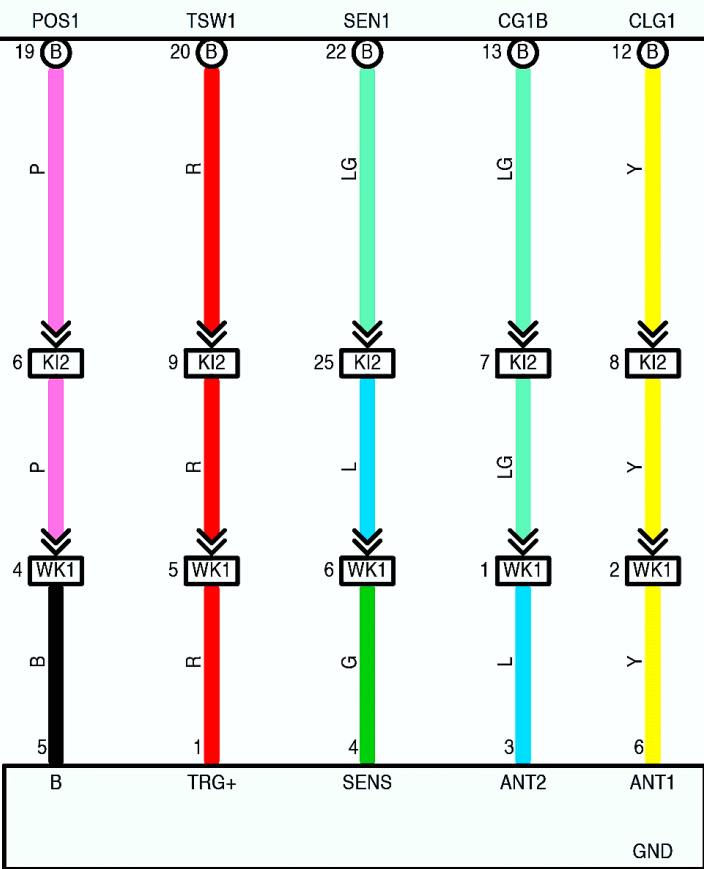


 
W1
Front Door Outside
Handle Assembly LH

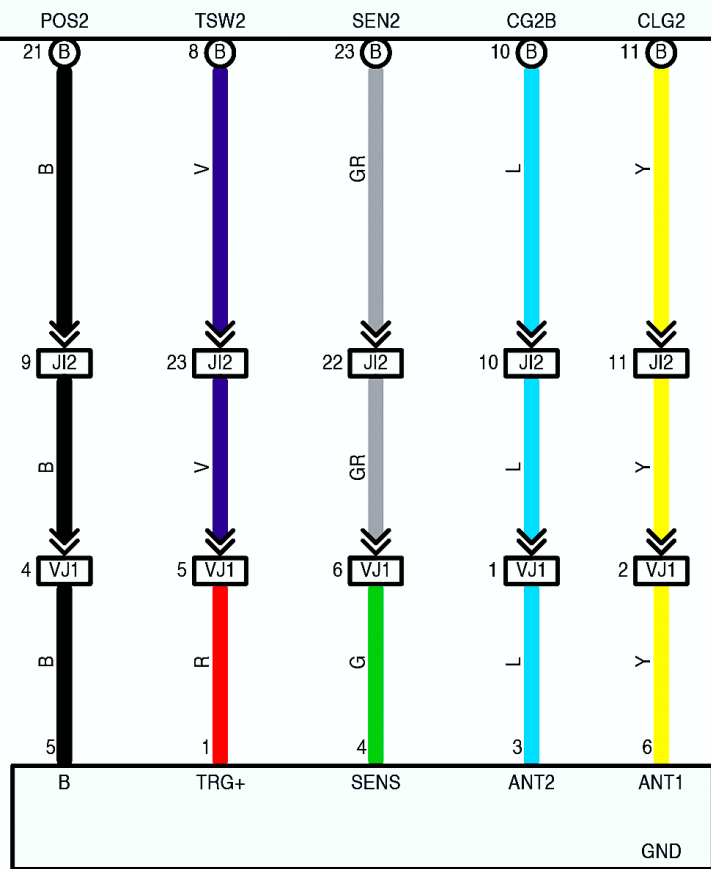

 
V1
Front Door Outside
Handle Assembly RH




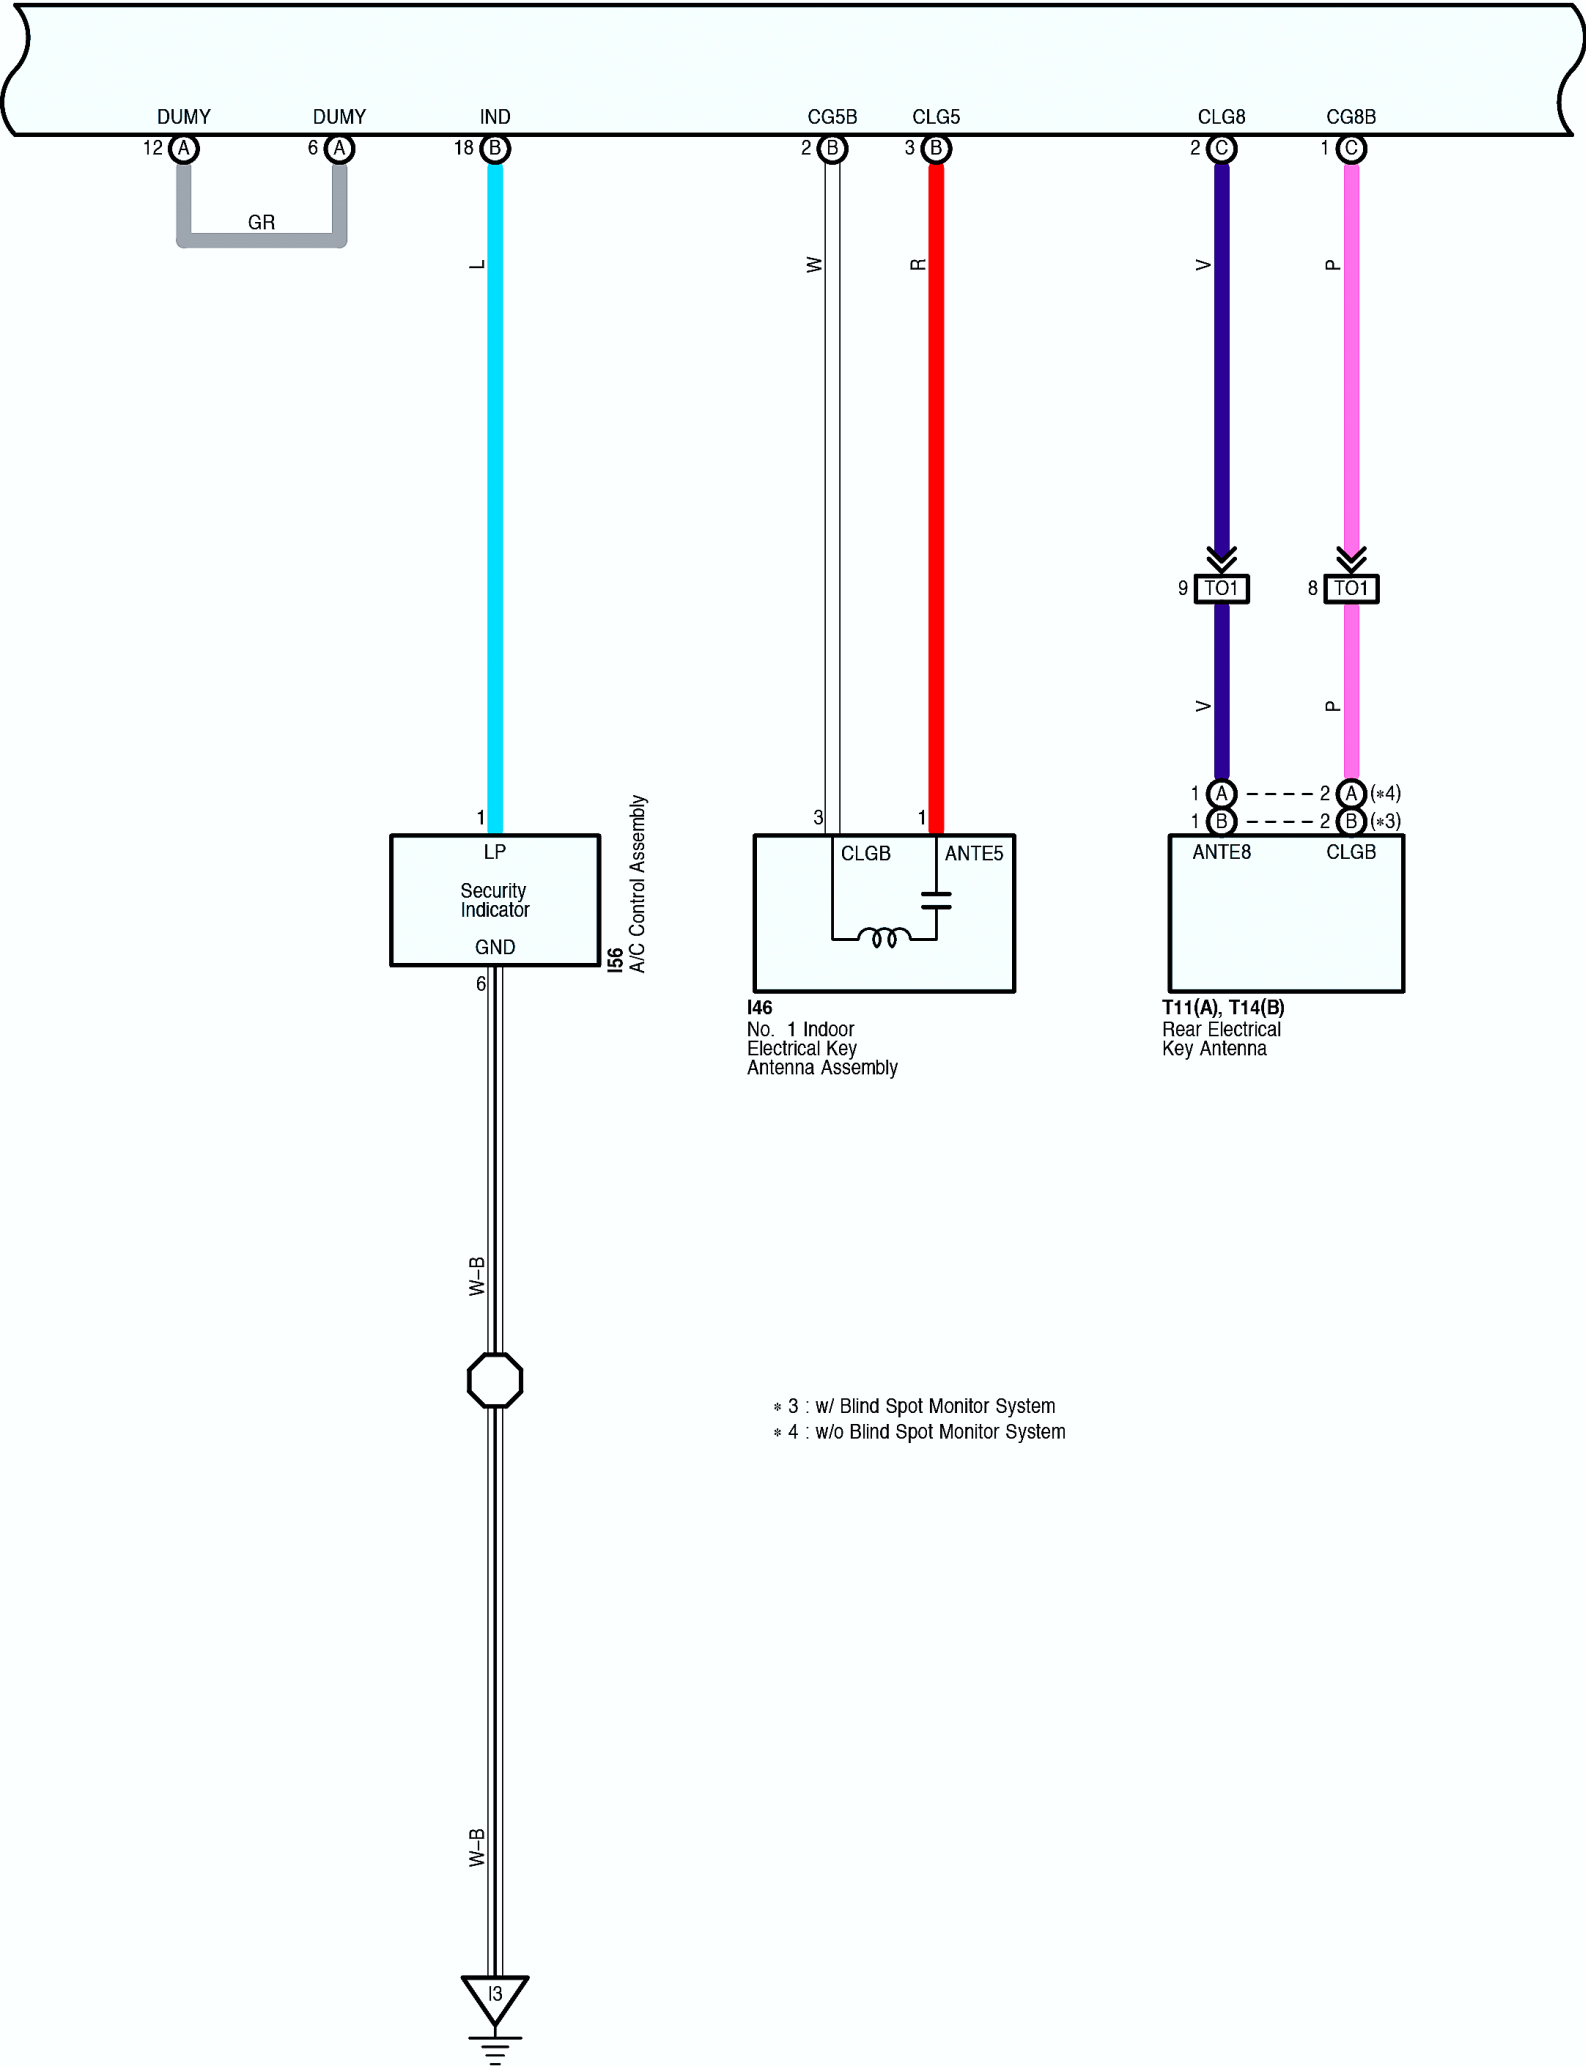

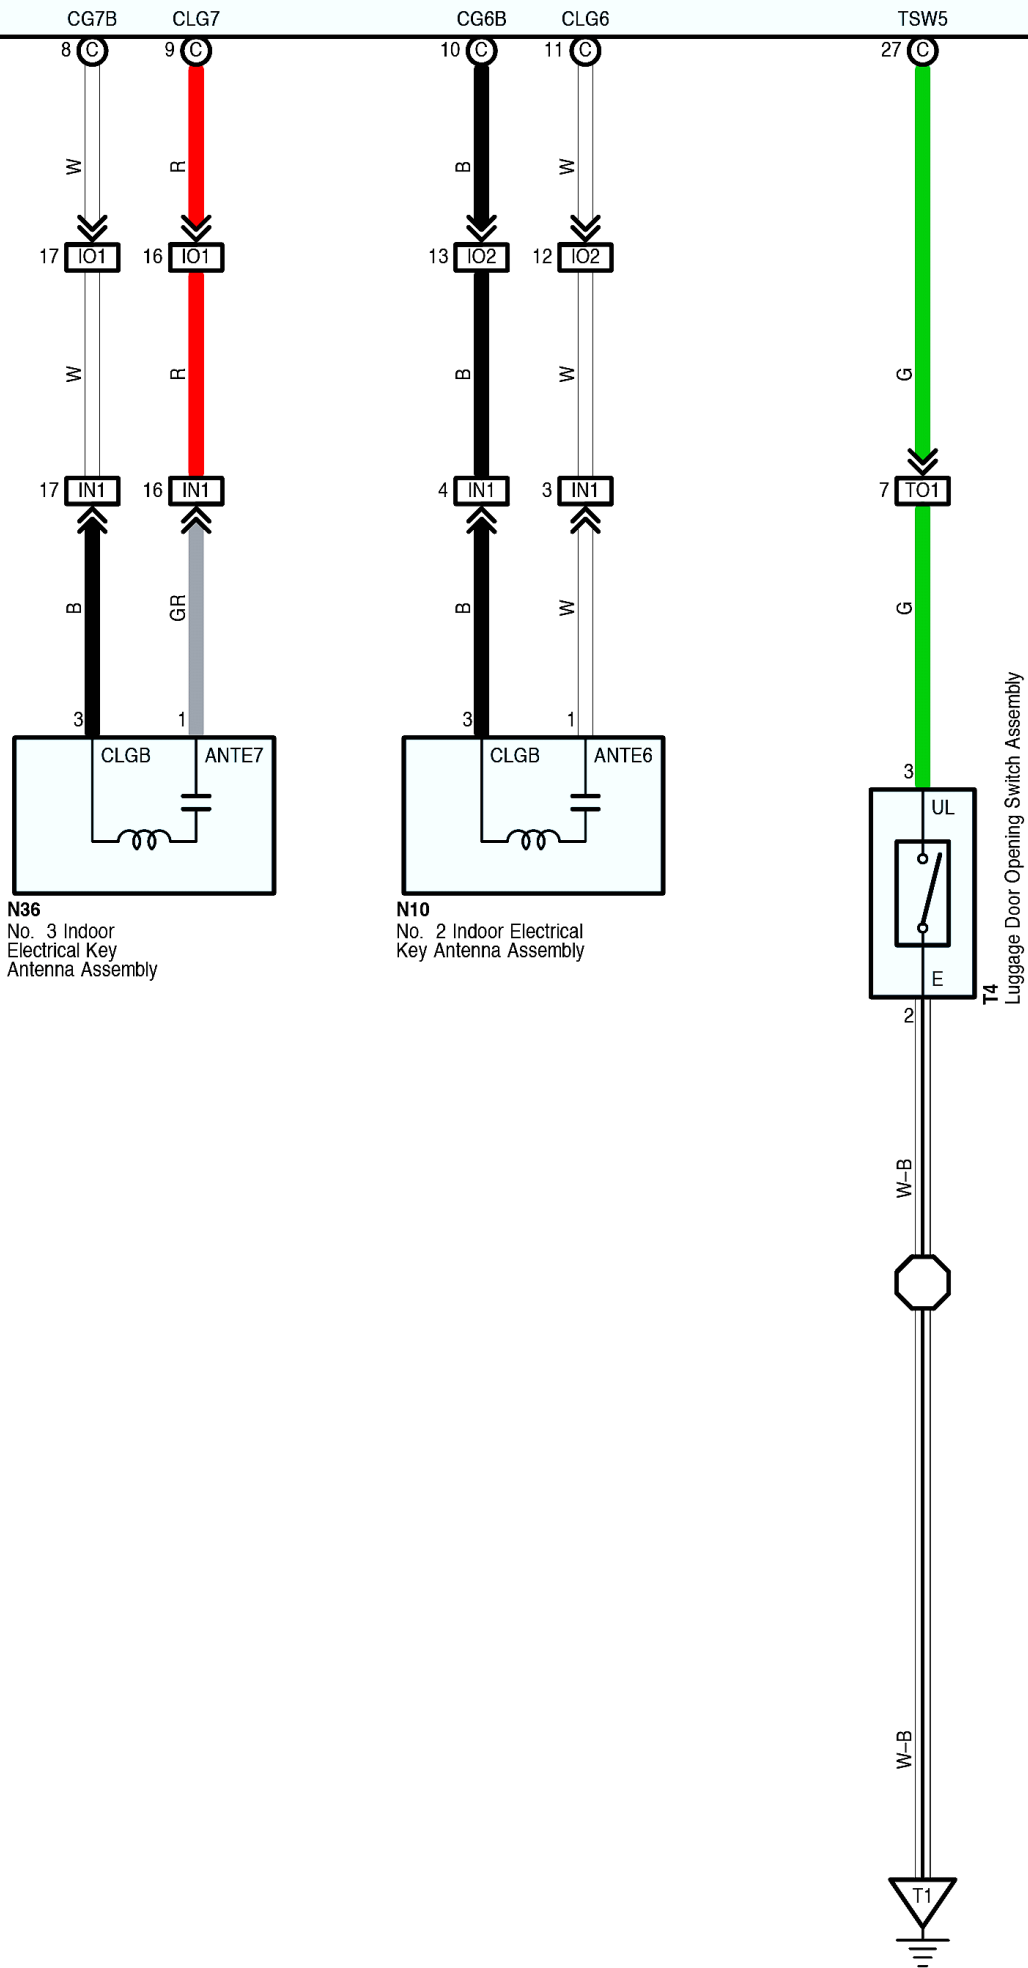


* 7 : Korea
* 8 : Except Korea

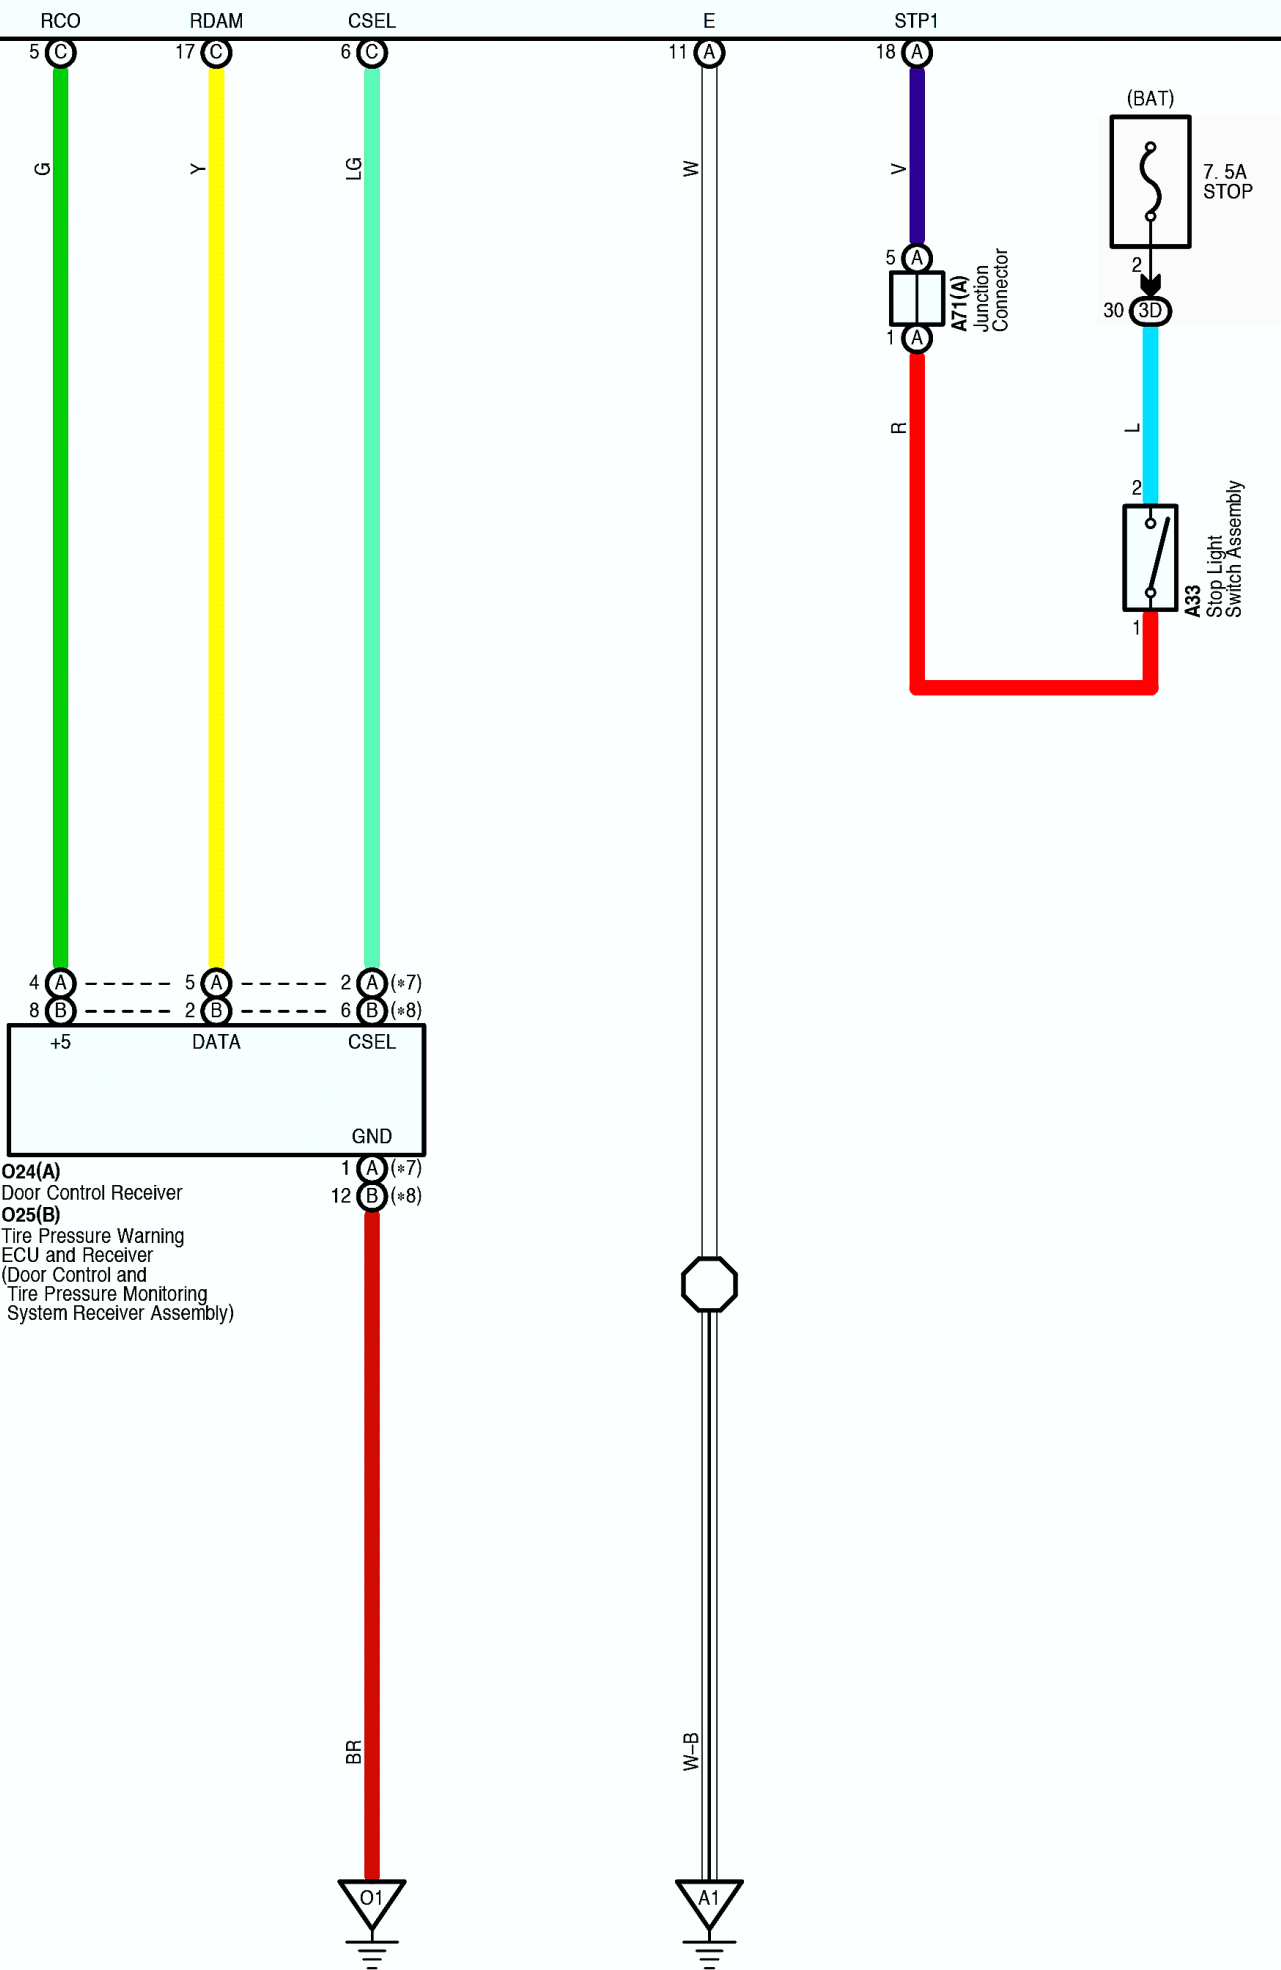


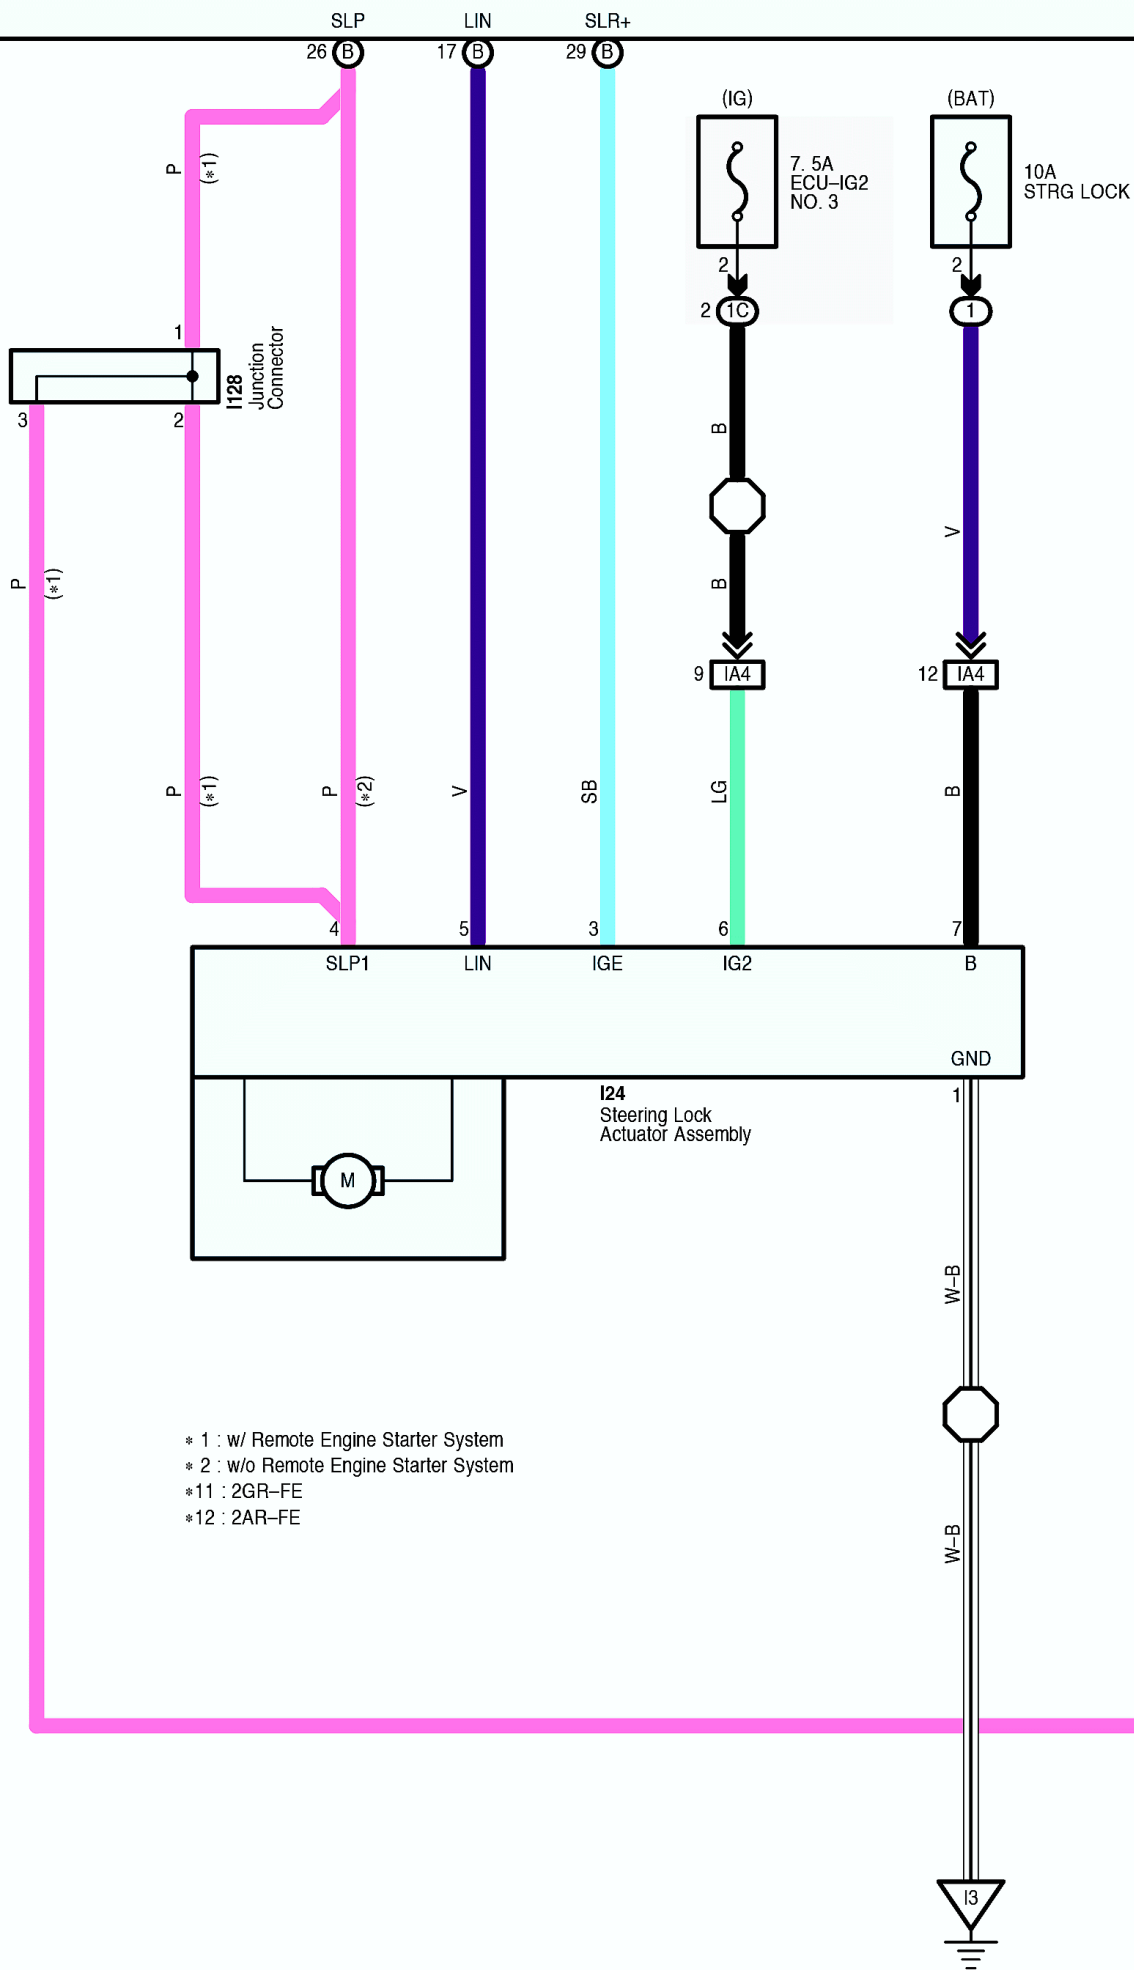



- * 1 : w/ Remote Engine Starter System
- * 2 : w/o Remote Engine Starter System
- *11 : 2GR-FE
- *12 : 2AR-FE

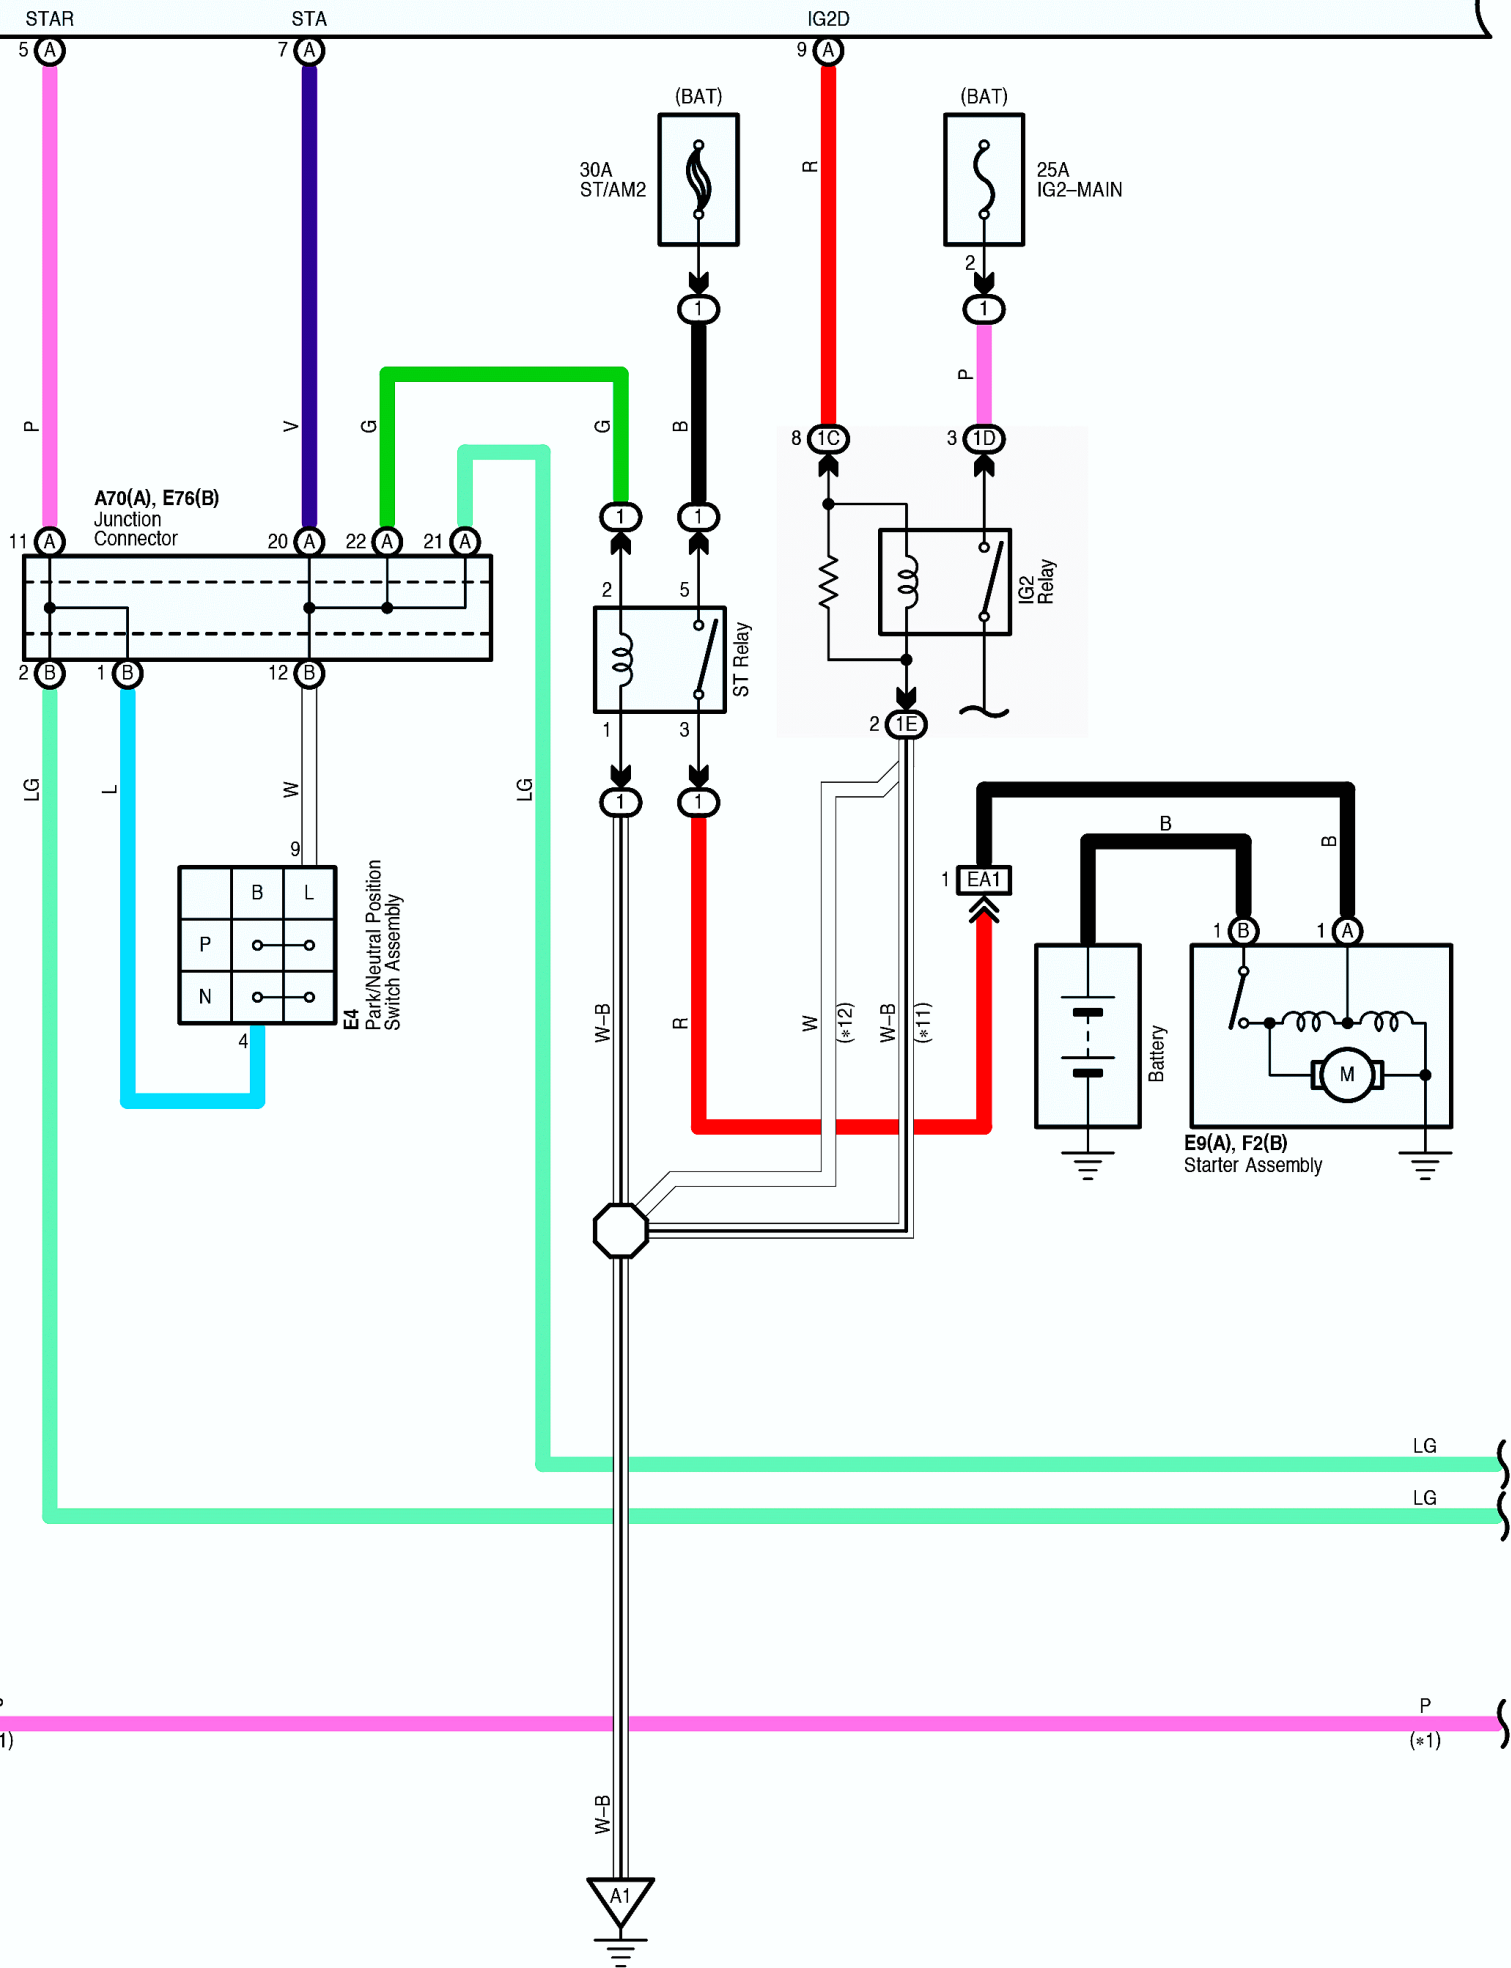


A43(A), I78(B), O1(C)
Certification ECU

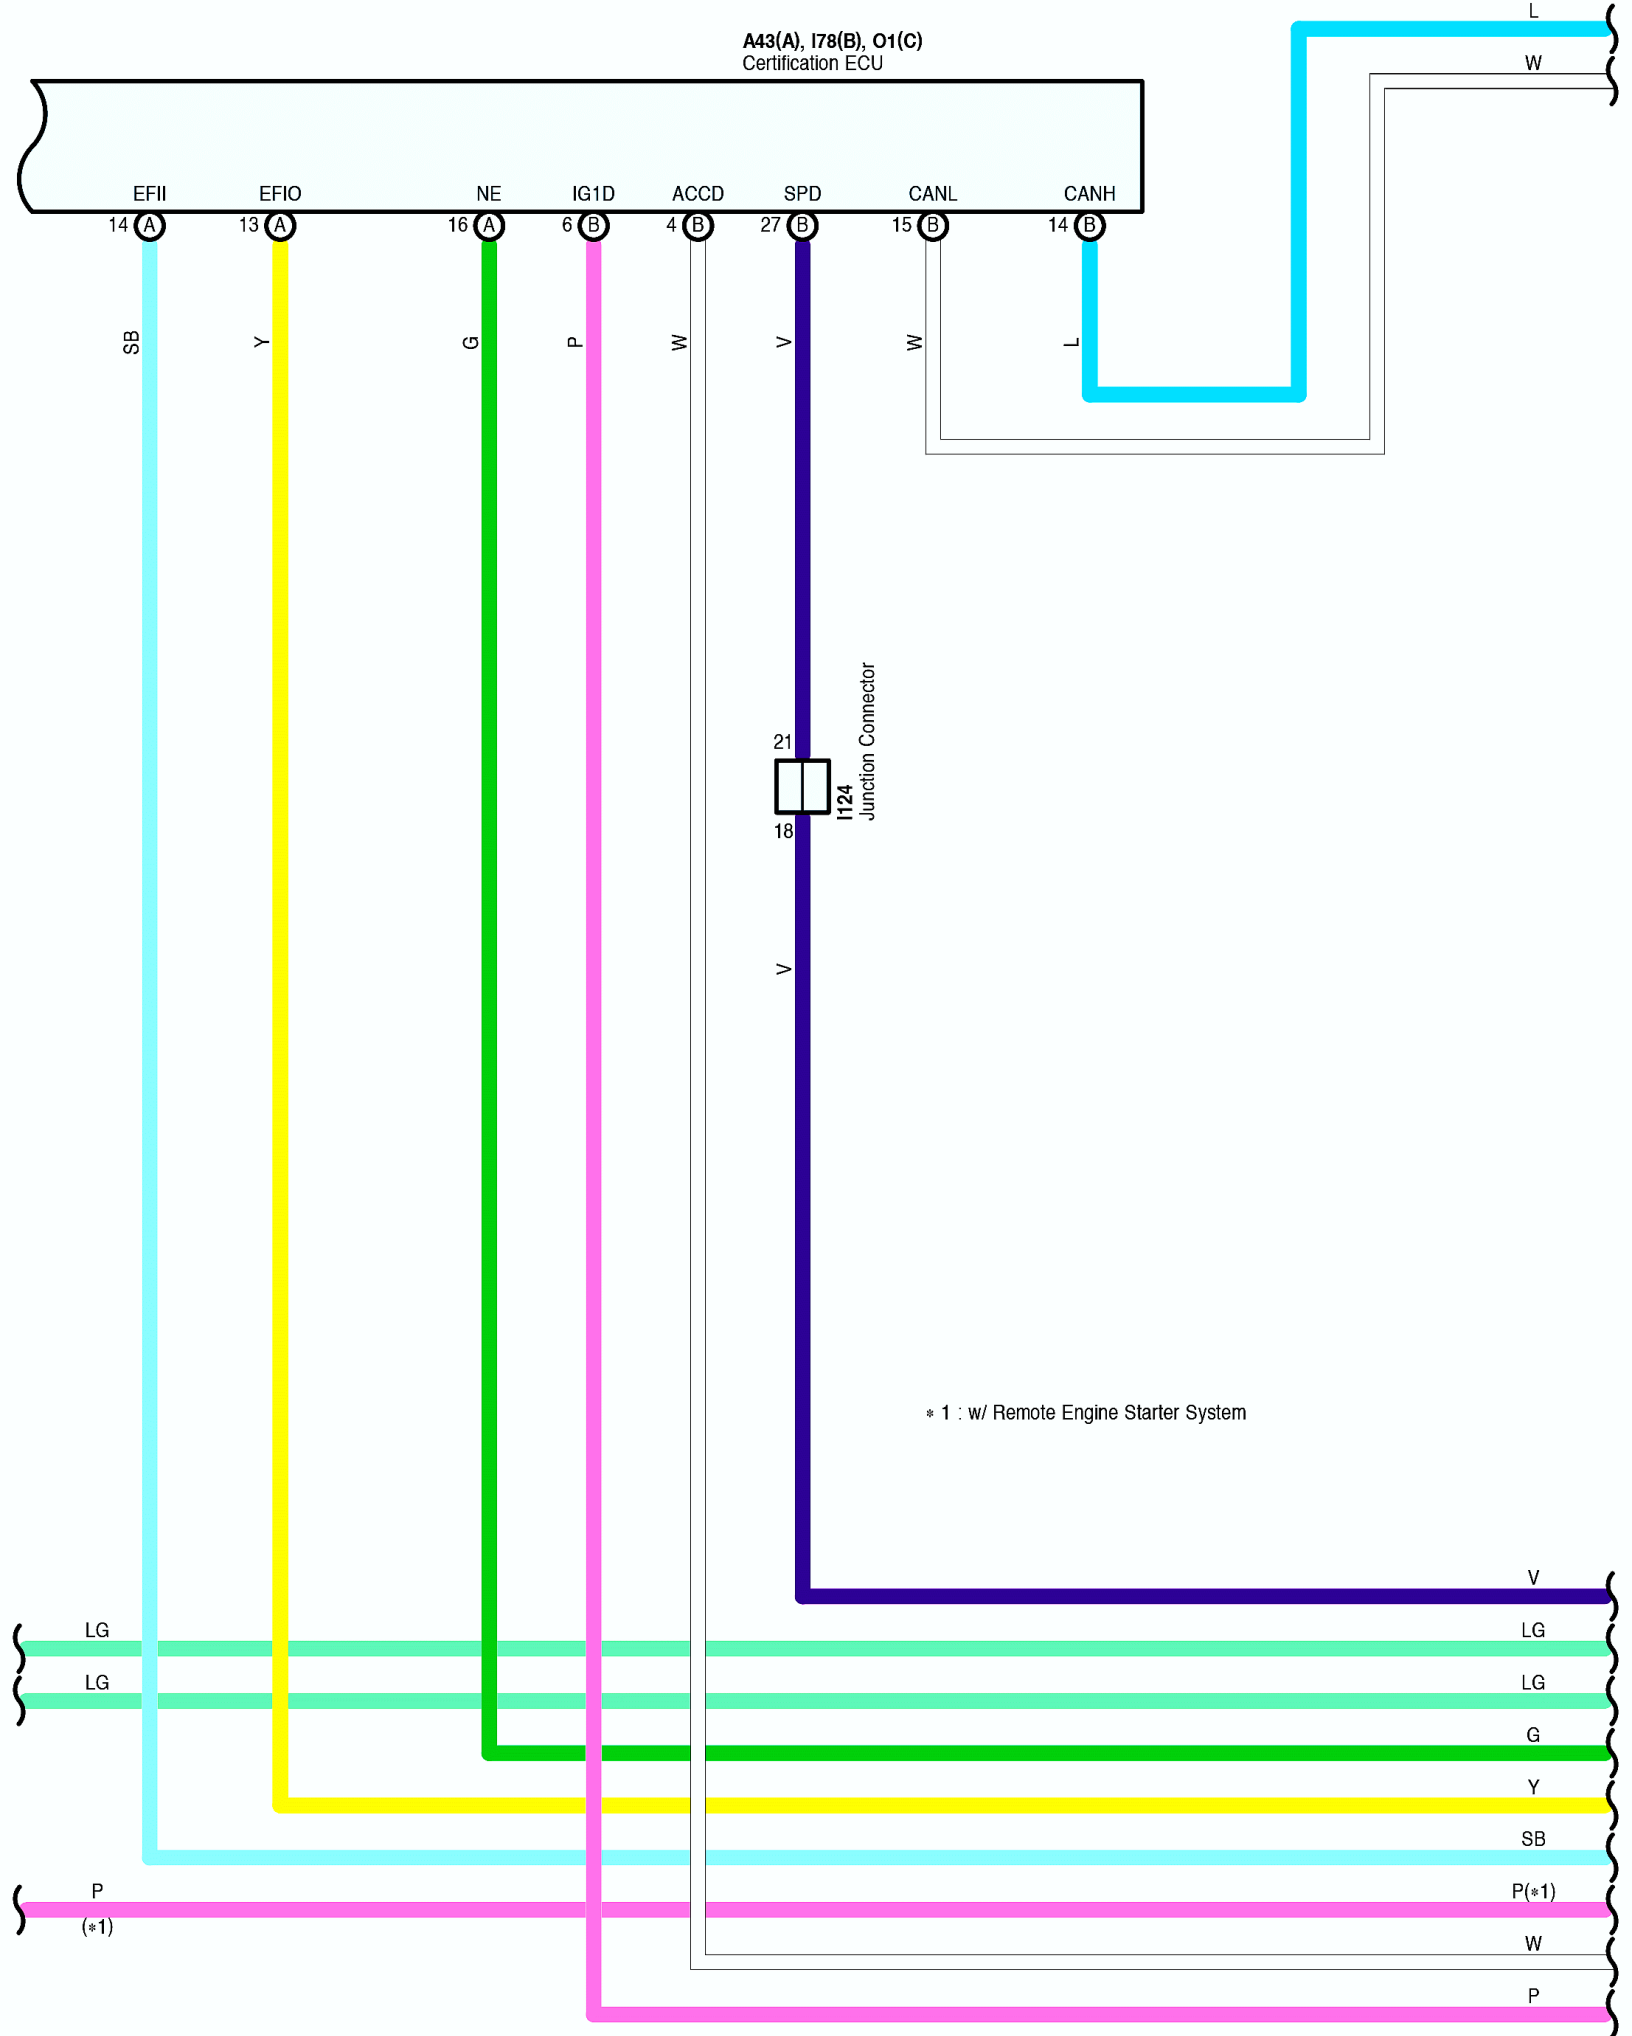


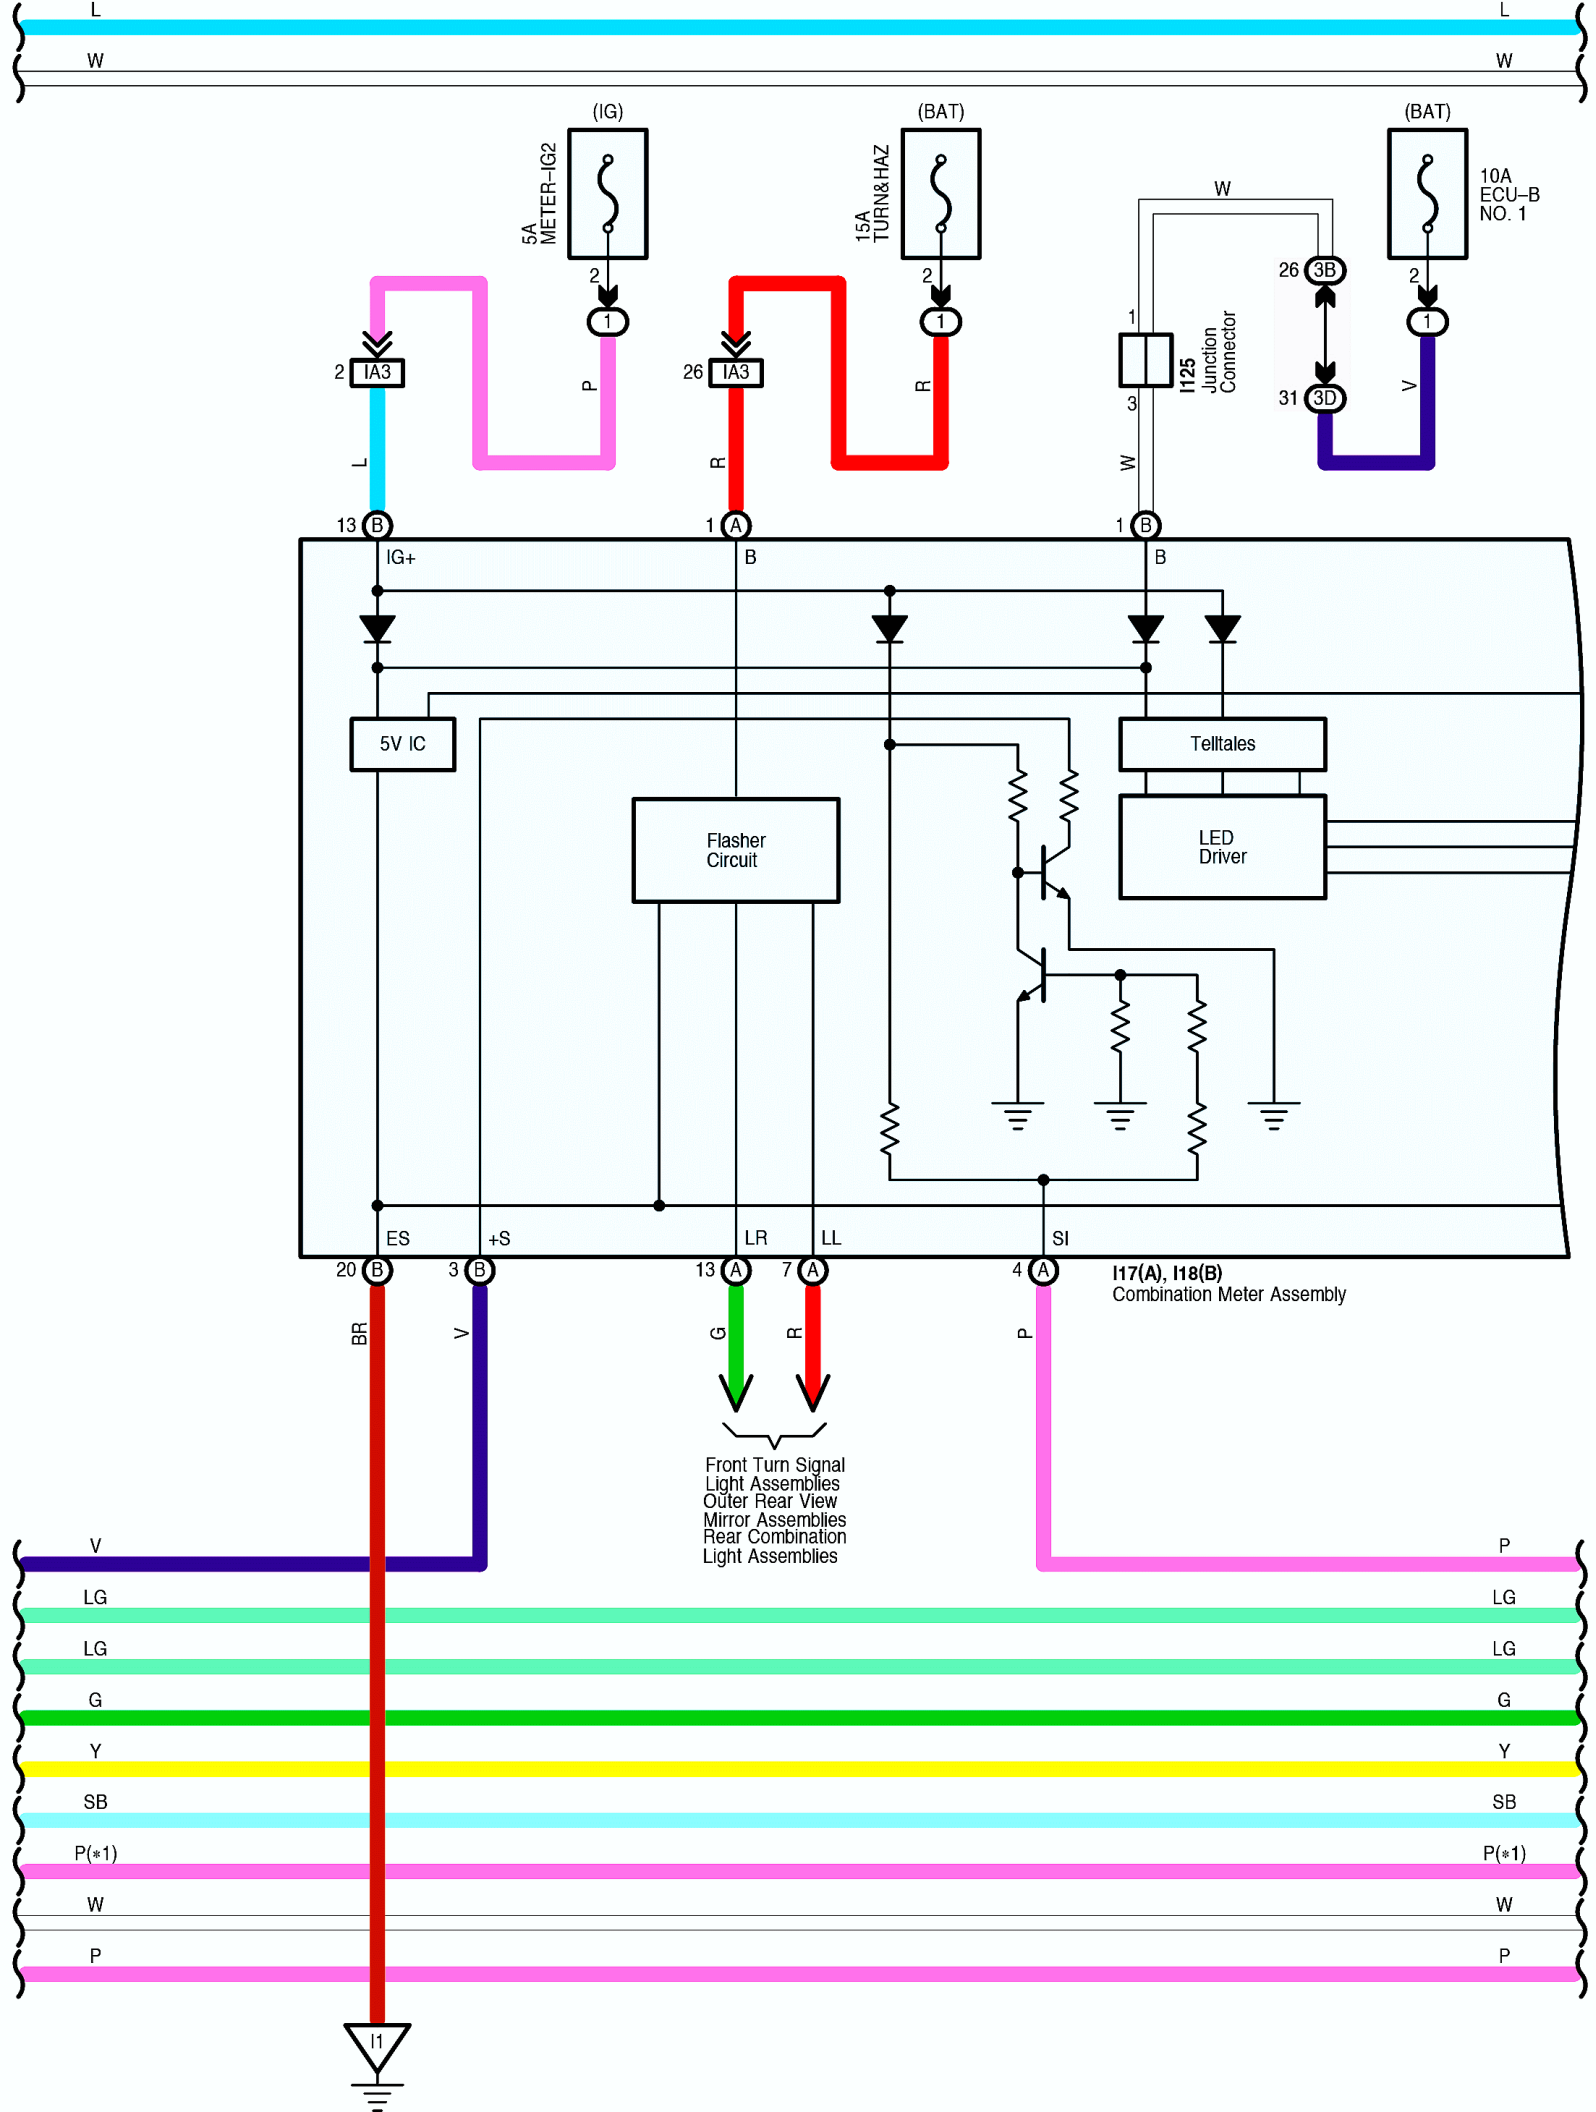


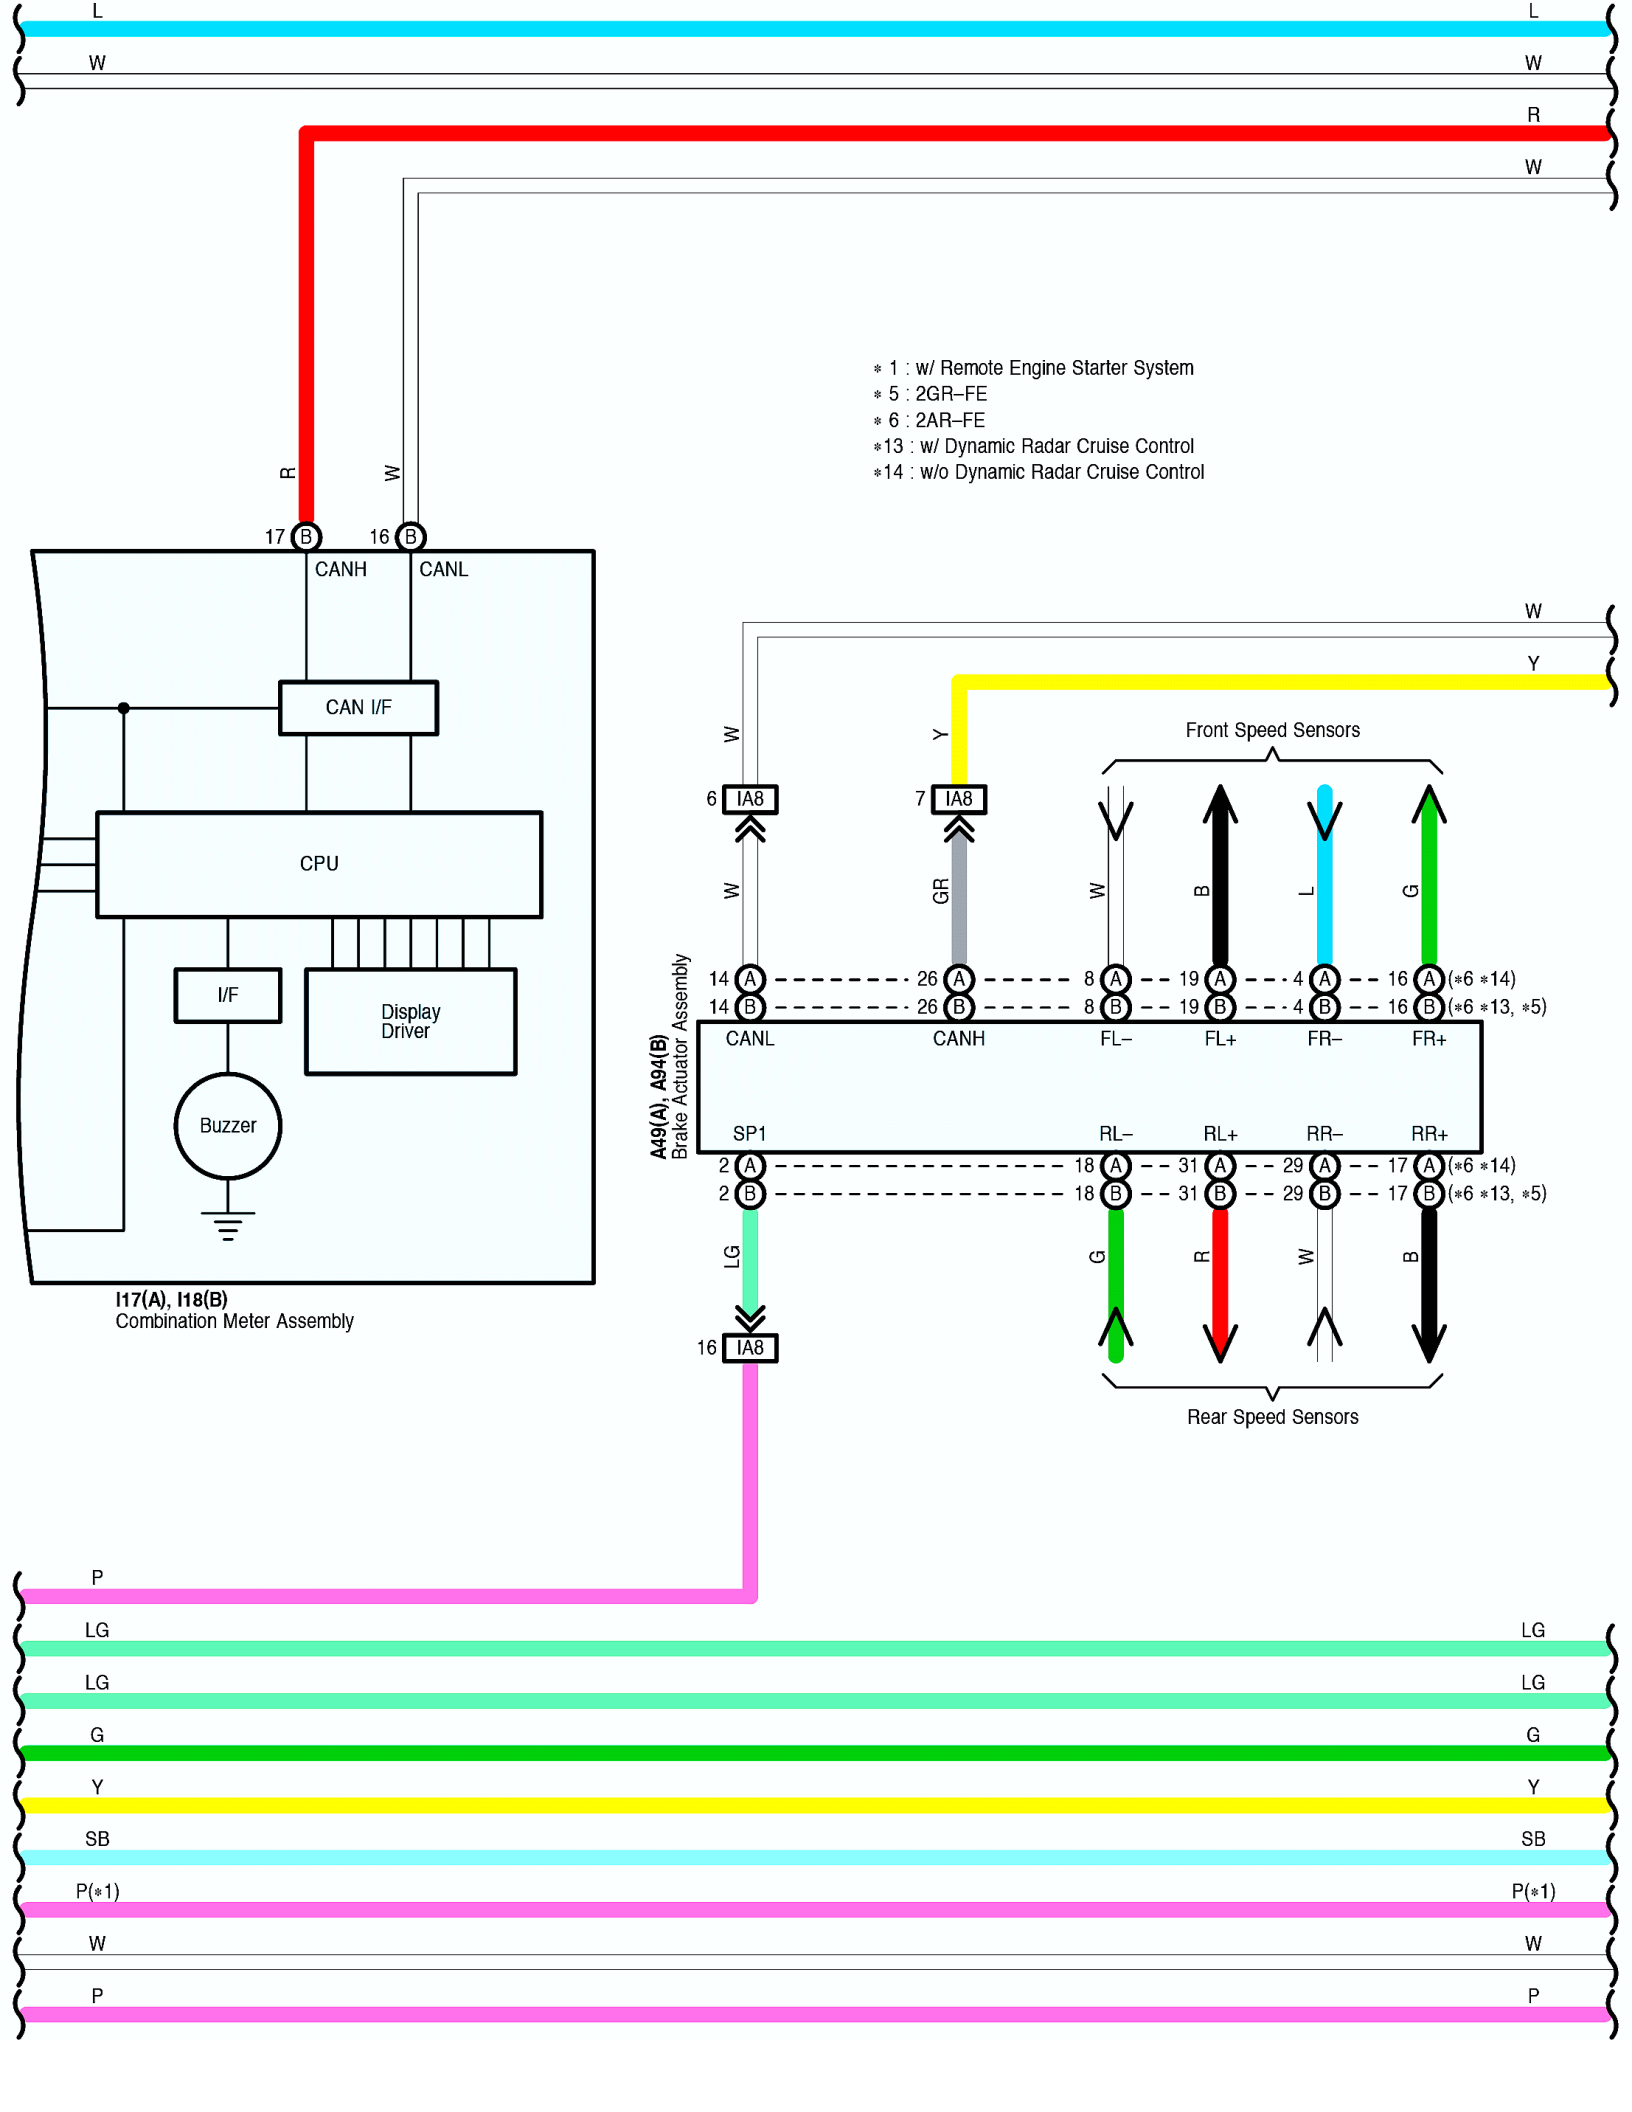

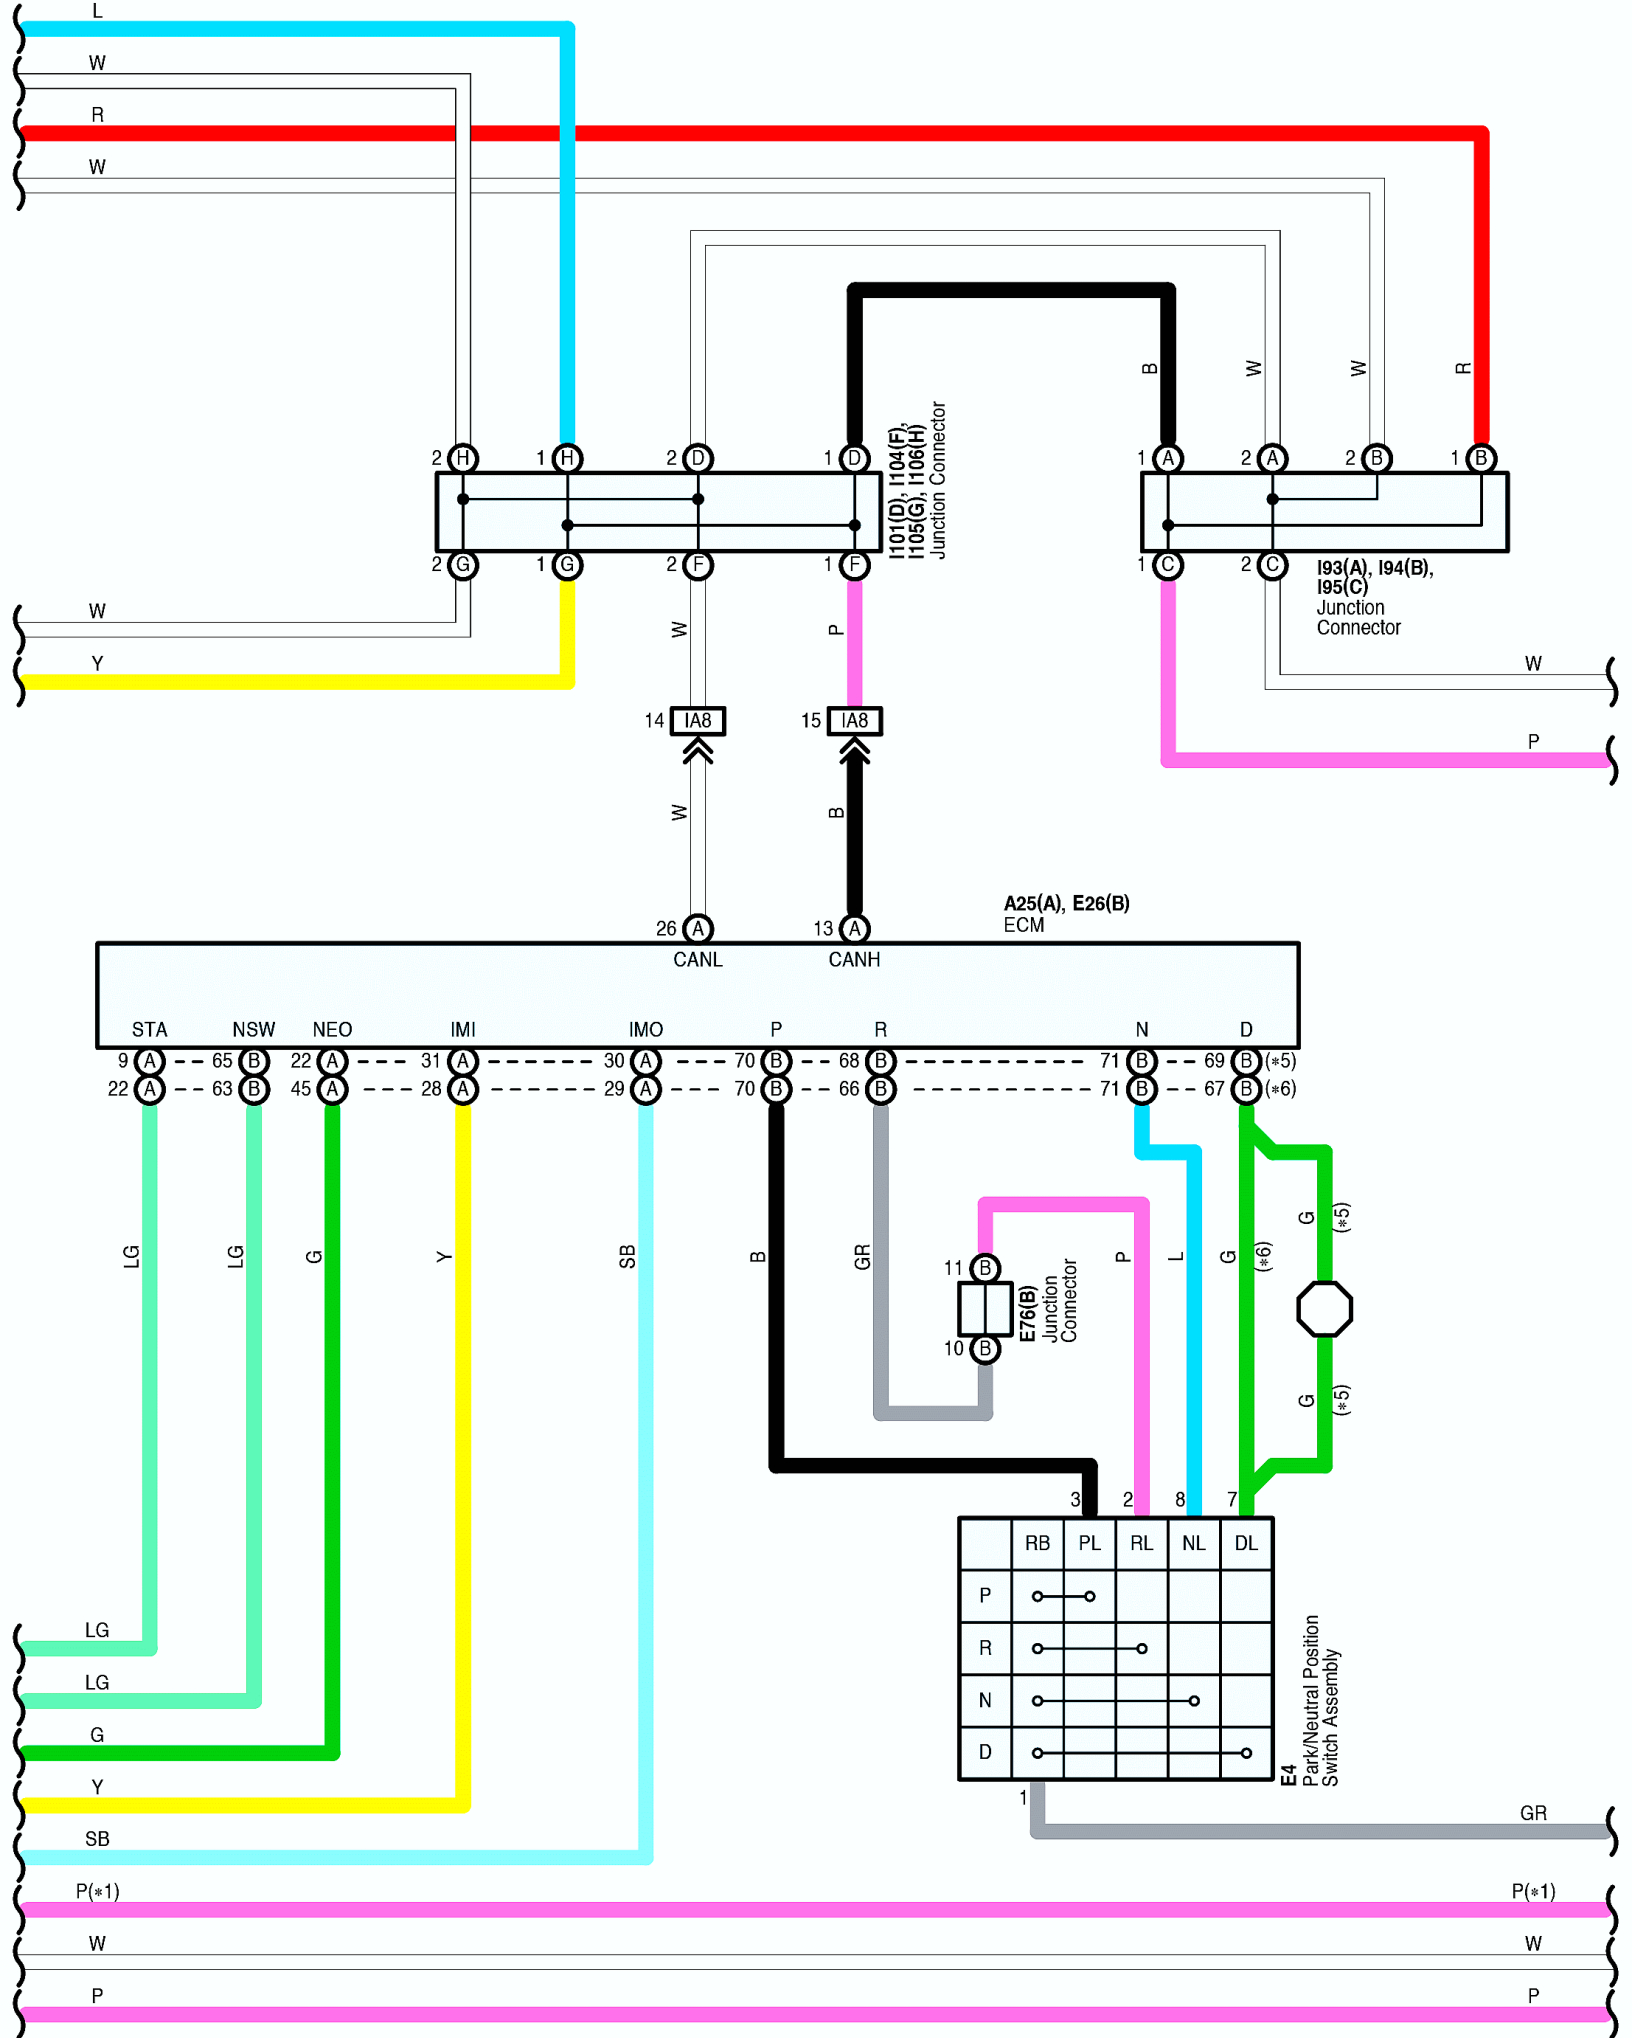

I12(A), I13(B) Main Body ECU

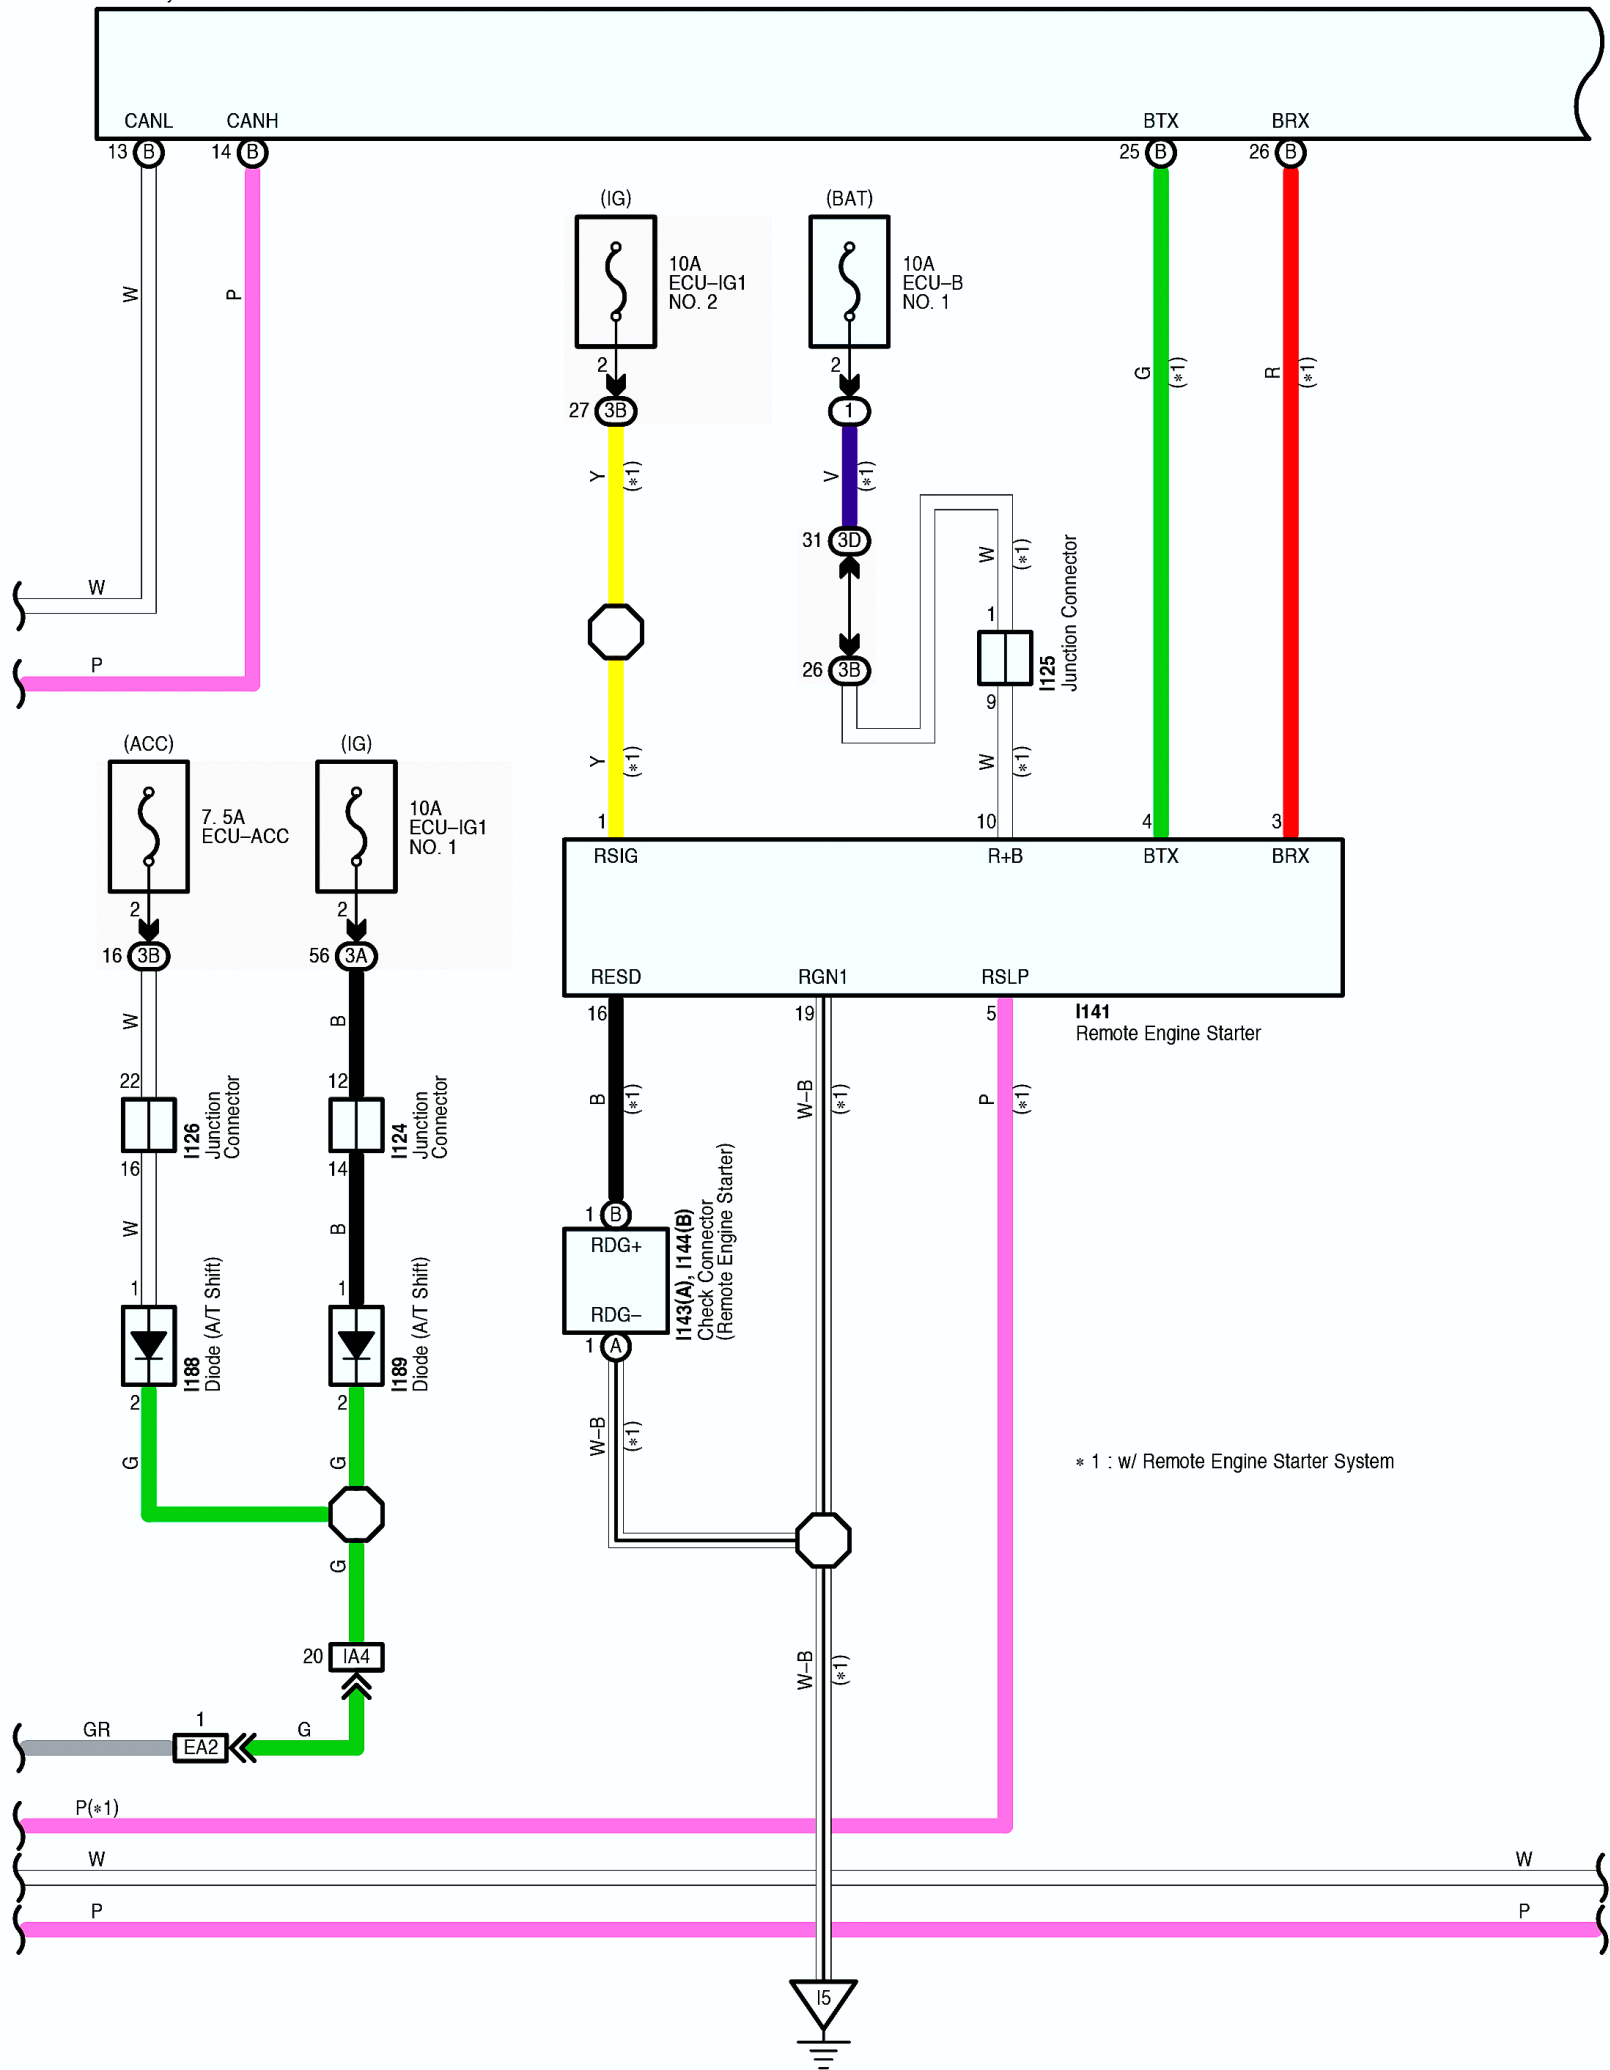


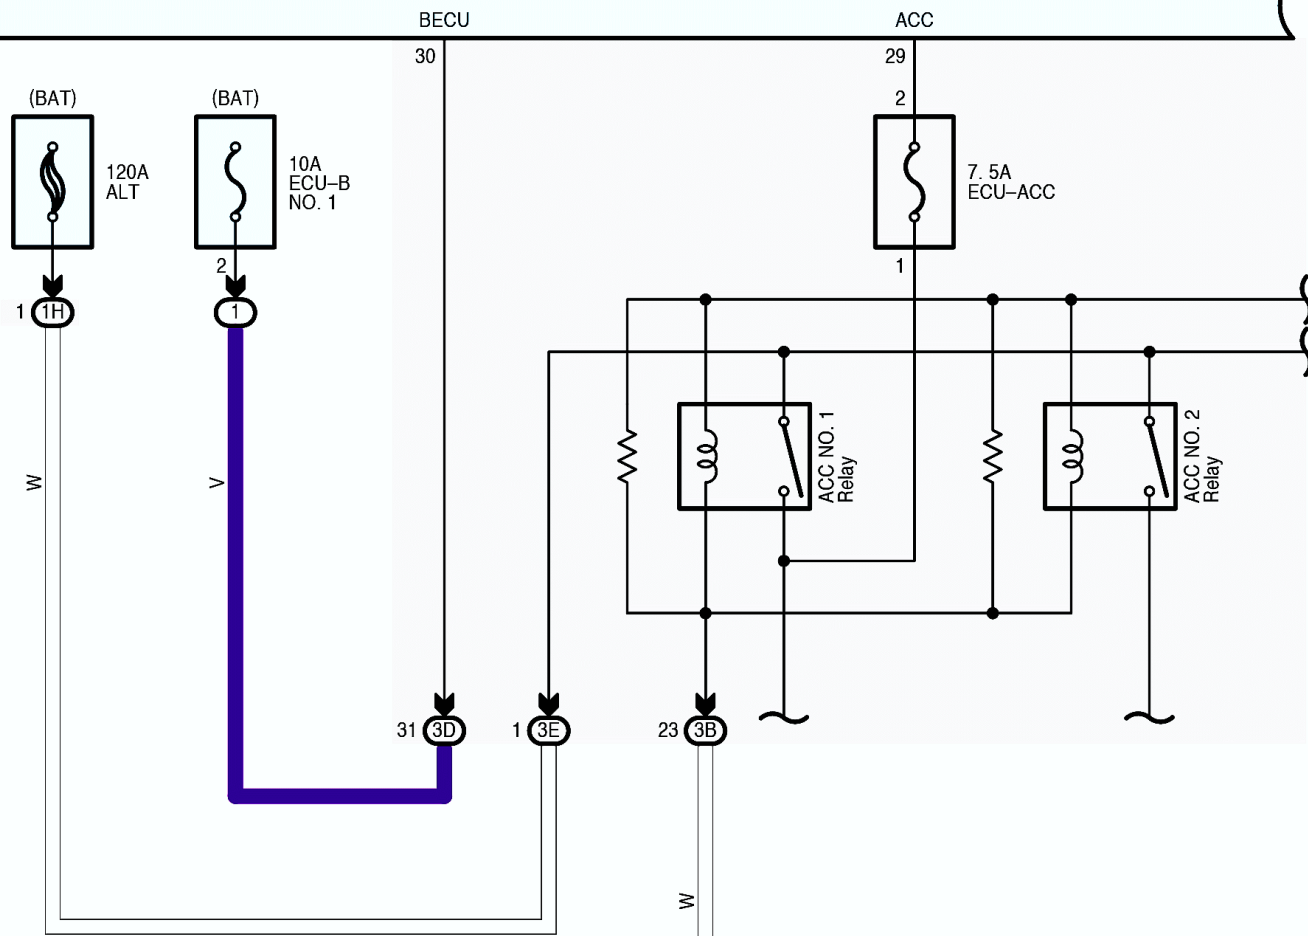



W










P

        
P

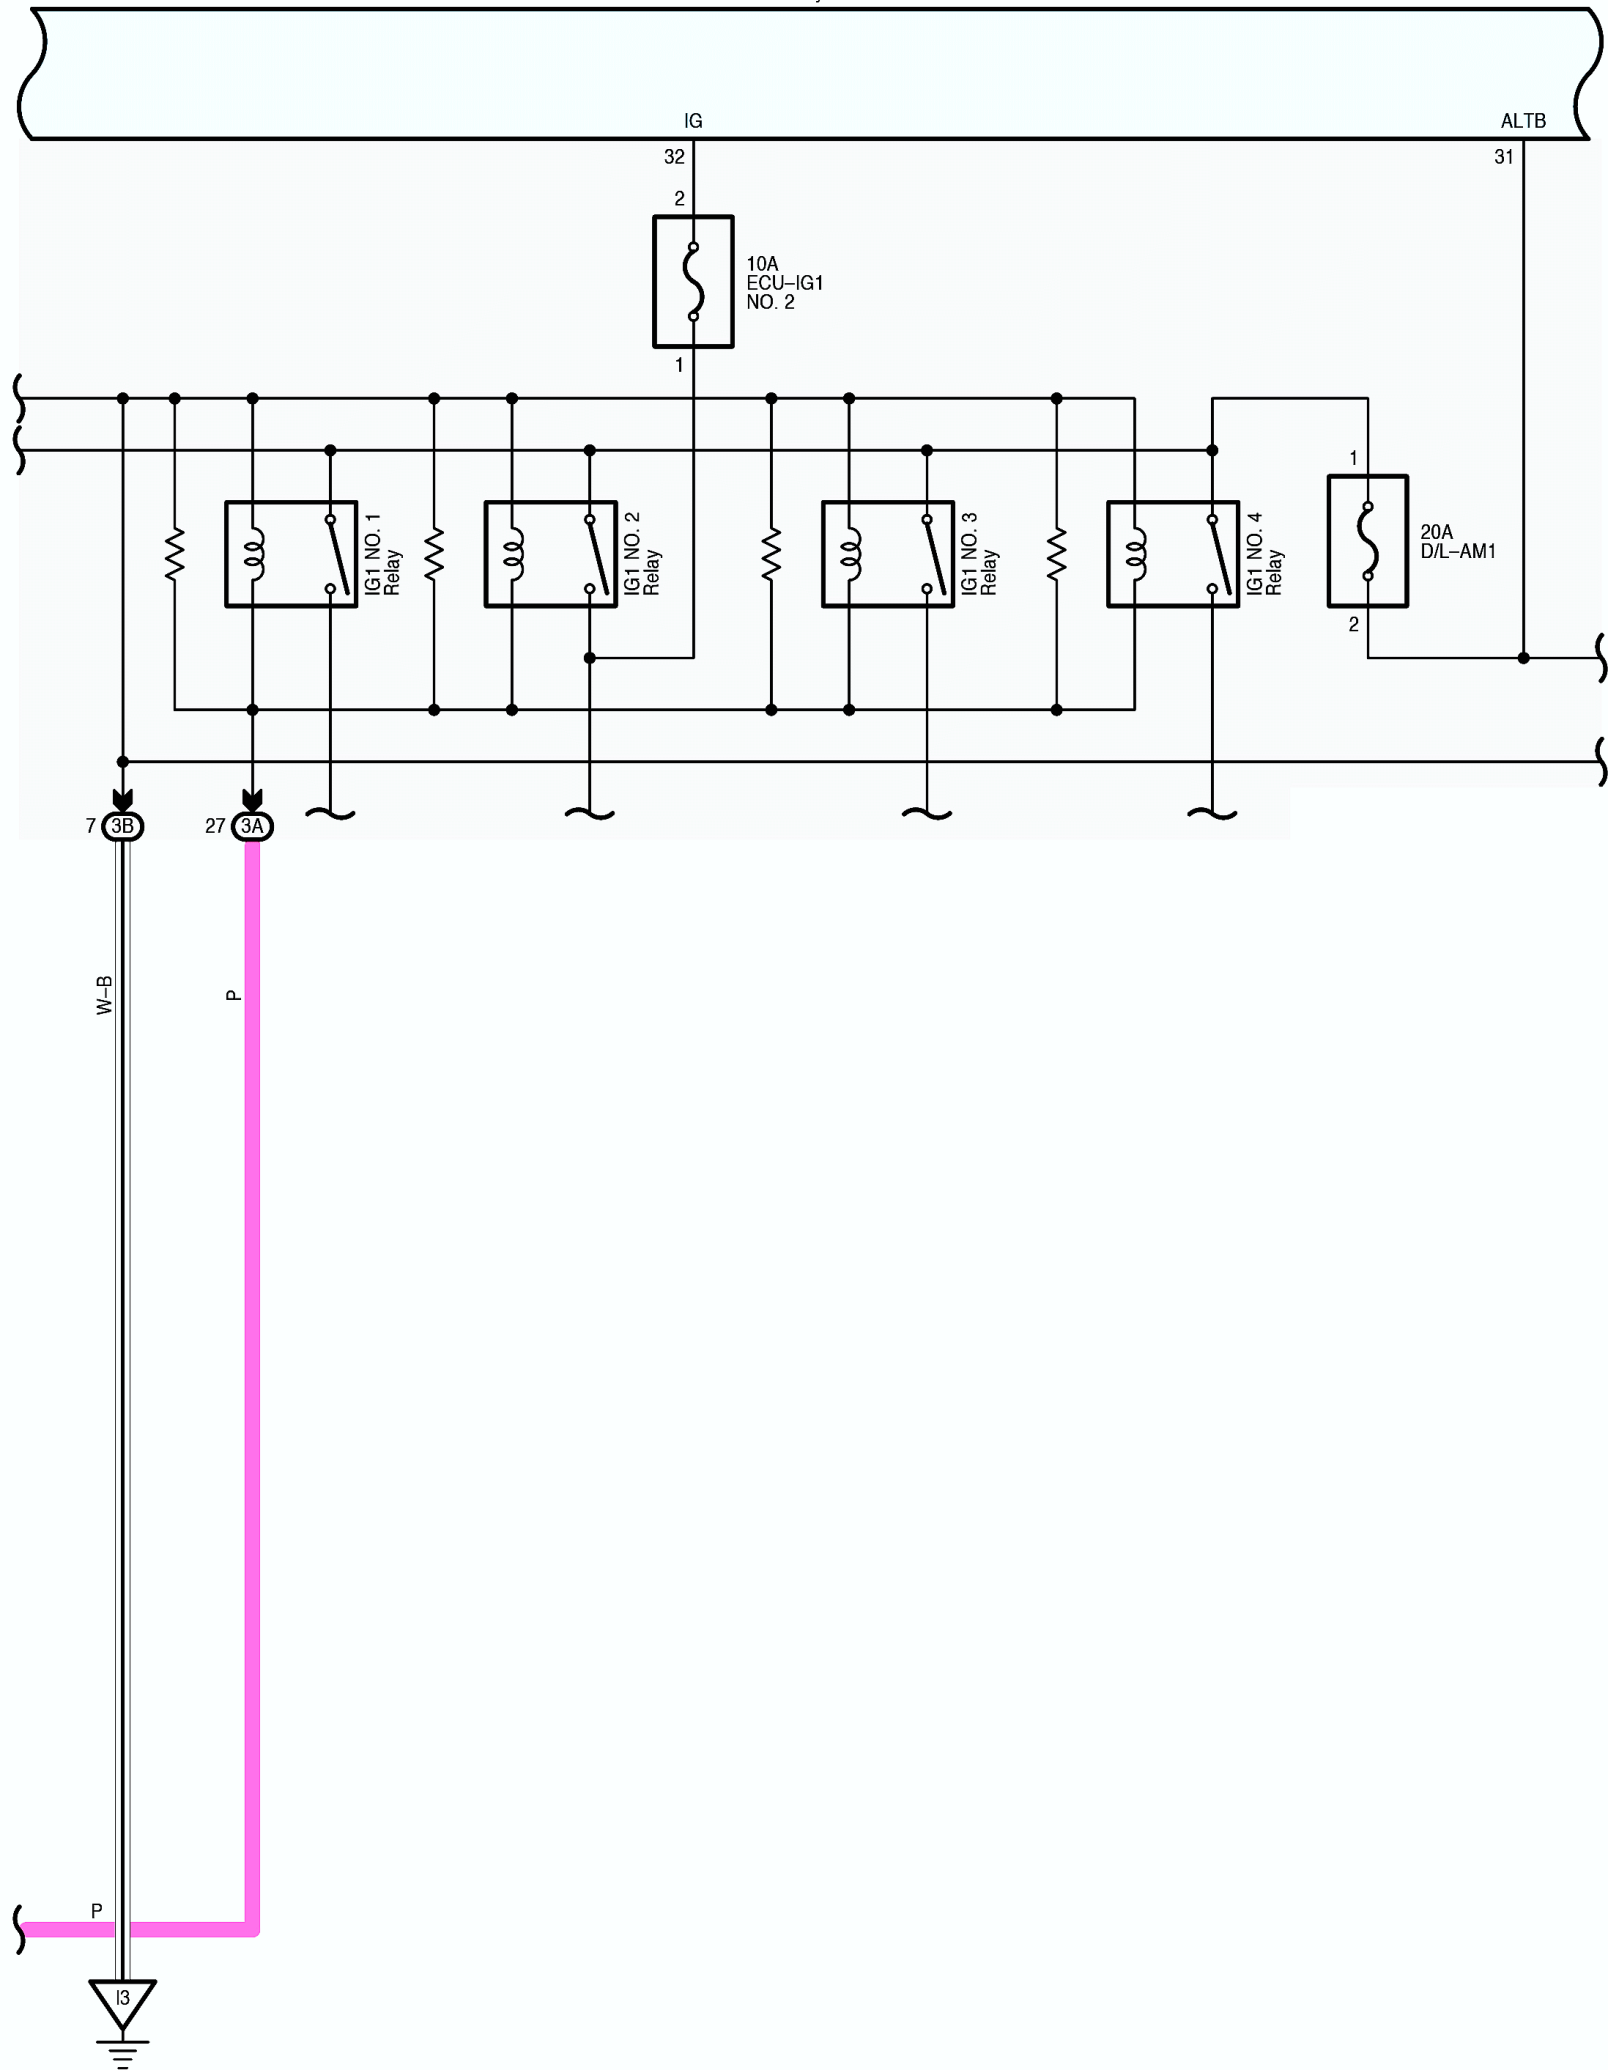


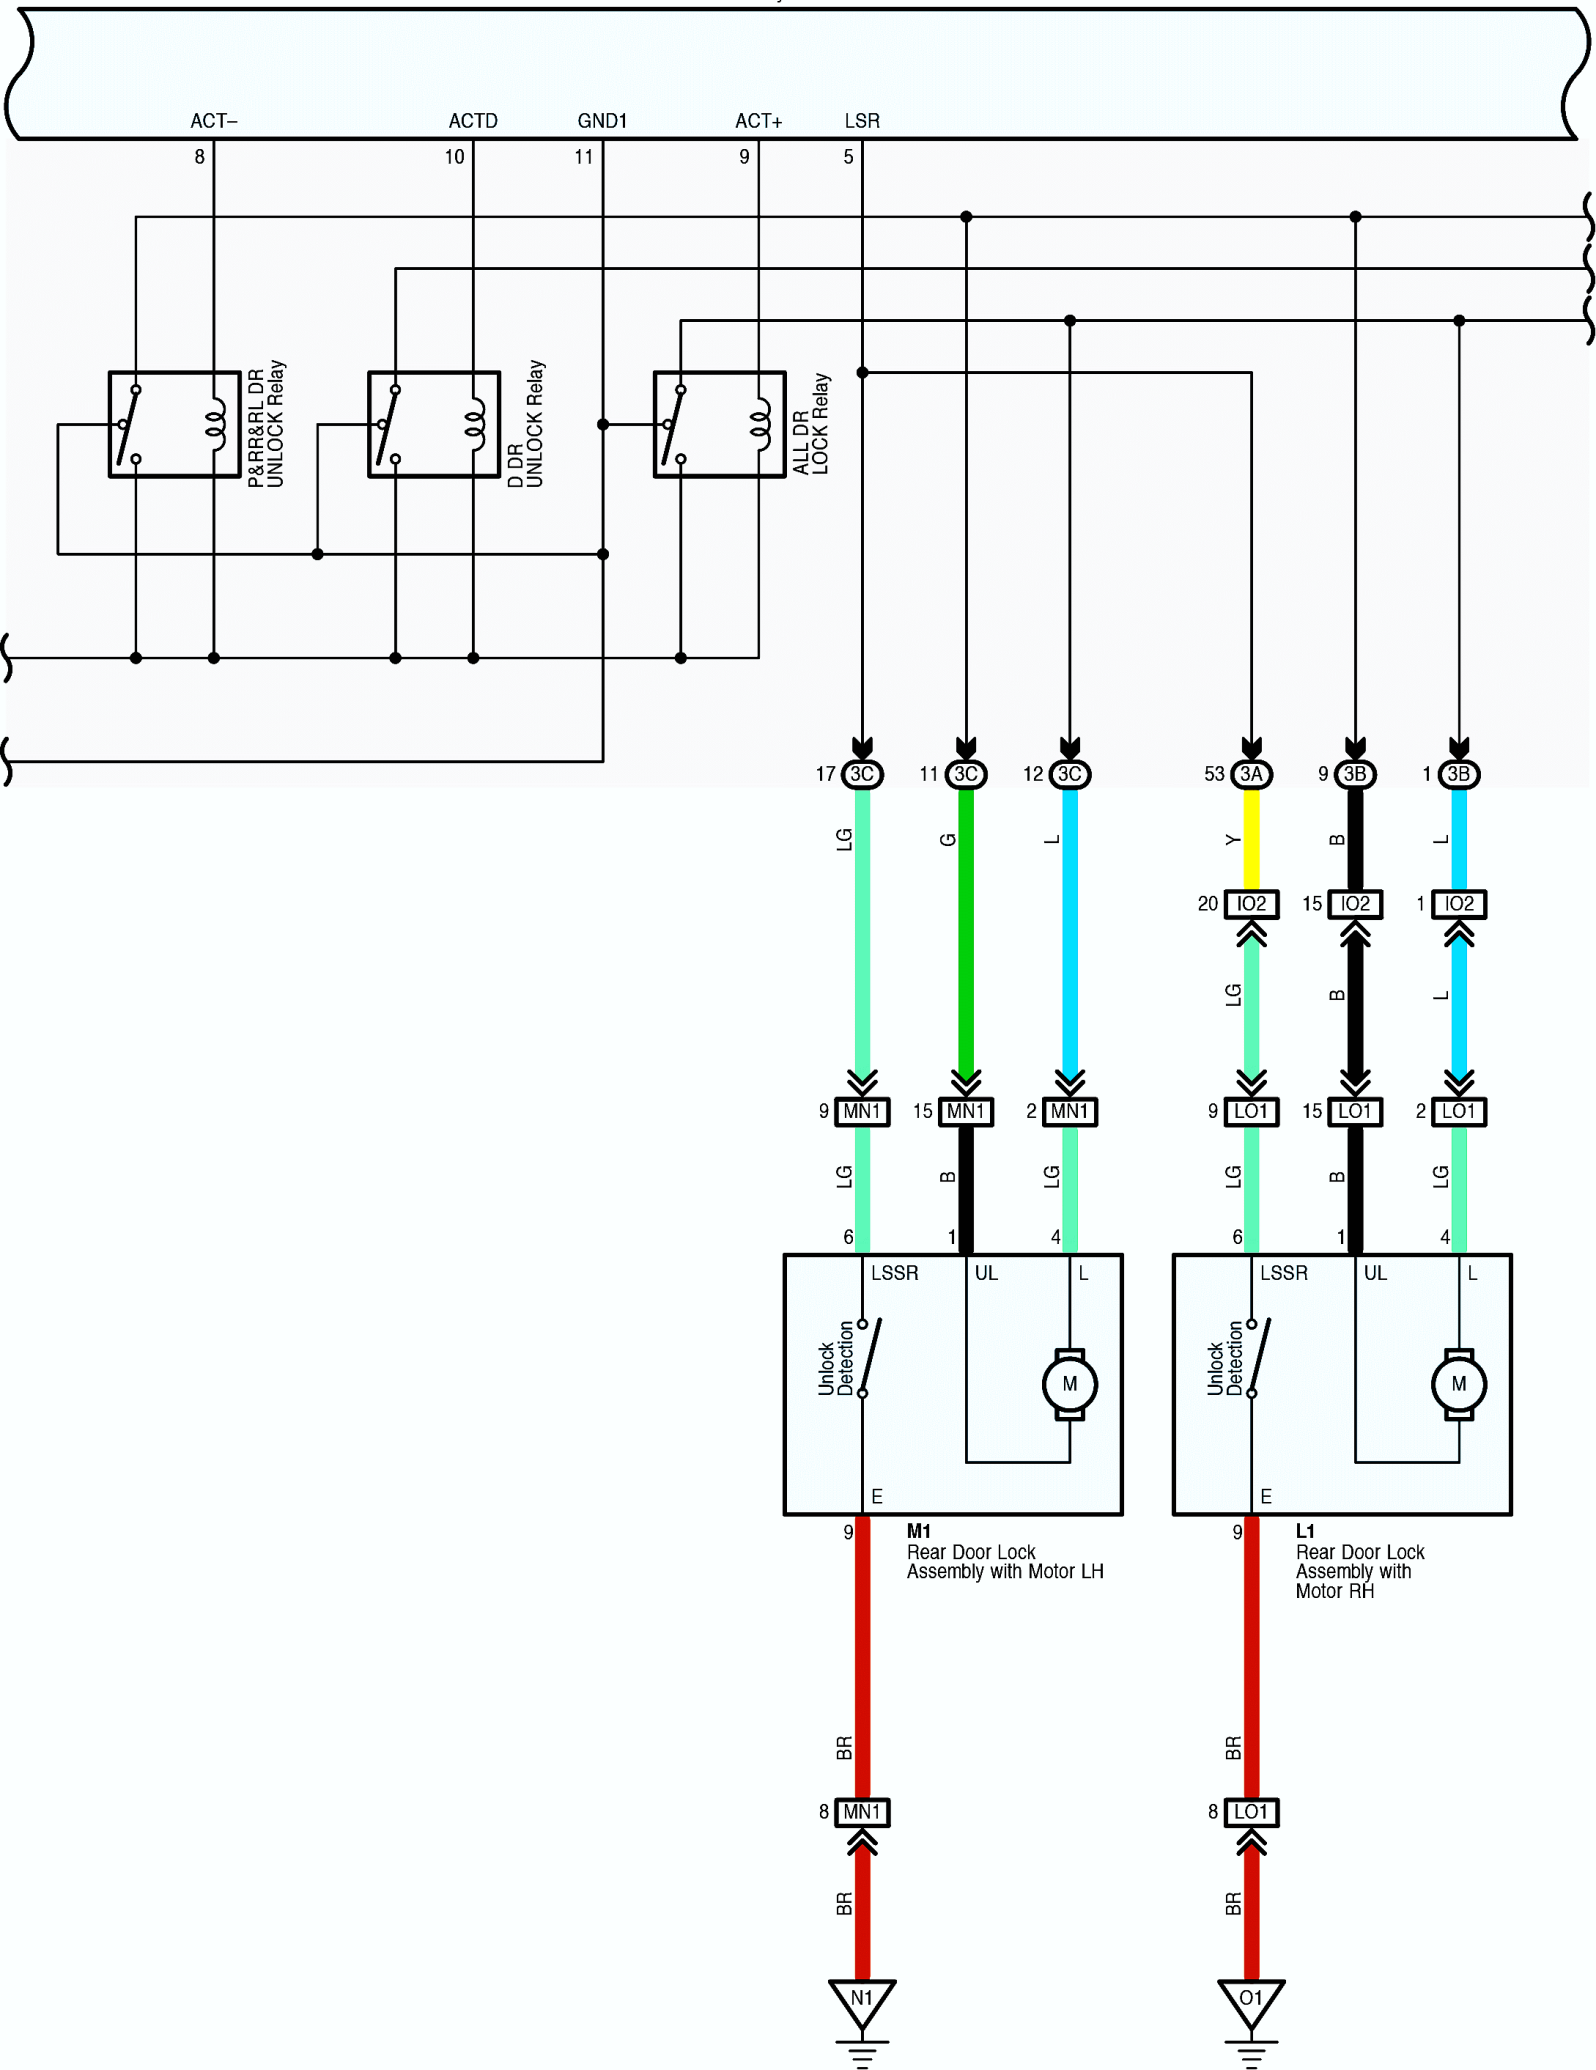

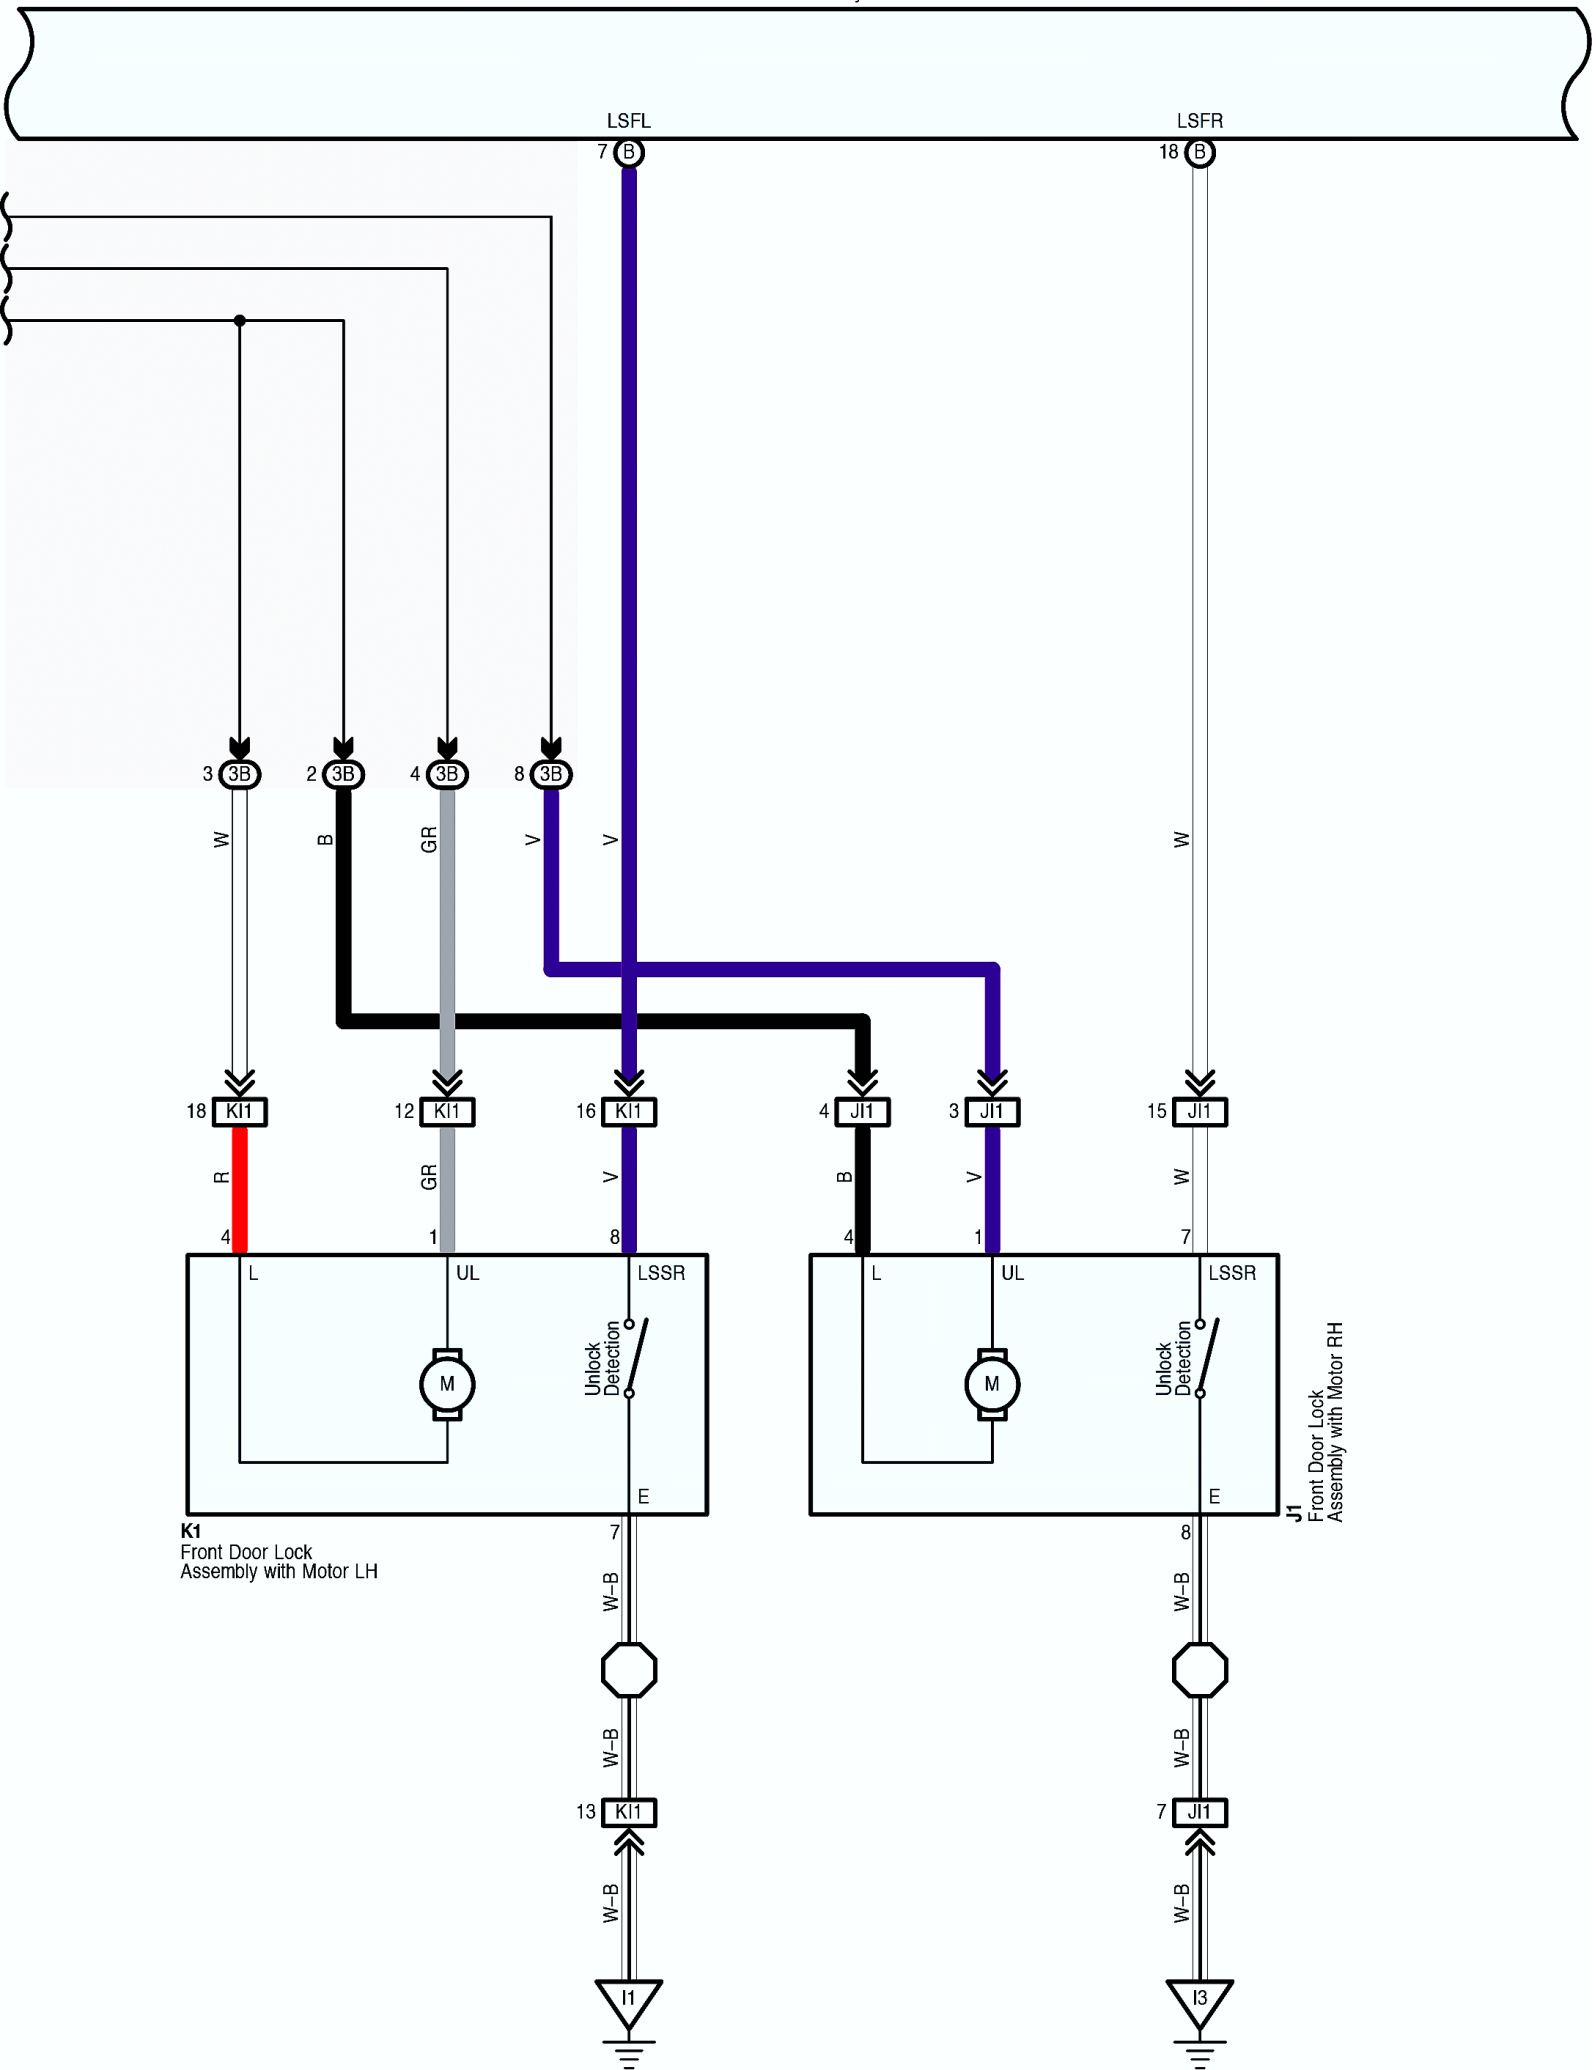


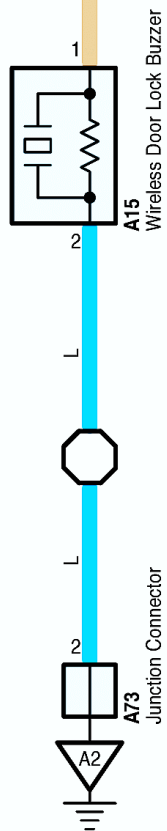

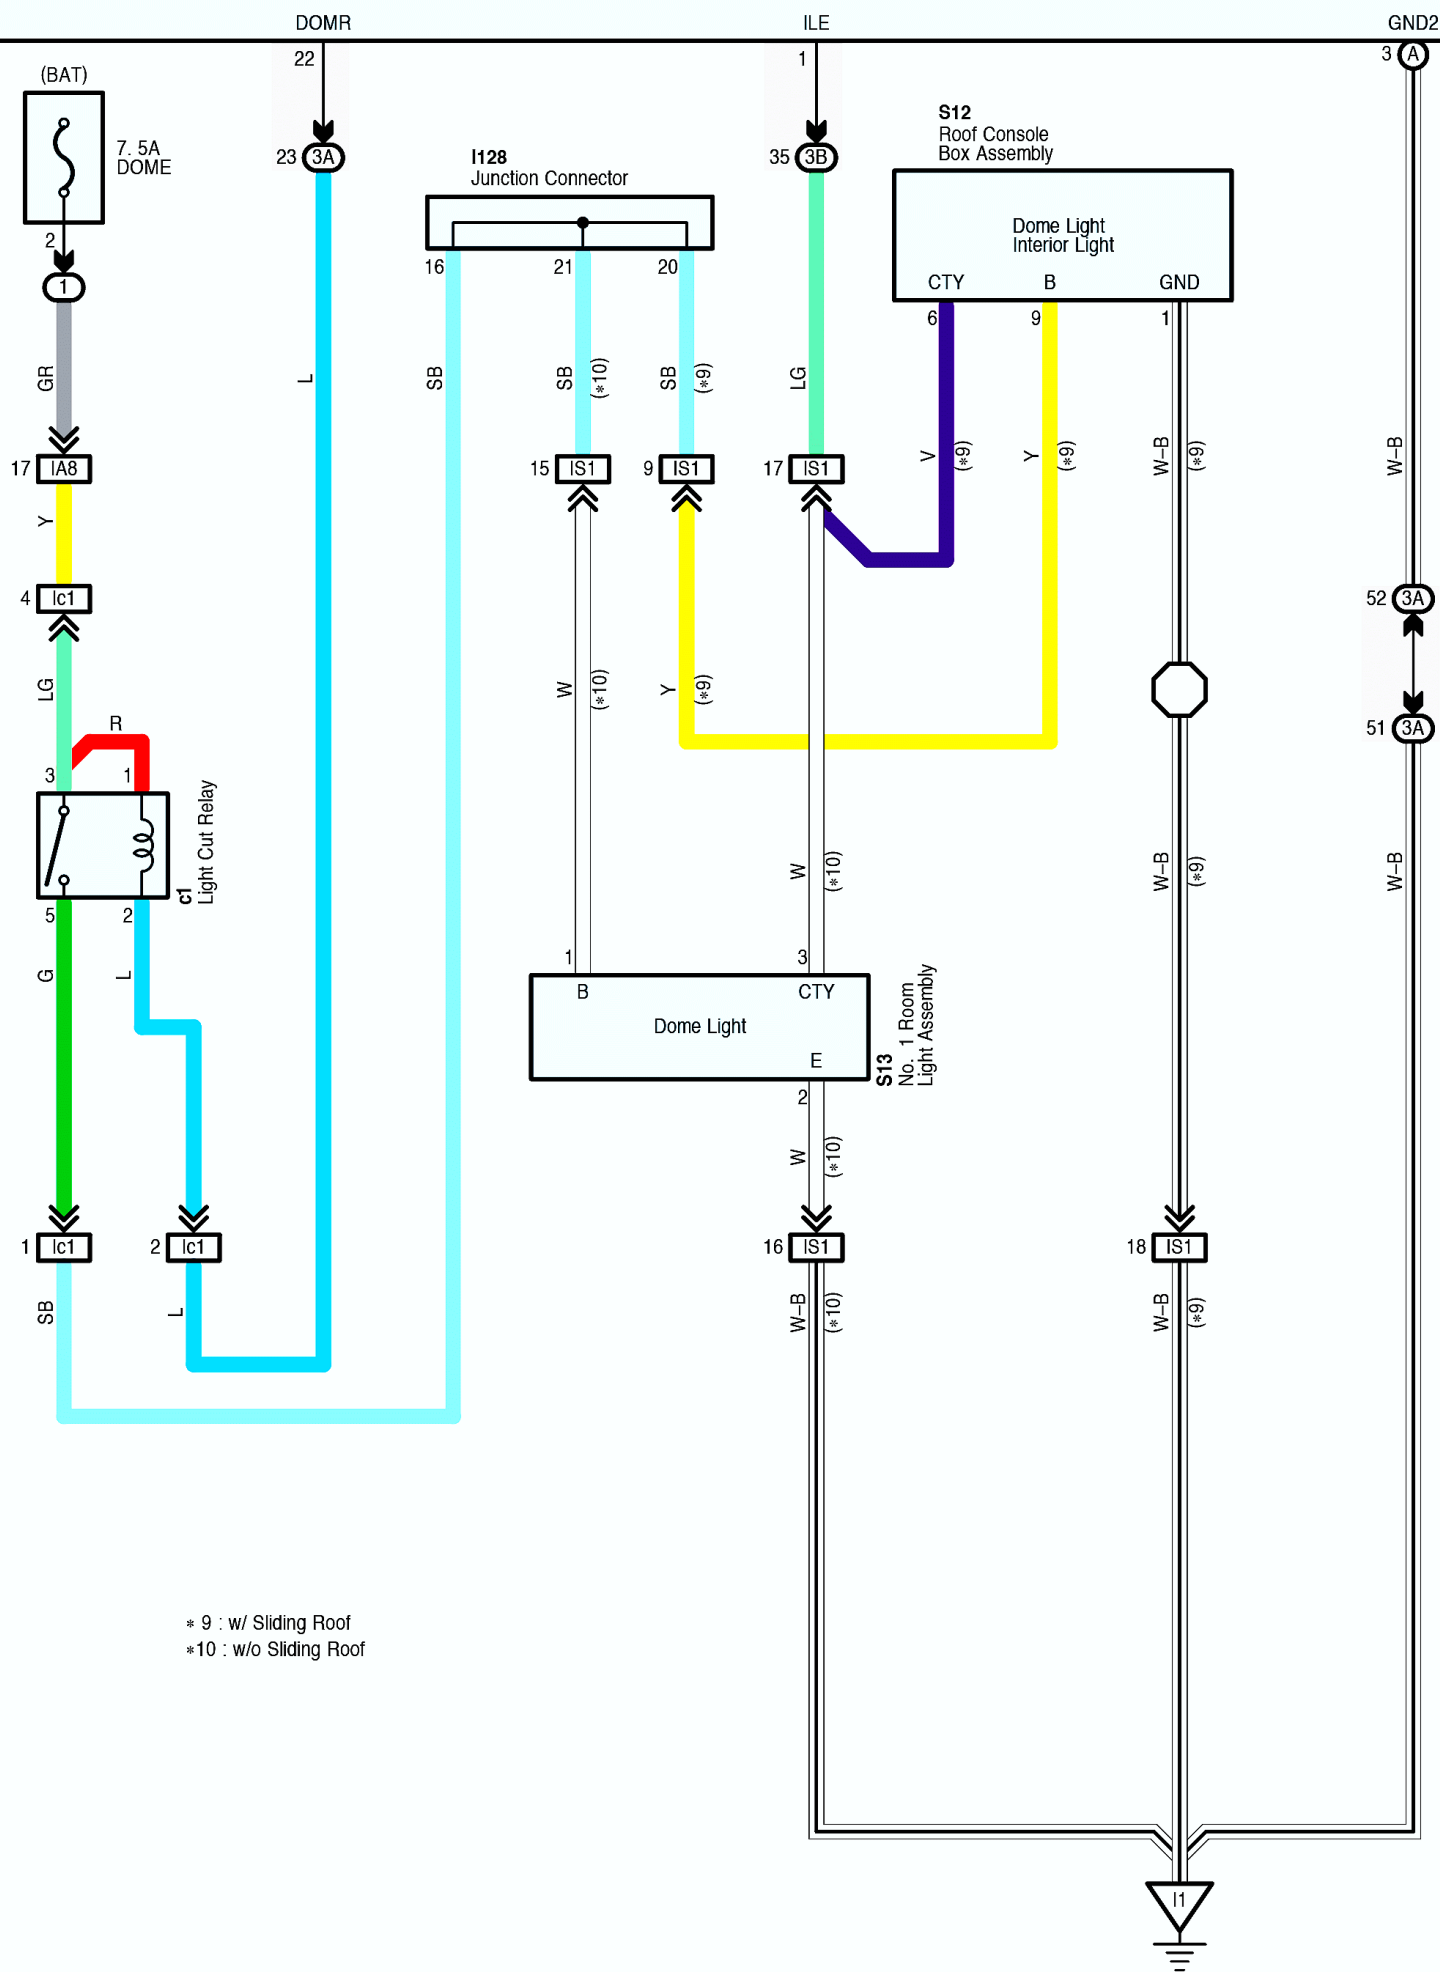


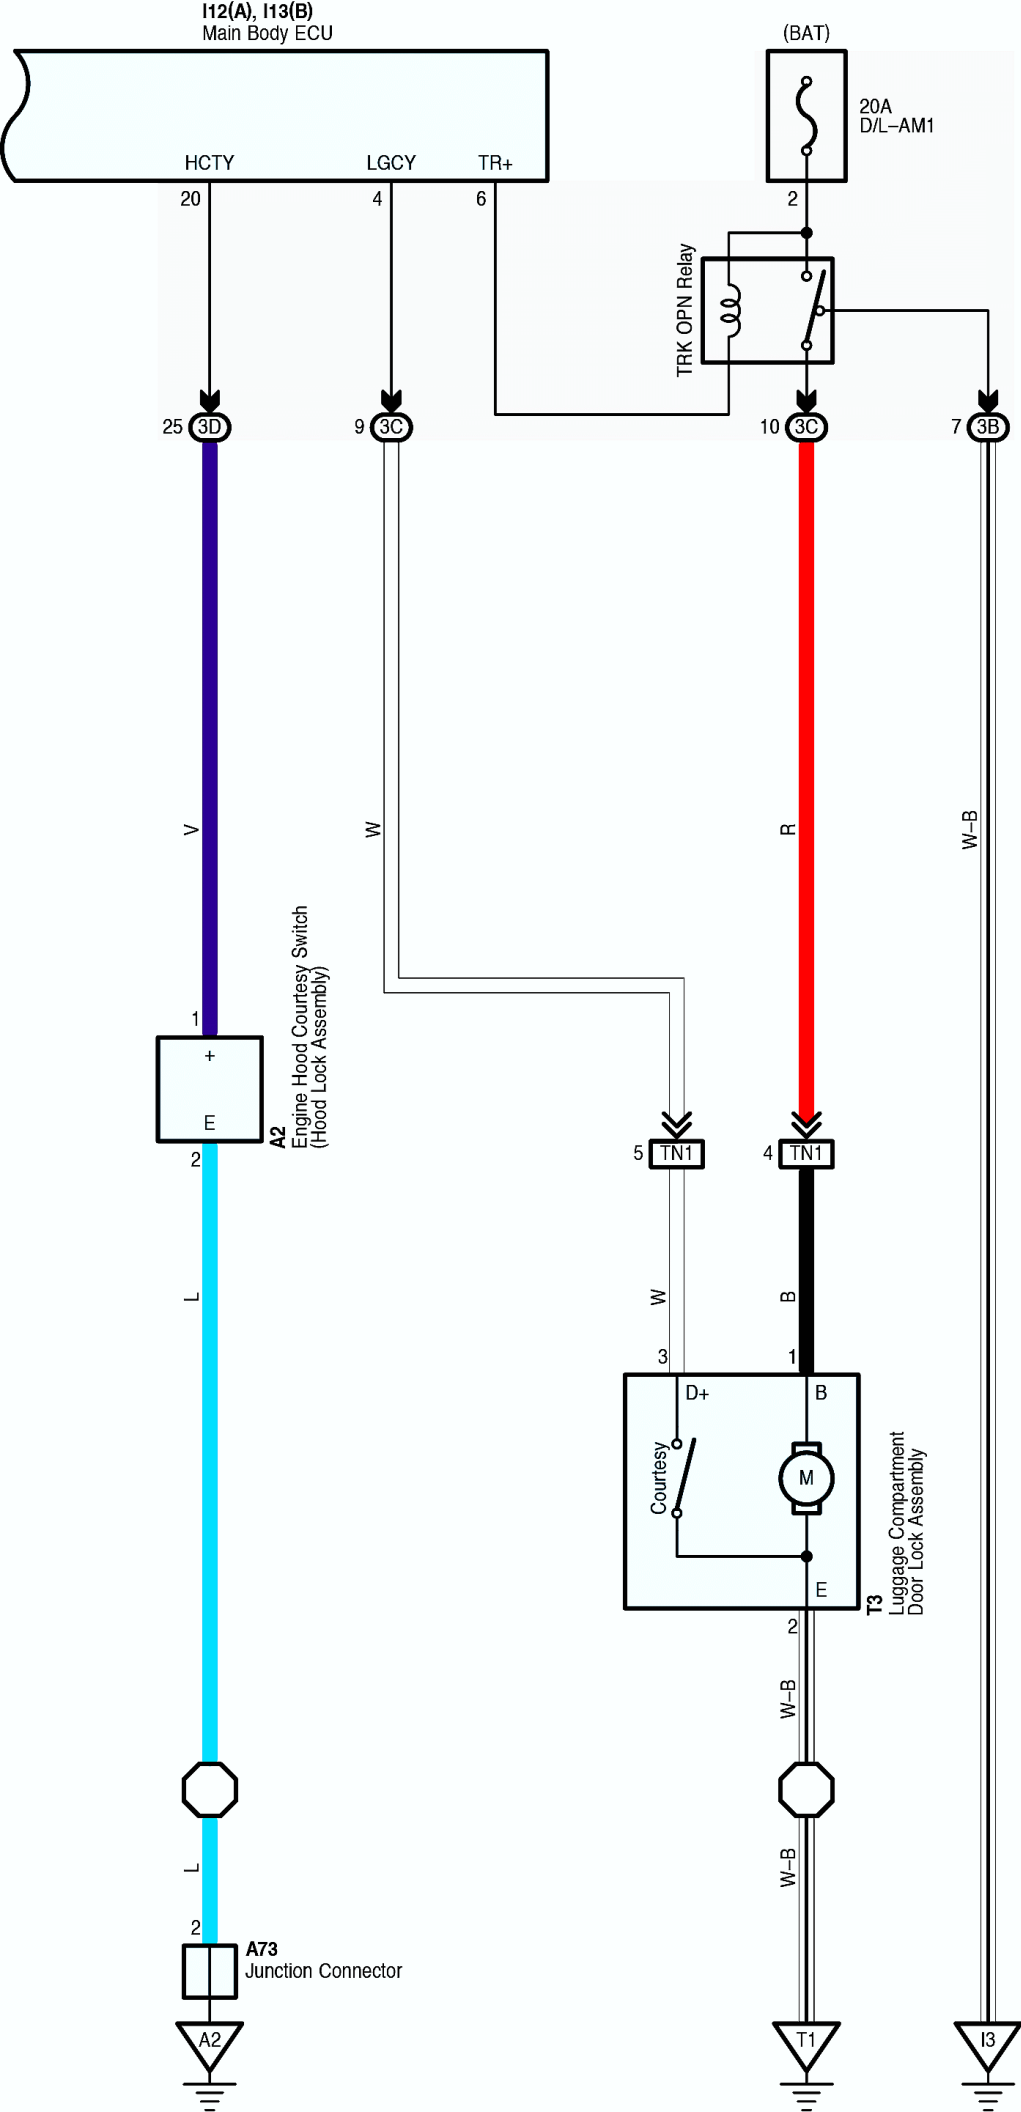



W/o Smart Key System

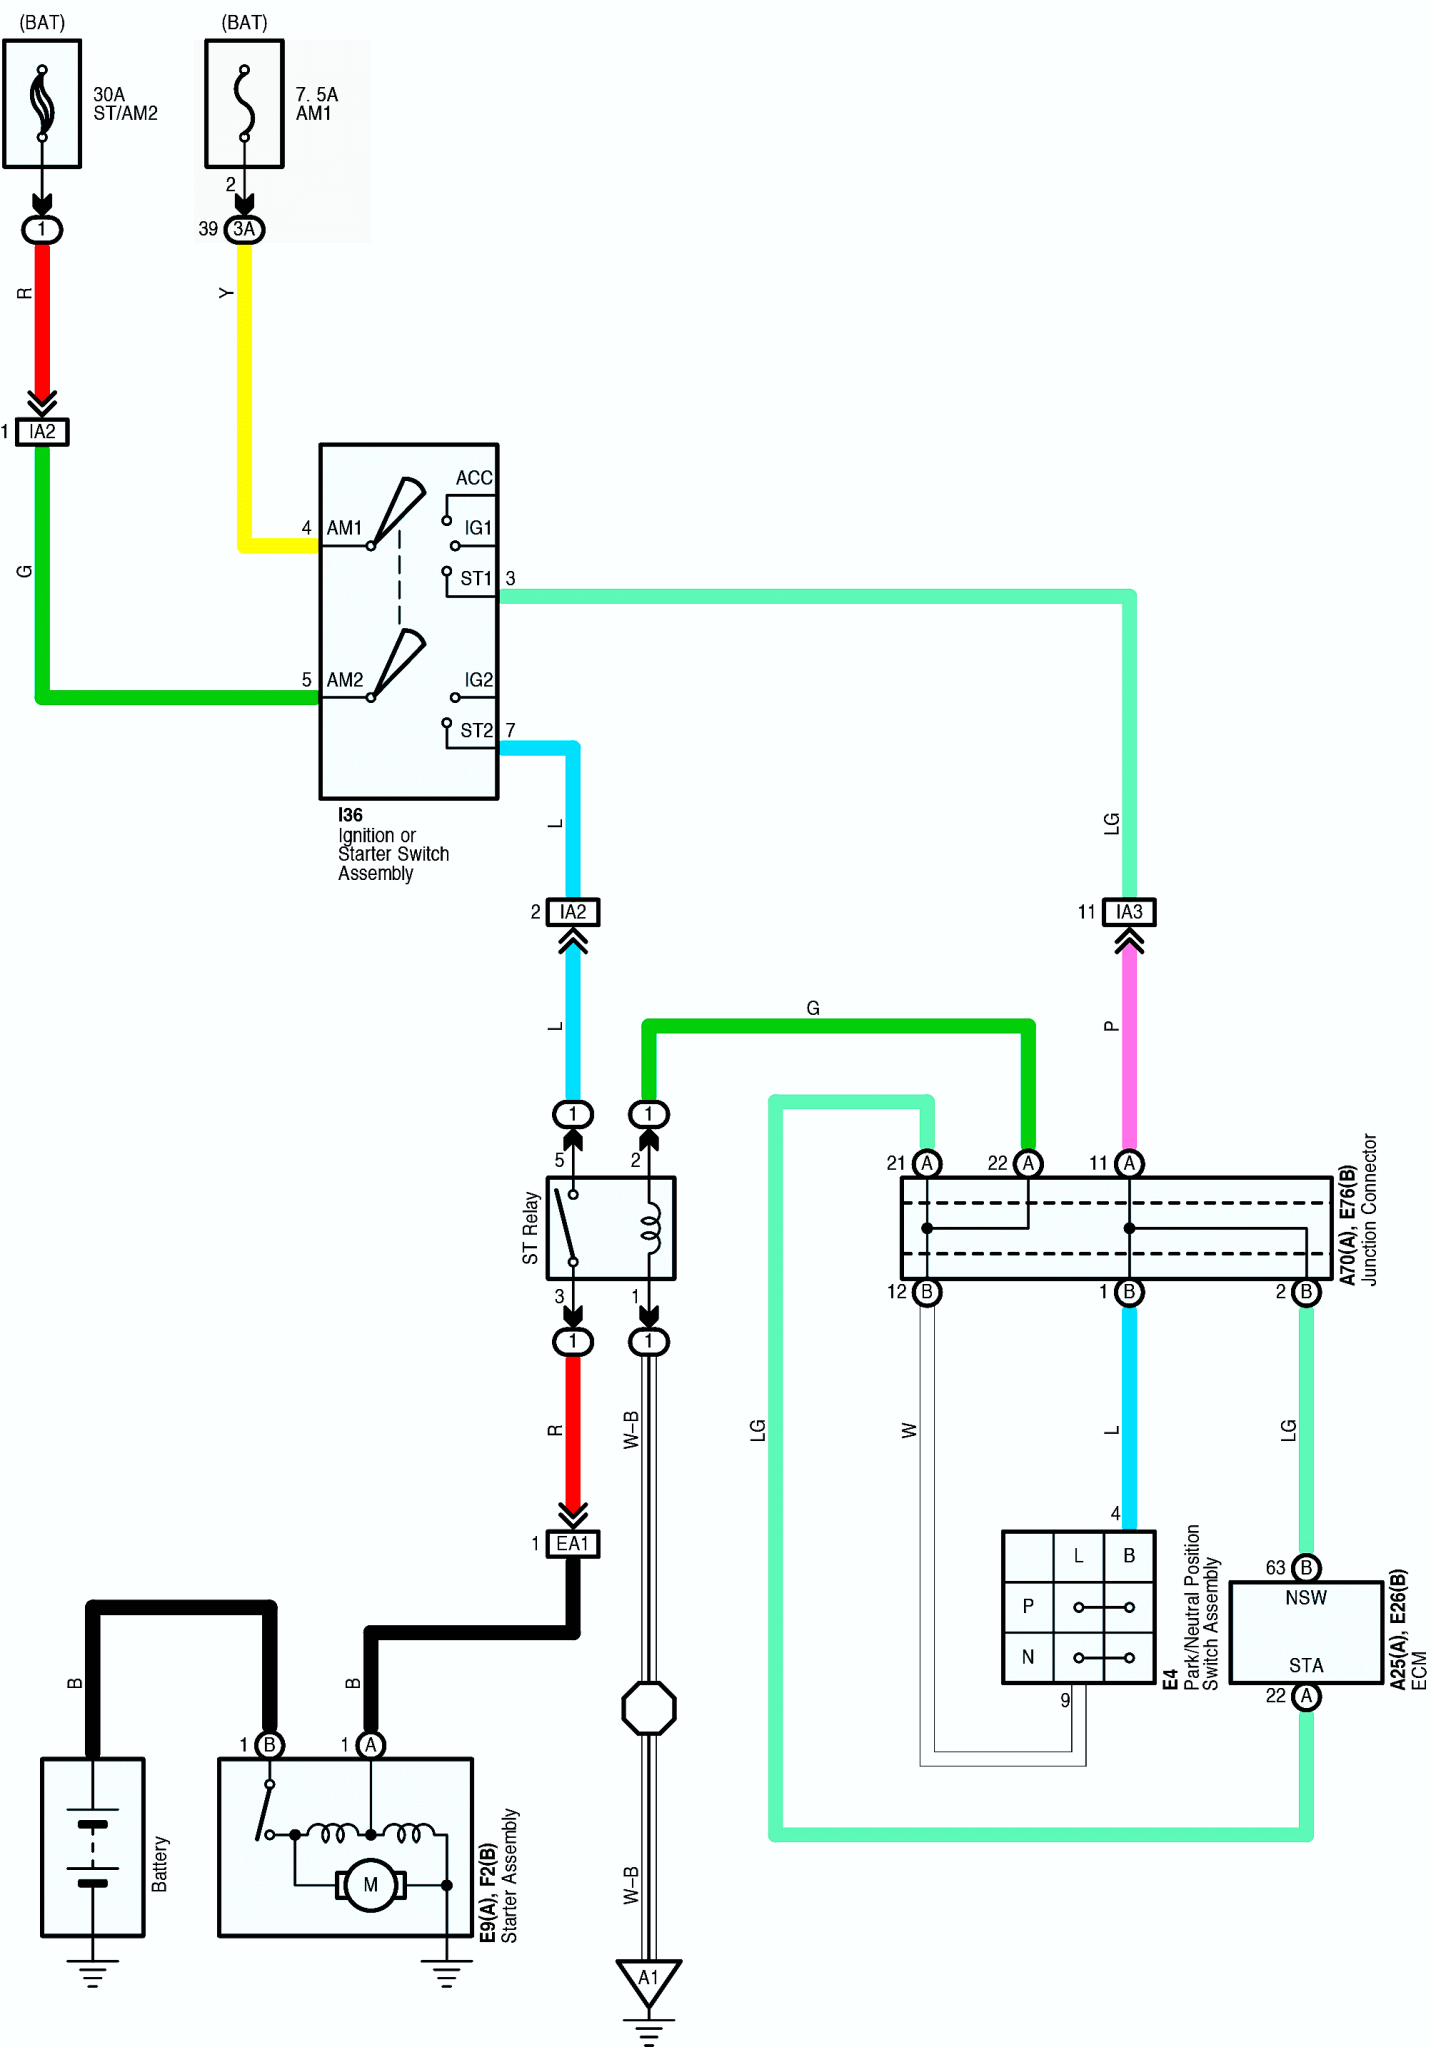

- * 1 : 2GR-FE
- * 2 : 2AR-FE
- * 3 : w/ TFT Display
- * 4 : w/o TFT Display

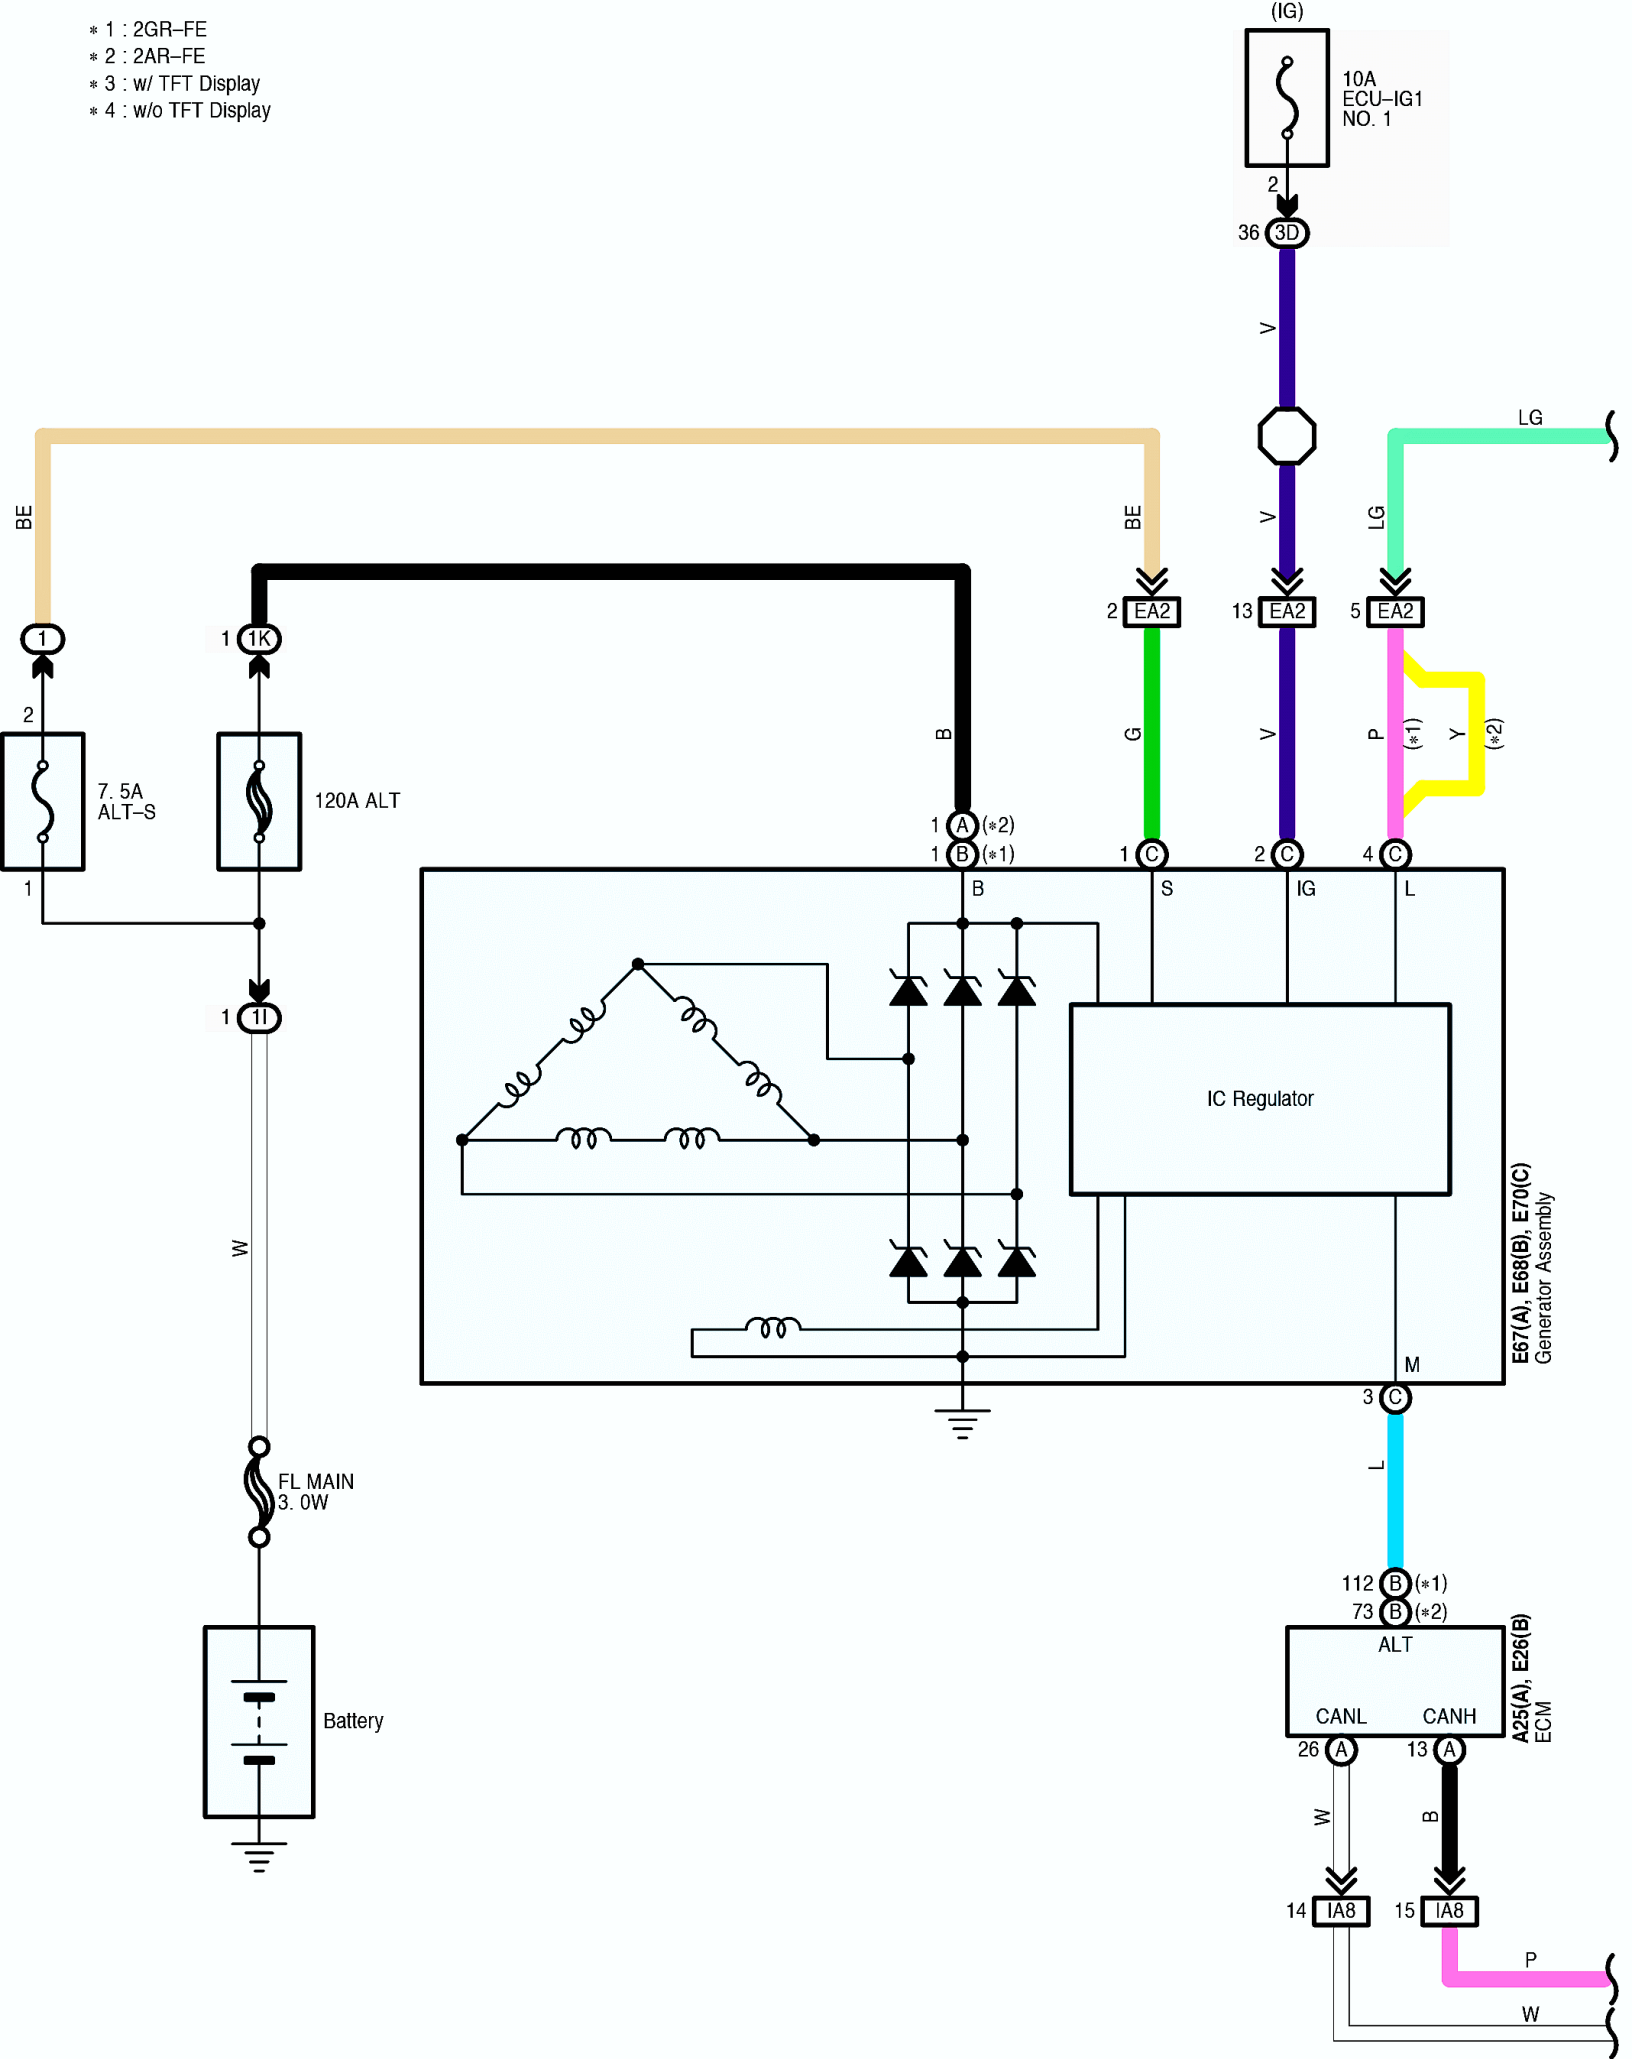

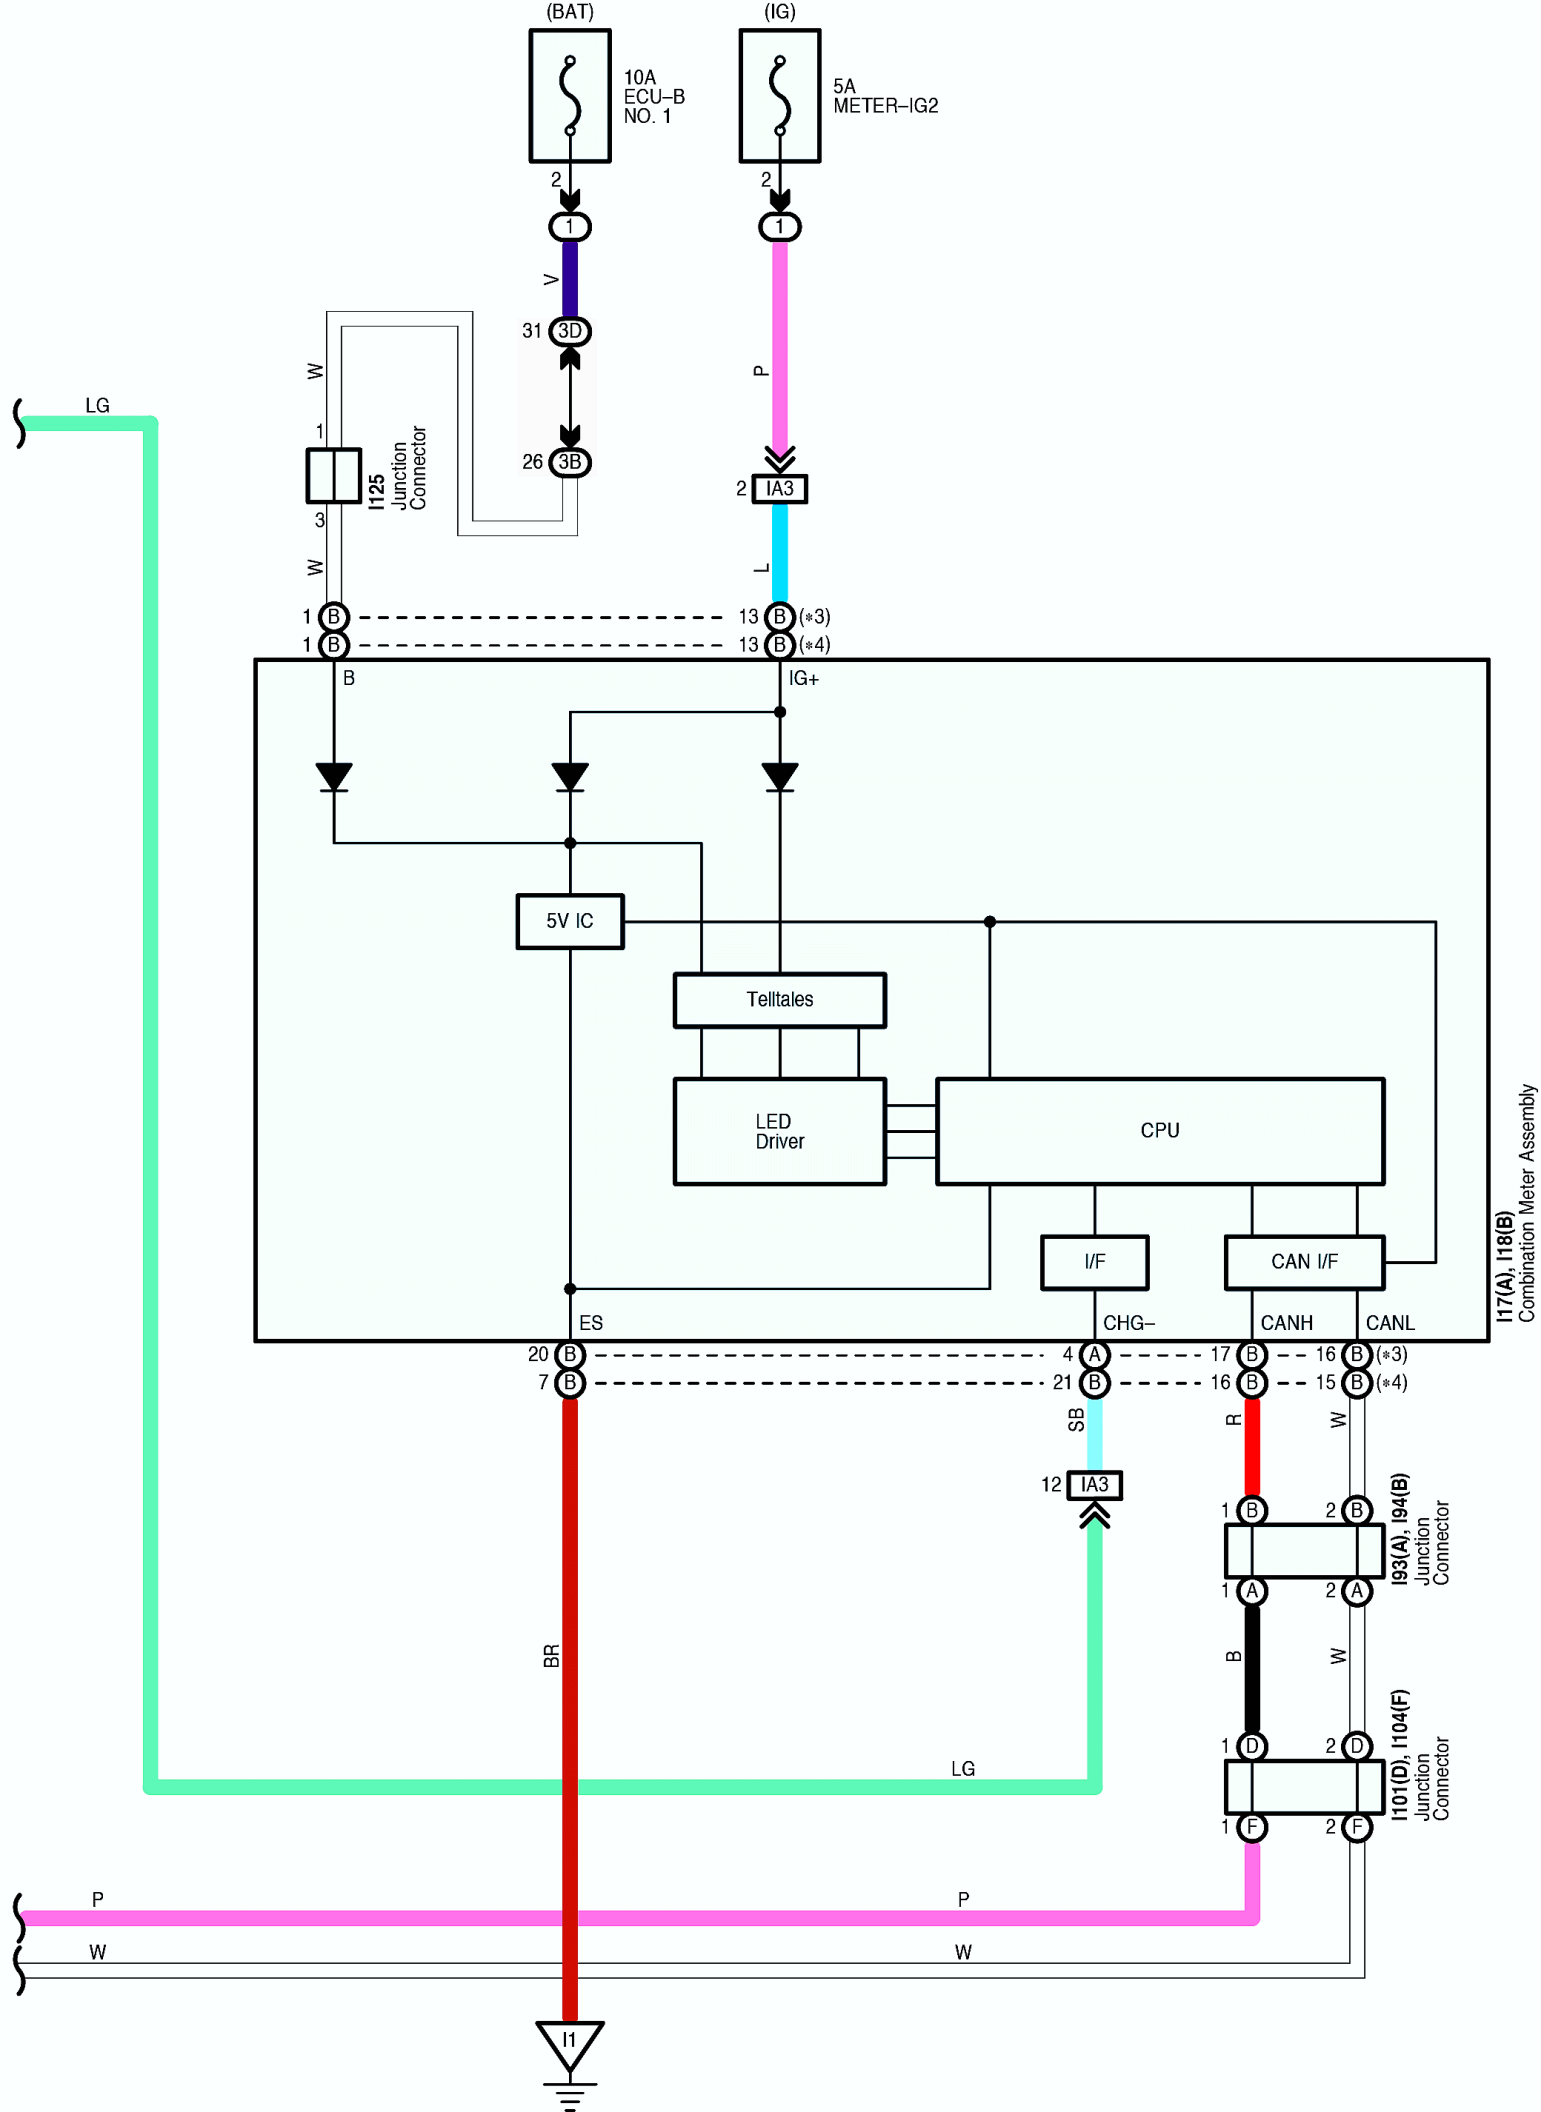


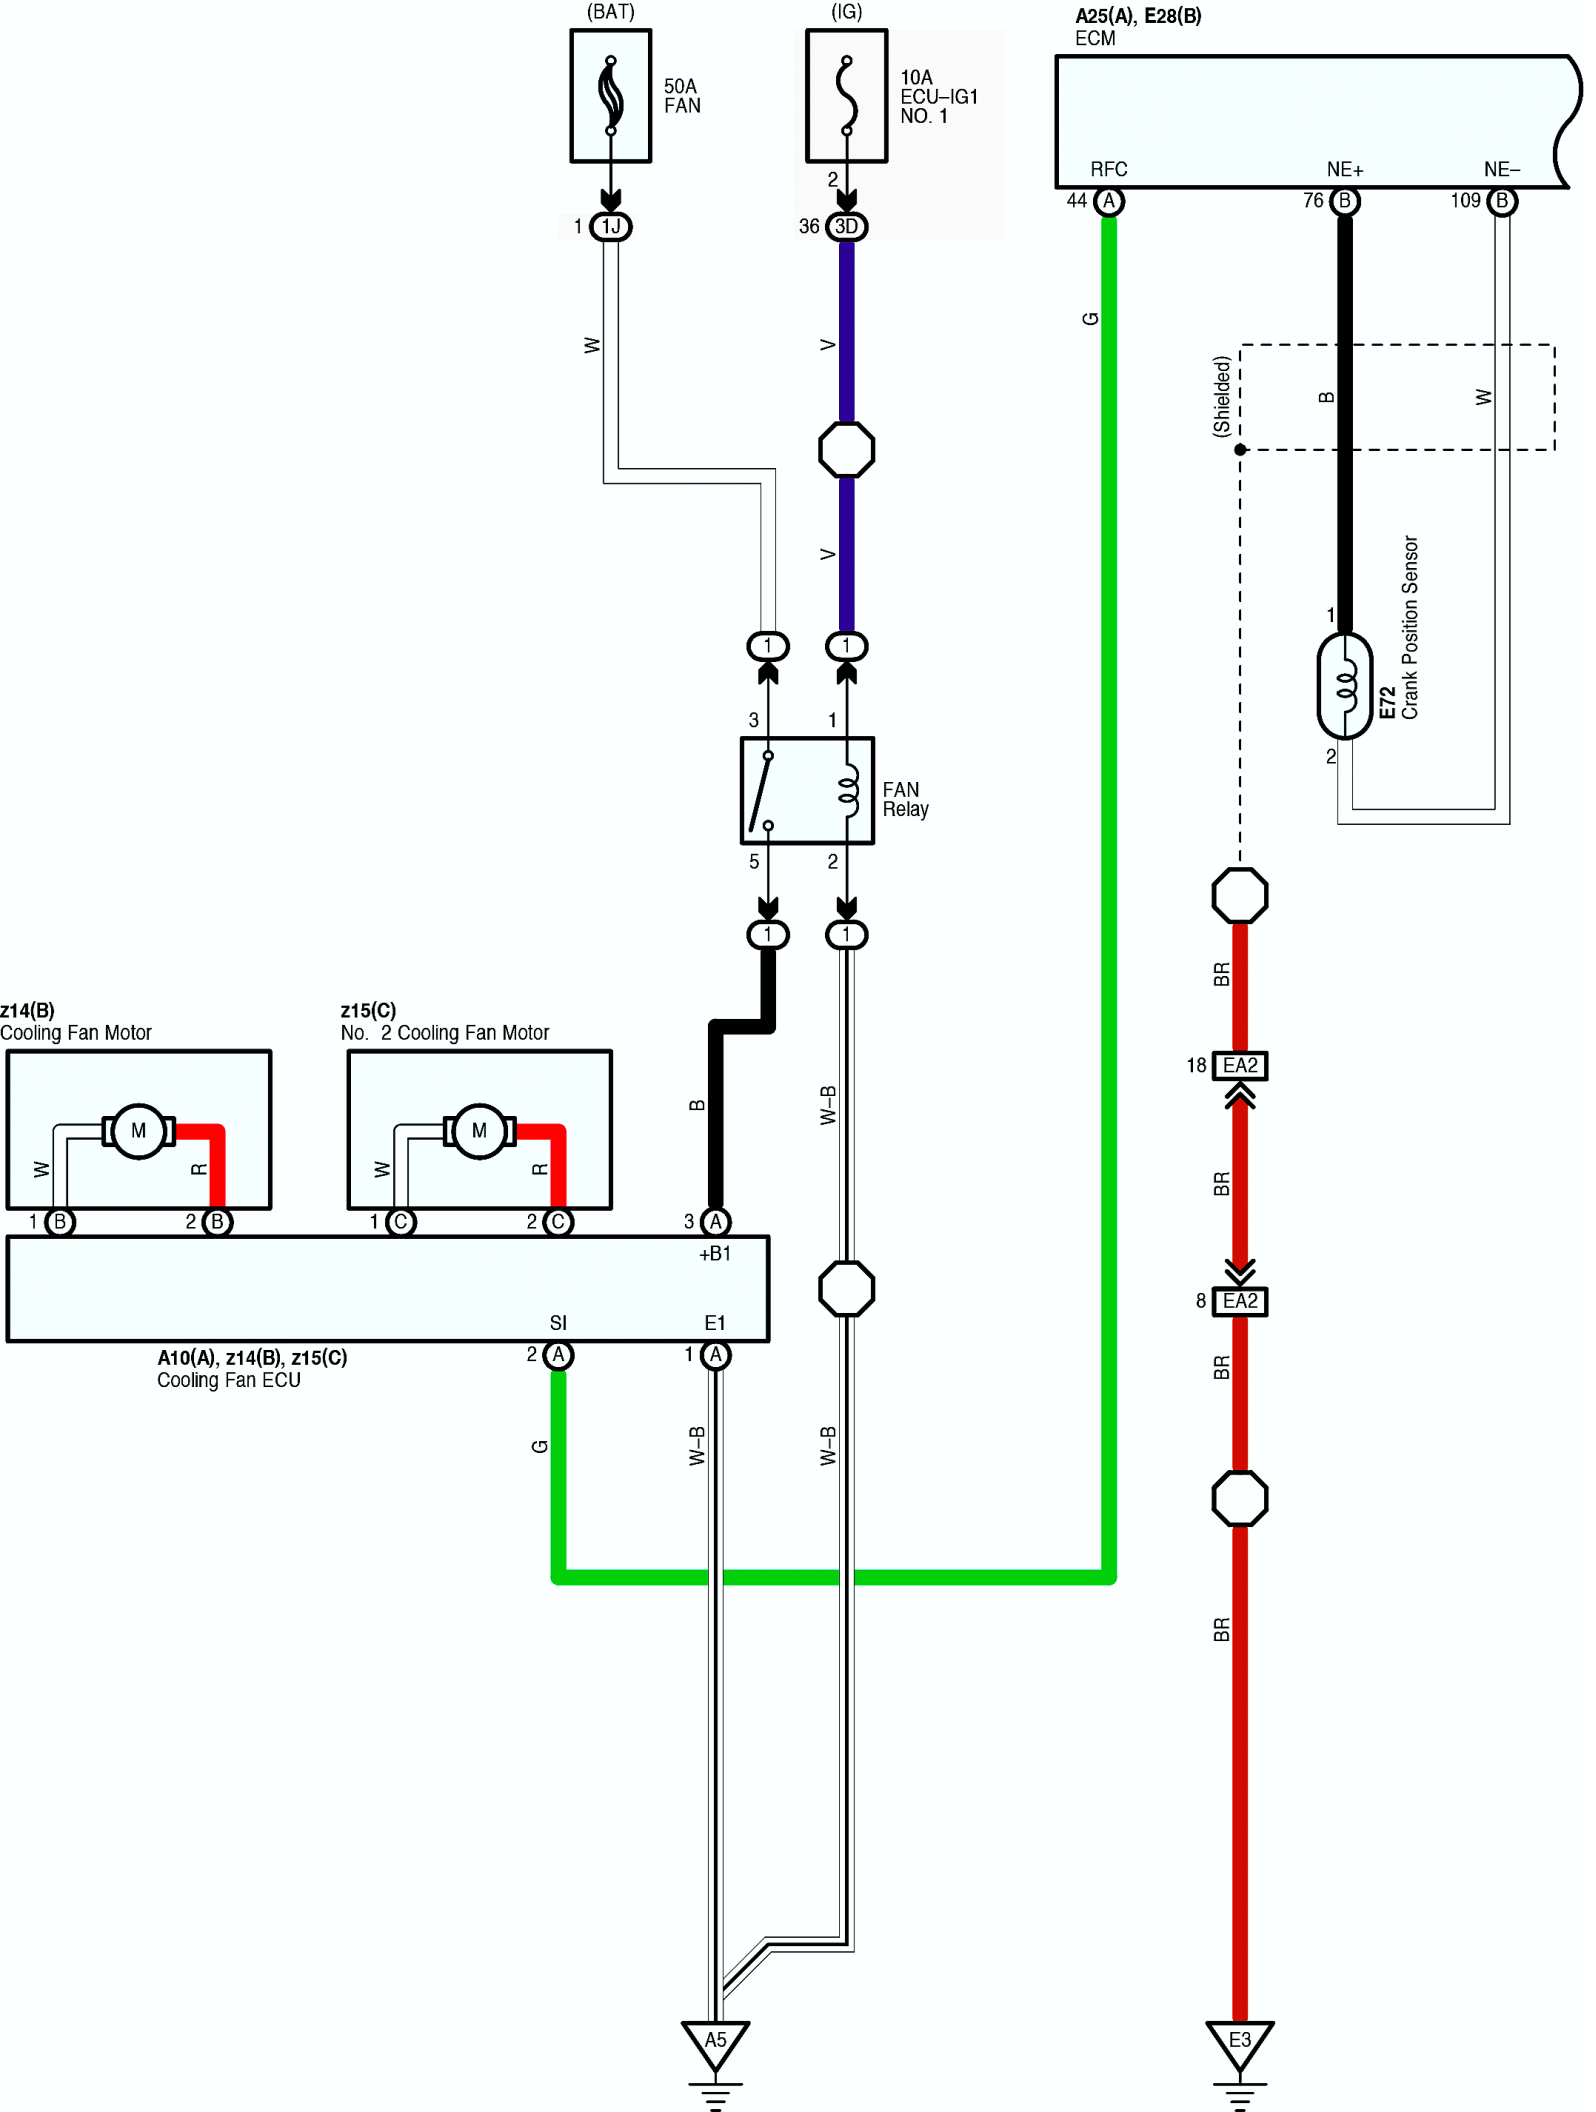





A25(A), E28(B)
ECM

A28







Skid Control ECU with Actuator
(Brake Booster with Master Cylinder Assembly)

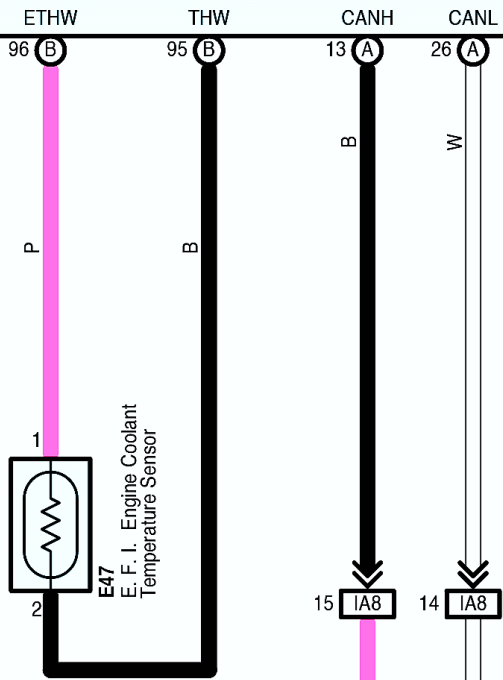



I101(B), I102(C), I104(E)
Junction Connector

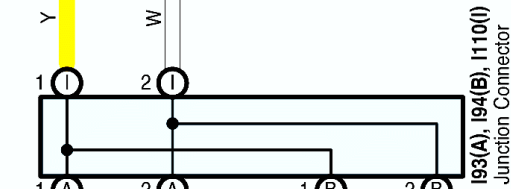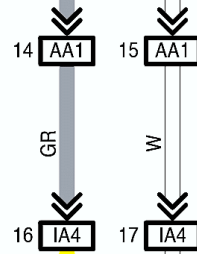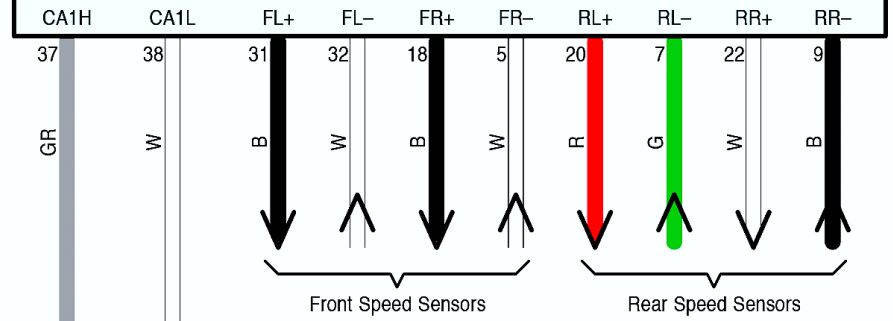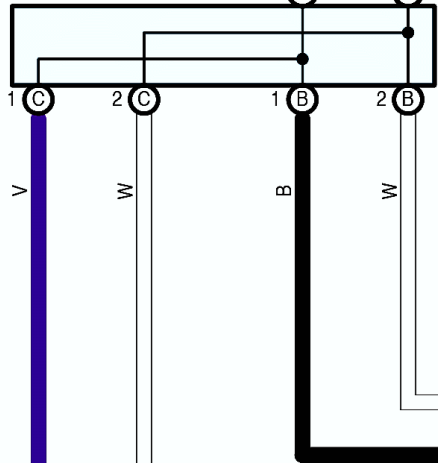



I77(A)
A/C Amplifier Assembly

  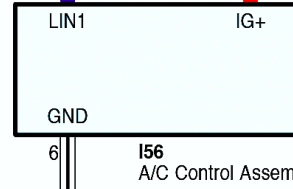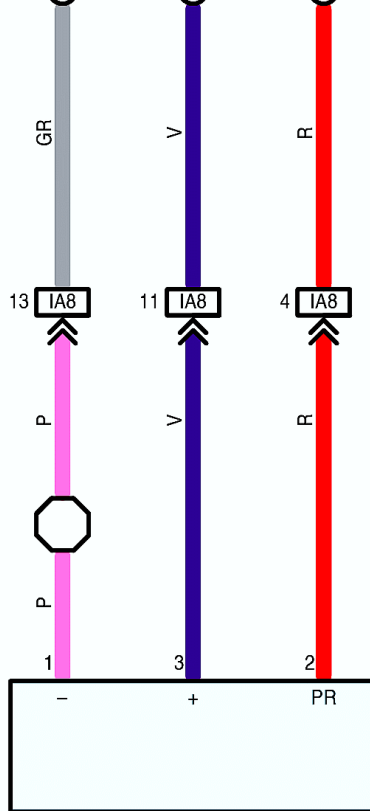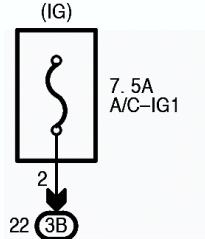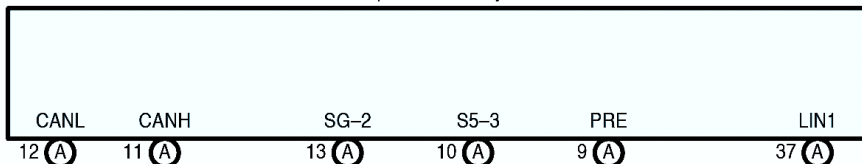


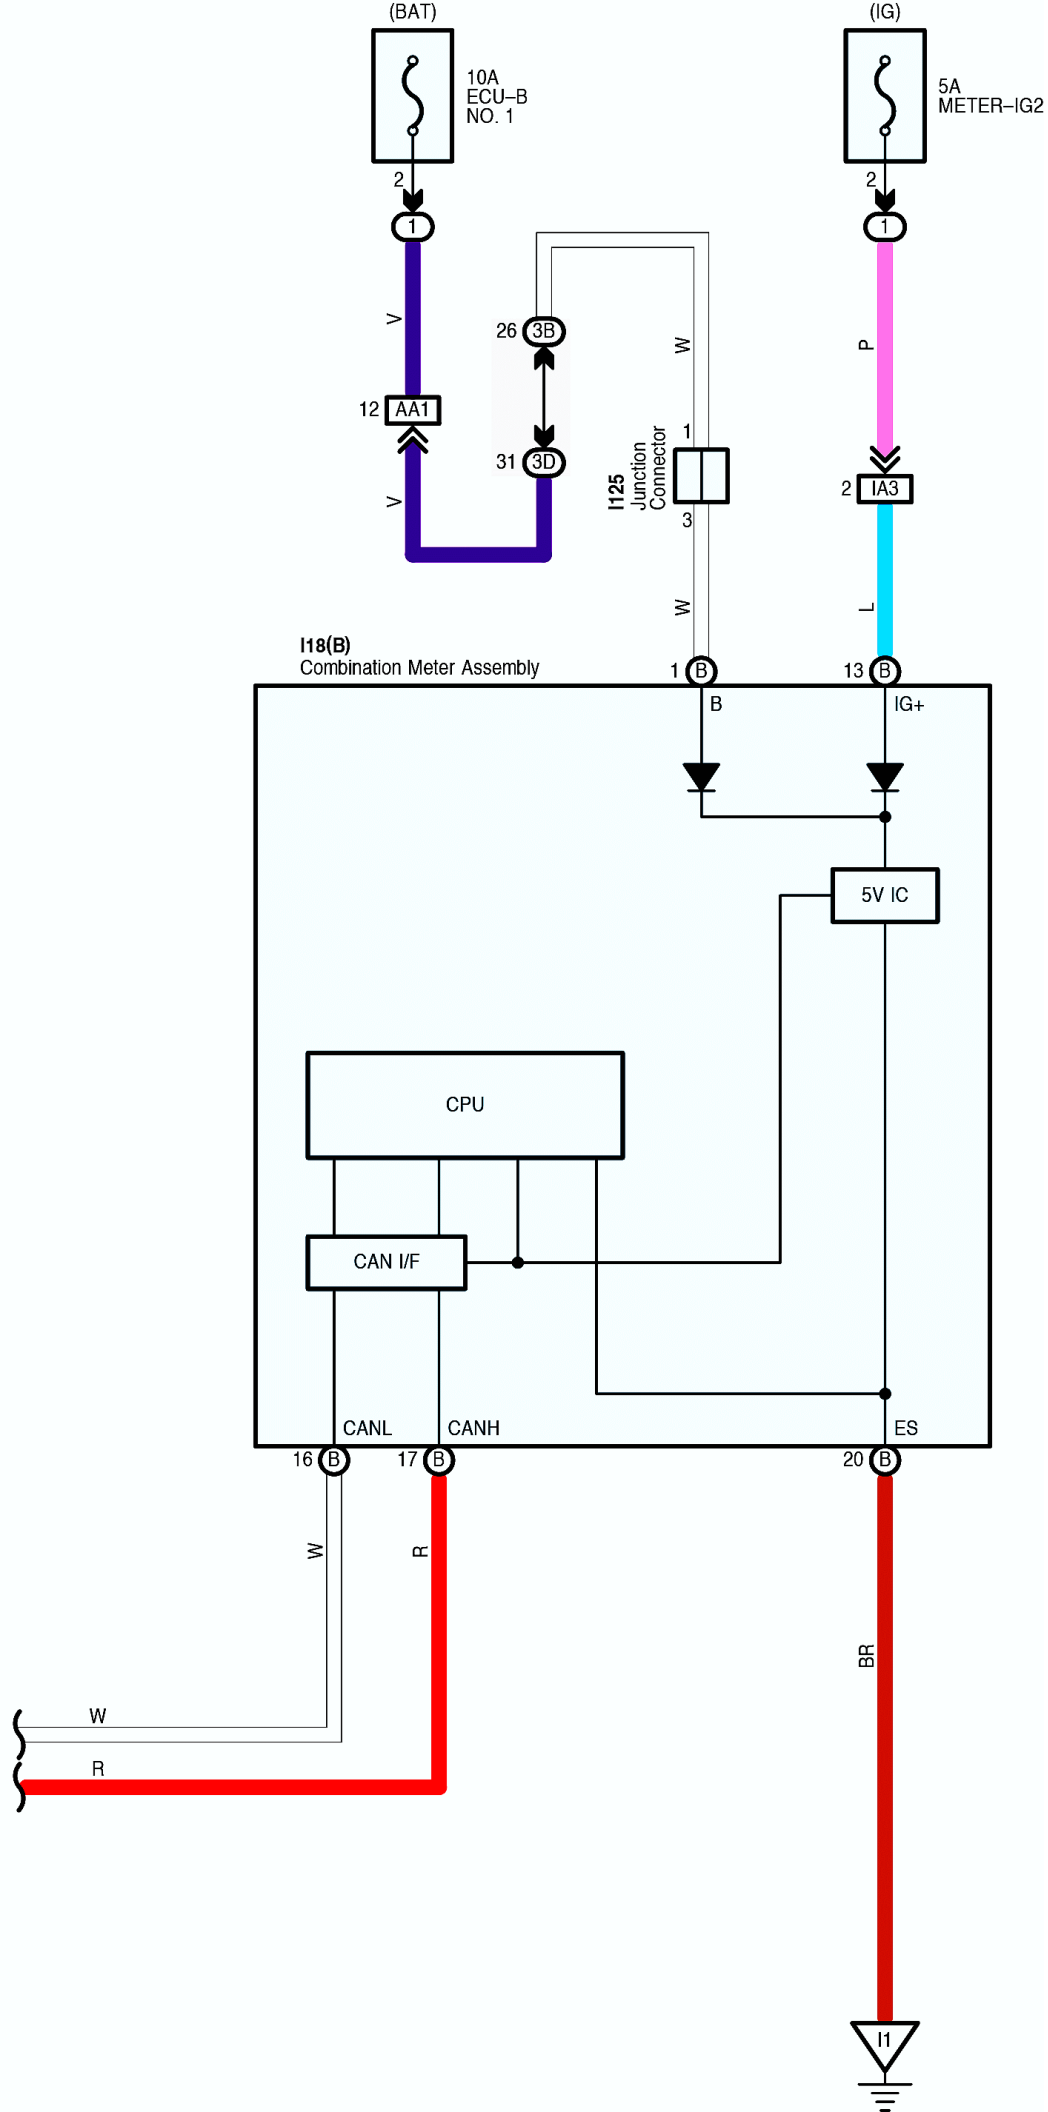


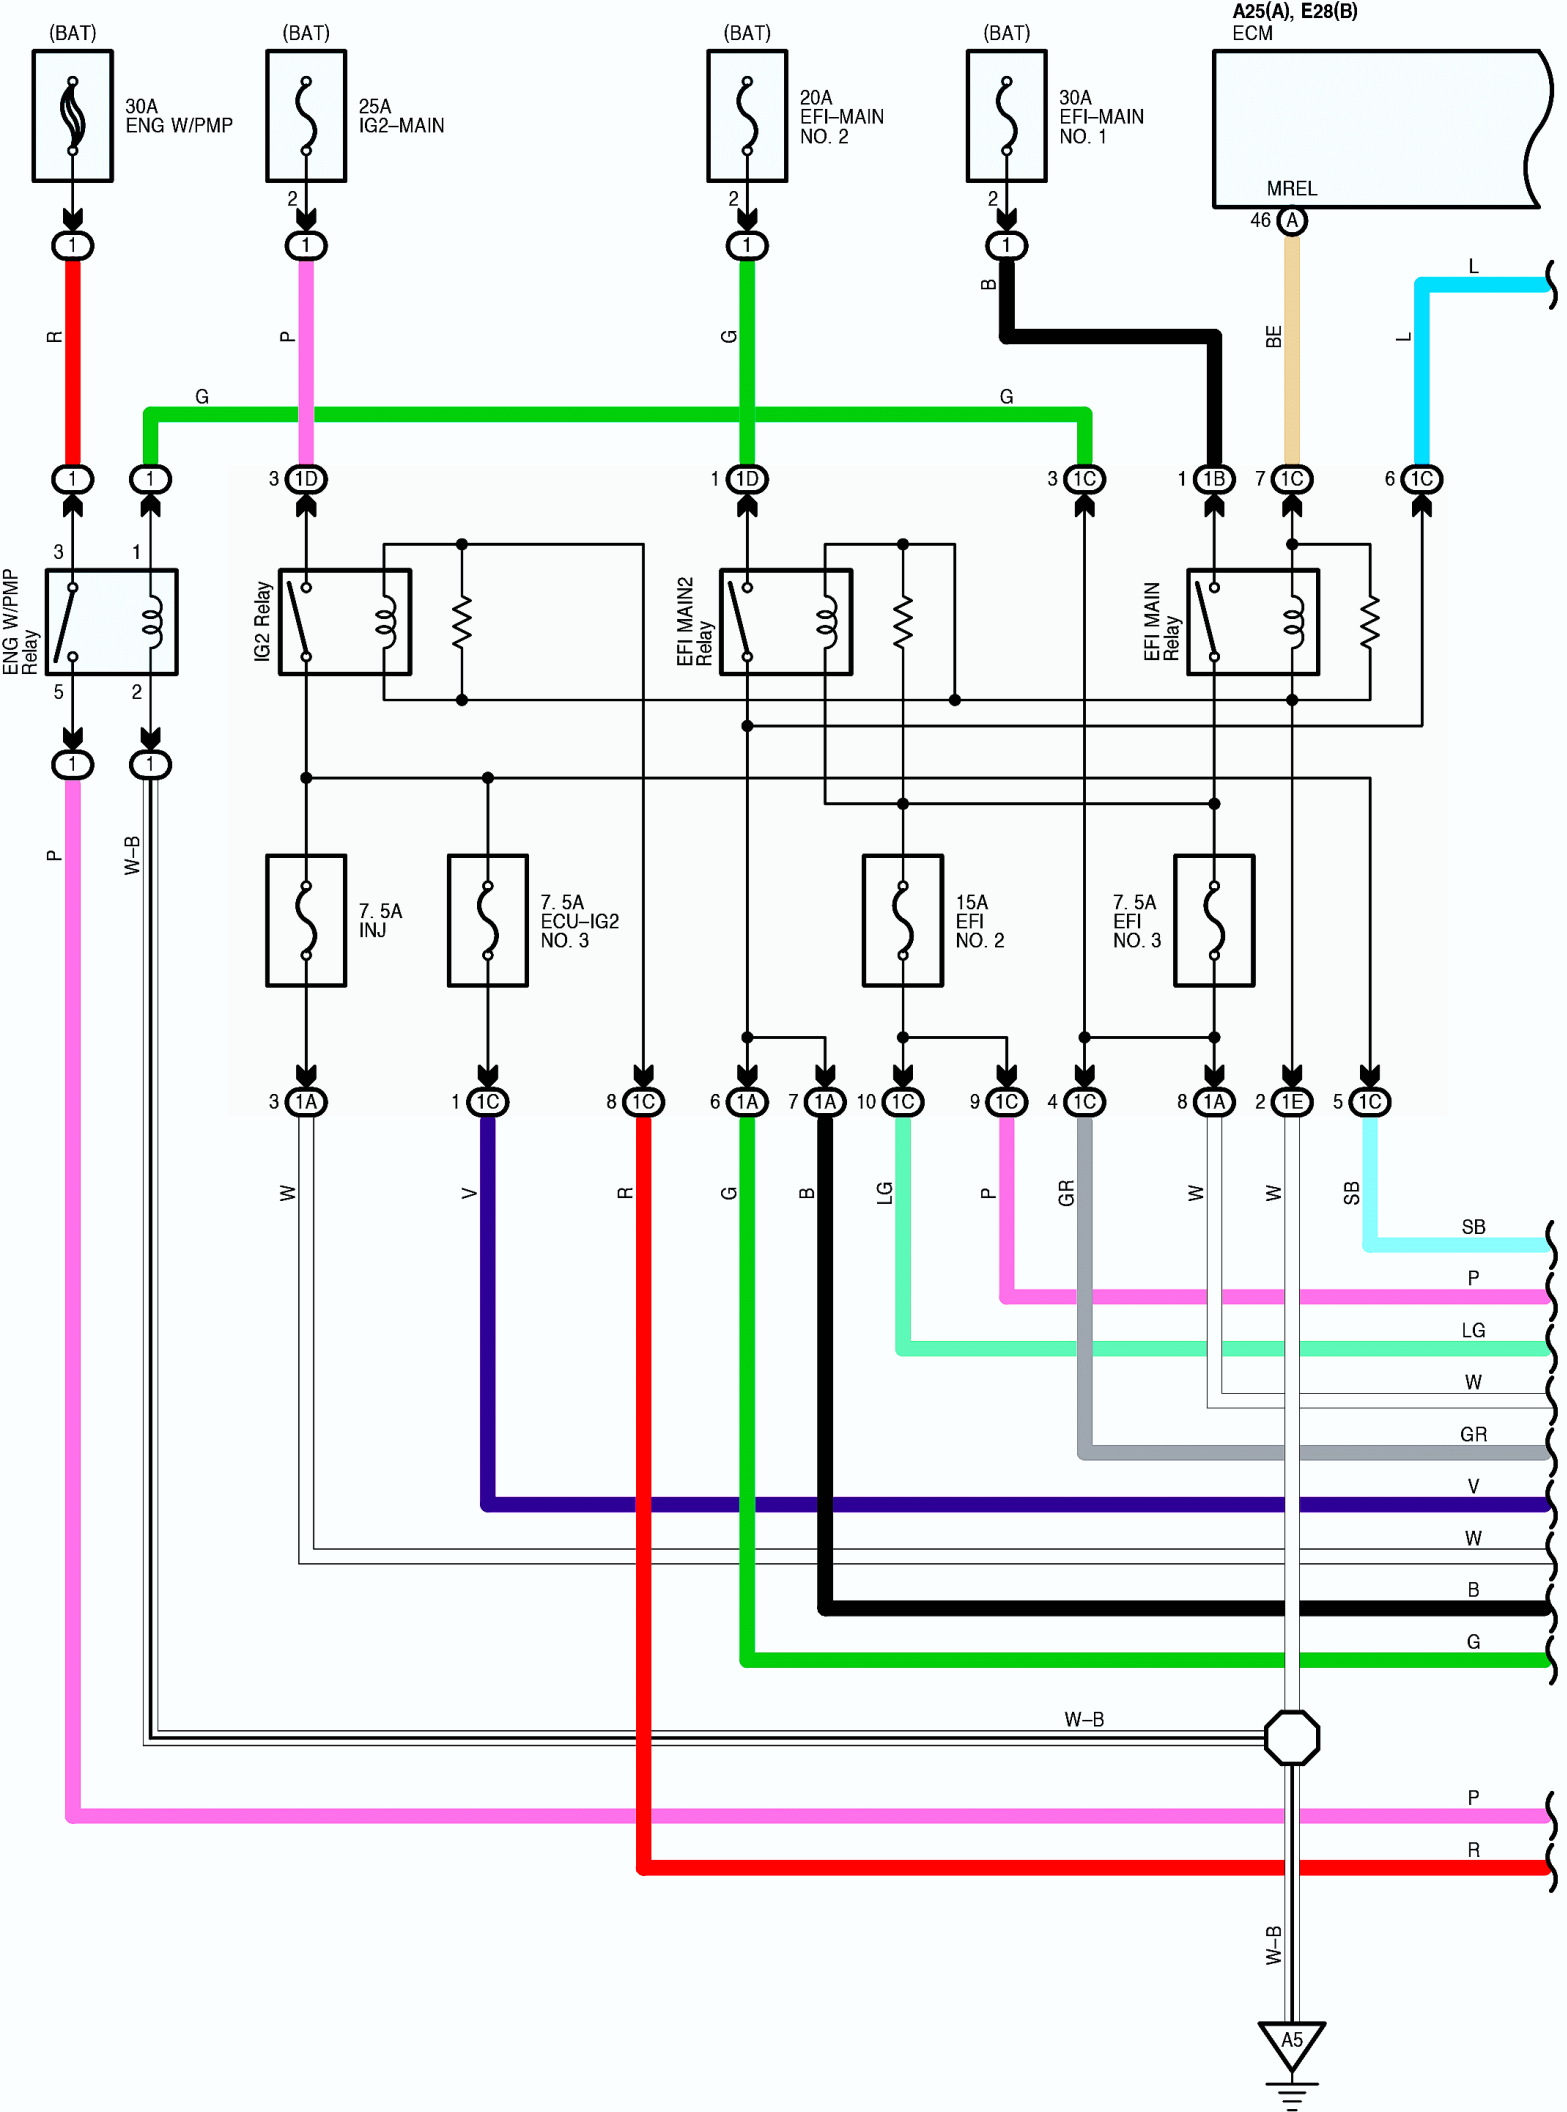


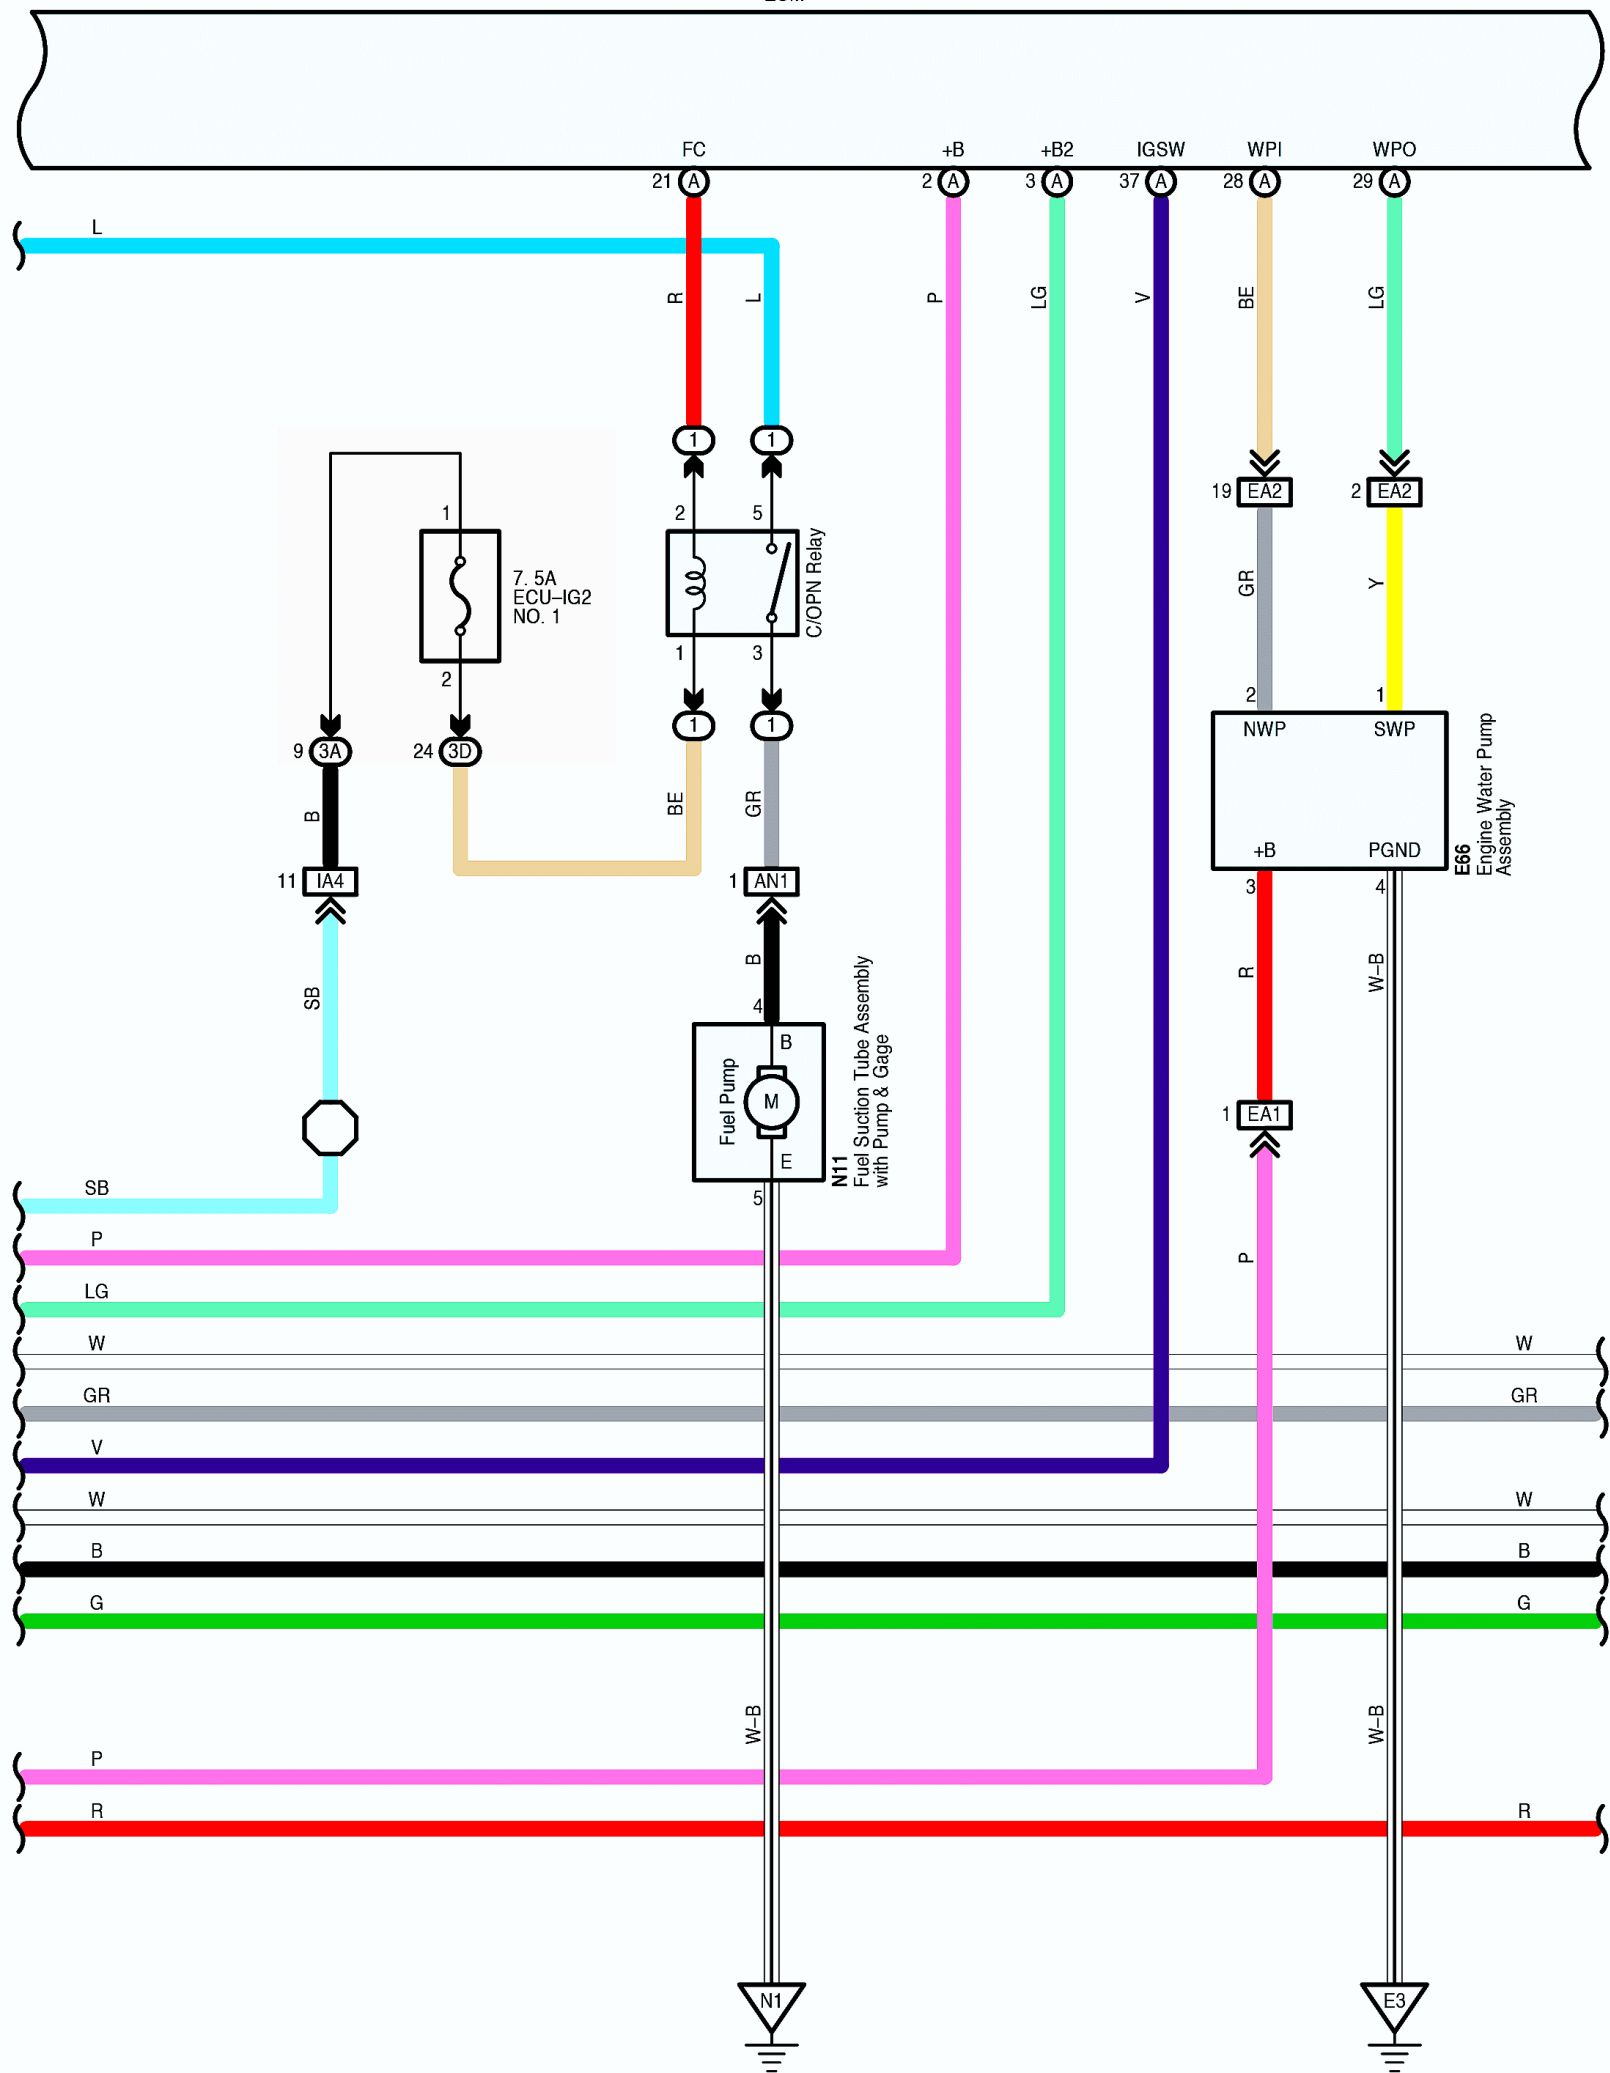

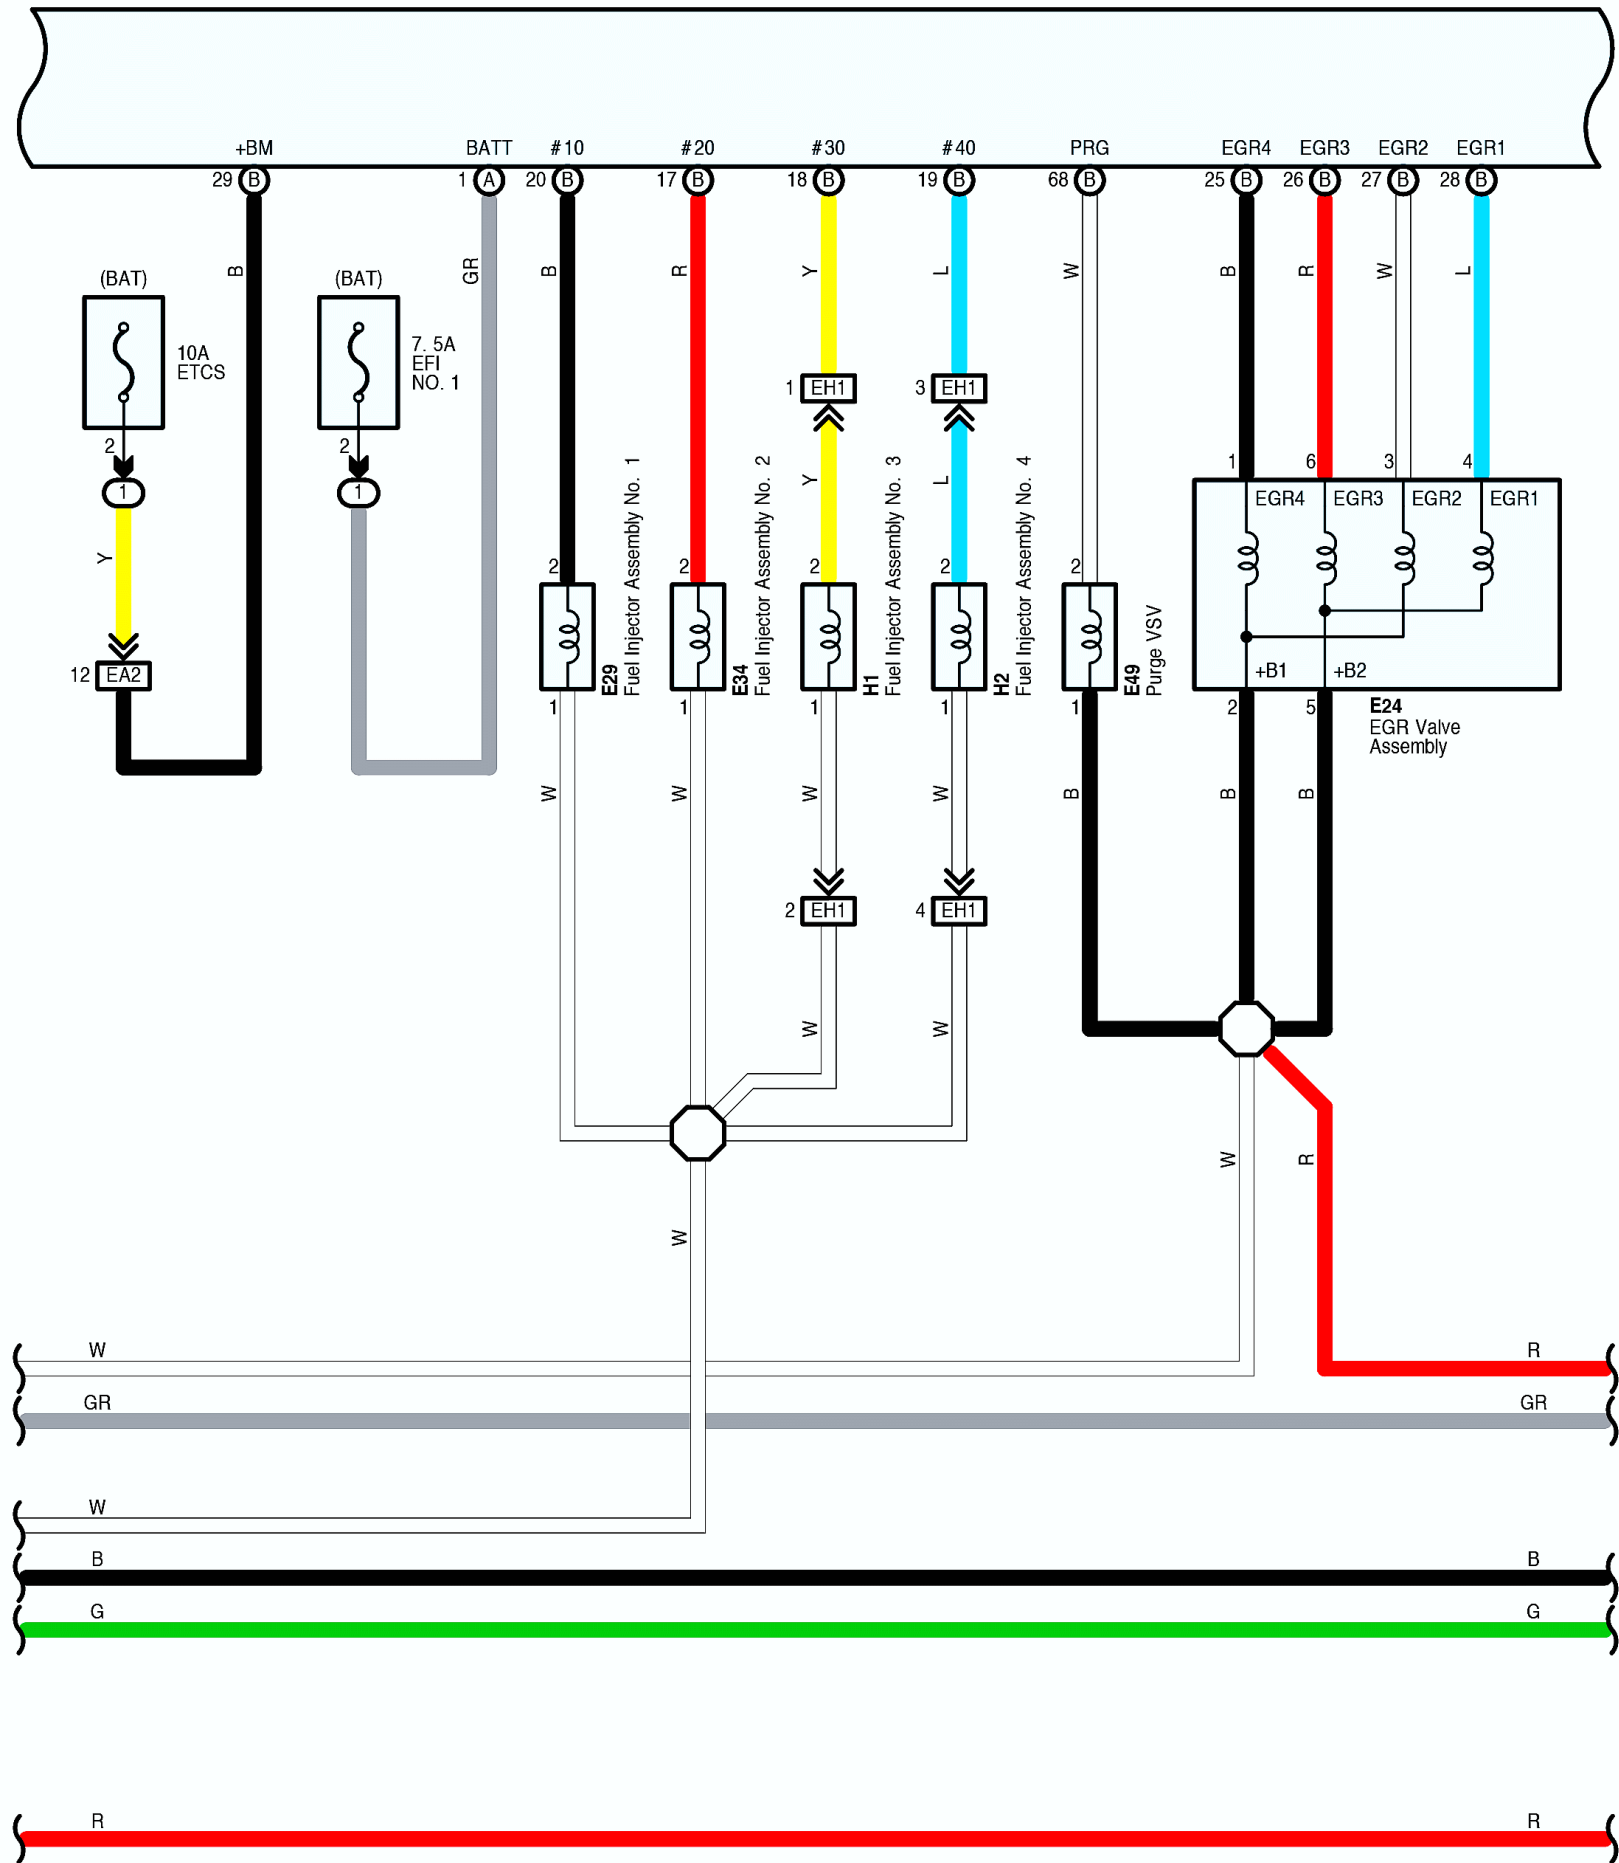

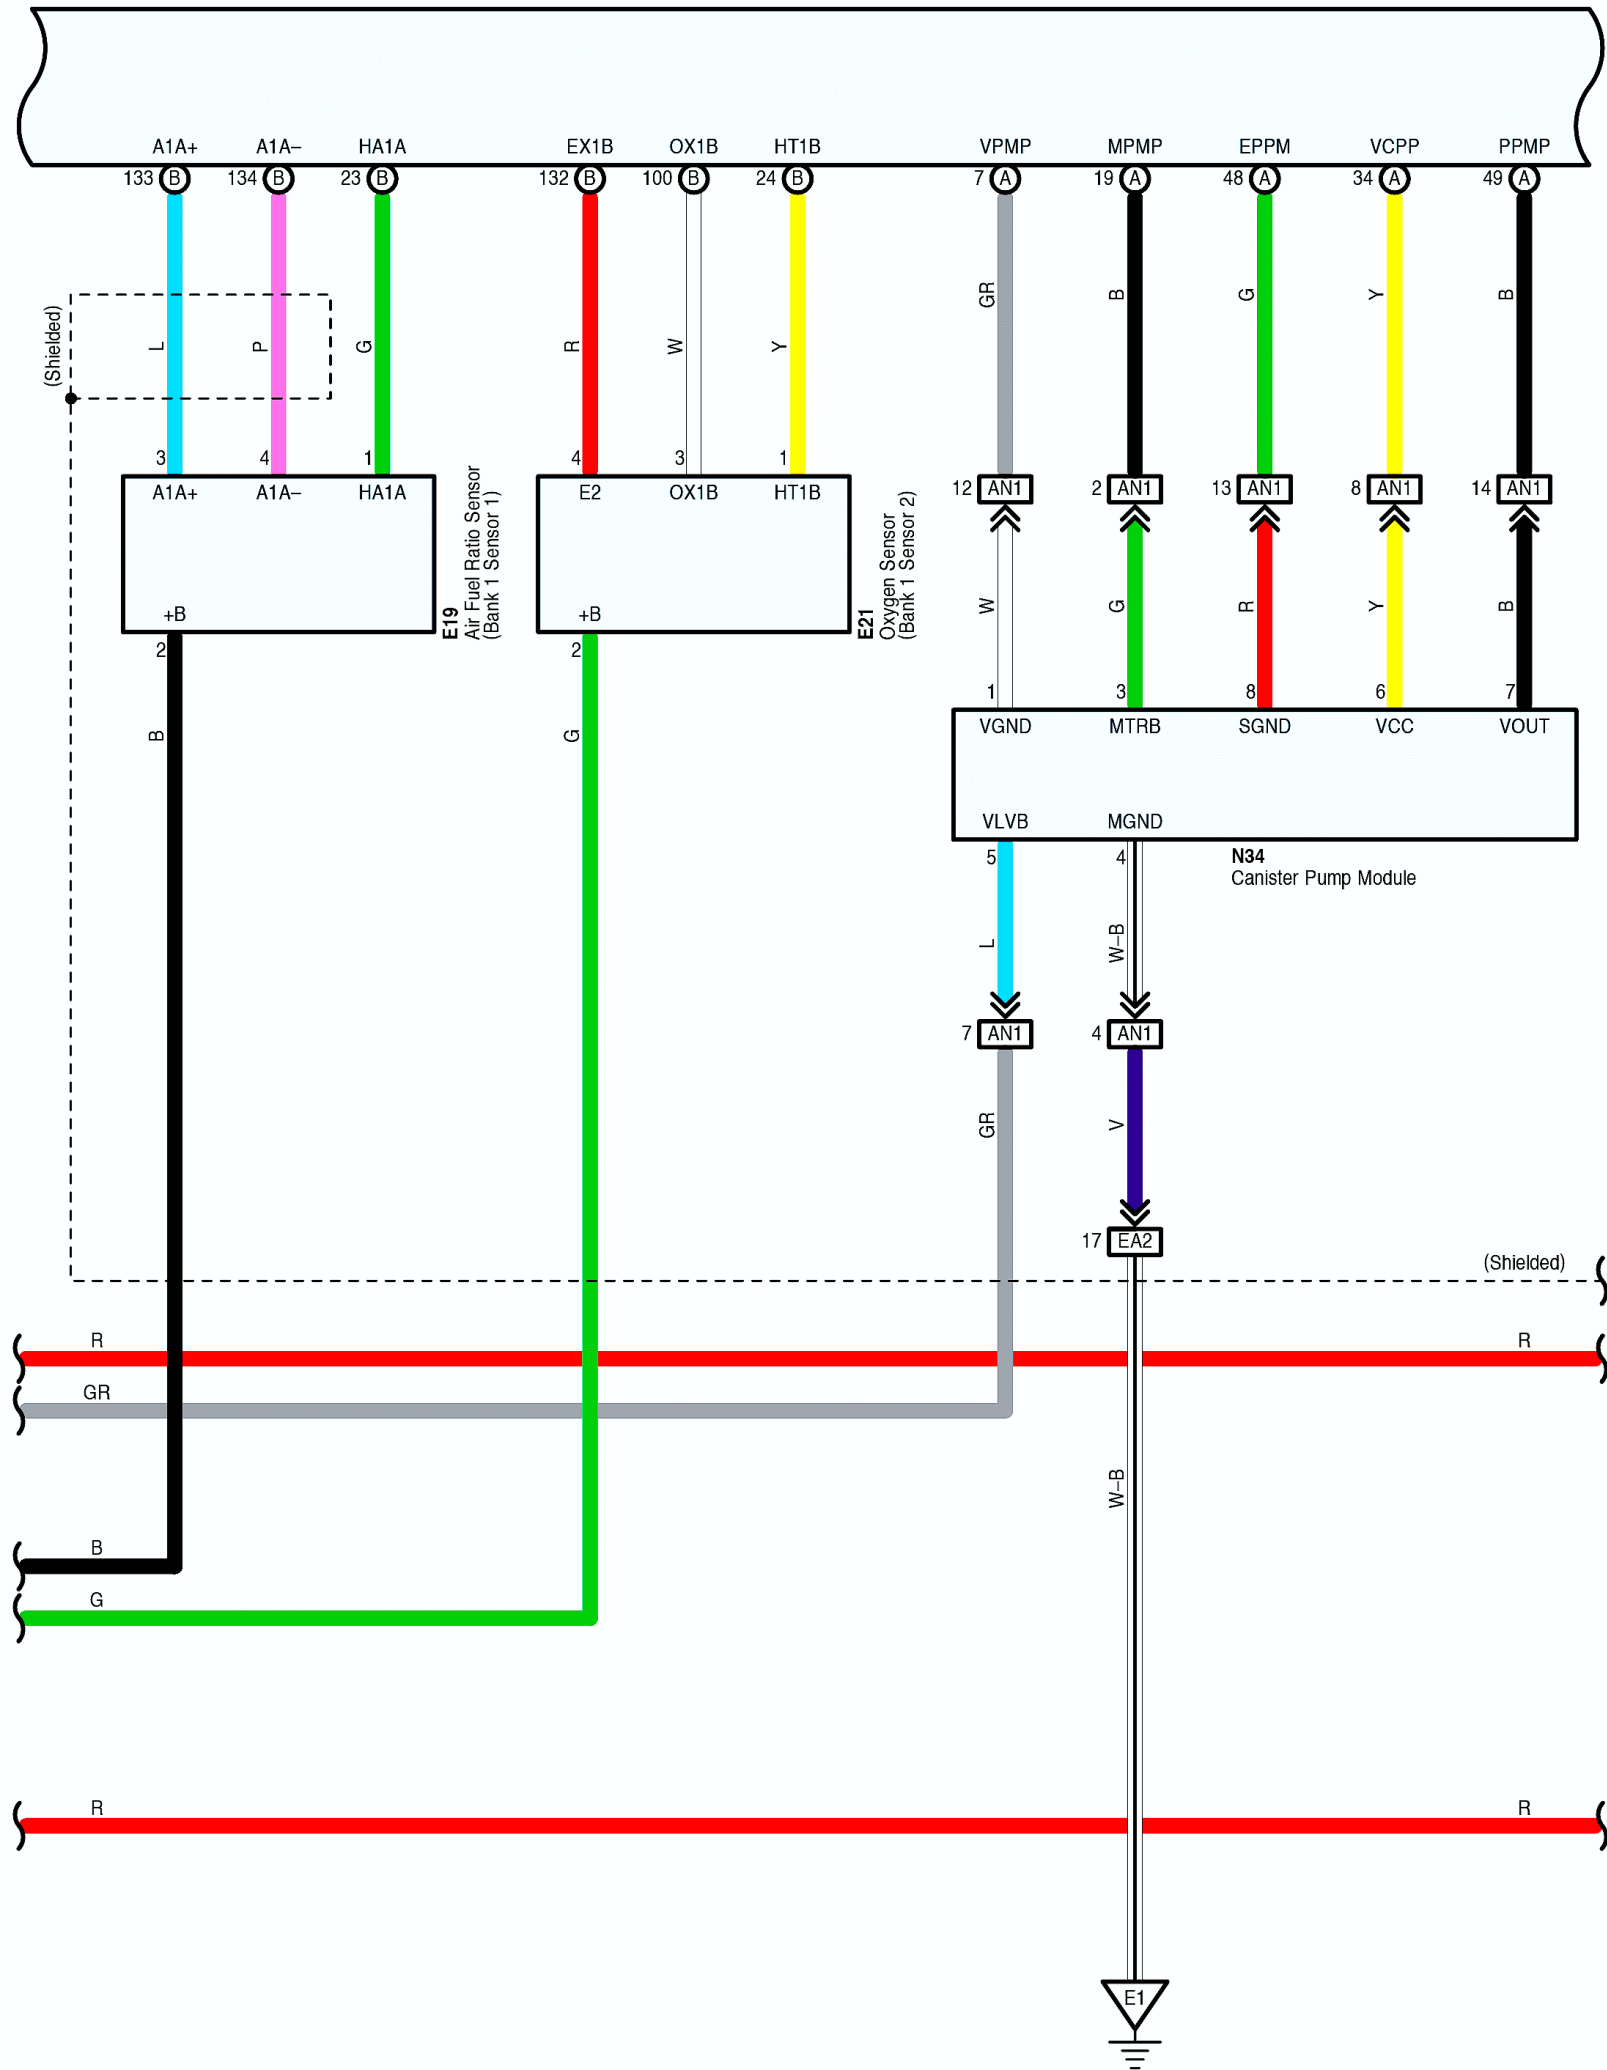

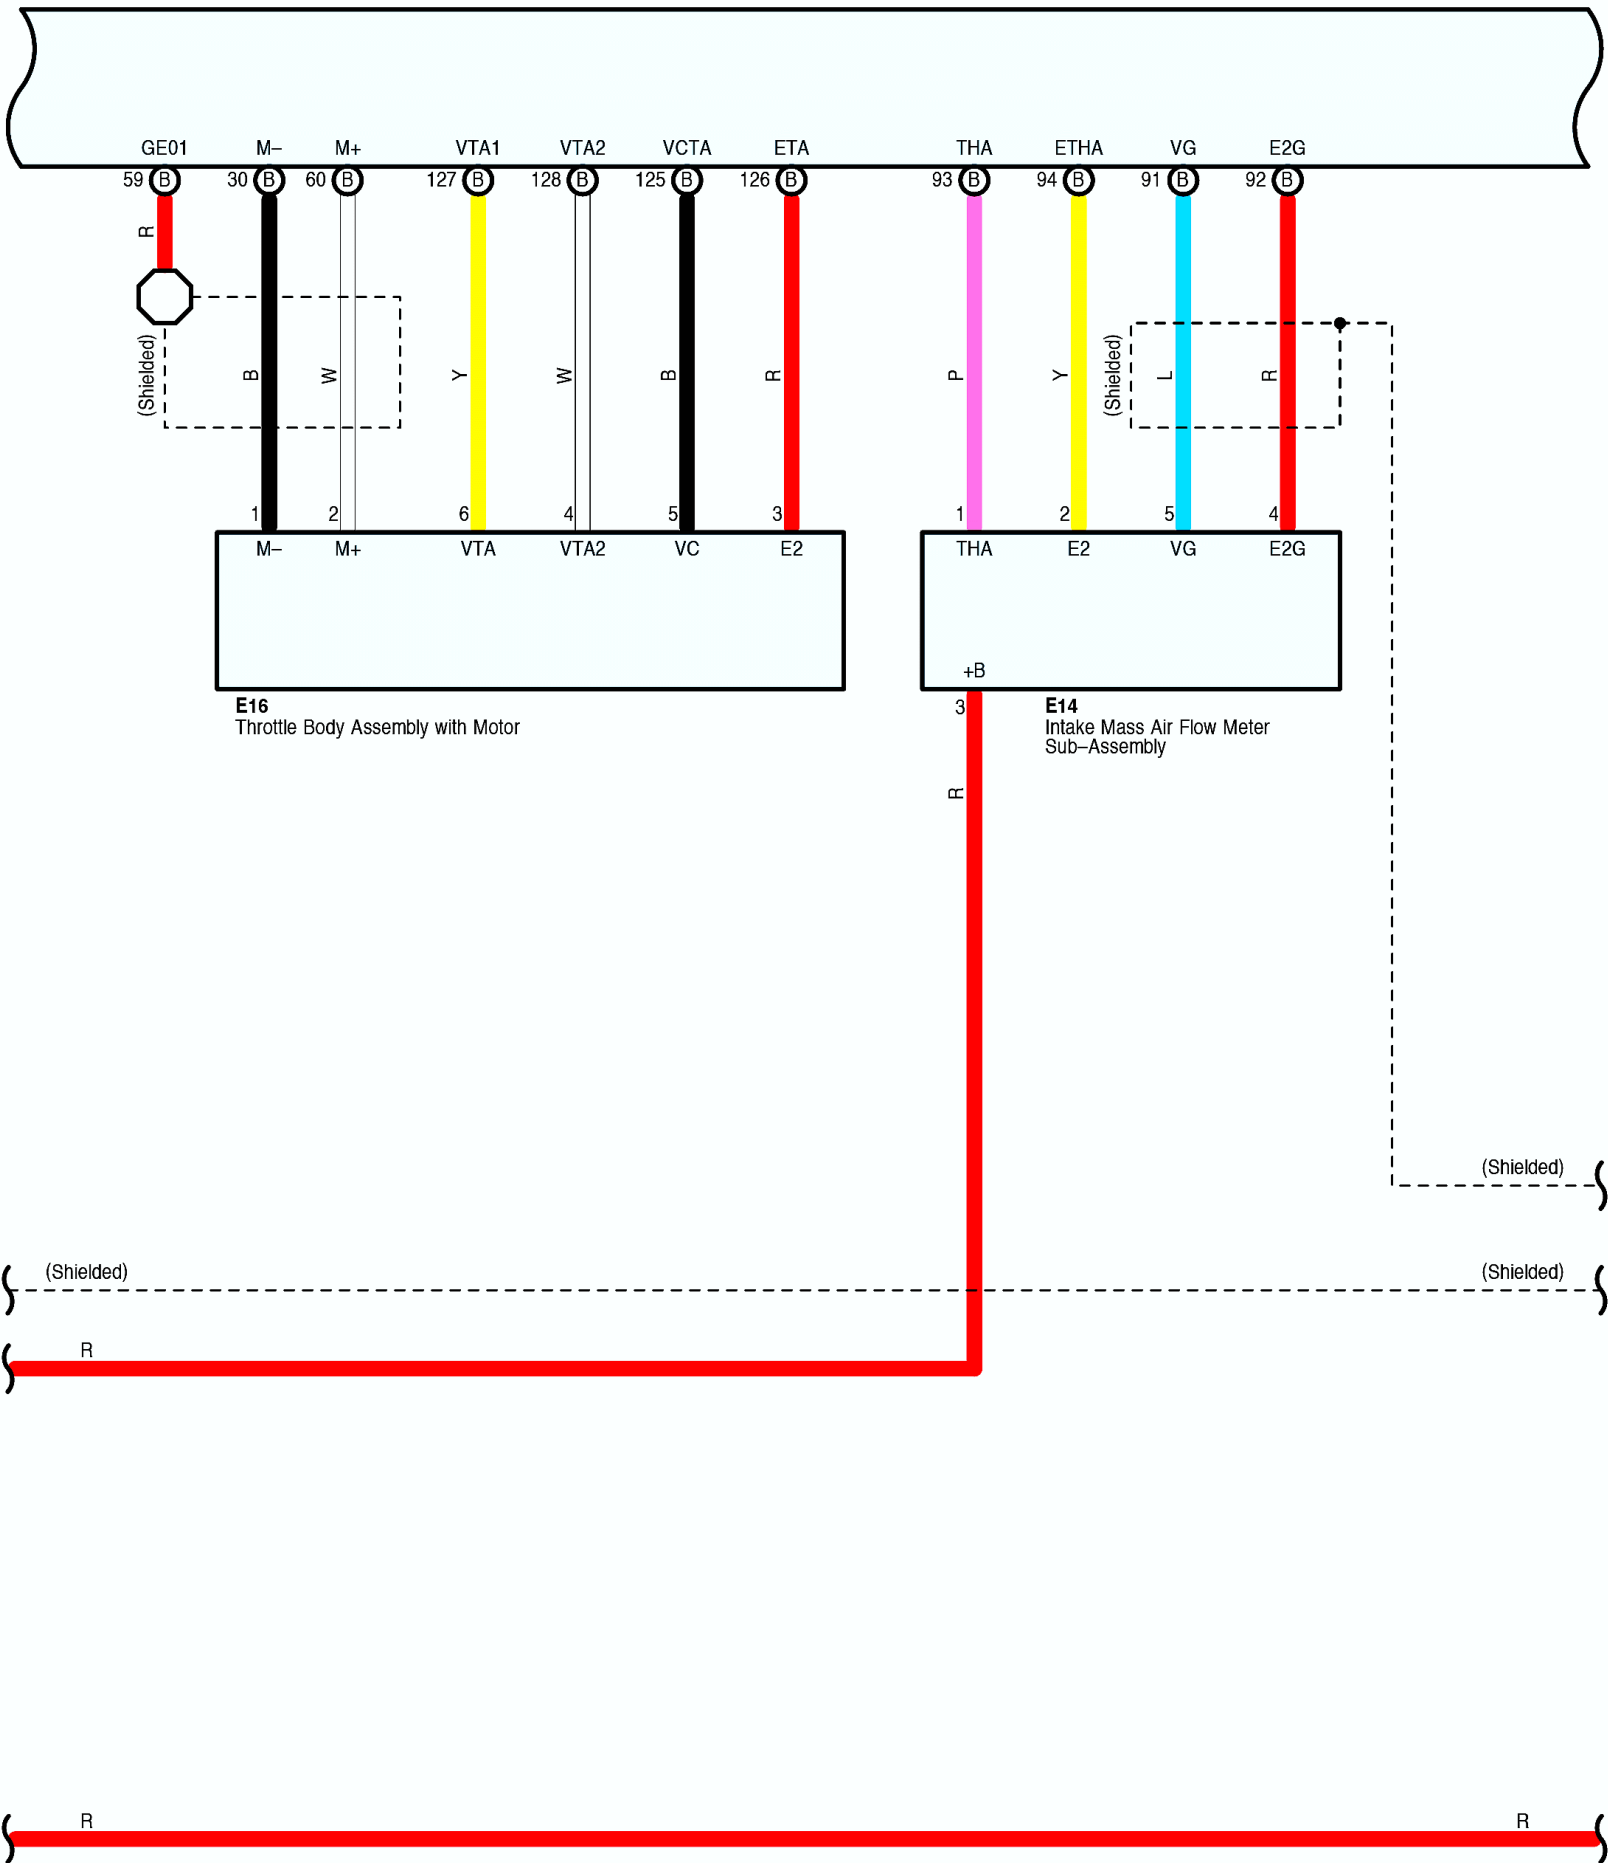

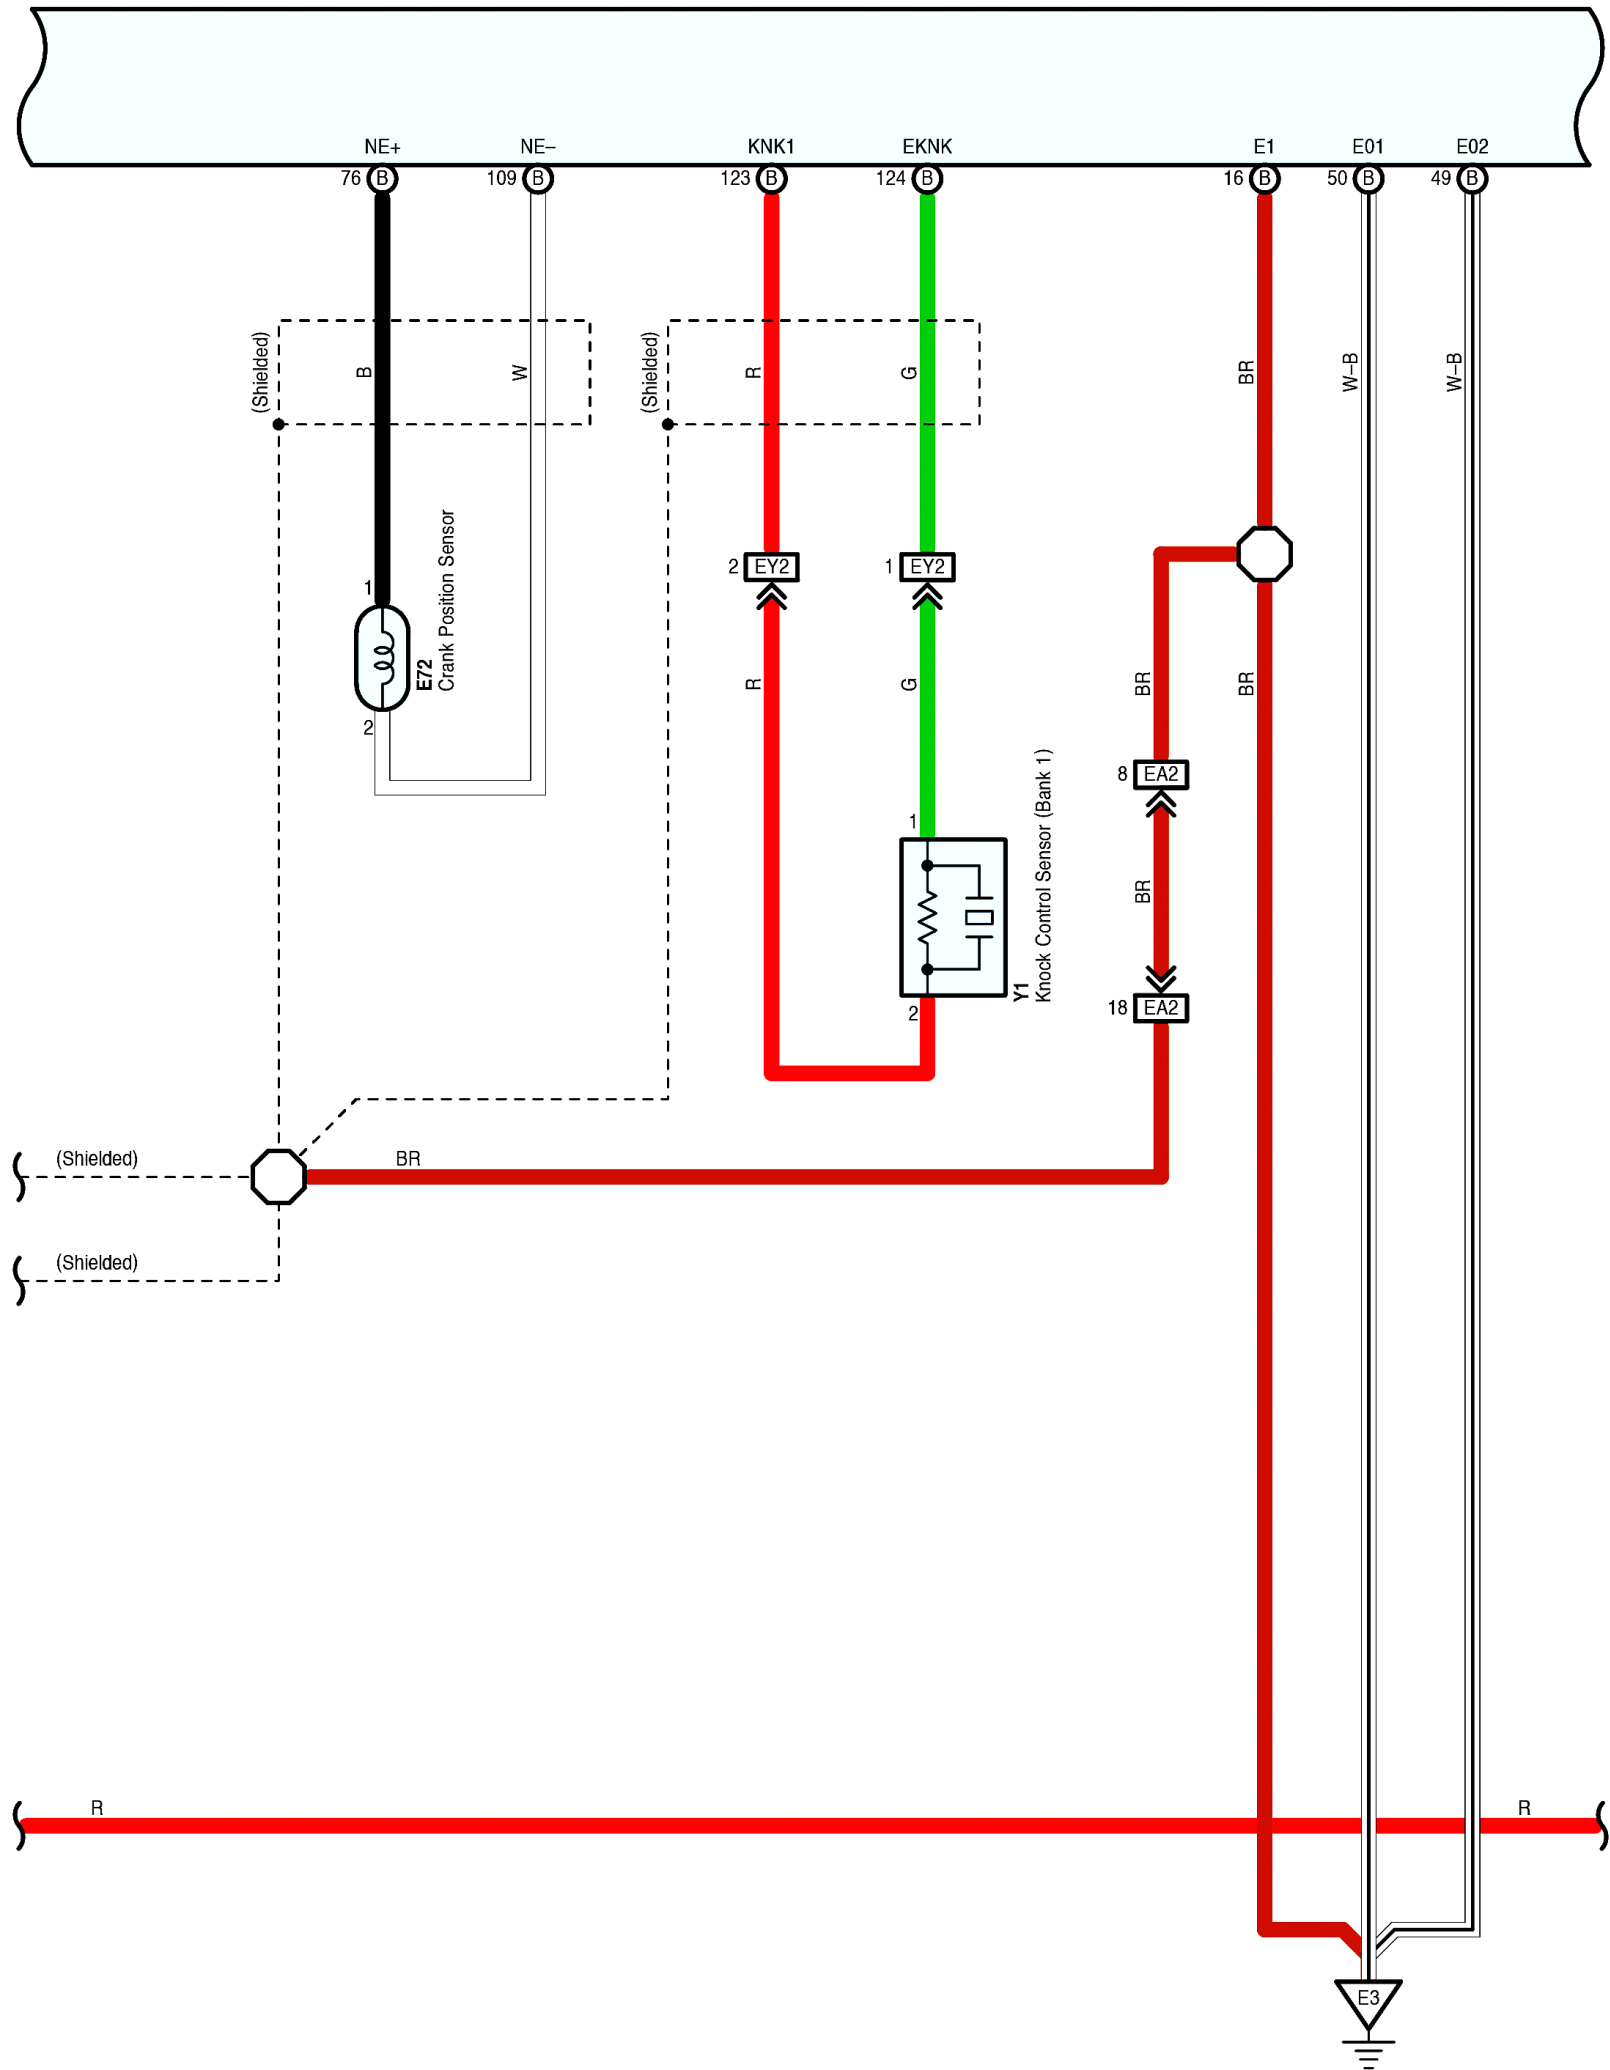

ME01
58 (B)

W-B

E04
53 (B)

W-B

EC
14 (A)

W-B

VV1+
82 (B)

V

1

VVI+

VCV1
113 (B)

B

3

VC

VV1-
114 (B)

L

2

VVI-

VCPM
78 (B)

B

3

VC

EPIM
80 (B)

V

1

E2

PIM
79 (B)

G

2

PIM

E55
VVT Sensor
(Camshaft Position Sensor)


E25
E. F. I. Vacuum Sensor Assembly


R


R



A73
Junction
Connector

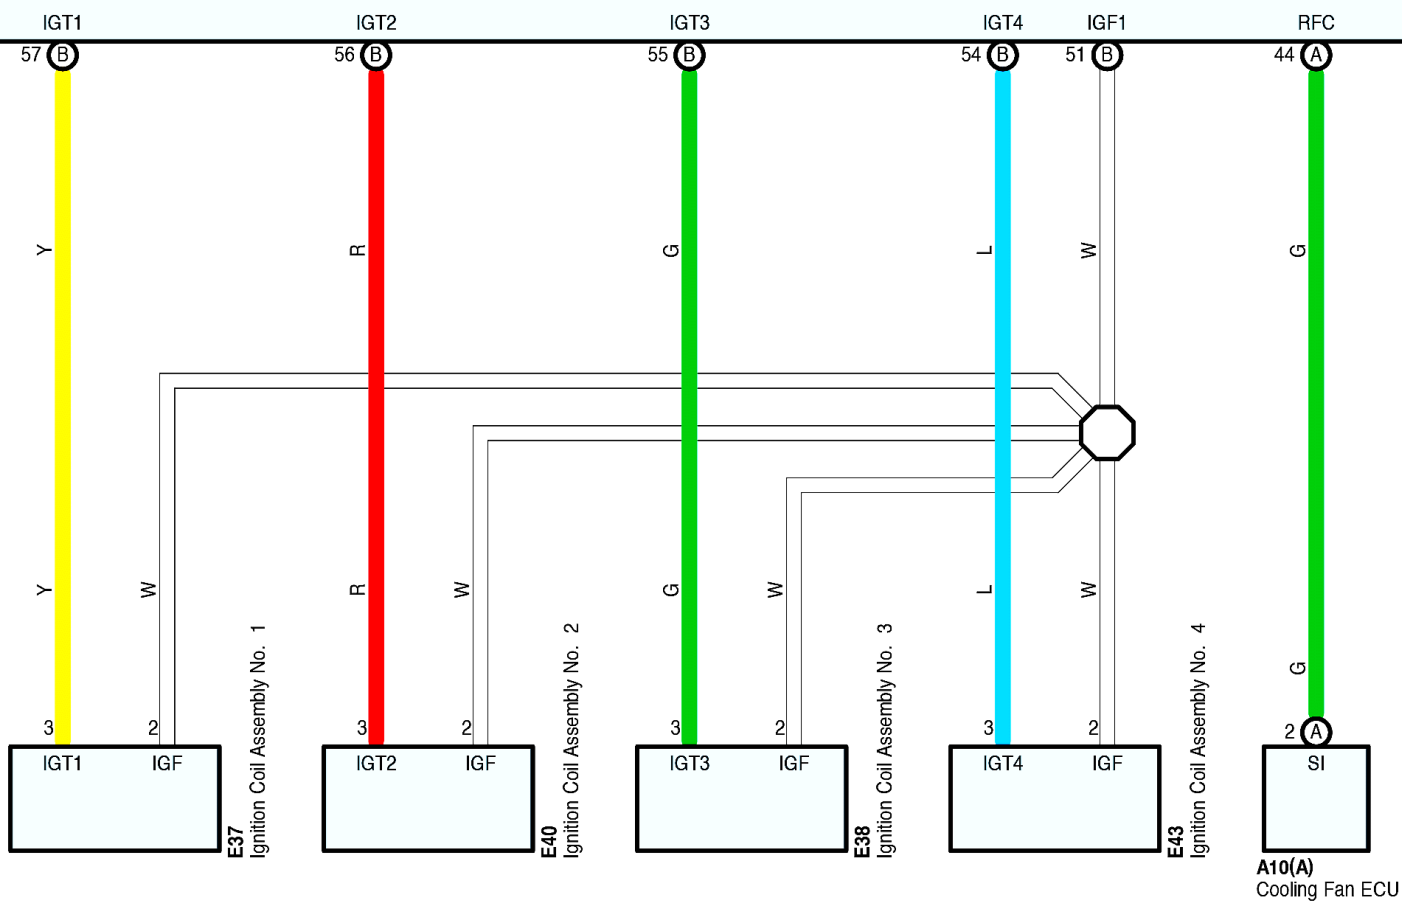

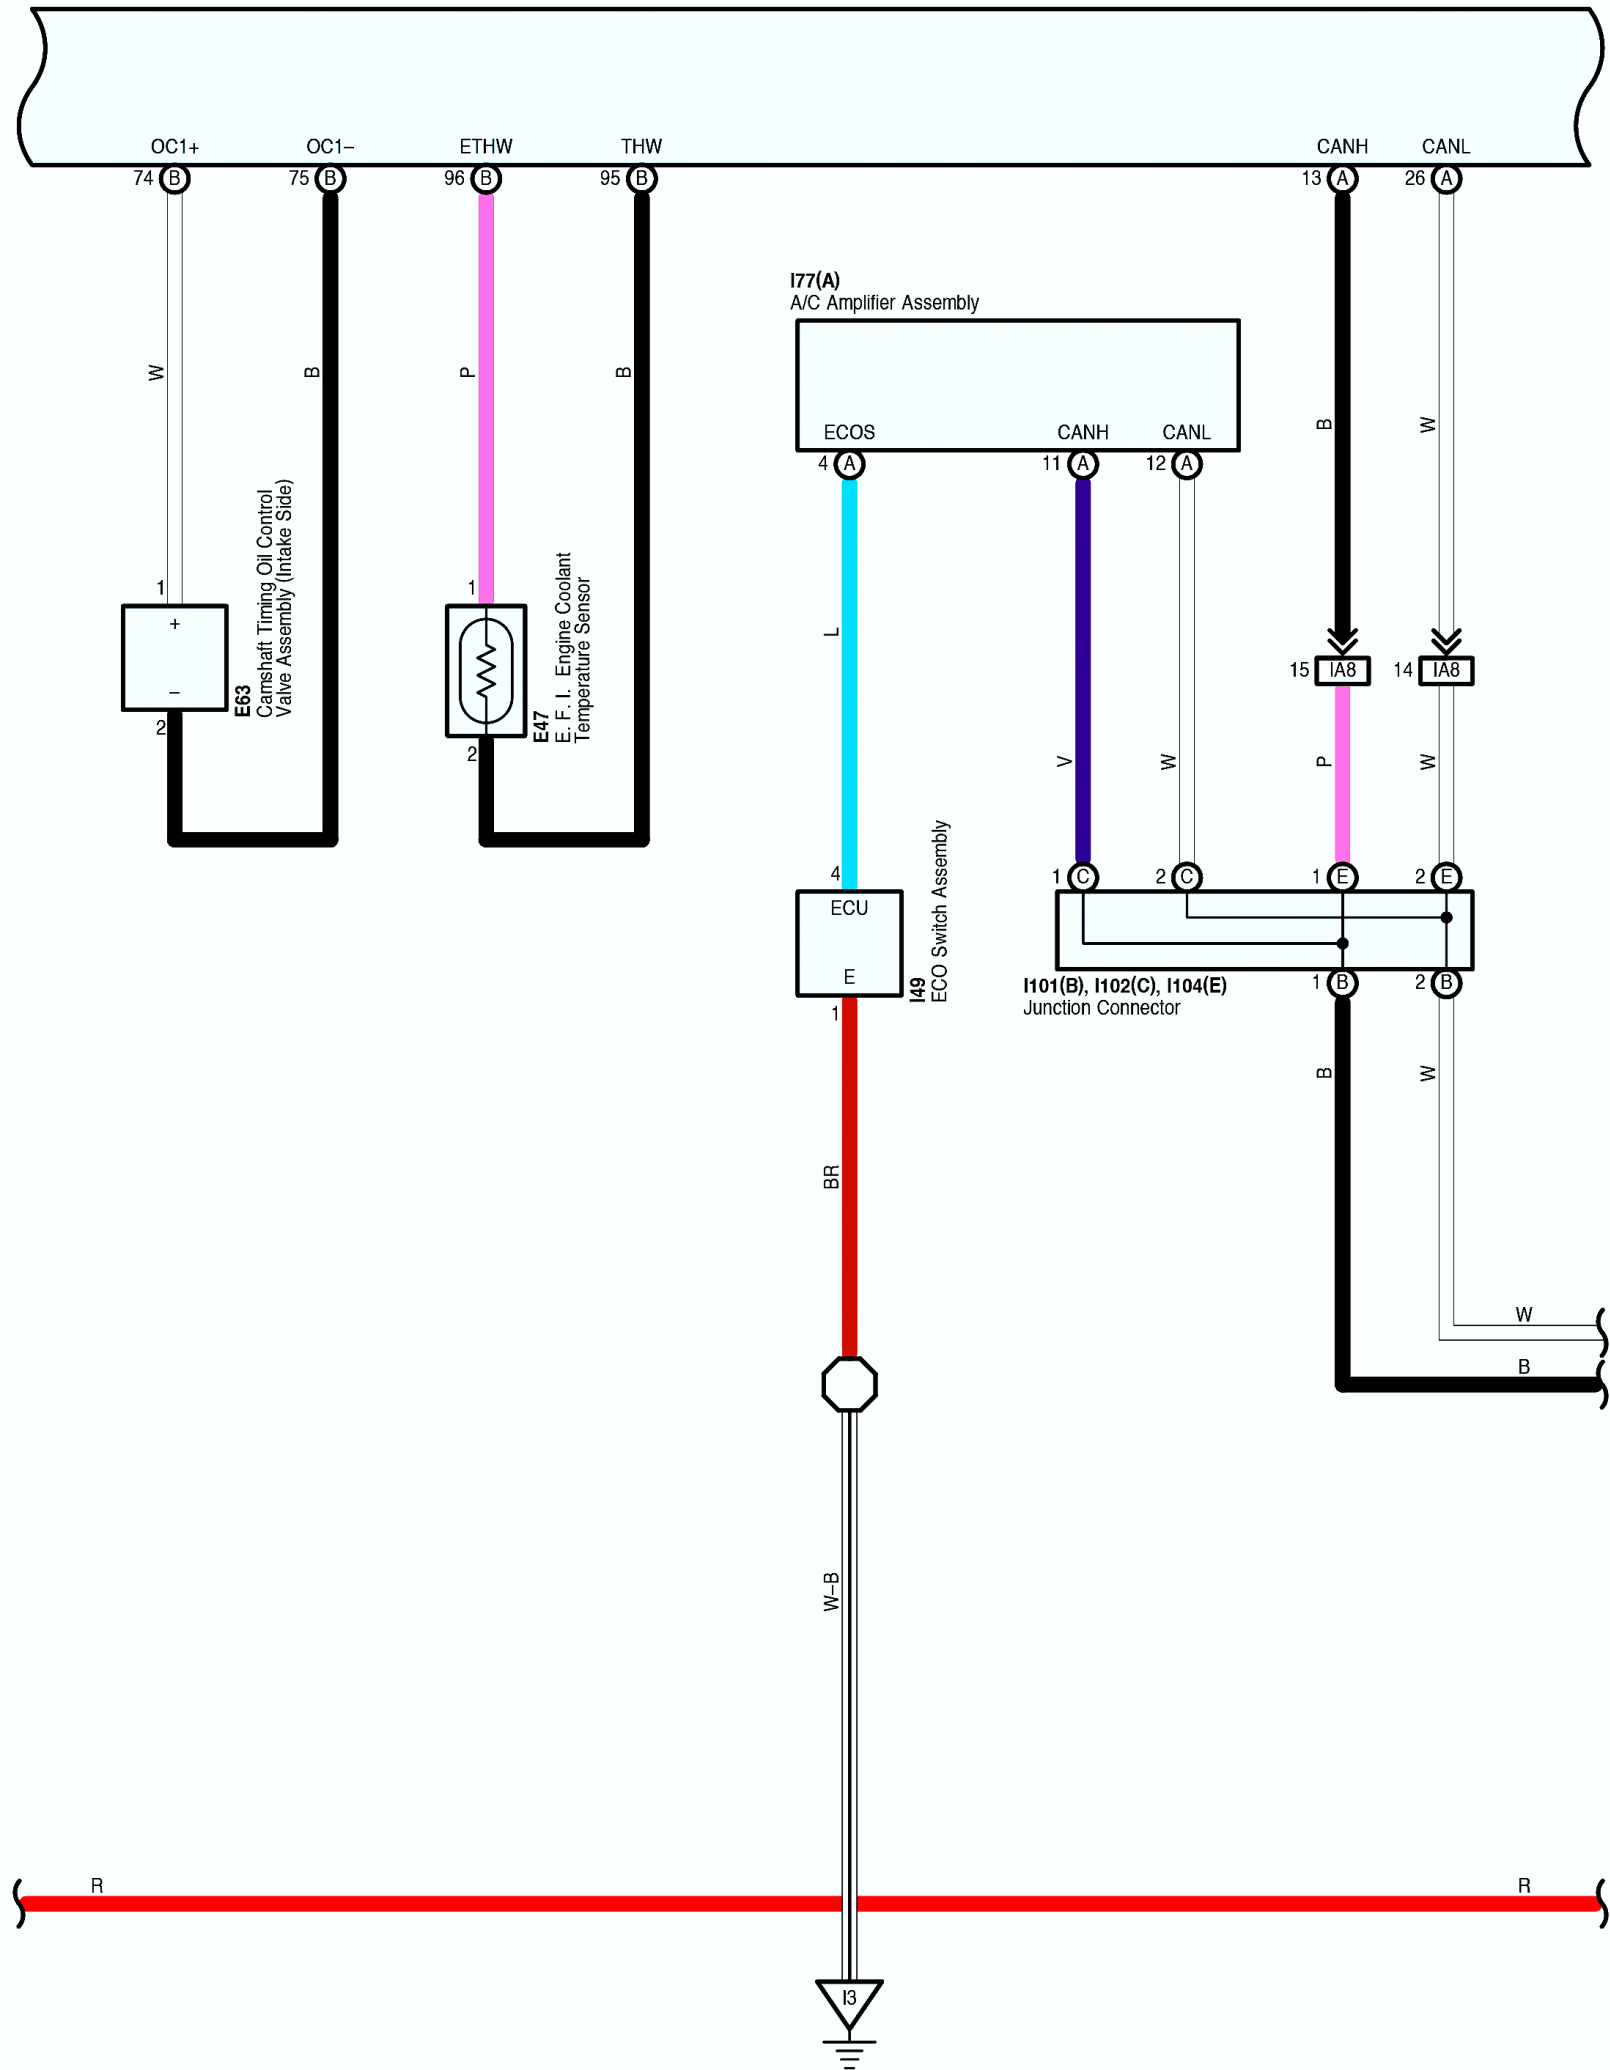

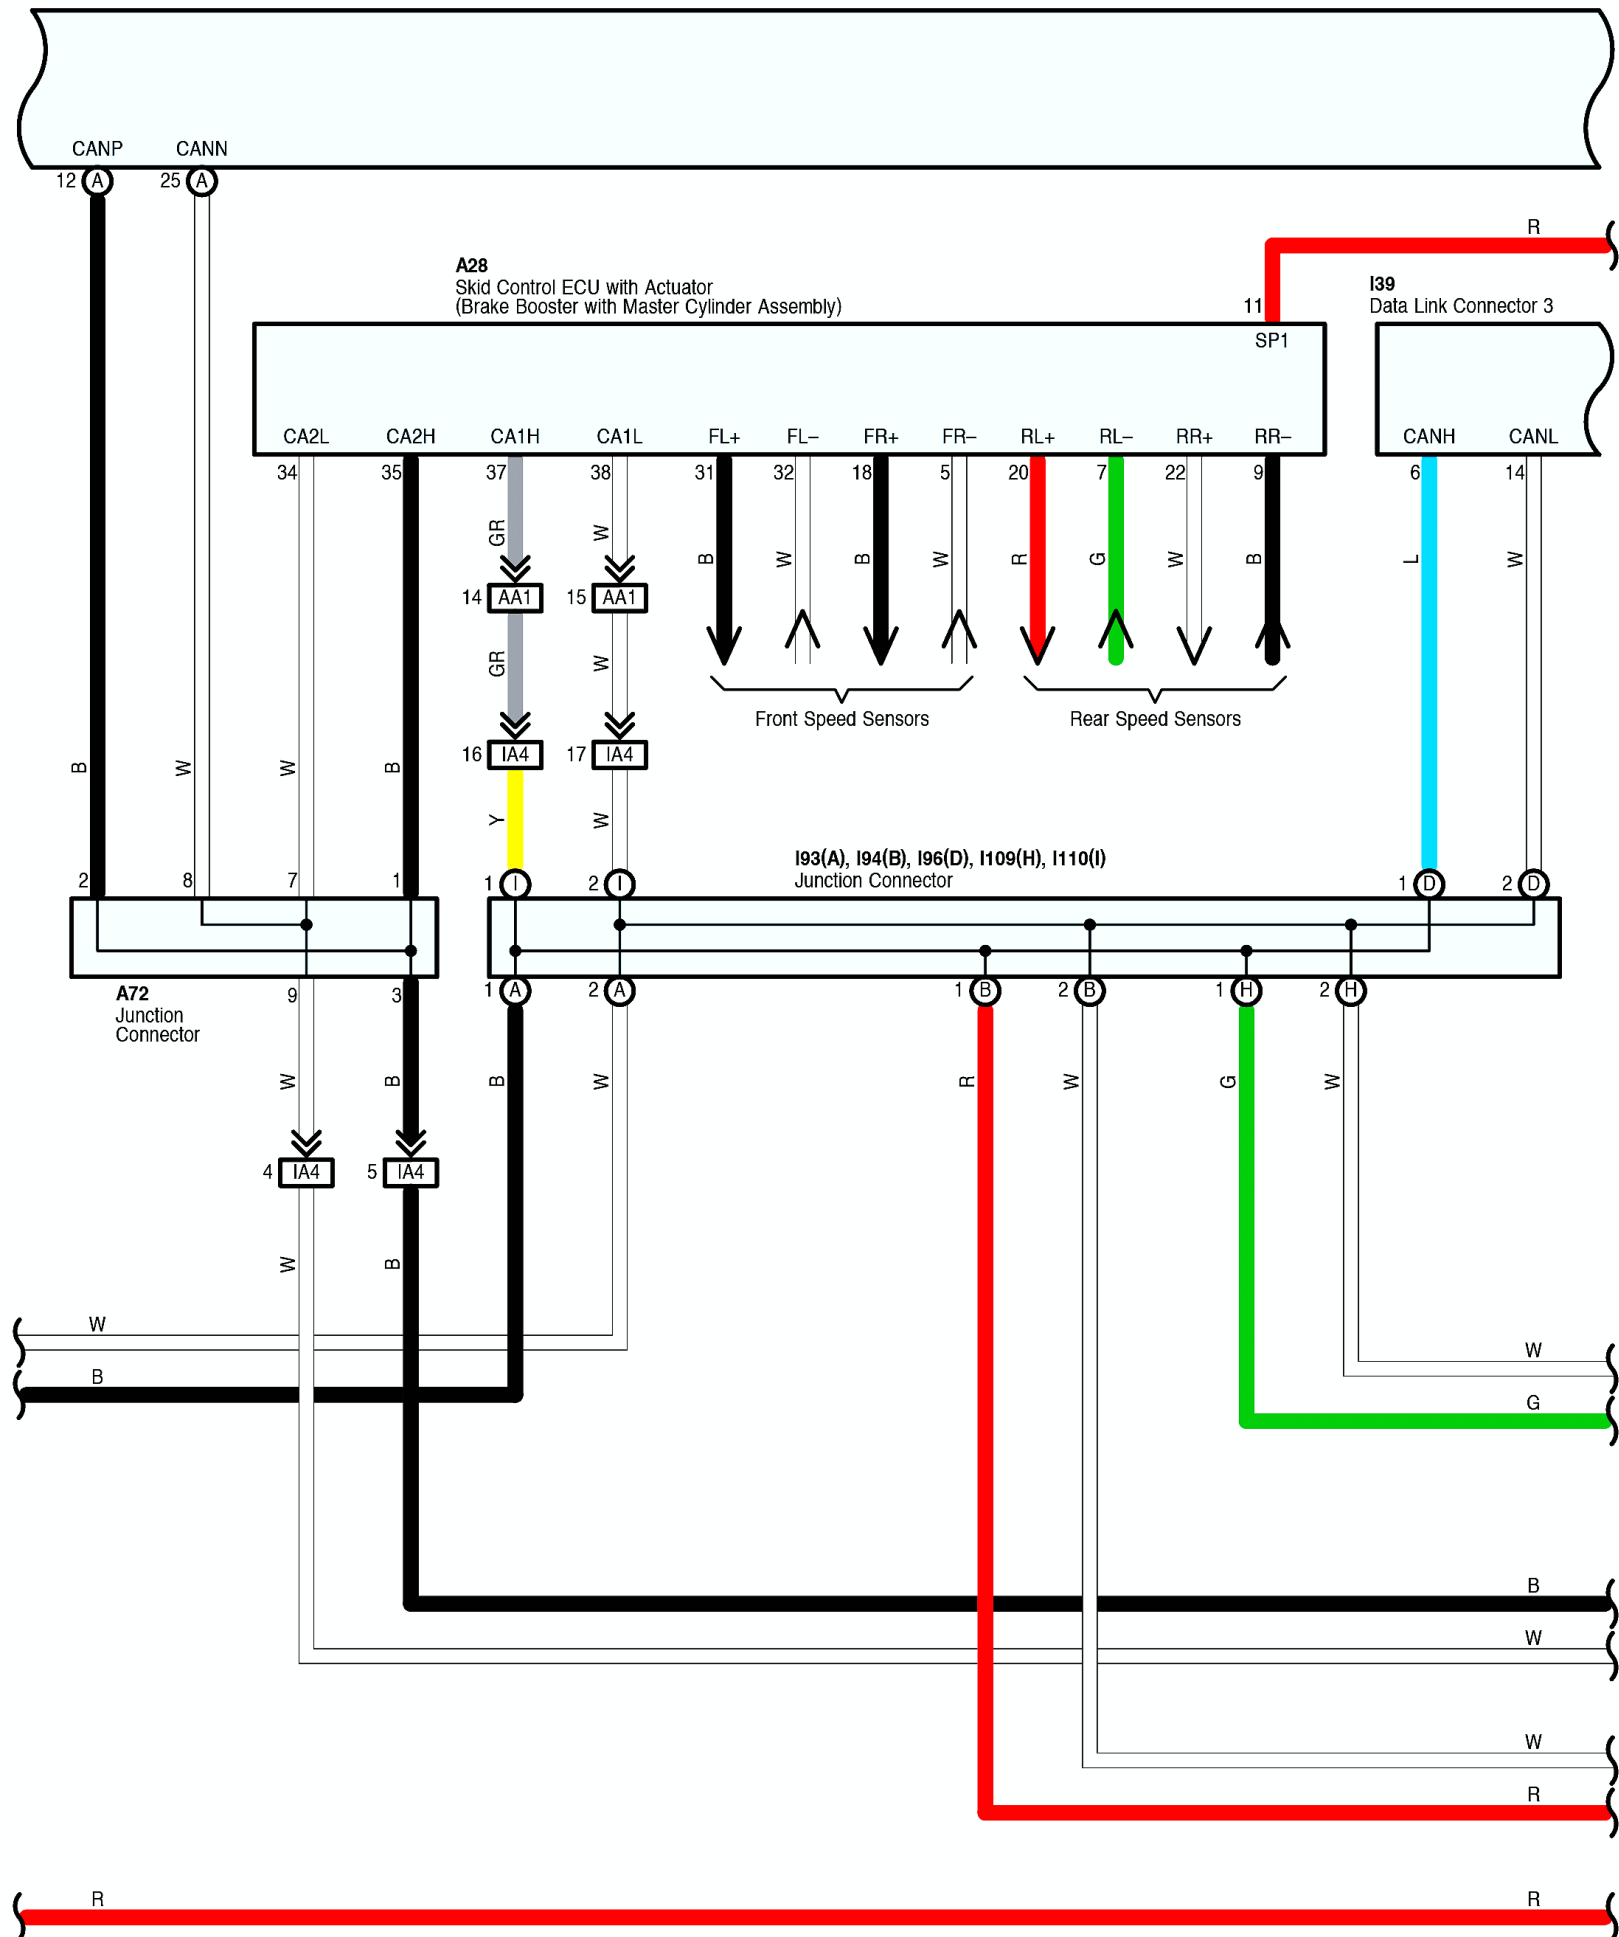


A25(A), E28(B)
ECM


(BAT)

7.5A
AM2


A38(A), A39(B), I3(C), I4(D)
Power Management Control ECU

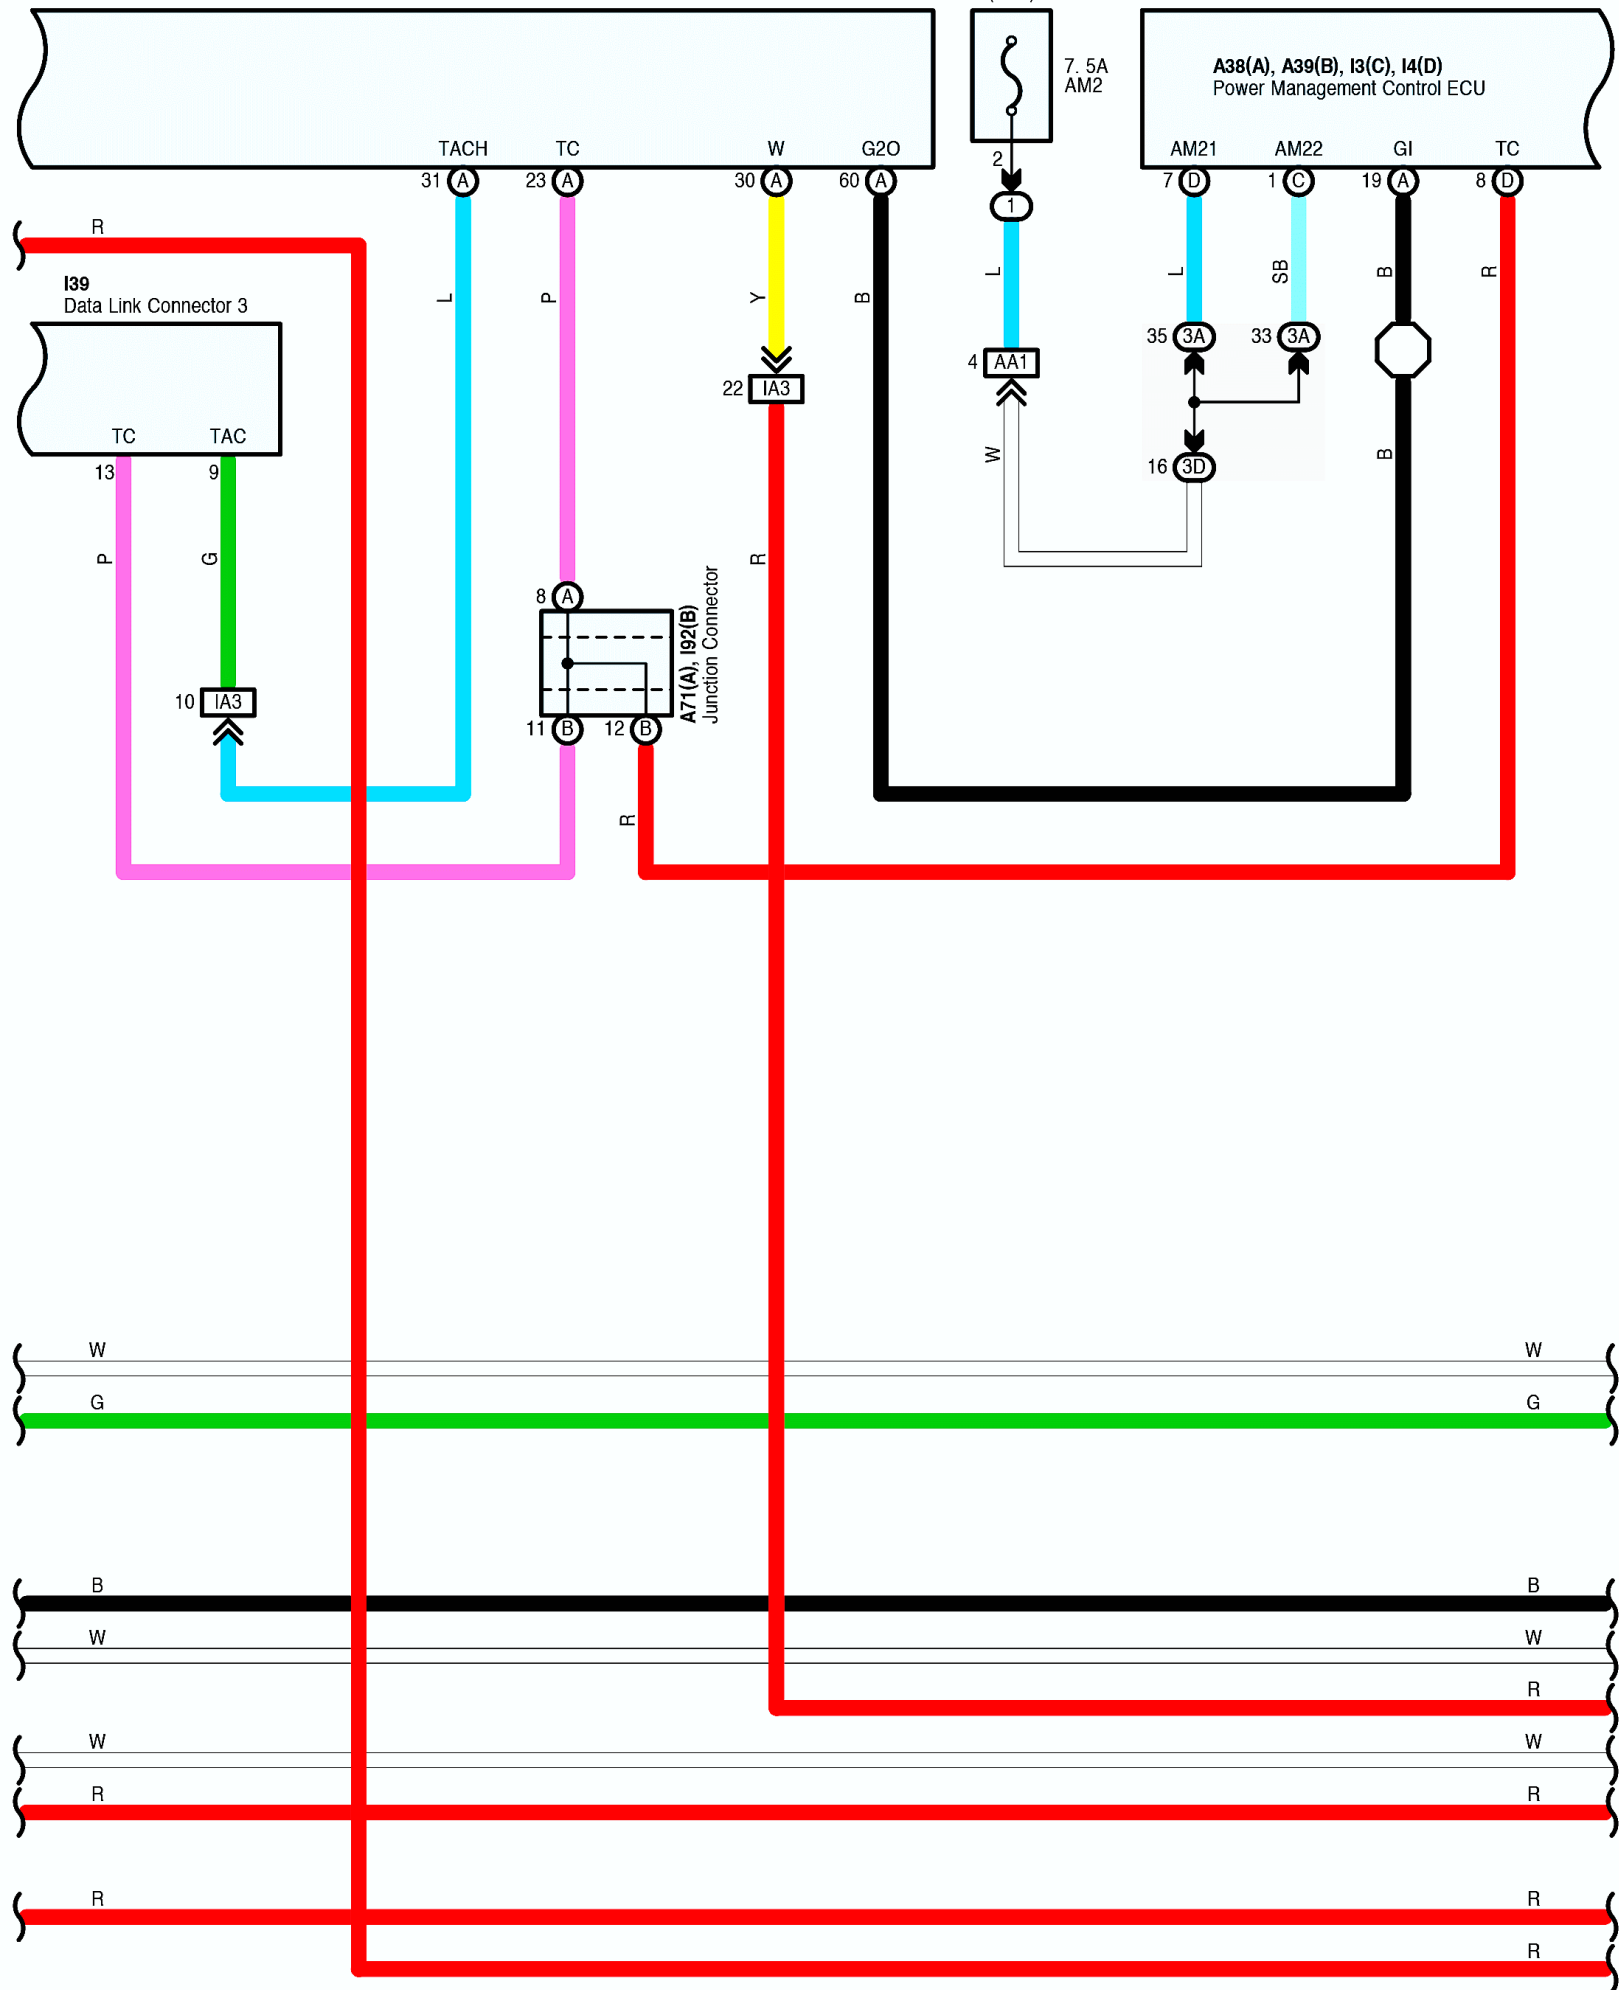

A38(A), A39(B), I3(C), I4(D)
Power Management Control ECU

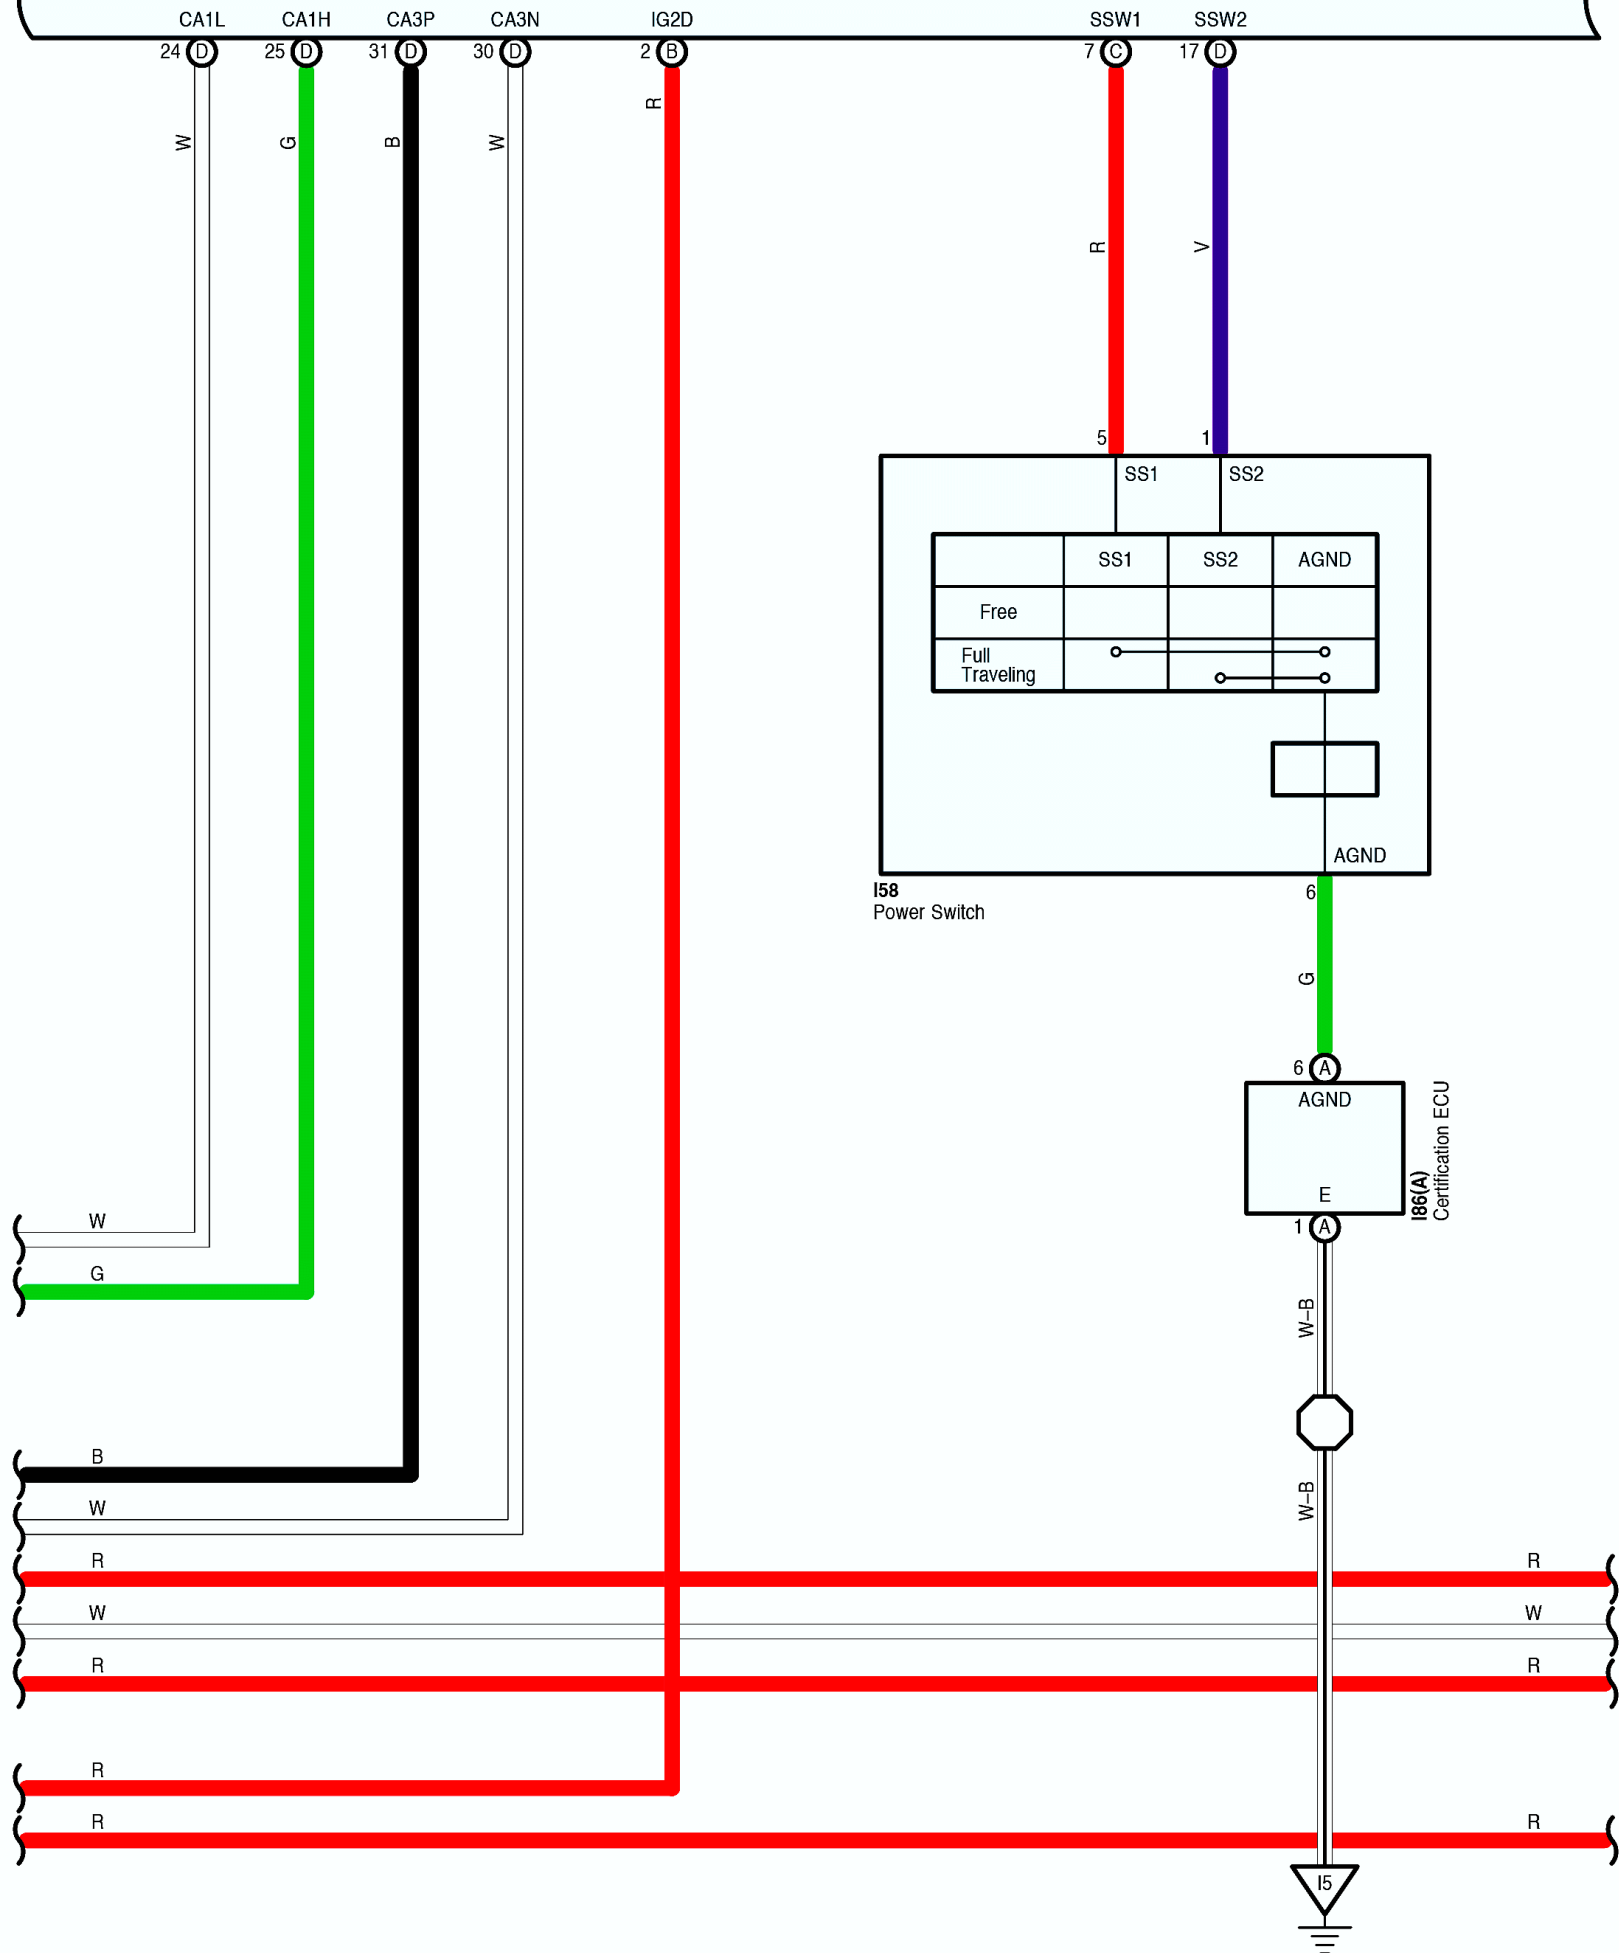

A38(A), A39(B), I3(C), I4(D)
Power Management Control ECU


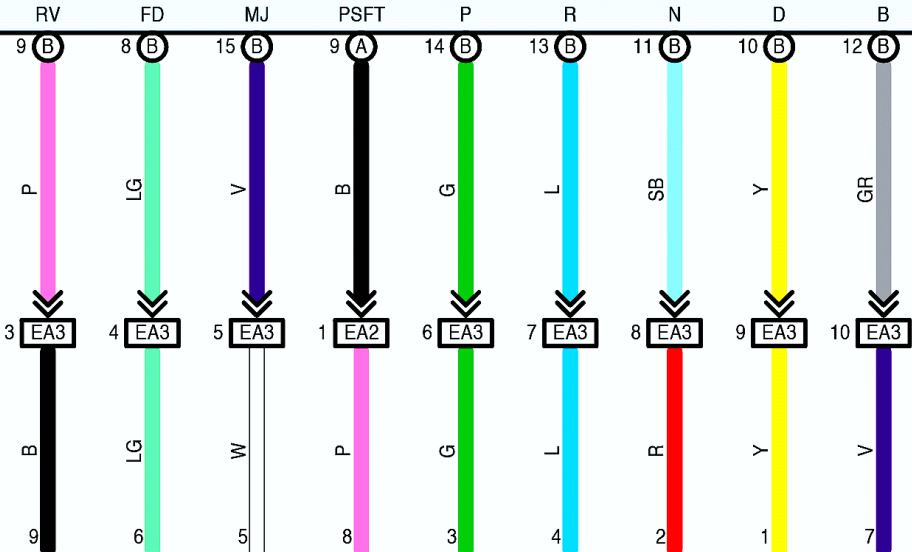


	RV	FD	MJ	+B	P	R	N	D	B
P			<div></div>	<div></div>	<div></div>				
R	<div></div>		<div></div>	<div></div>		<div></div>			
N			<div></div>	<div></div>			<div></div>		
D		<div></div>	<div></div>	<div></div>				<div></div>	
B		<div></div>	<div></div>	<div></div>					<div></div>


E11
Shift Lever Position Sensor



A38(A), A39(B), I3(C), I4(D)
Power Management Control ECU

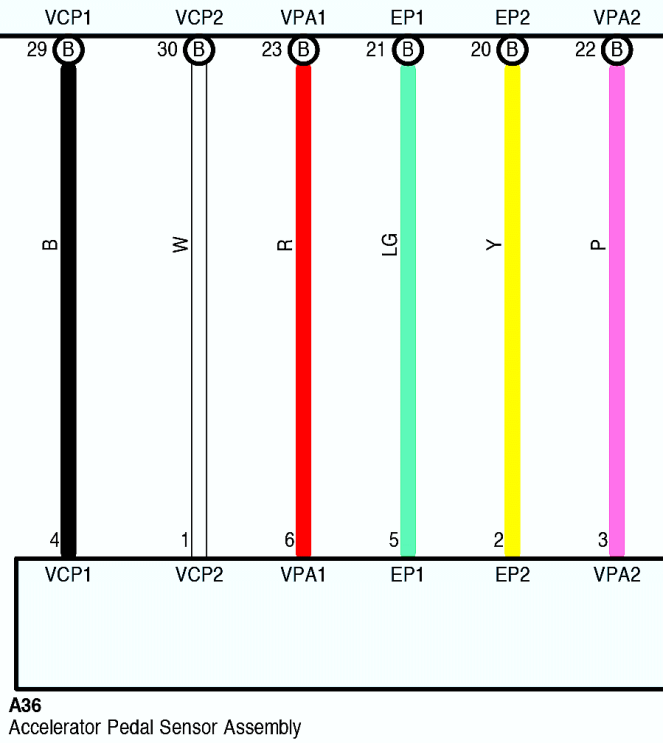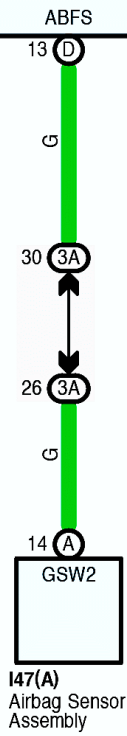


* 2 : w/o Dynamic Radar Cruise Control

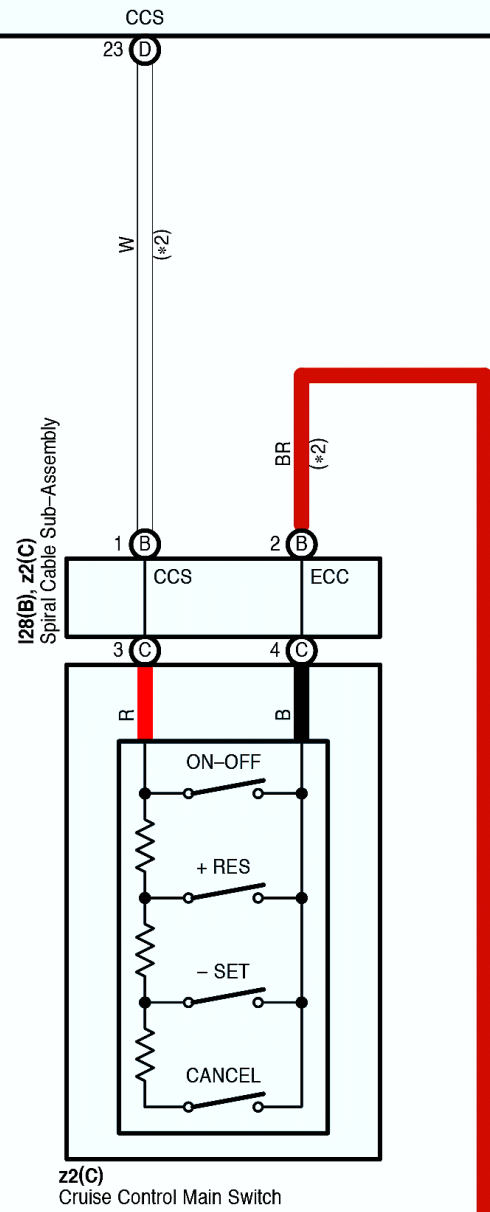


BR (*2)



A38(A), A39(B), I3(C), I4(D)
Power Management Control ECU

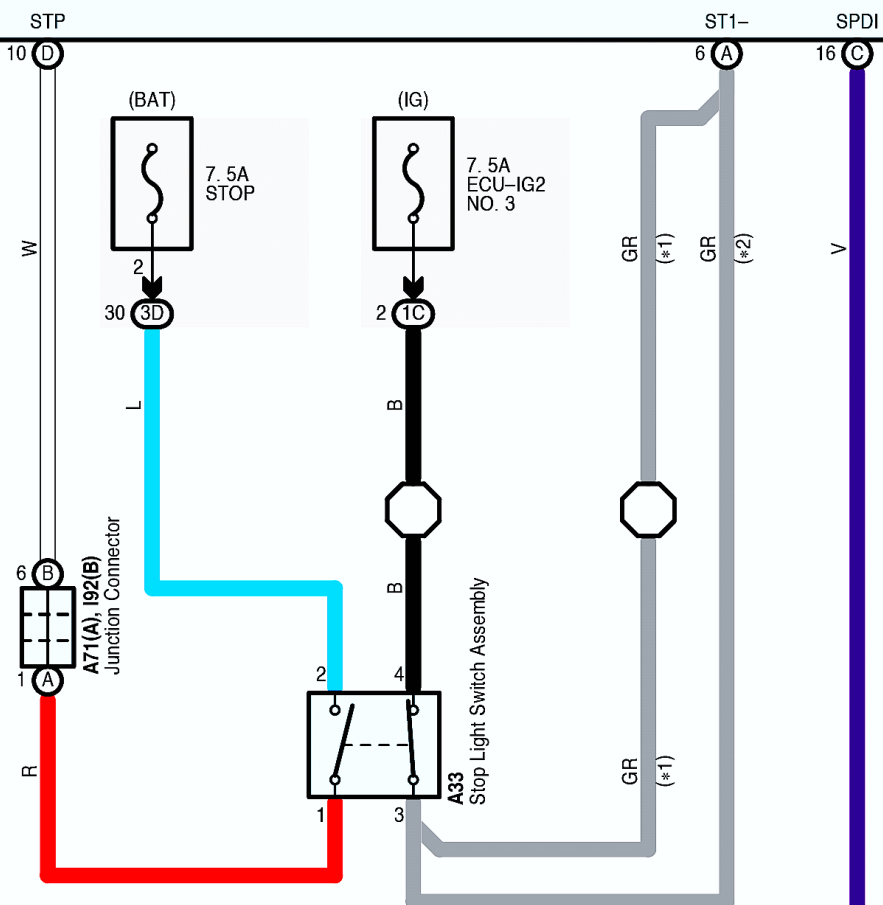

I17(A), I18(B)
Combination Meter Assembly

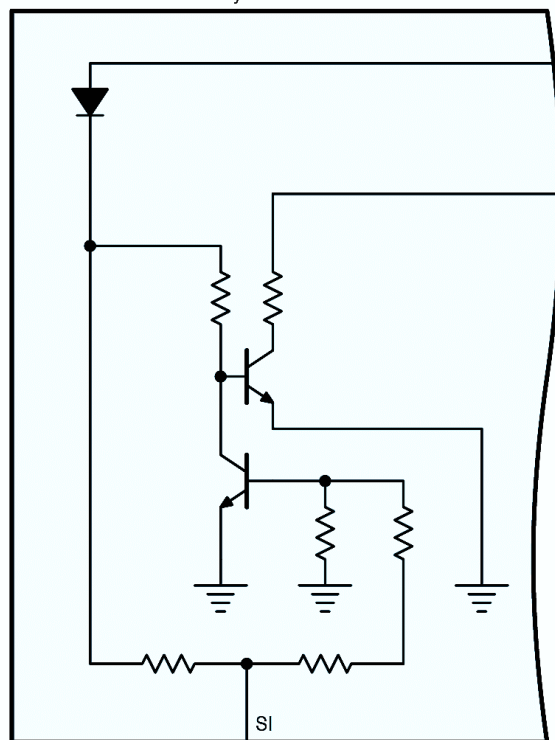

4 B
16 C
1 A

V

R

W

R

R


R

W

R

R

- * 1 : w/ Dynamic Radar Cruise Control
- * 2 : w/o Dynamic Radar Cruise Control

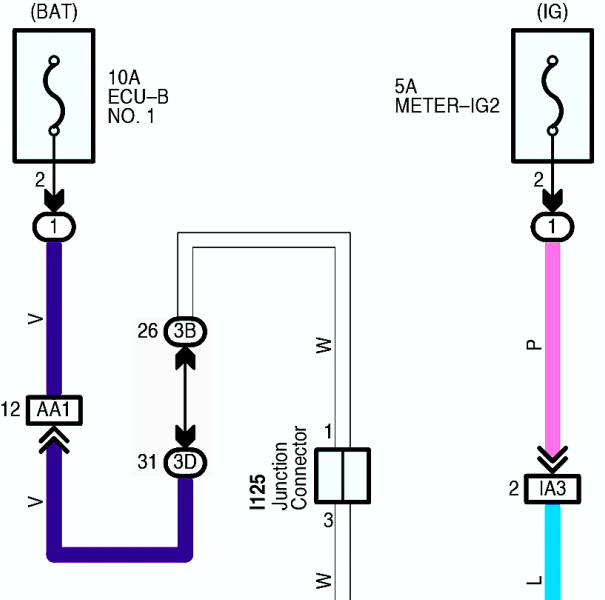

I17(A), I18(B)
Combination Meter Assembly

