 
 


A57(A), D28(B)
ECM

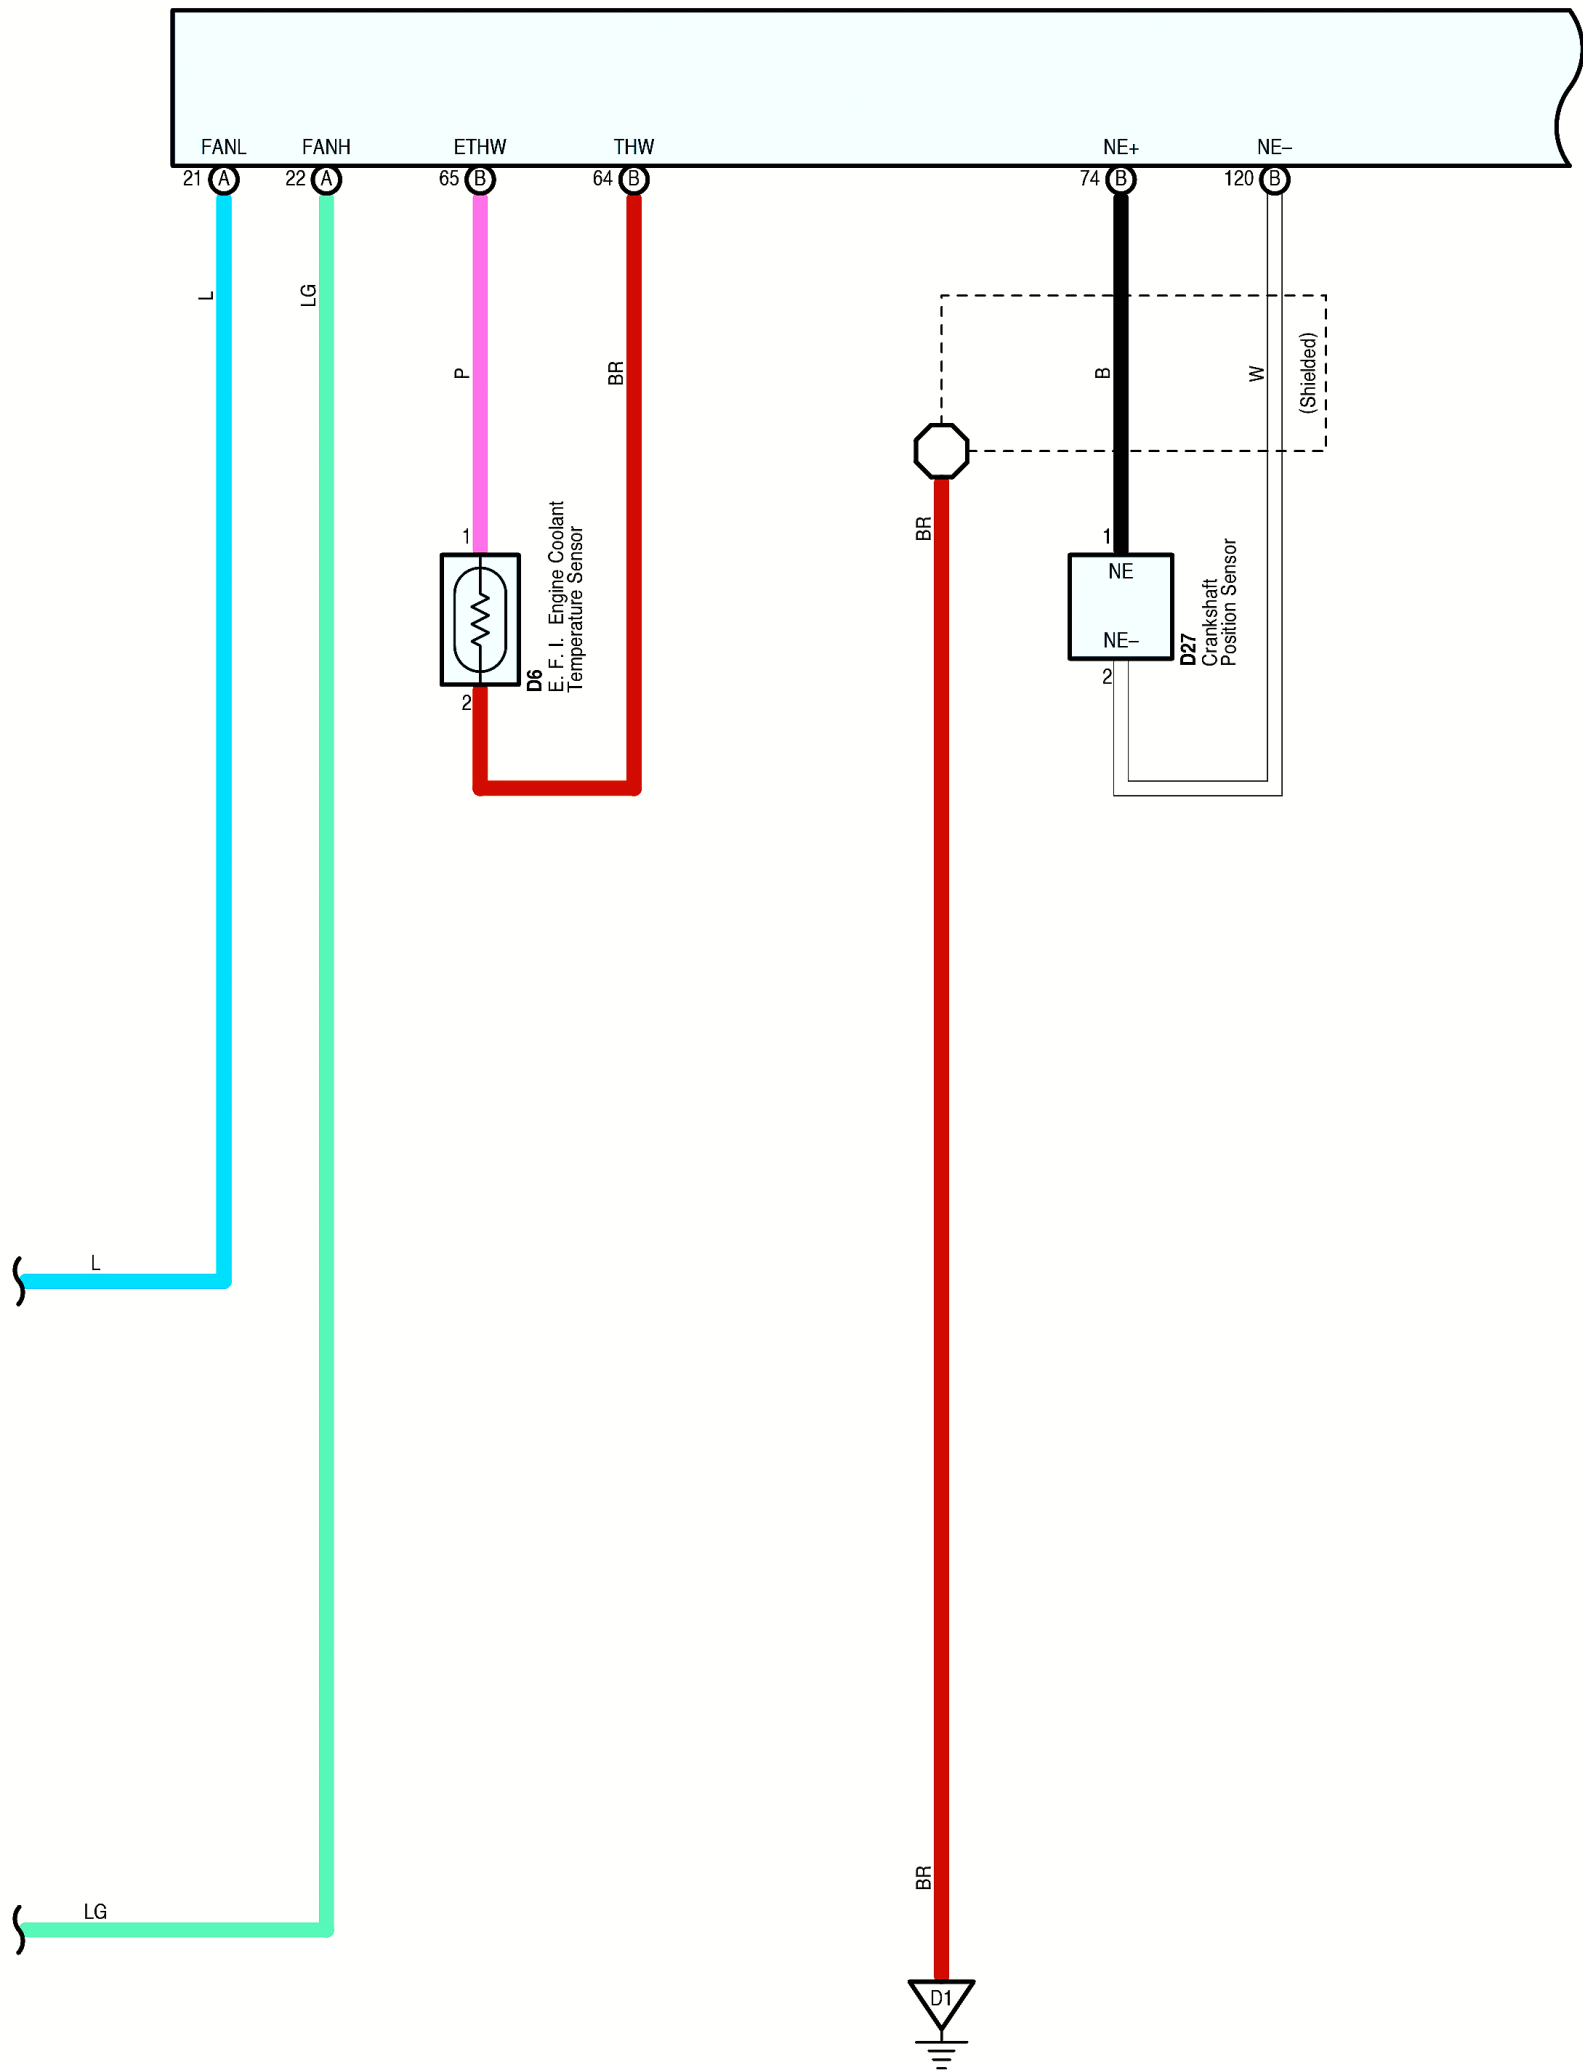 


L17(A)
A/C Amplifier Assembly

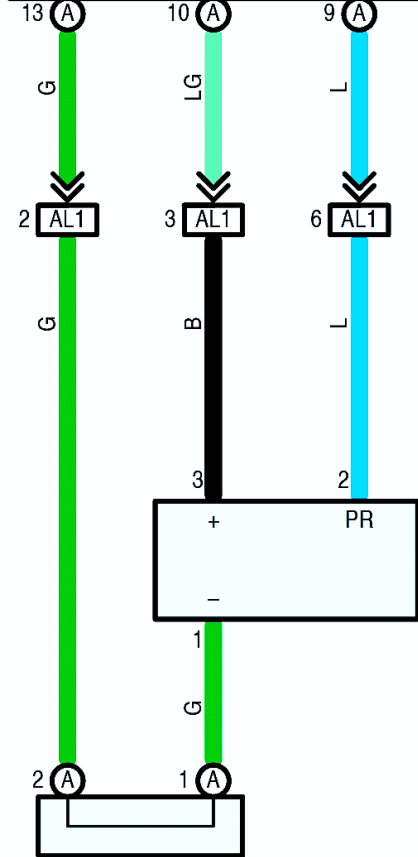



A50(A)
Junction Connector


A31
A/C Pressure Sensor
(A/C Tube & Accessory Assembly)

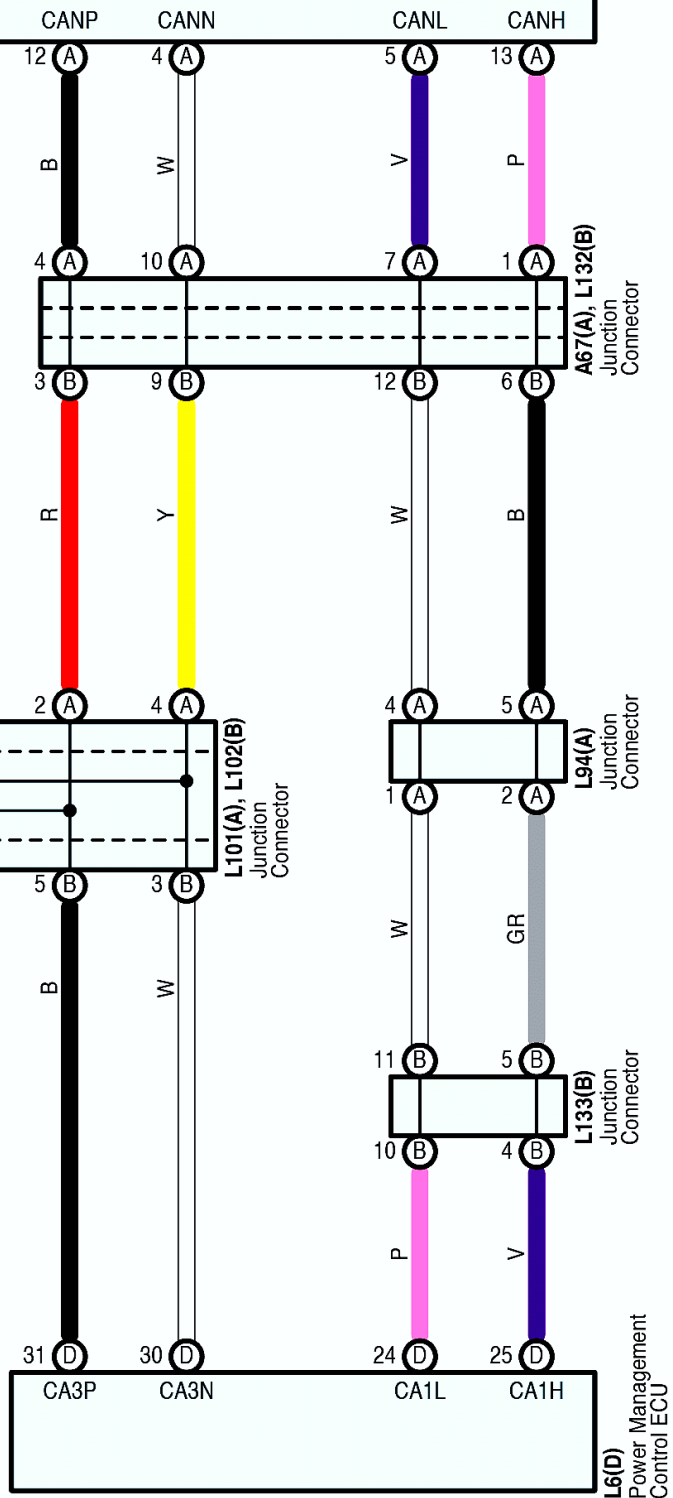


L6(D)
Power Management
Control ECU

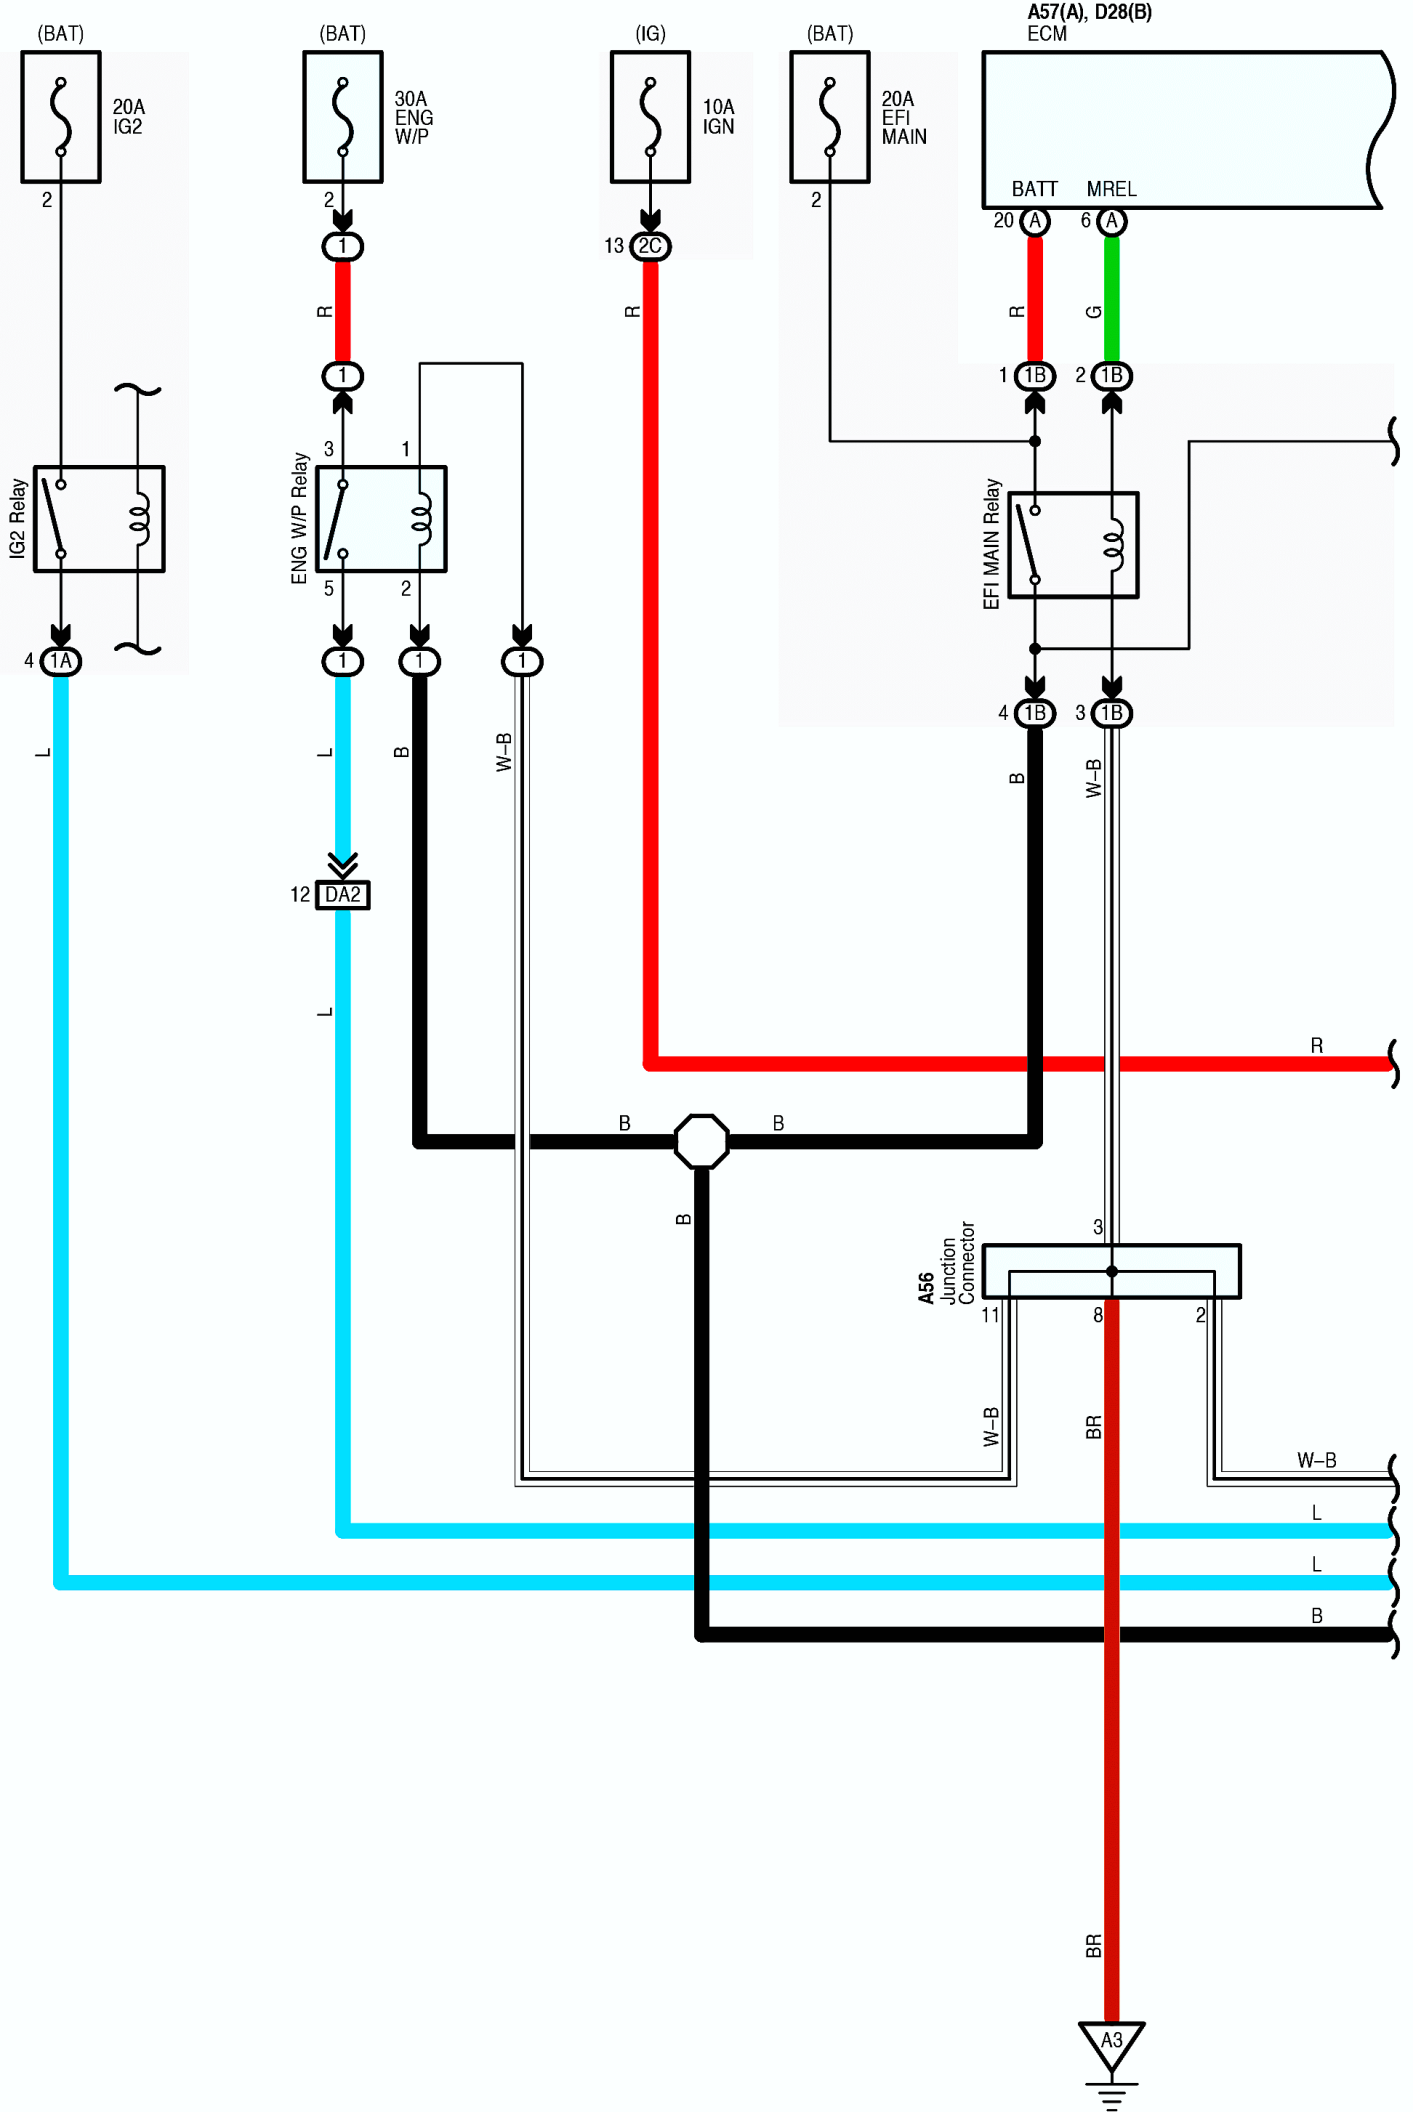 


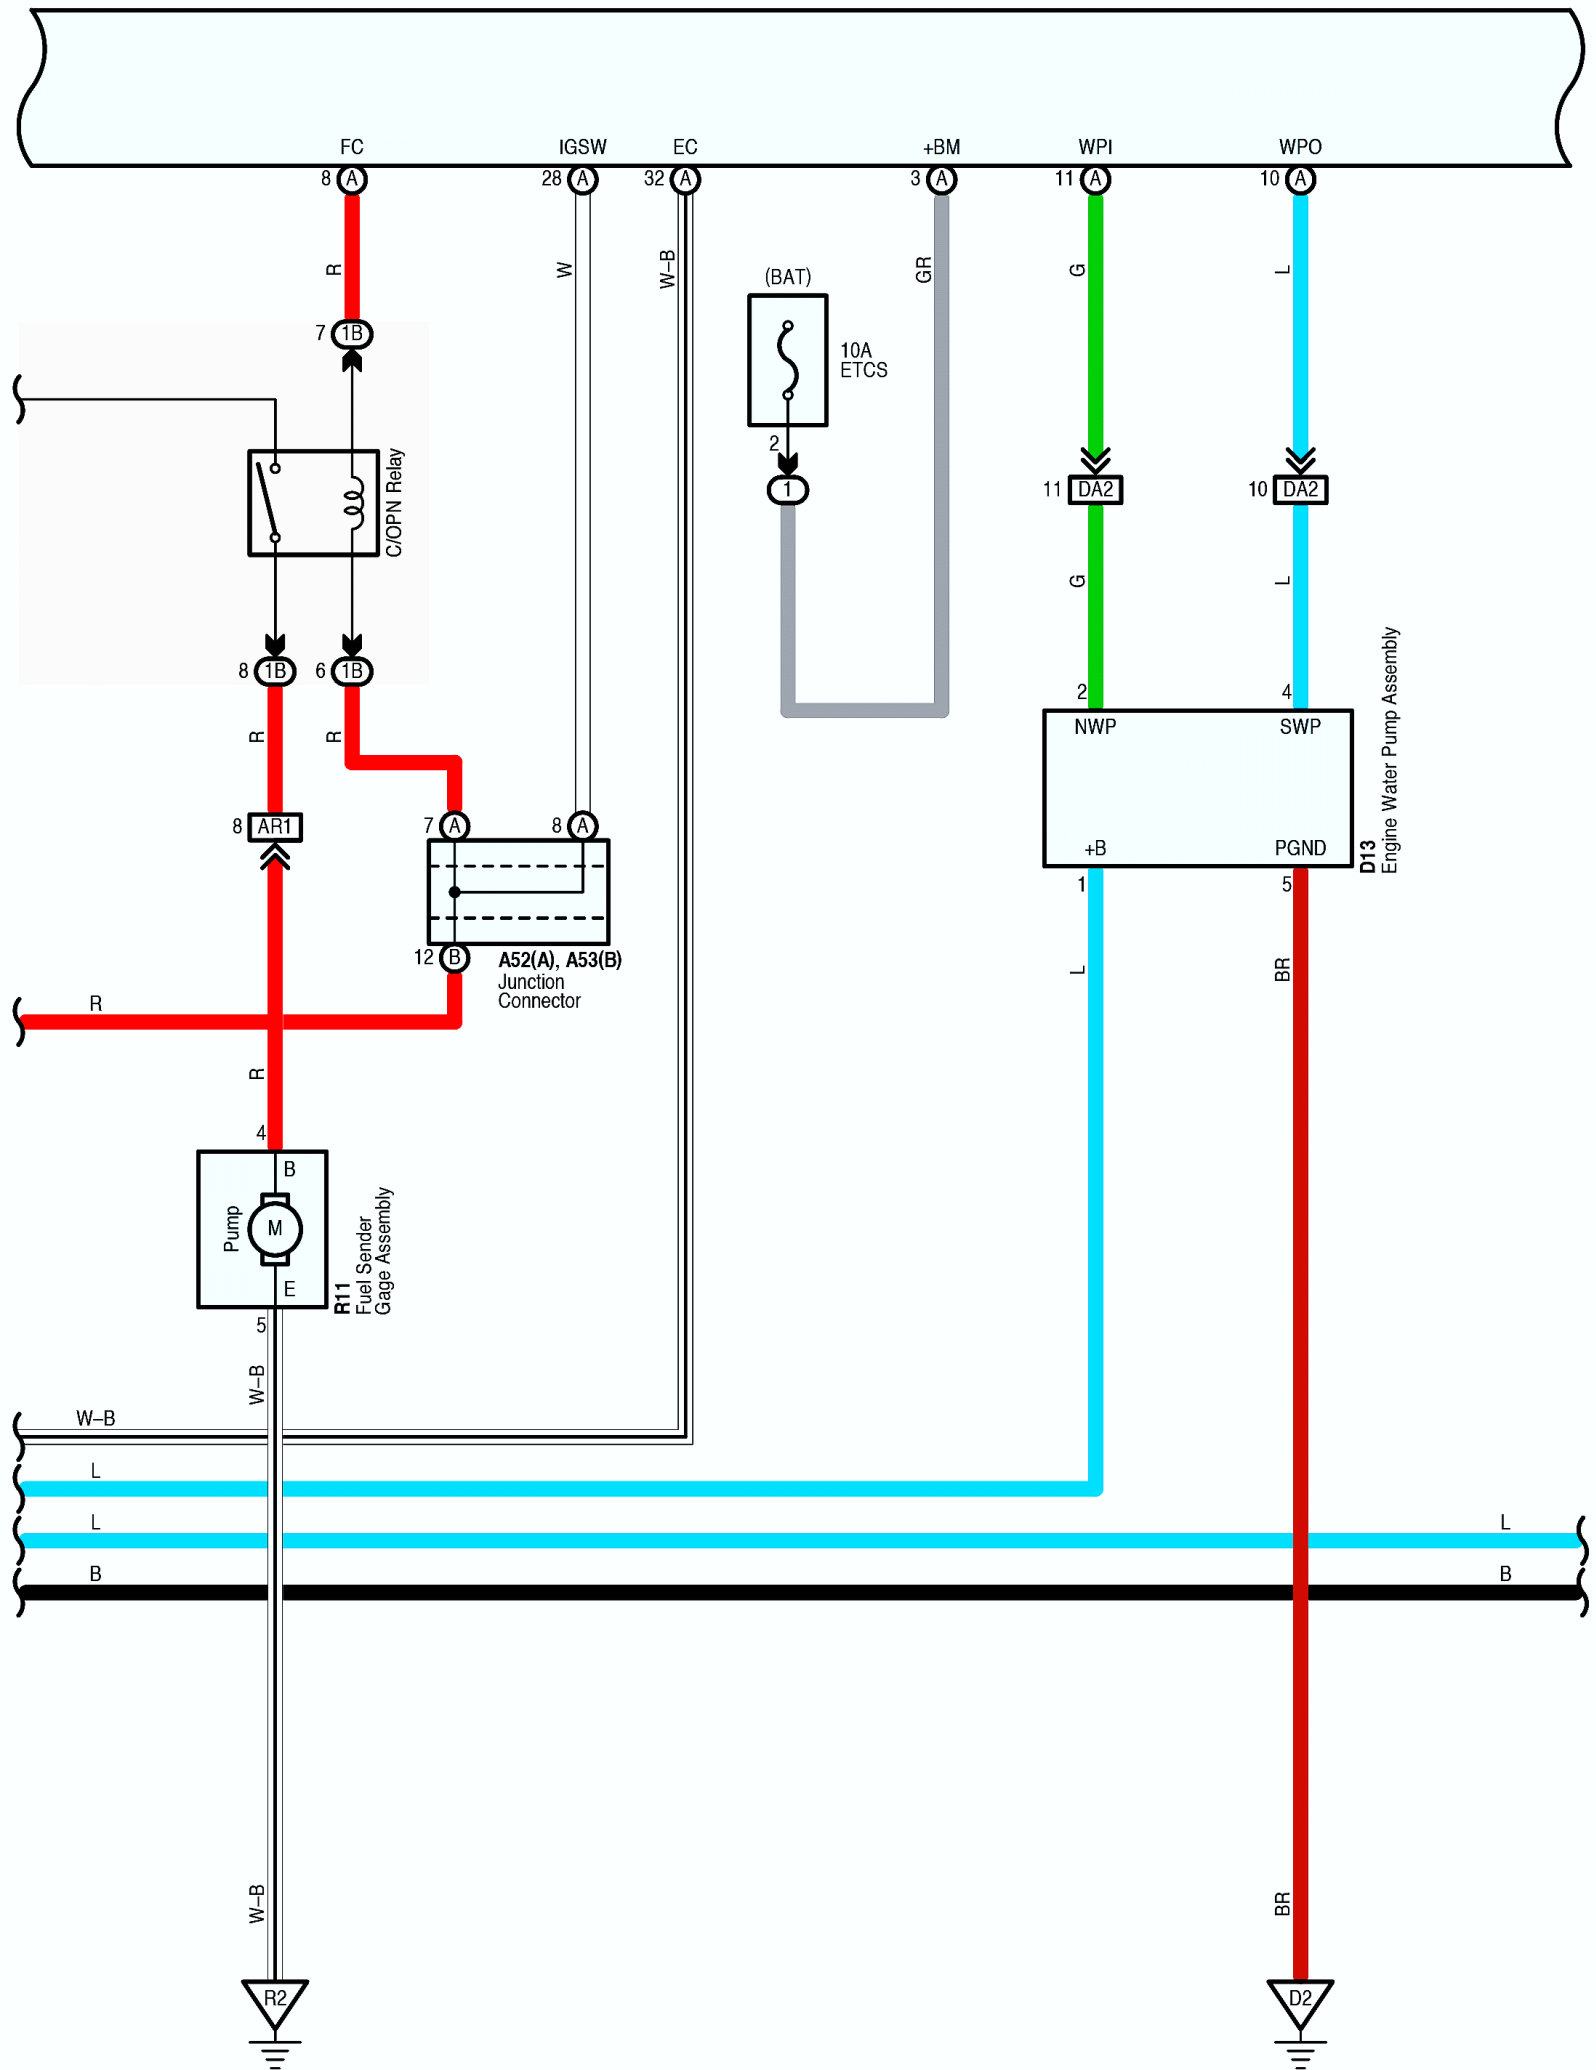 

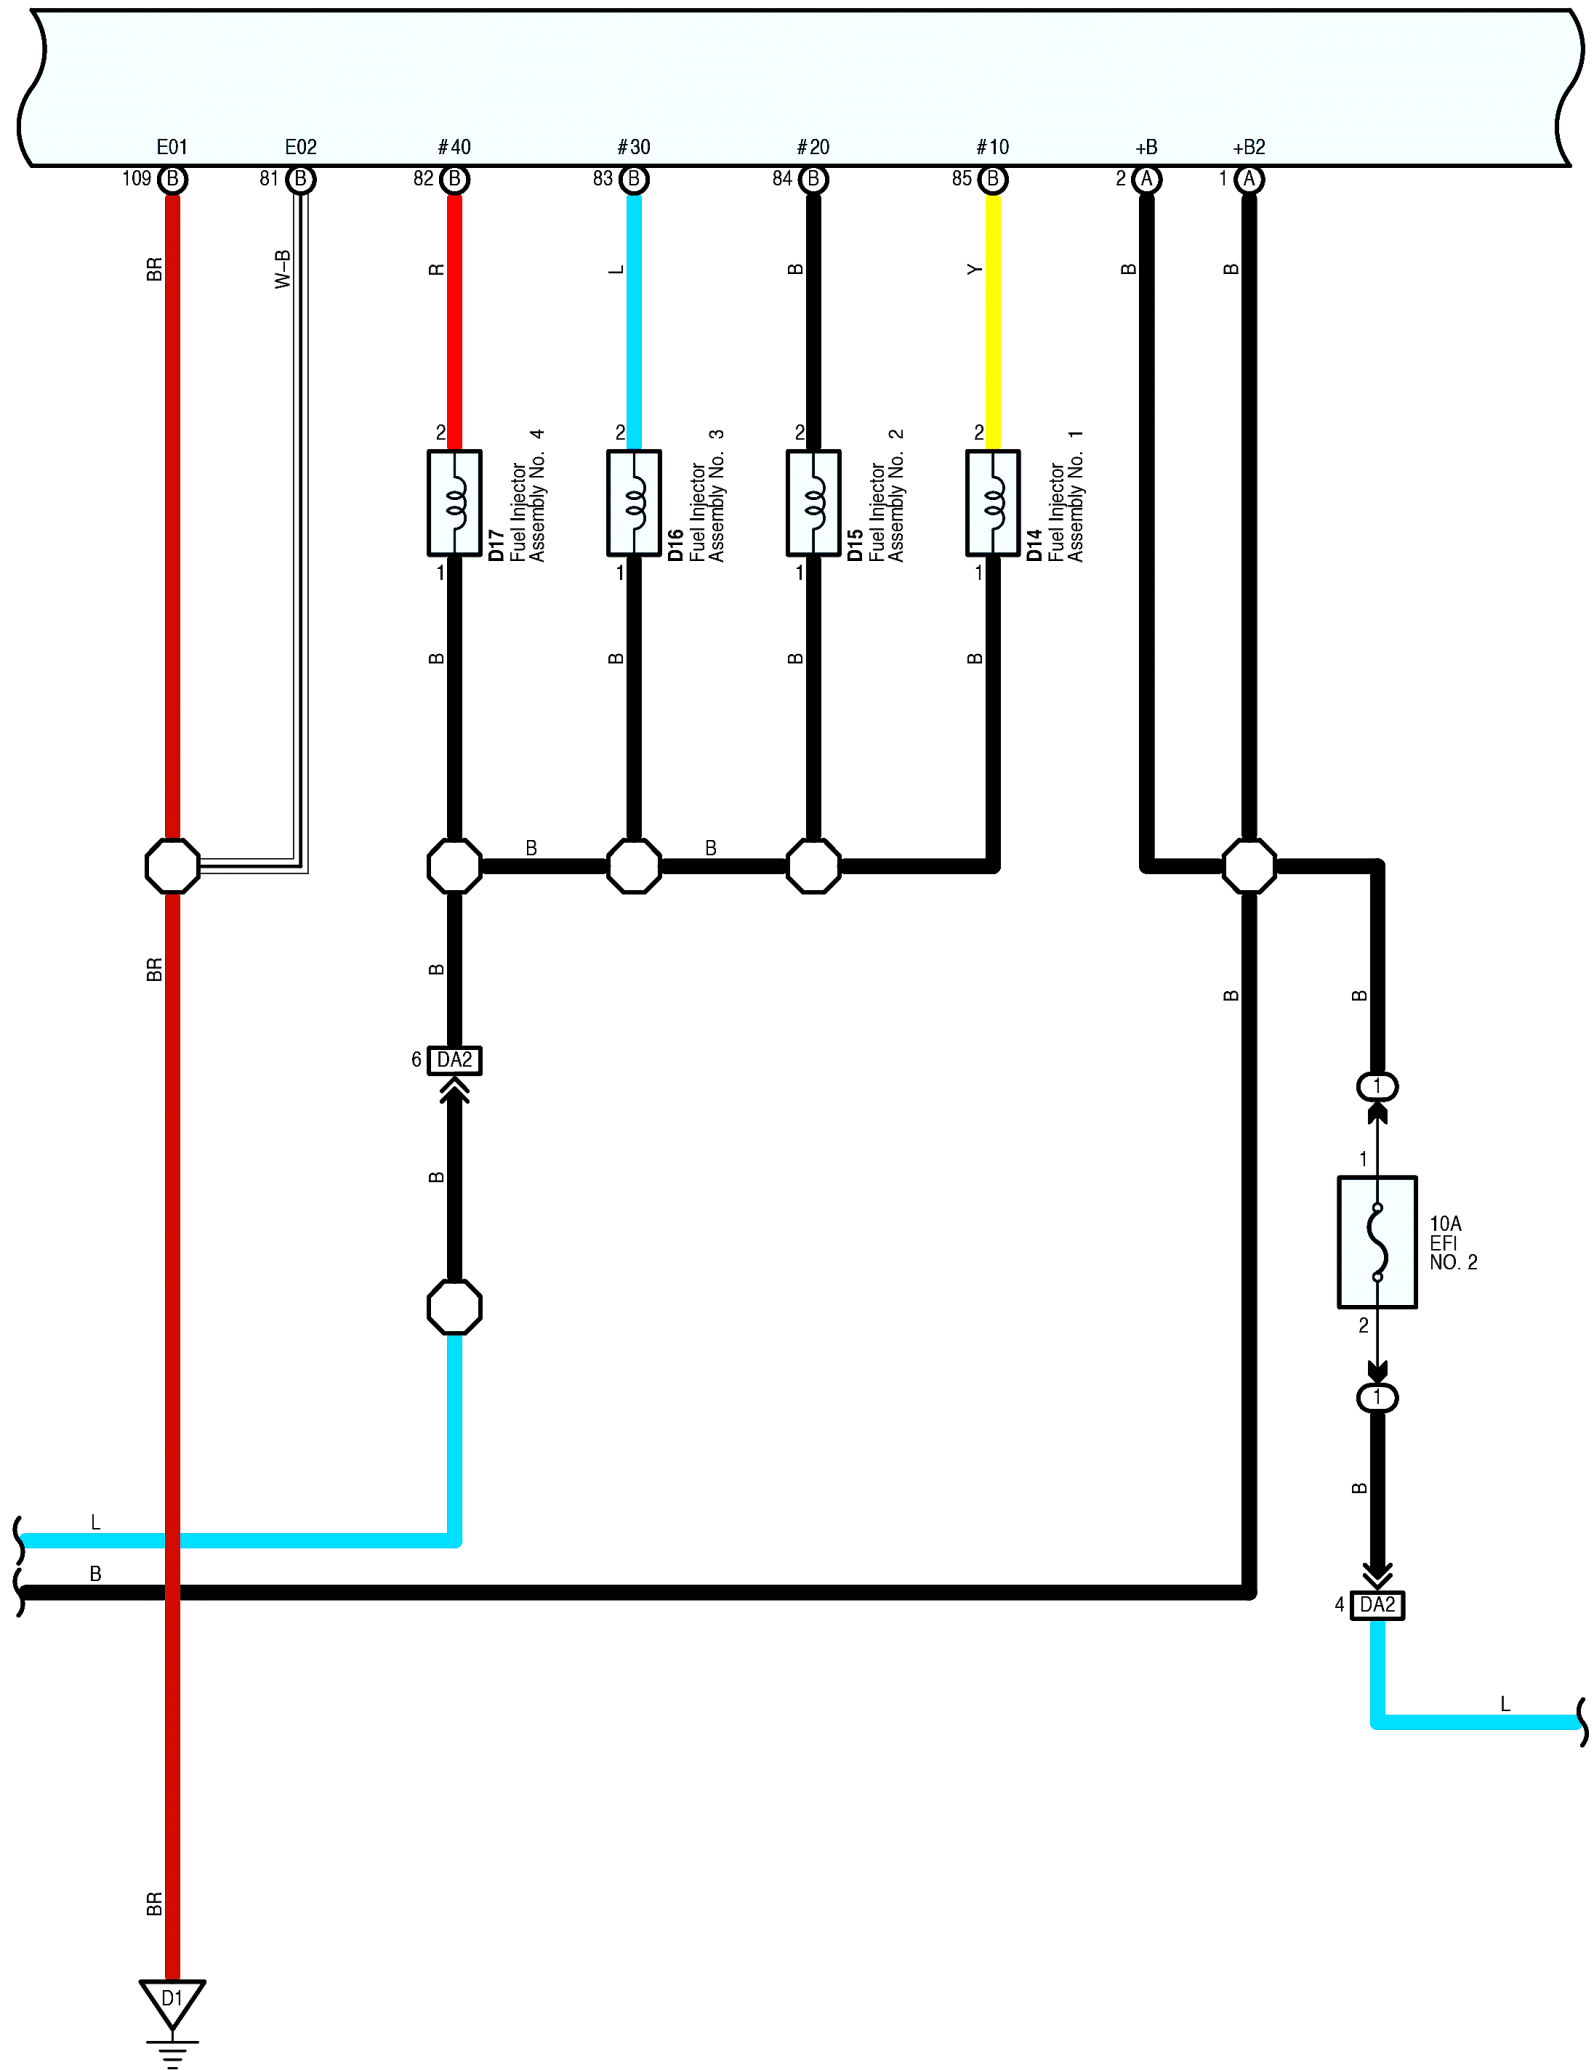 

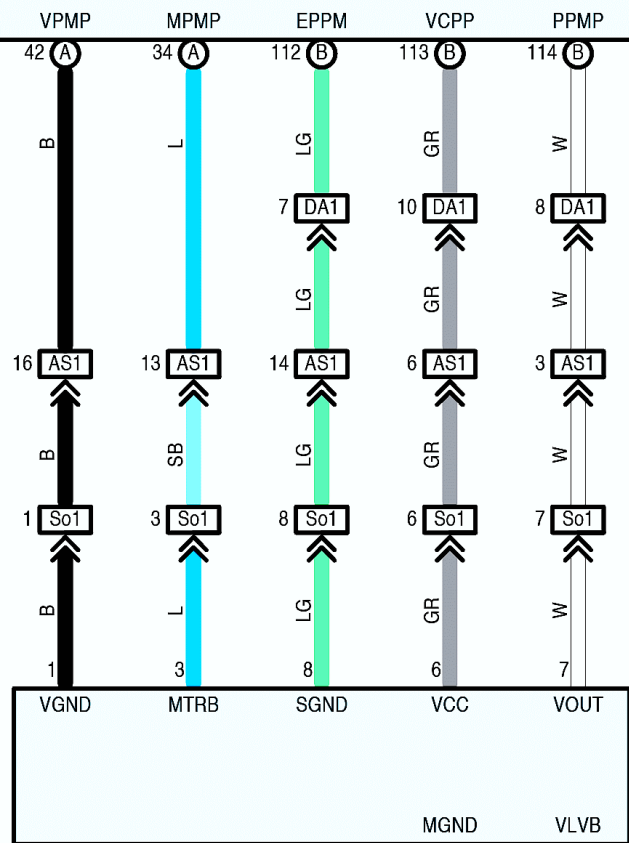 


 o1
Canister Pump Module
(Charcoal Canister Assembly)

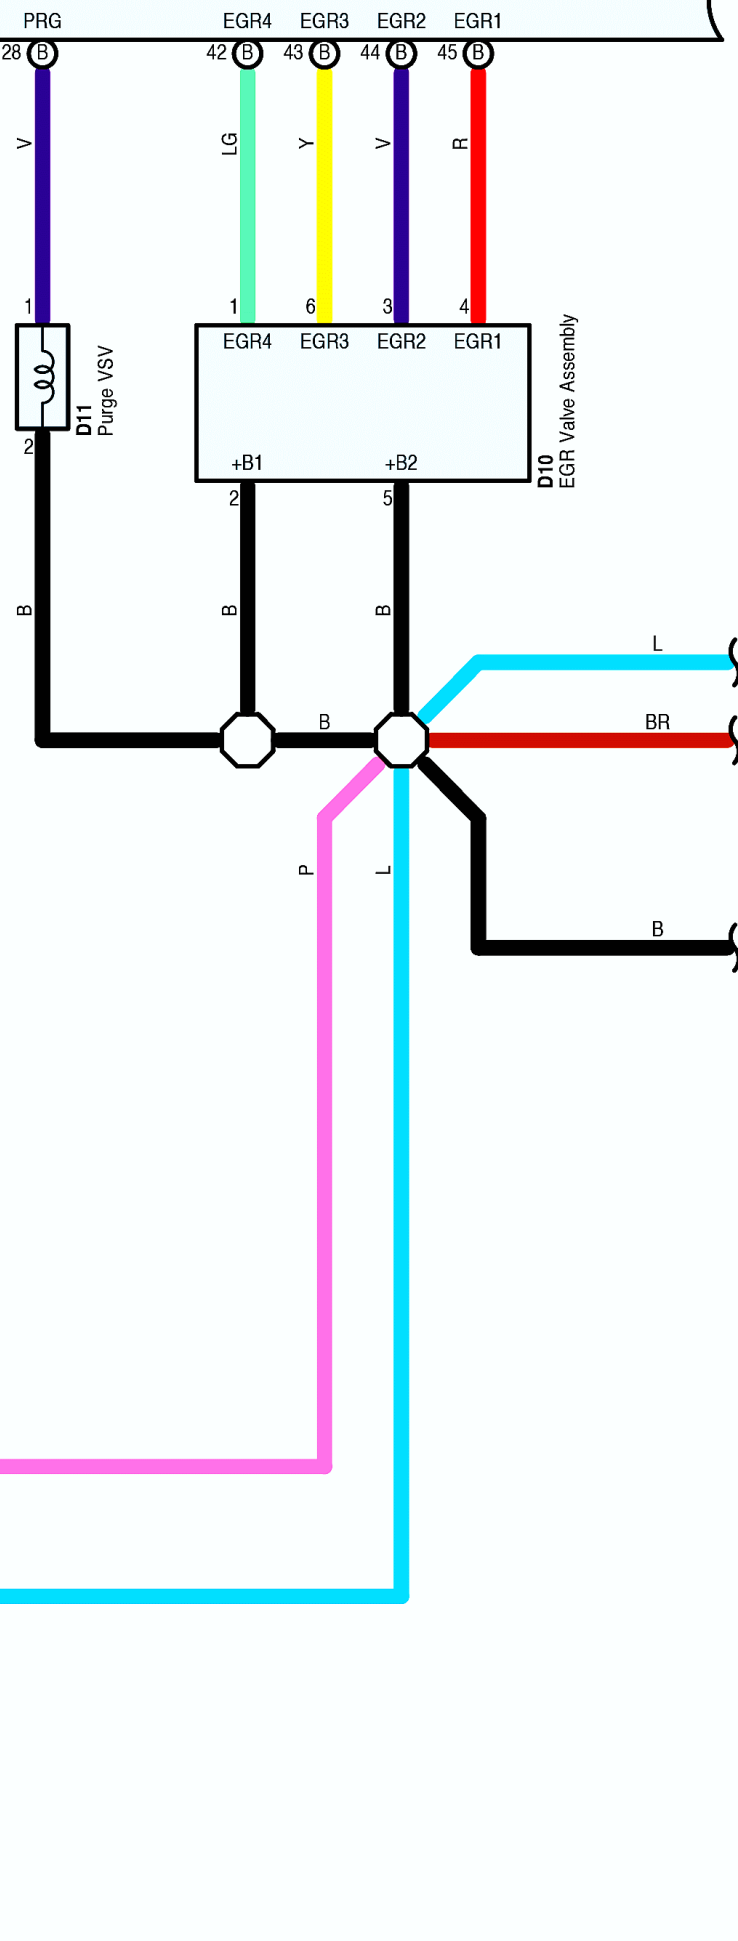


D10
EGR Valve Assembly

 A57(A), D28(B)
ECM

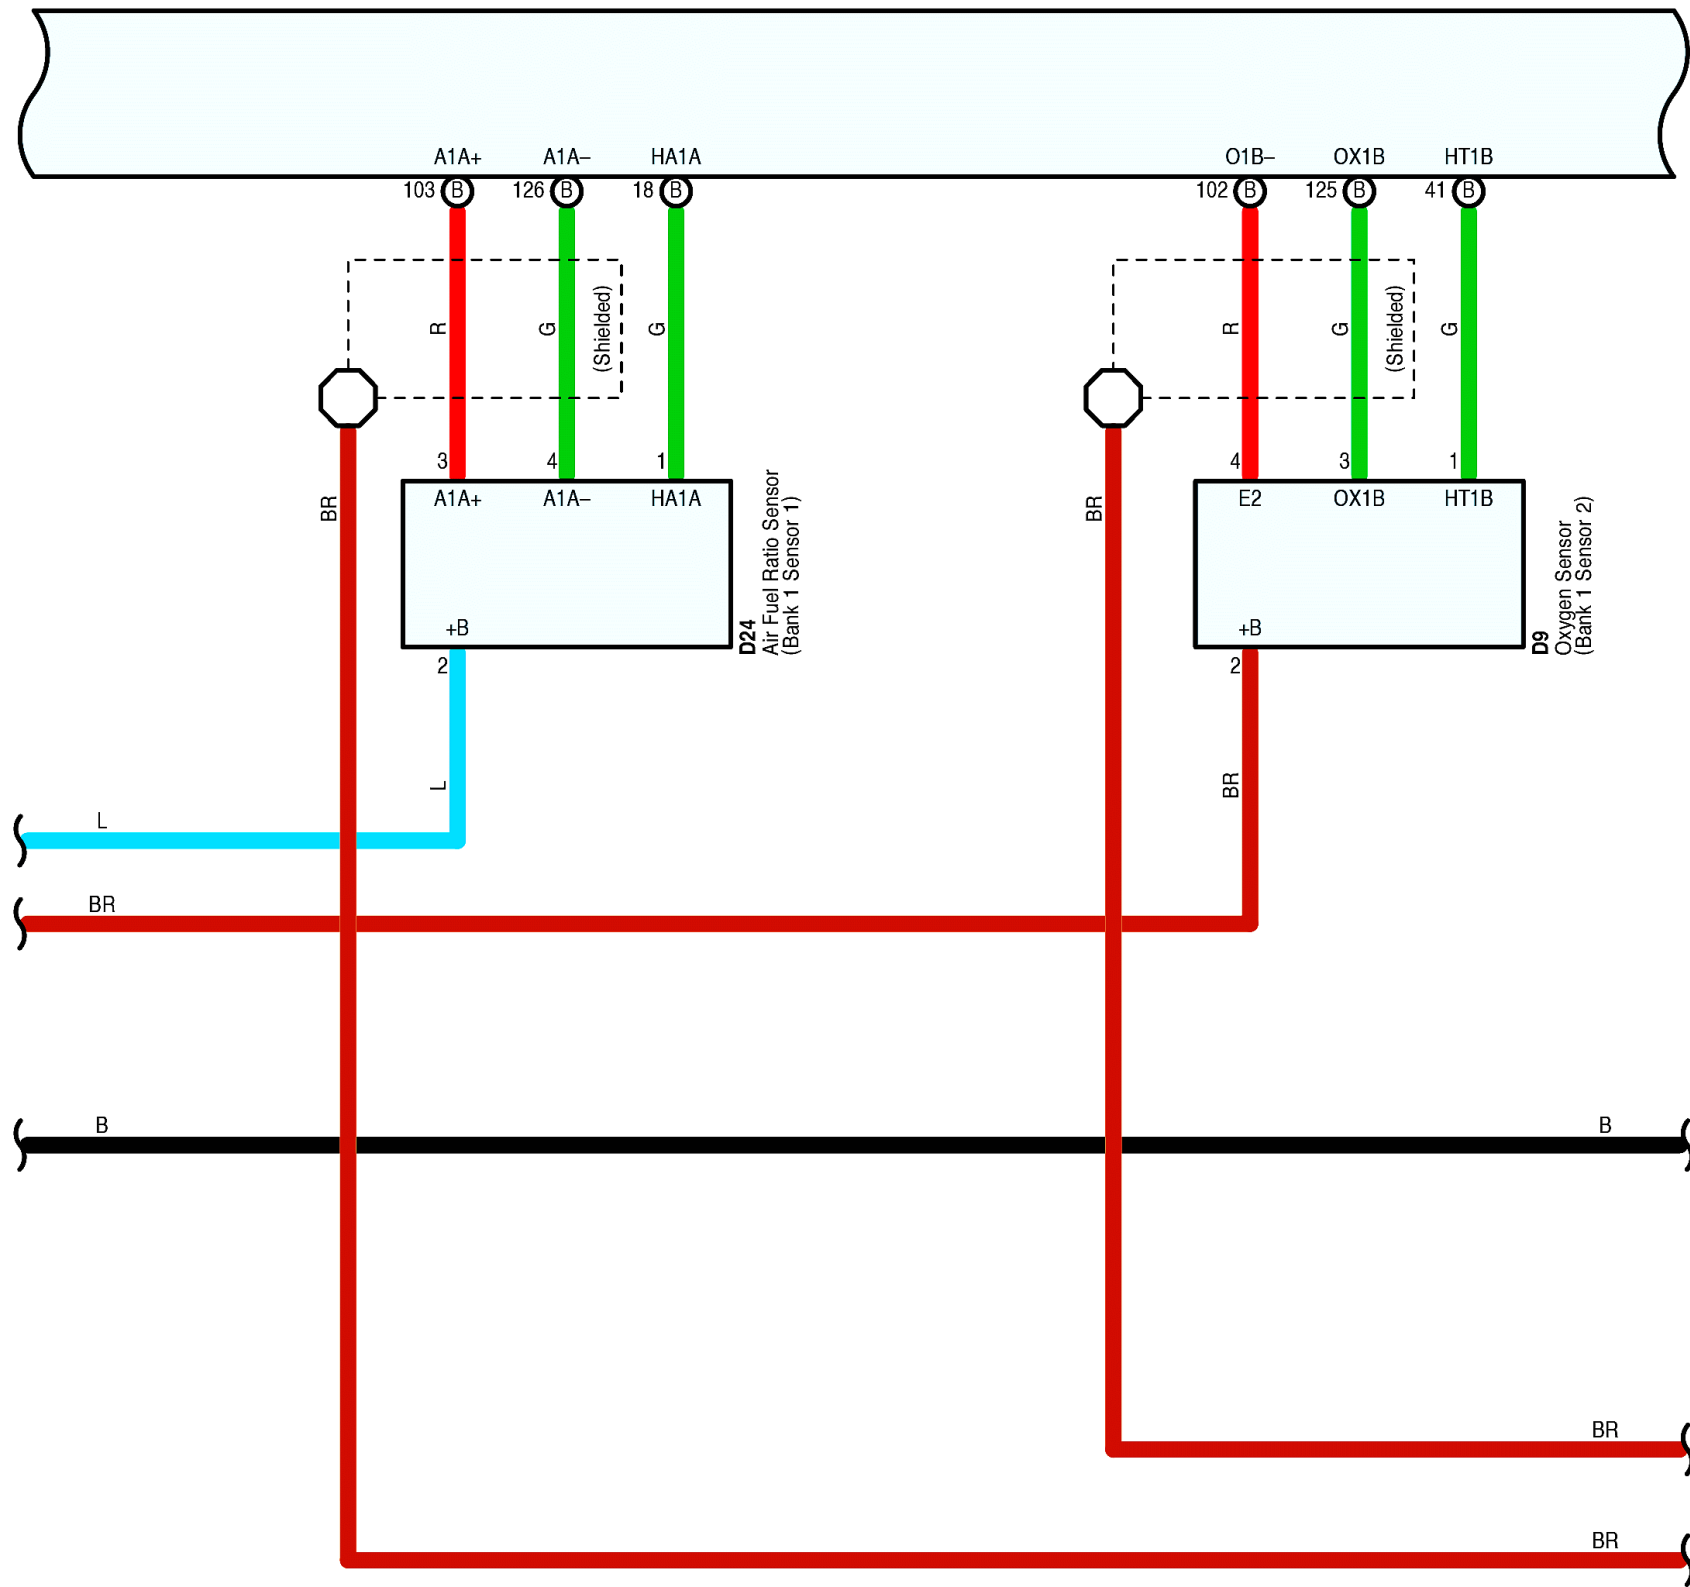

A57(A), D28(B)
ECM

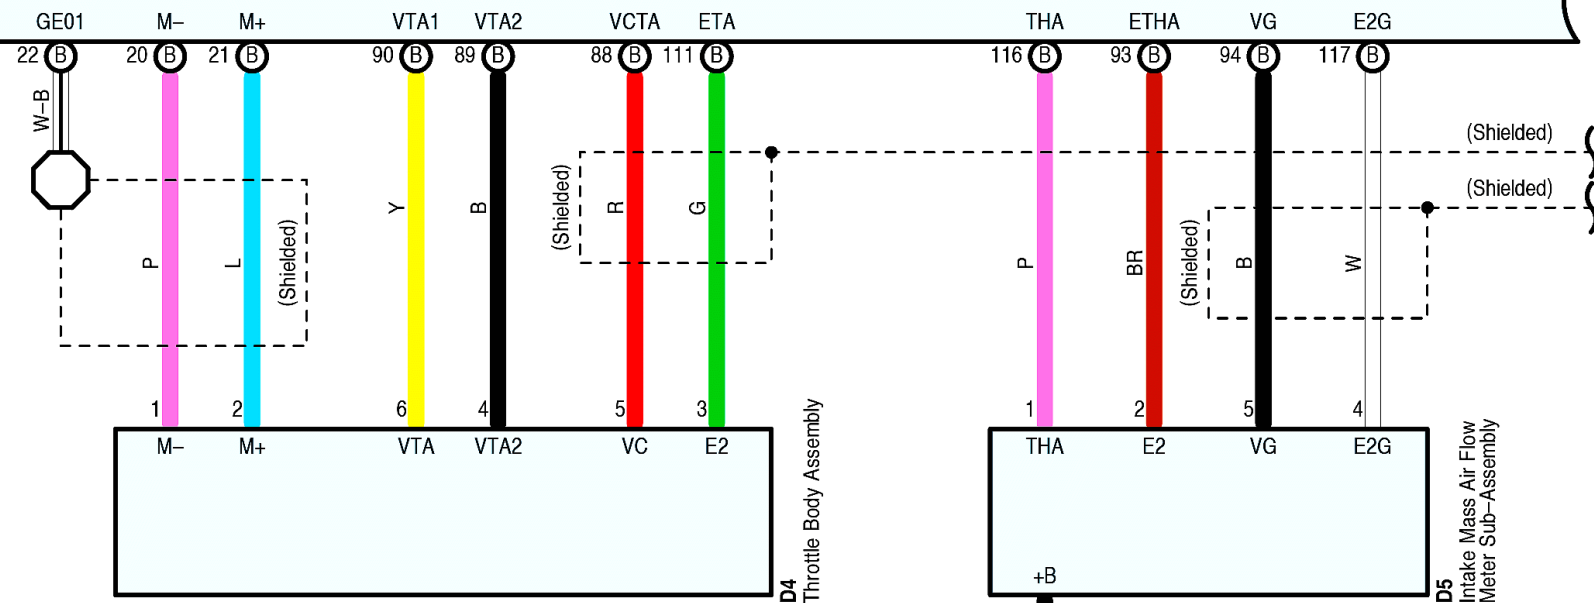 


B

BR


BR


BR

 
BR

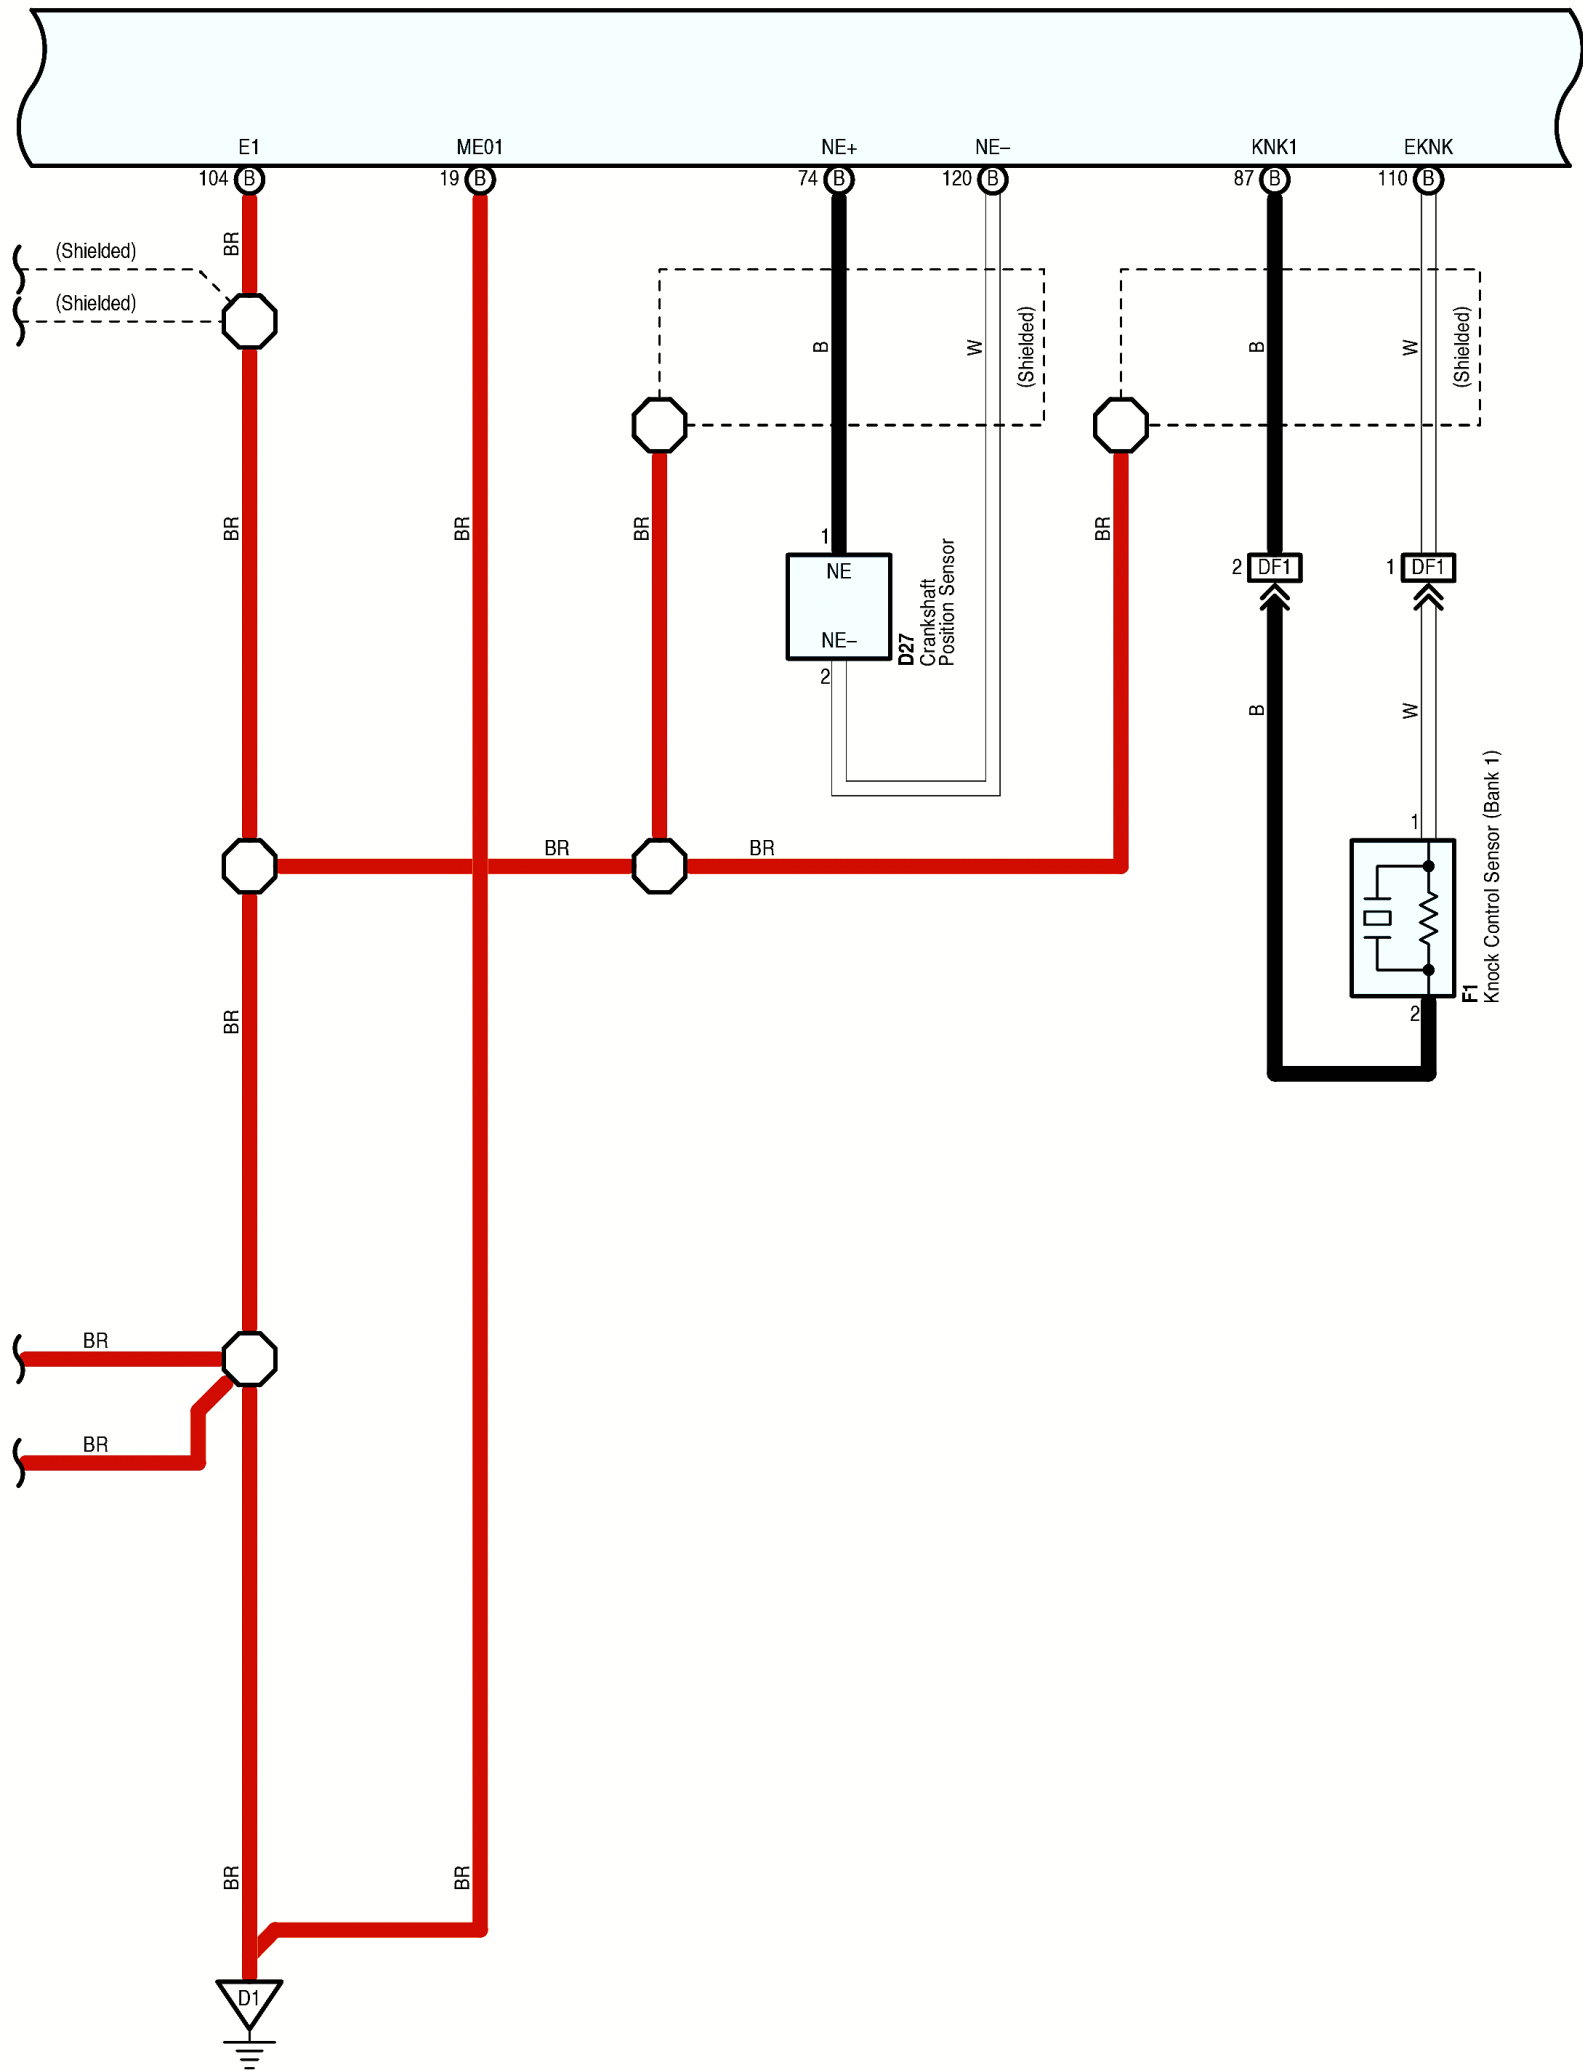



A57(A), D28(B)
ECM

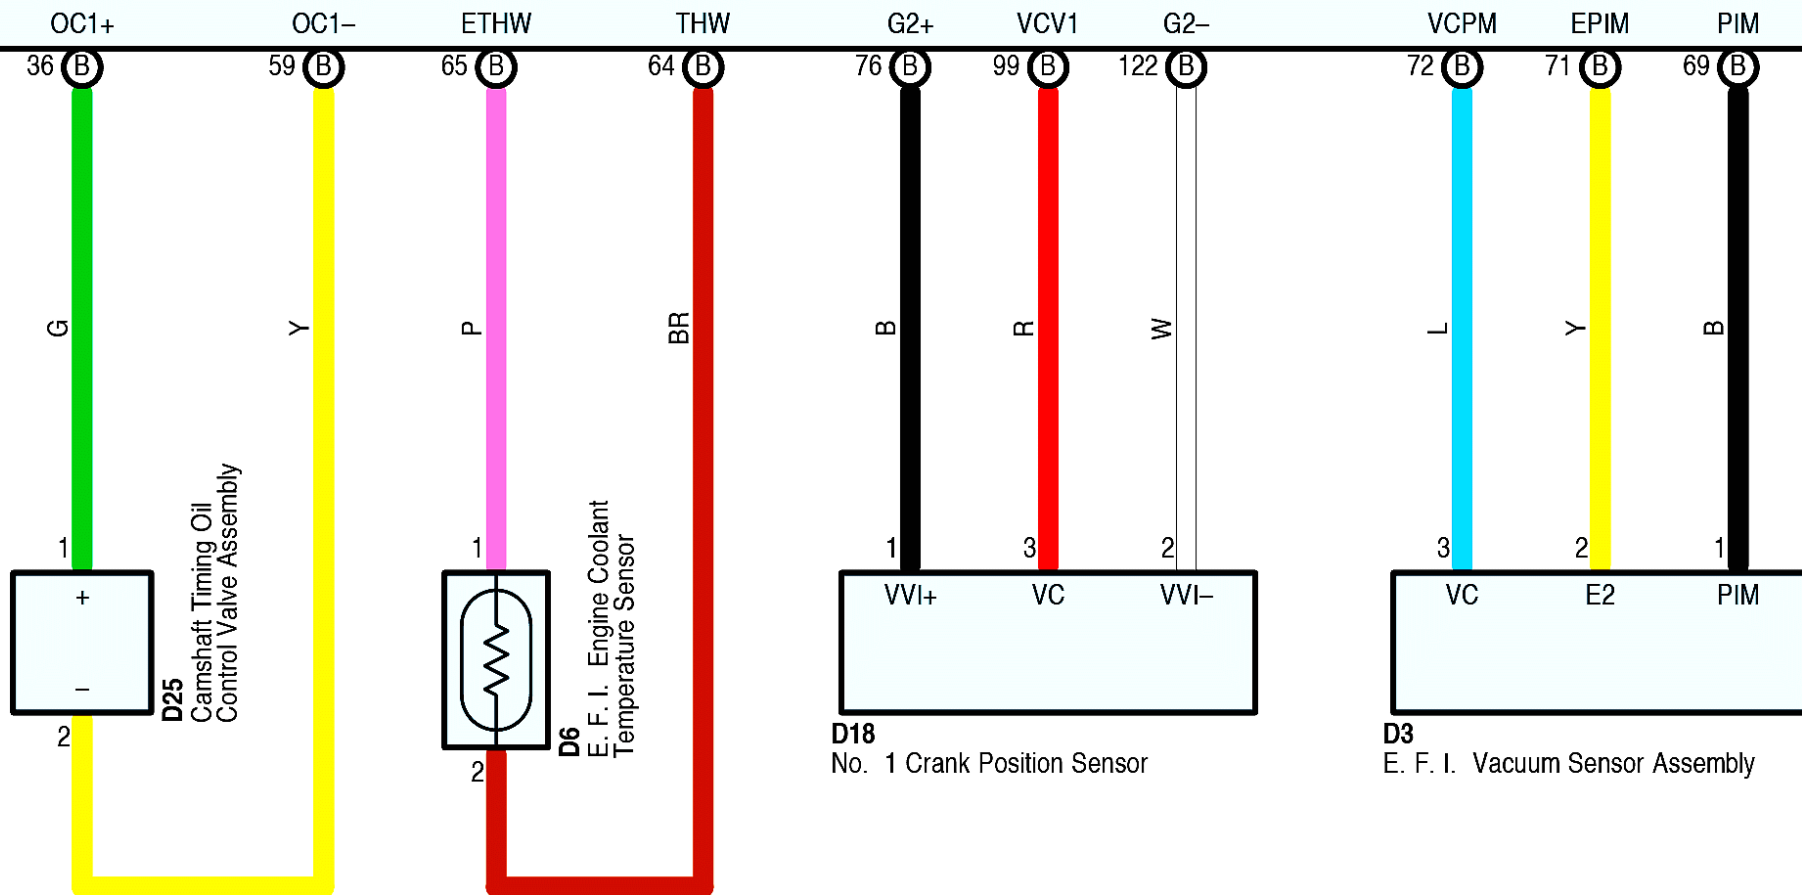 


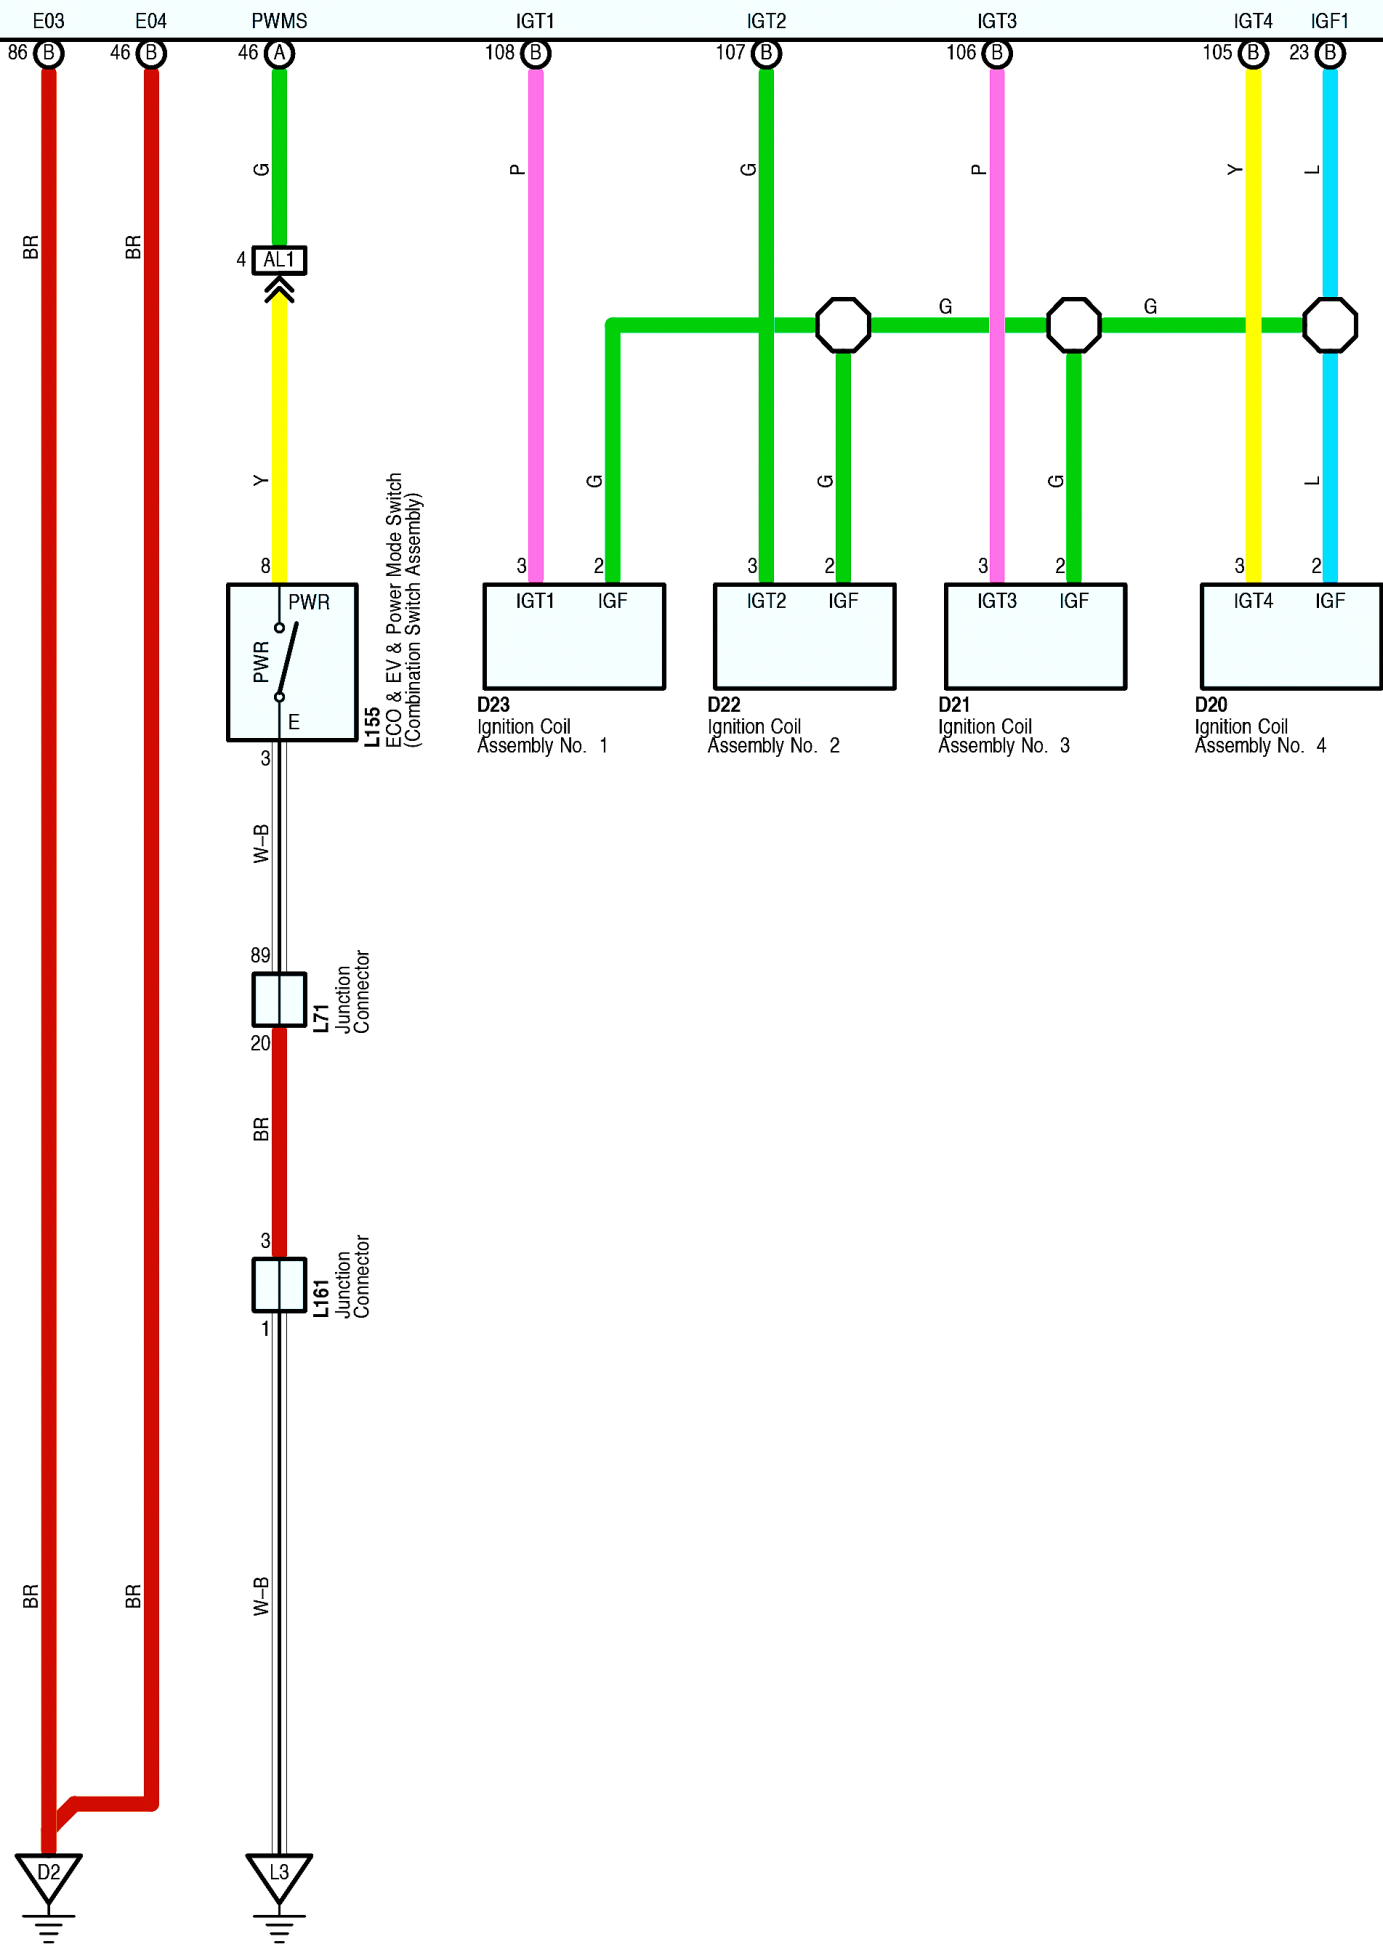 


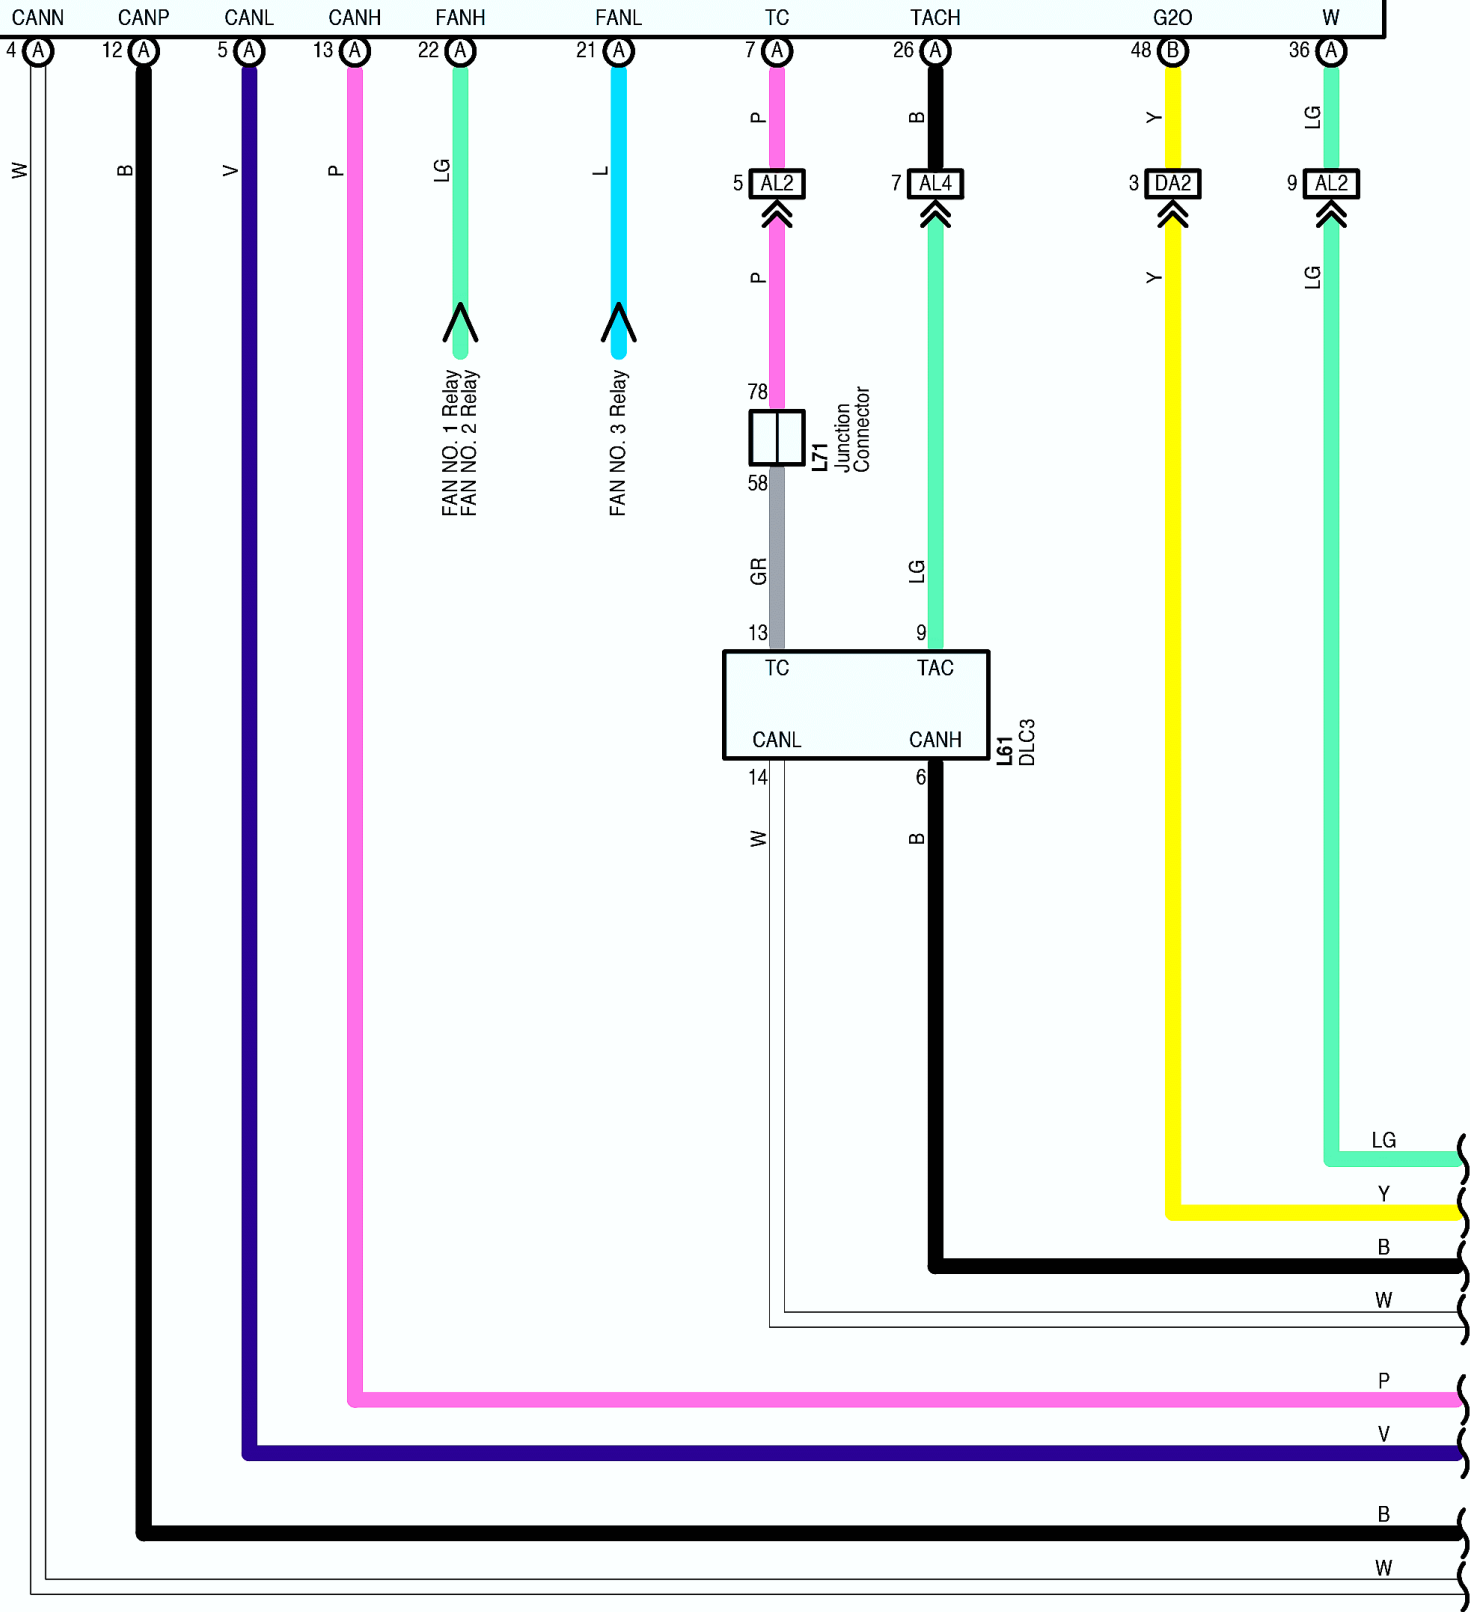 

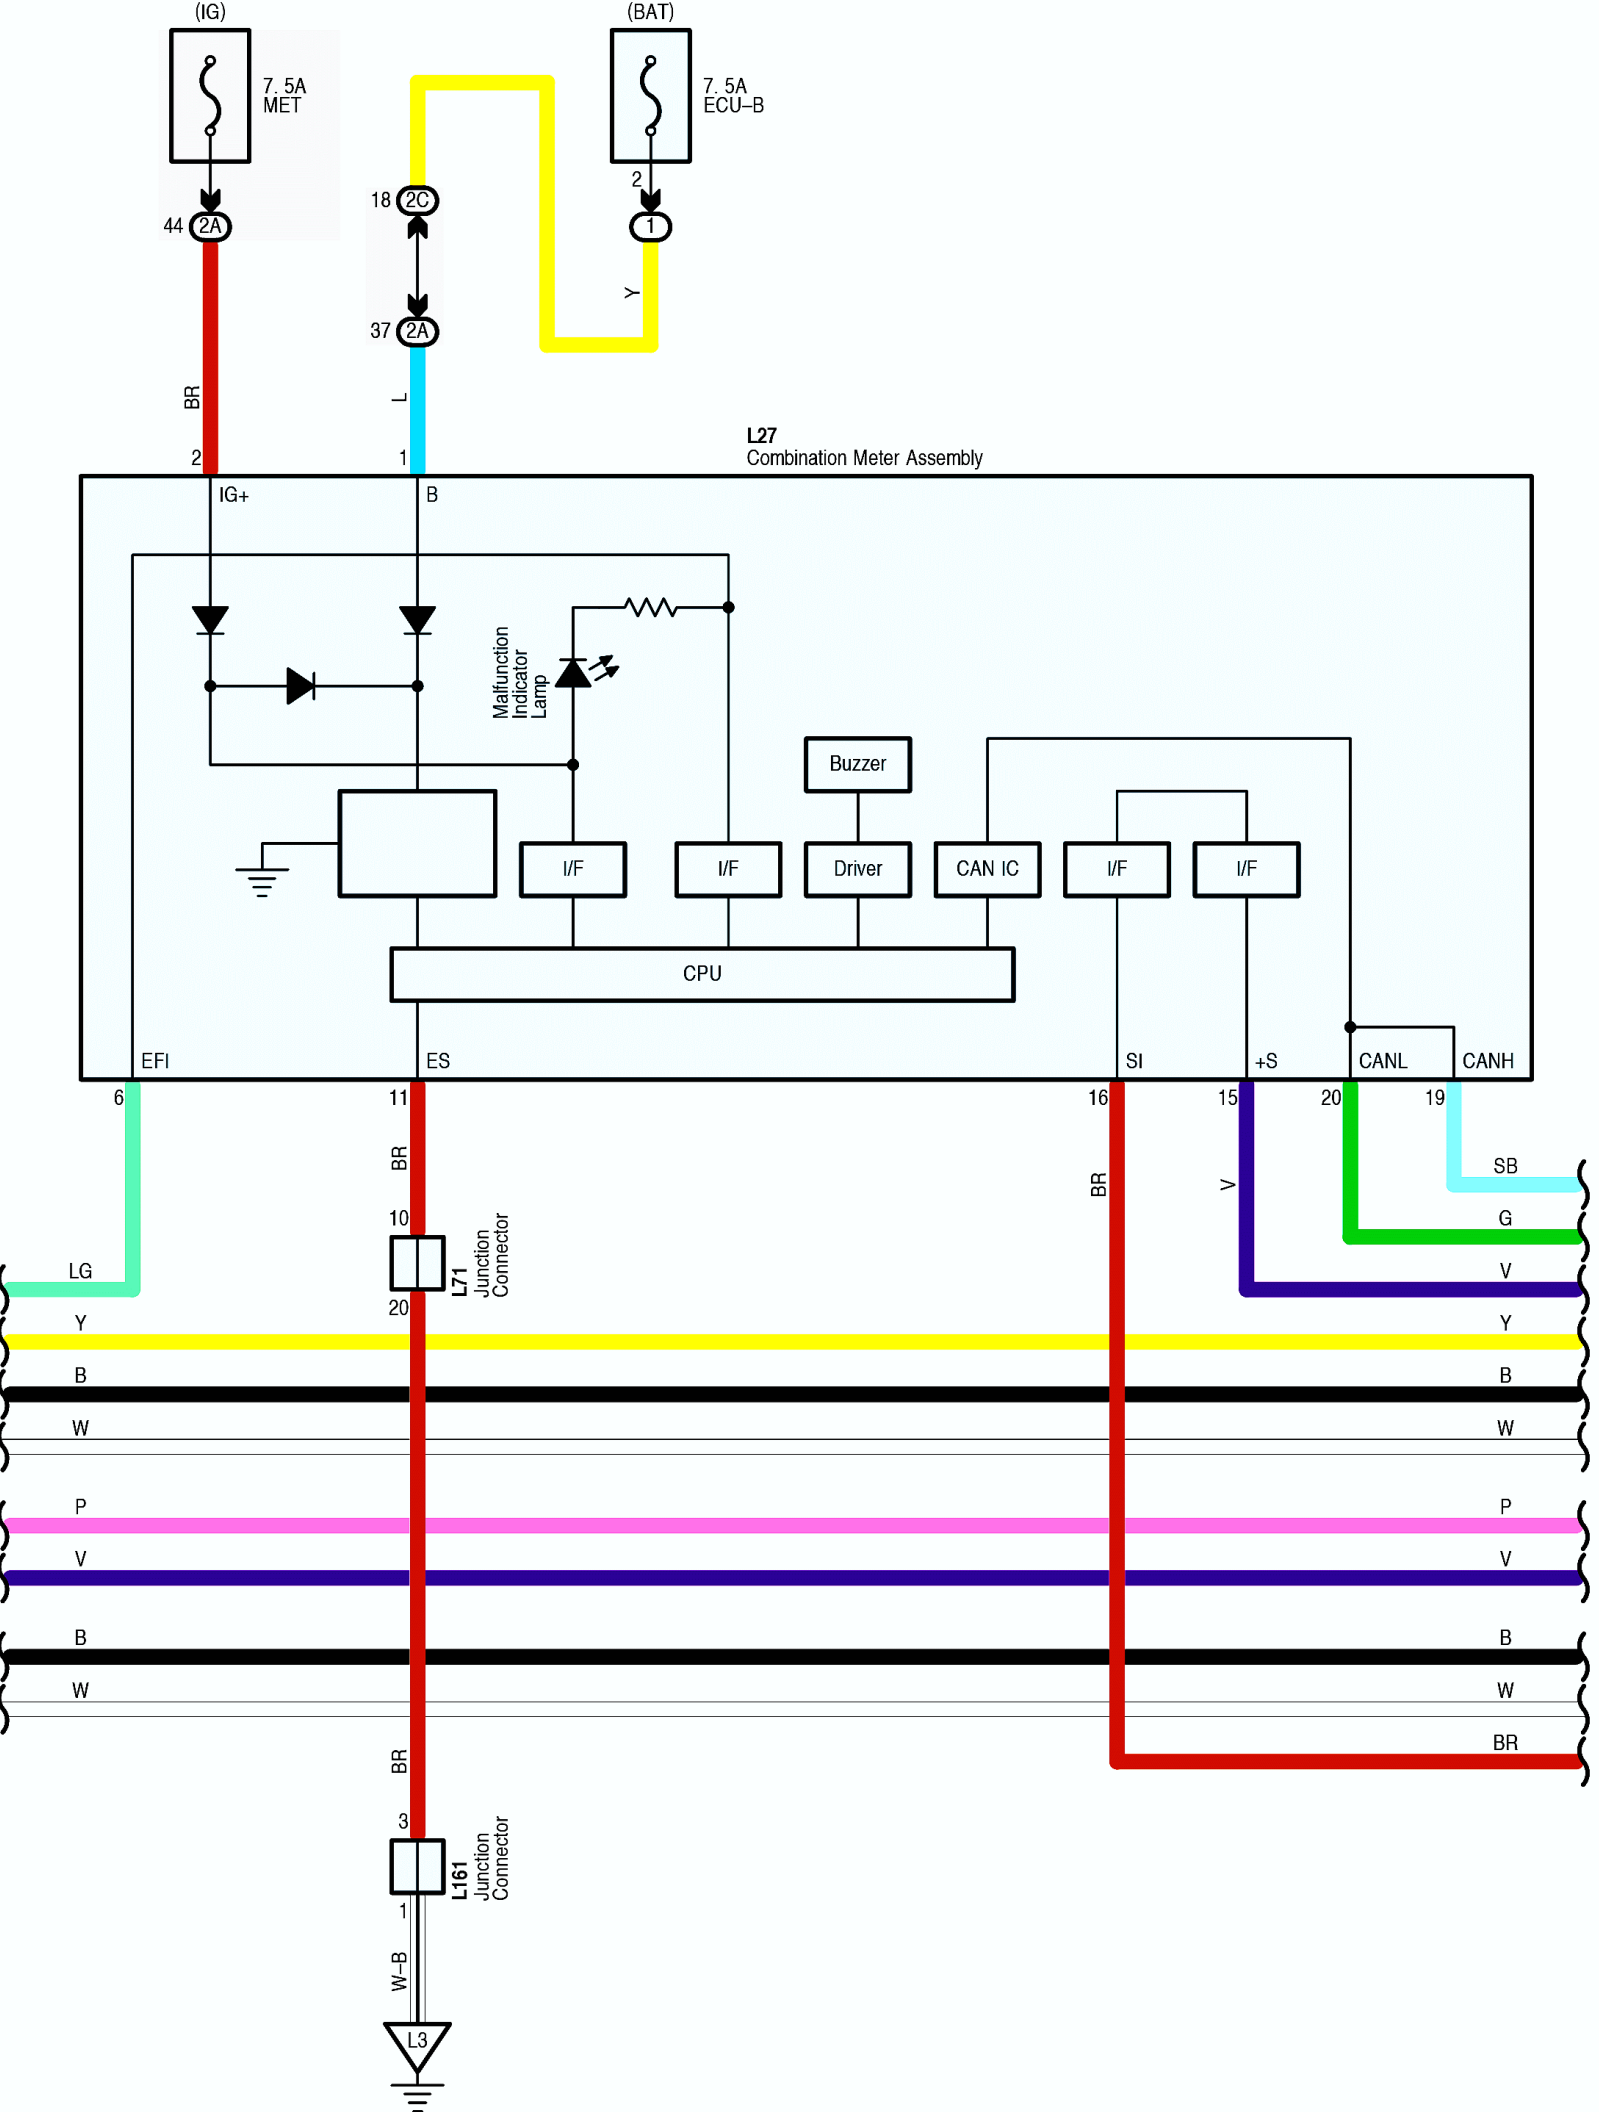 


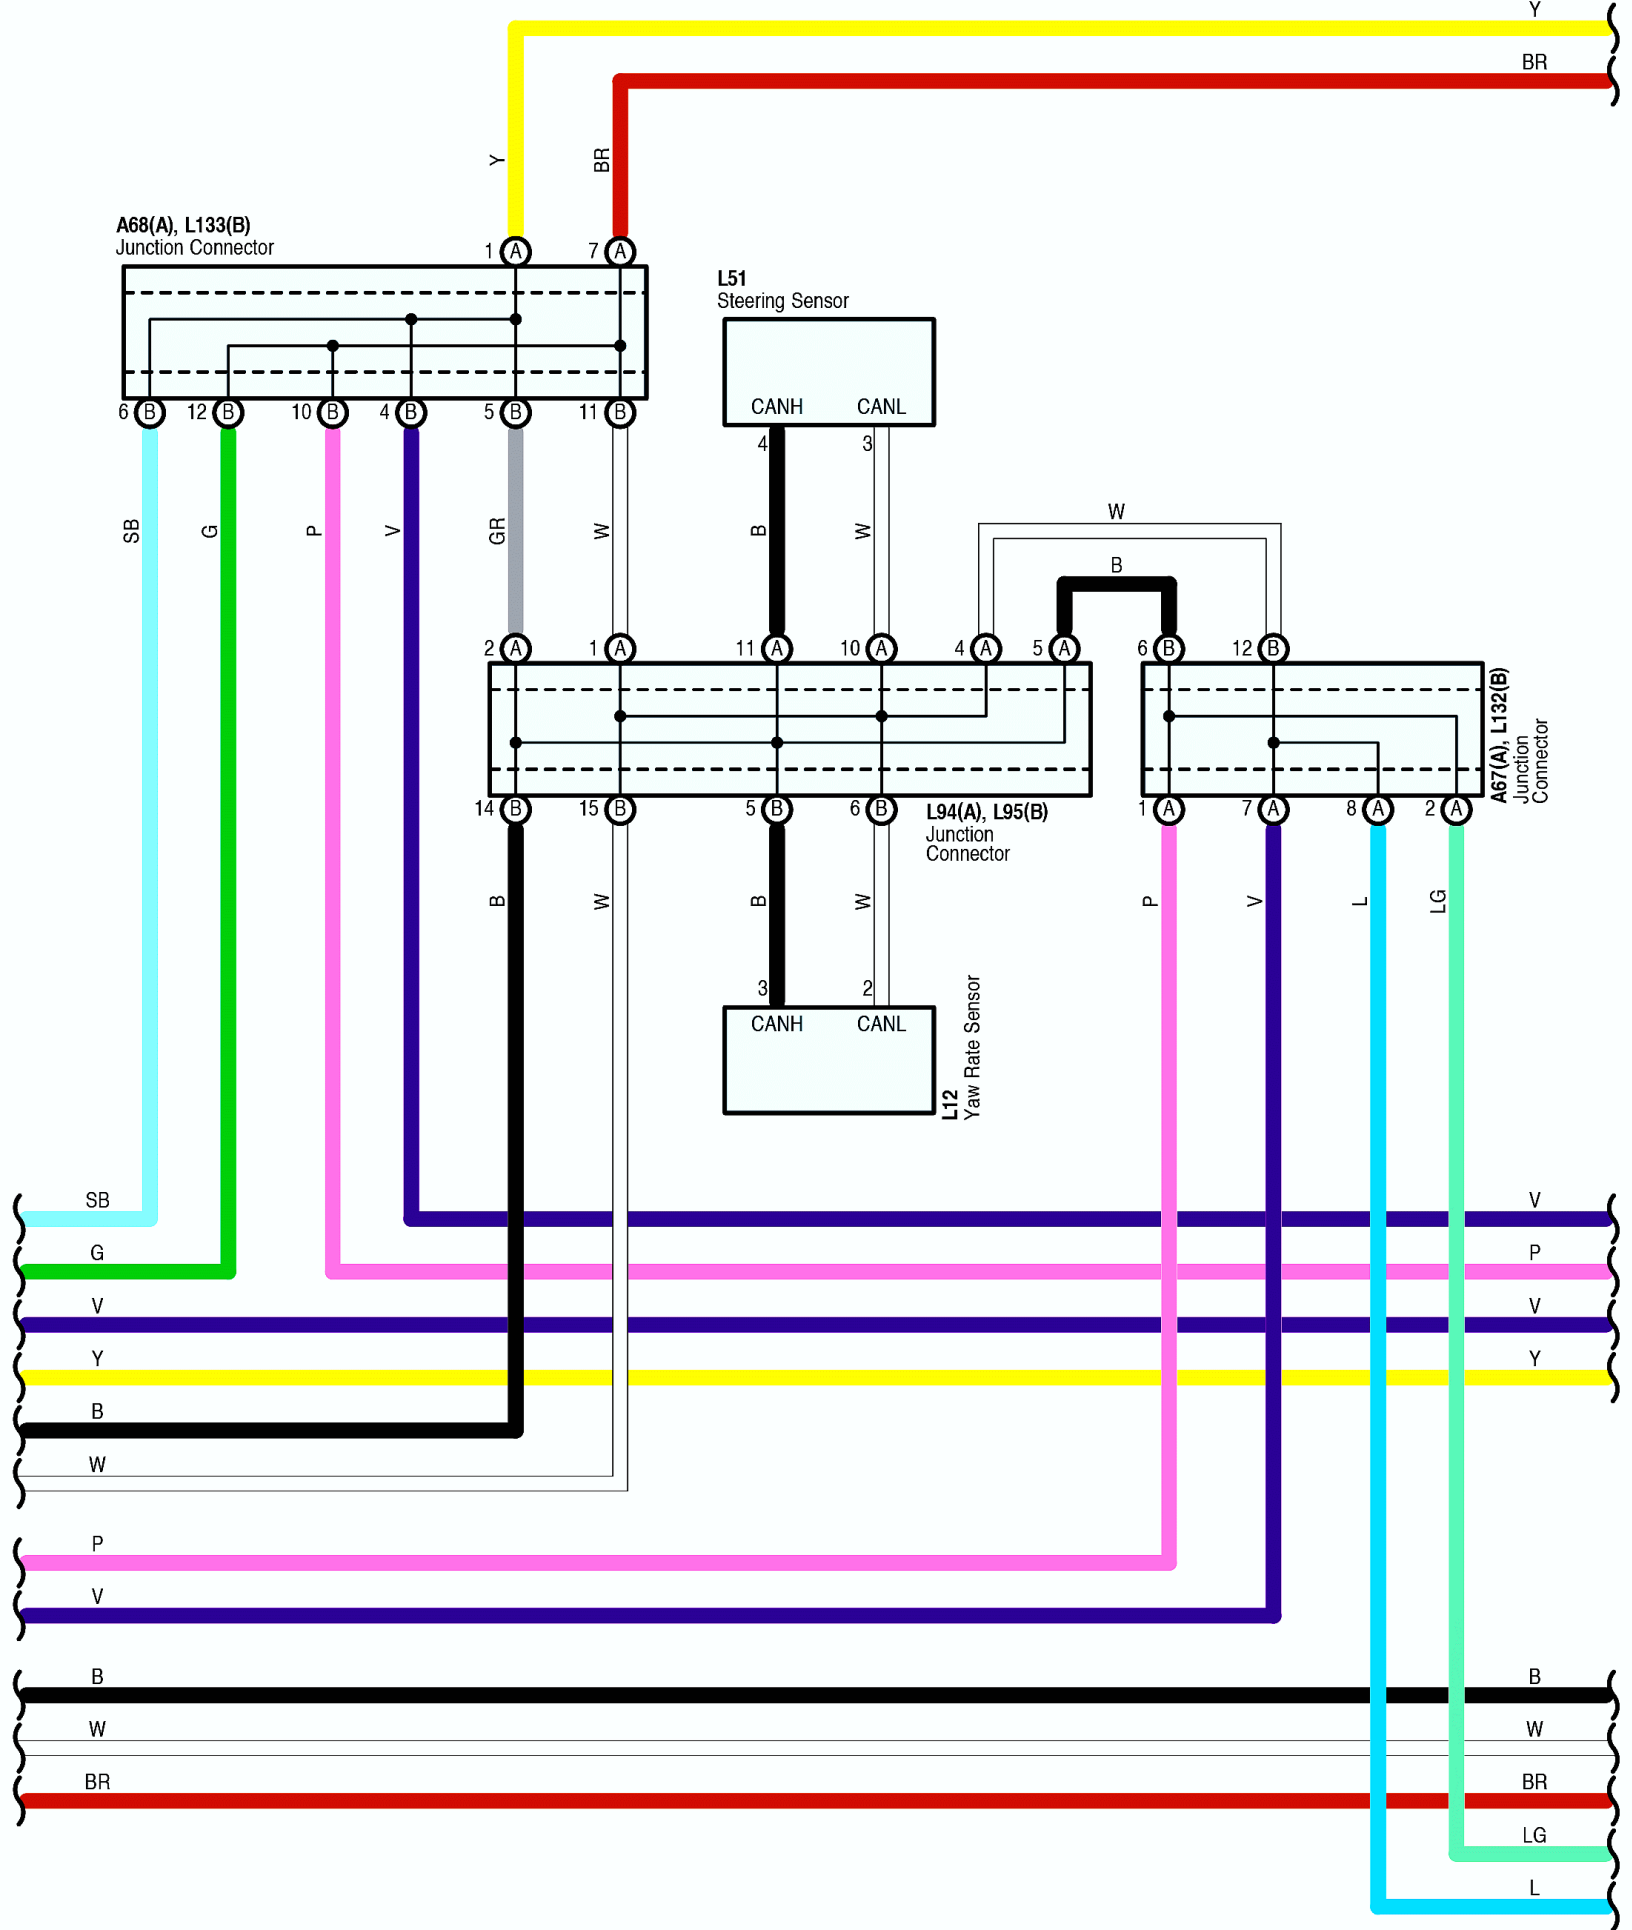   


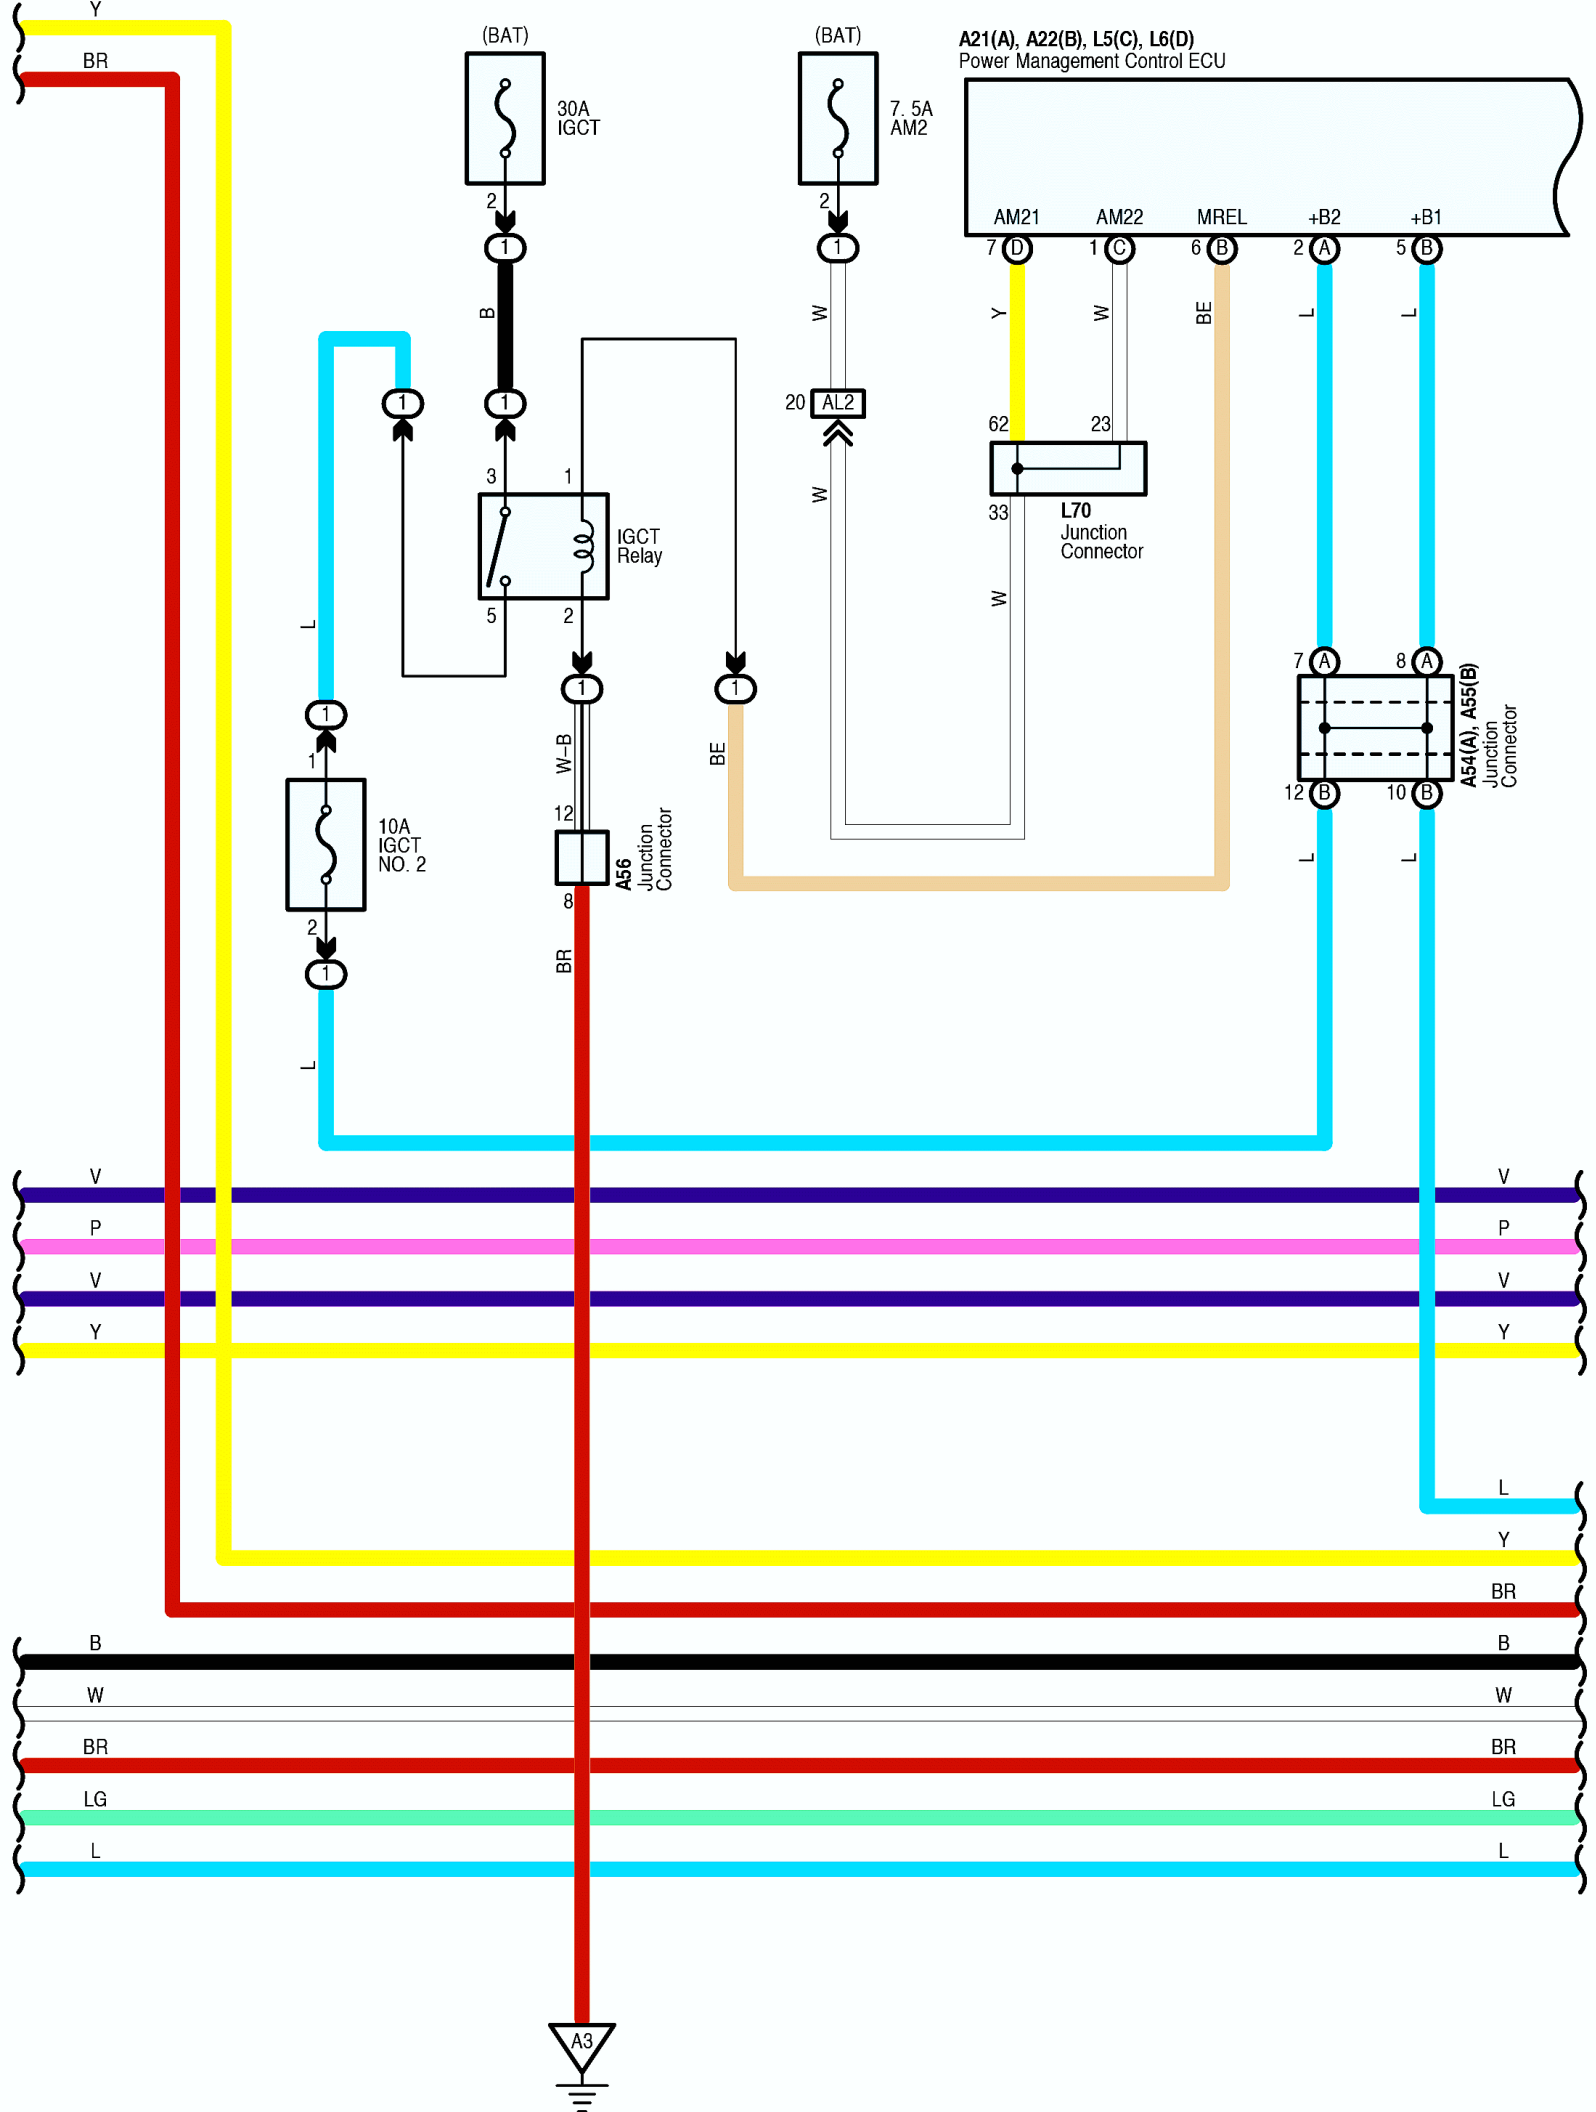

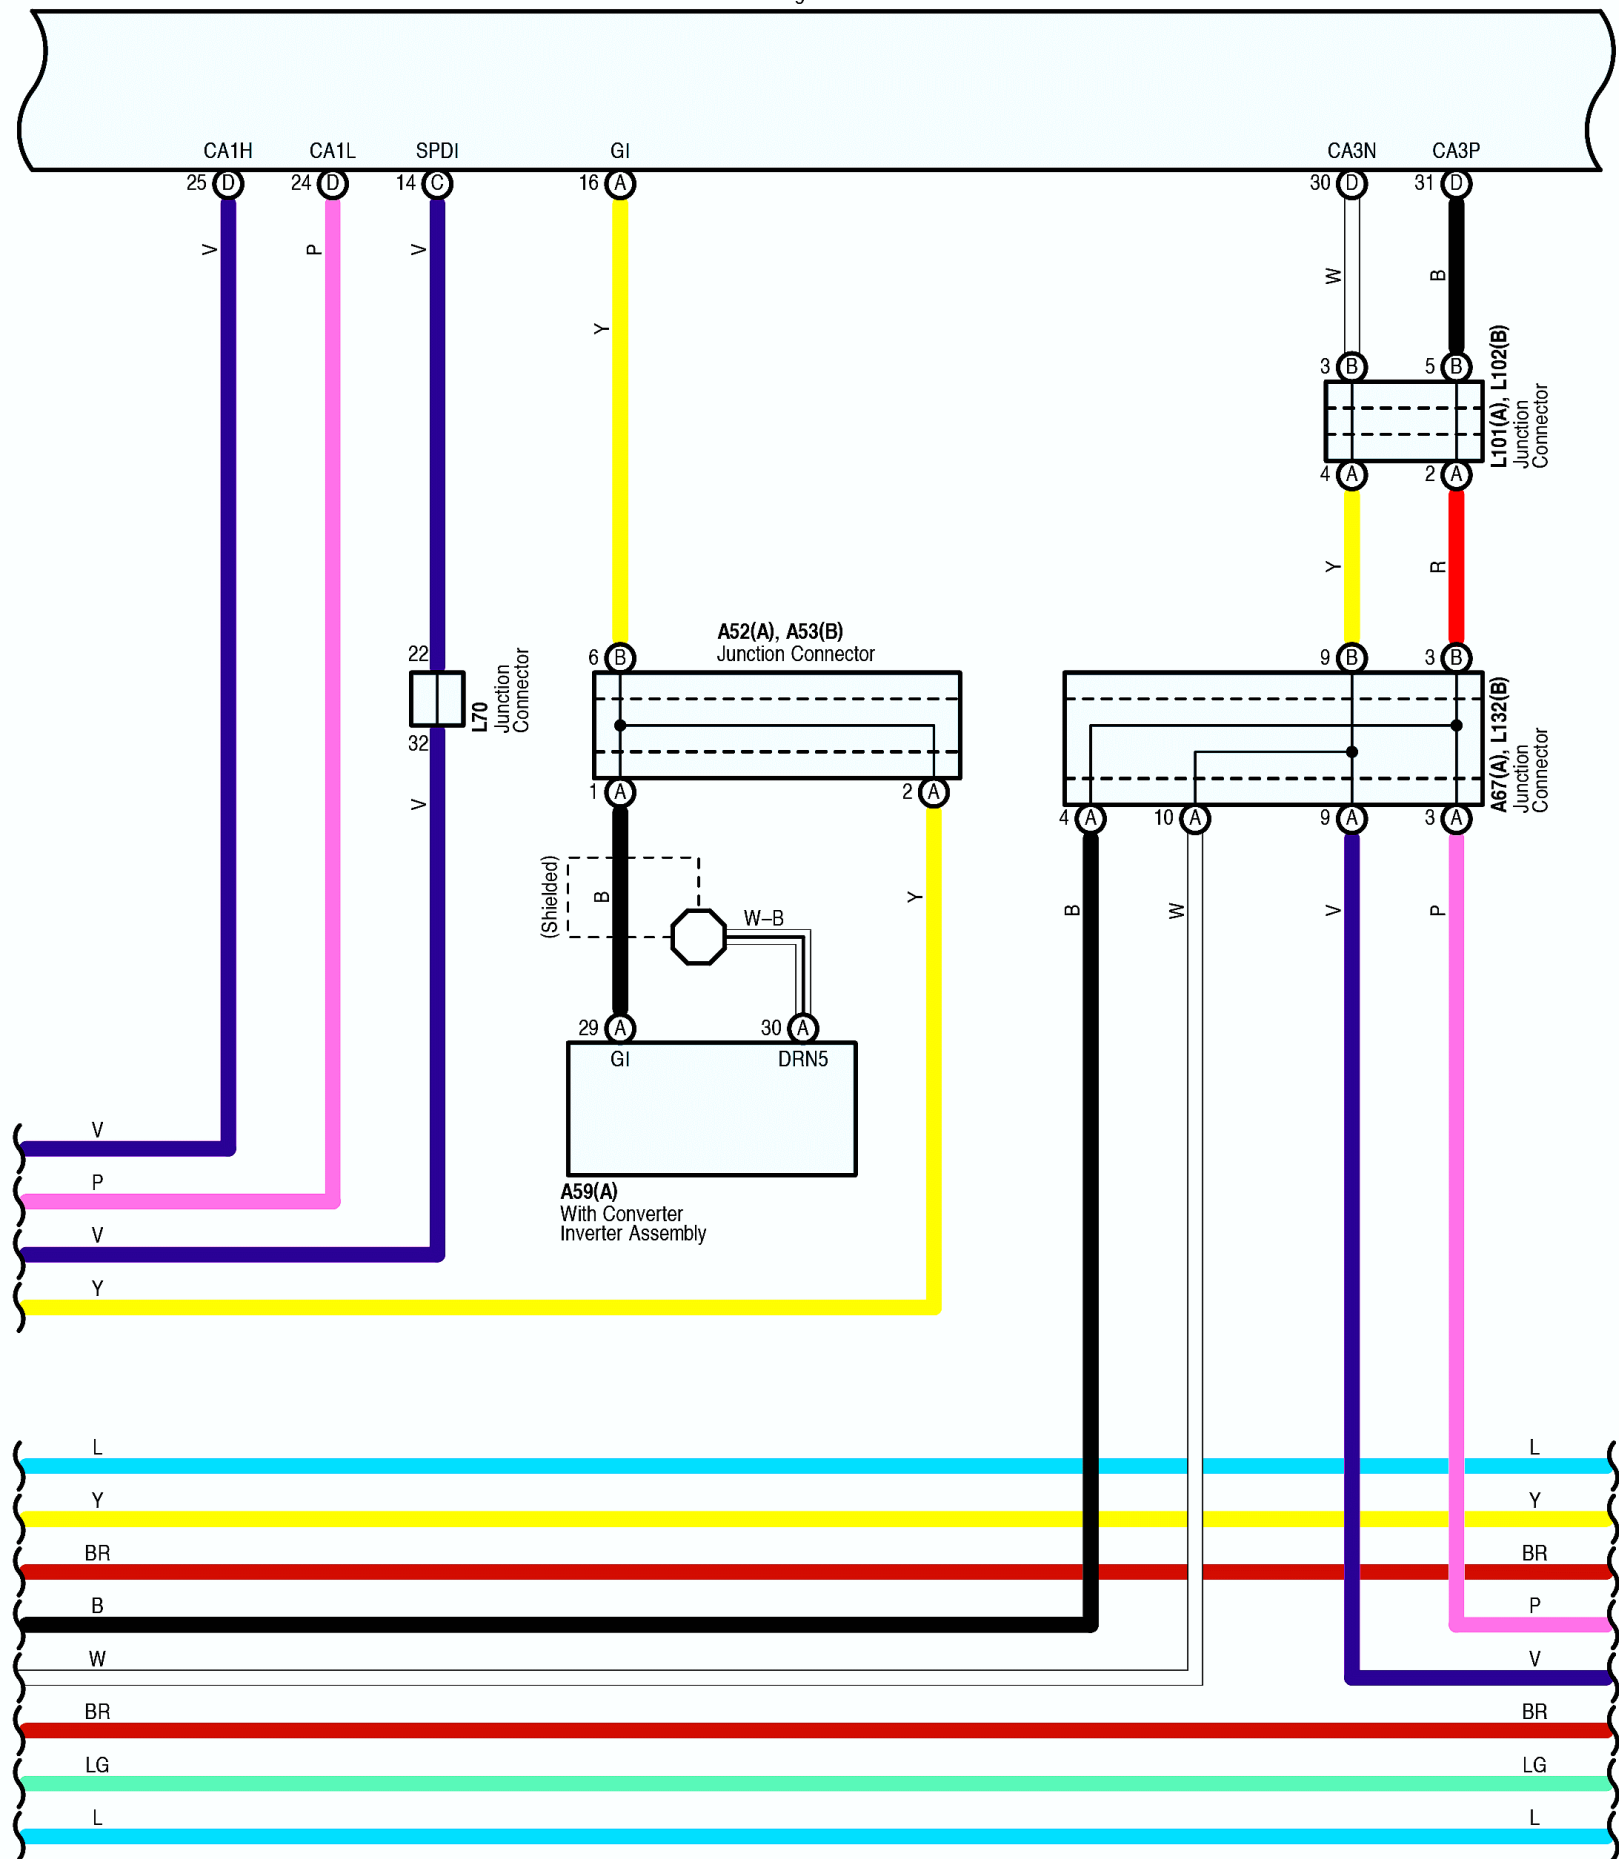


  A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU

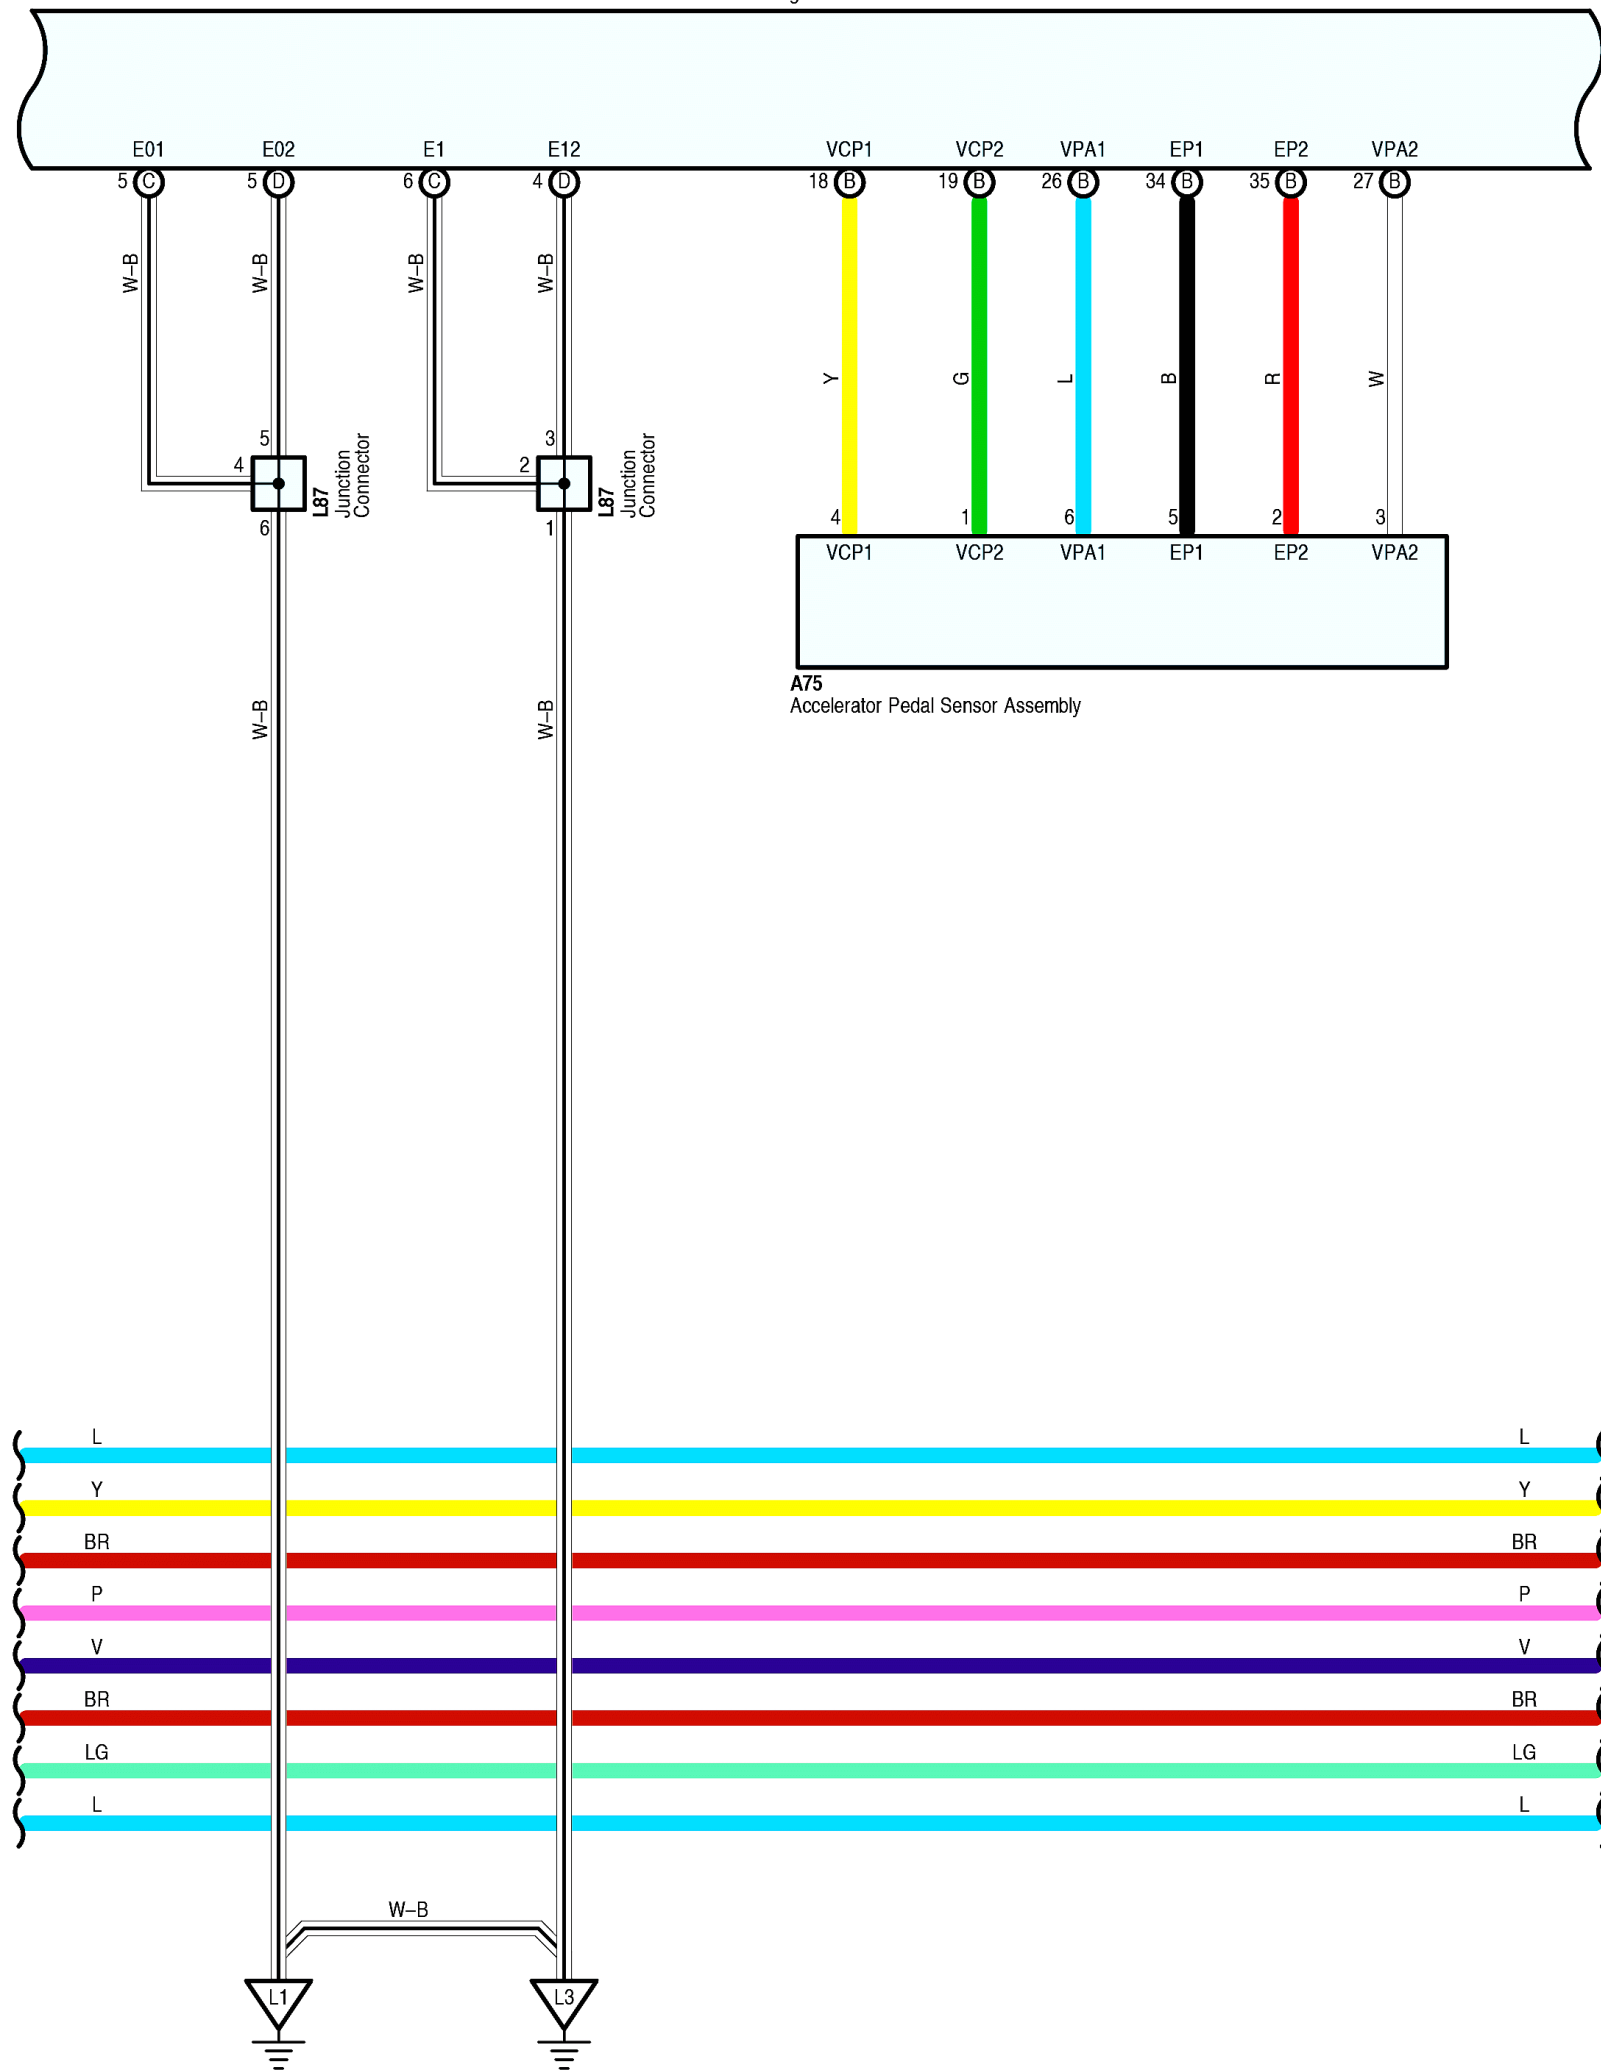


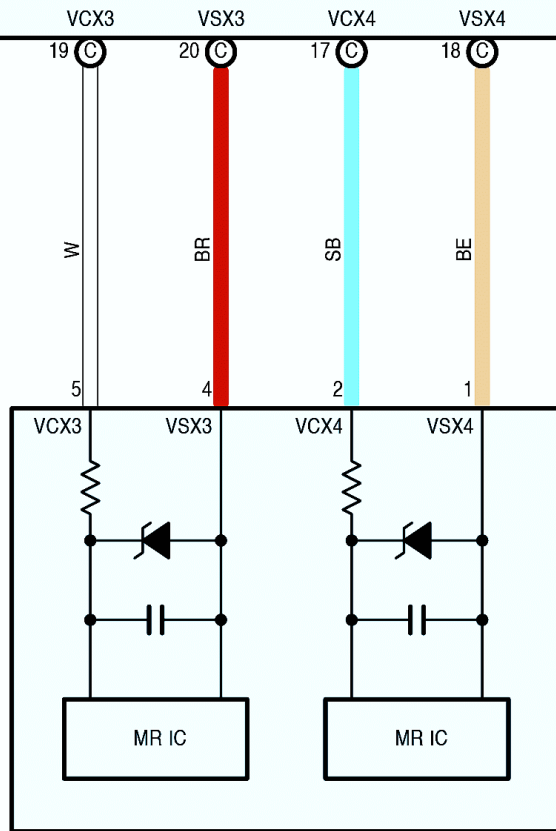


 L126
Shift Lever Position Sensor
(Shift Lock Control Unit Assembly)

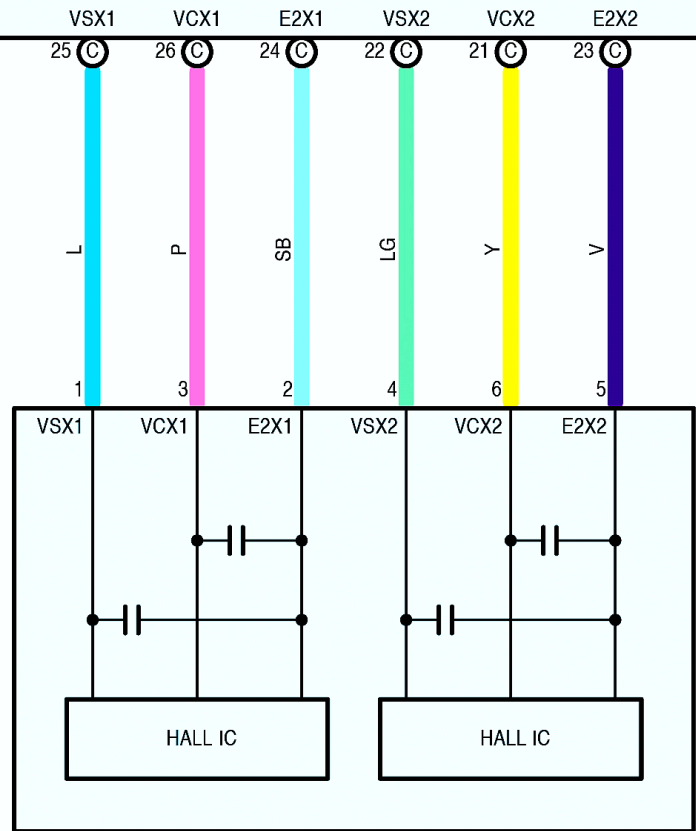


  L127
No. 2 Shift Lever Position Sensor
(Shift Lock Control Unit Assembly)

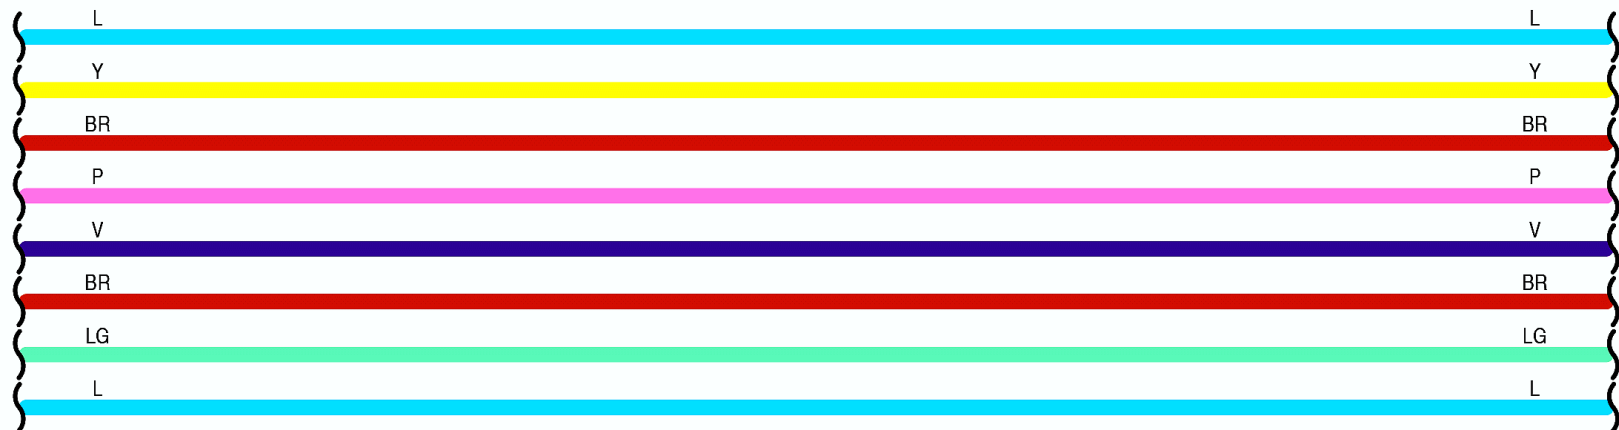

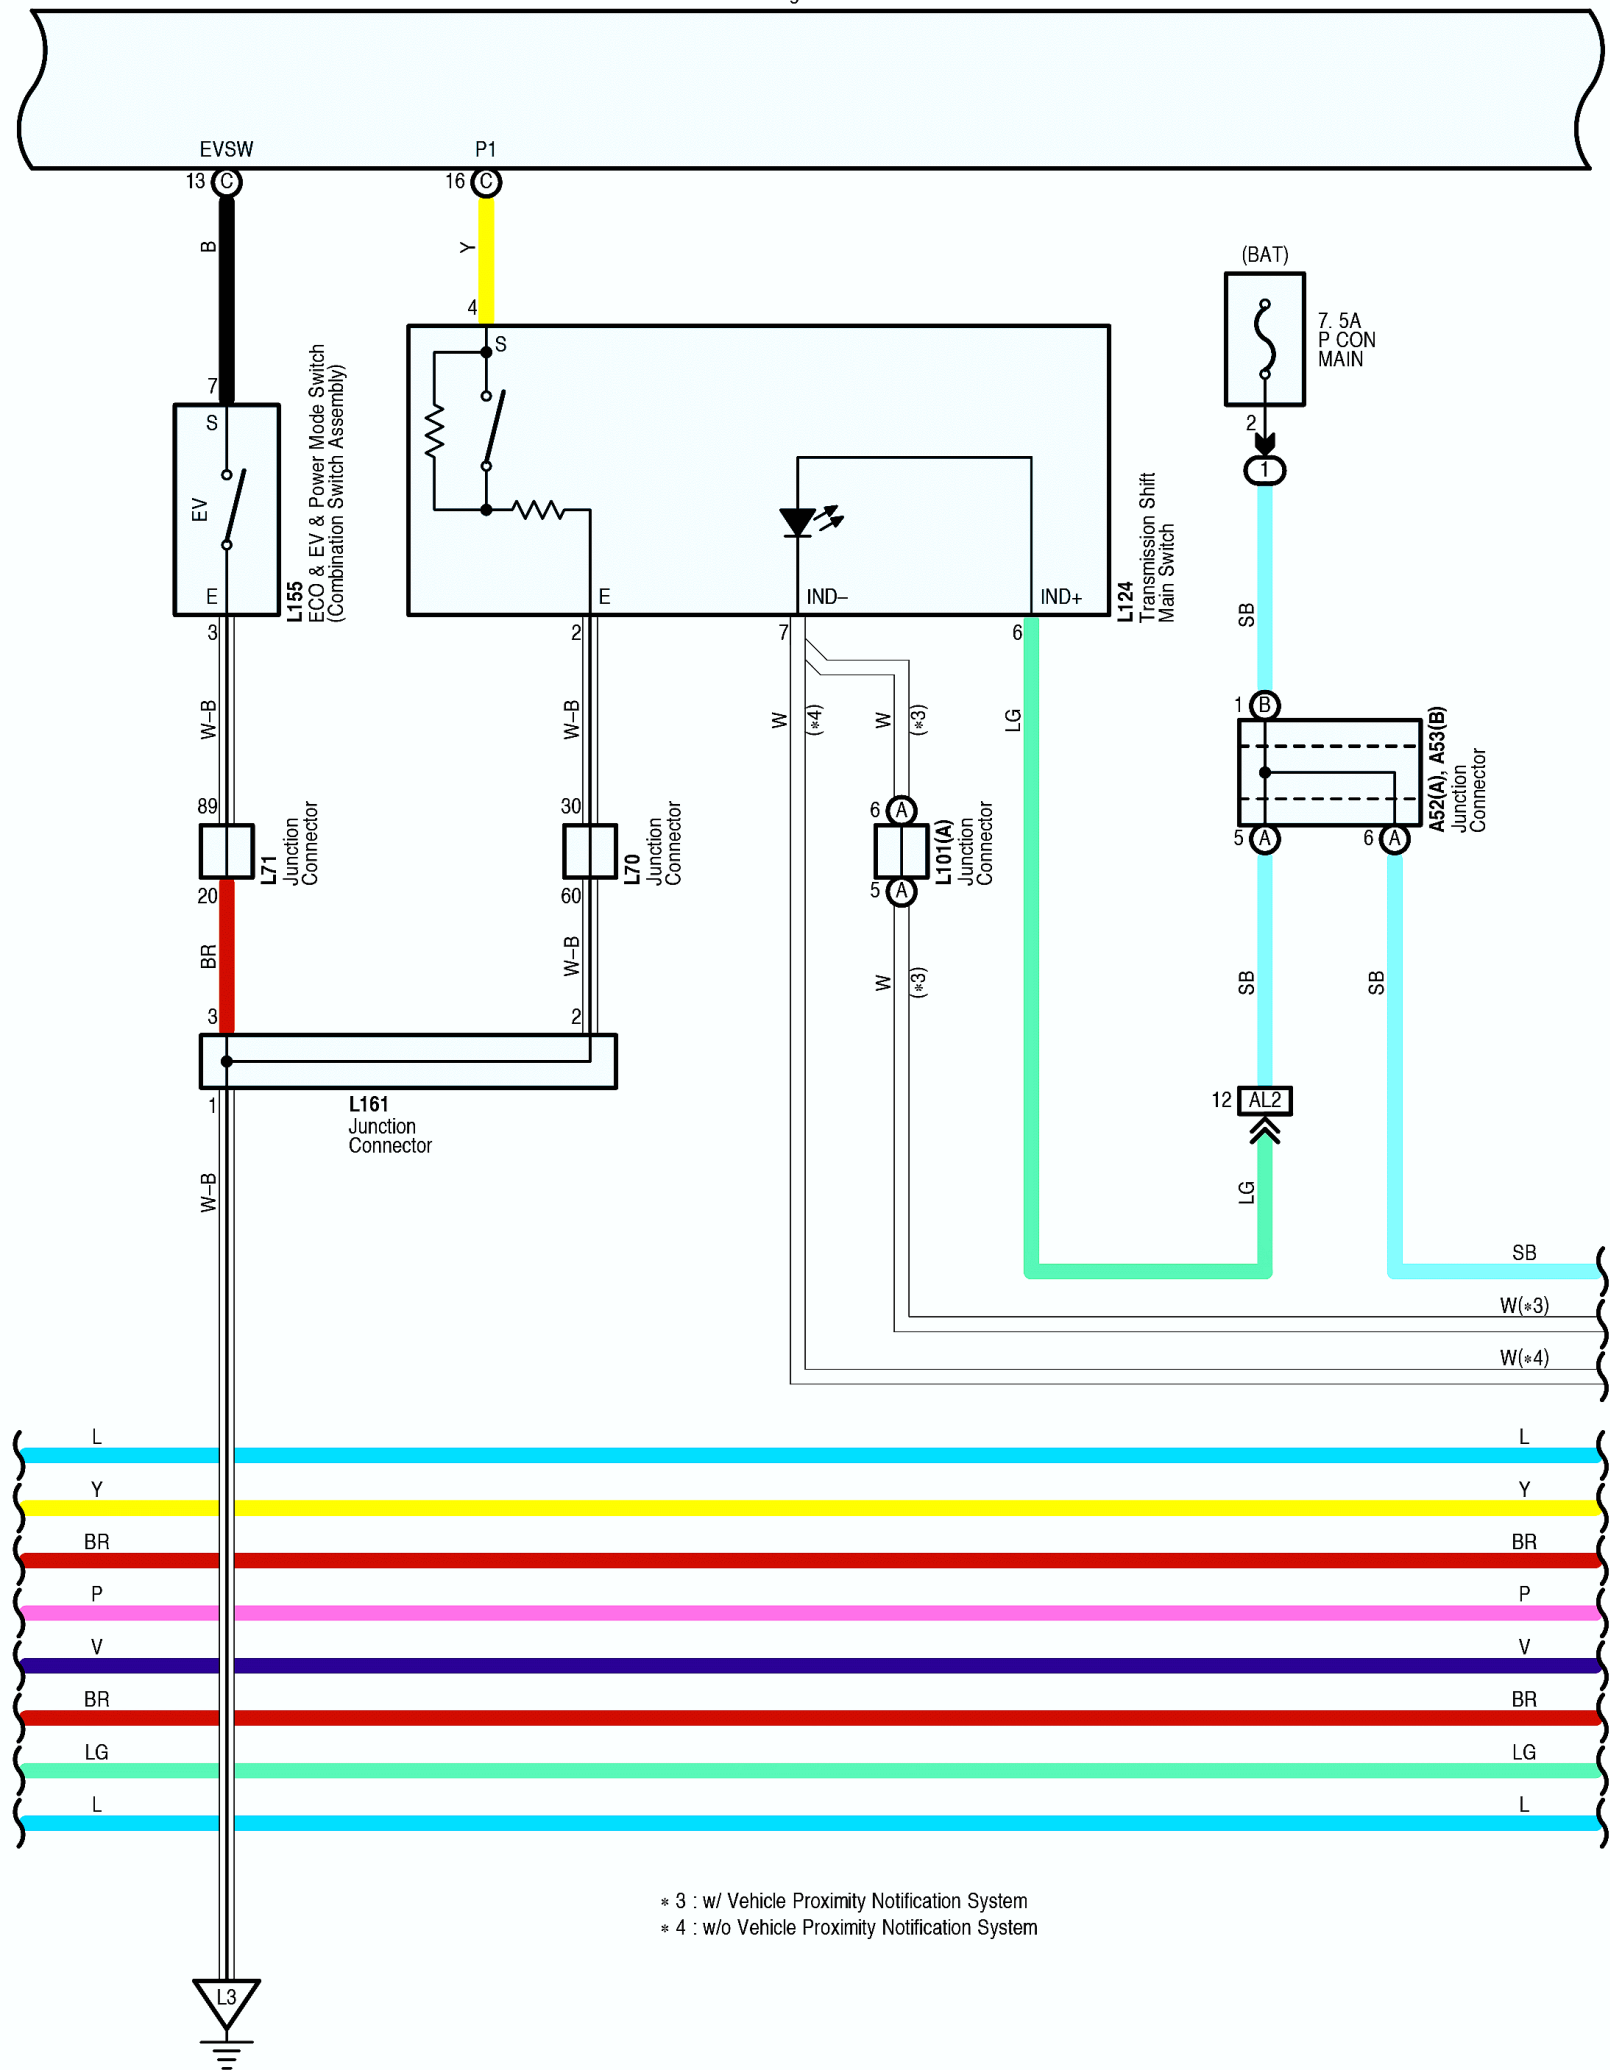


 
* 3 : w/ Vehicle Proximity Notification System
* 4 : w/o Vehicle Proximity Notification System

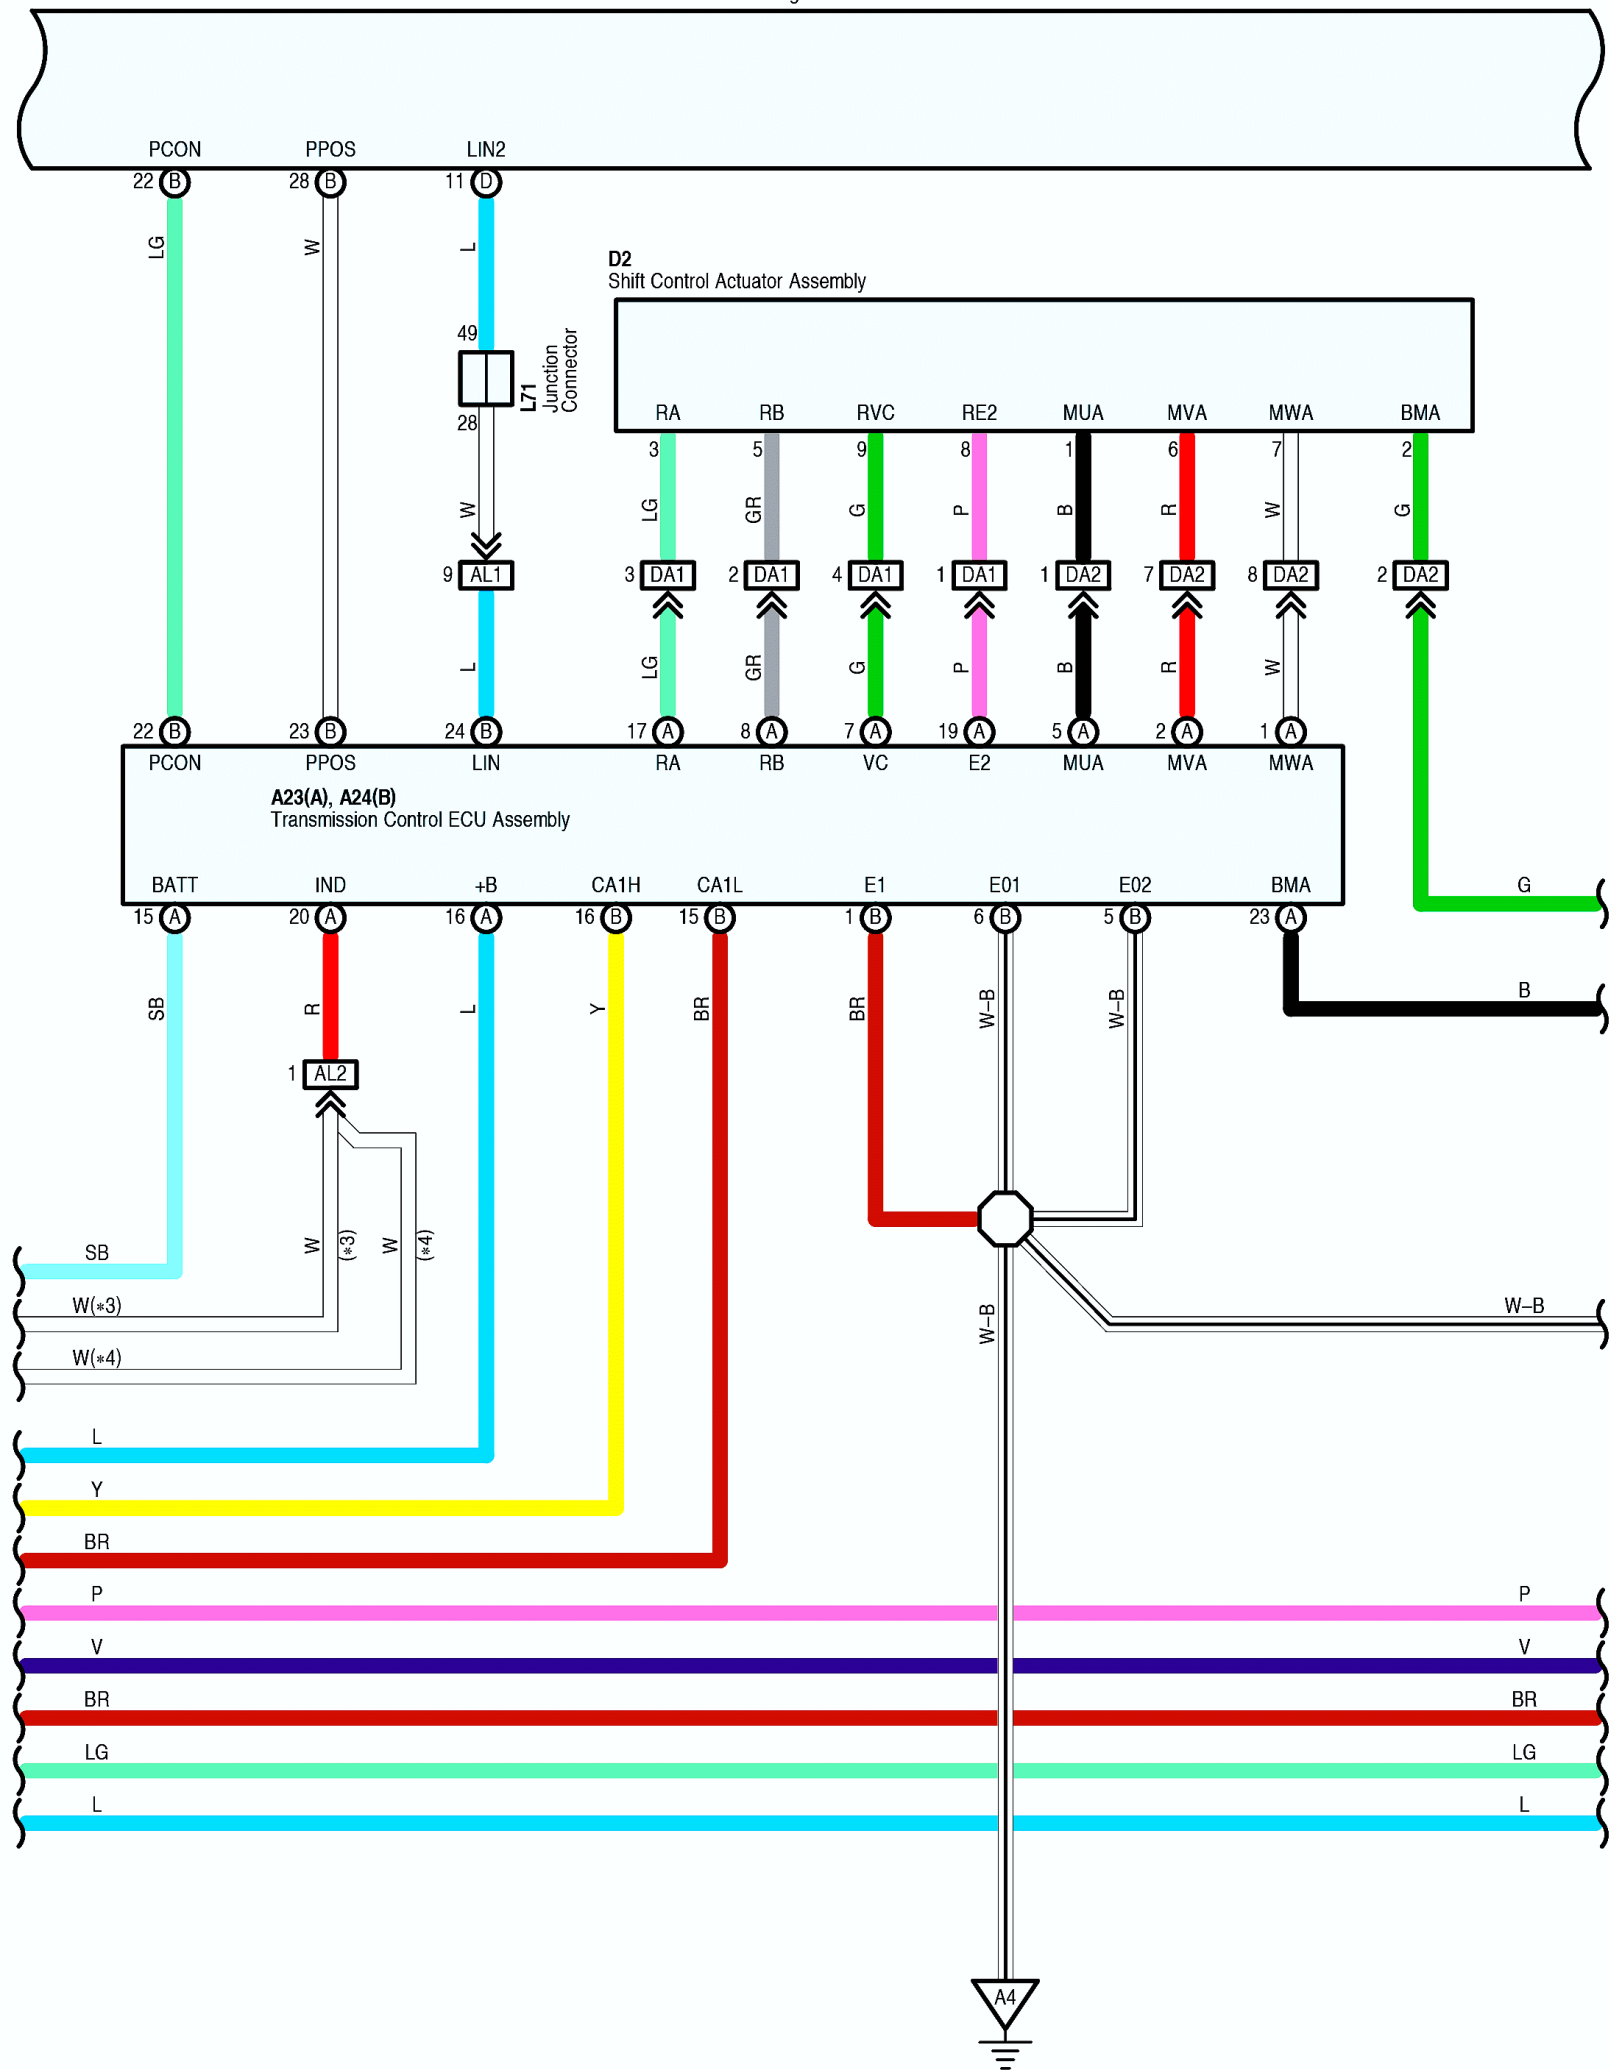



A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU

    * 1 : w/ Dynamic Radar Cruise Control
* 2 : w/o Dynamic Radar Cruise Control

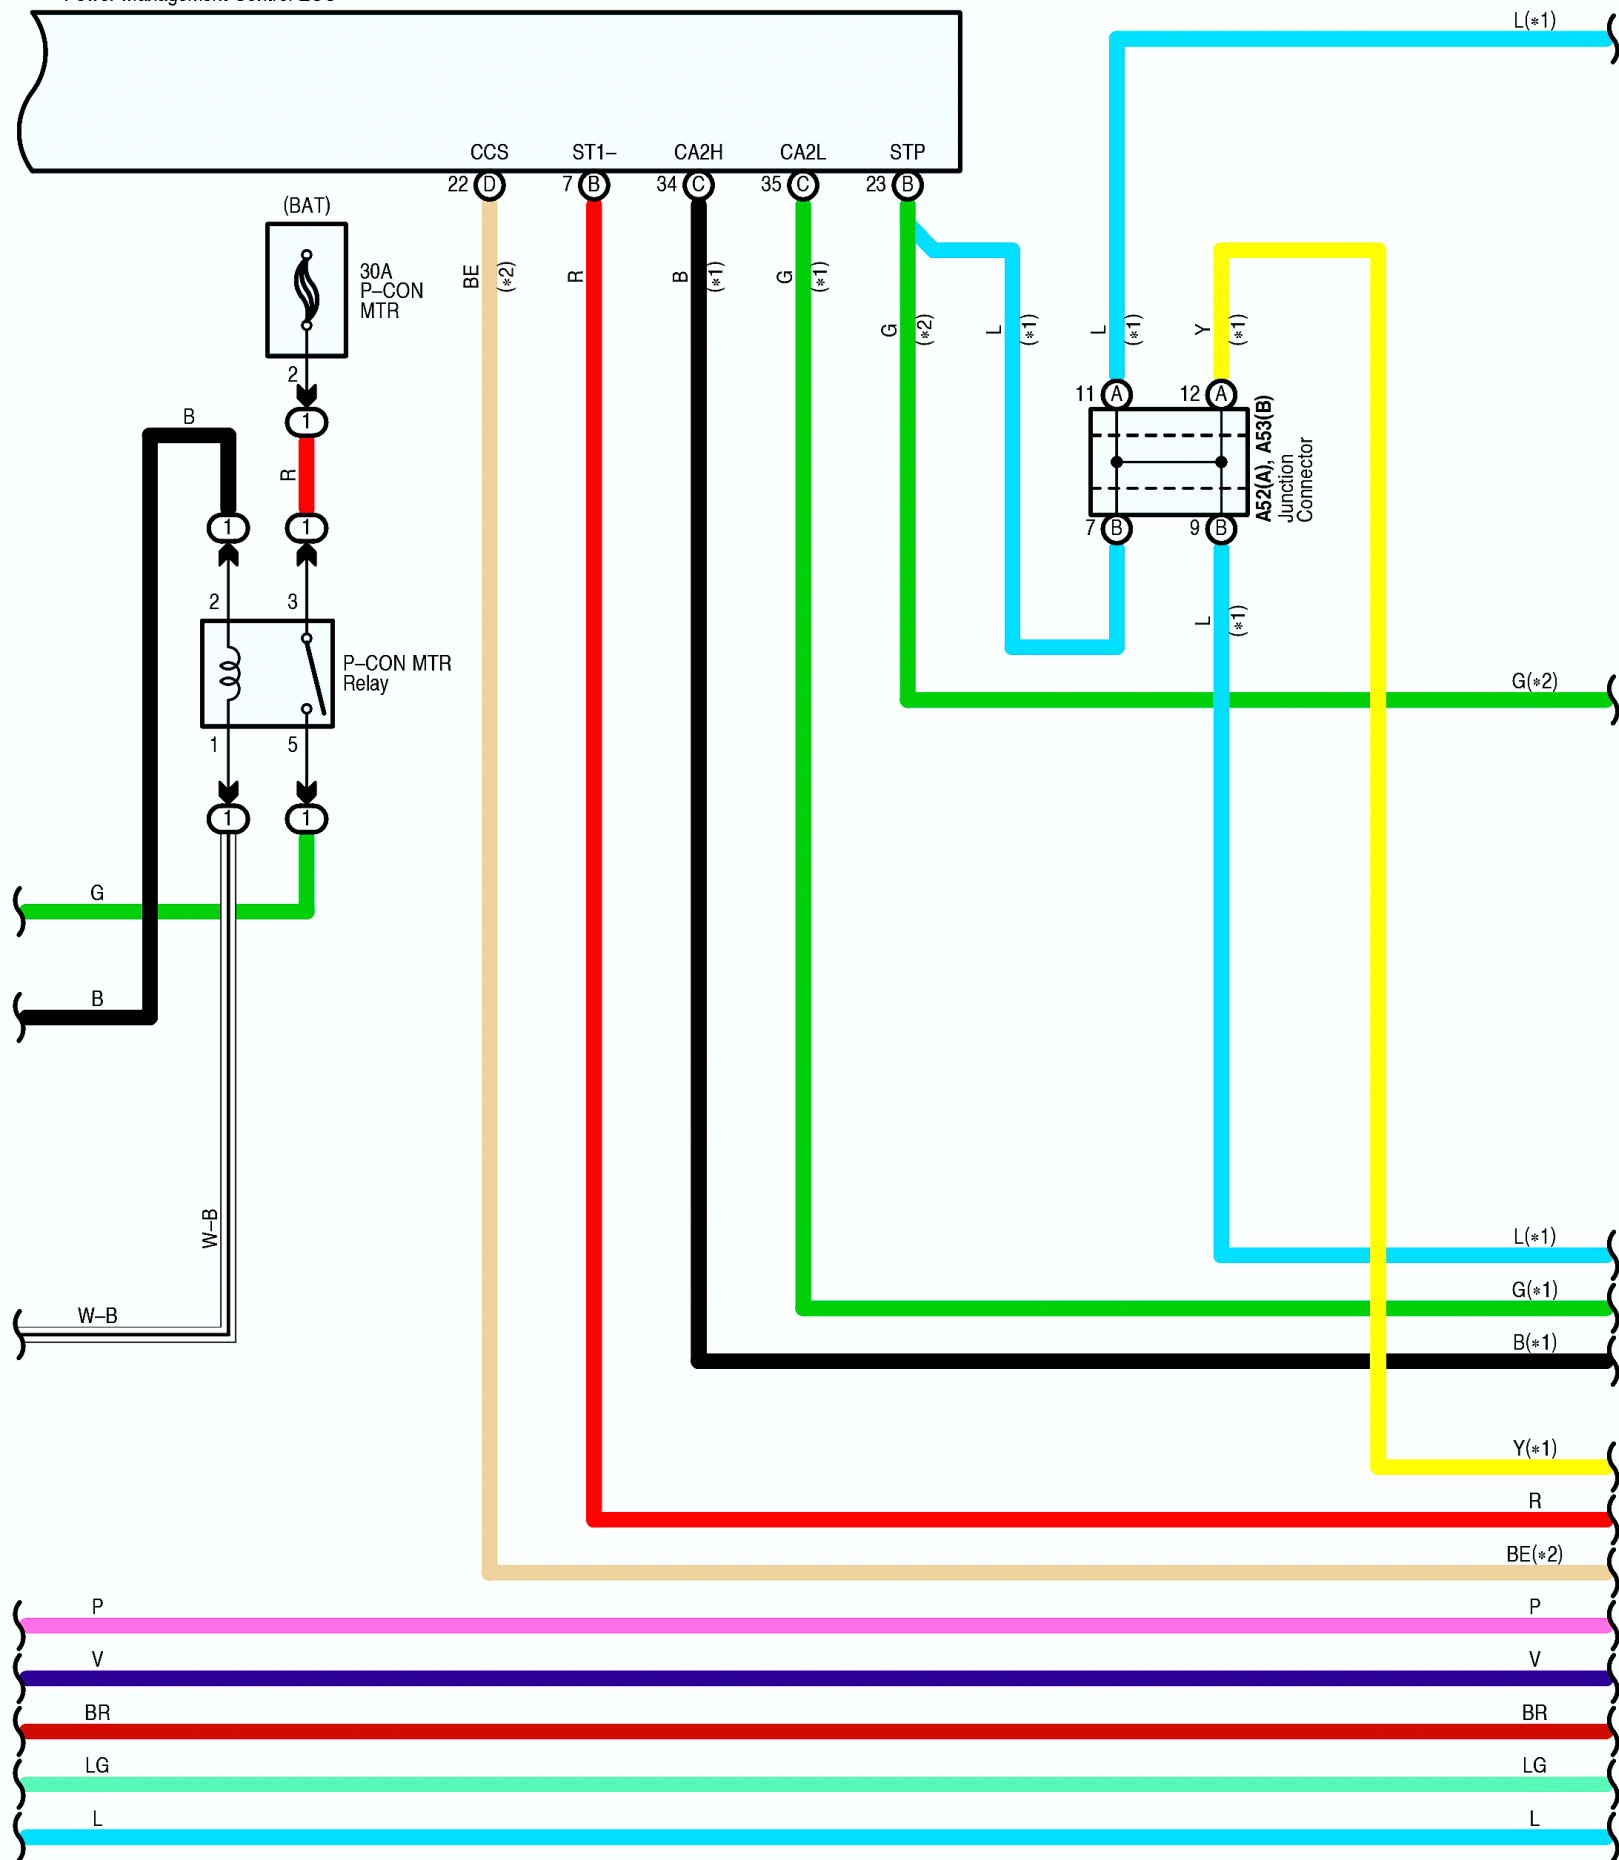


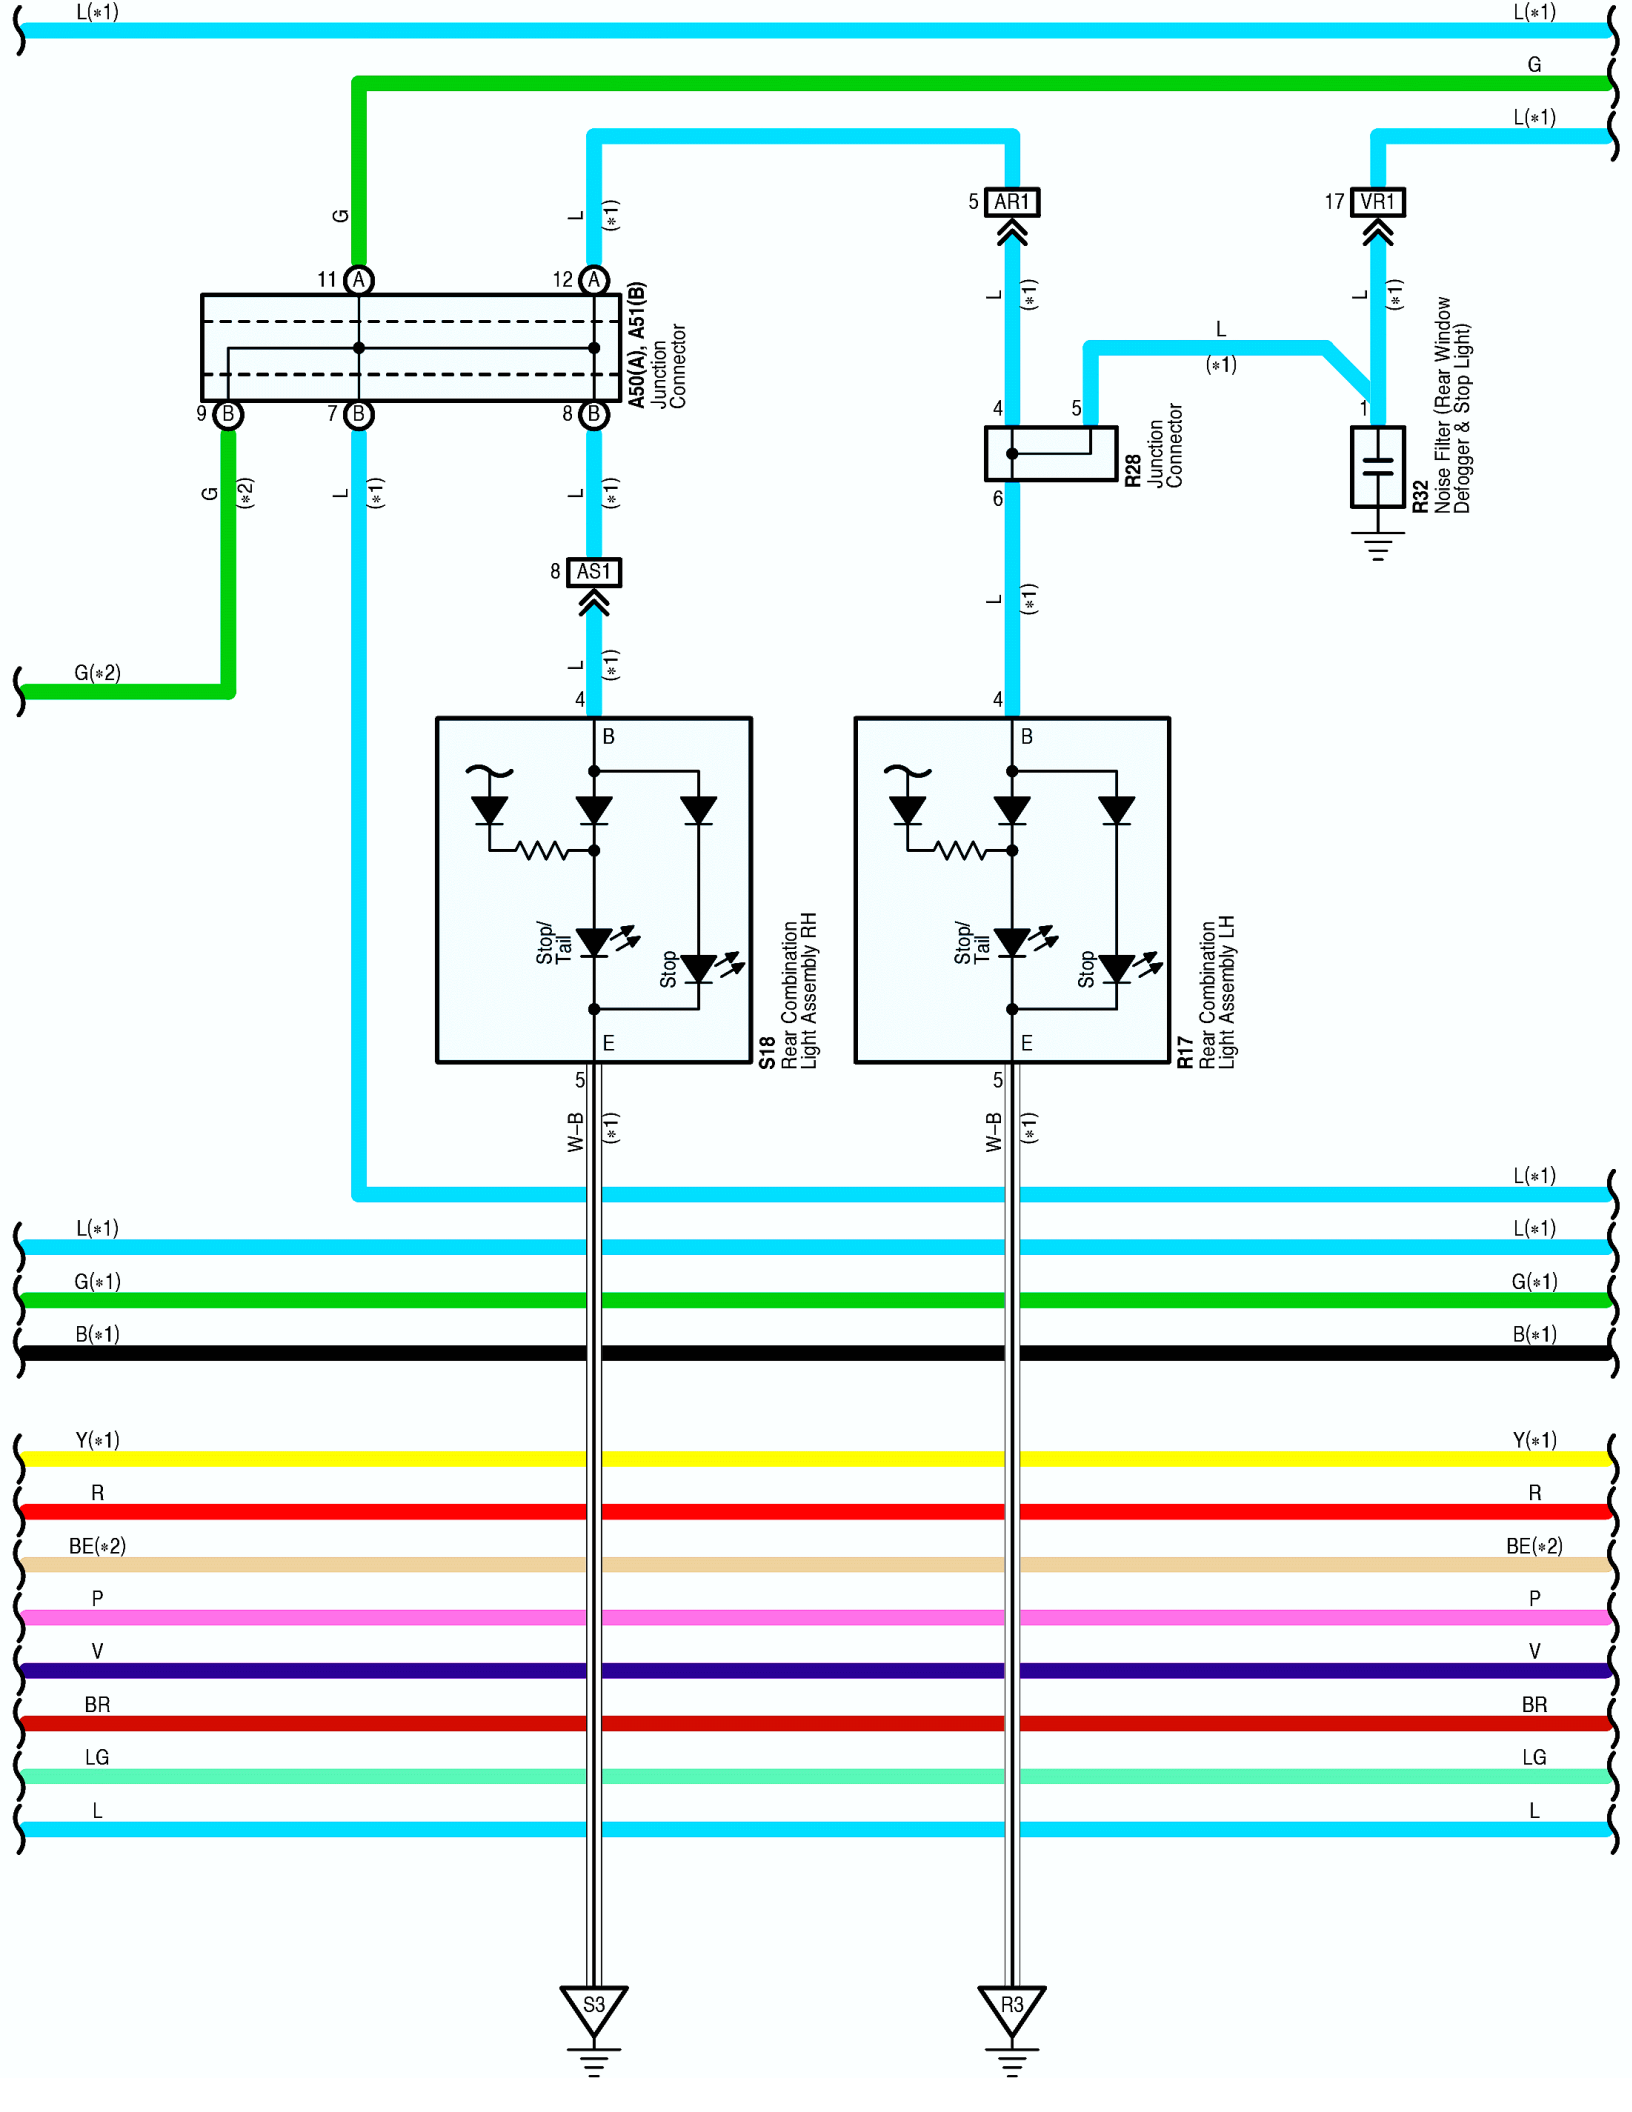

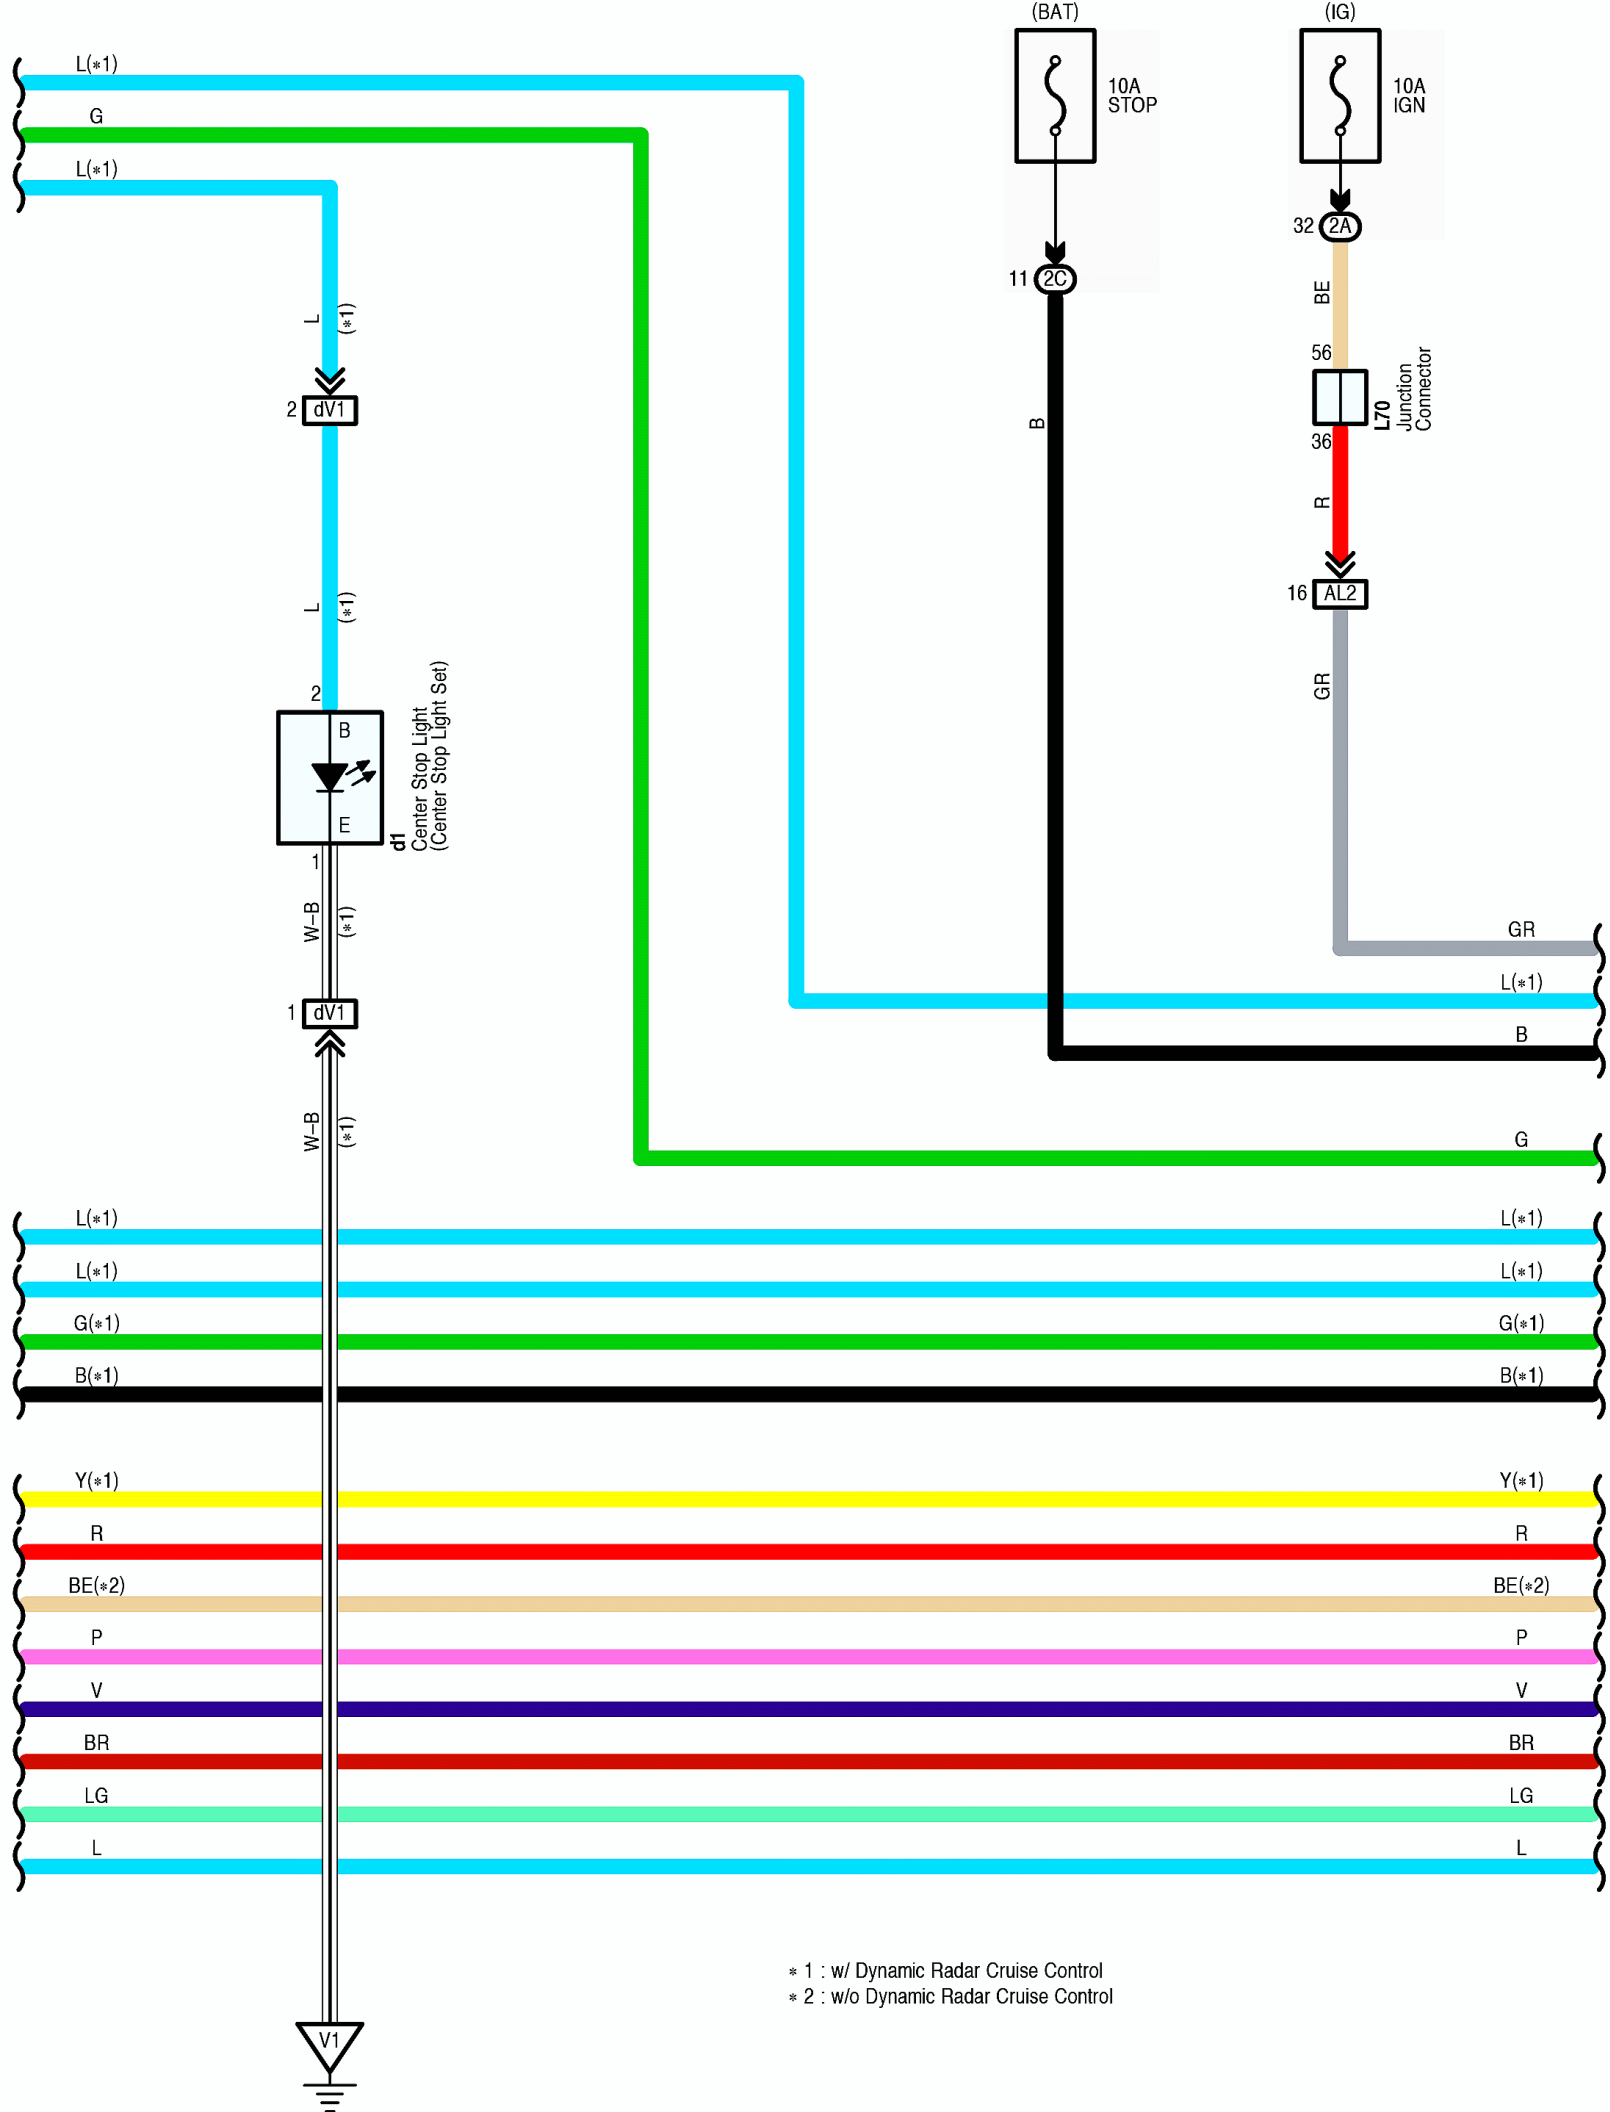

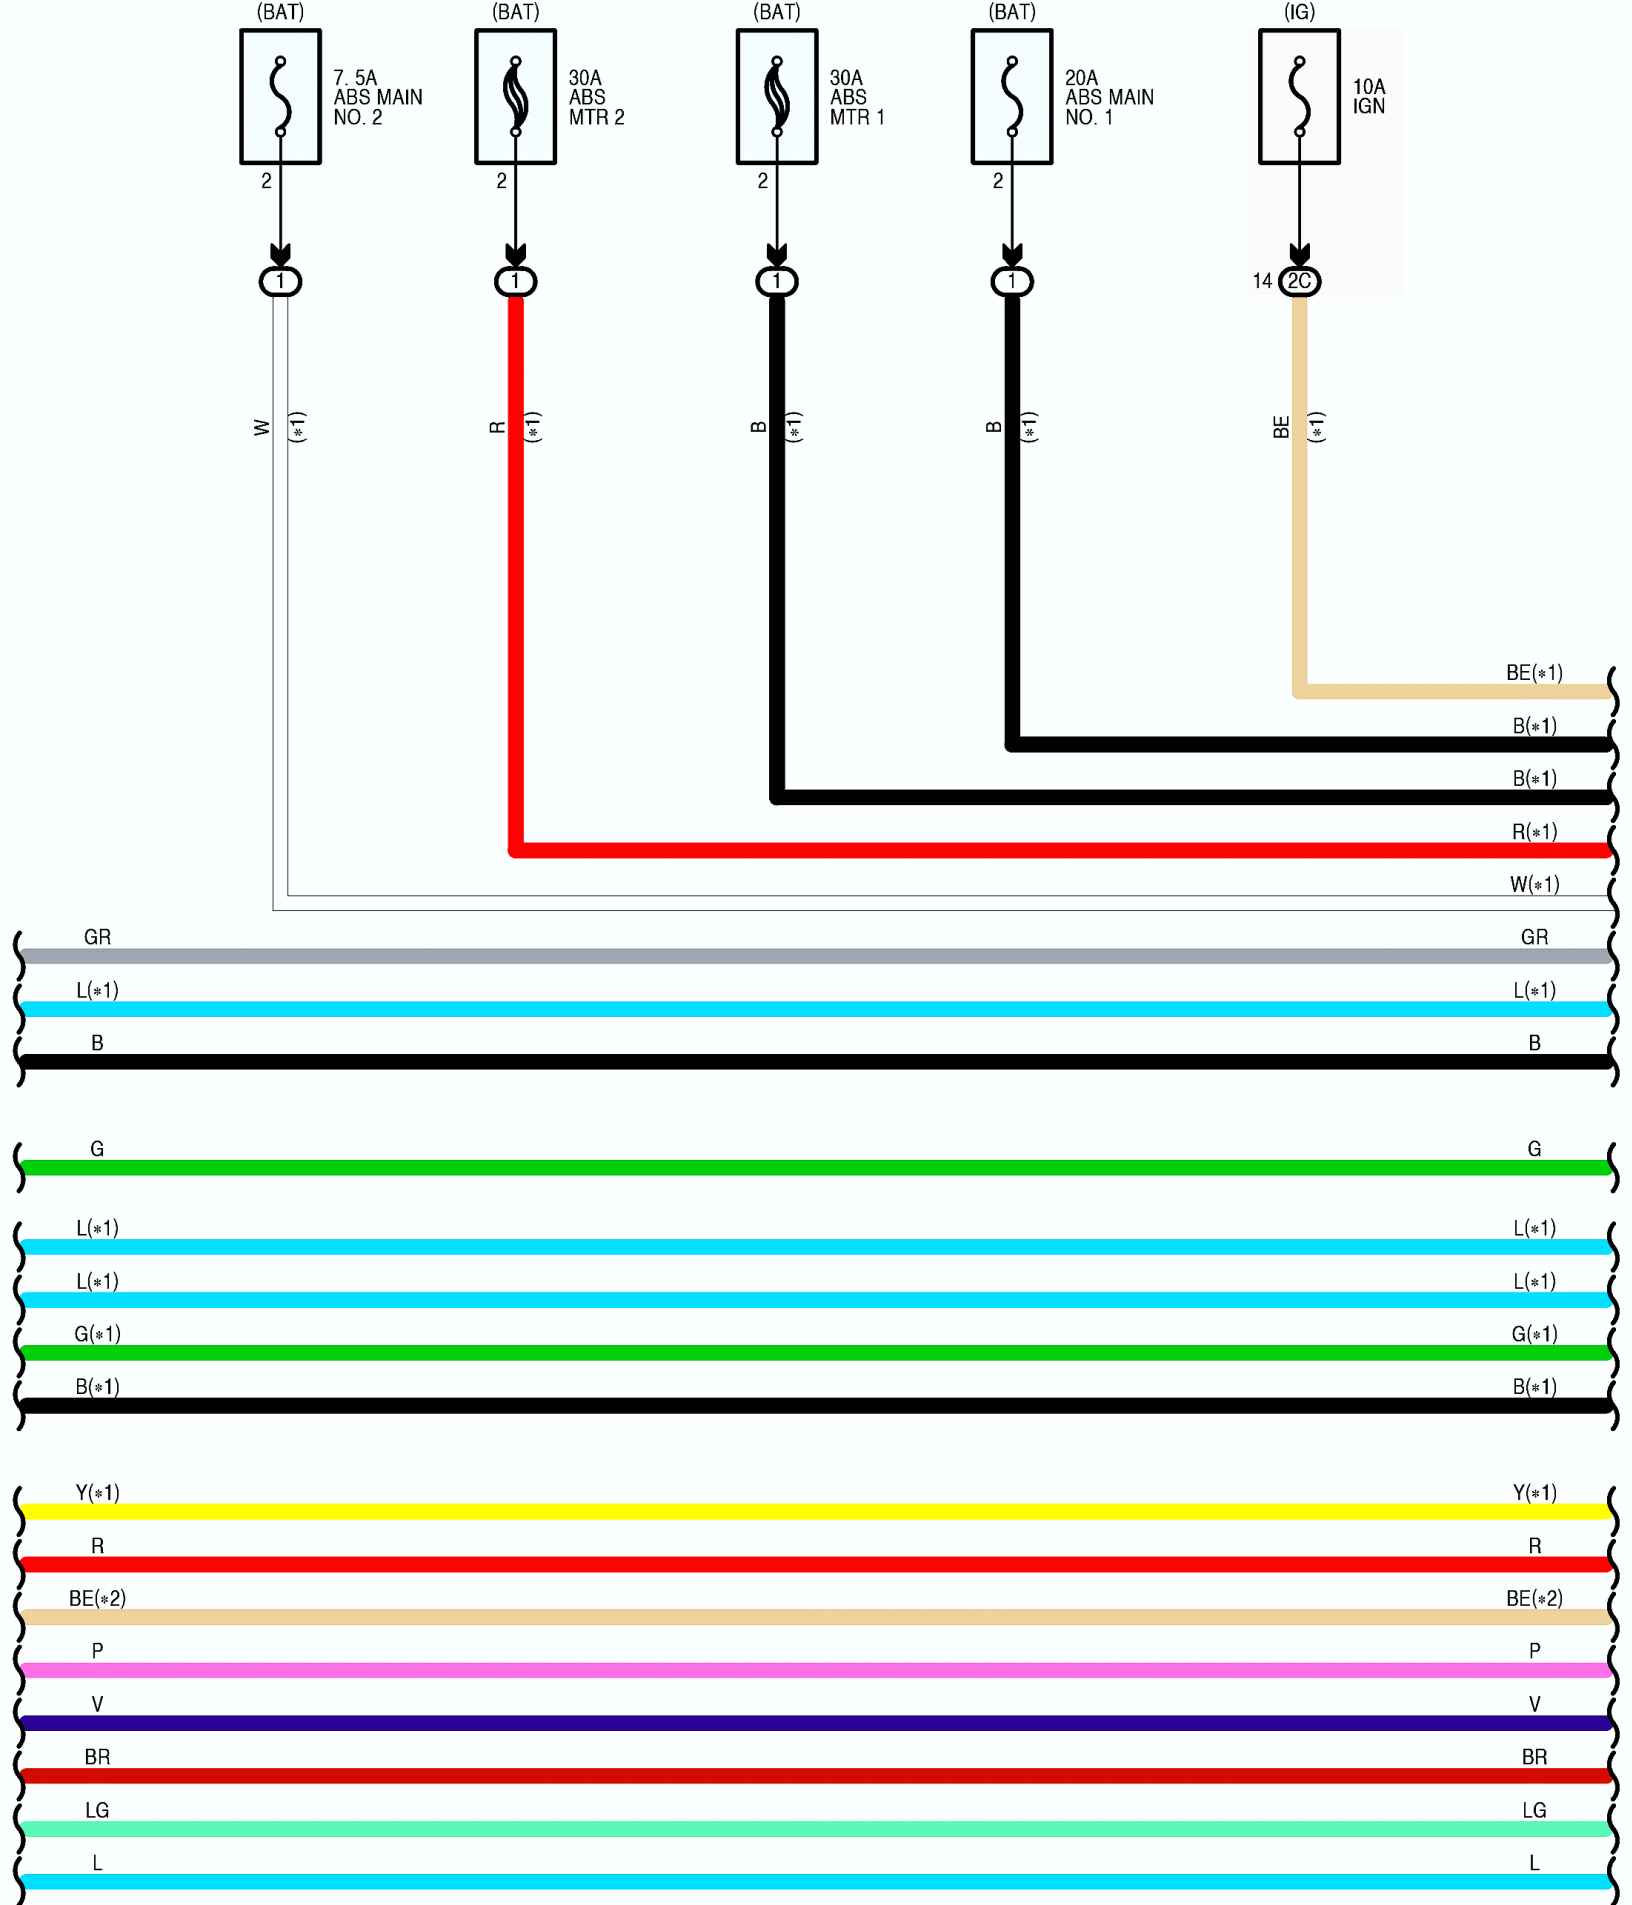


 A58
Skid Control ECU with Actuator Assembly

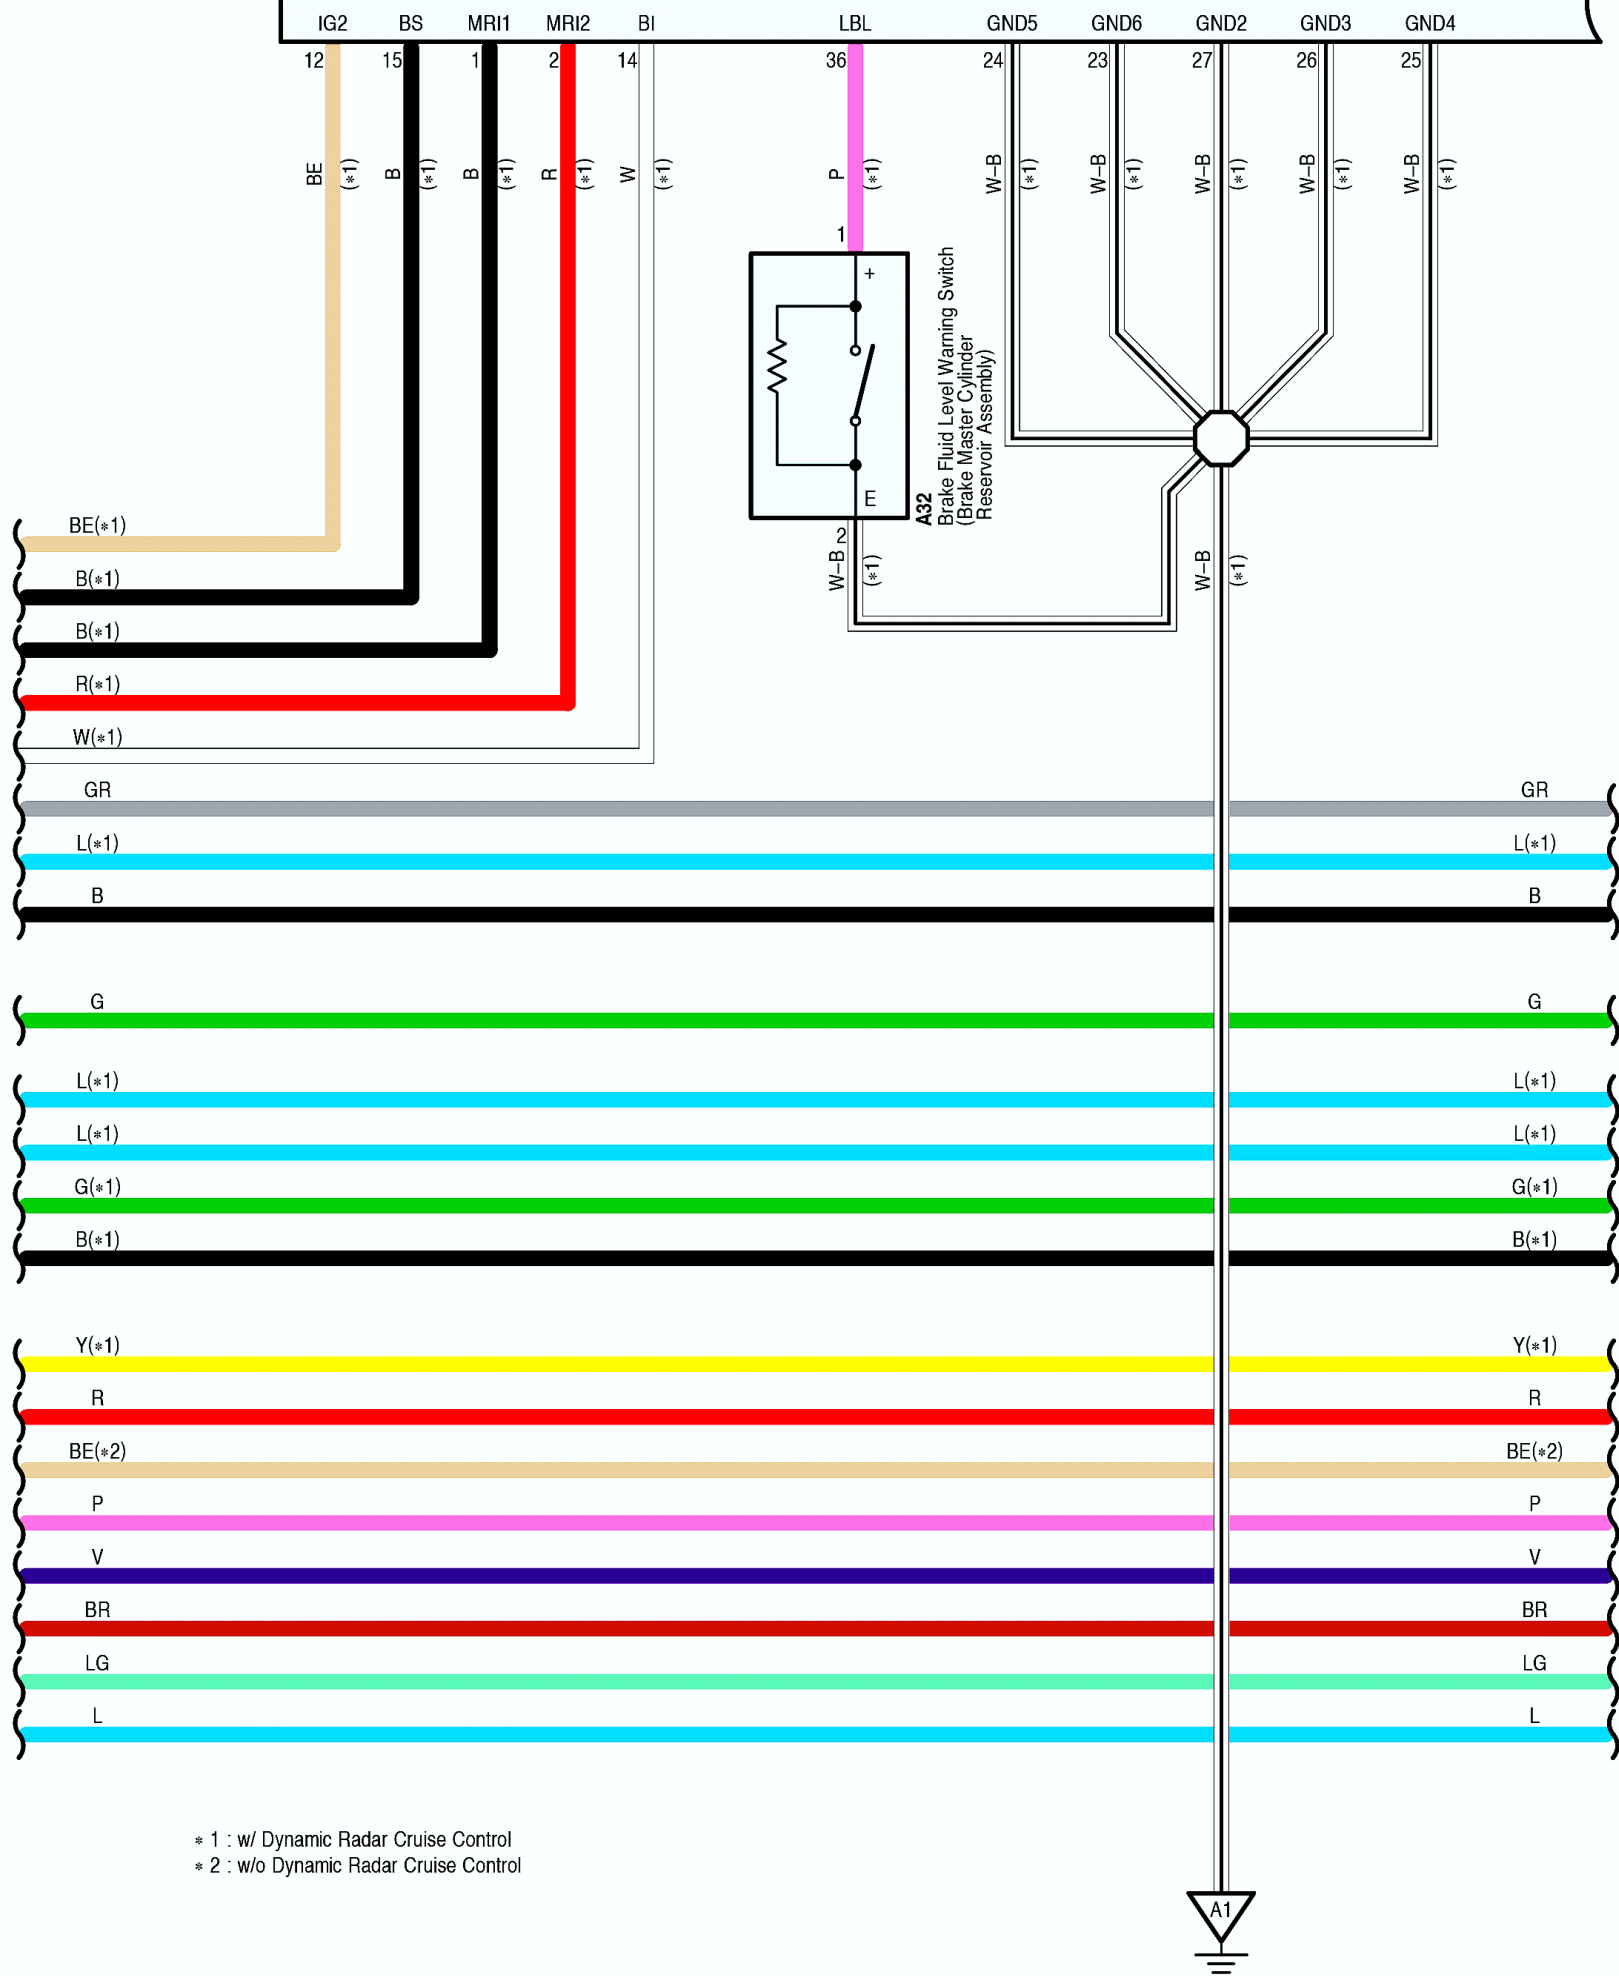


* 1 : w/ Dynamic Radar Cruise Control
* 2 : w/o Dynamic Radar Cruise Control


 
A58
Skid Control ECU with Actuator Assembly

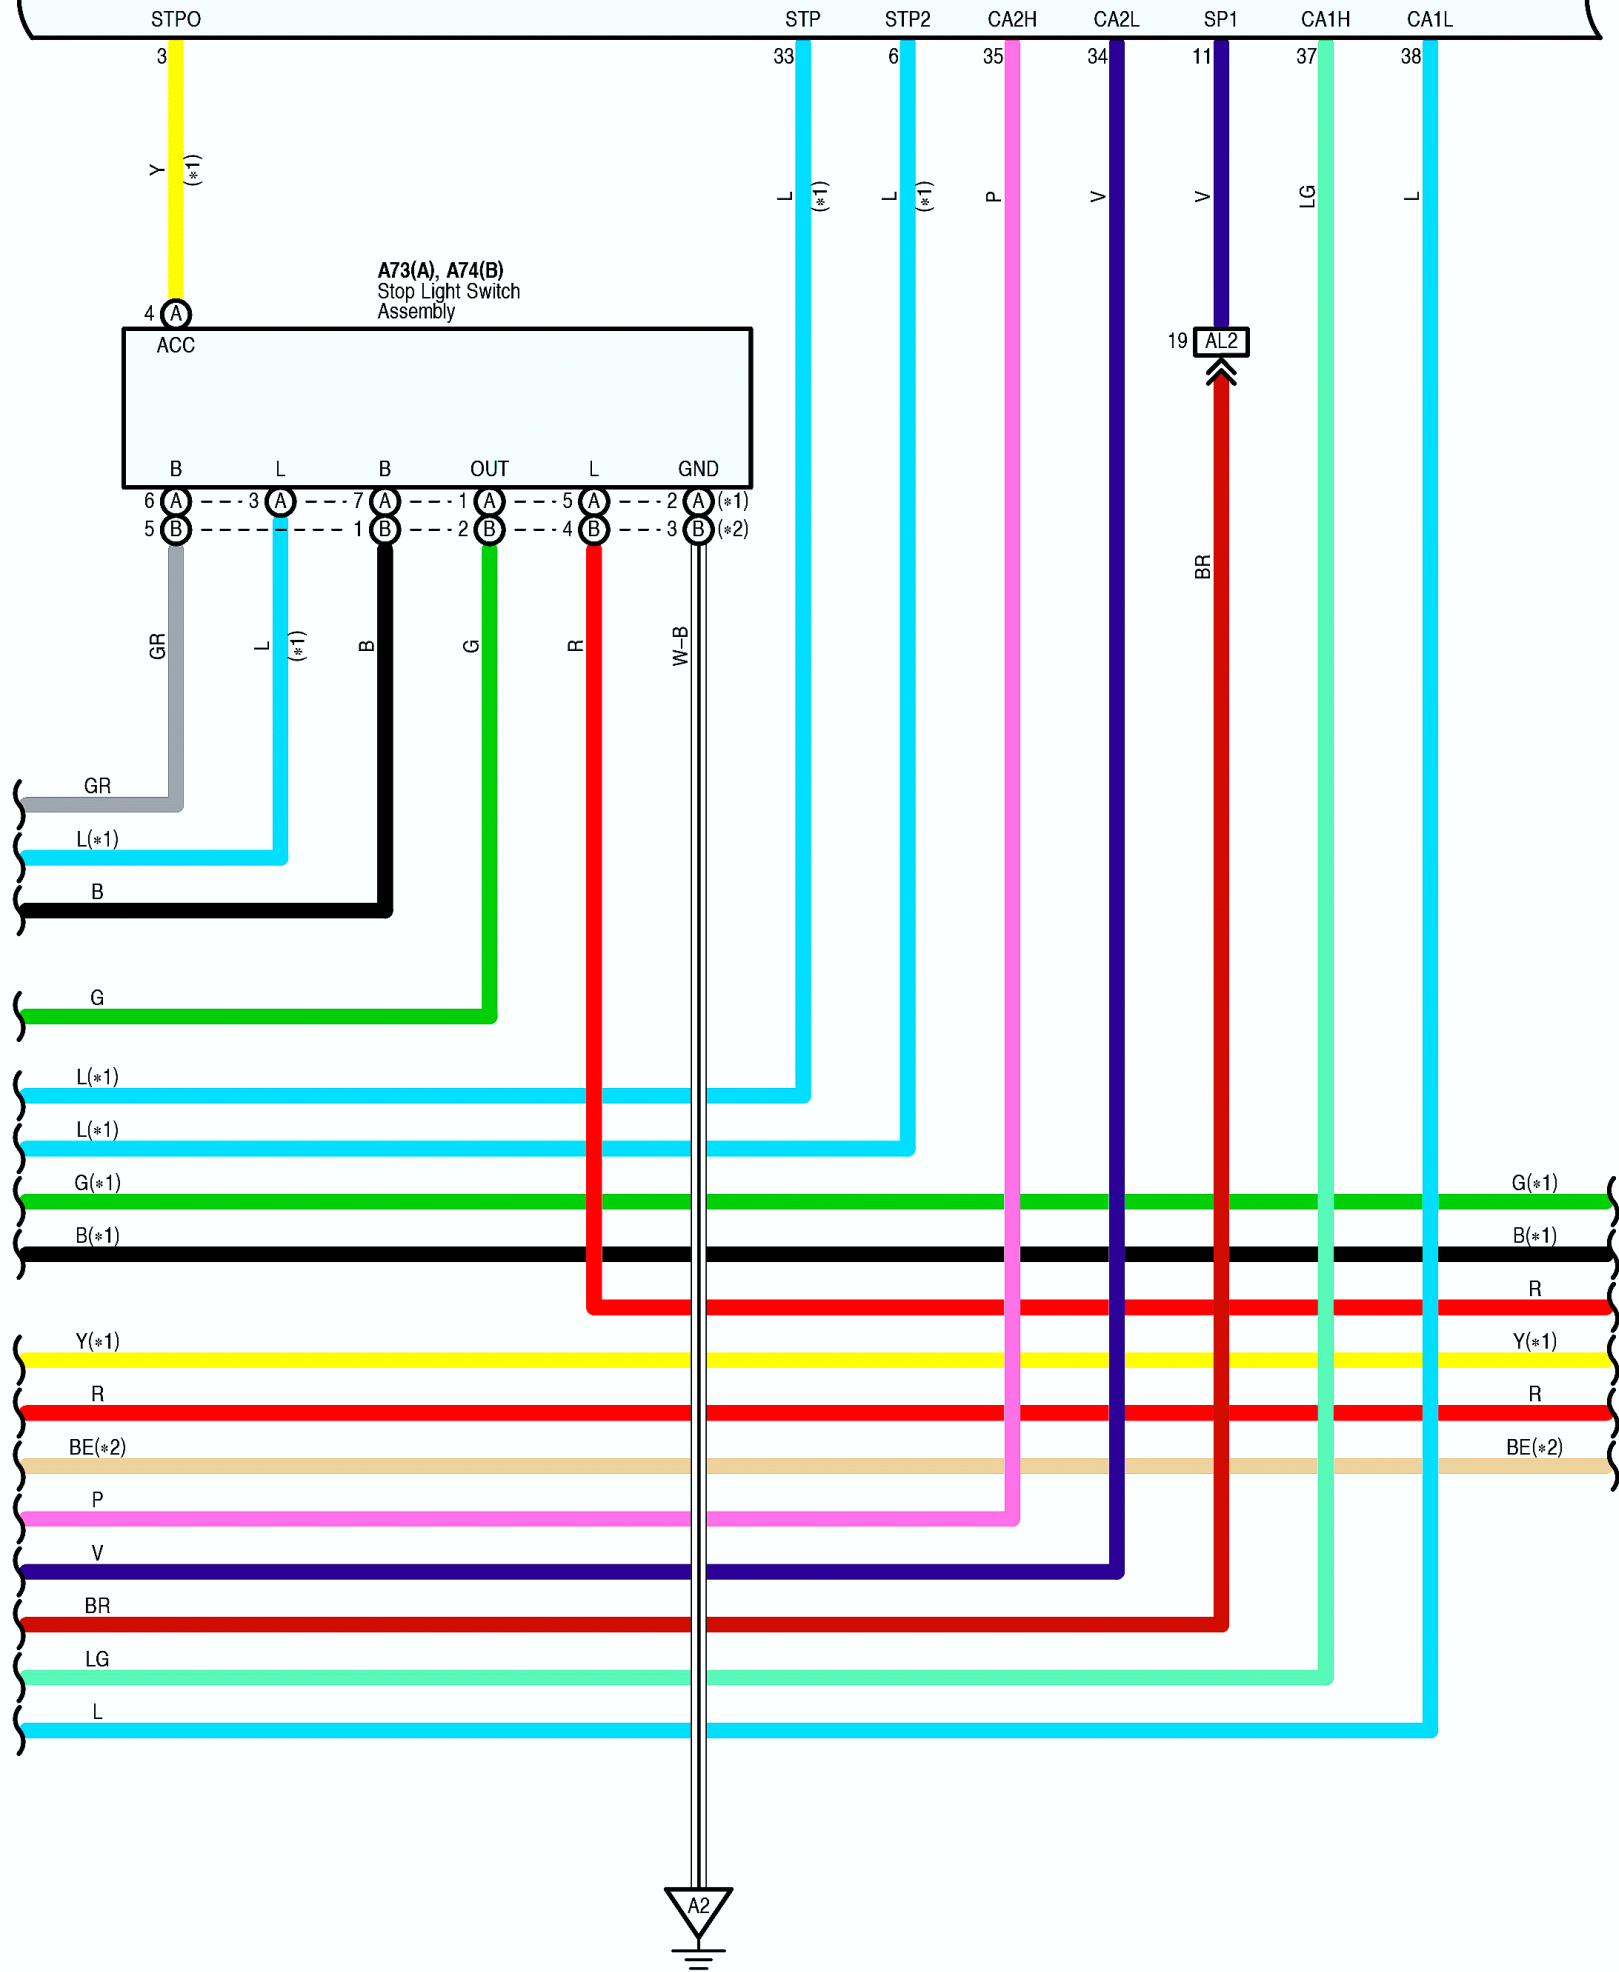

 
A58
Skid Control ECU with Actuator Assembly

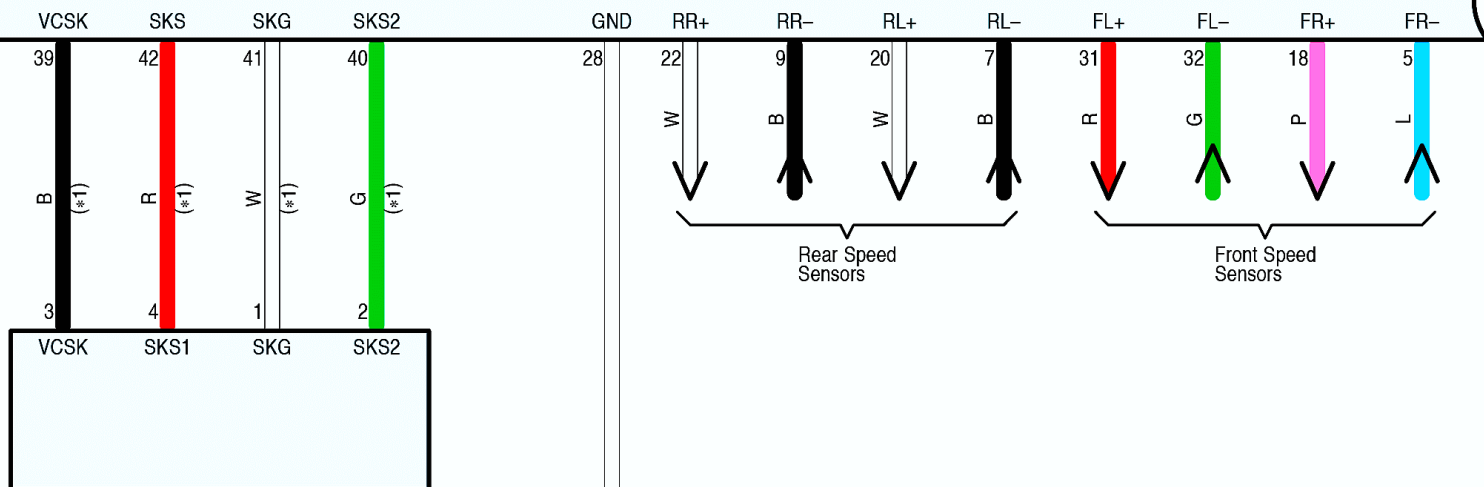


A30
Brake Pedal Stroke Sensor Assembly

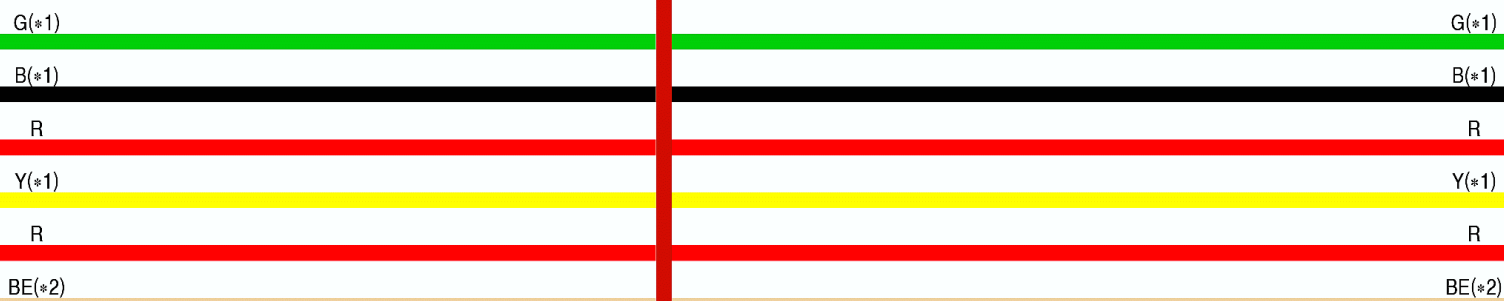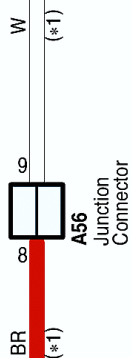  


  * 1 : w/ Dynamic Radar Cruise Control
* 2 : w/o Dynamic Radar Cruise Control

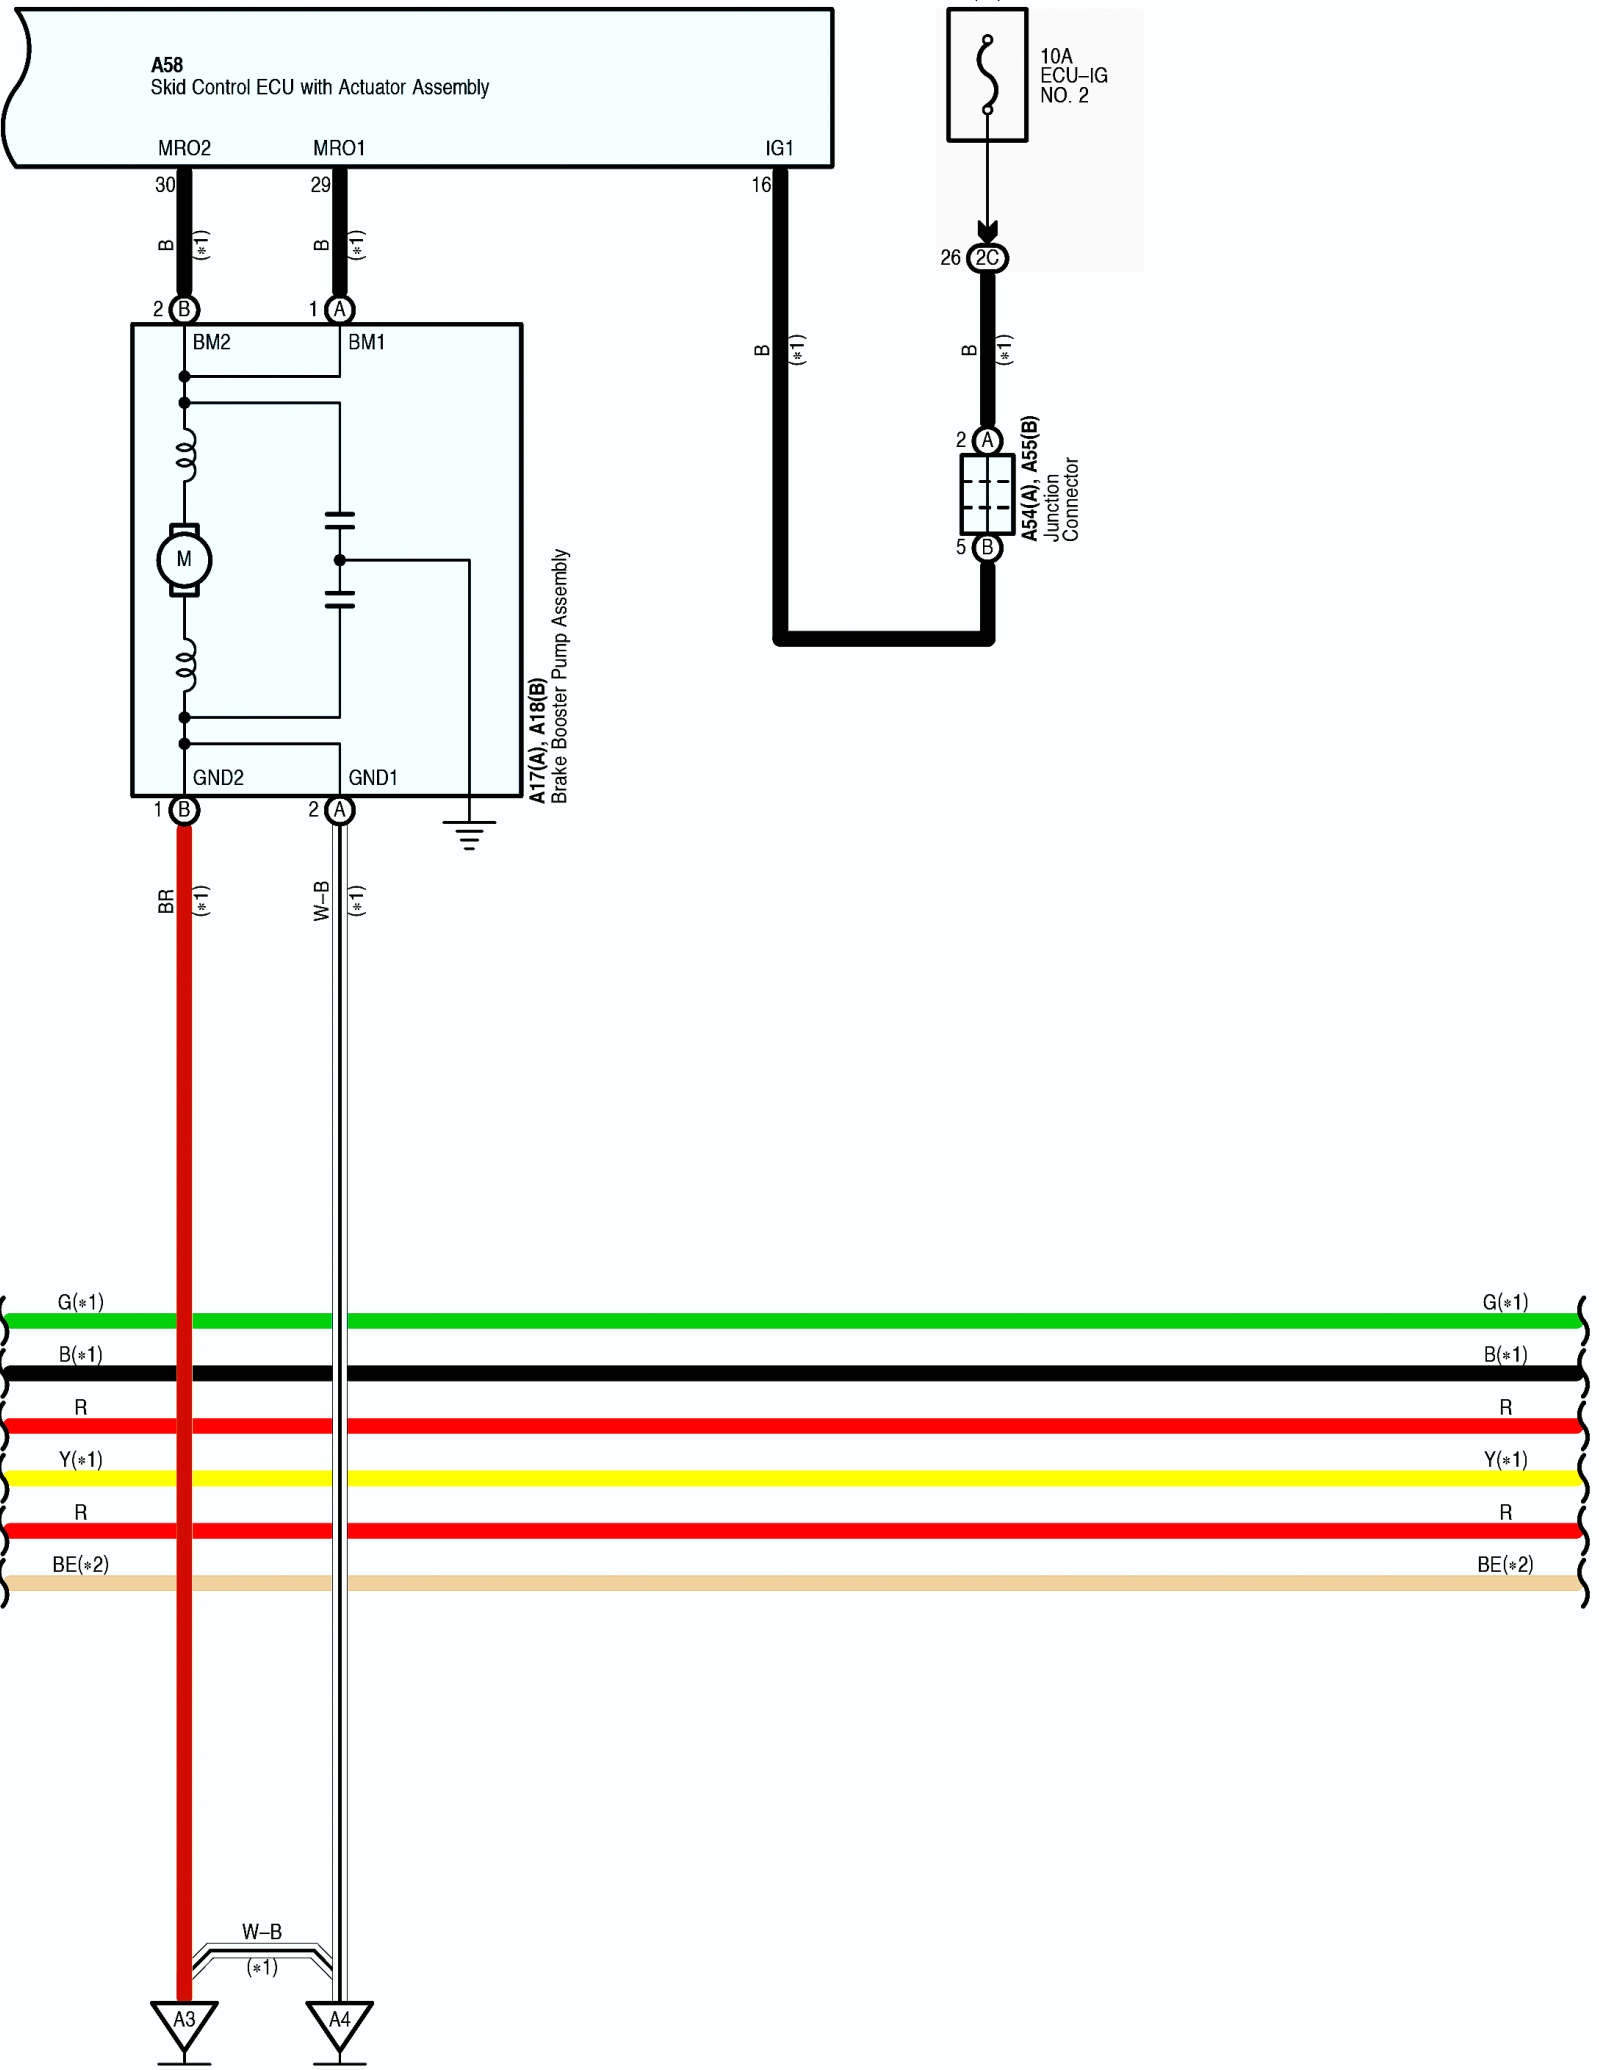


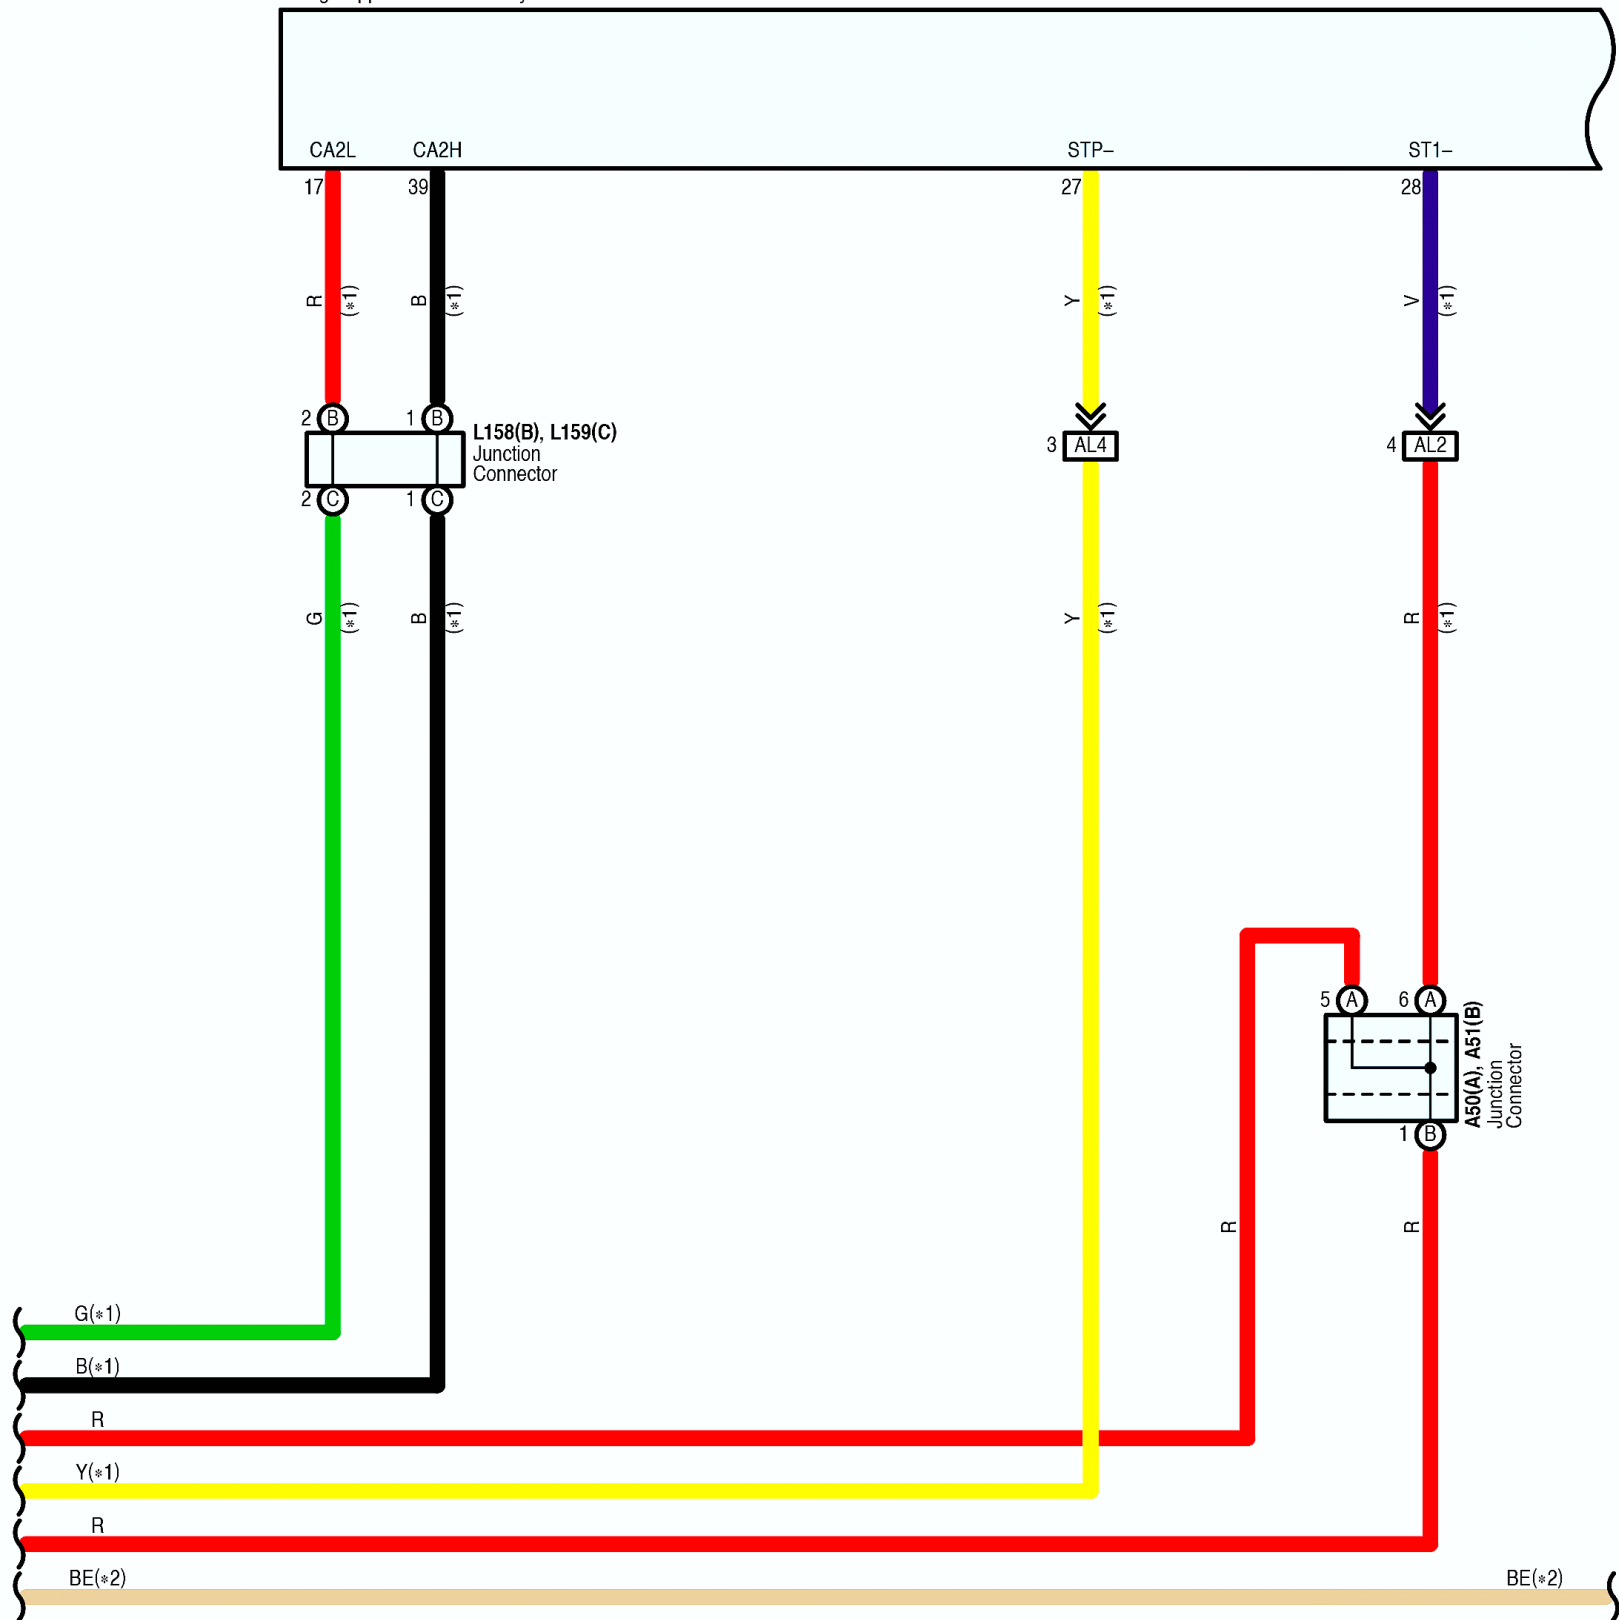

 
* 1 : w/ Dynamic Radar Cruise Control
* 2 : w/o Dynamic Radar Cruise Control

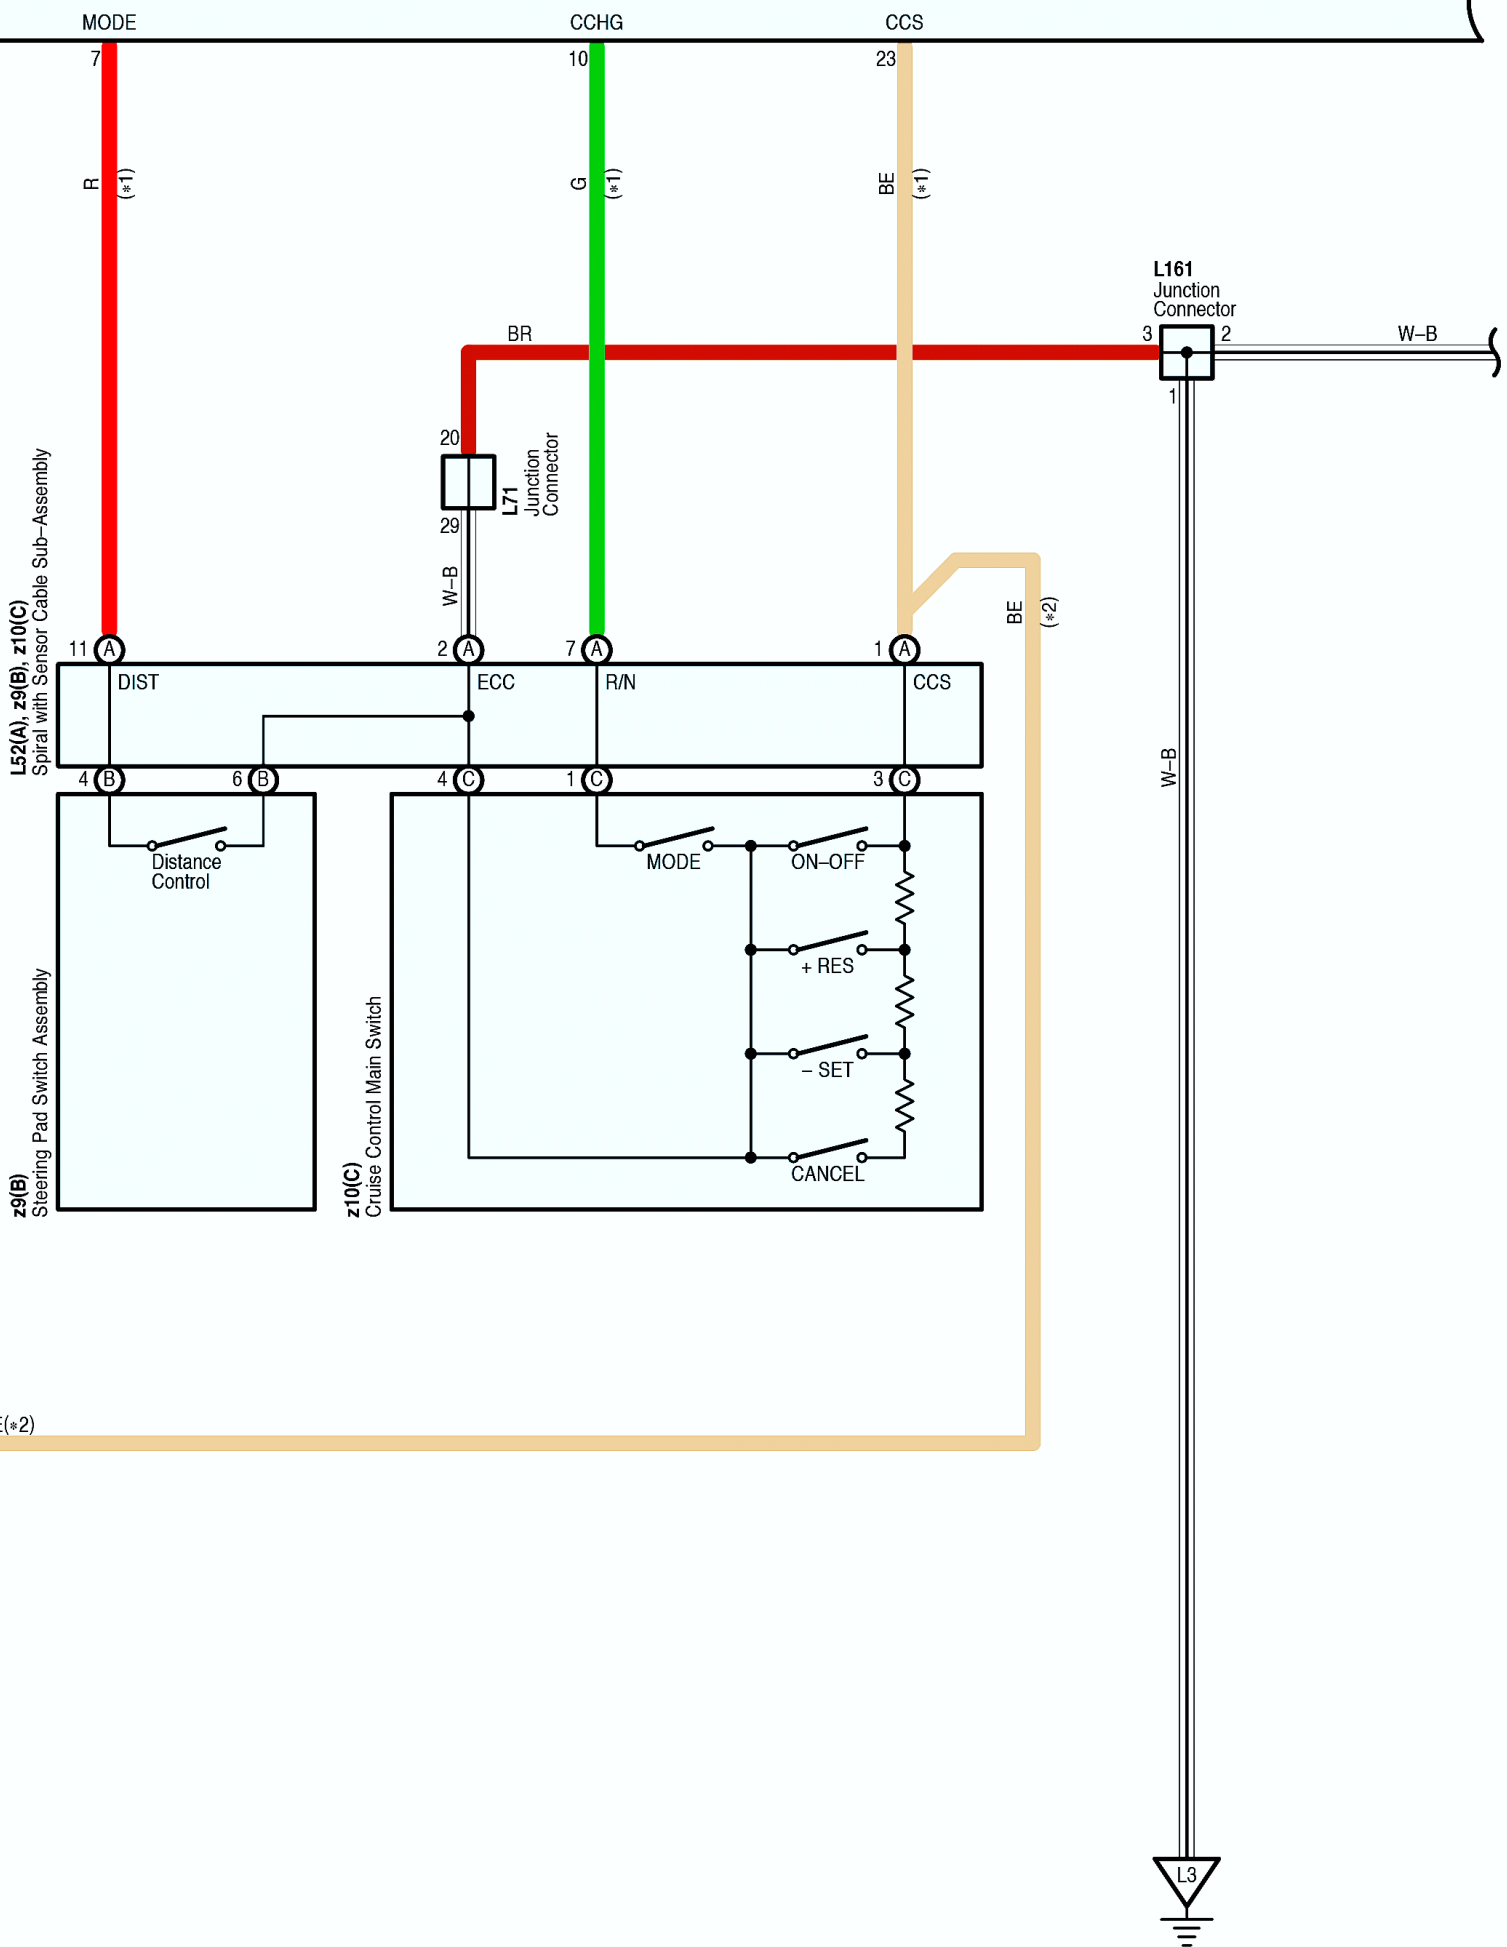

L60
Driving Support ECU Assembly

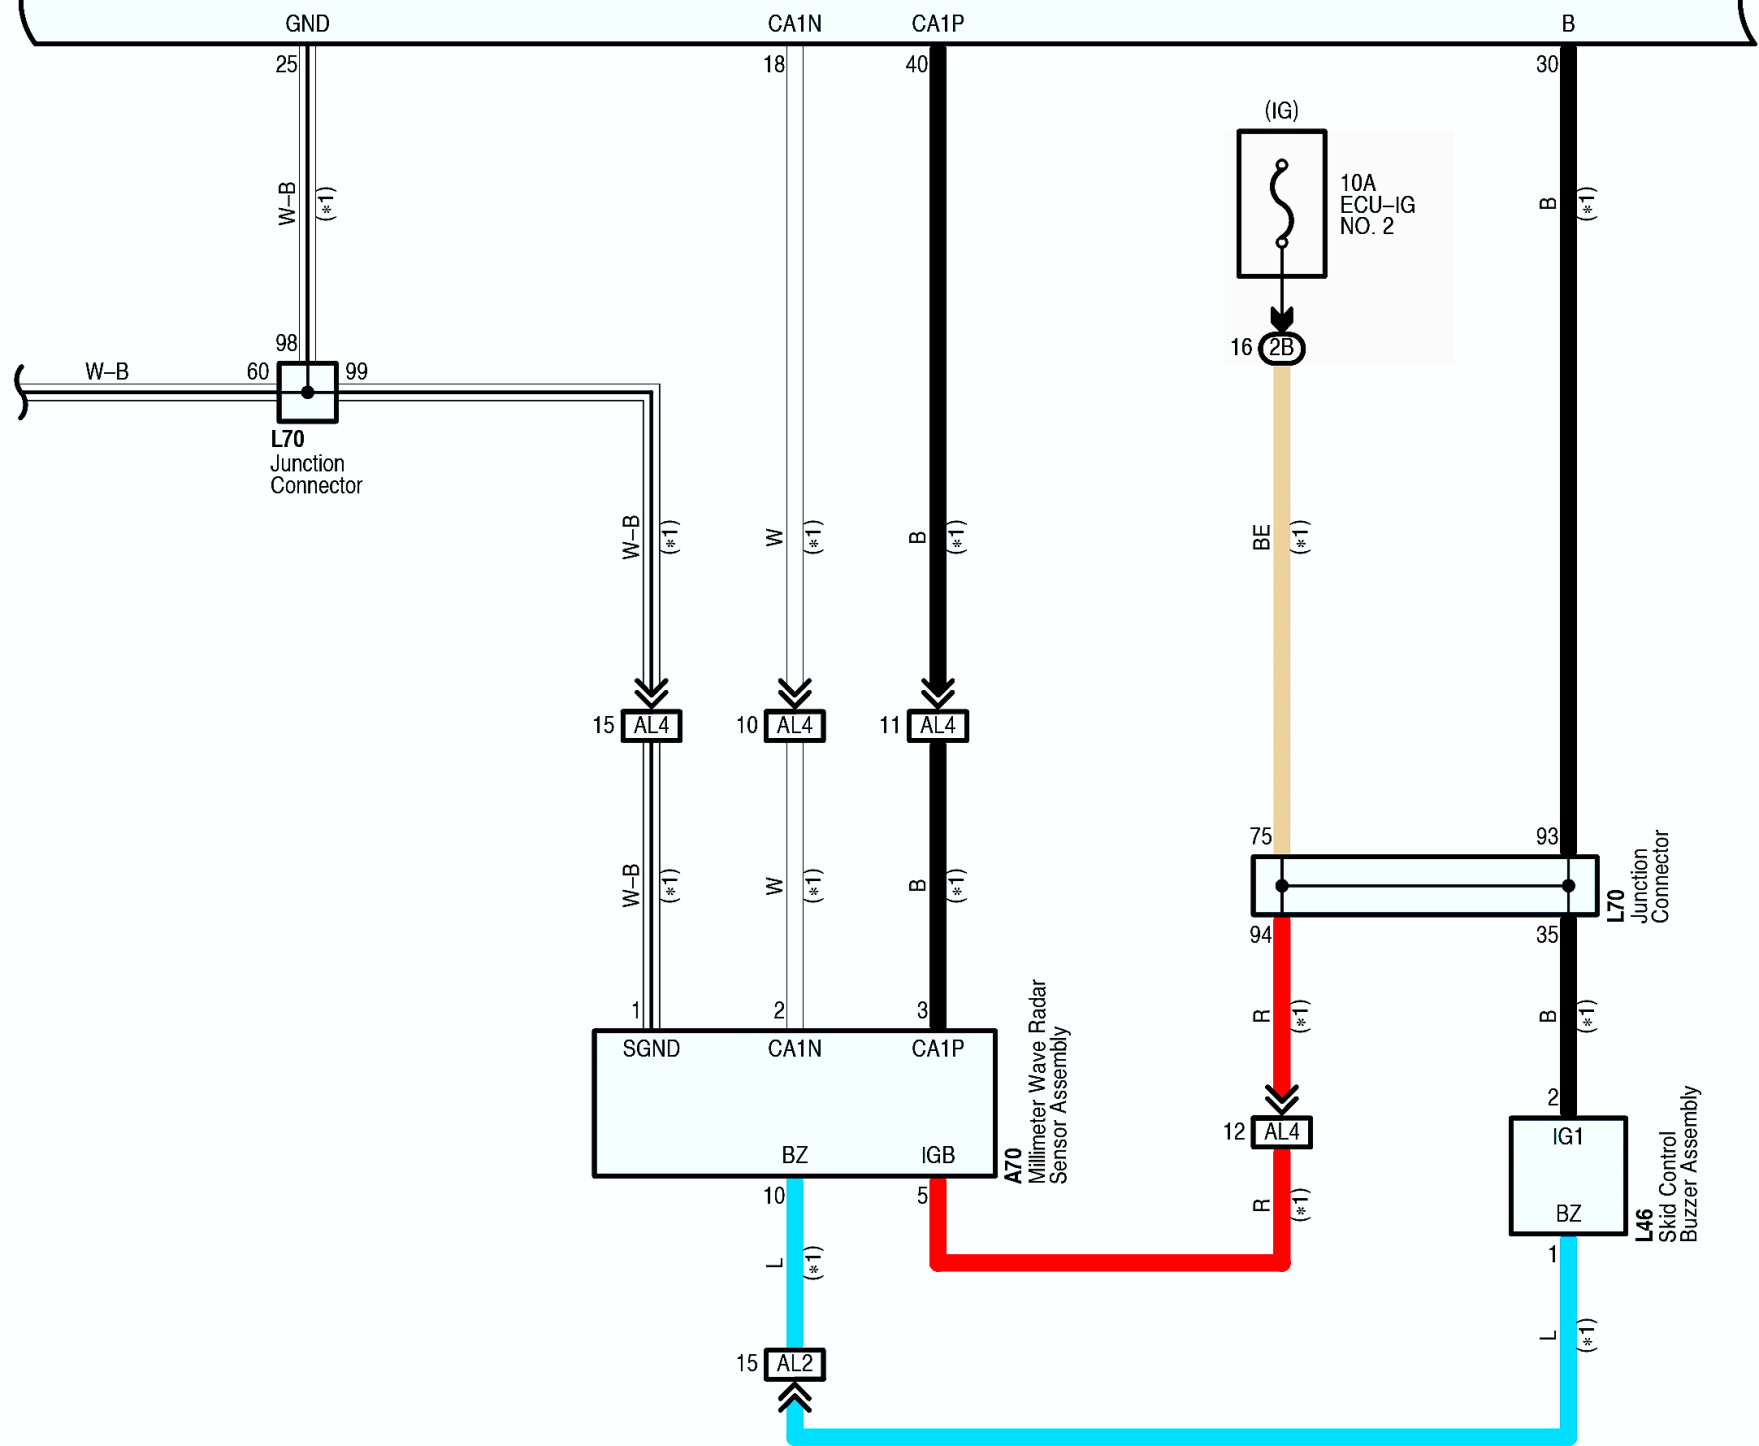 

L60
Driving Support
ECU Assembly

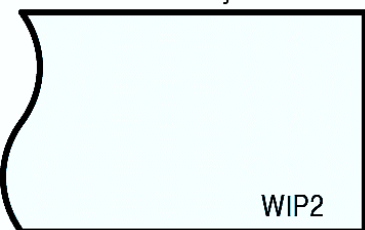 


32

P

(*1)

 2

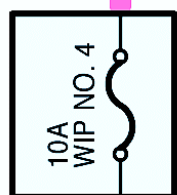

L103
Fuse Block

1

R

(*1)

(IG)



11

 
2A

B

(*1)

L48(A)

Windshield Wiper Switch Assembly

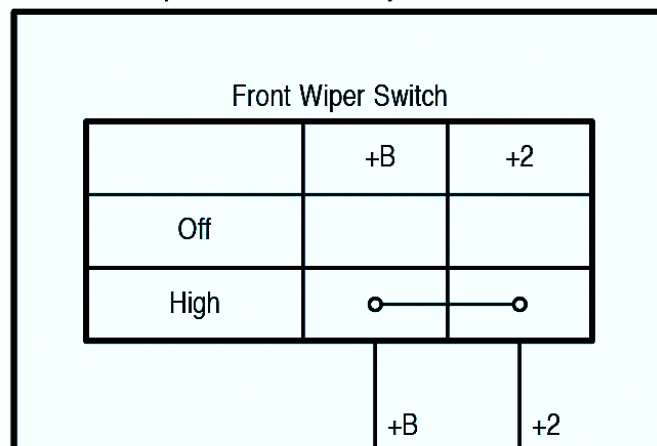

+B

+2

2

A

B

(*1)

4

A

W

(*1)

2

B

3

B

 
L133(B)

 
Junction
Connector

 
R

 
(*1)

 
* 1 : w/ Dynamic Radar Cruise Control

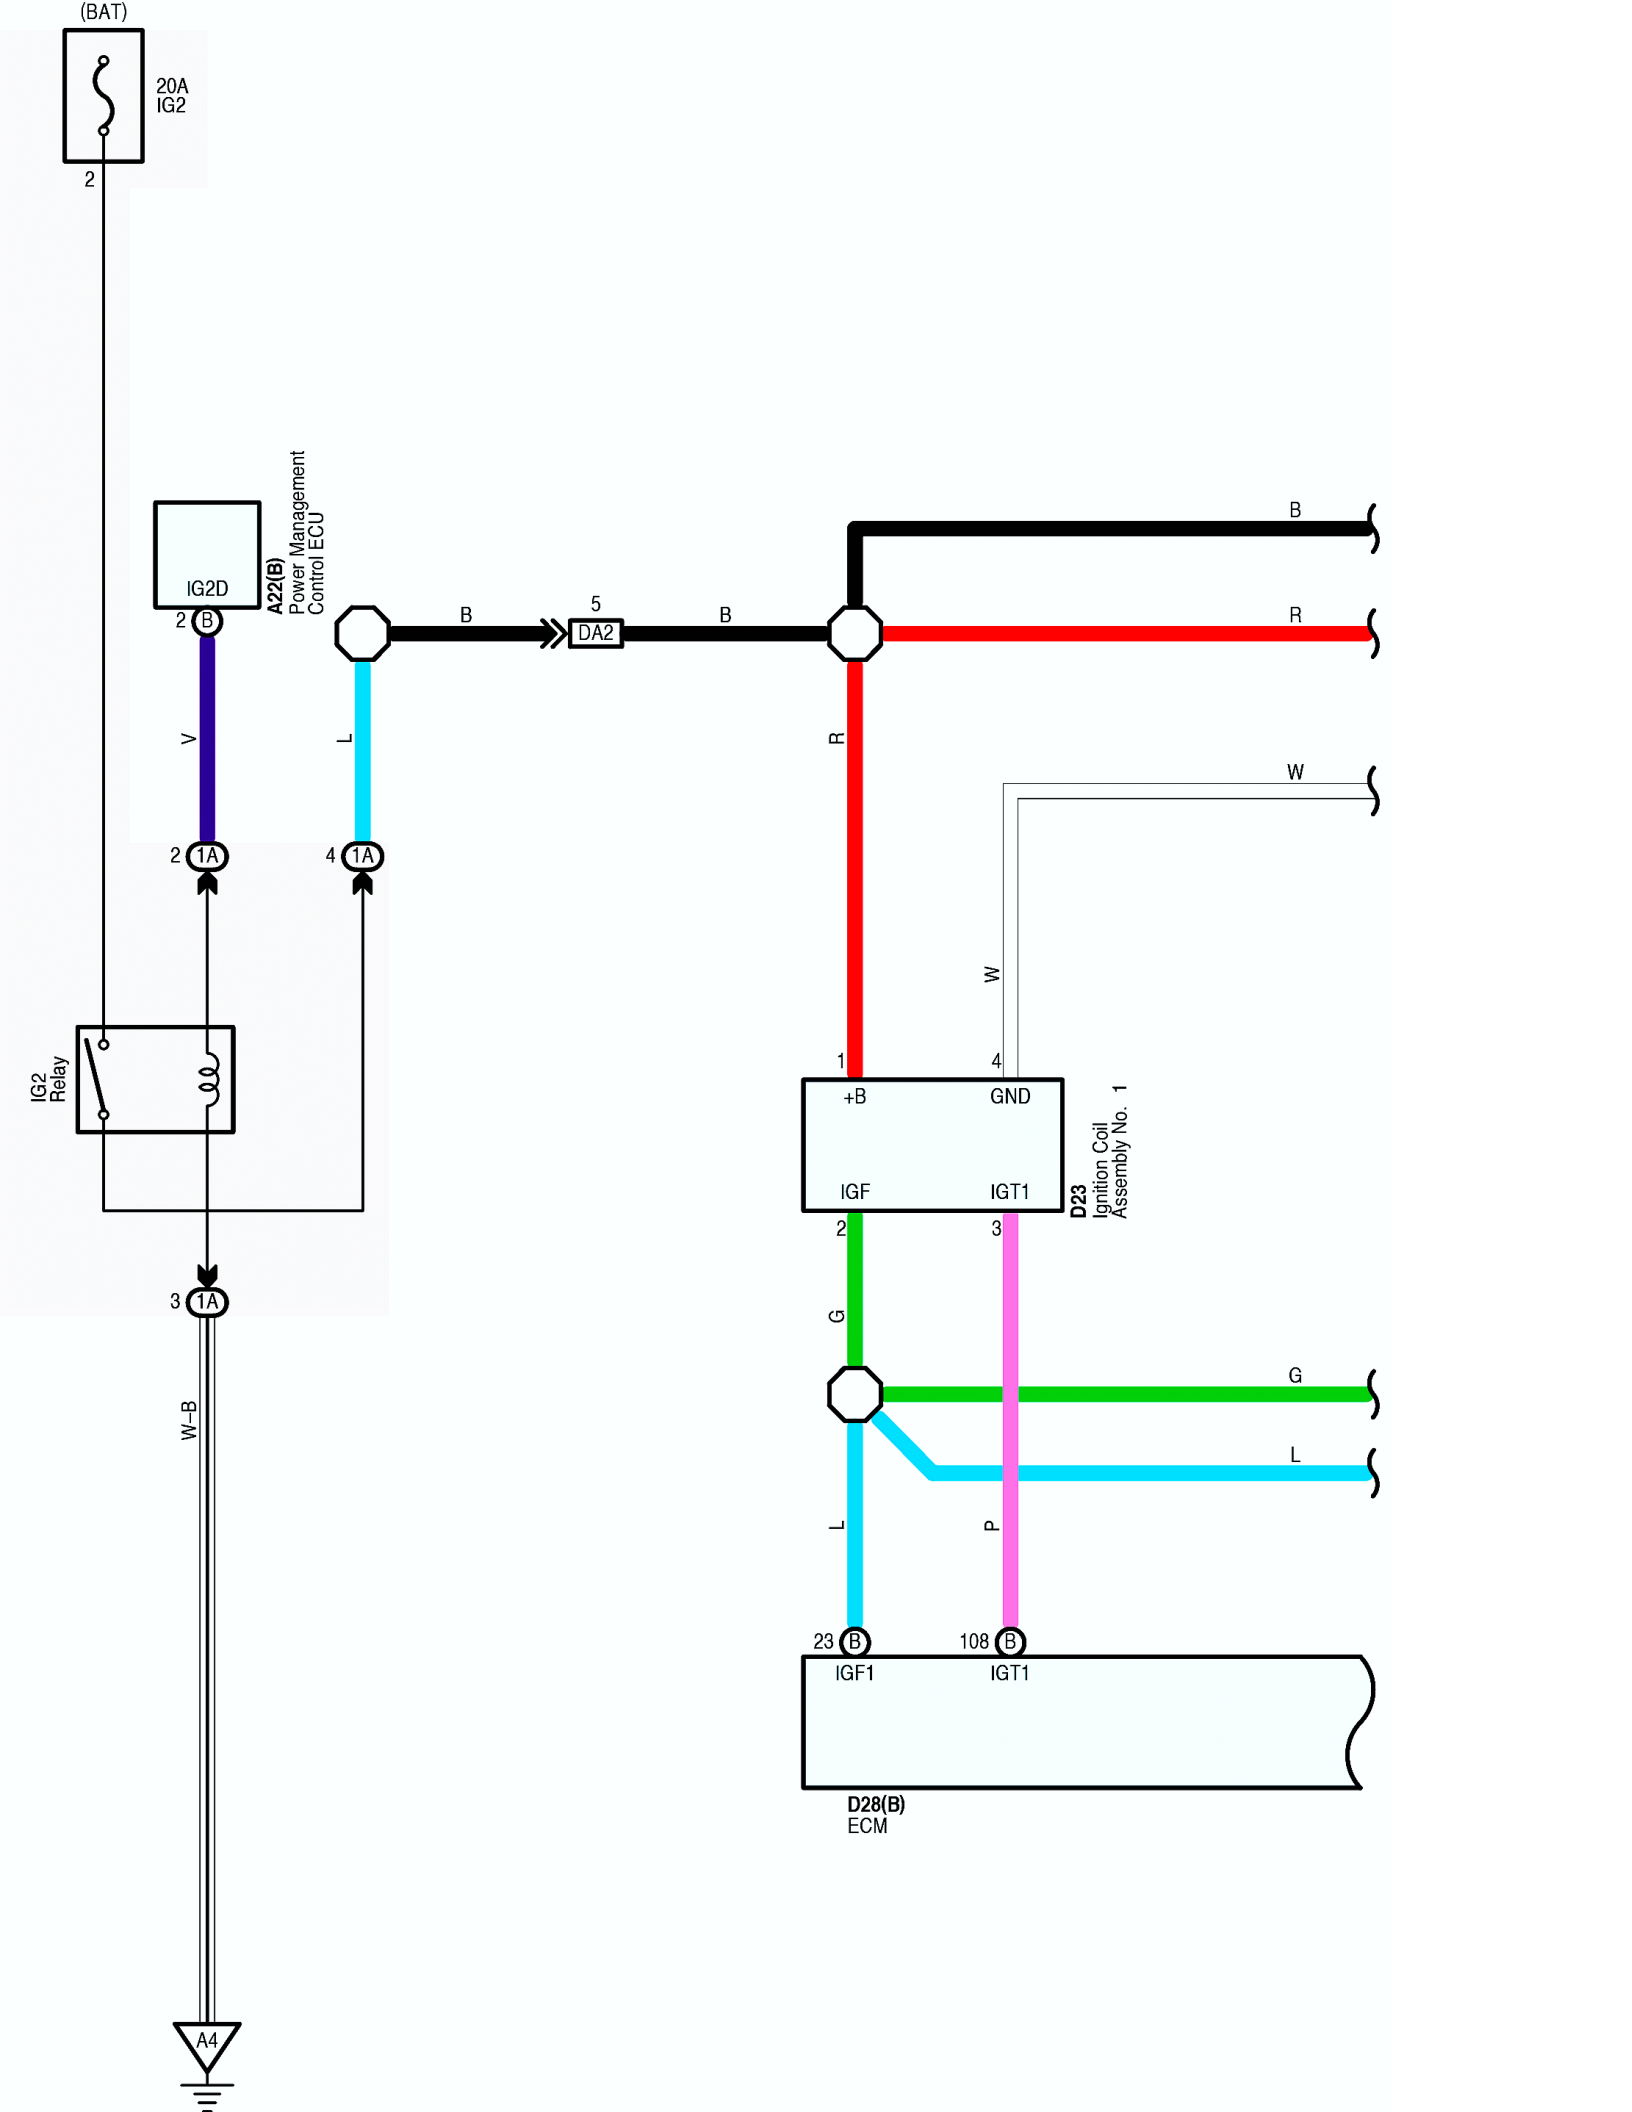

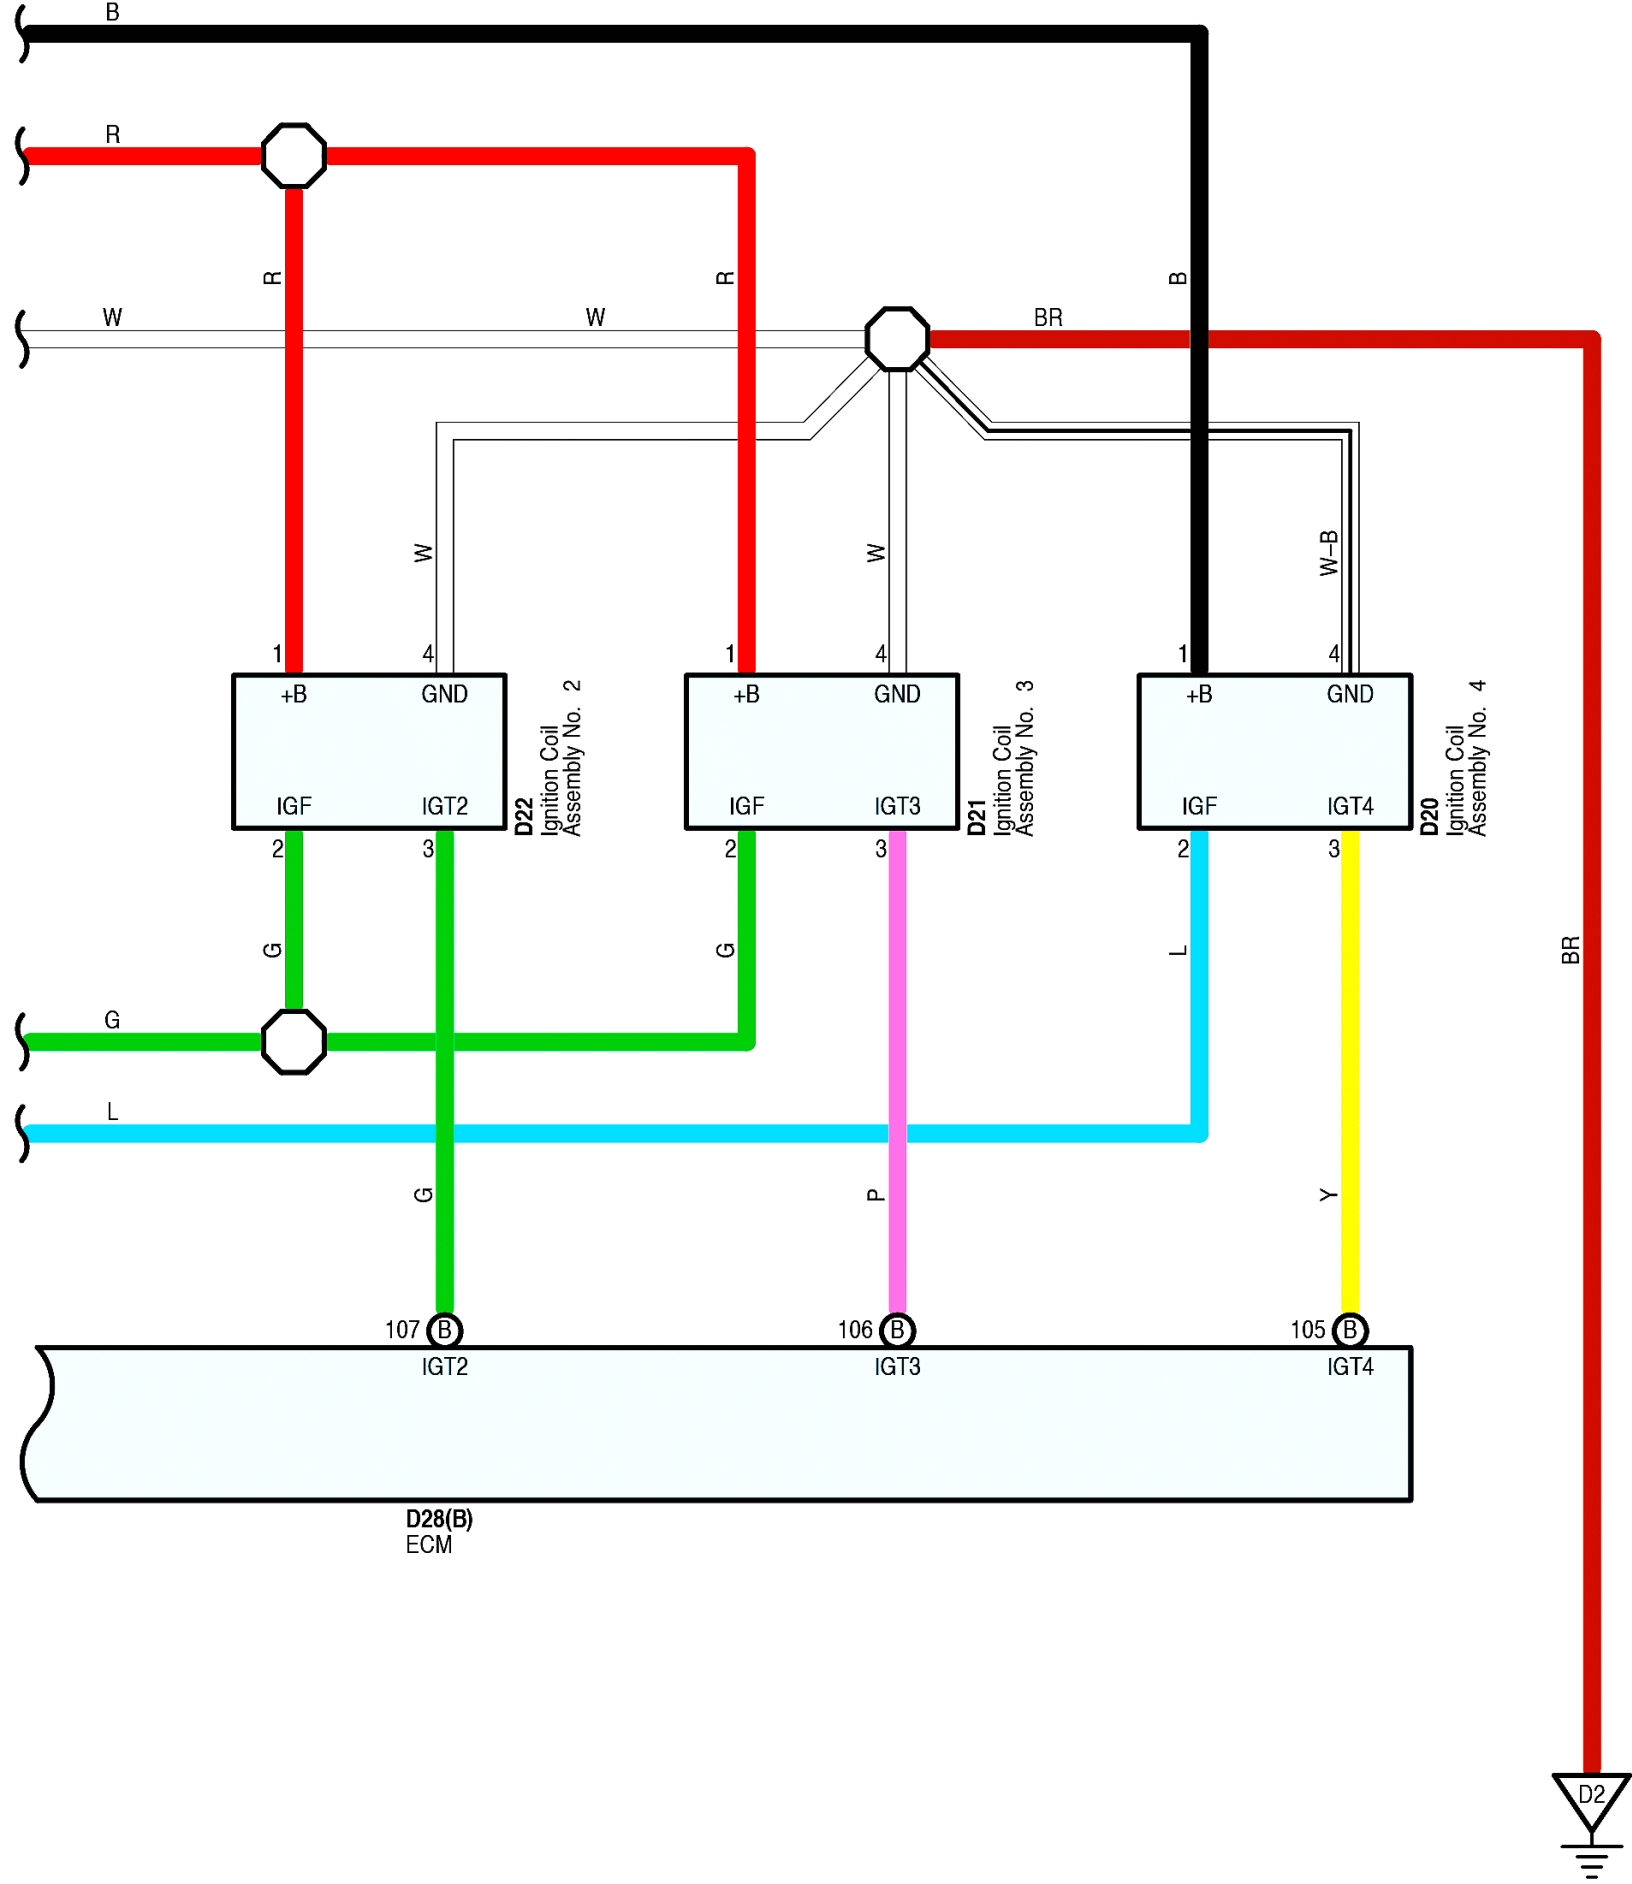


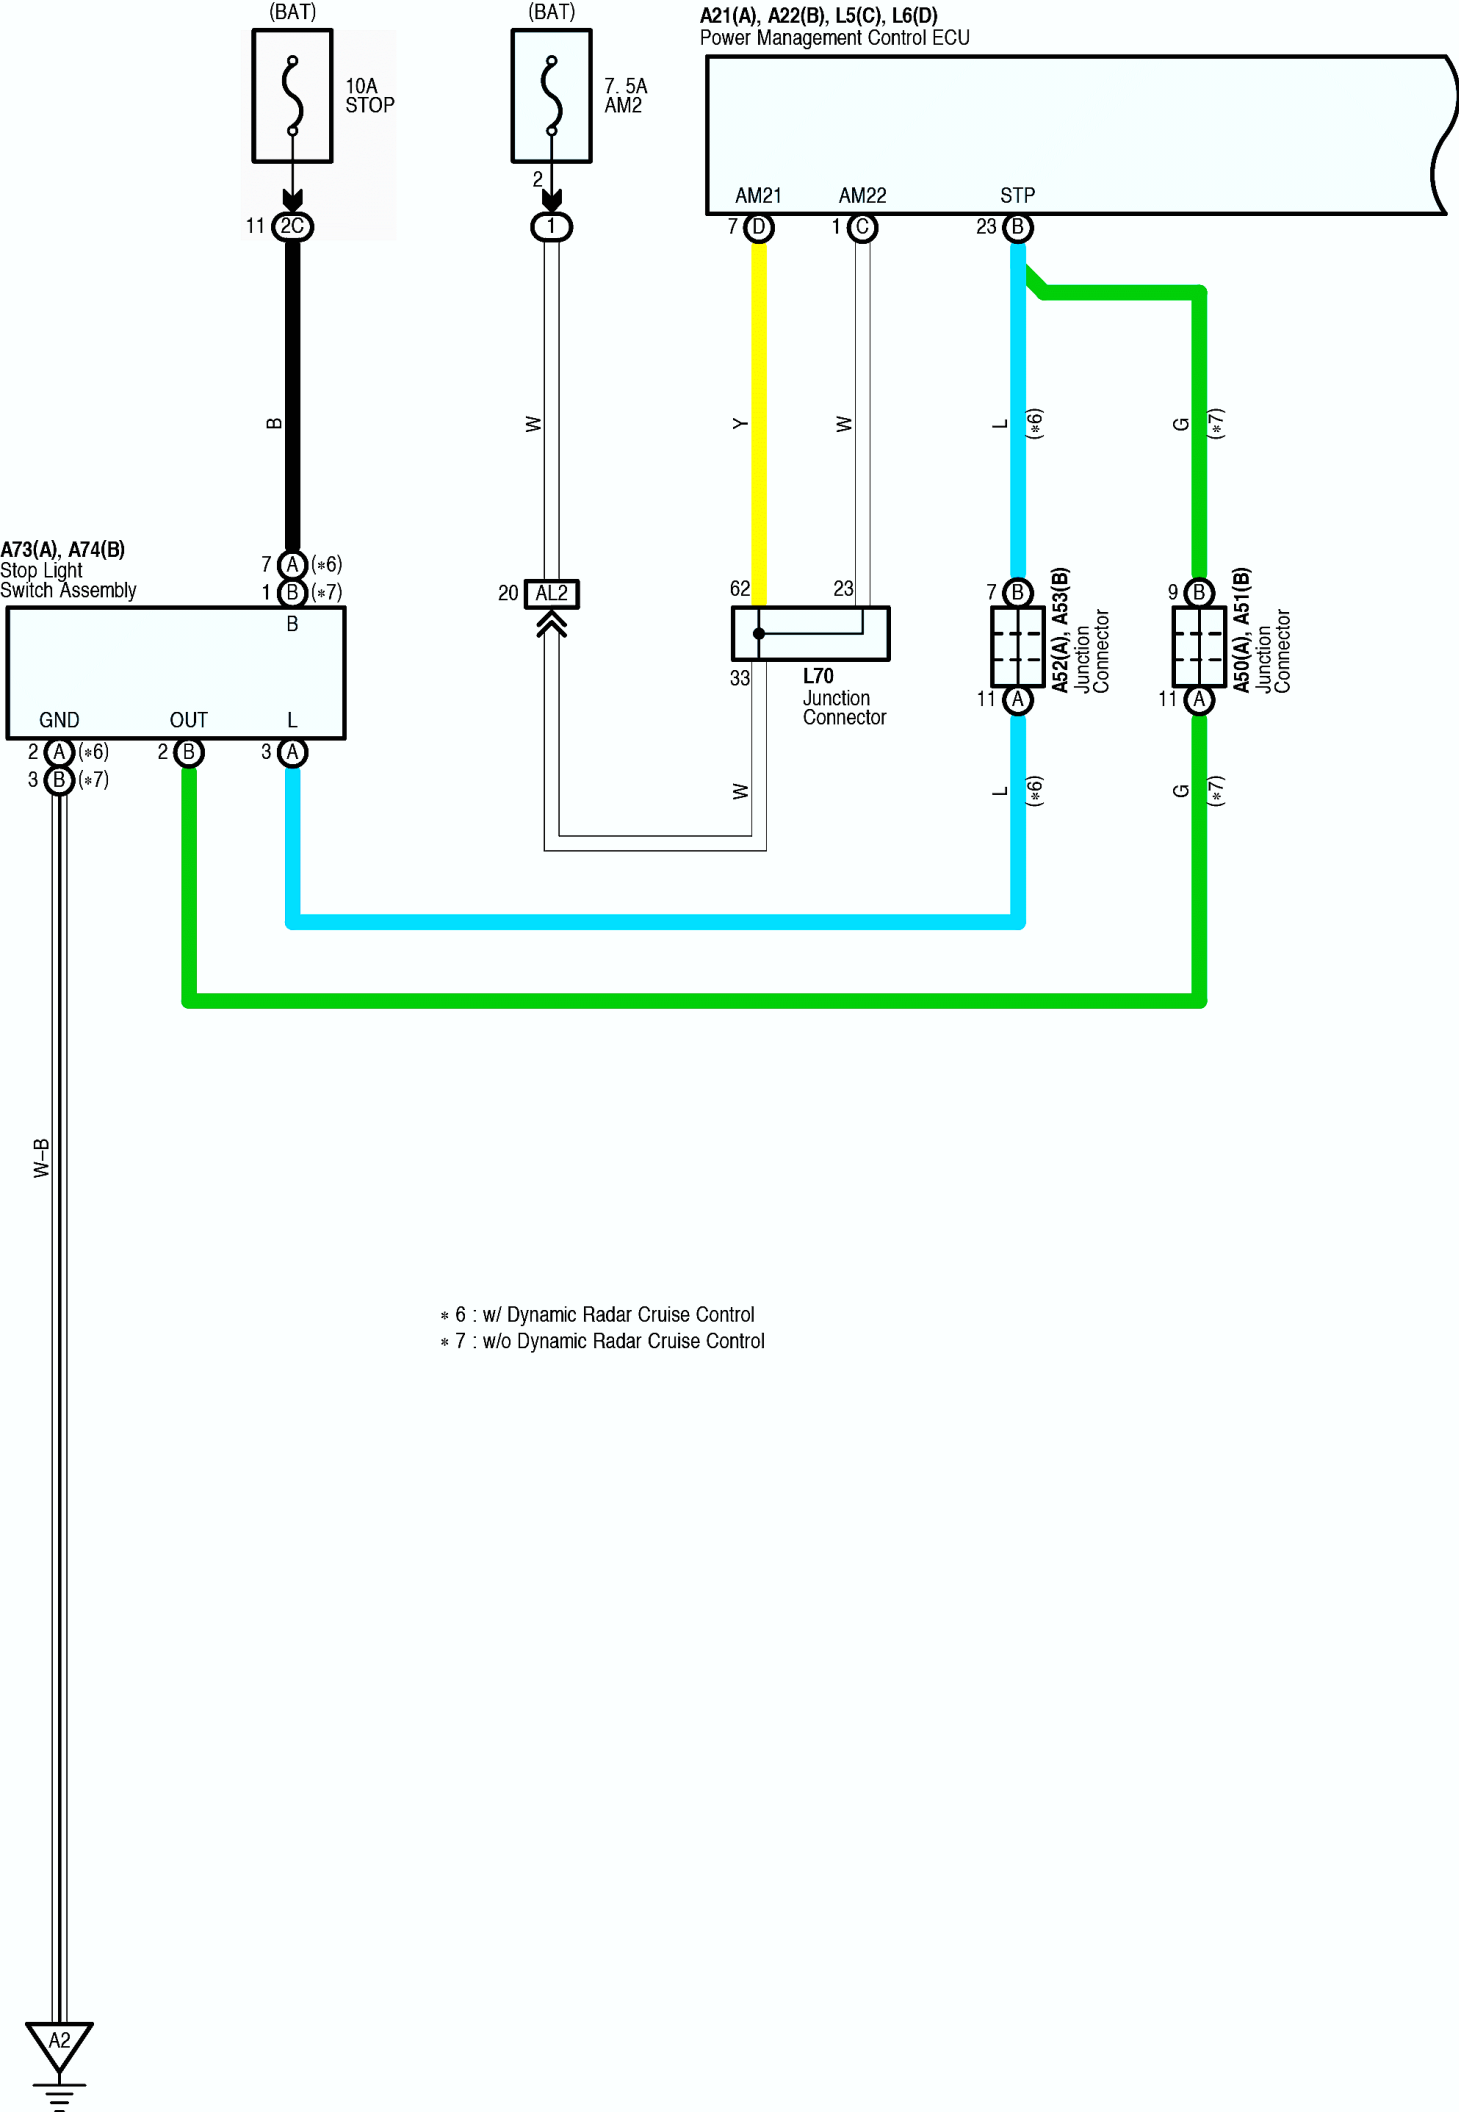


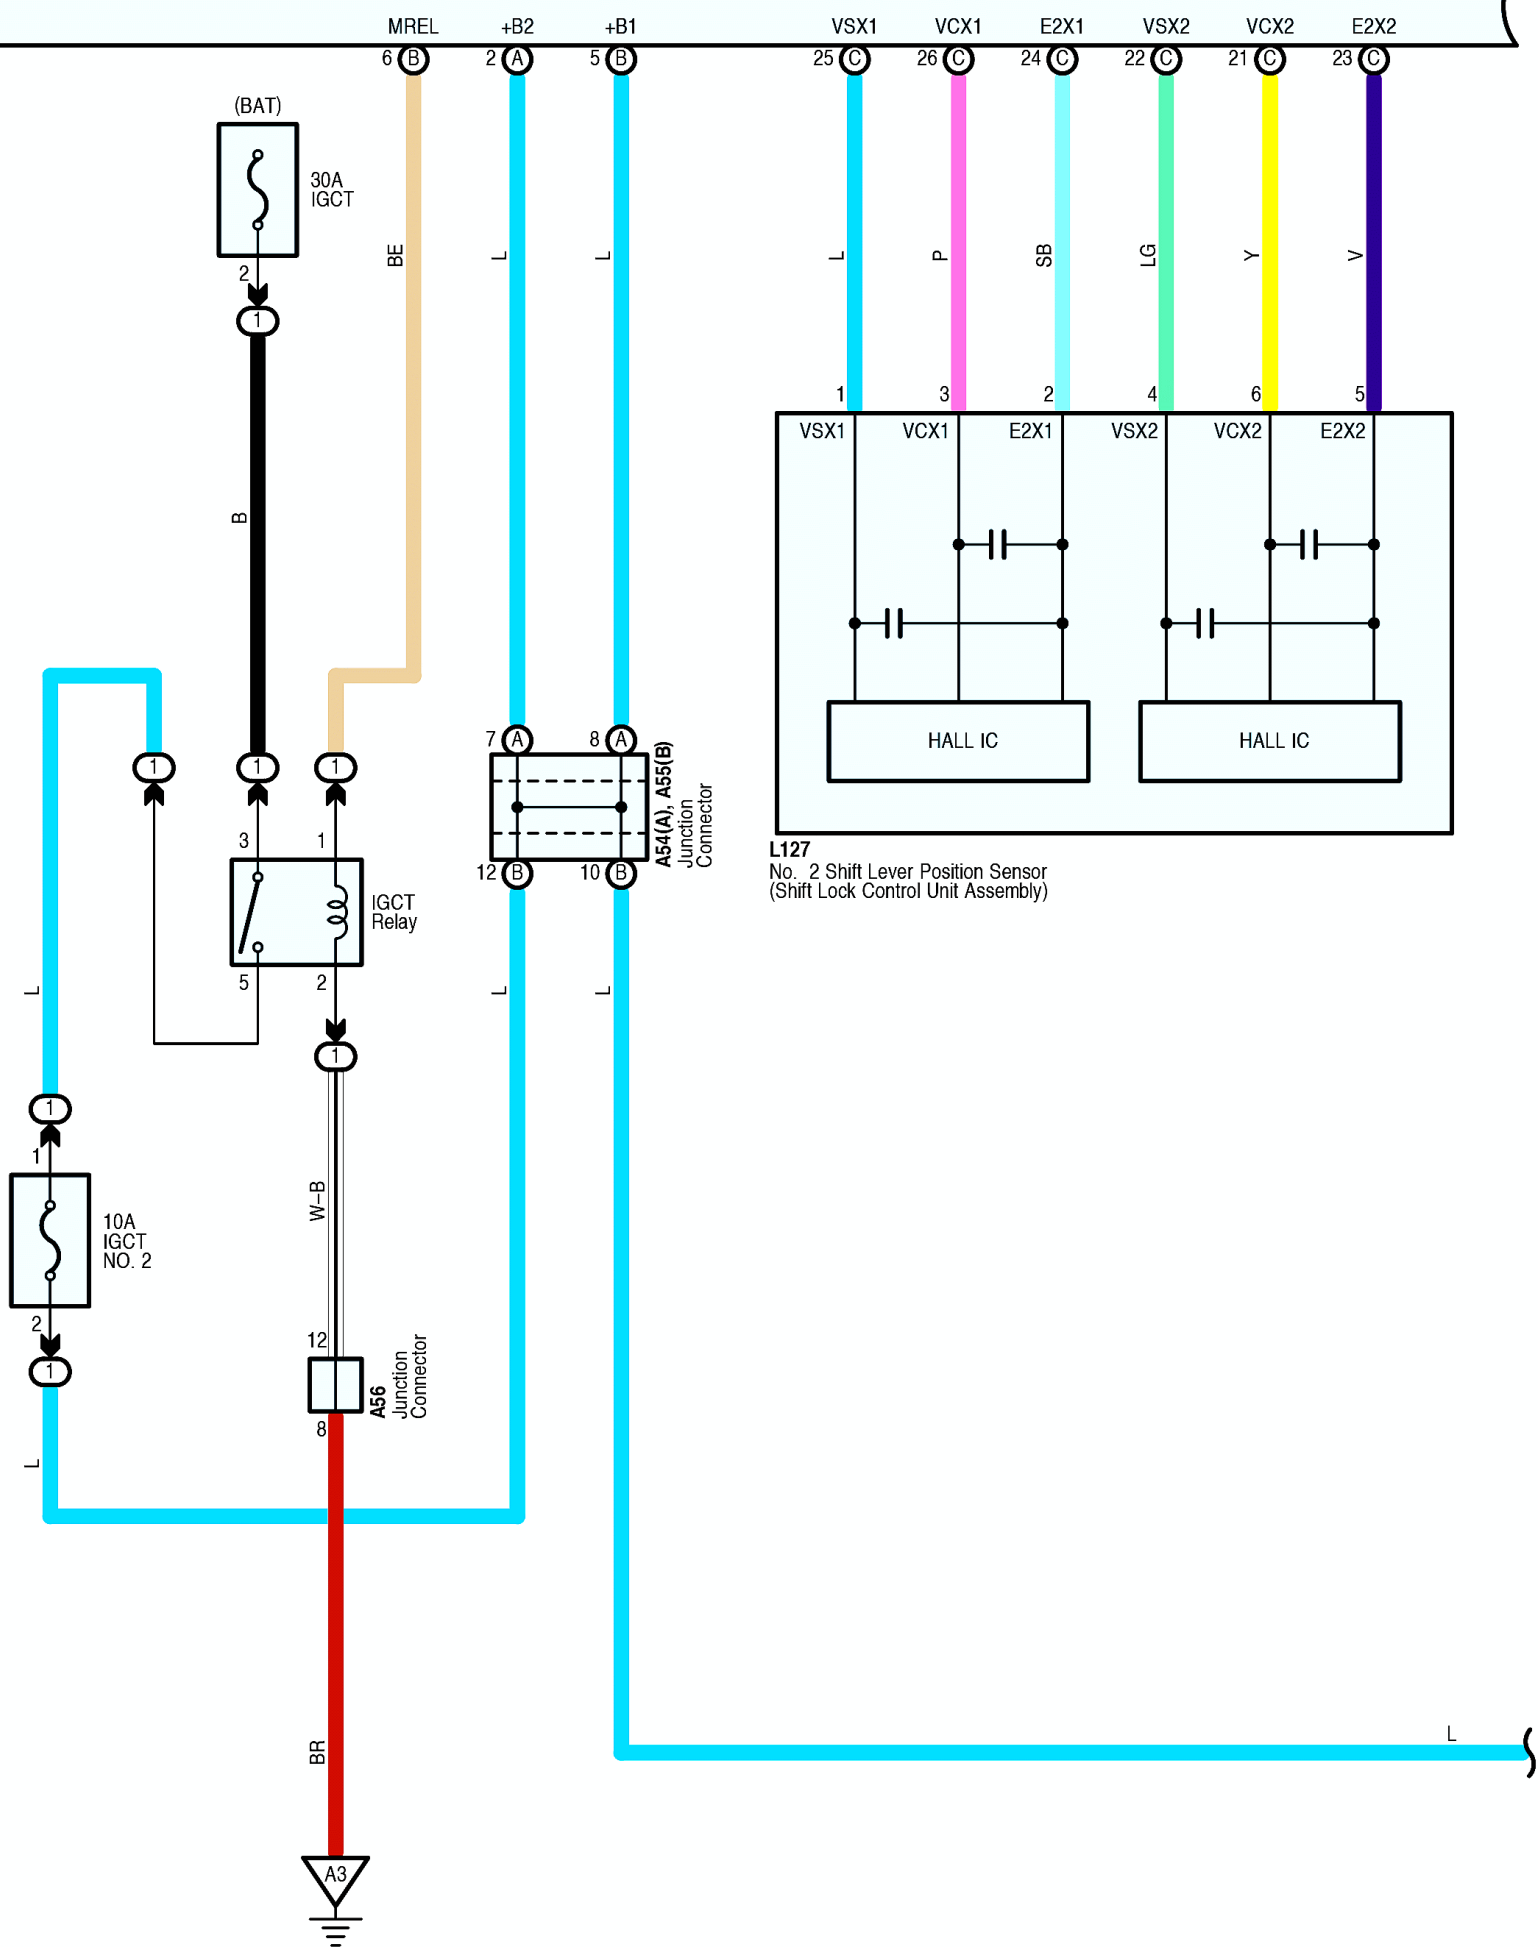

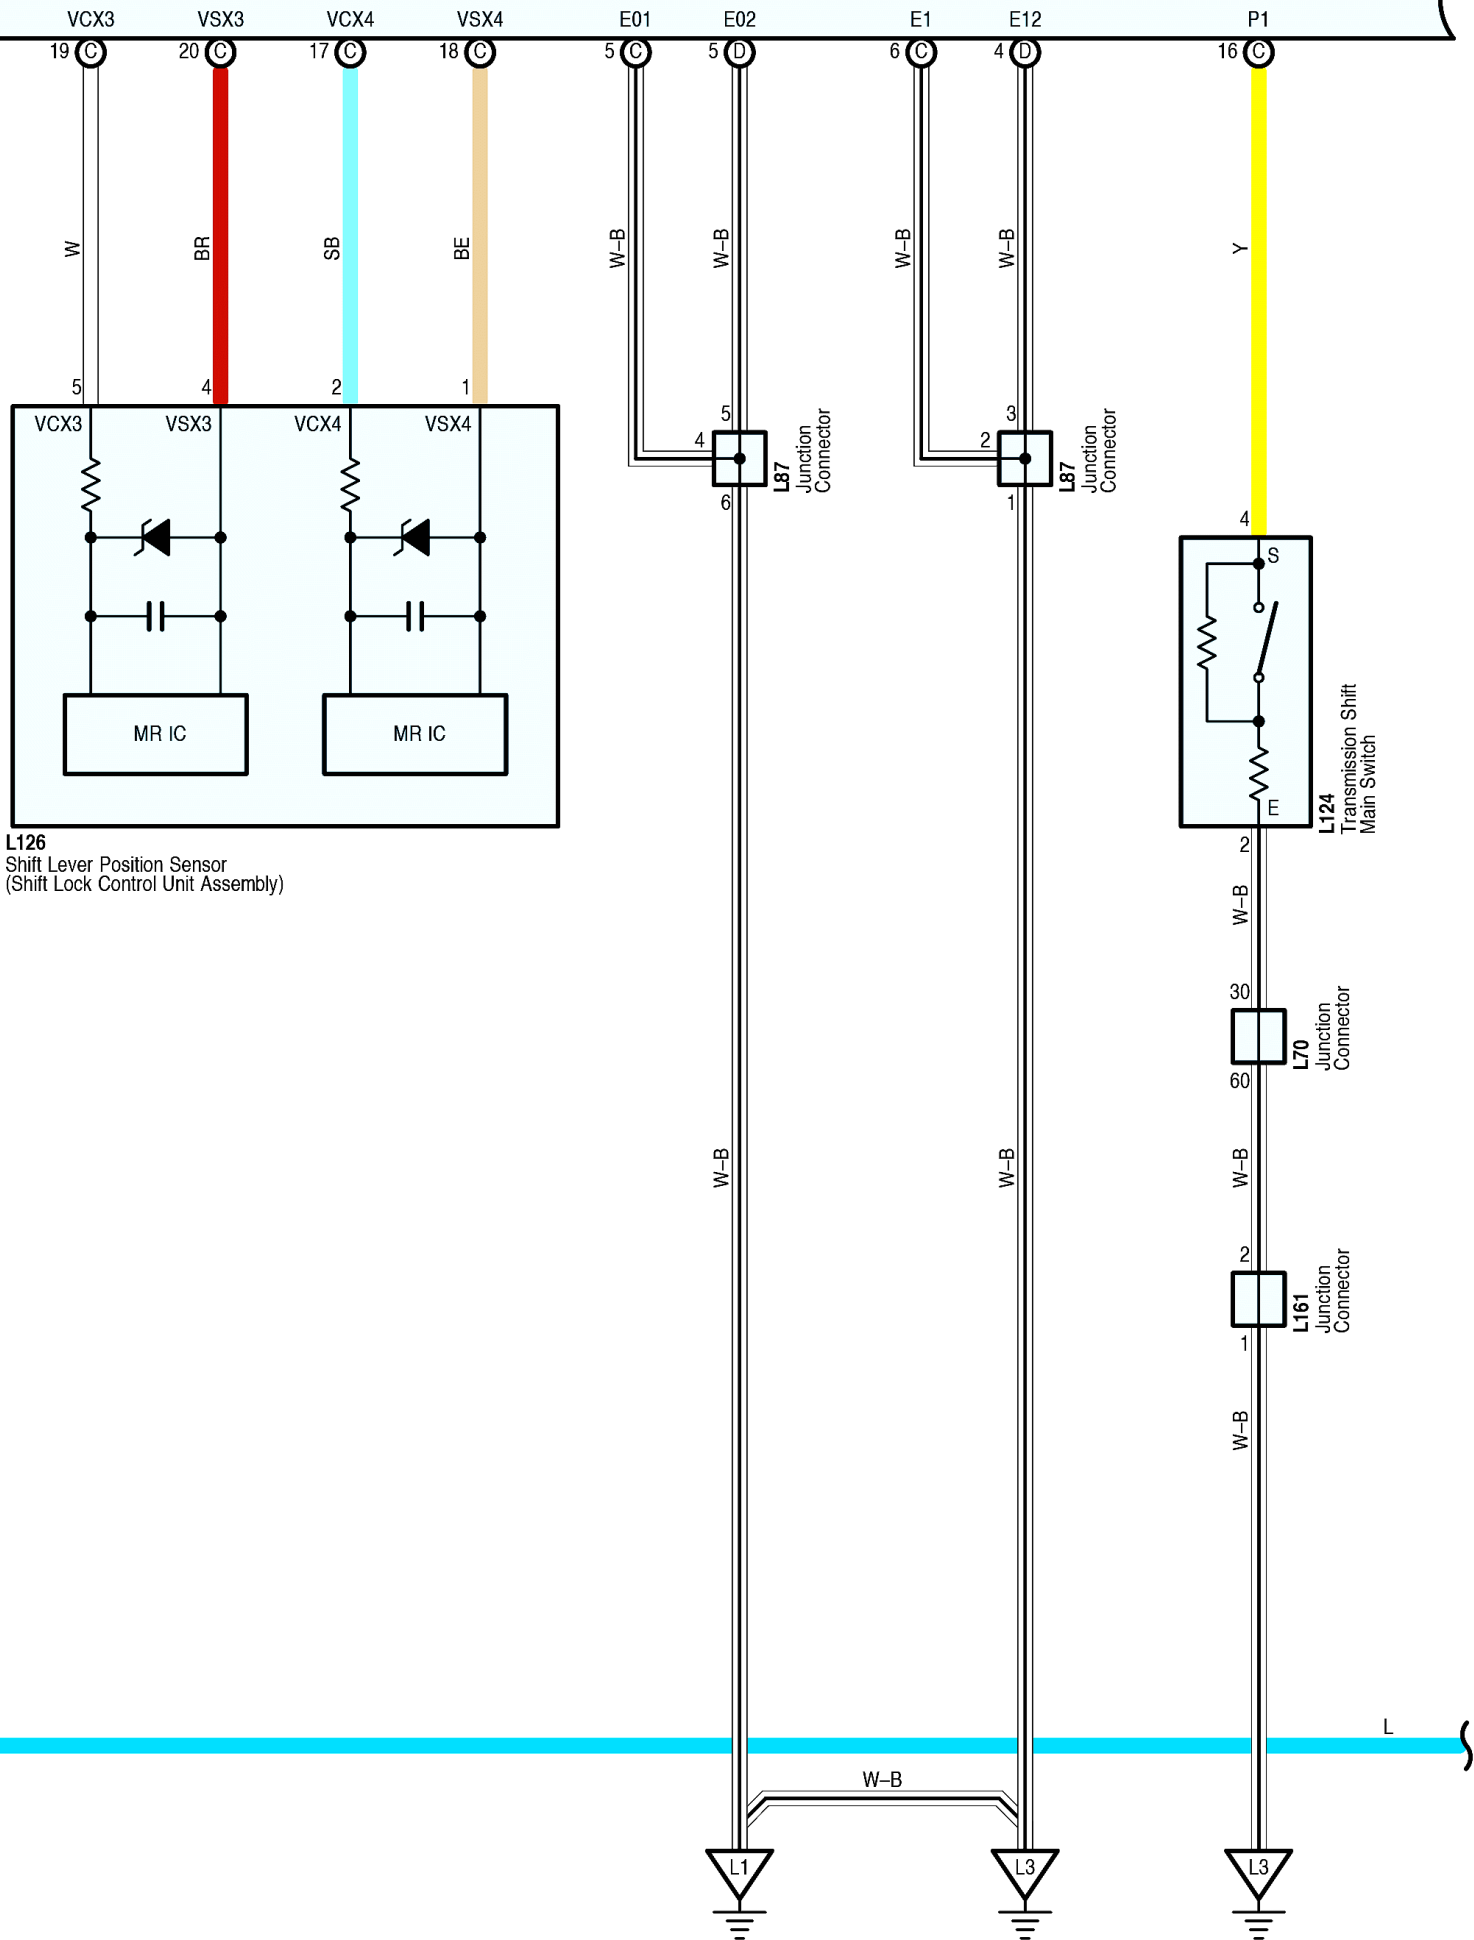


  
A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU

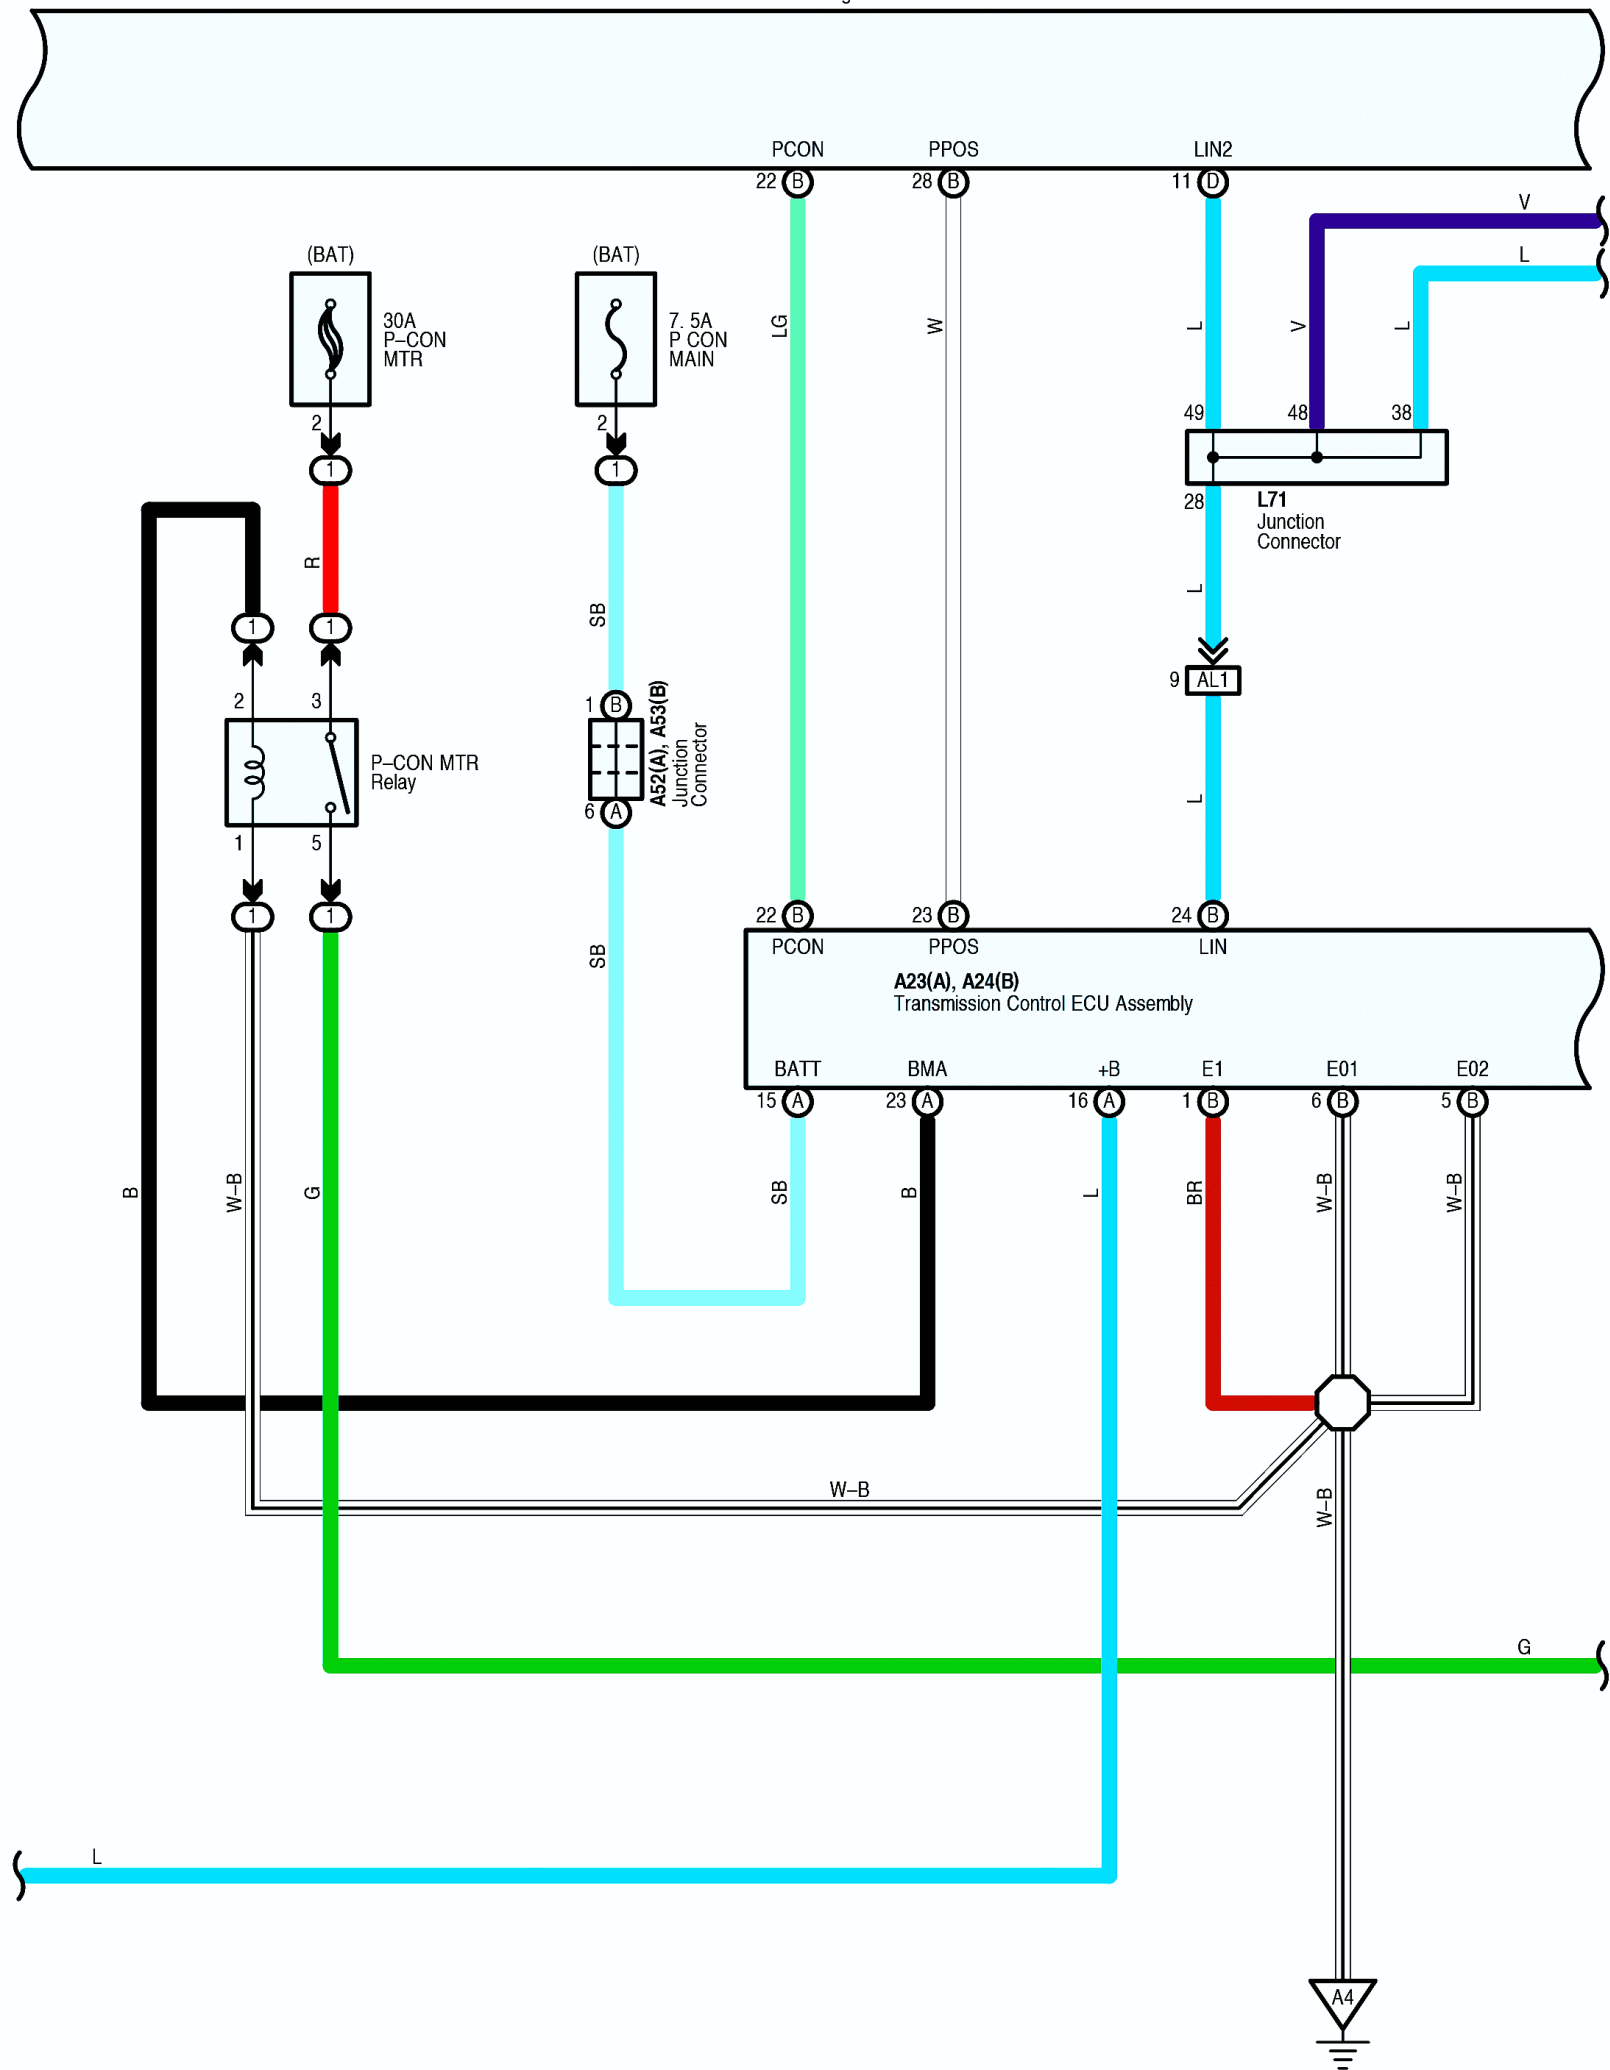

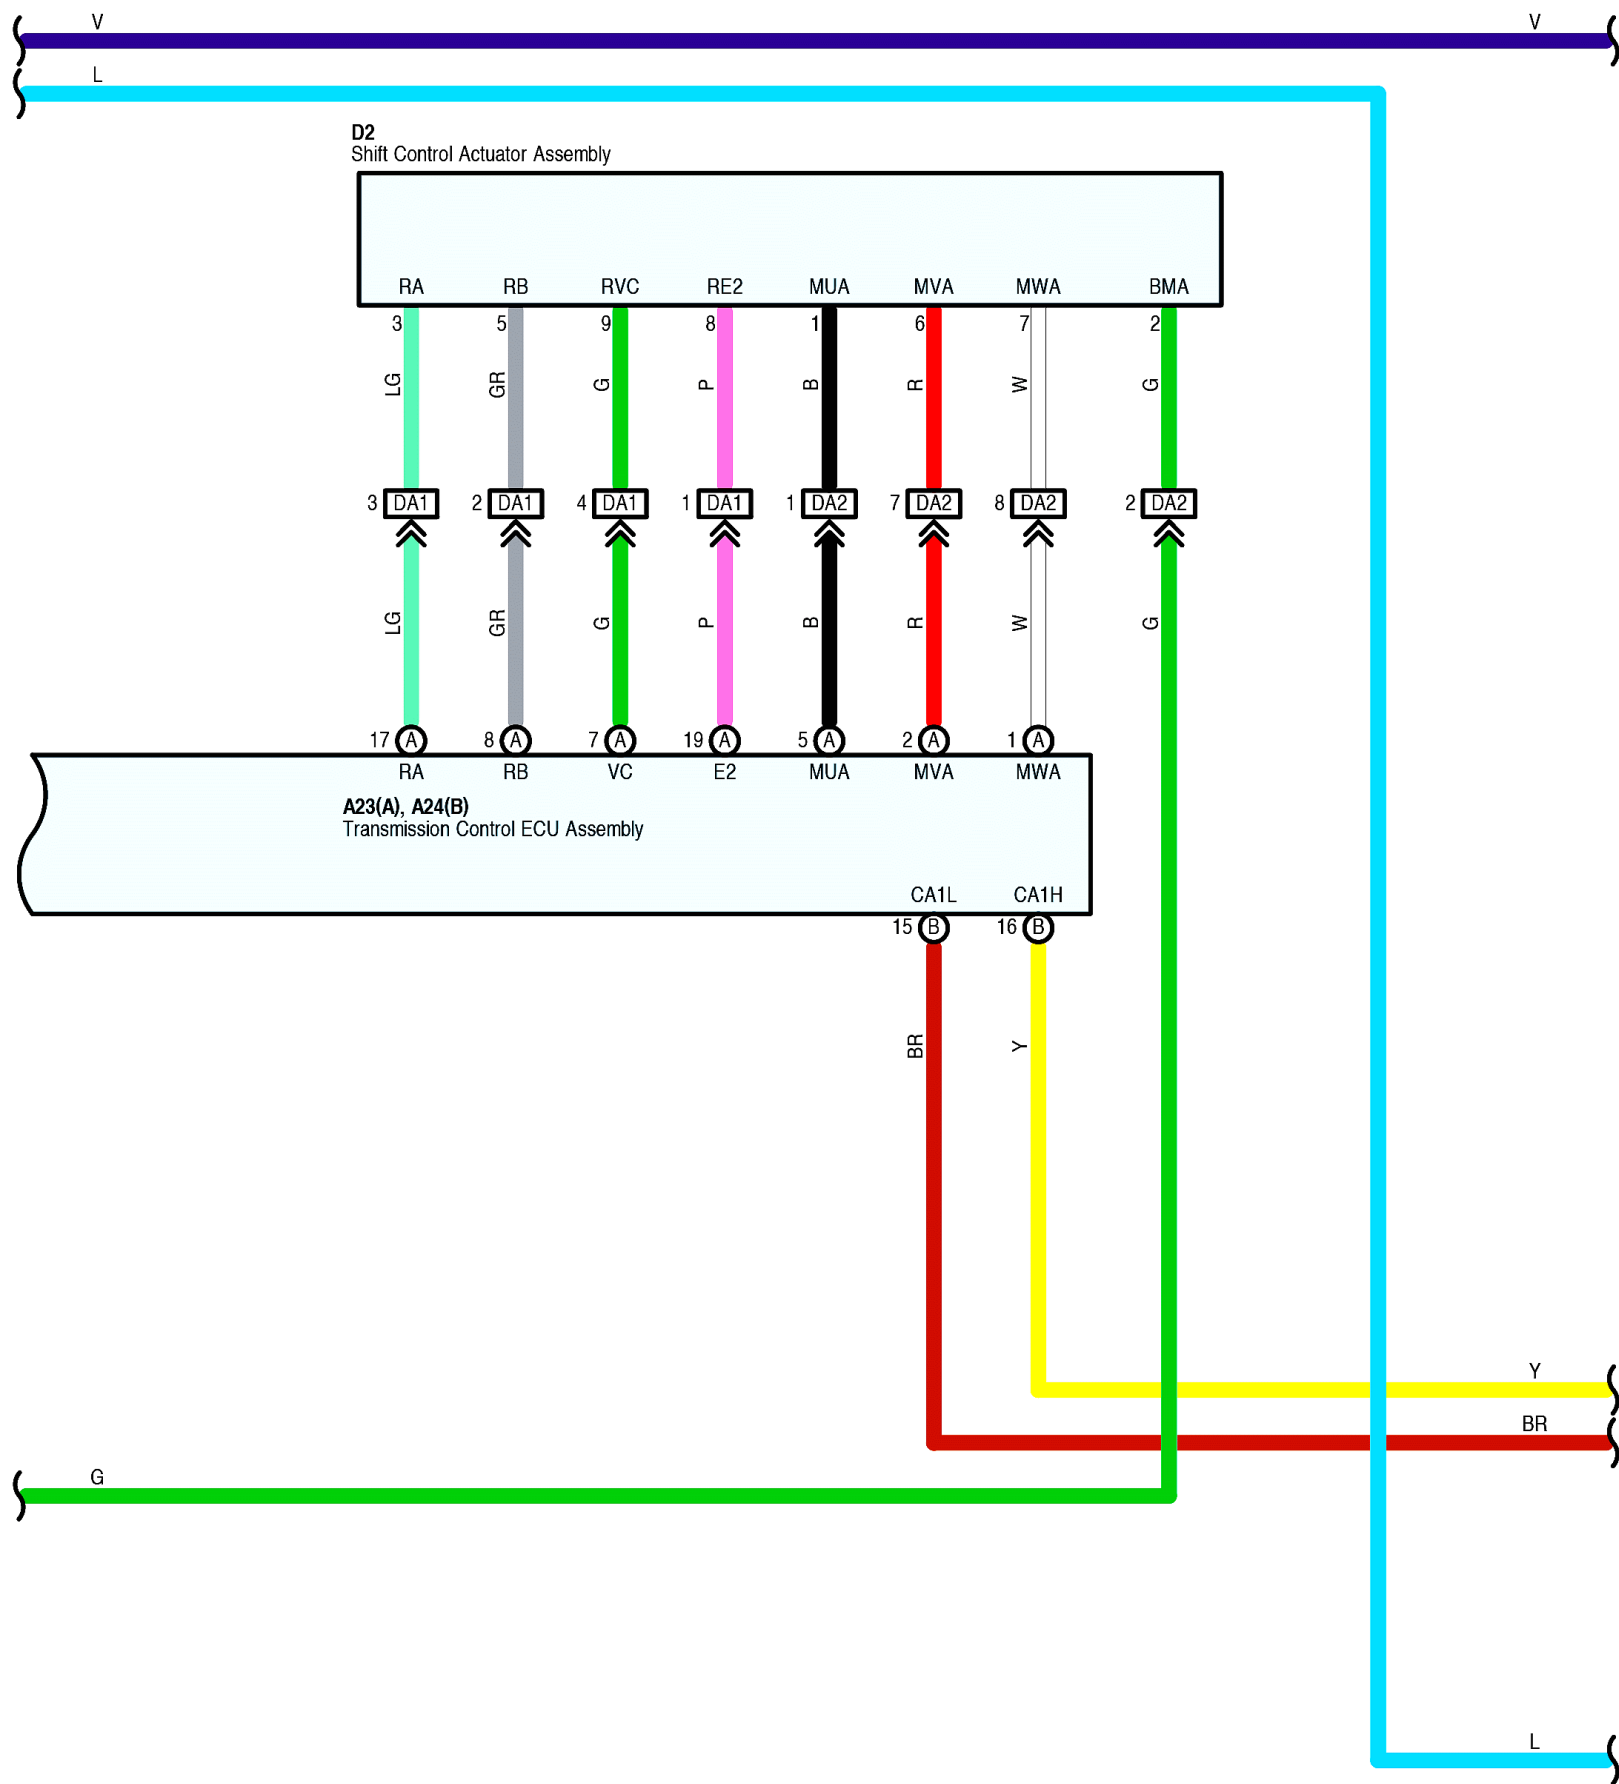


  
A21(A), A22(B), LE(C), LE(D)
Power Management Control ECU

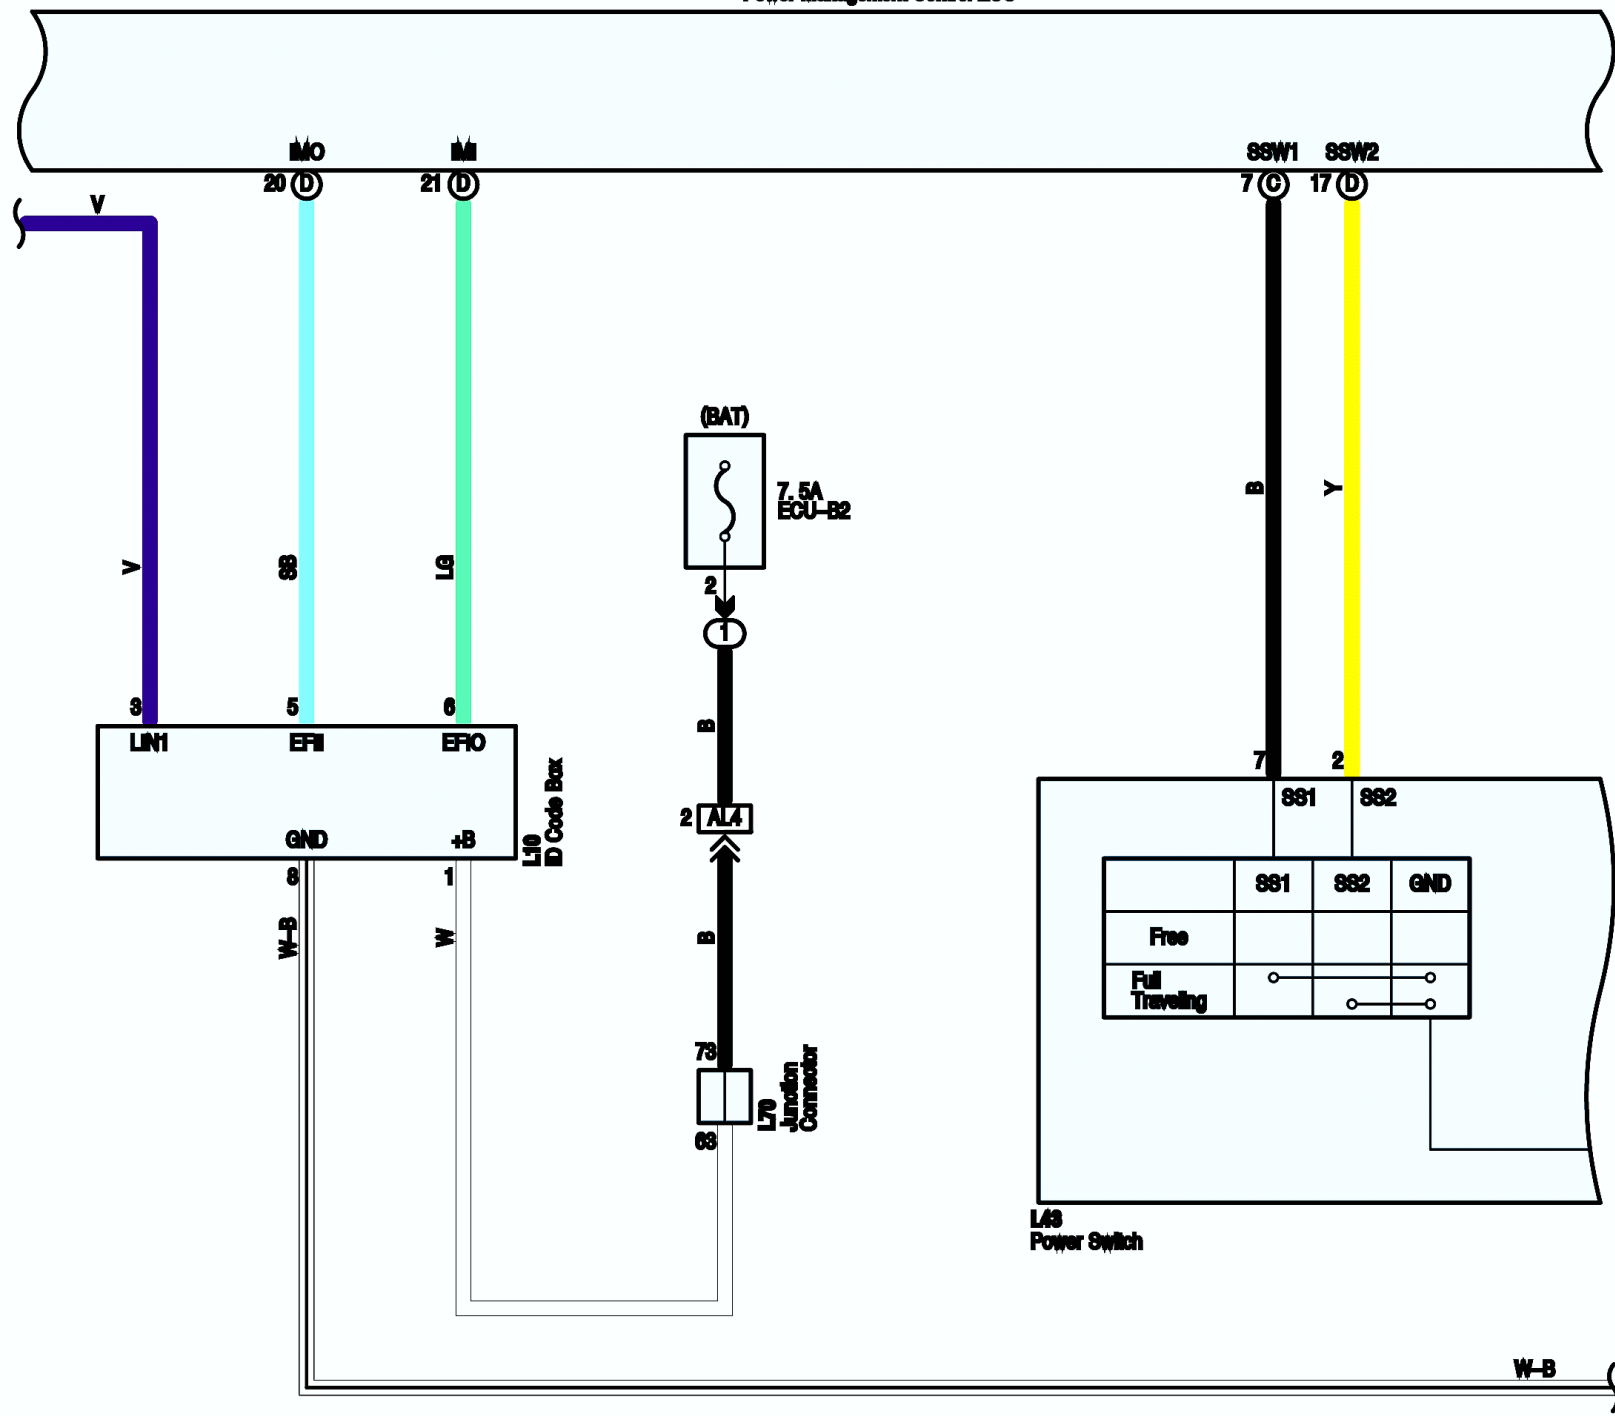


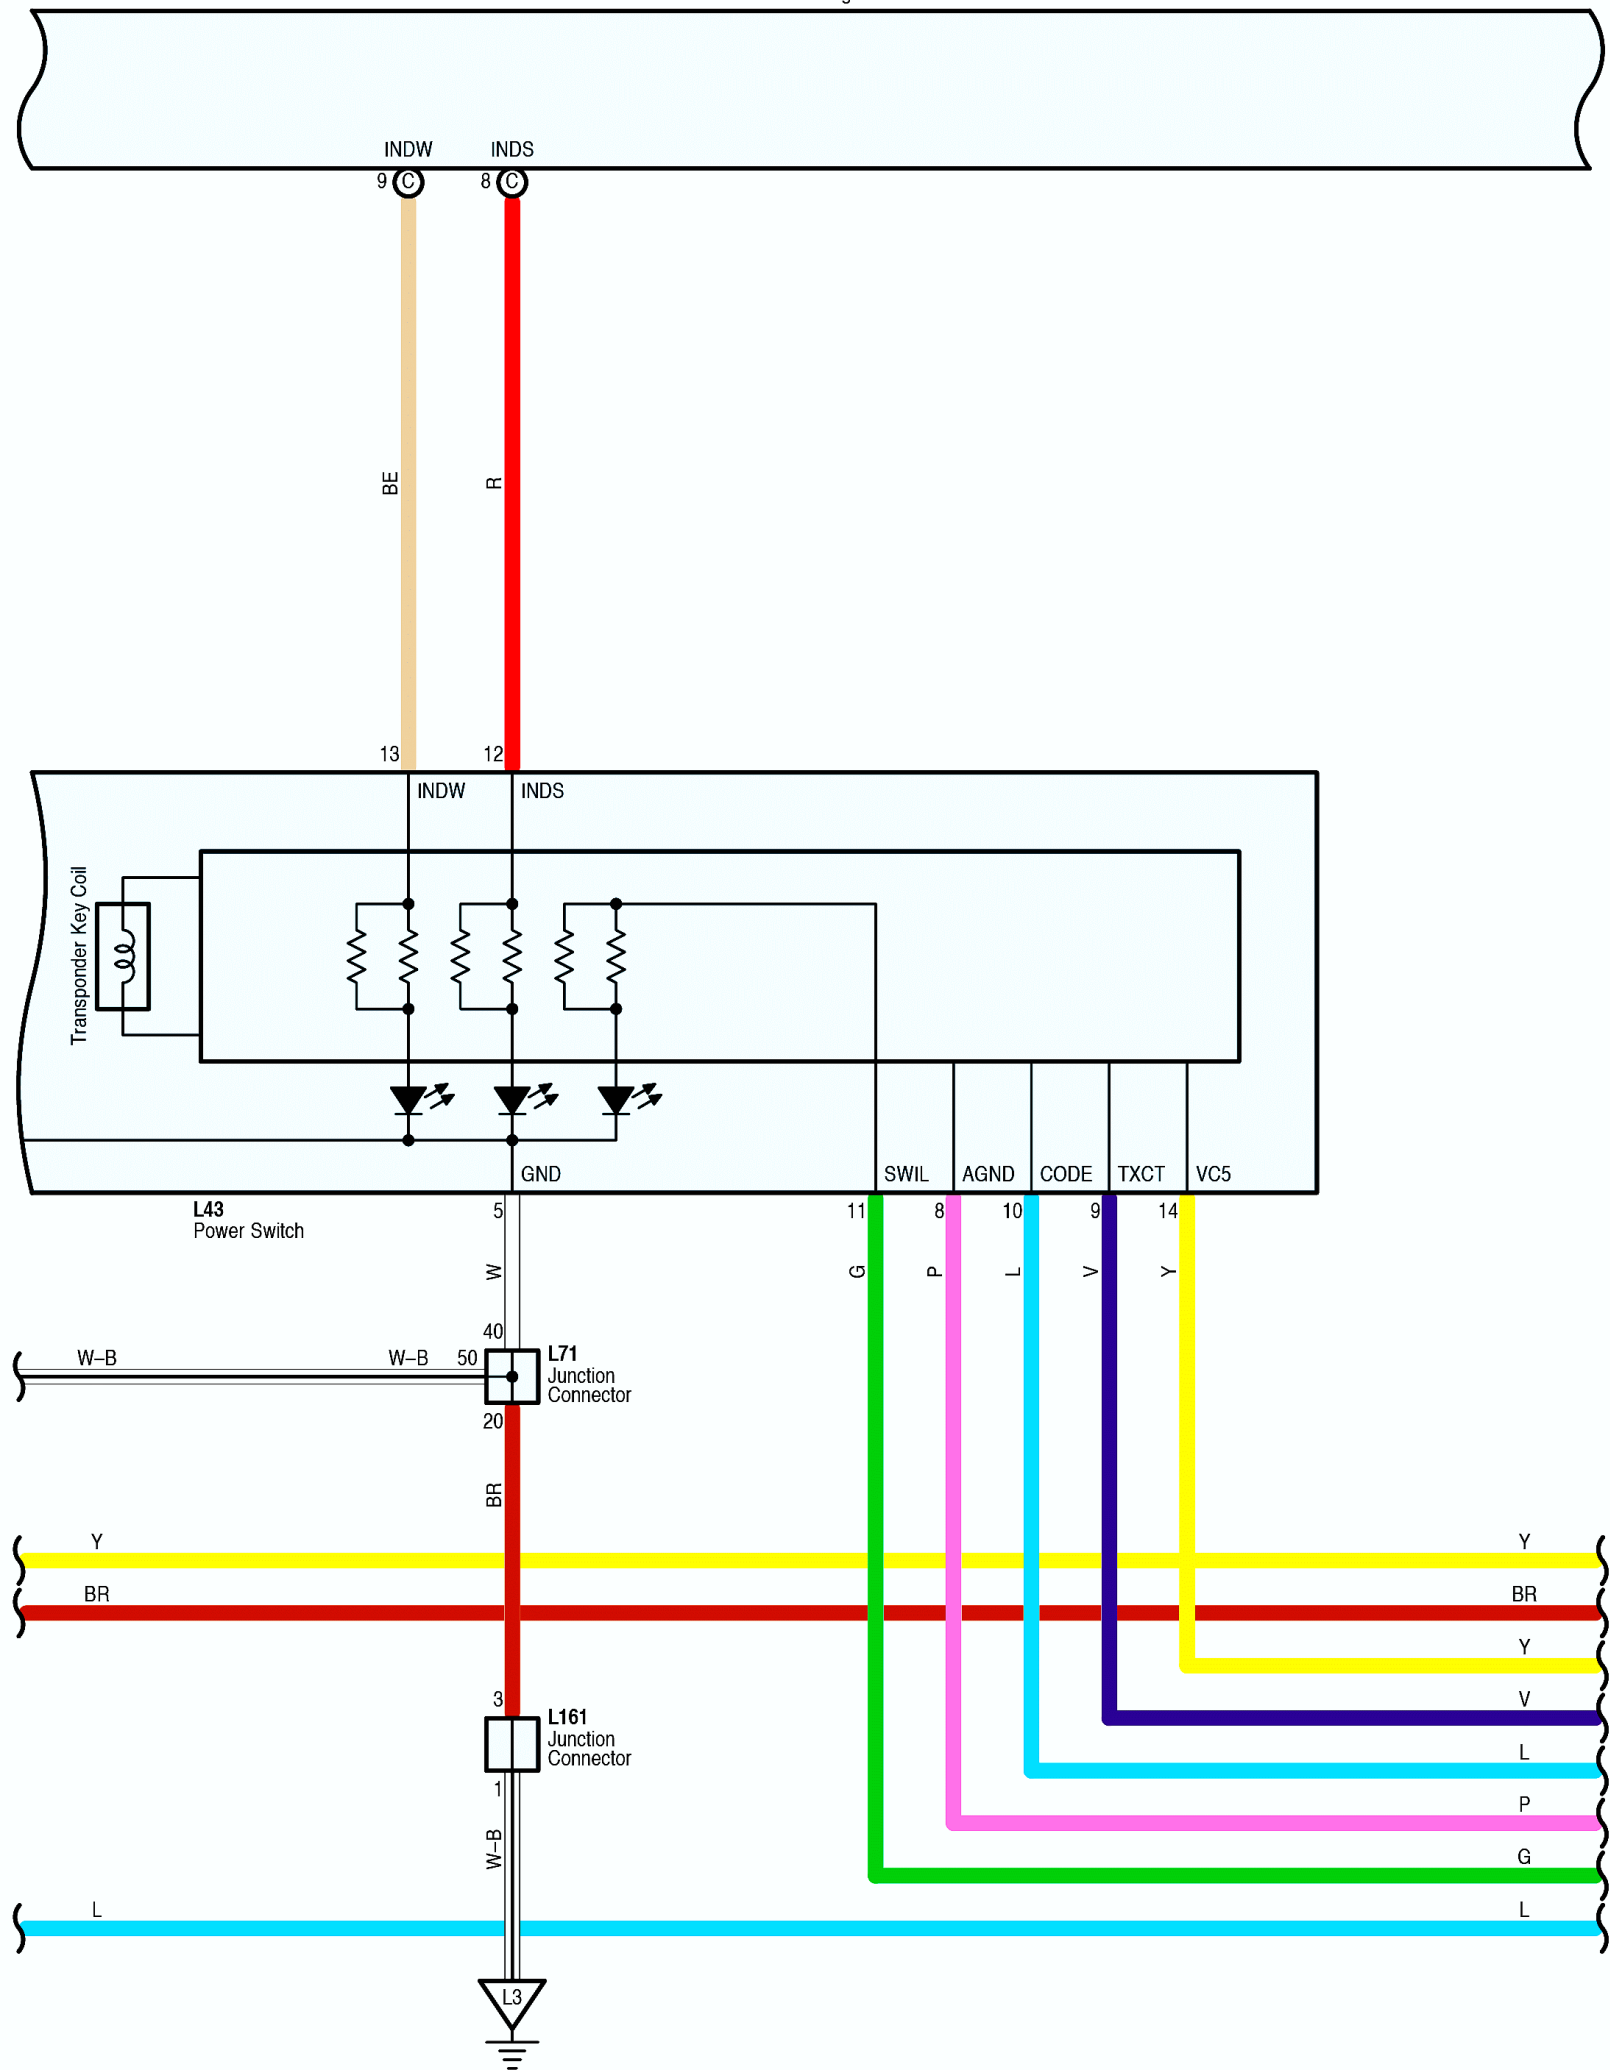


     
A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU

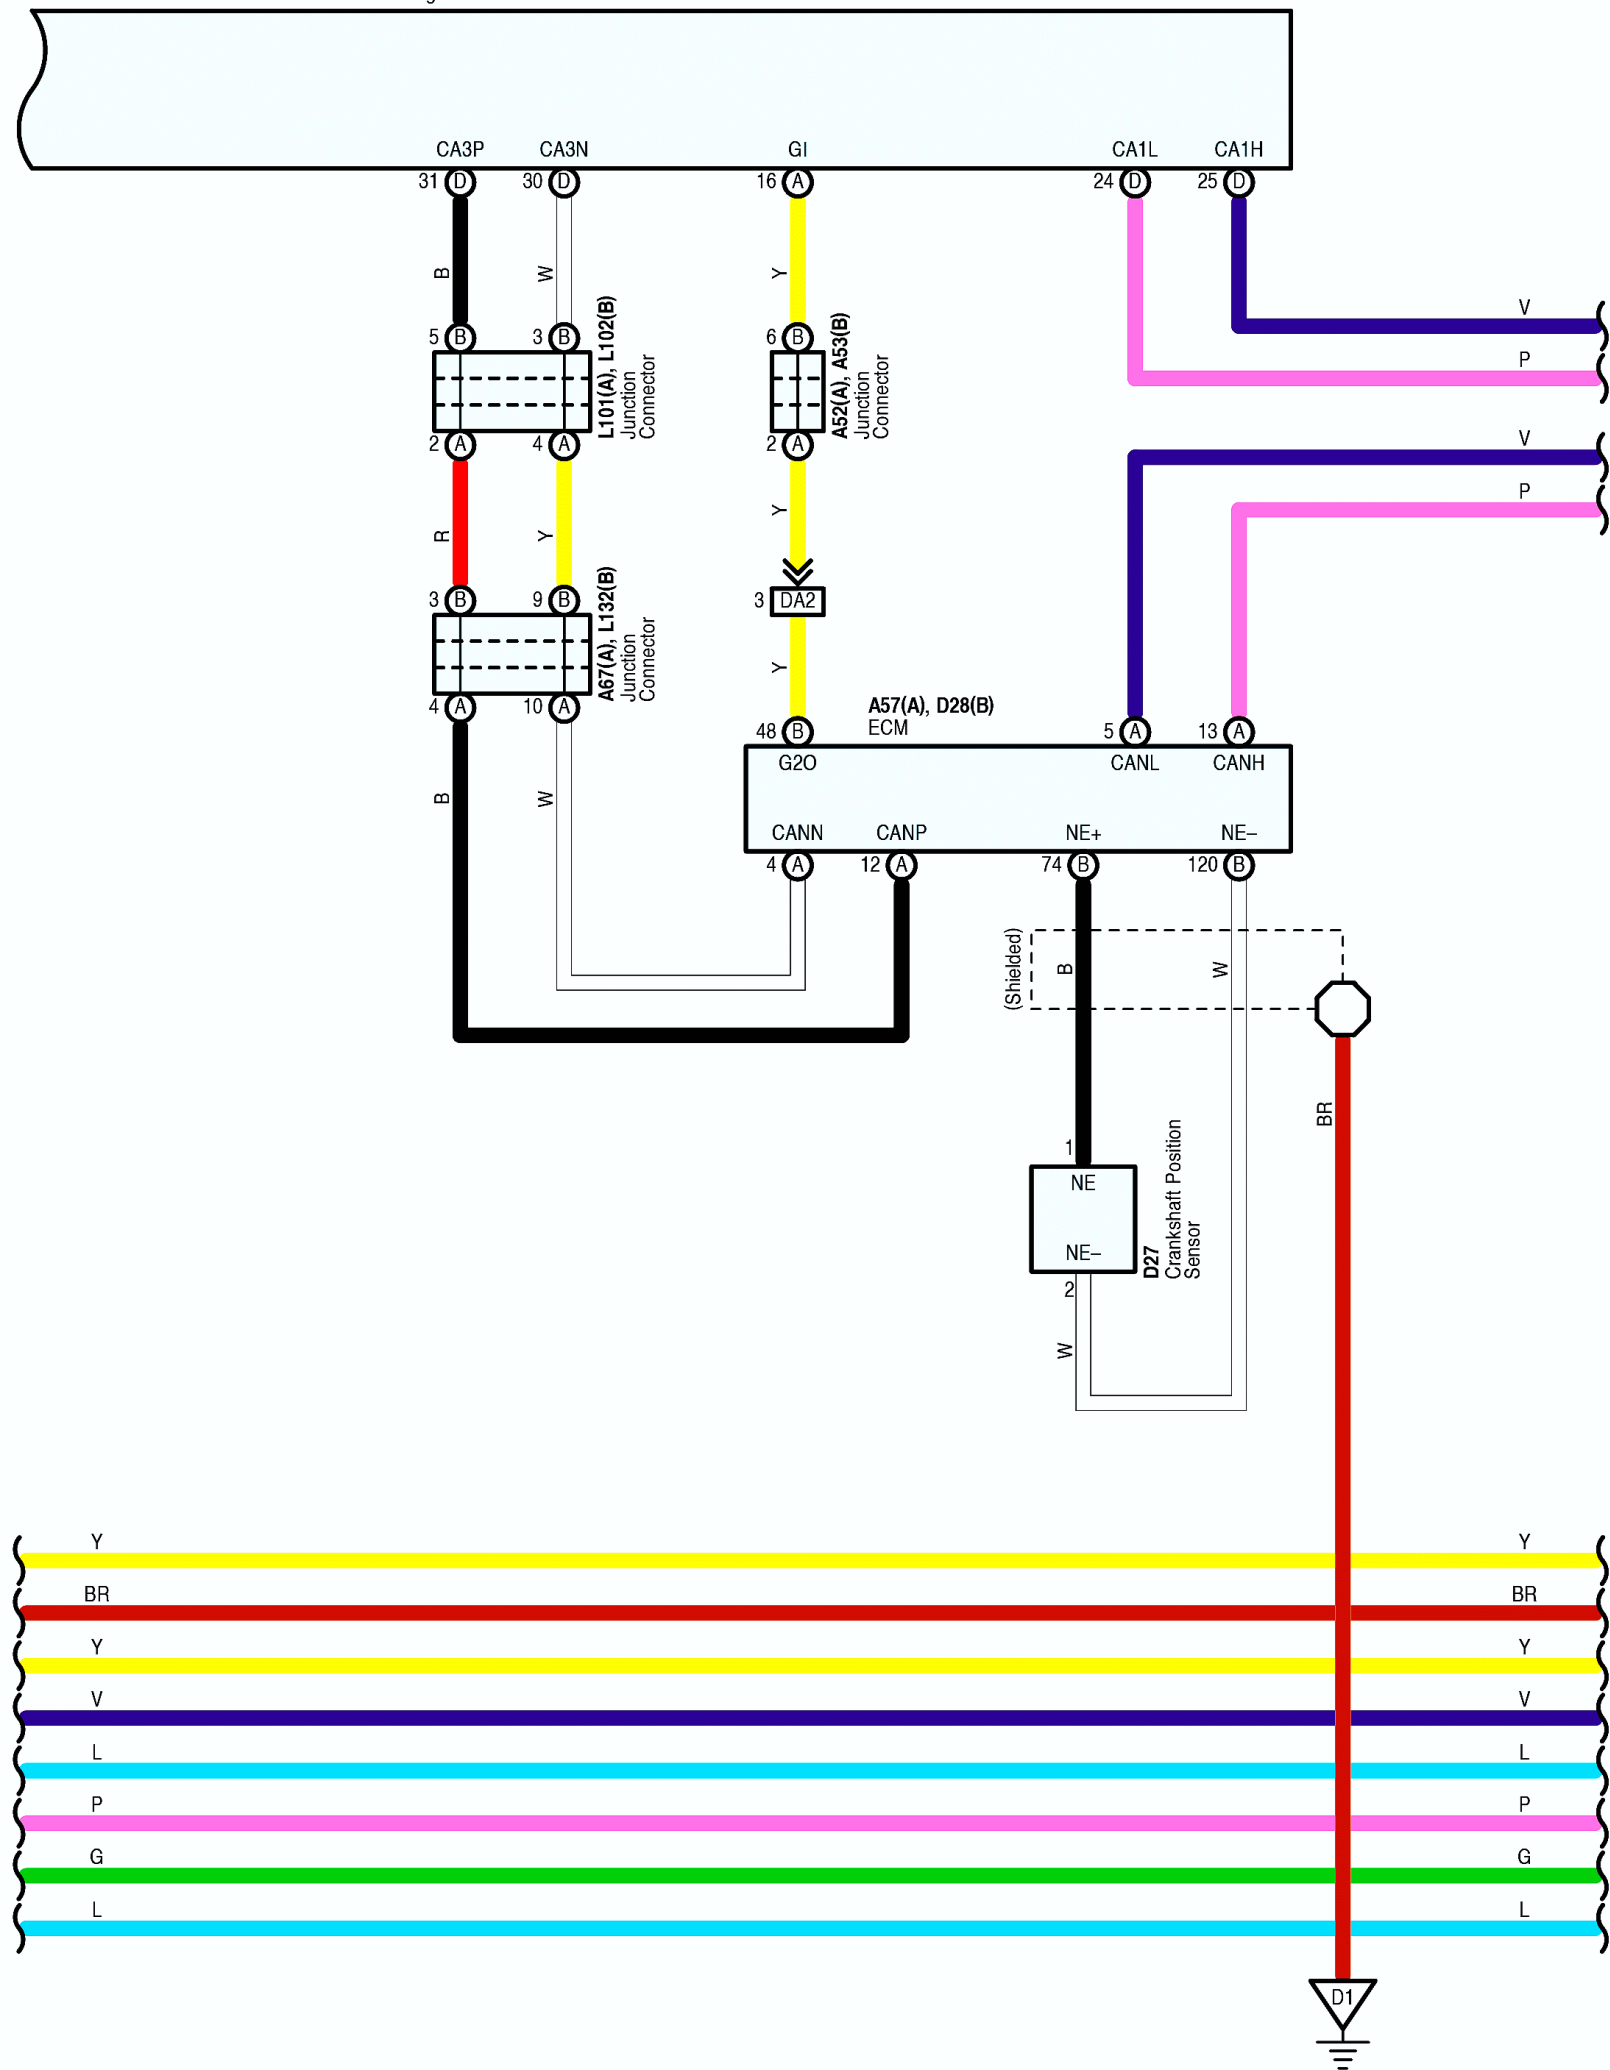 


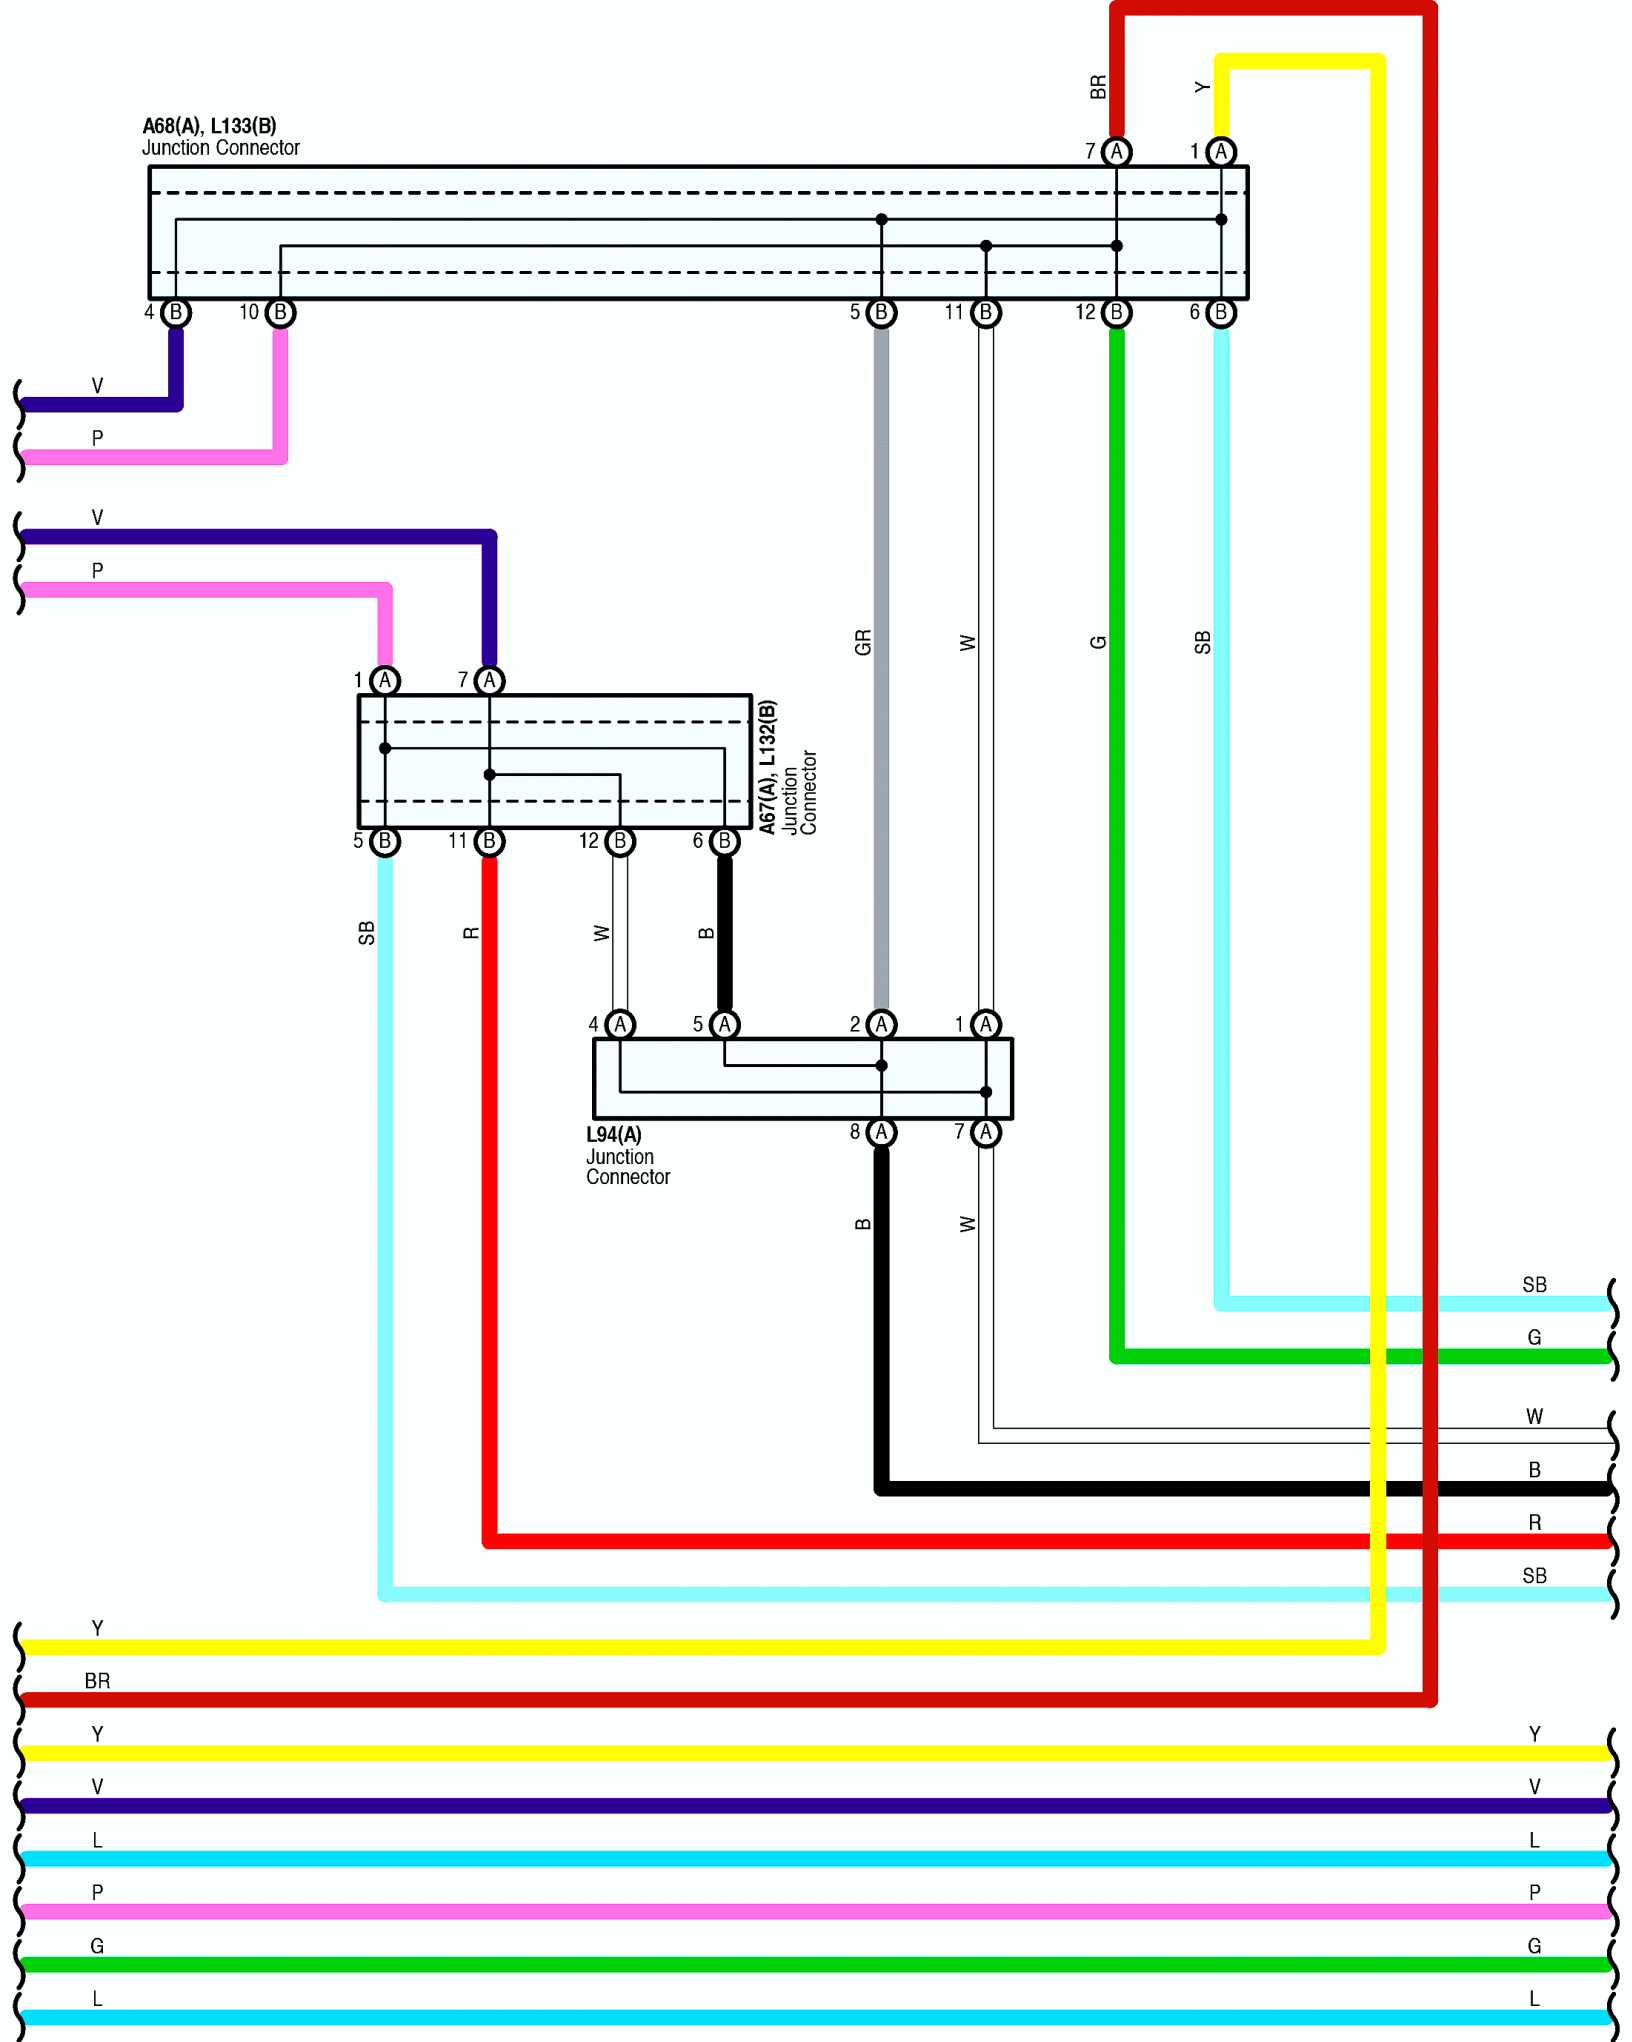 


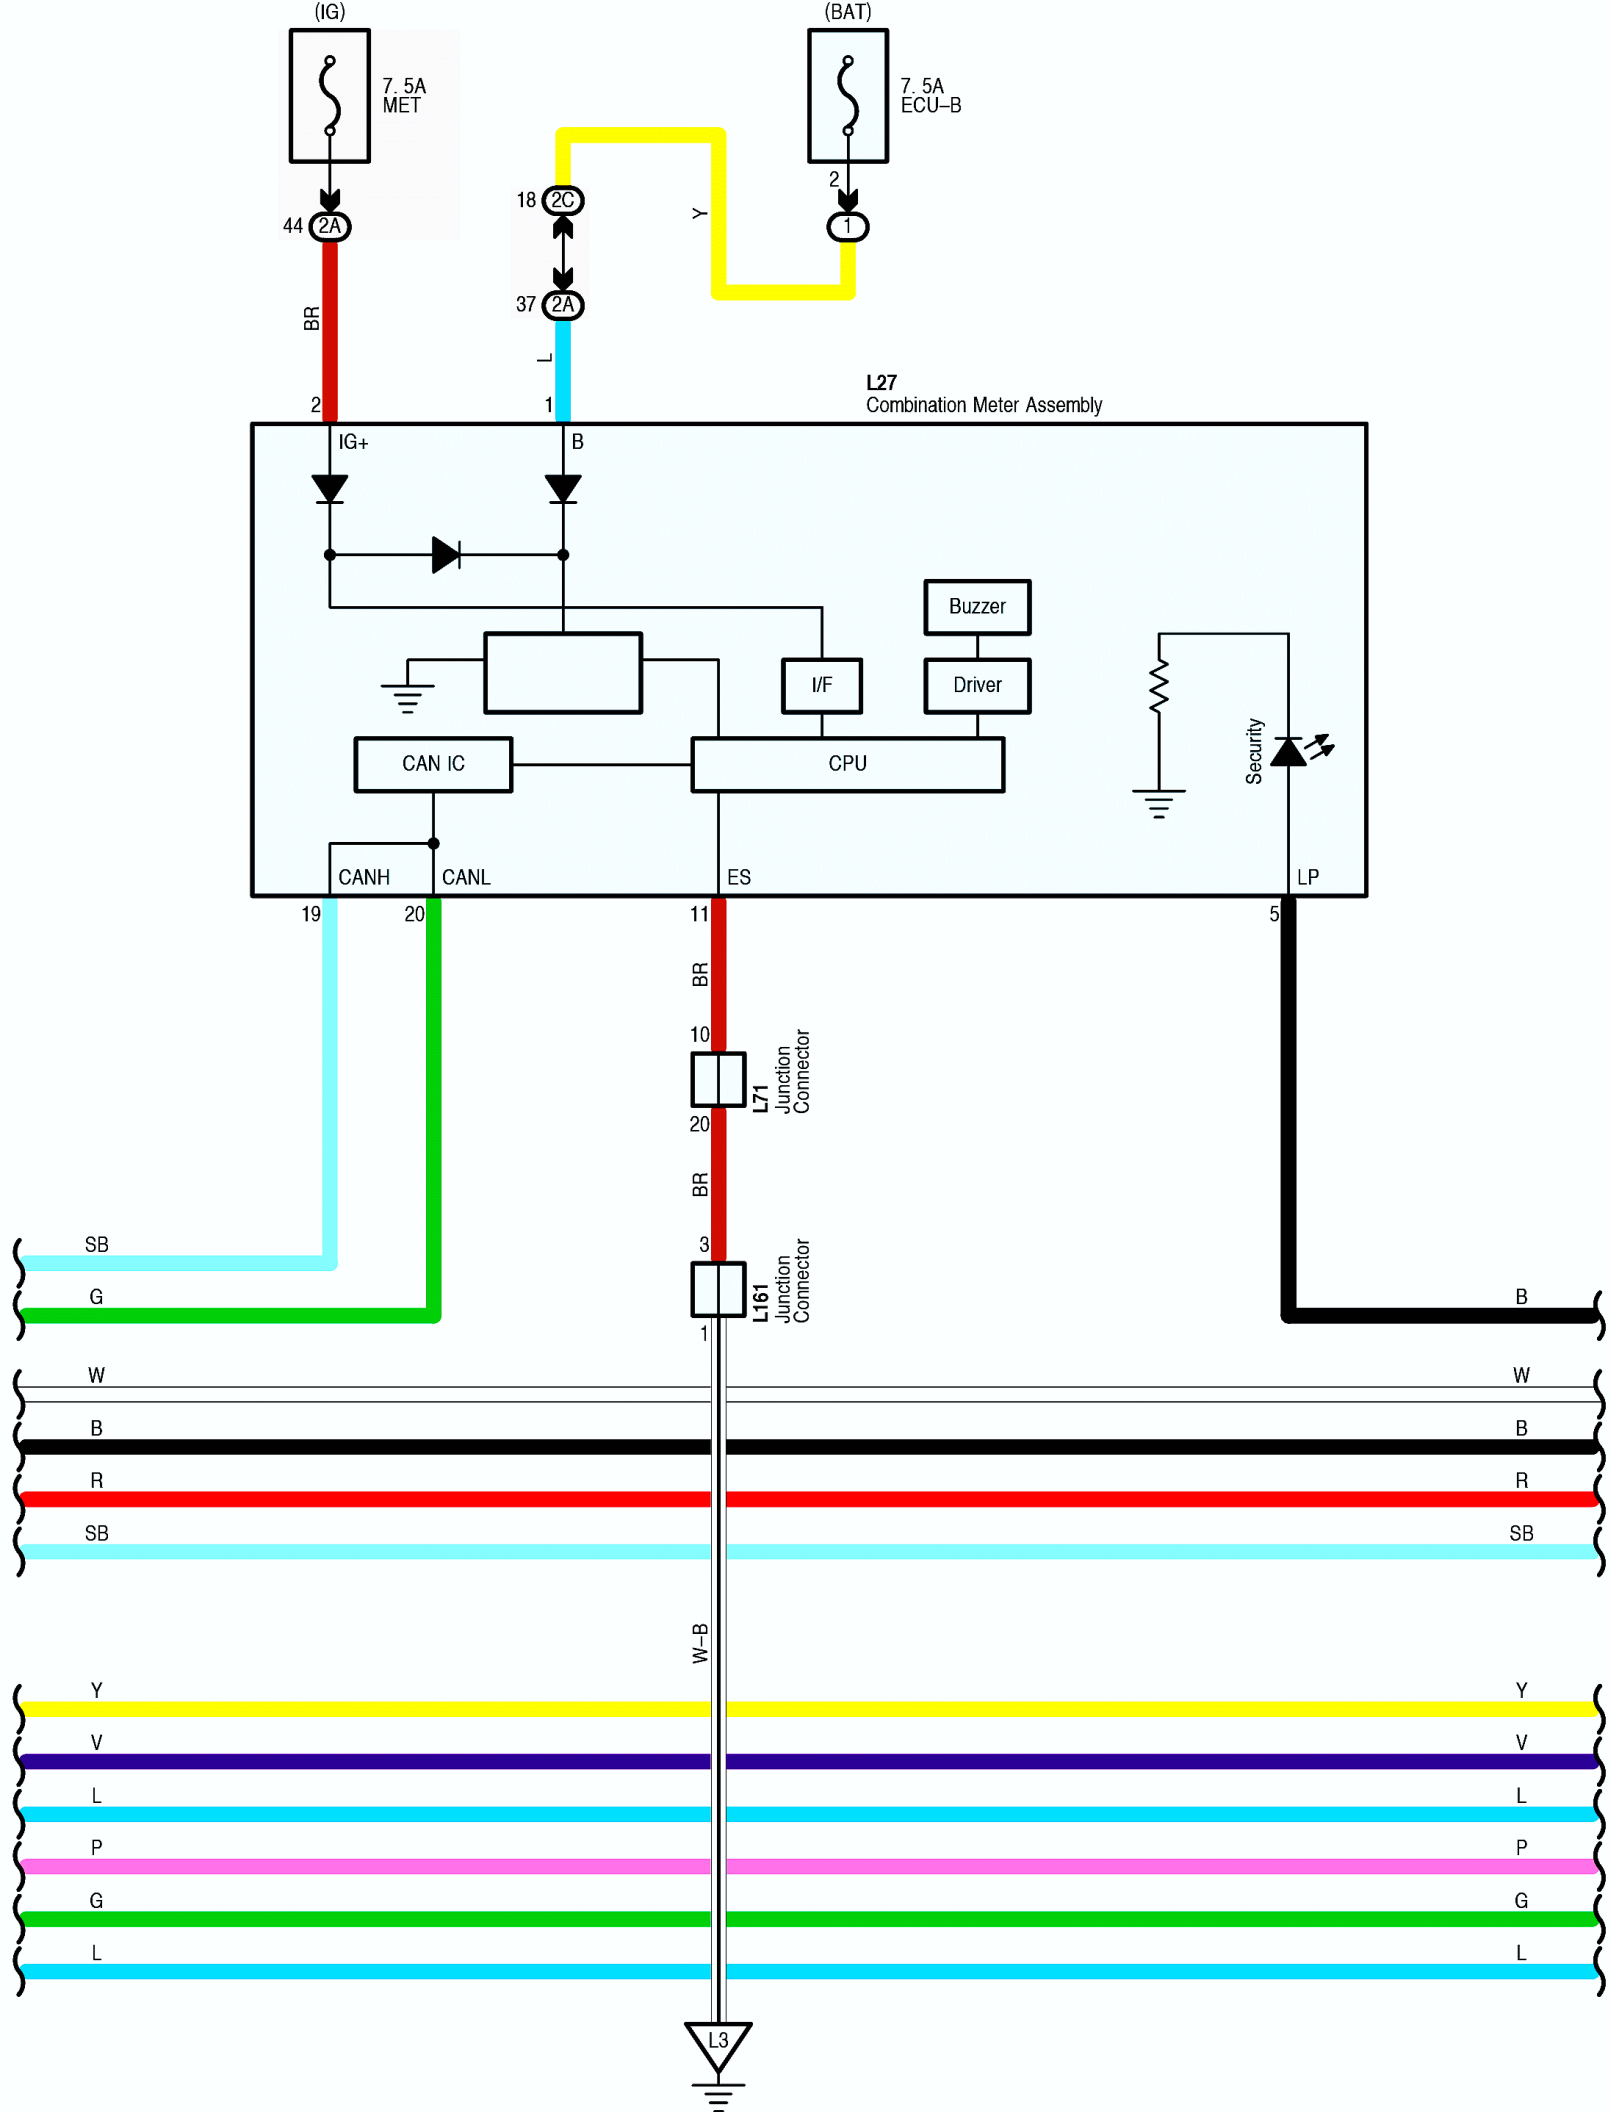 


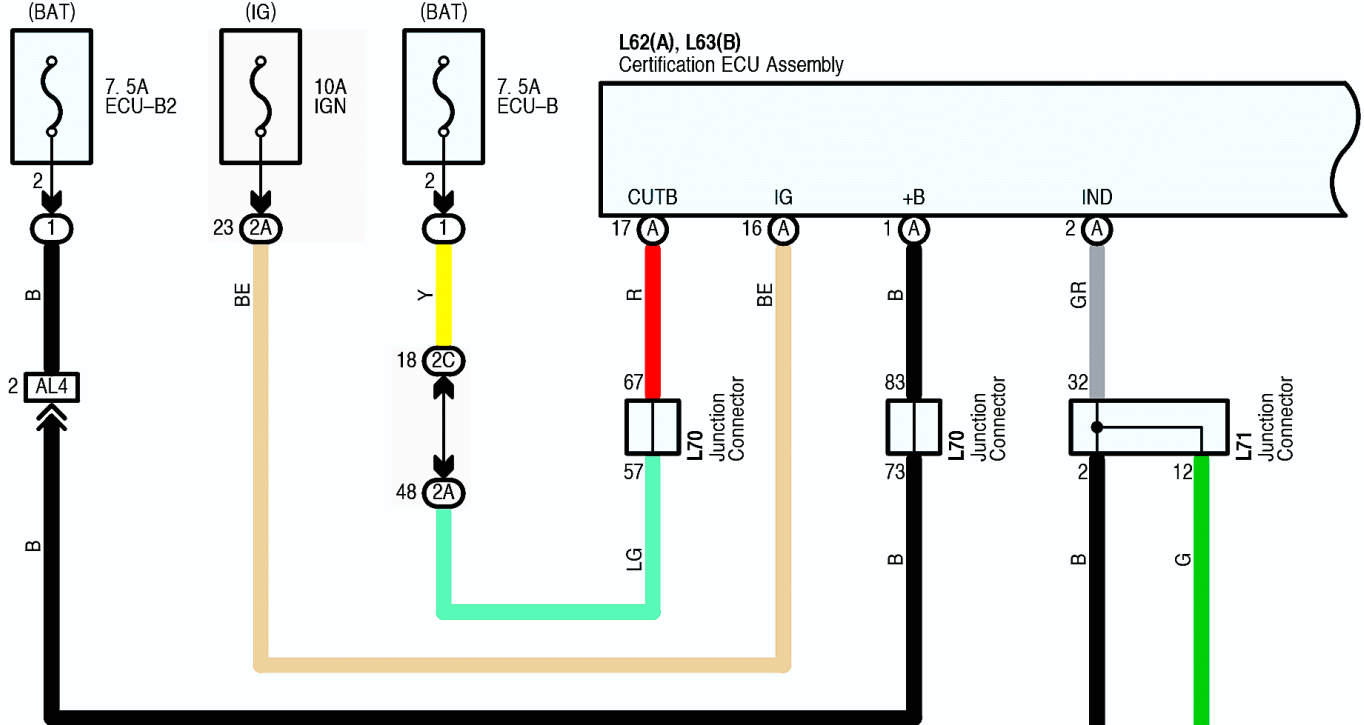 


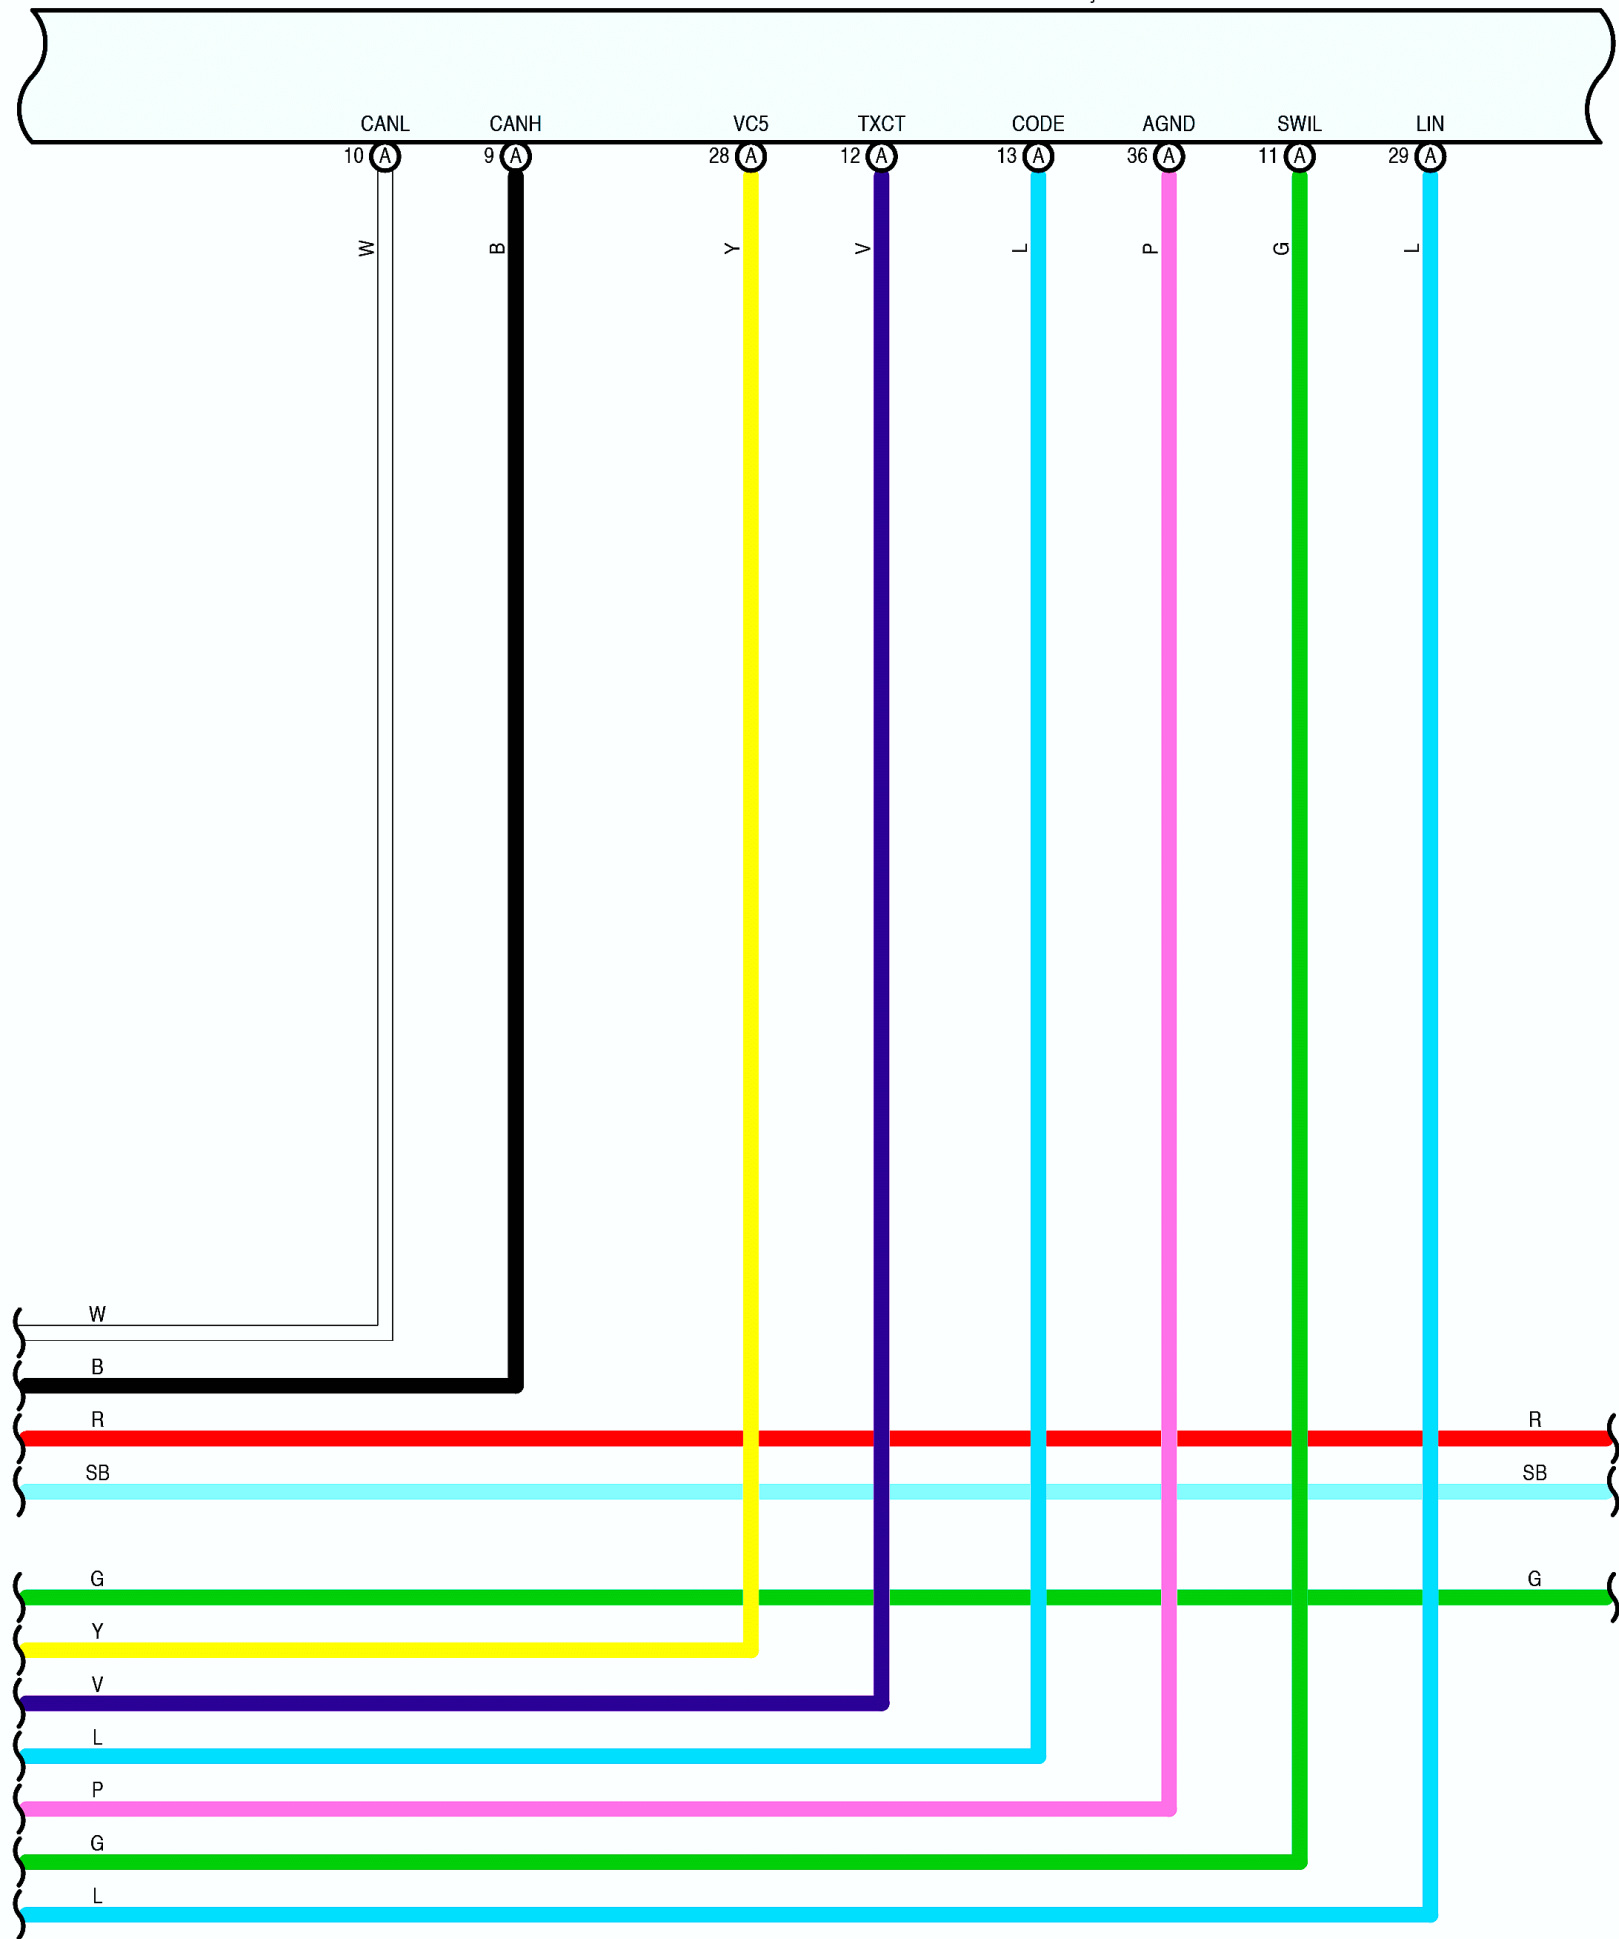 


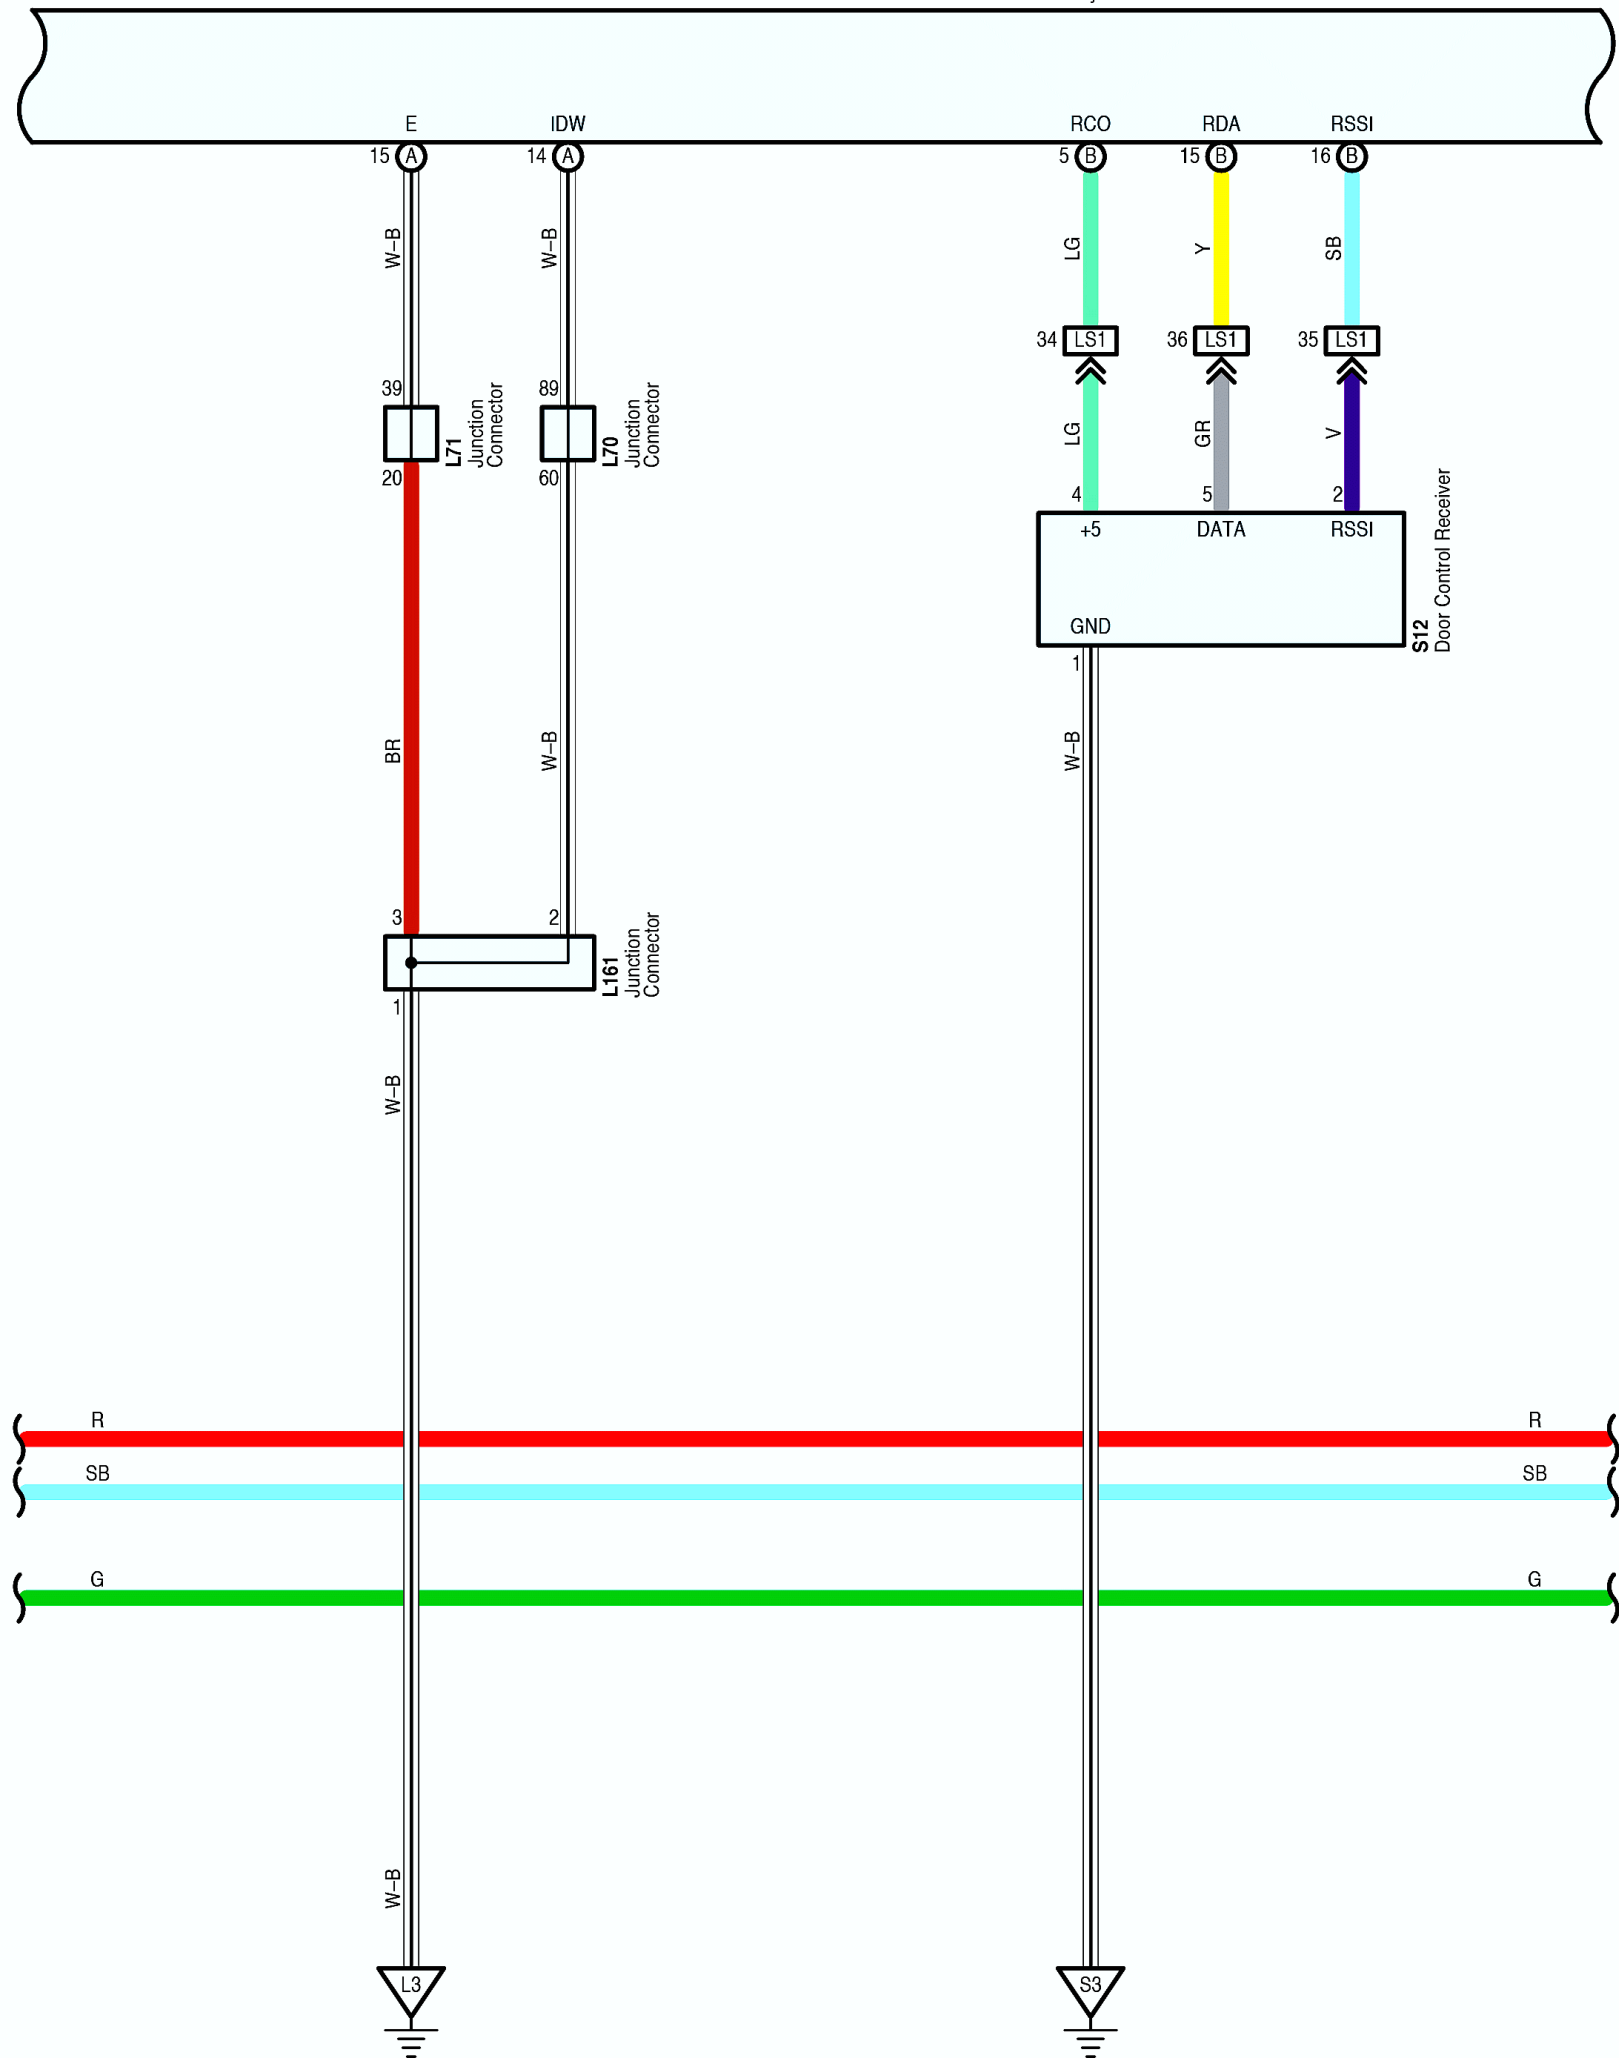 


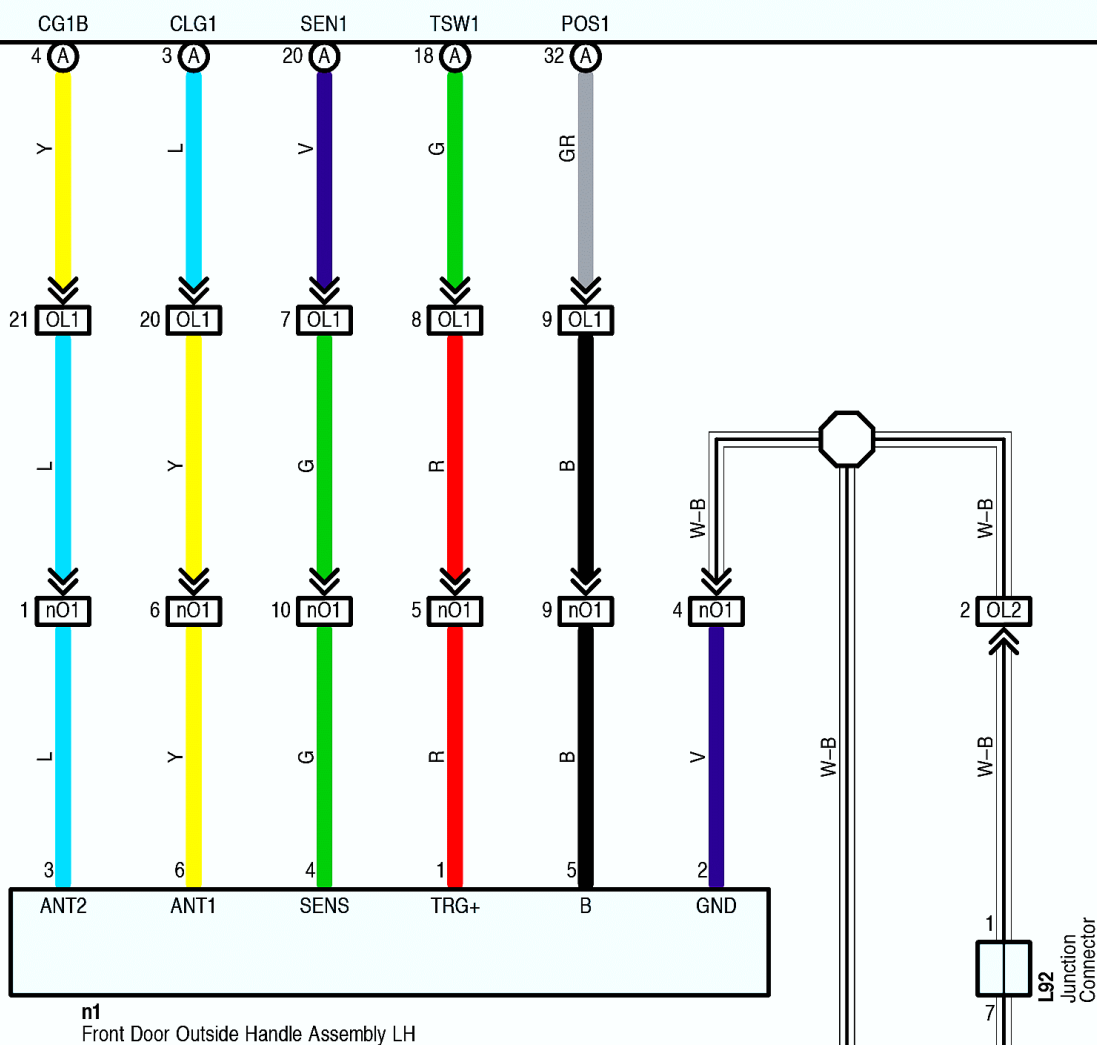 


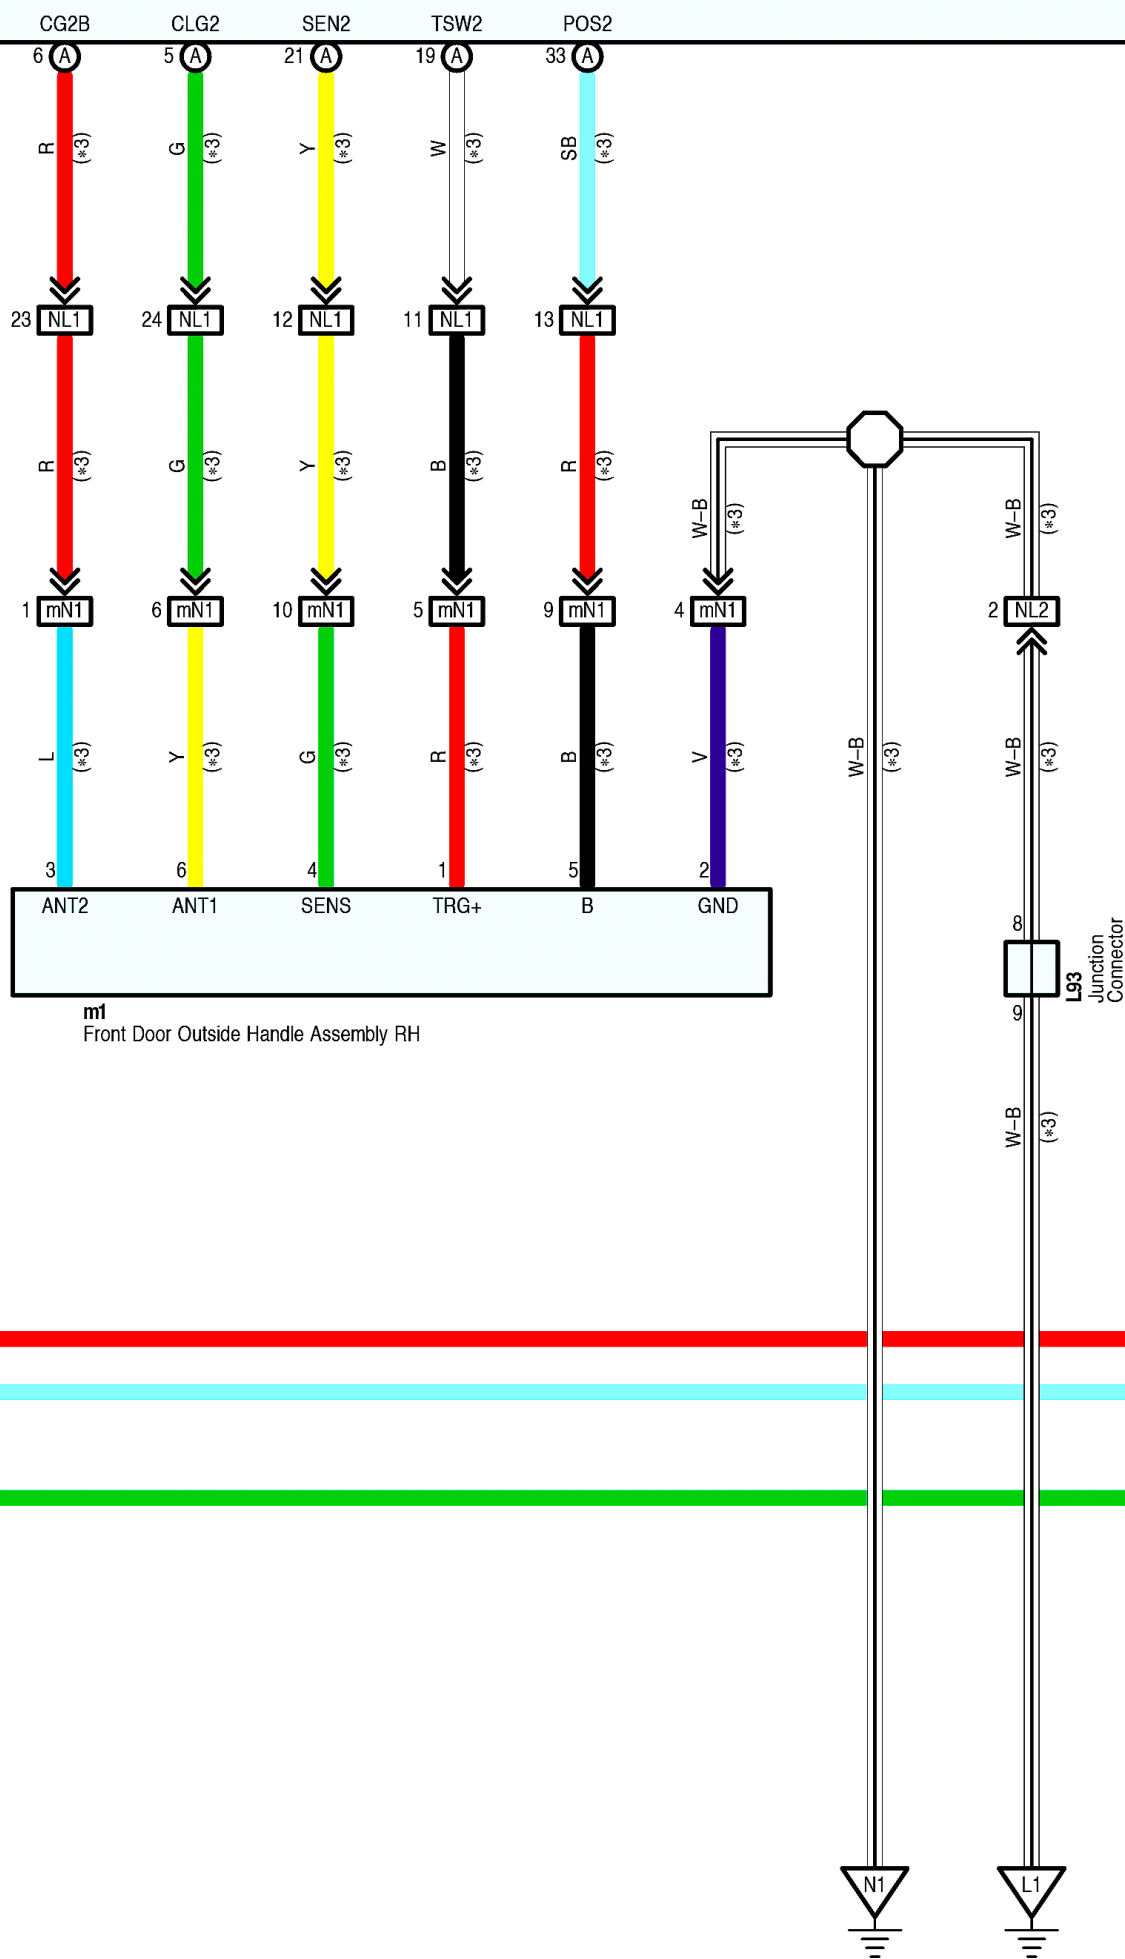 


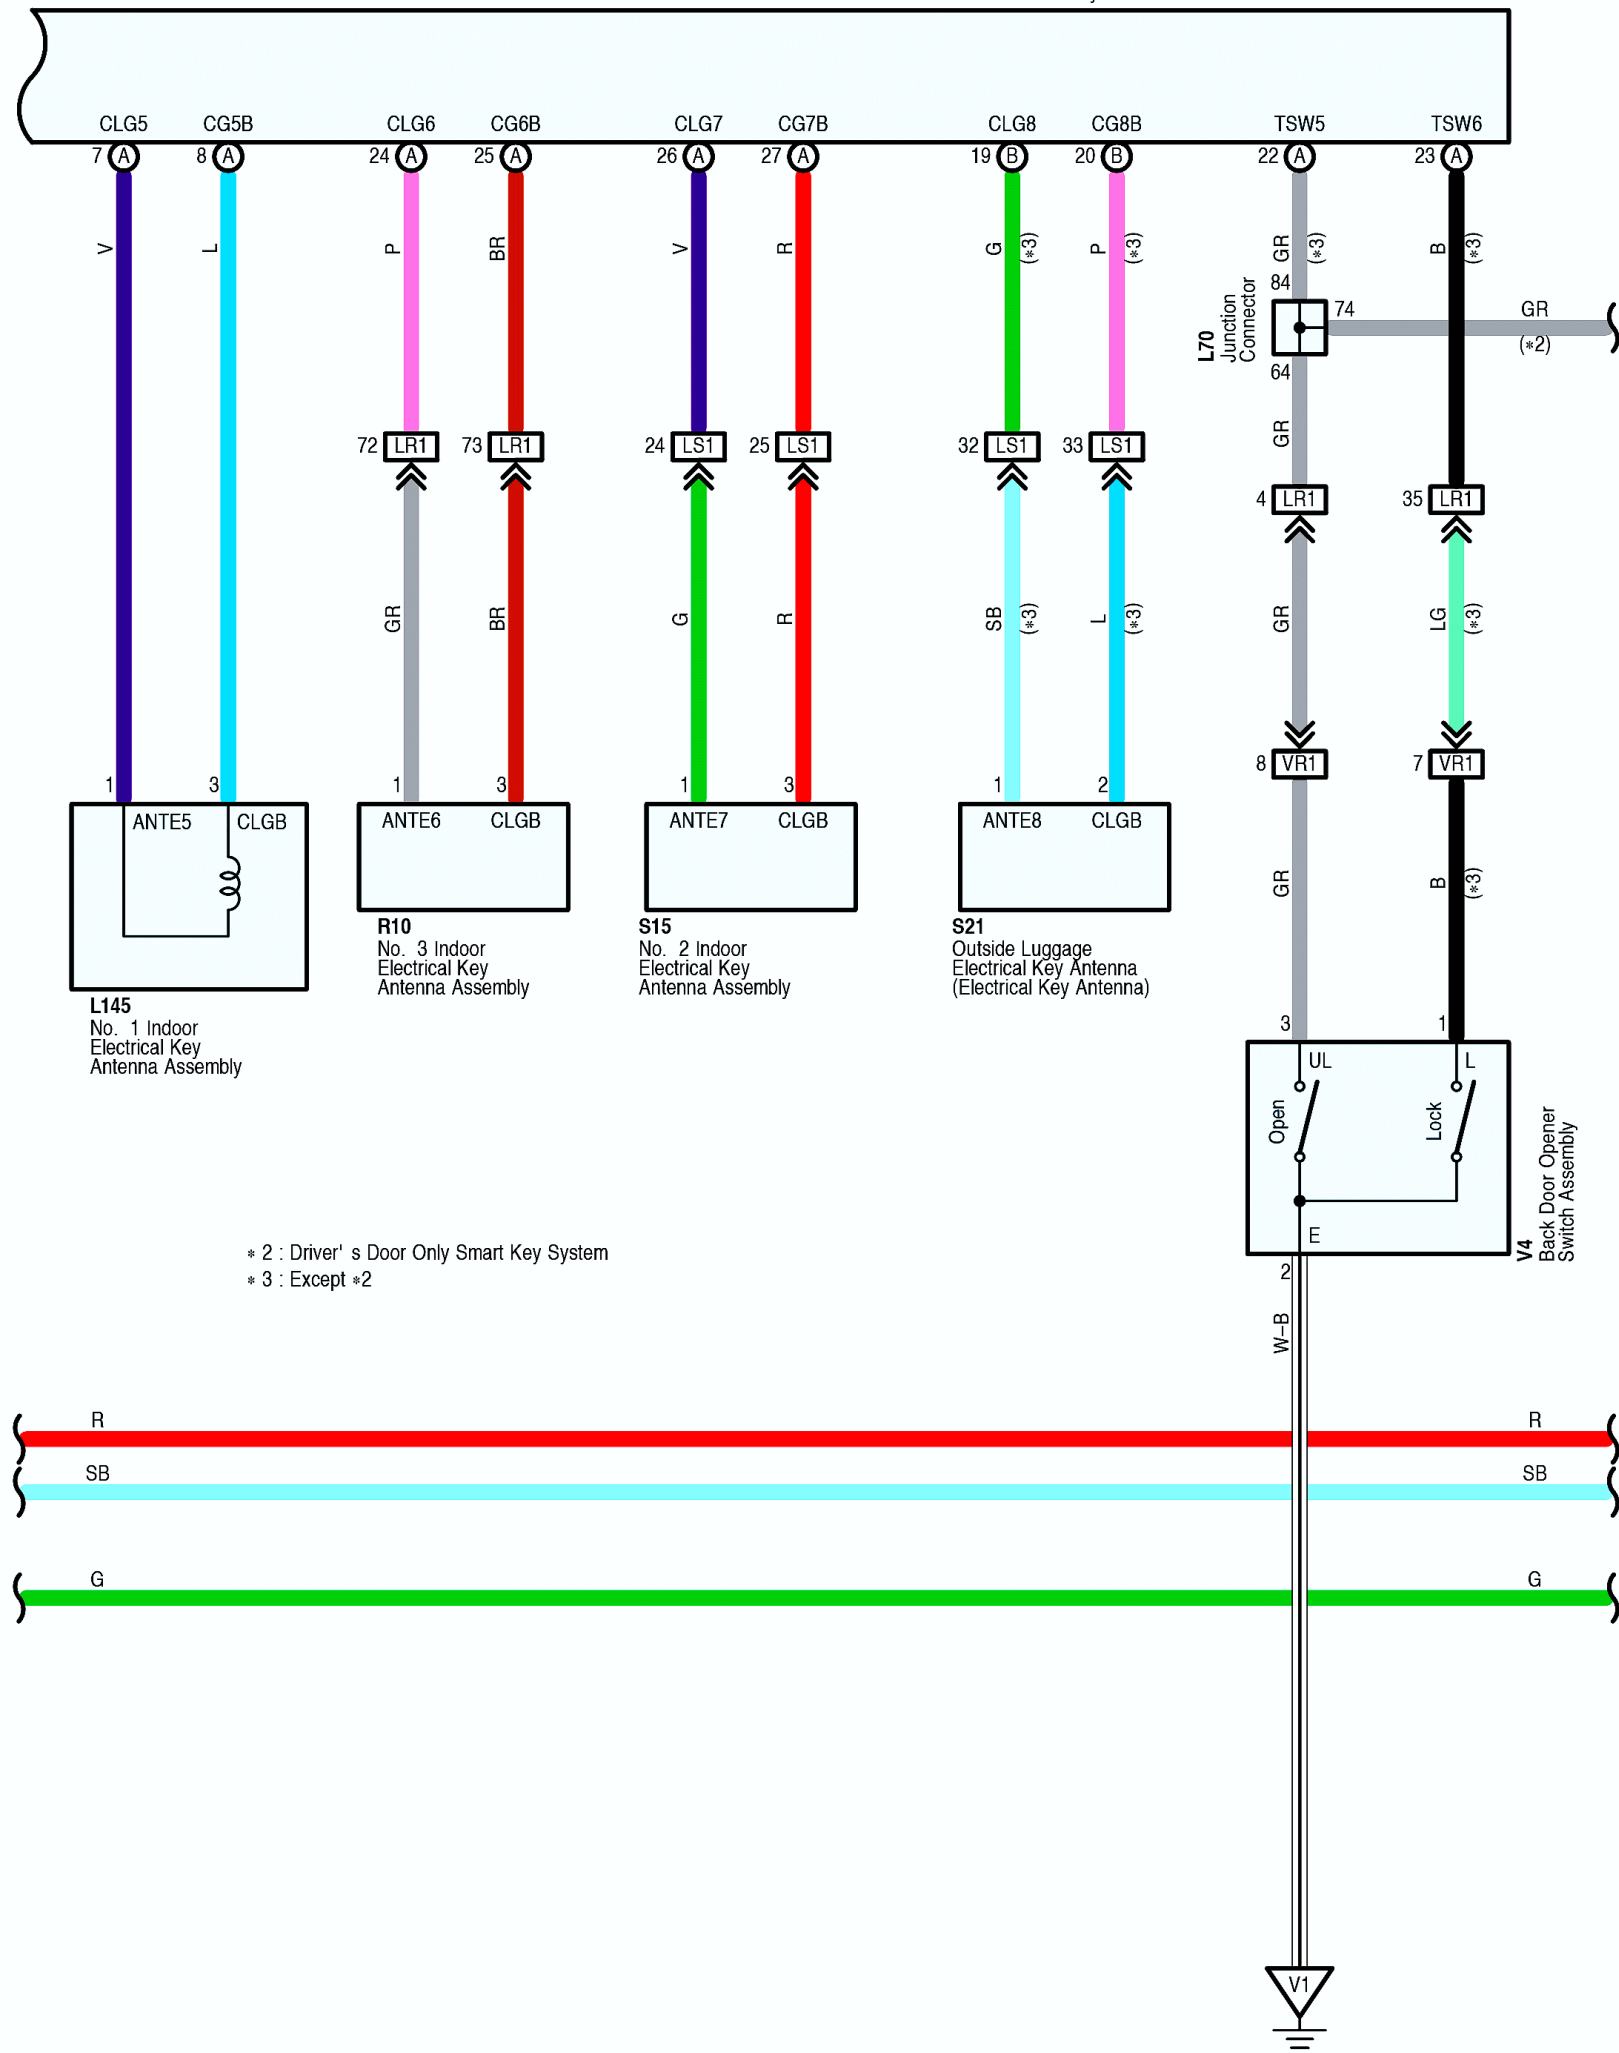

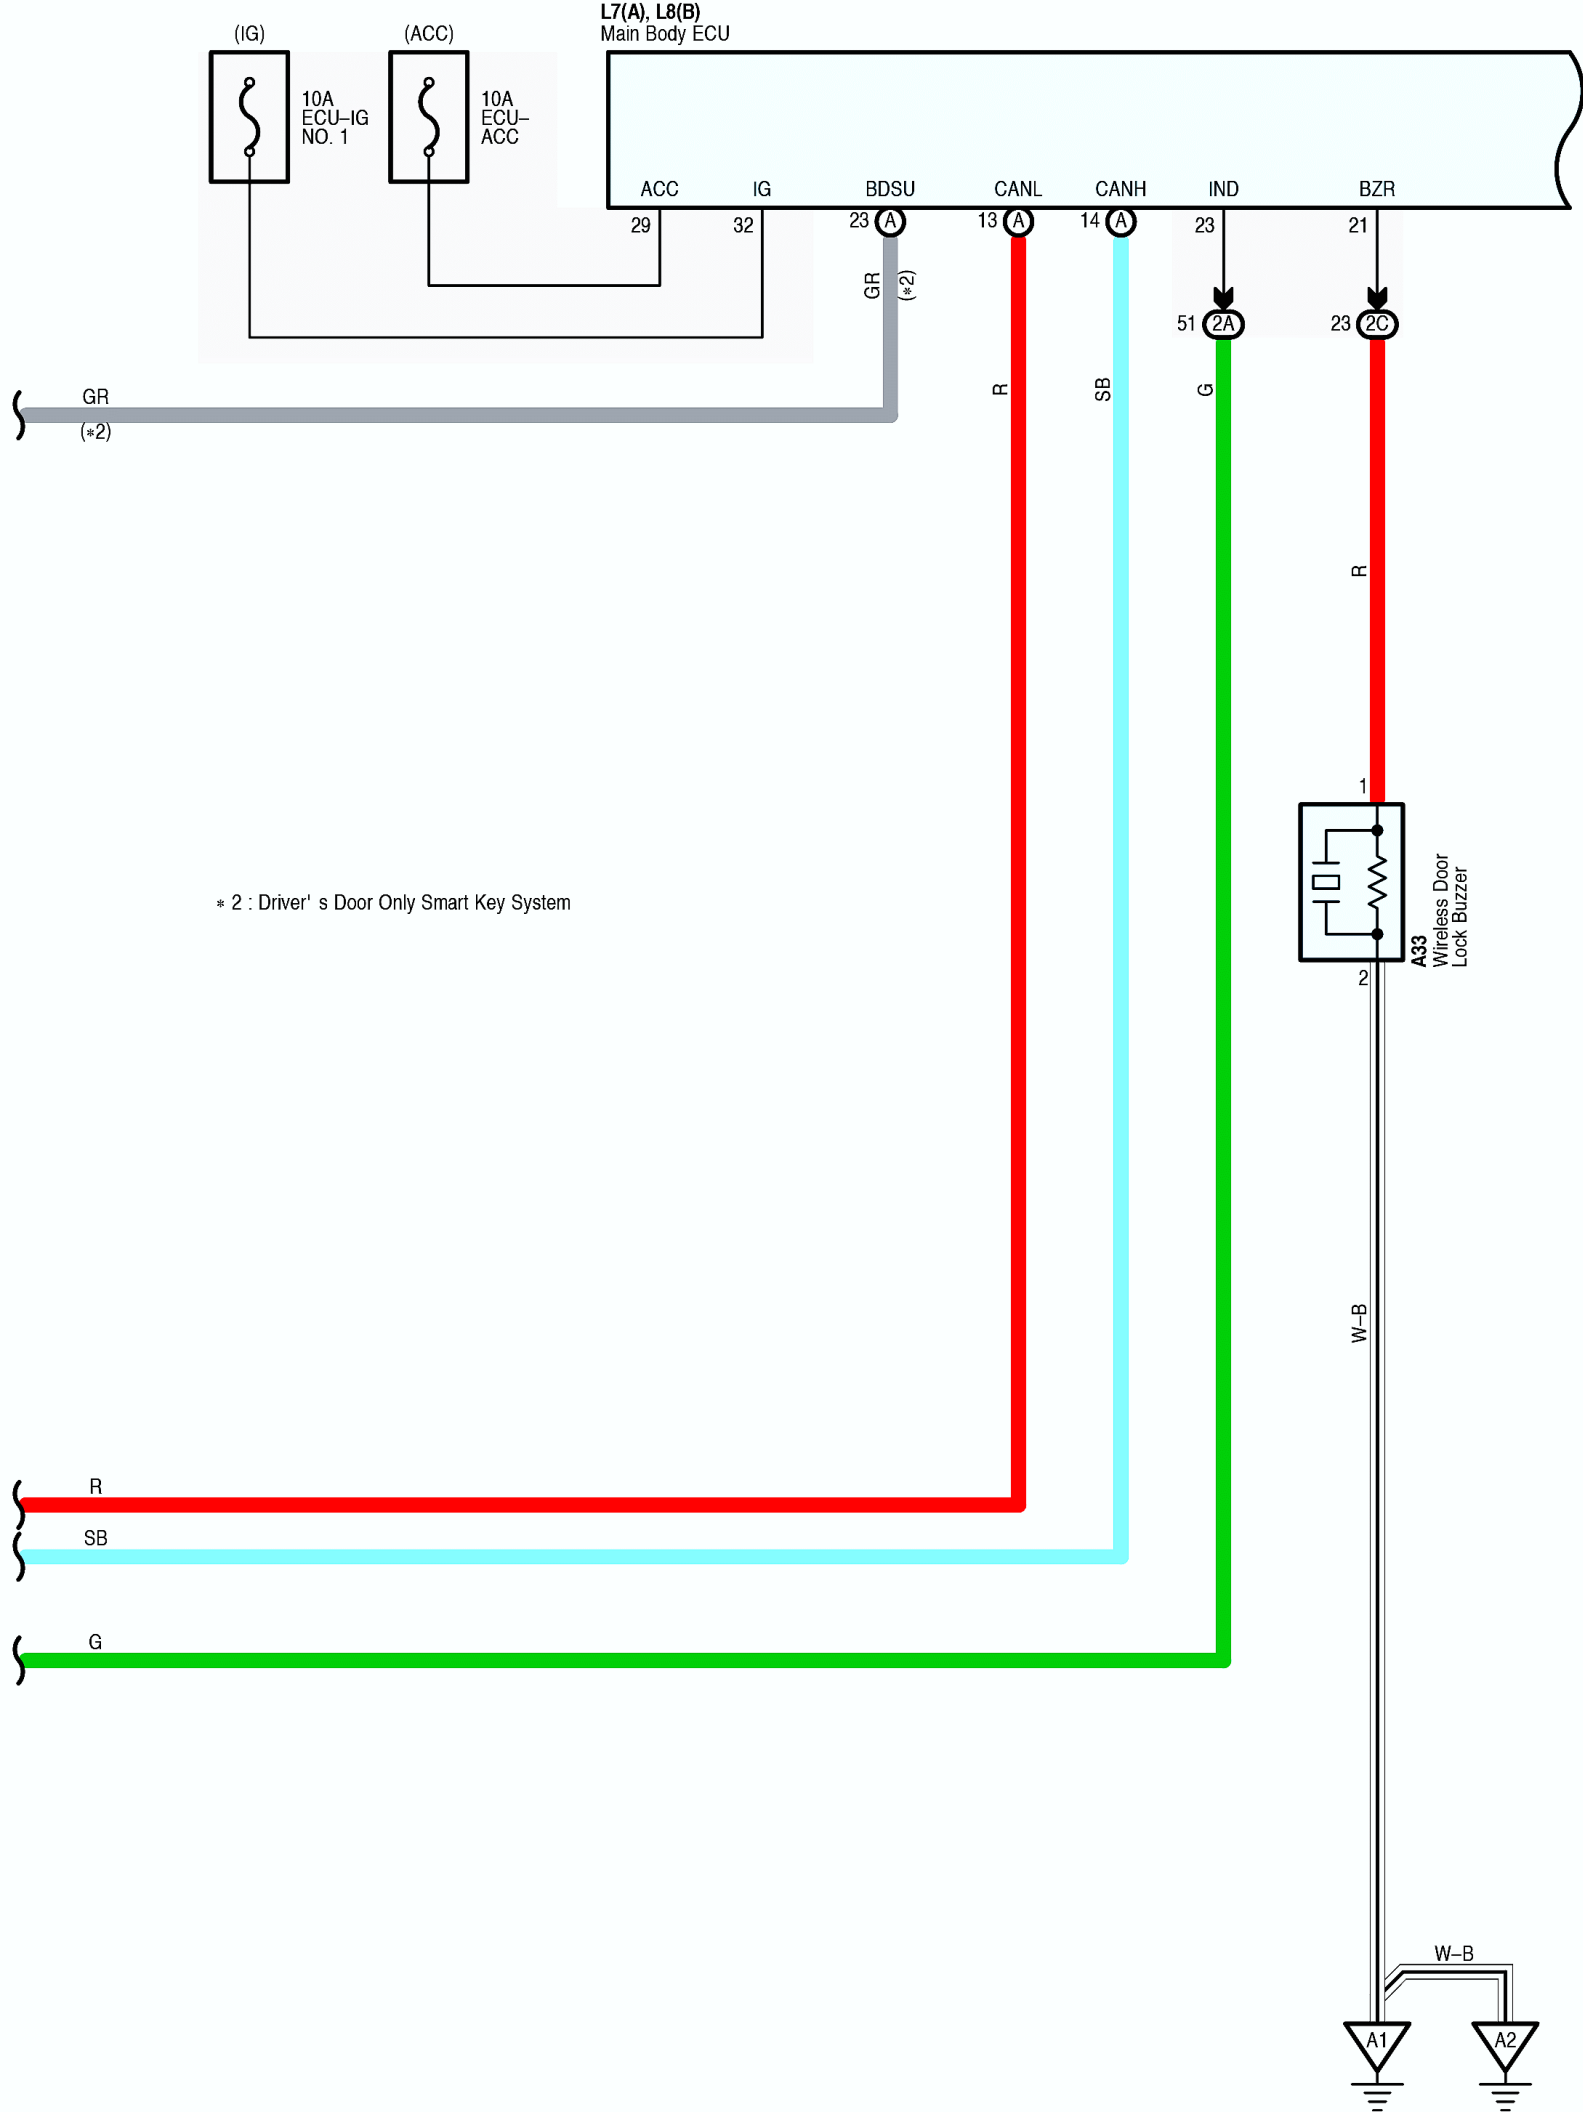


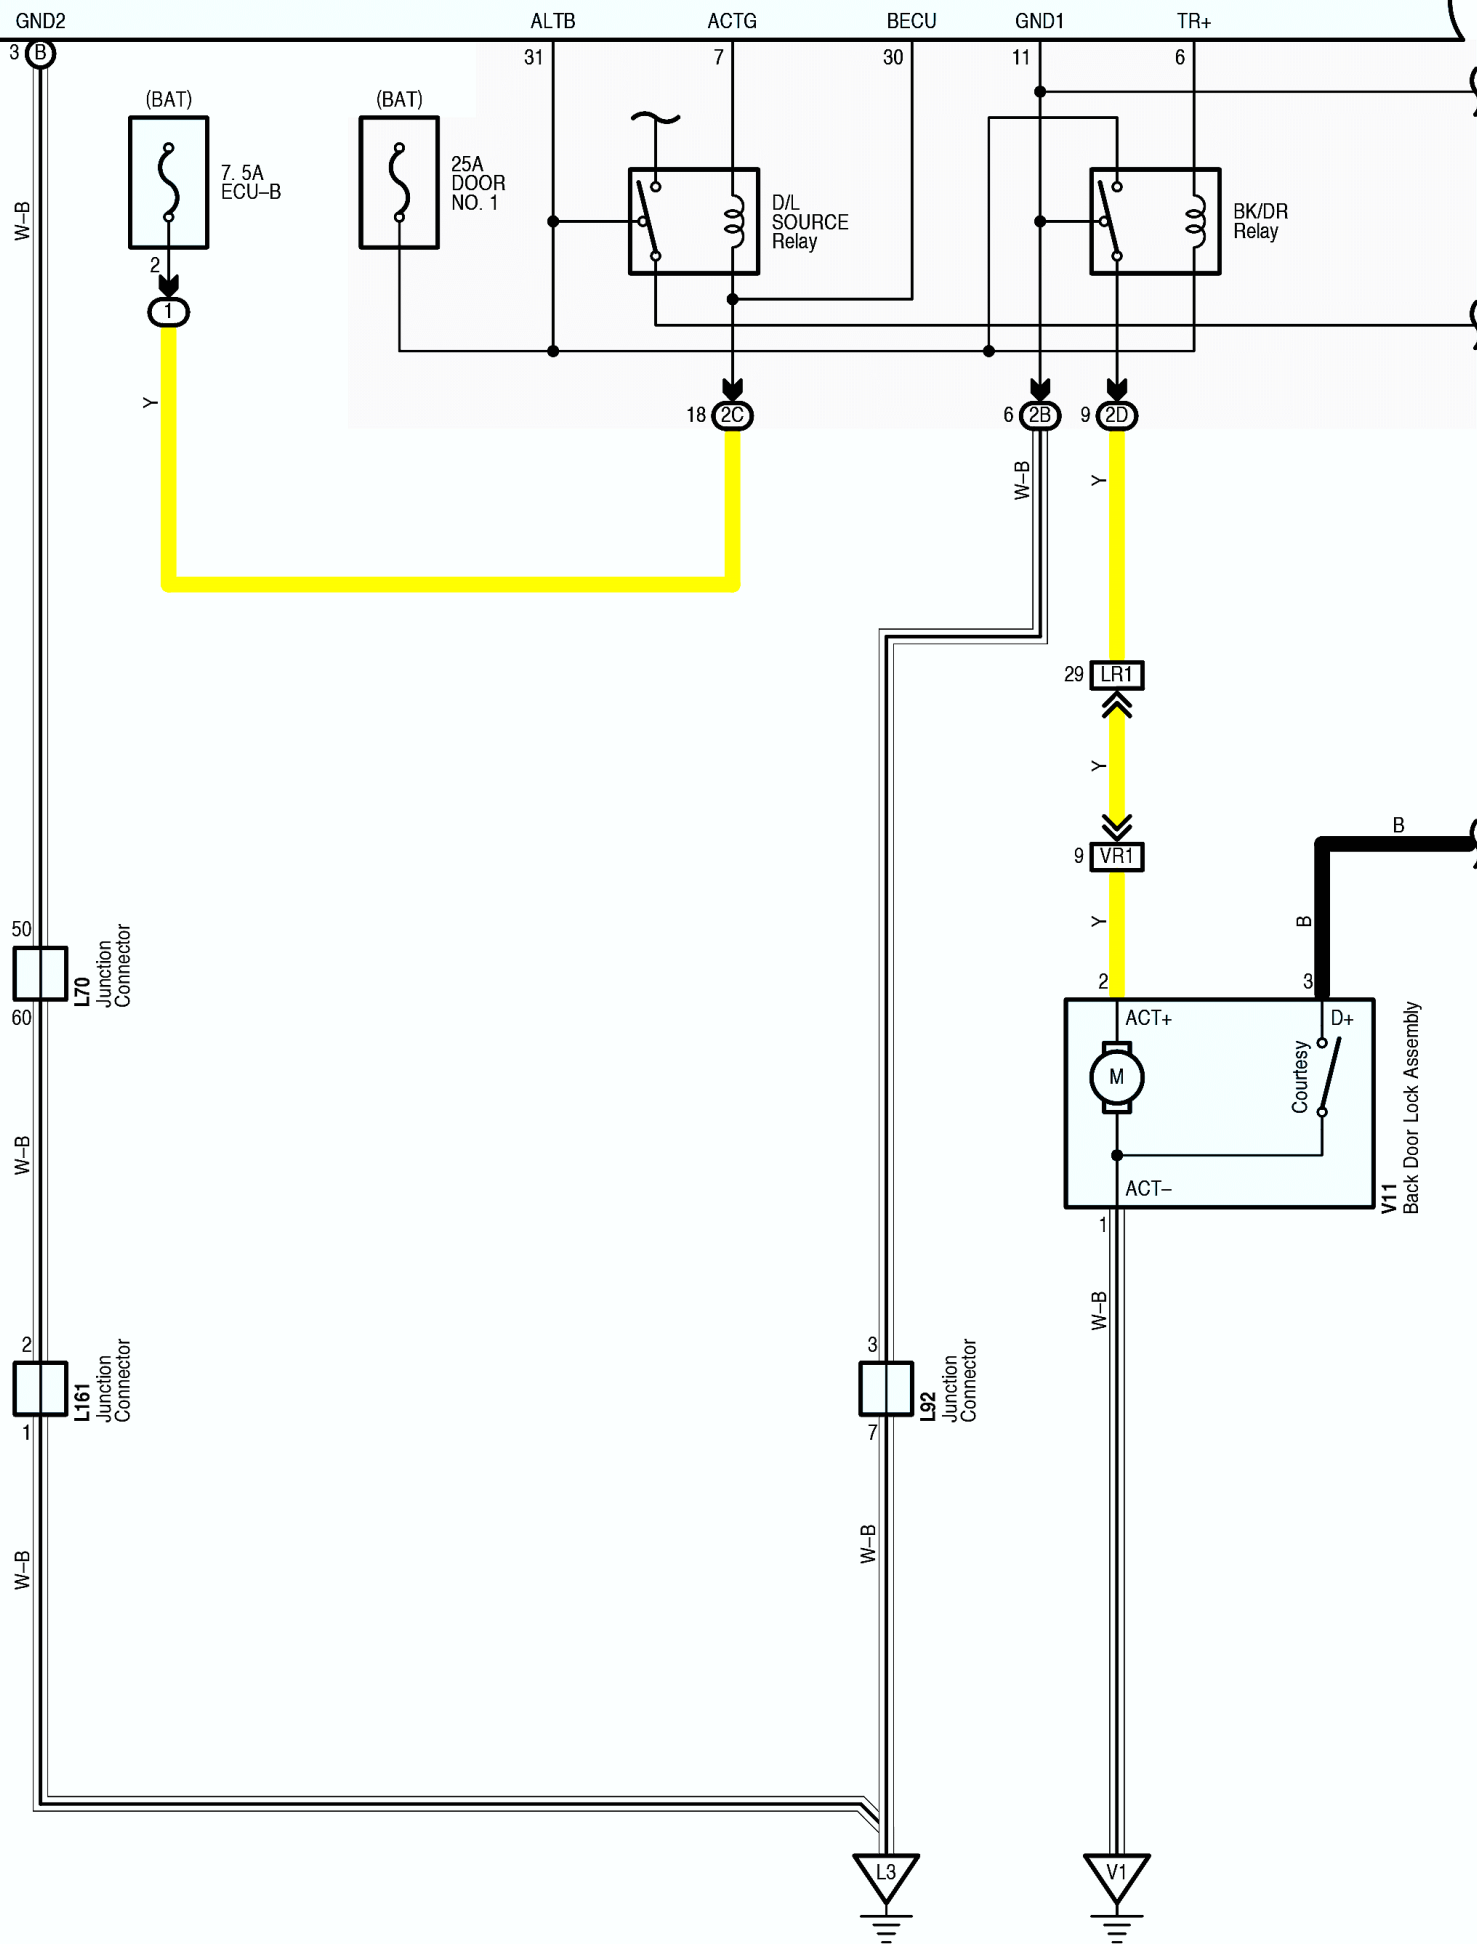


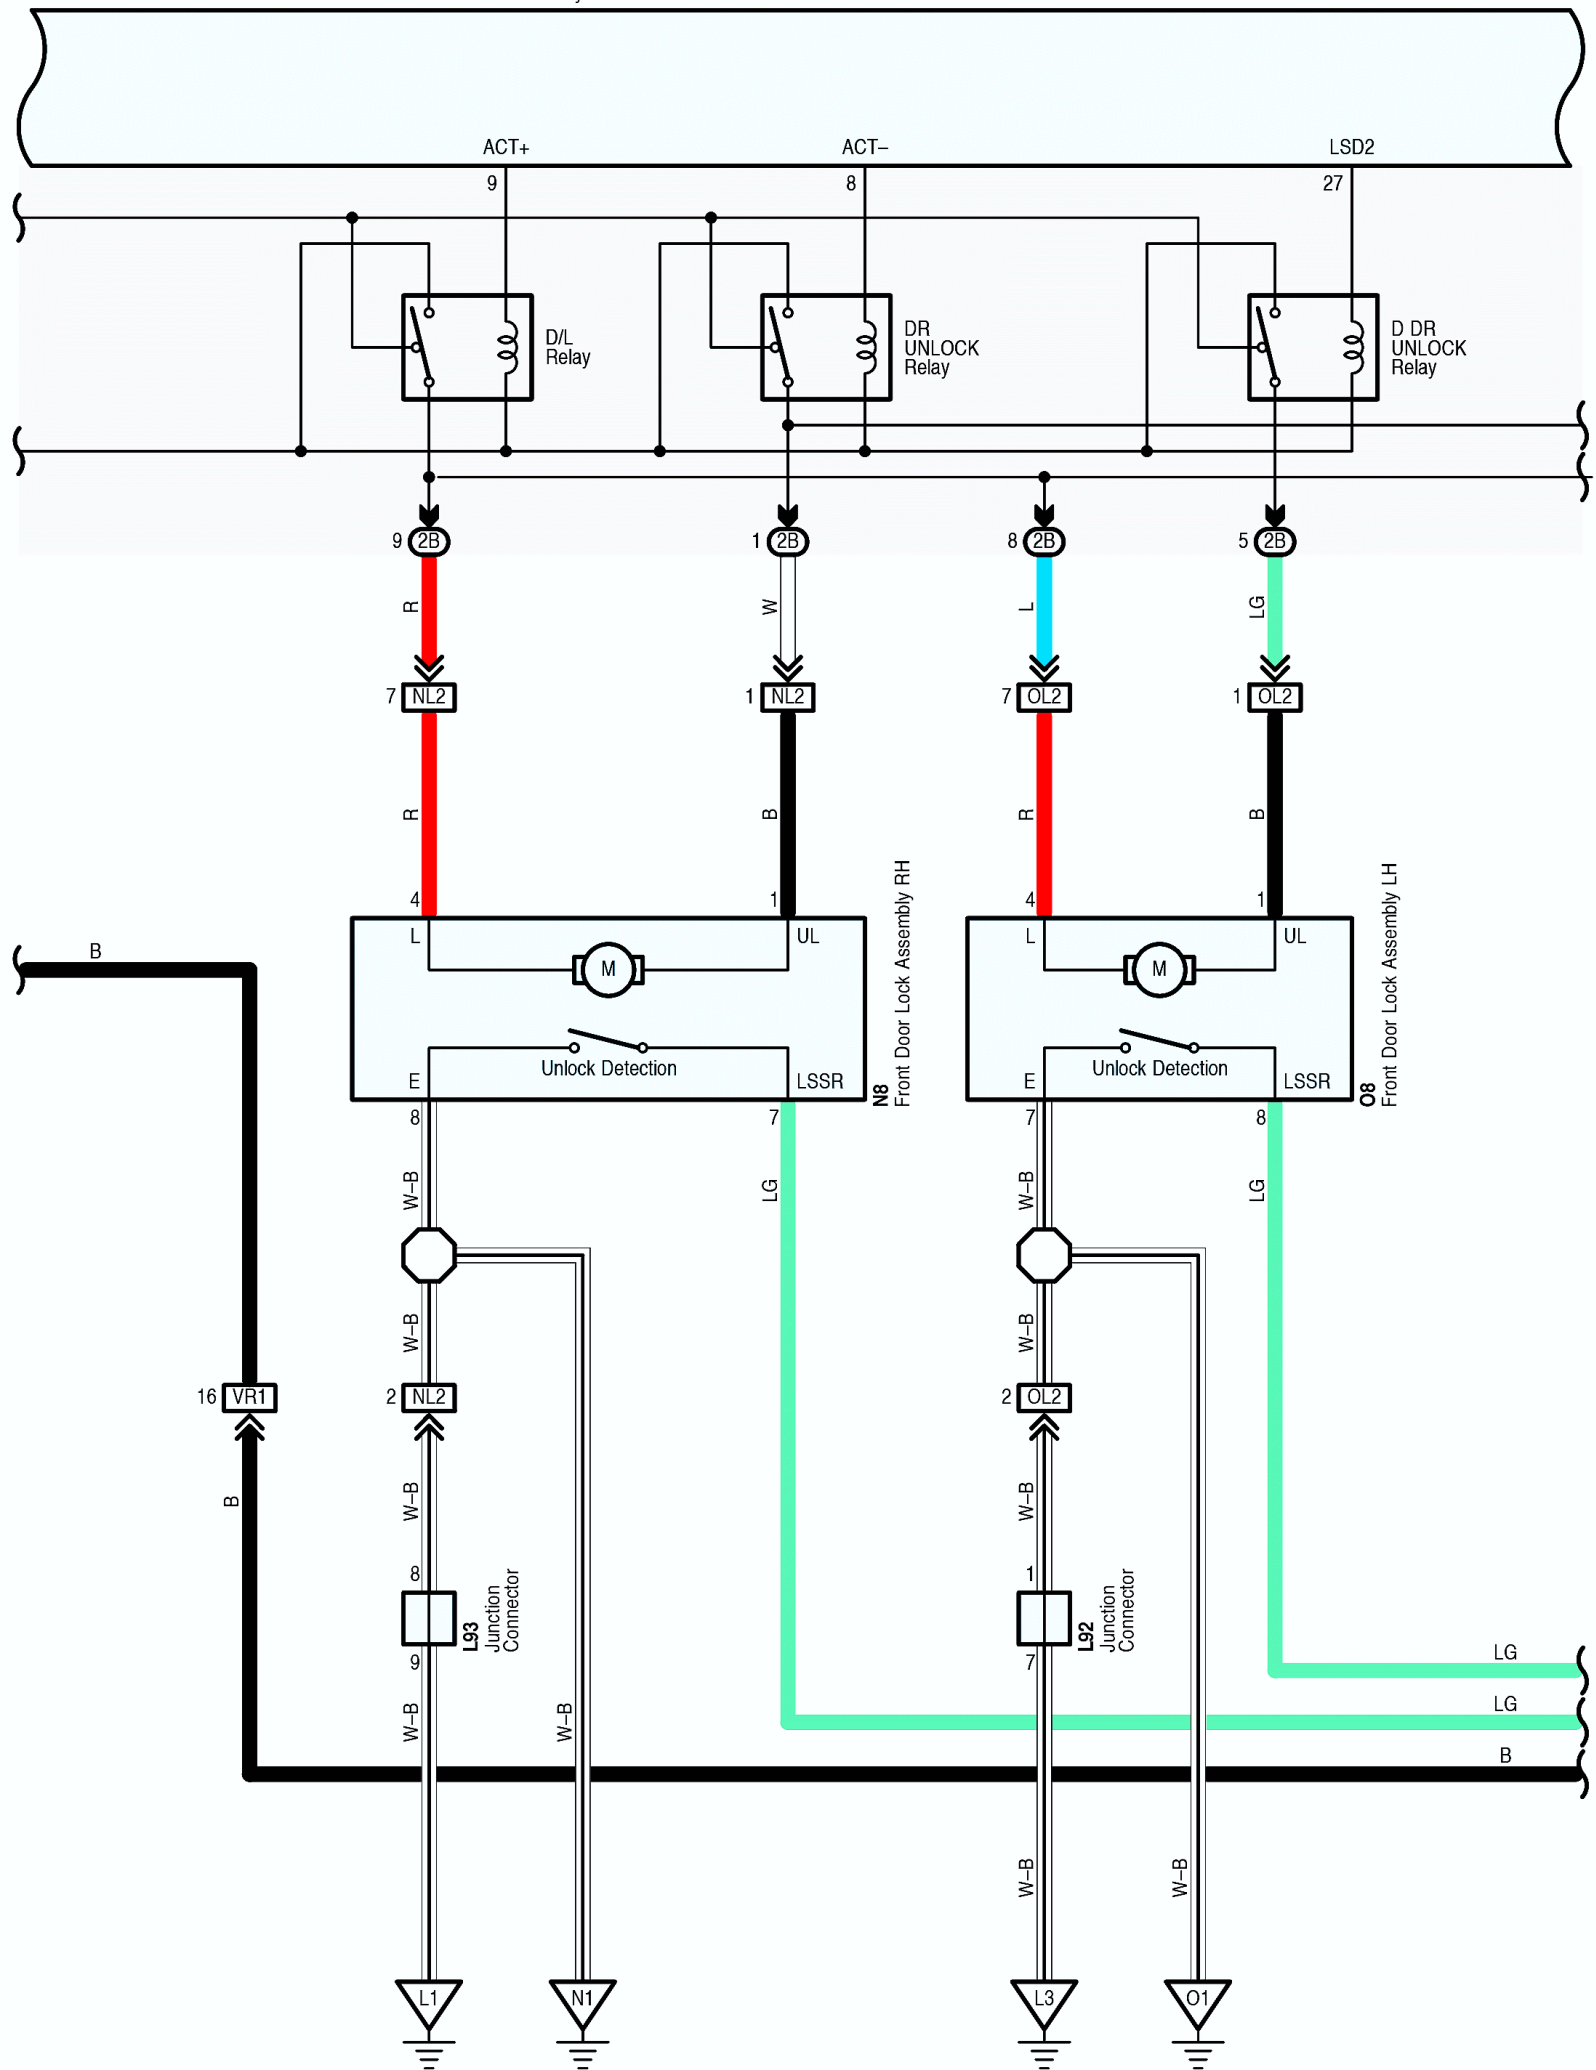

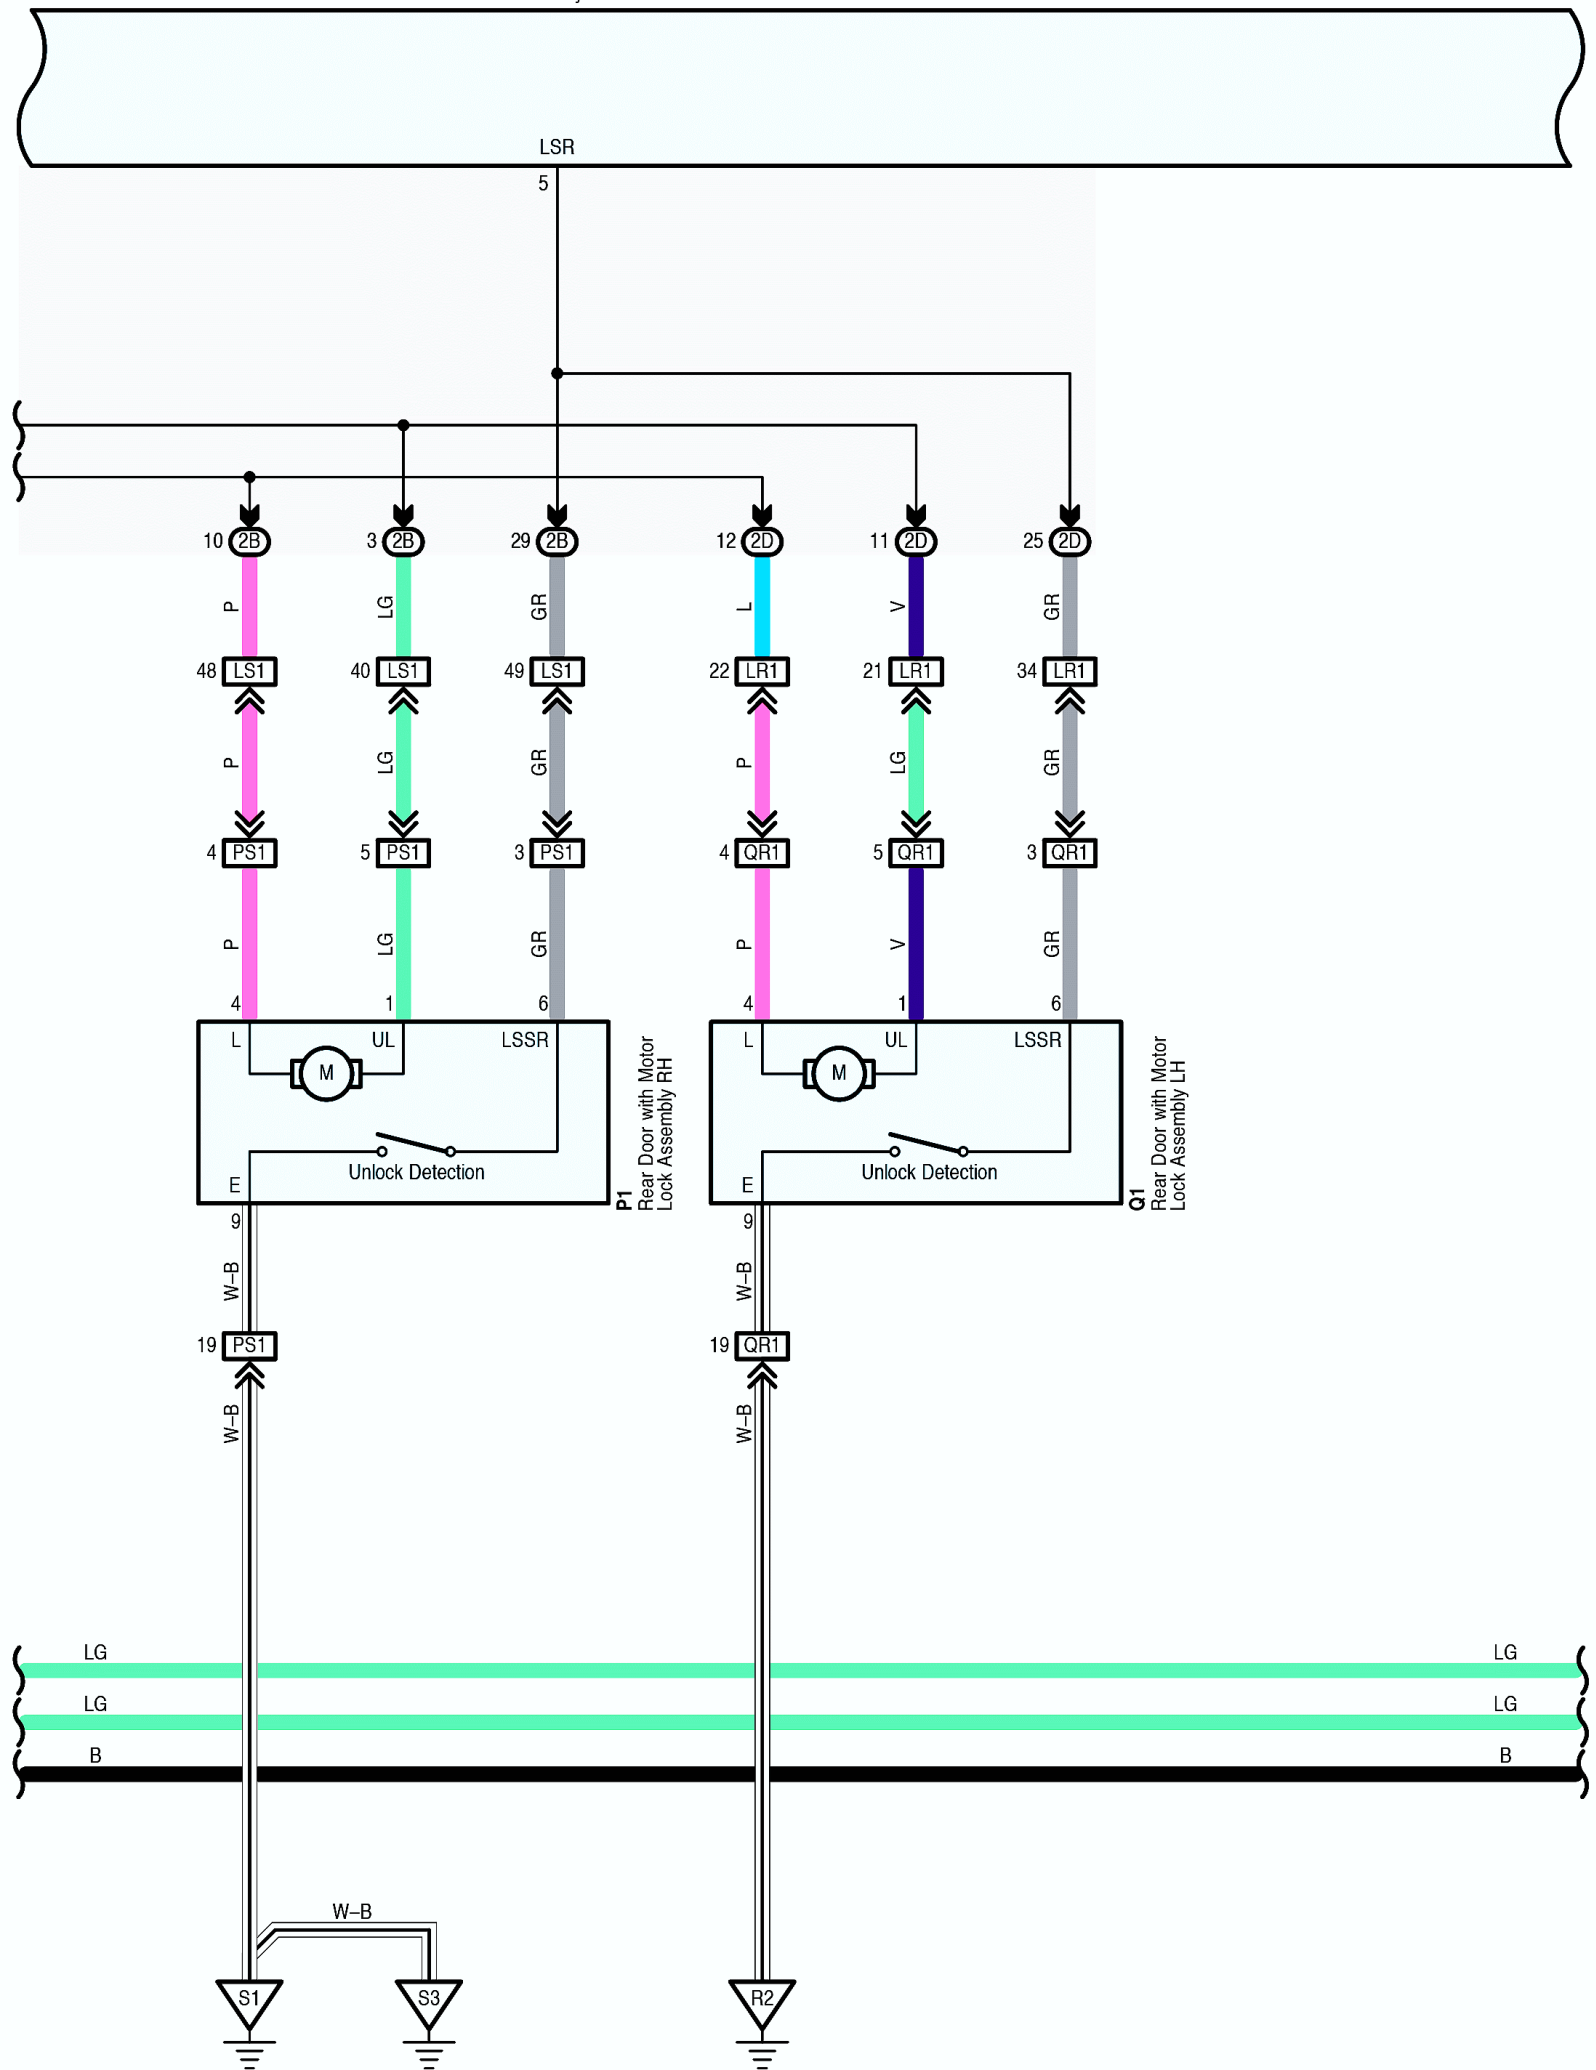



L7(A), L8(B)
Main Body ECU

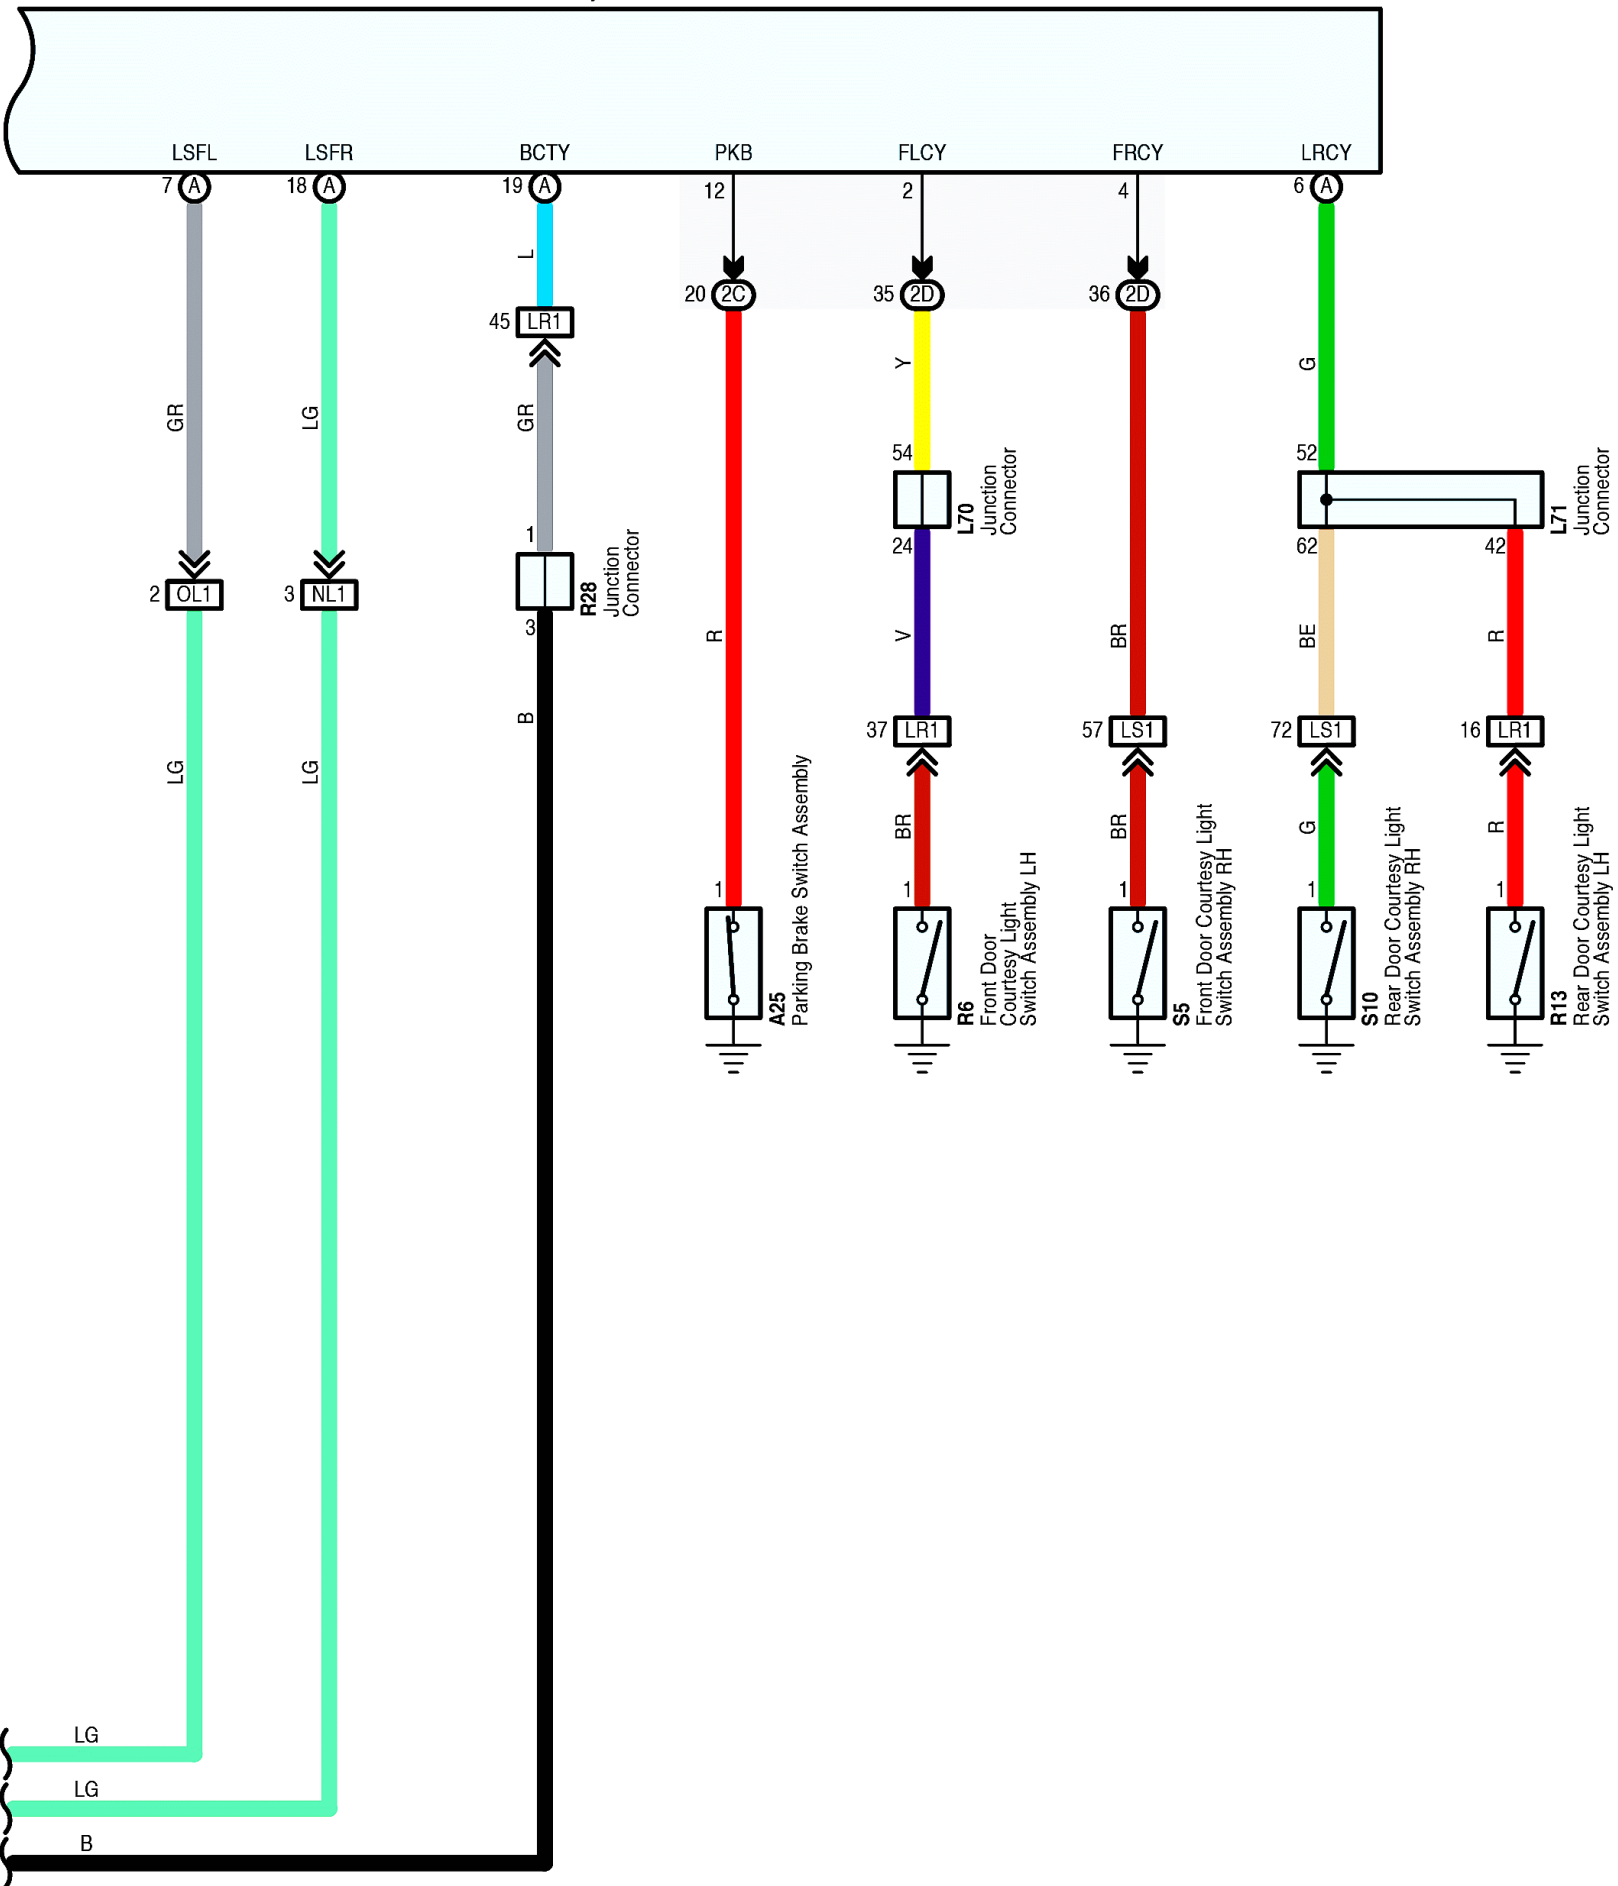 


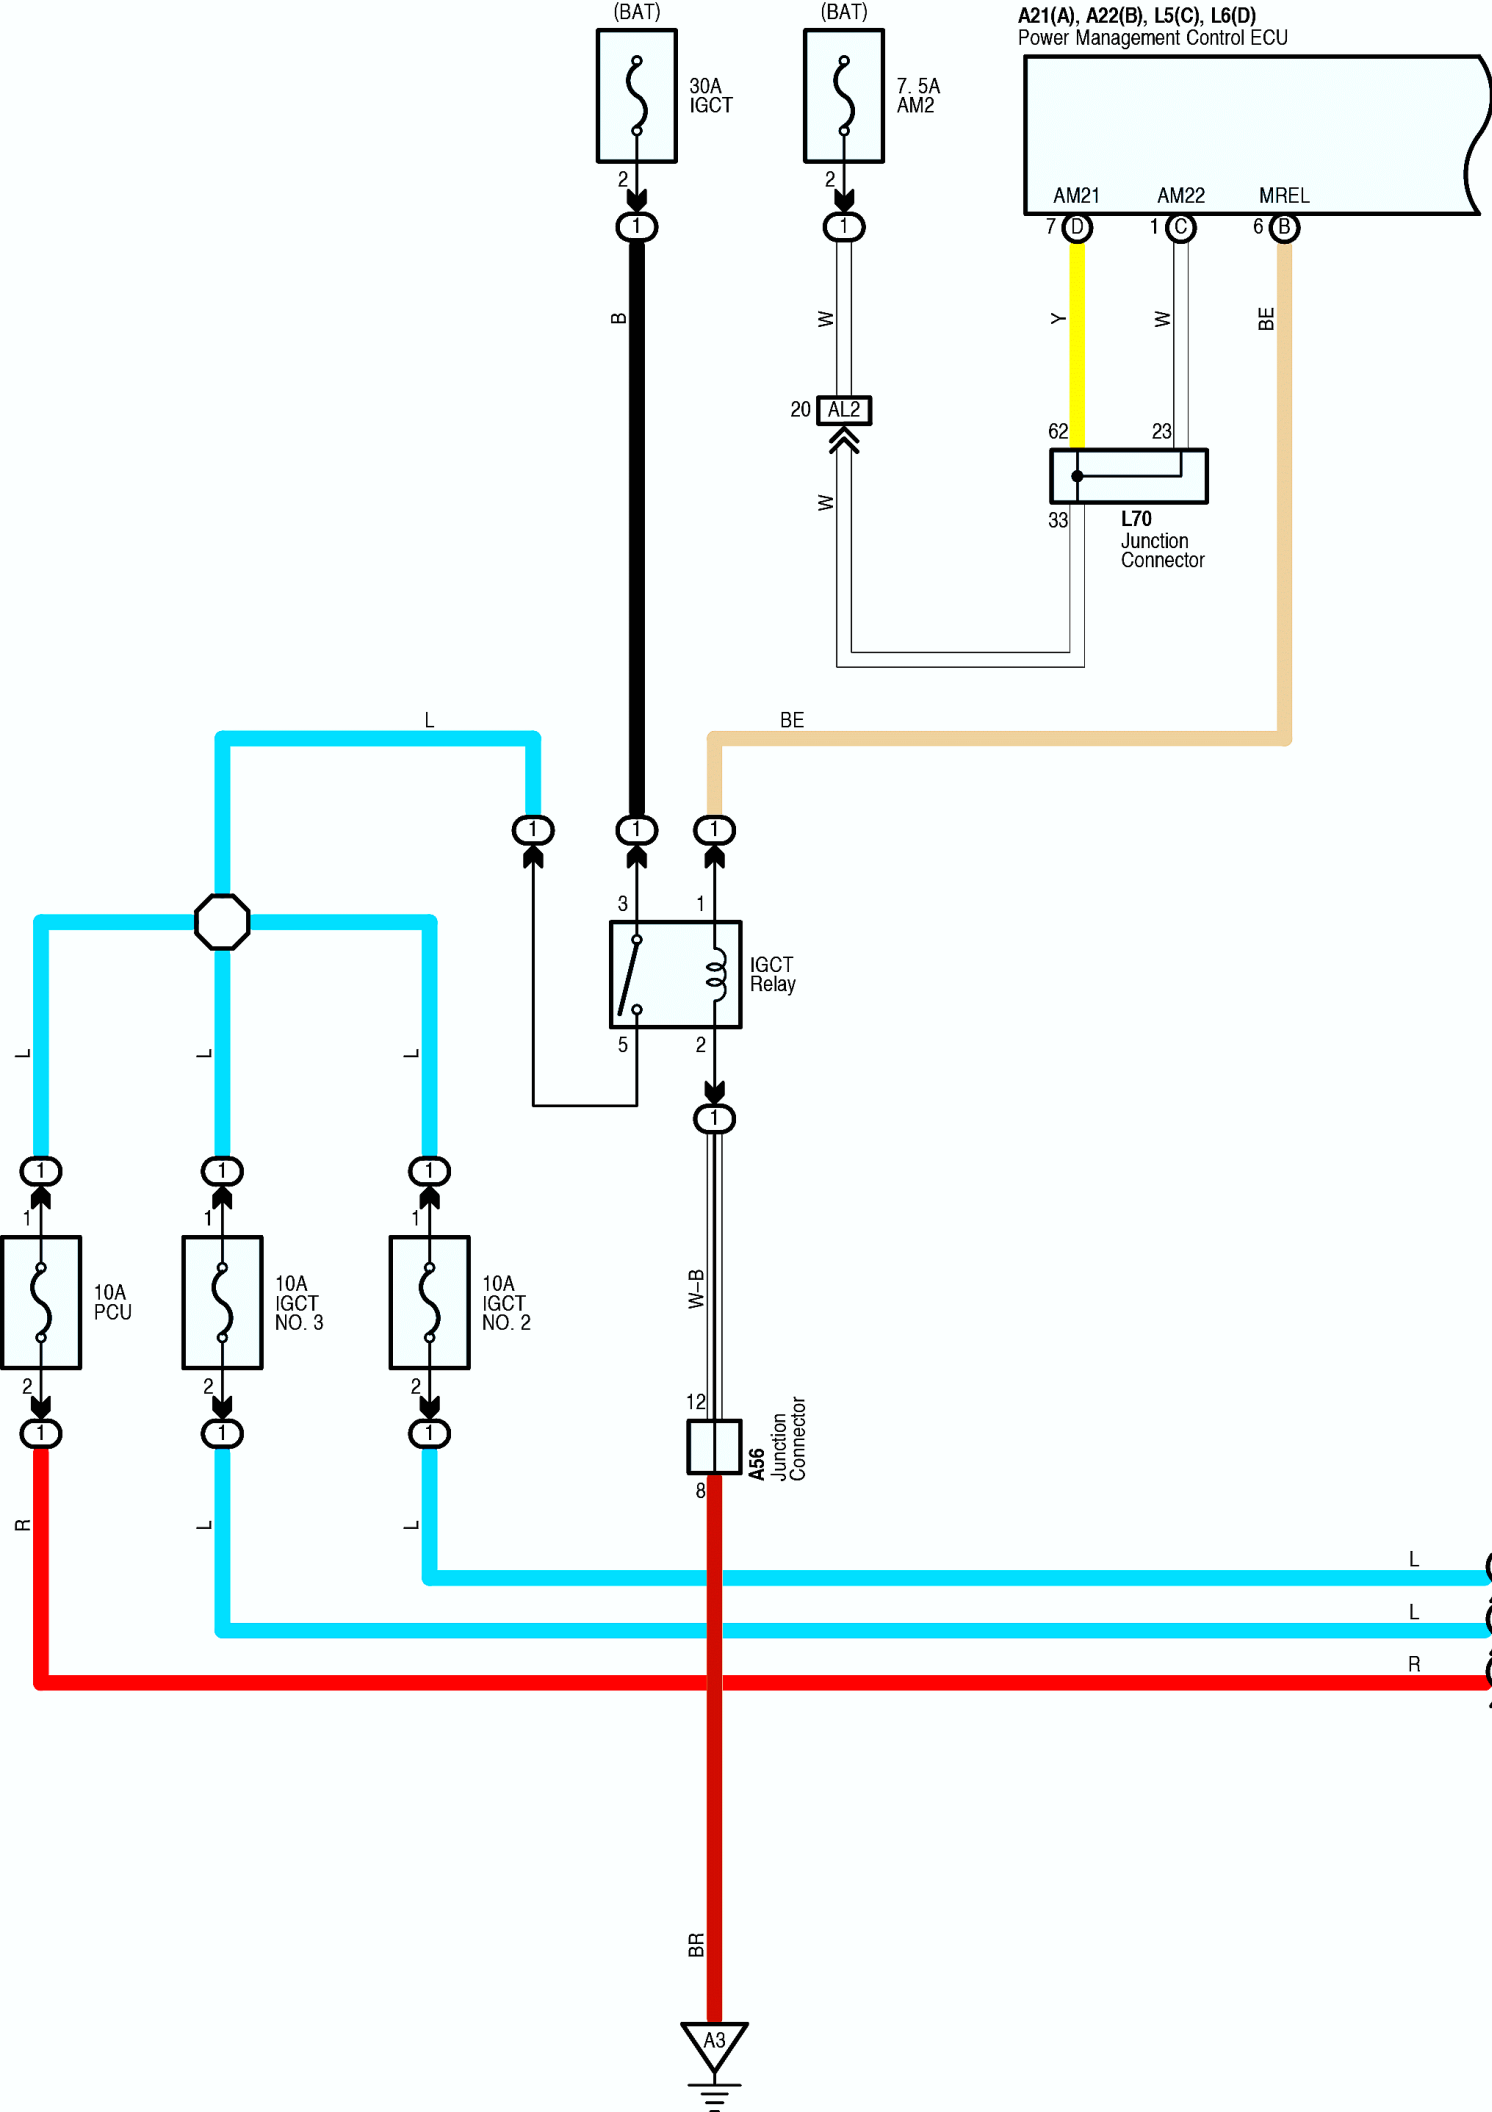 

  
 
A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU

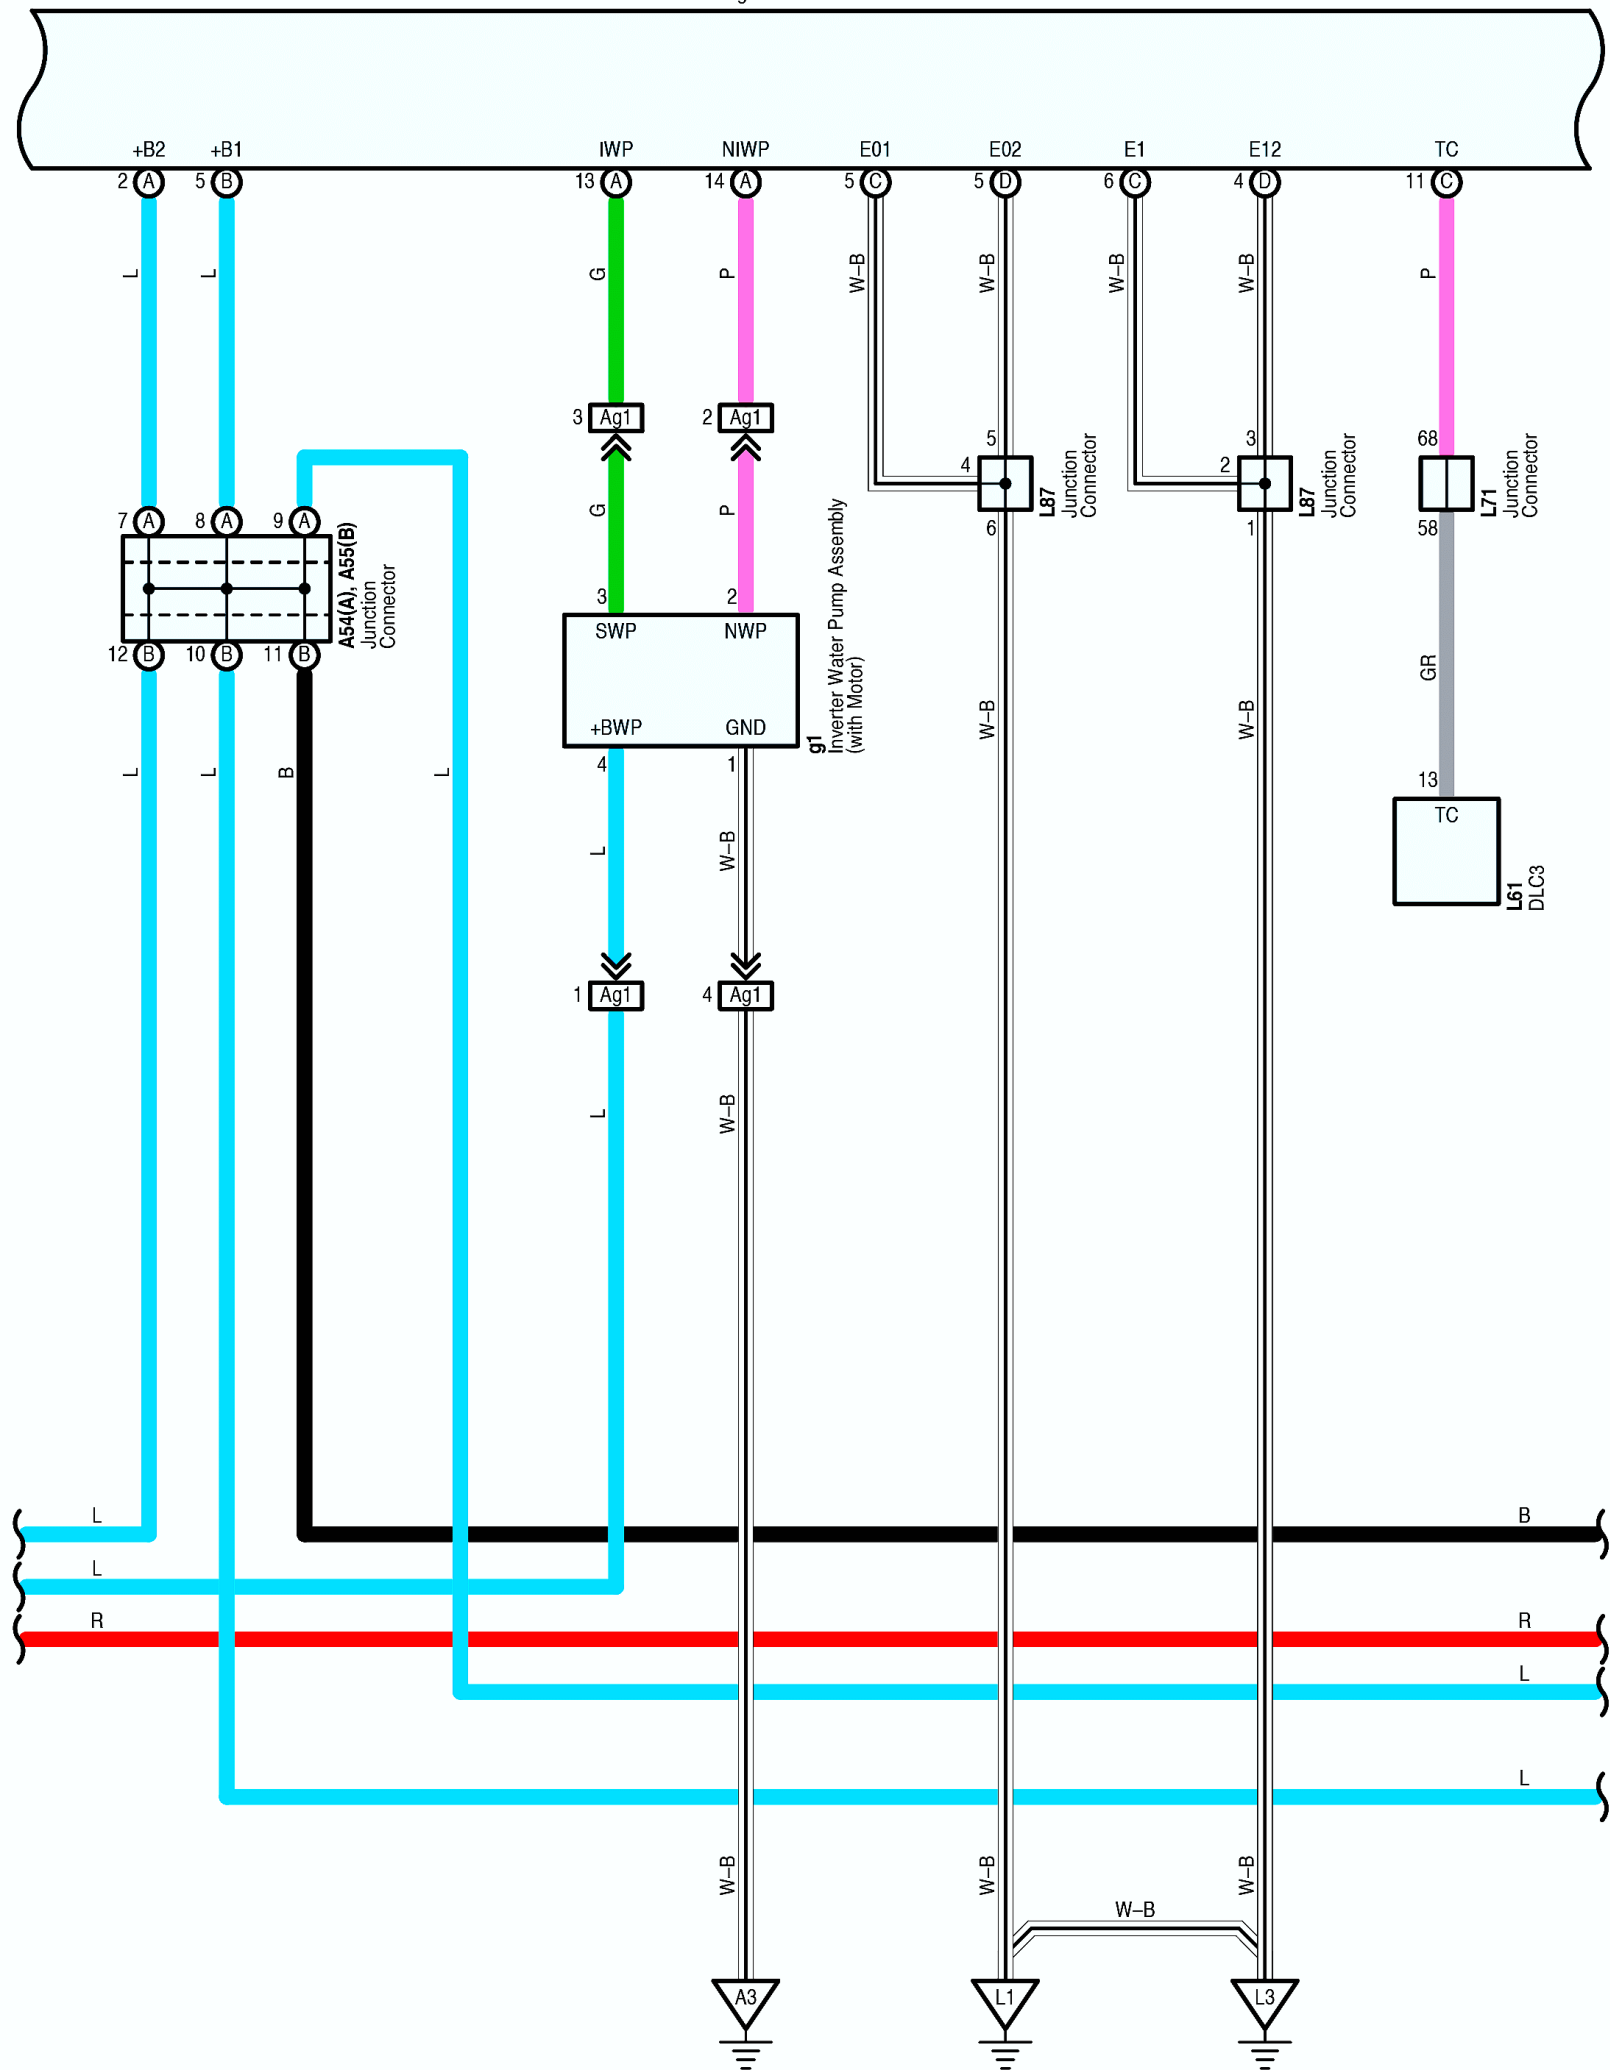


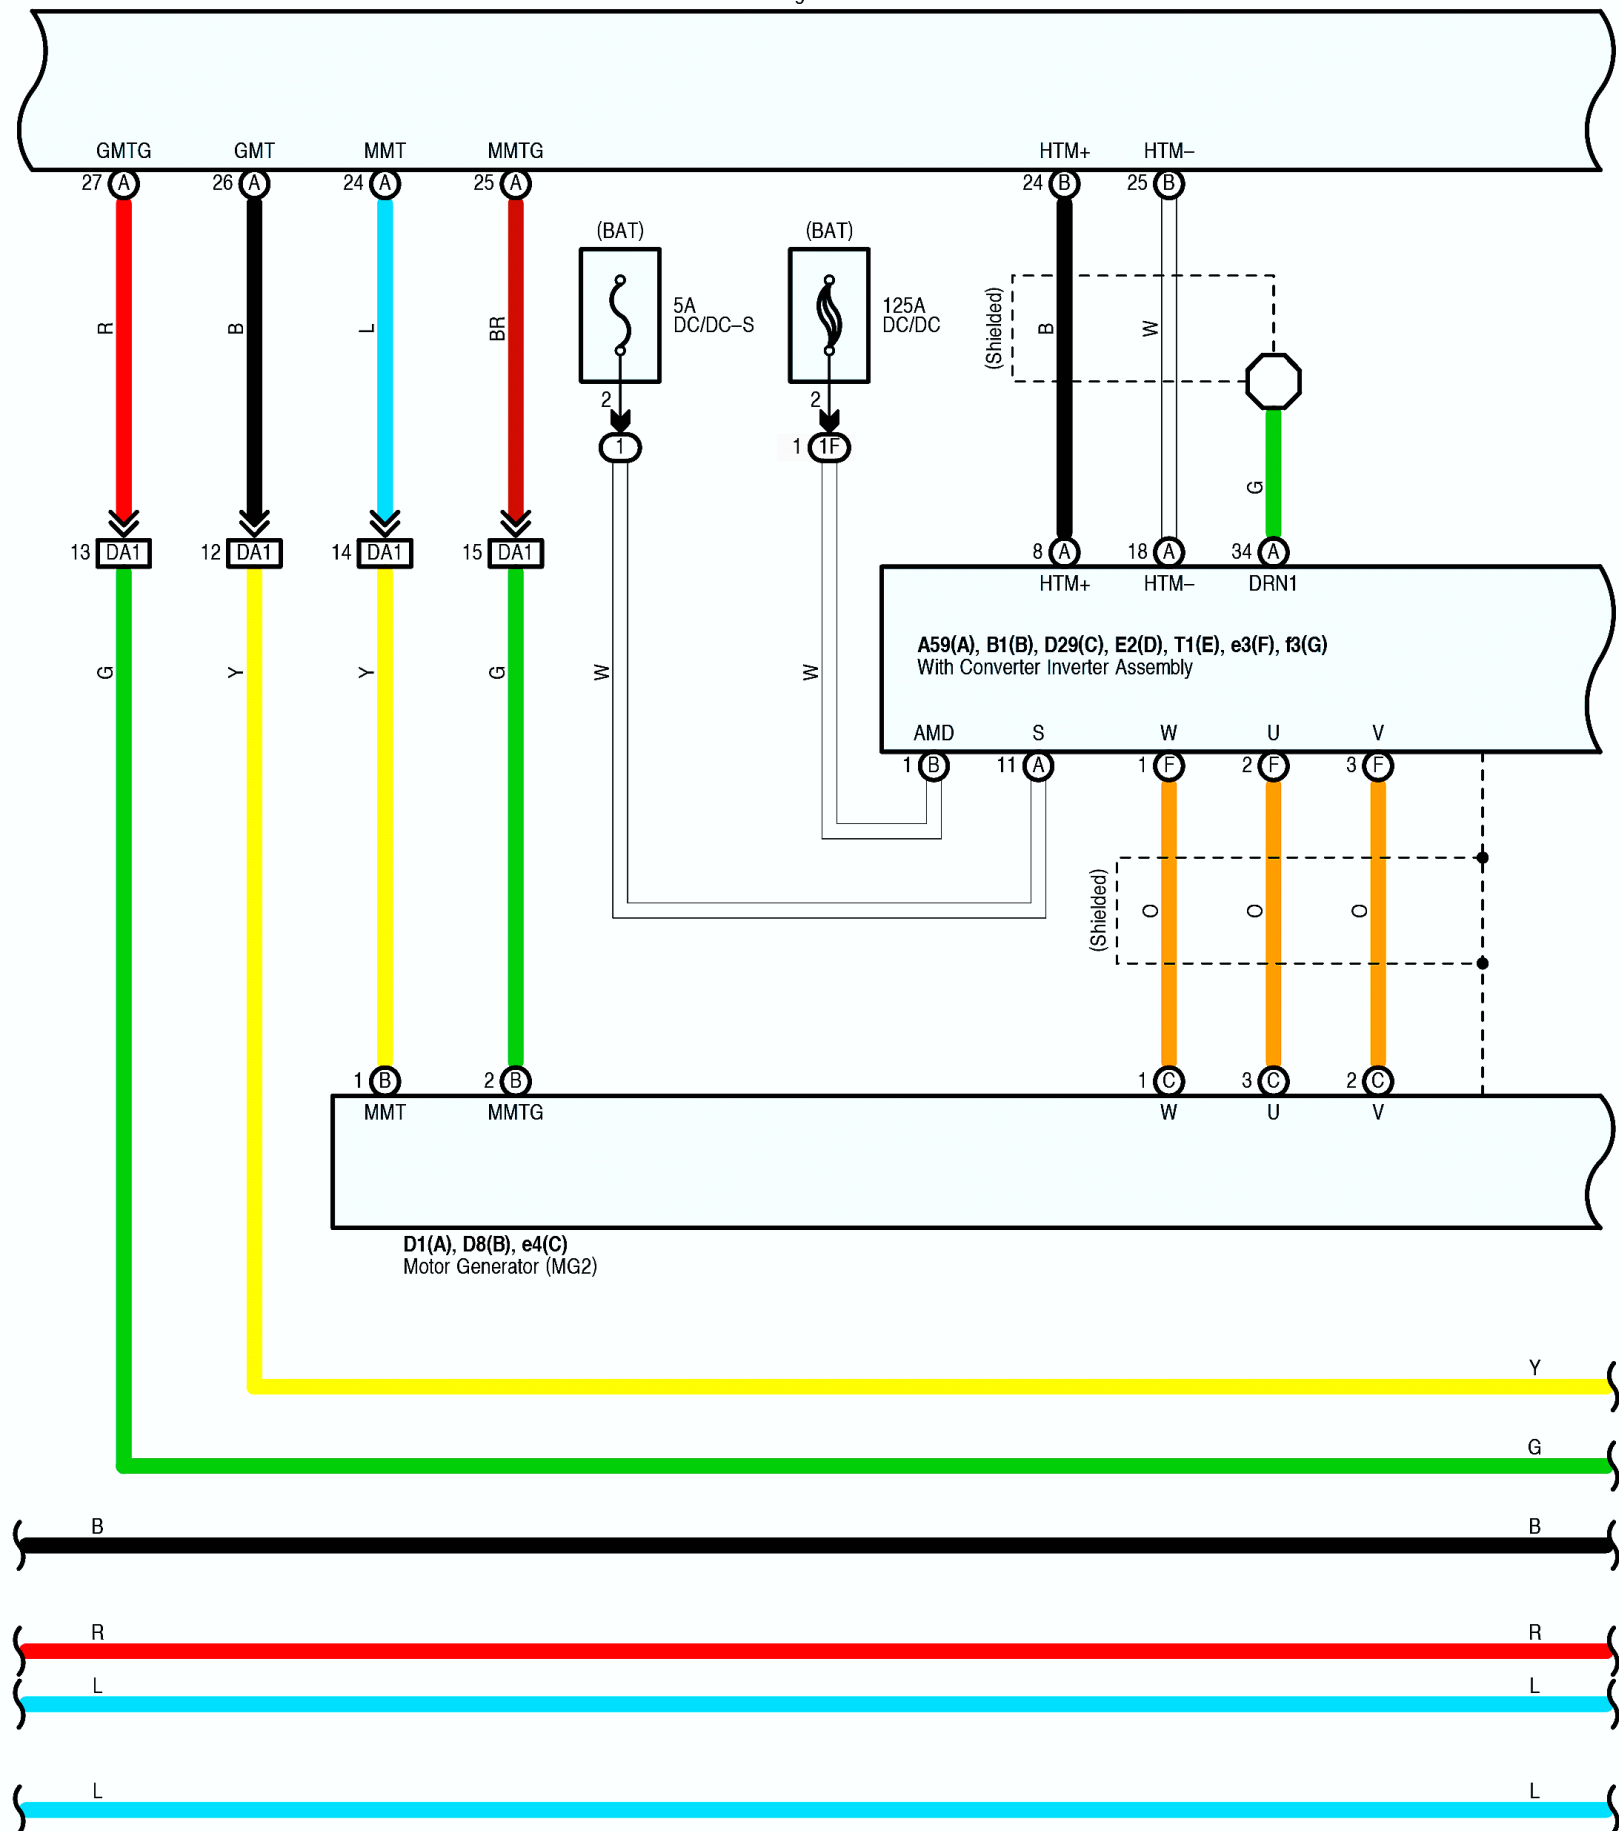


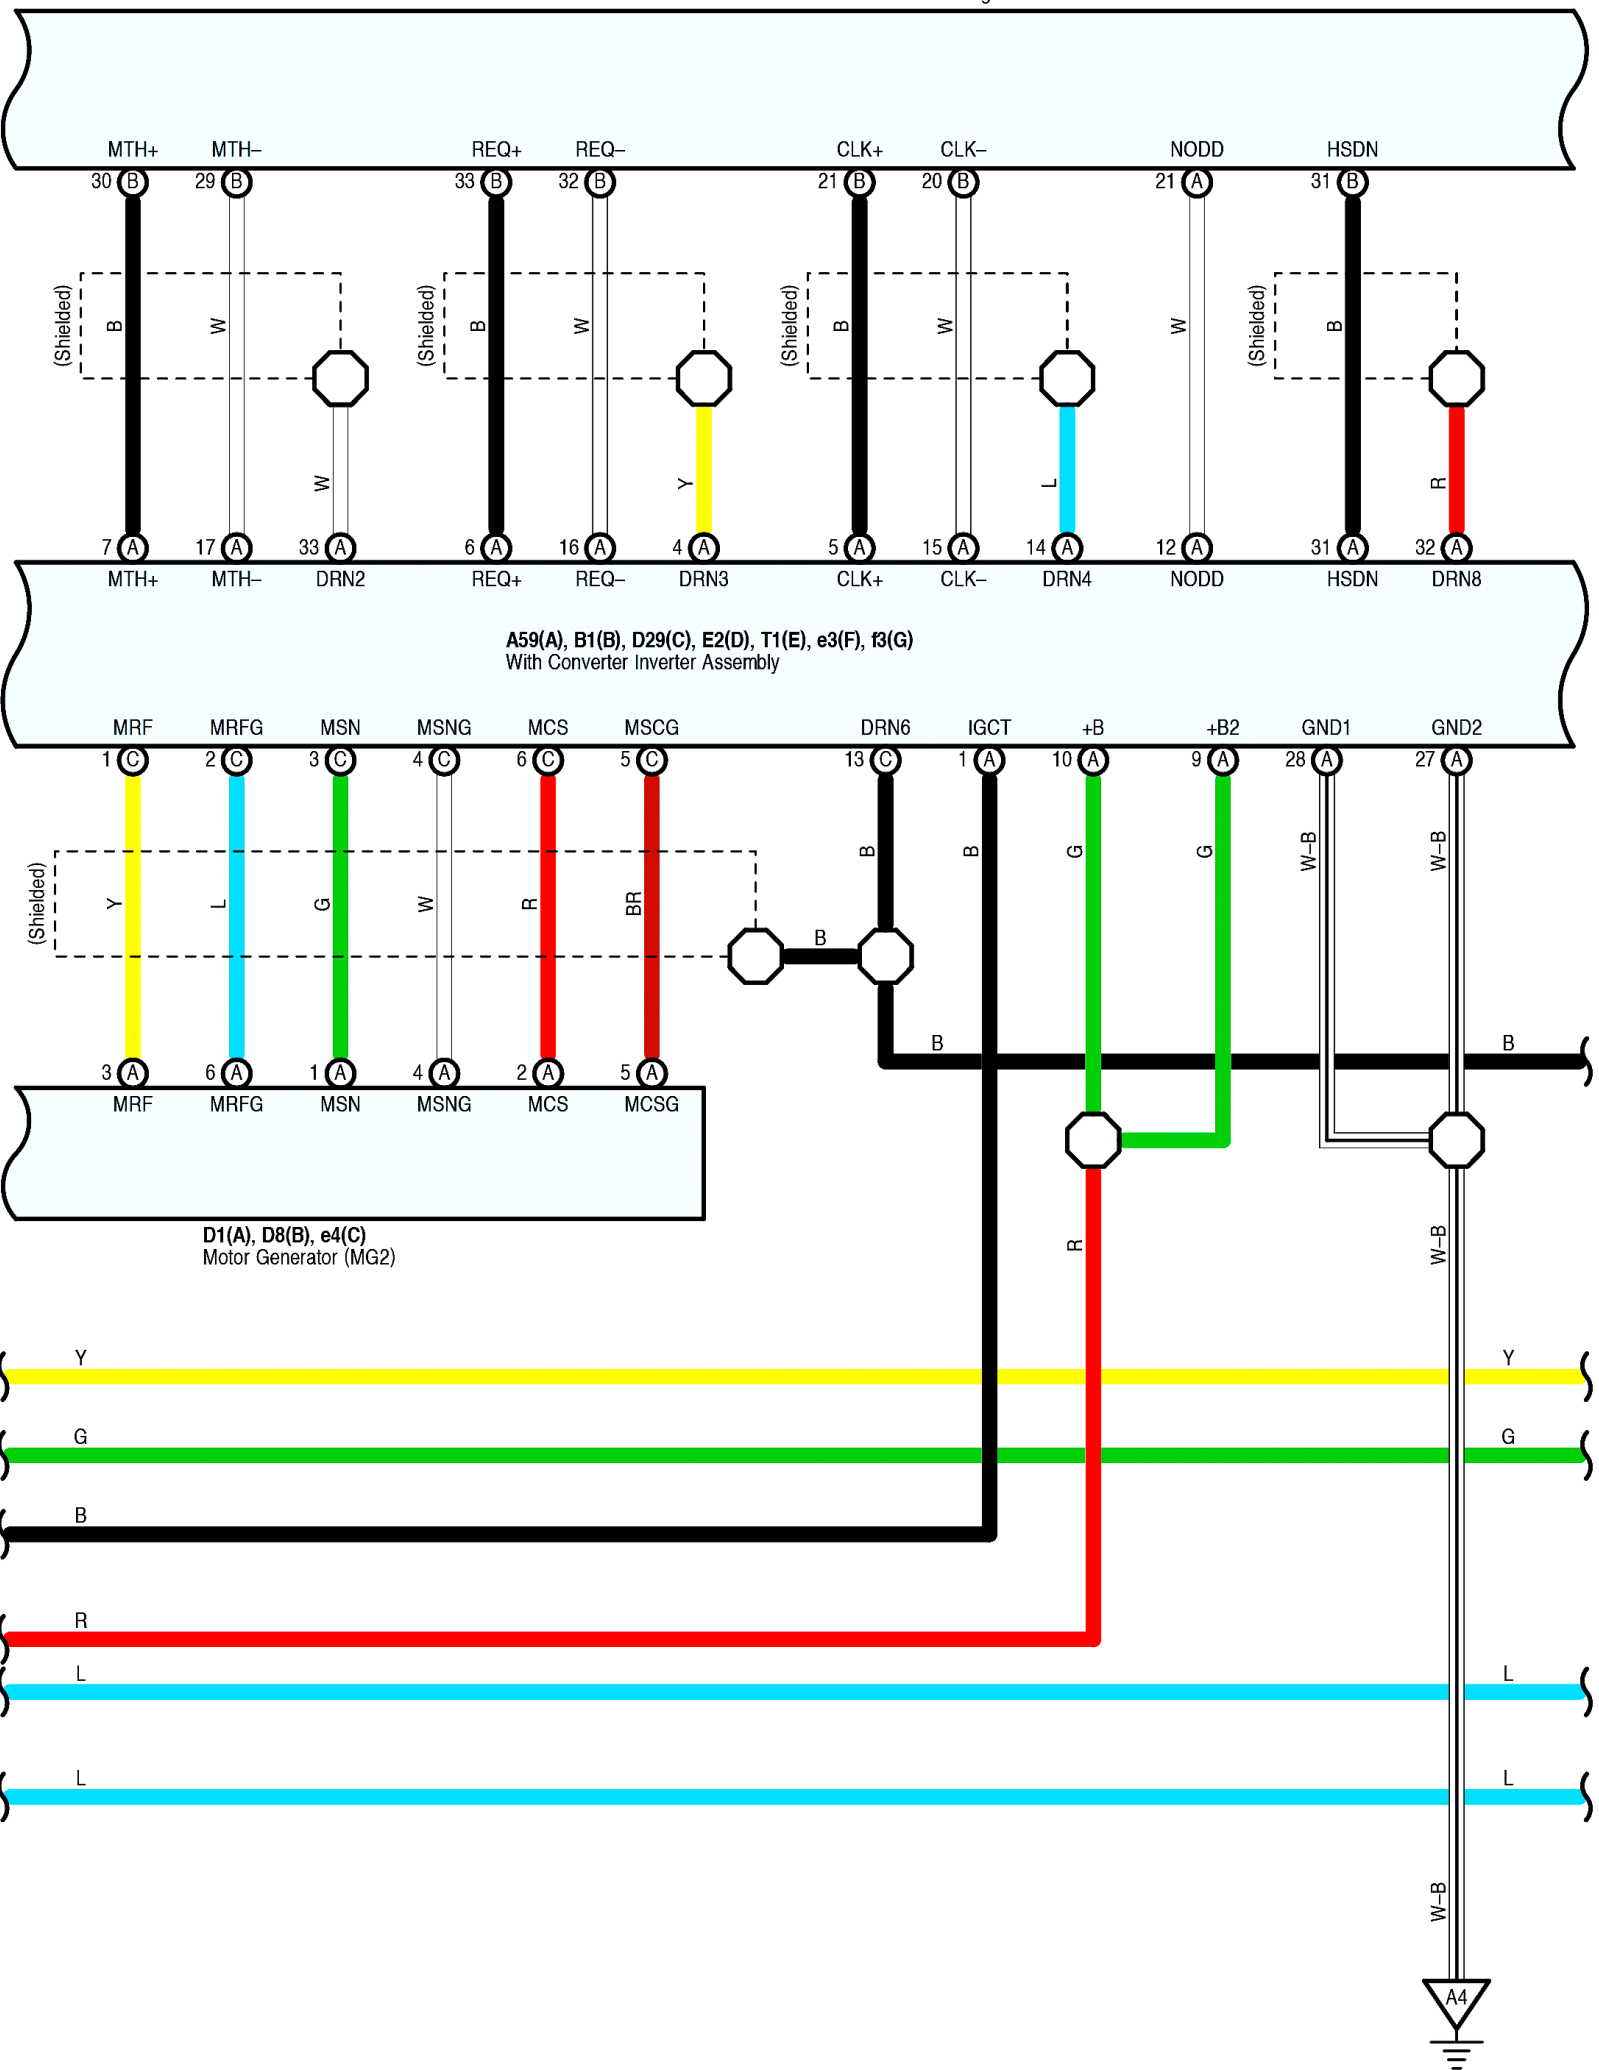

  A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU

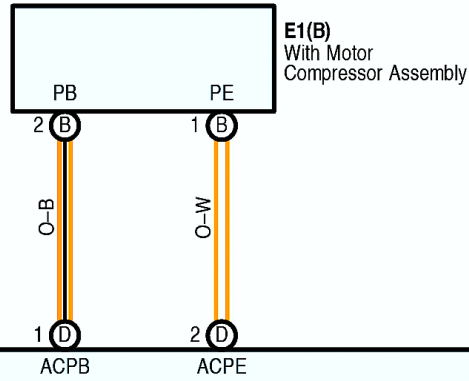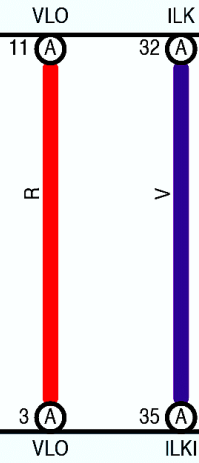


  A59(A), B1(B), D29(C), E2(D), T1(E), e3(F), f3(G)
With Converter Inverter Assembly

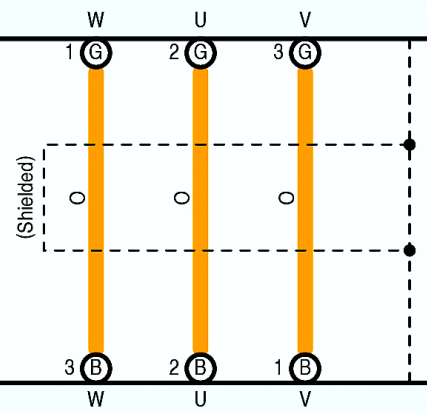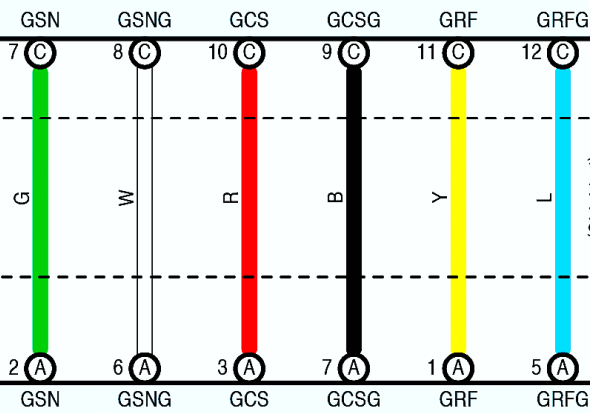

GMT
GMTG

 D7(A), f4(B)
Motor Generator (MG1)

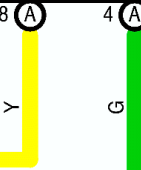


L


L

L

 
L

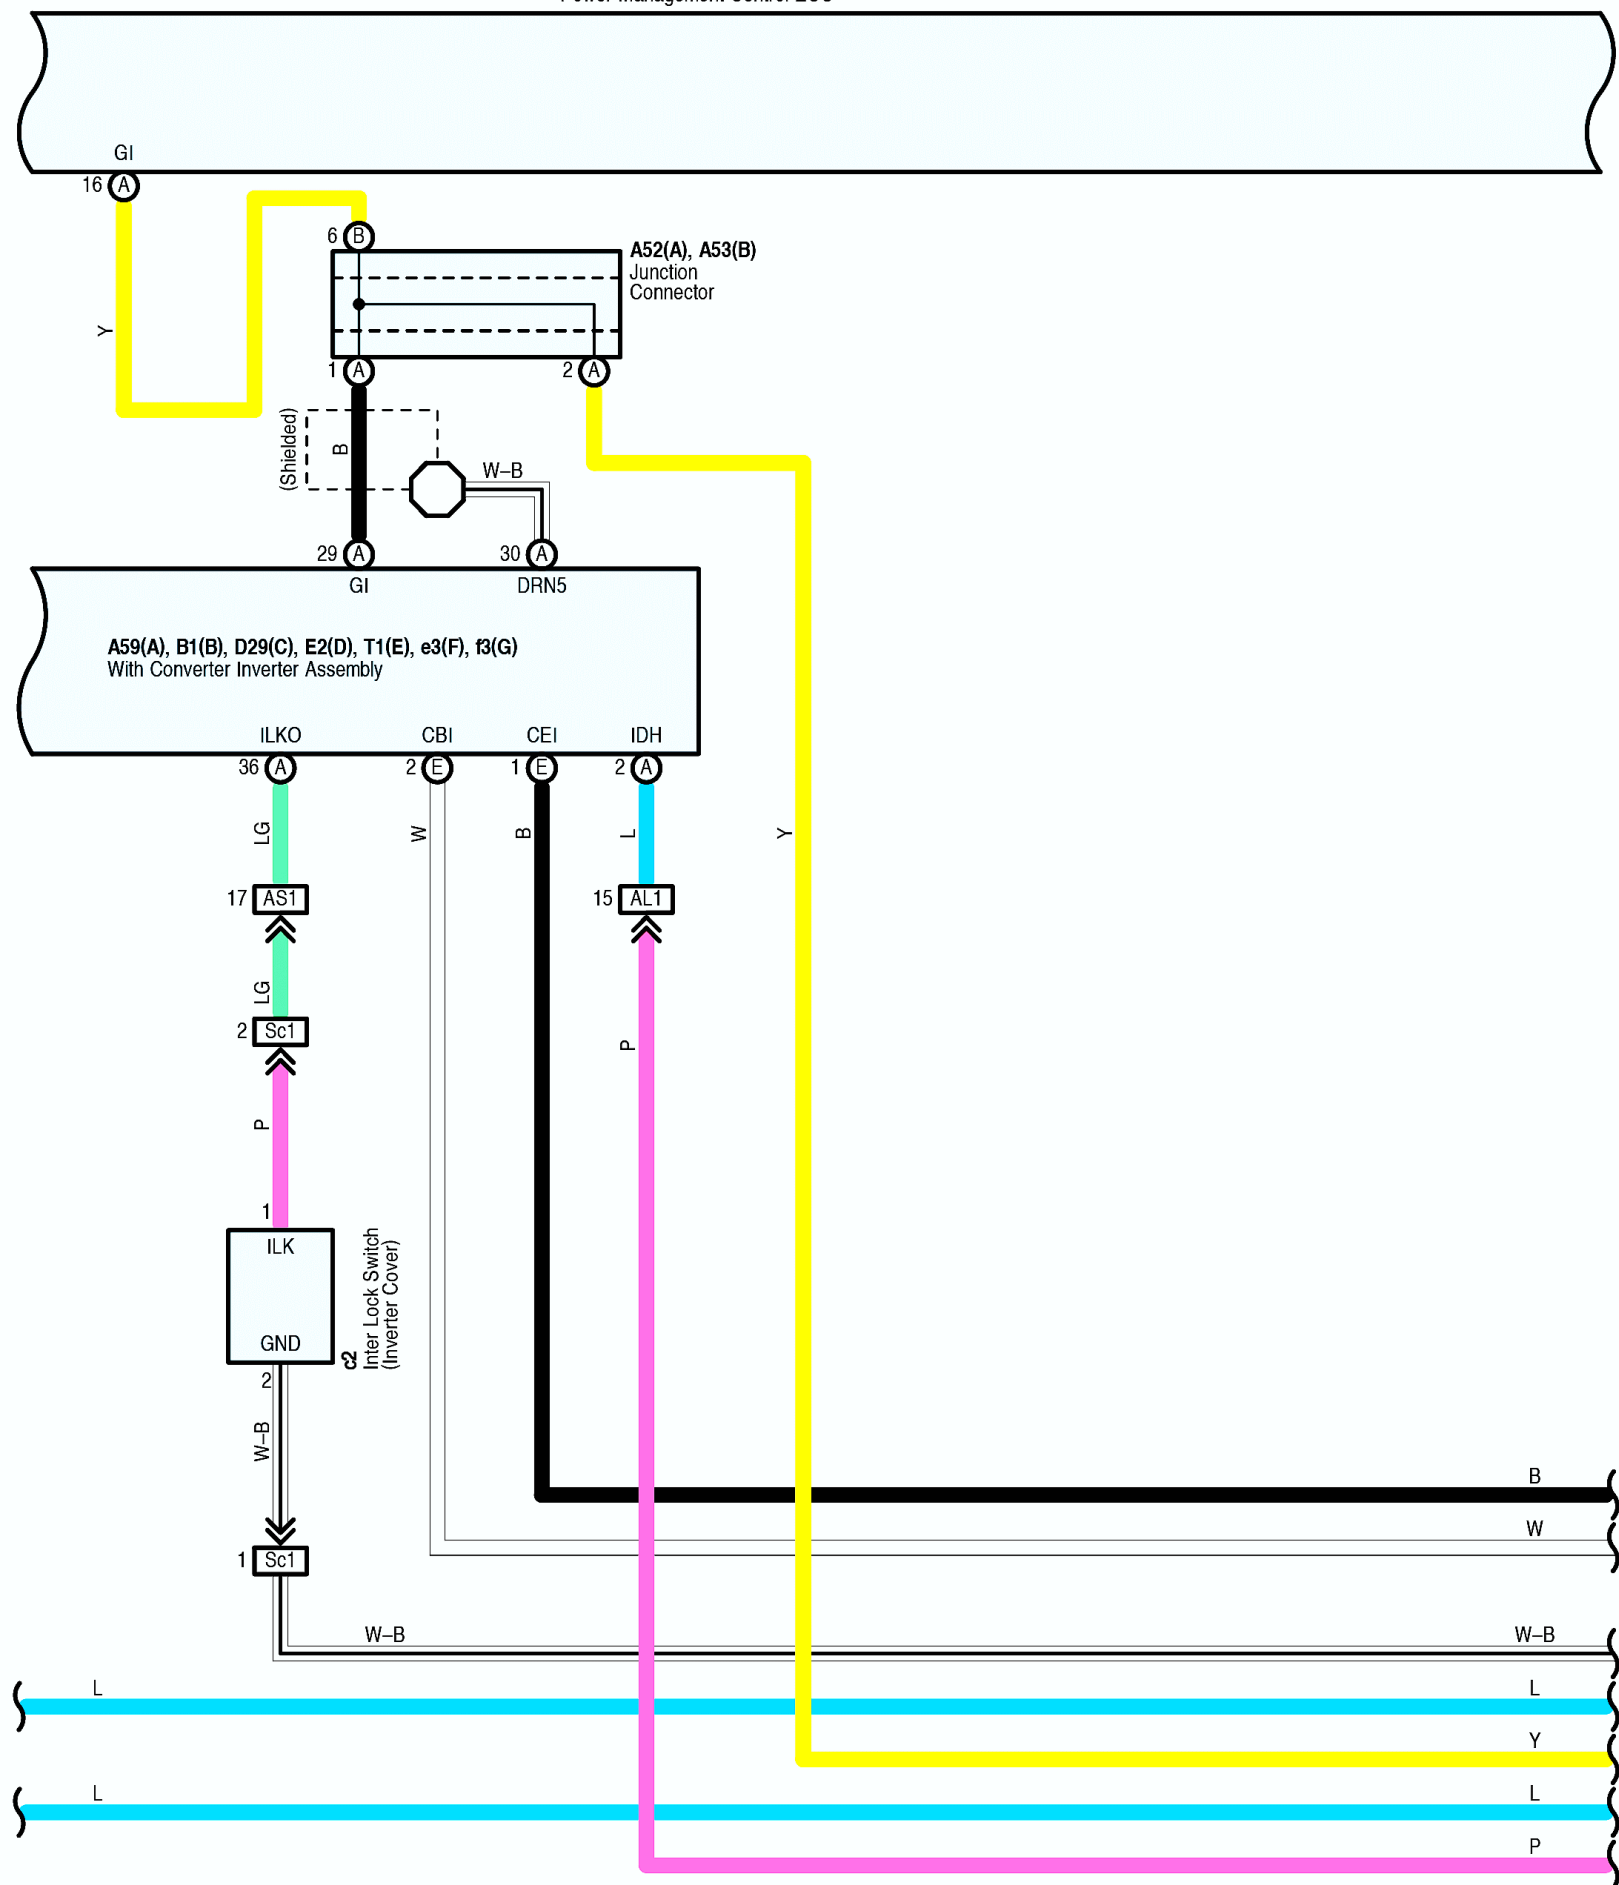


 
A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU

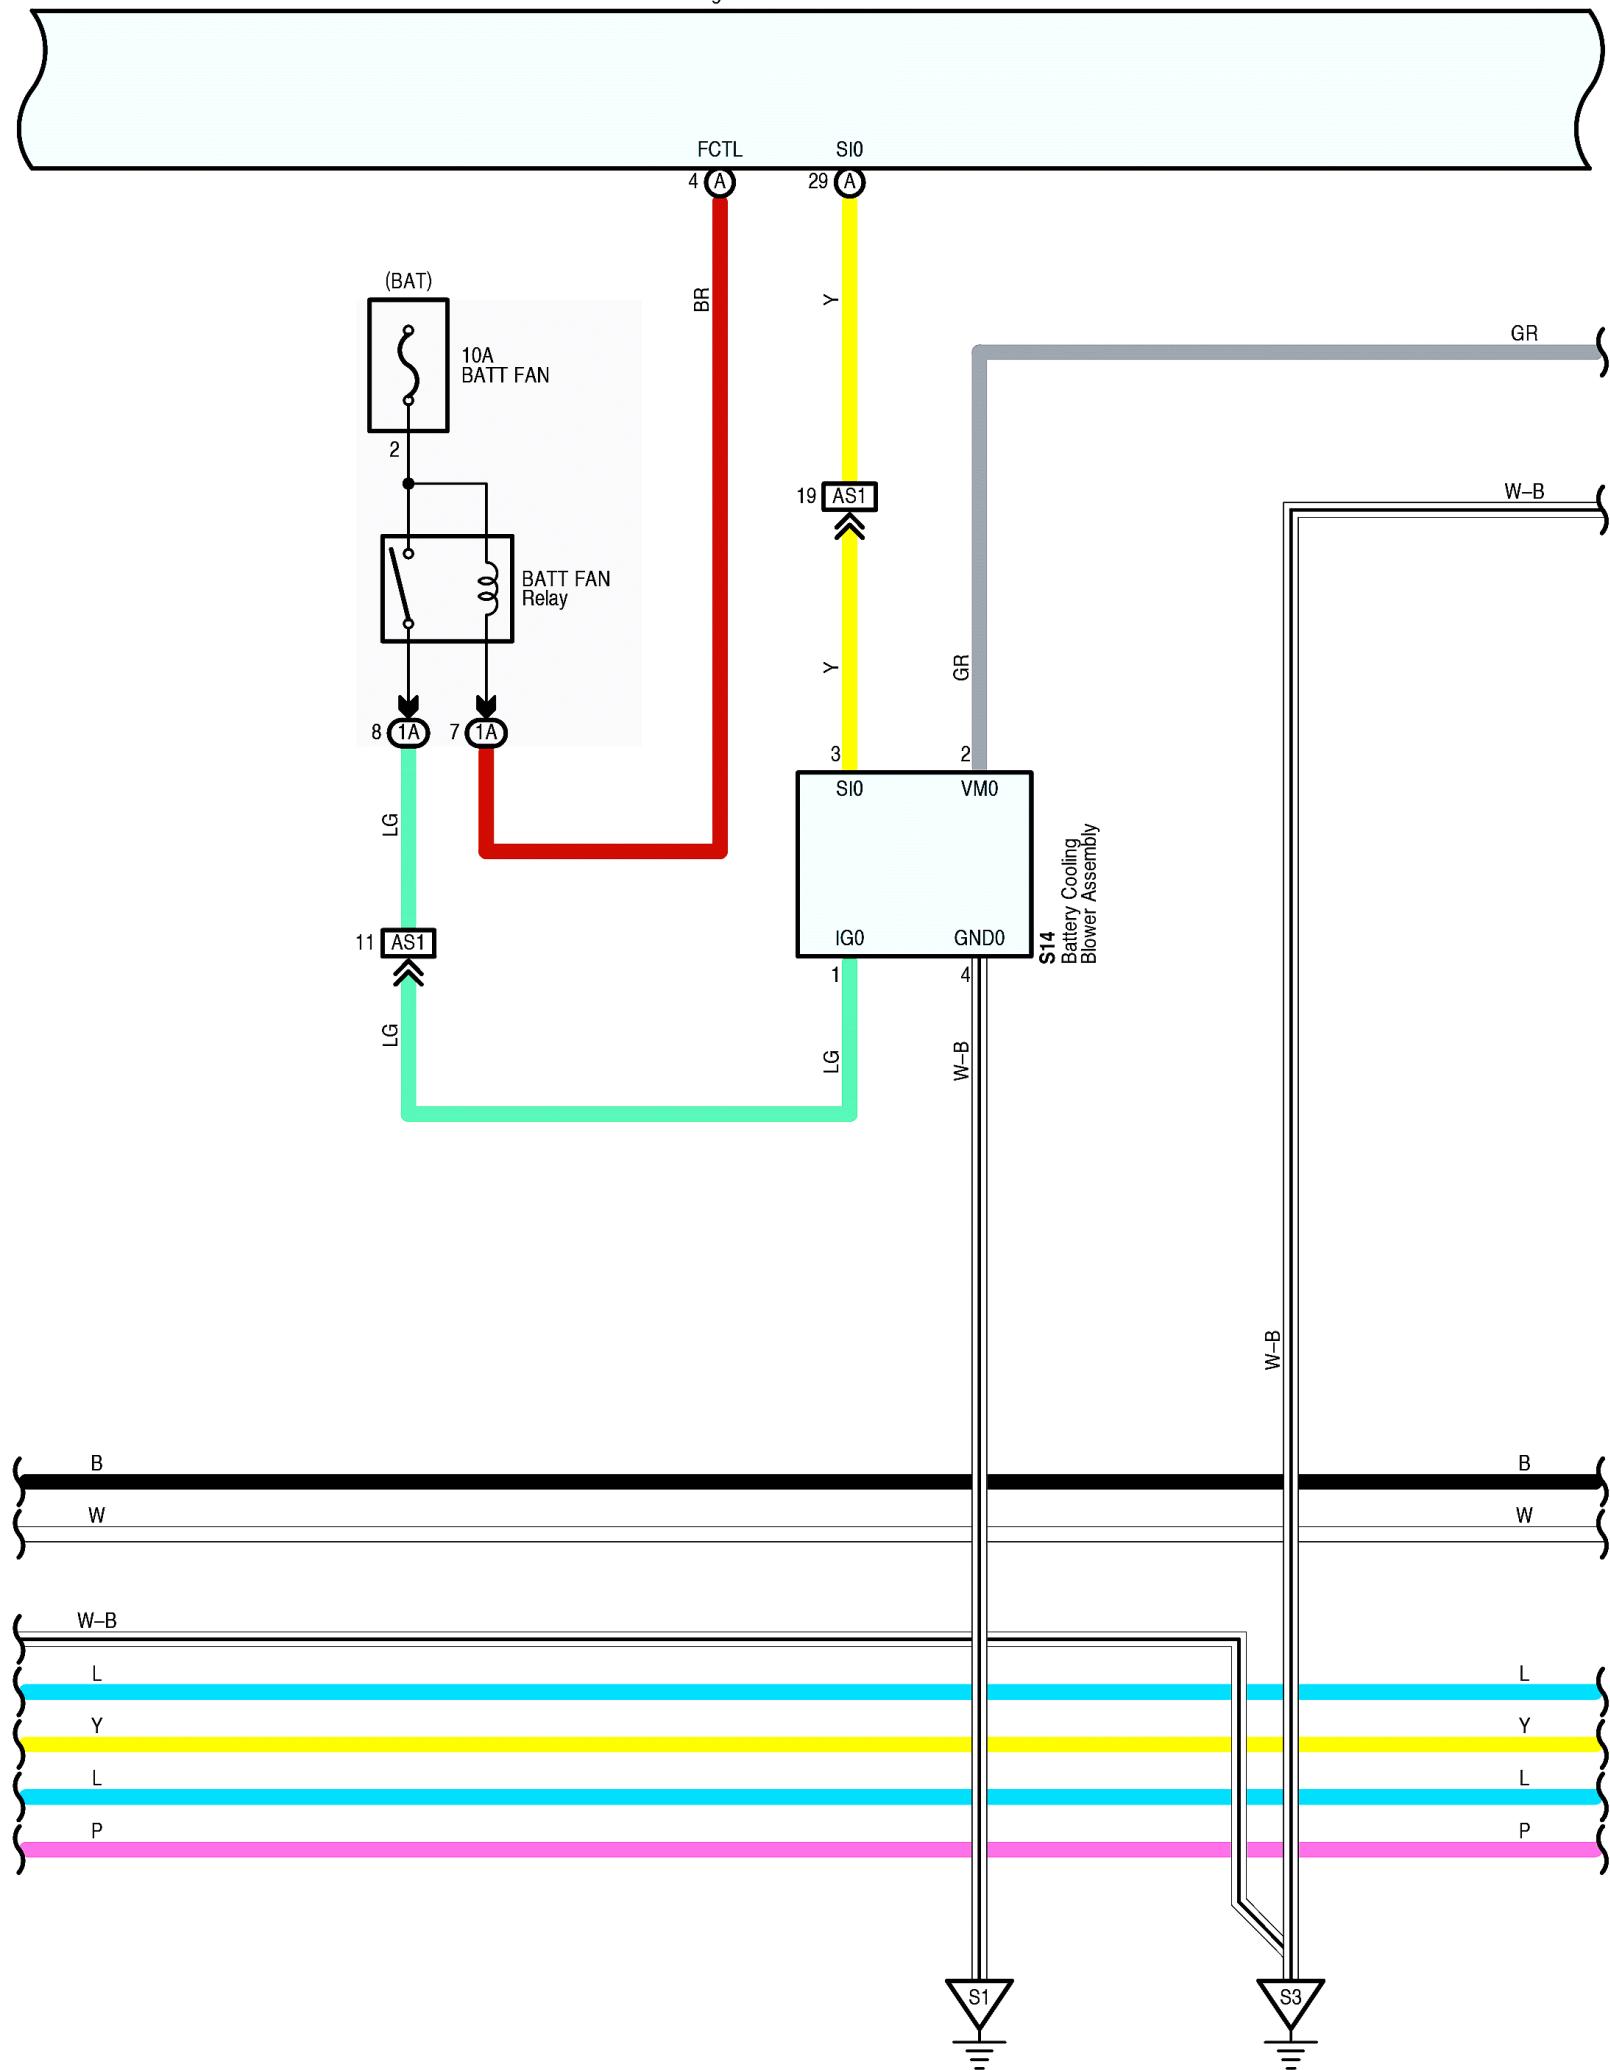


     
A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU

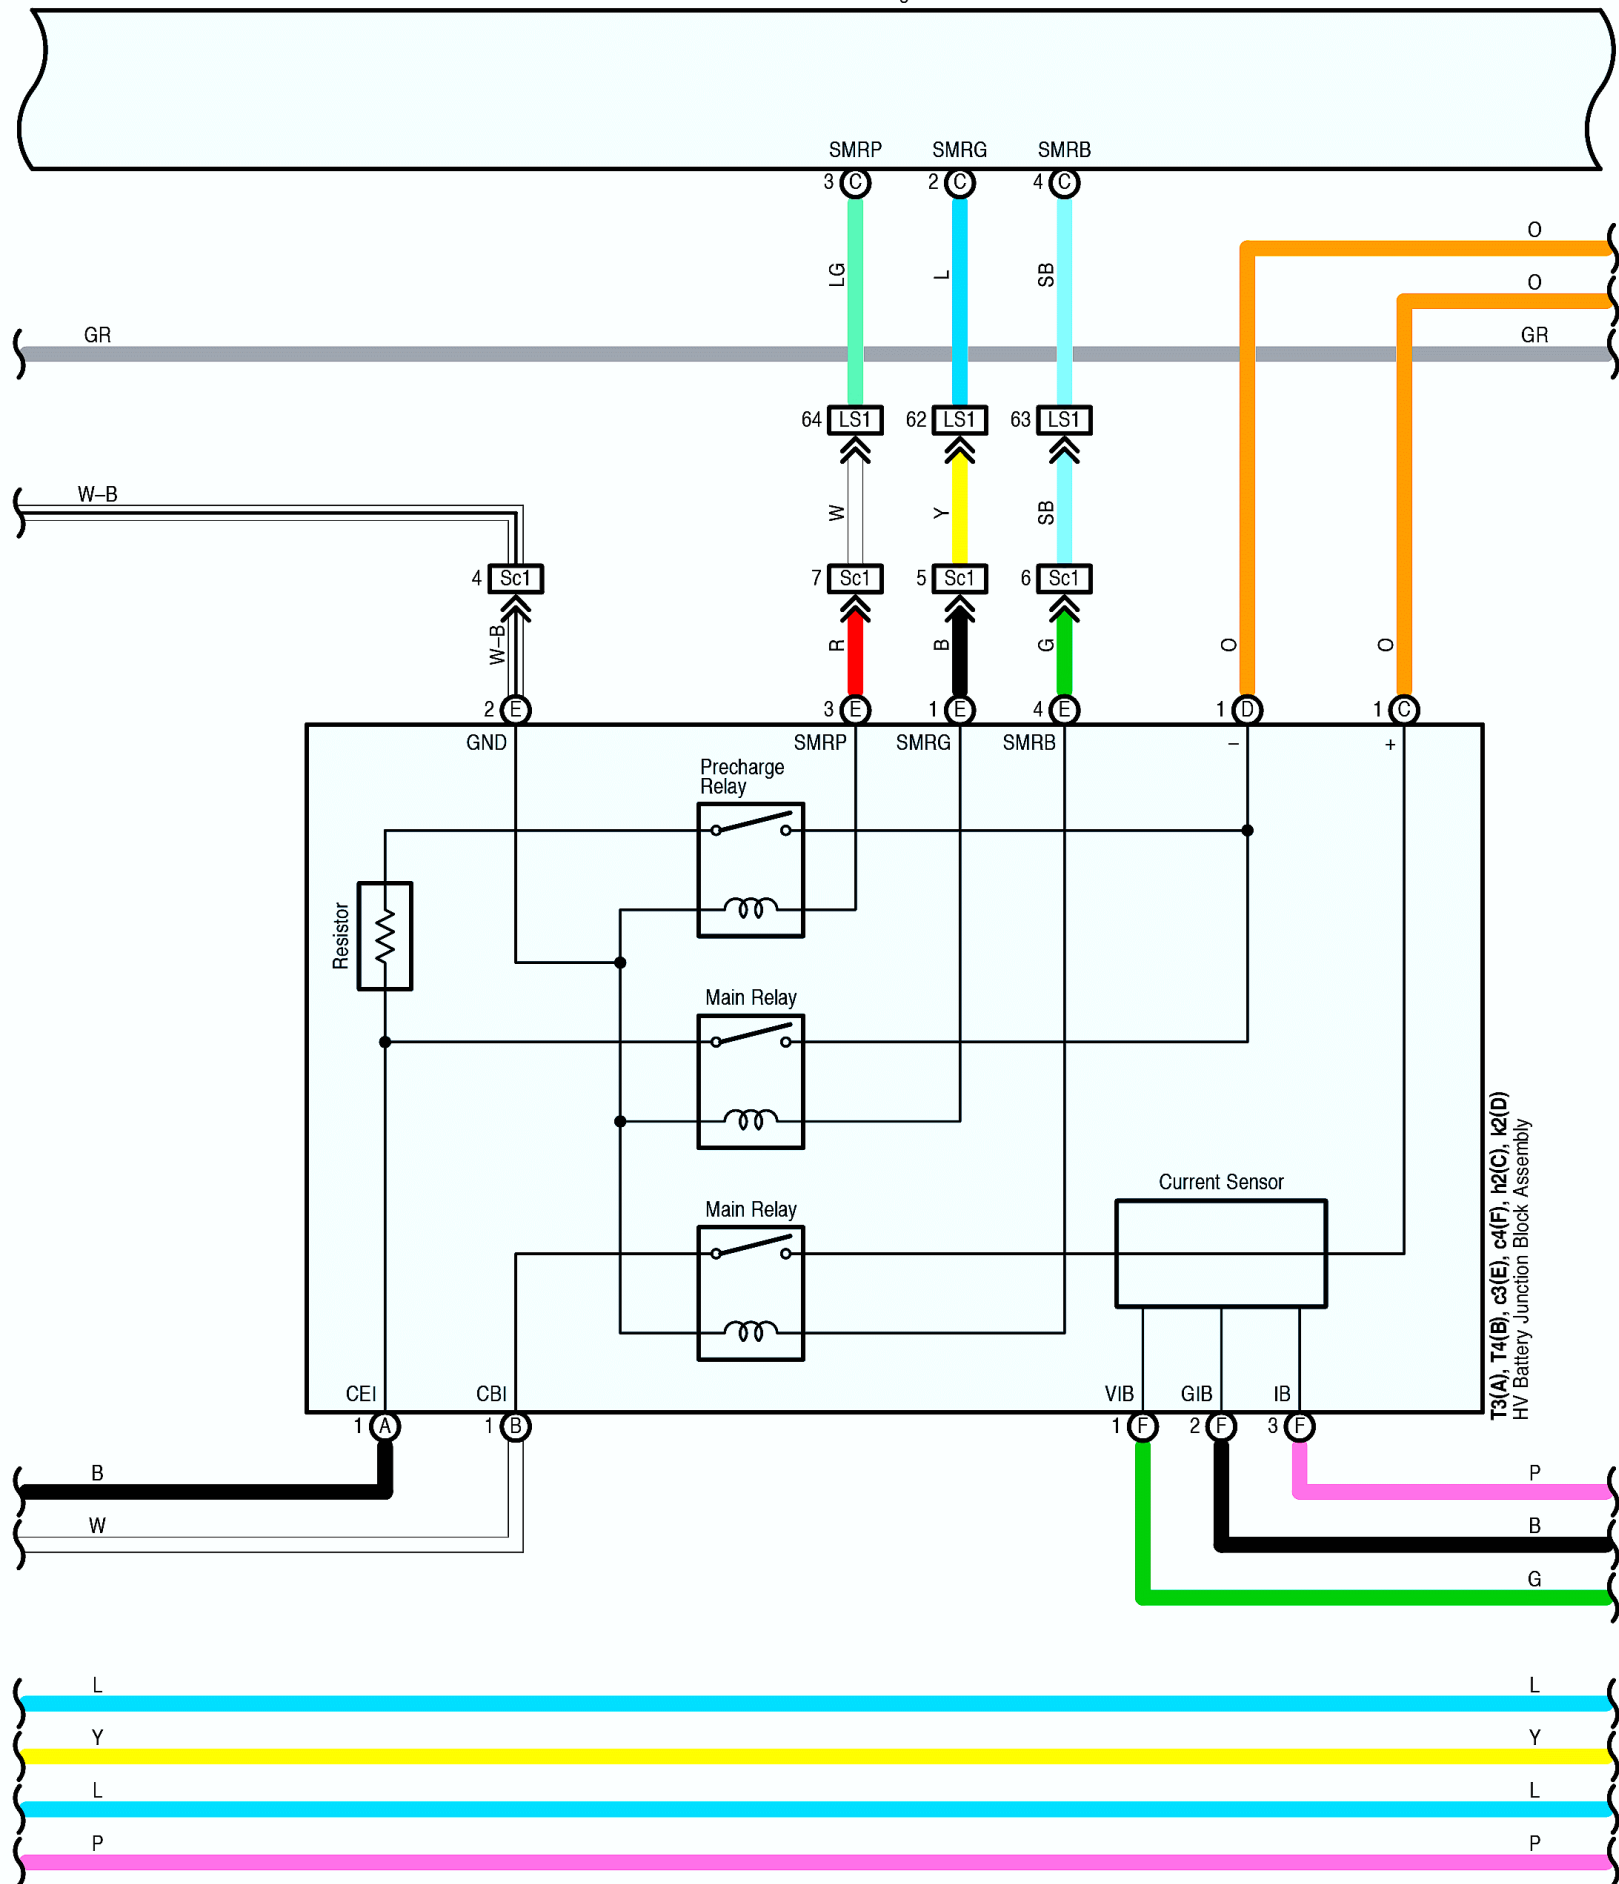

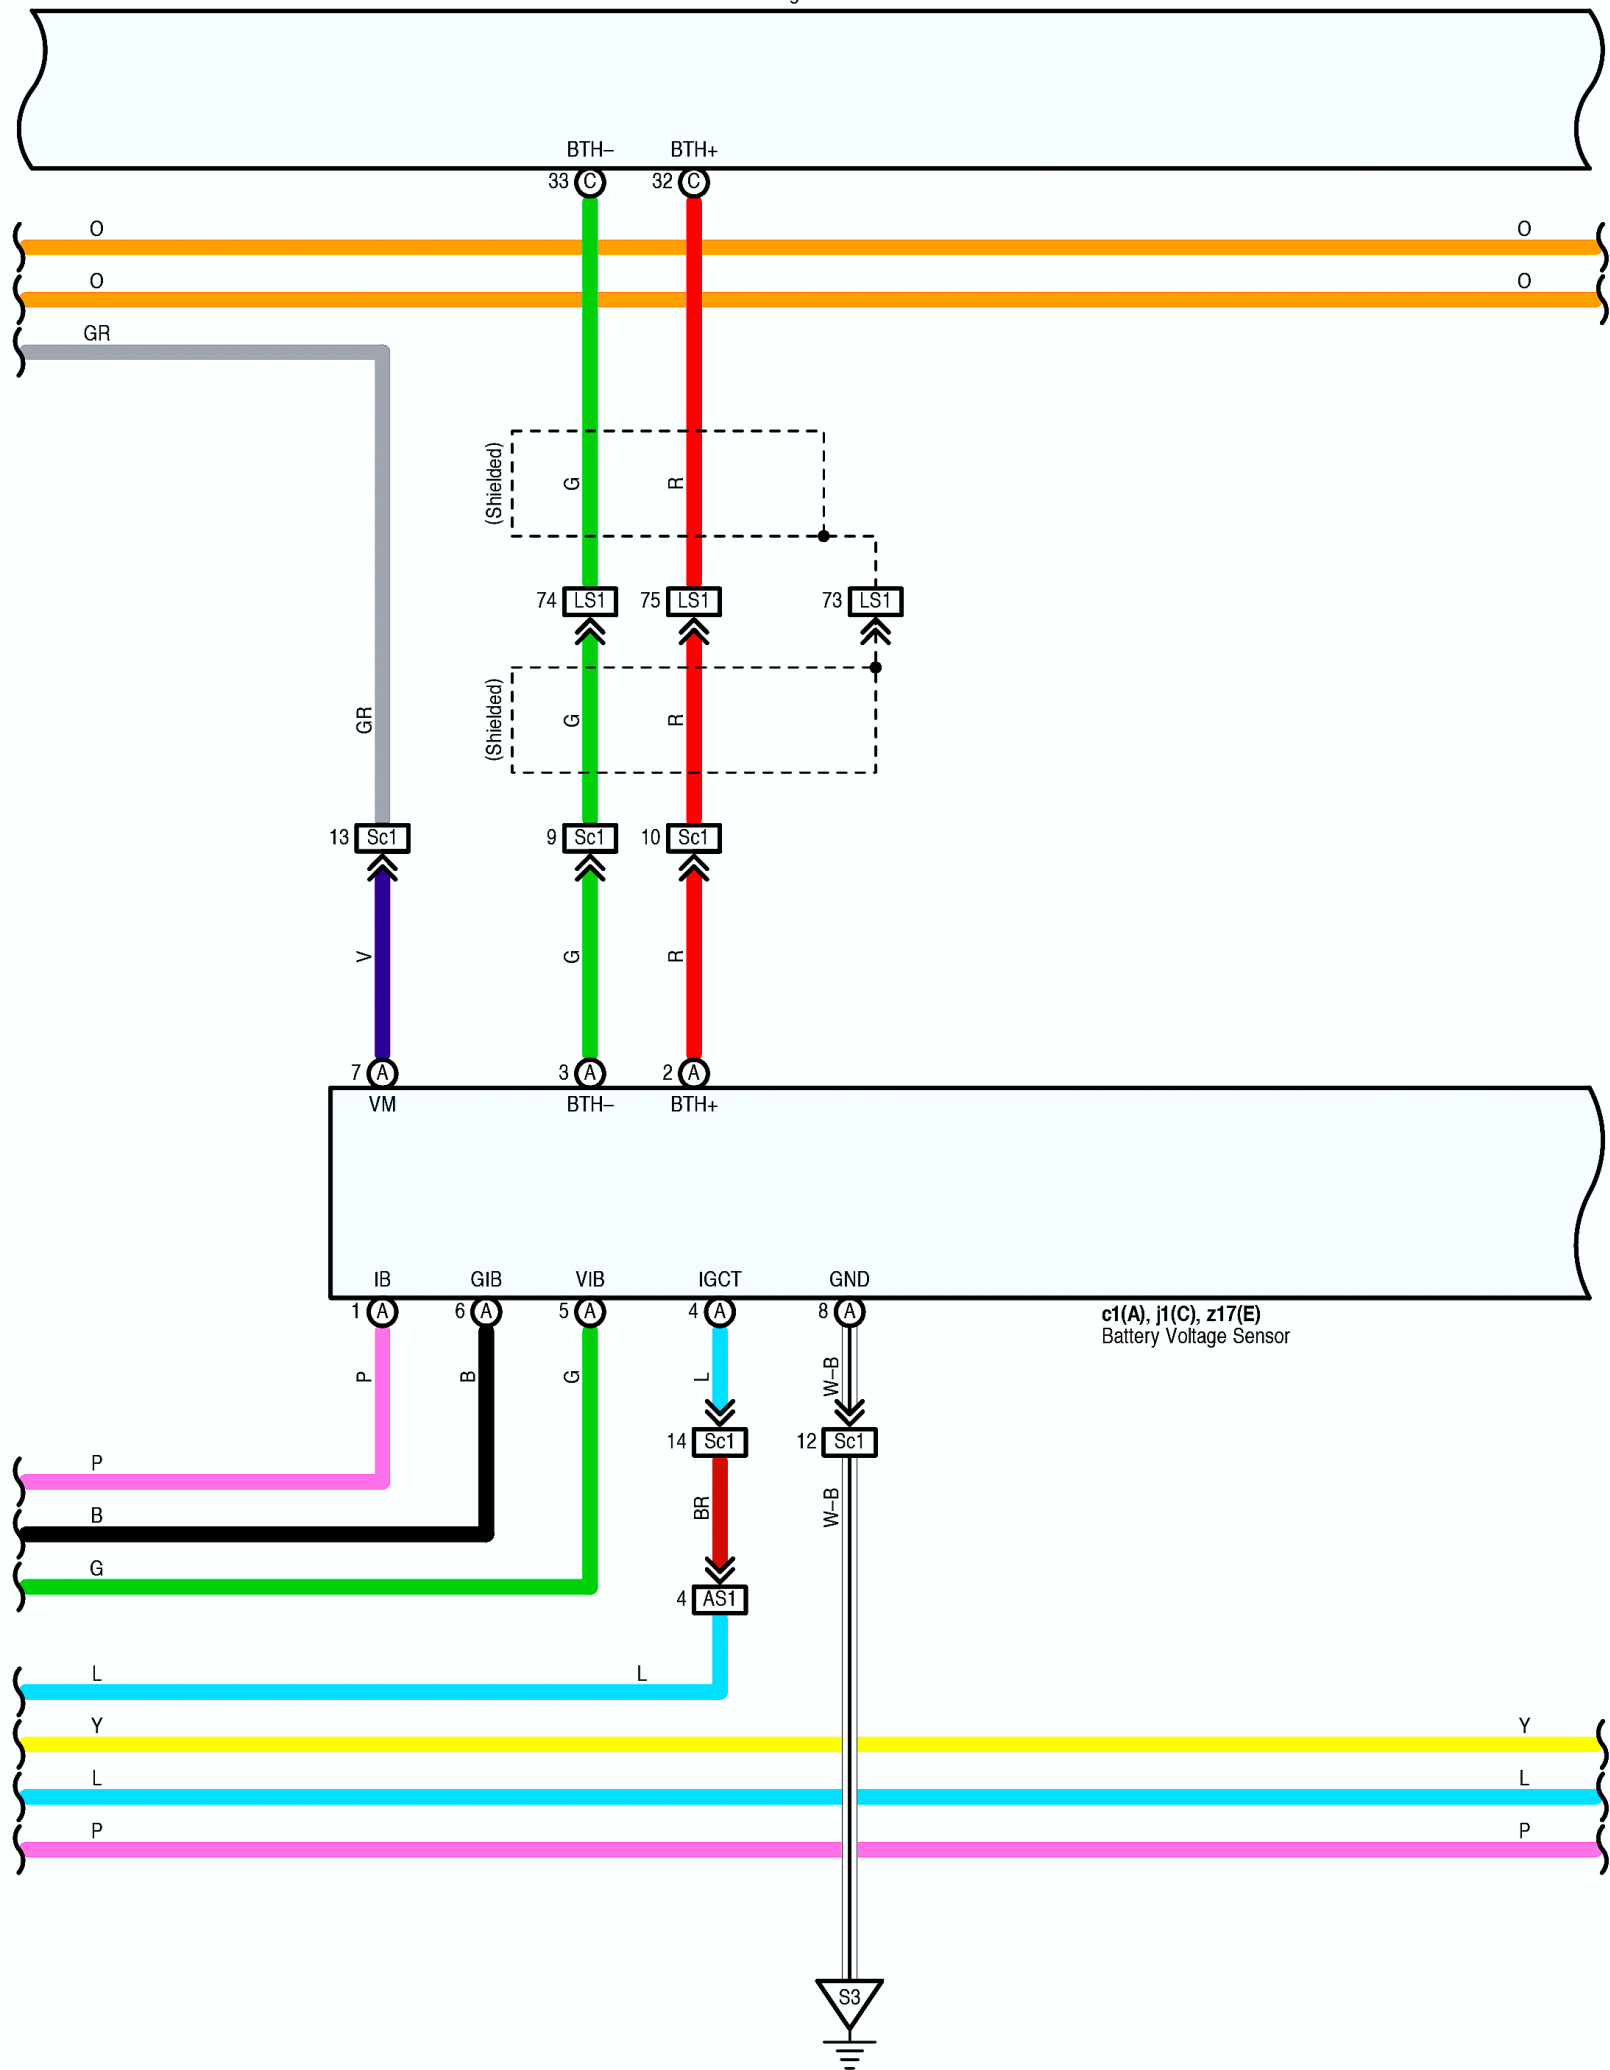


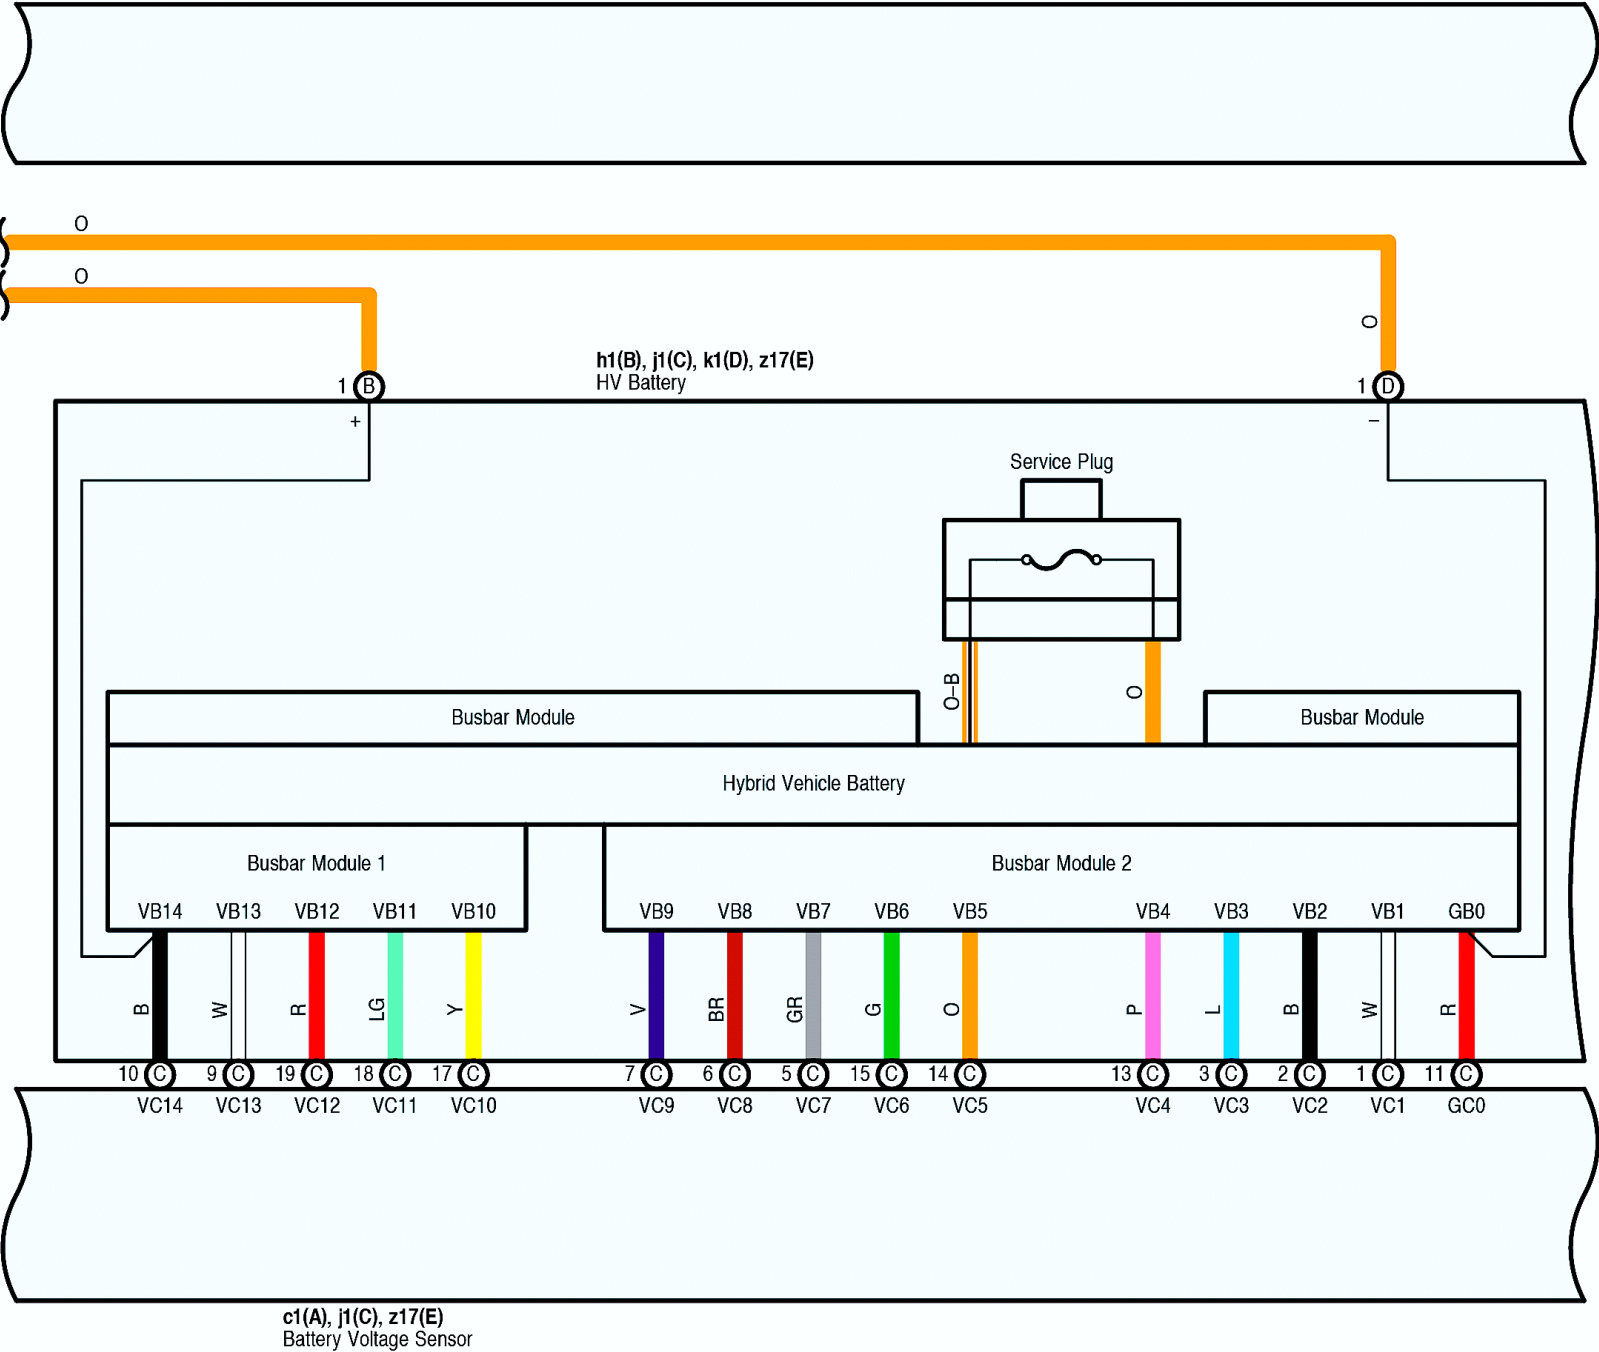

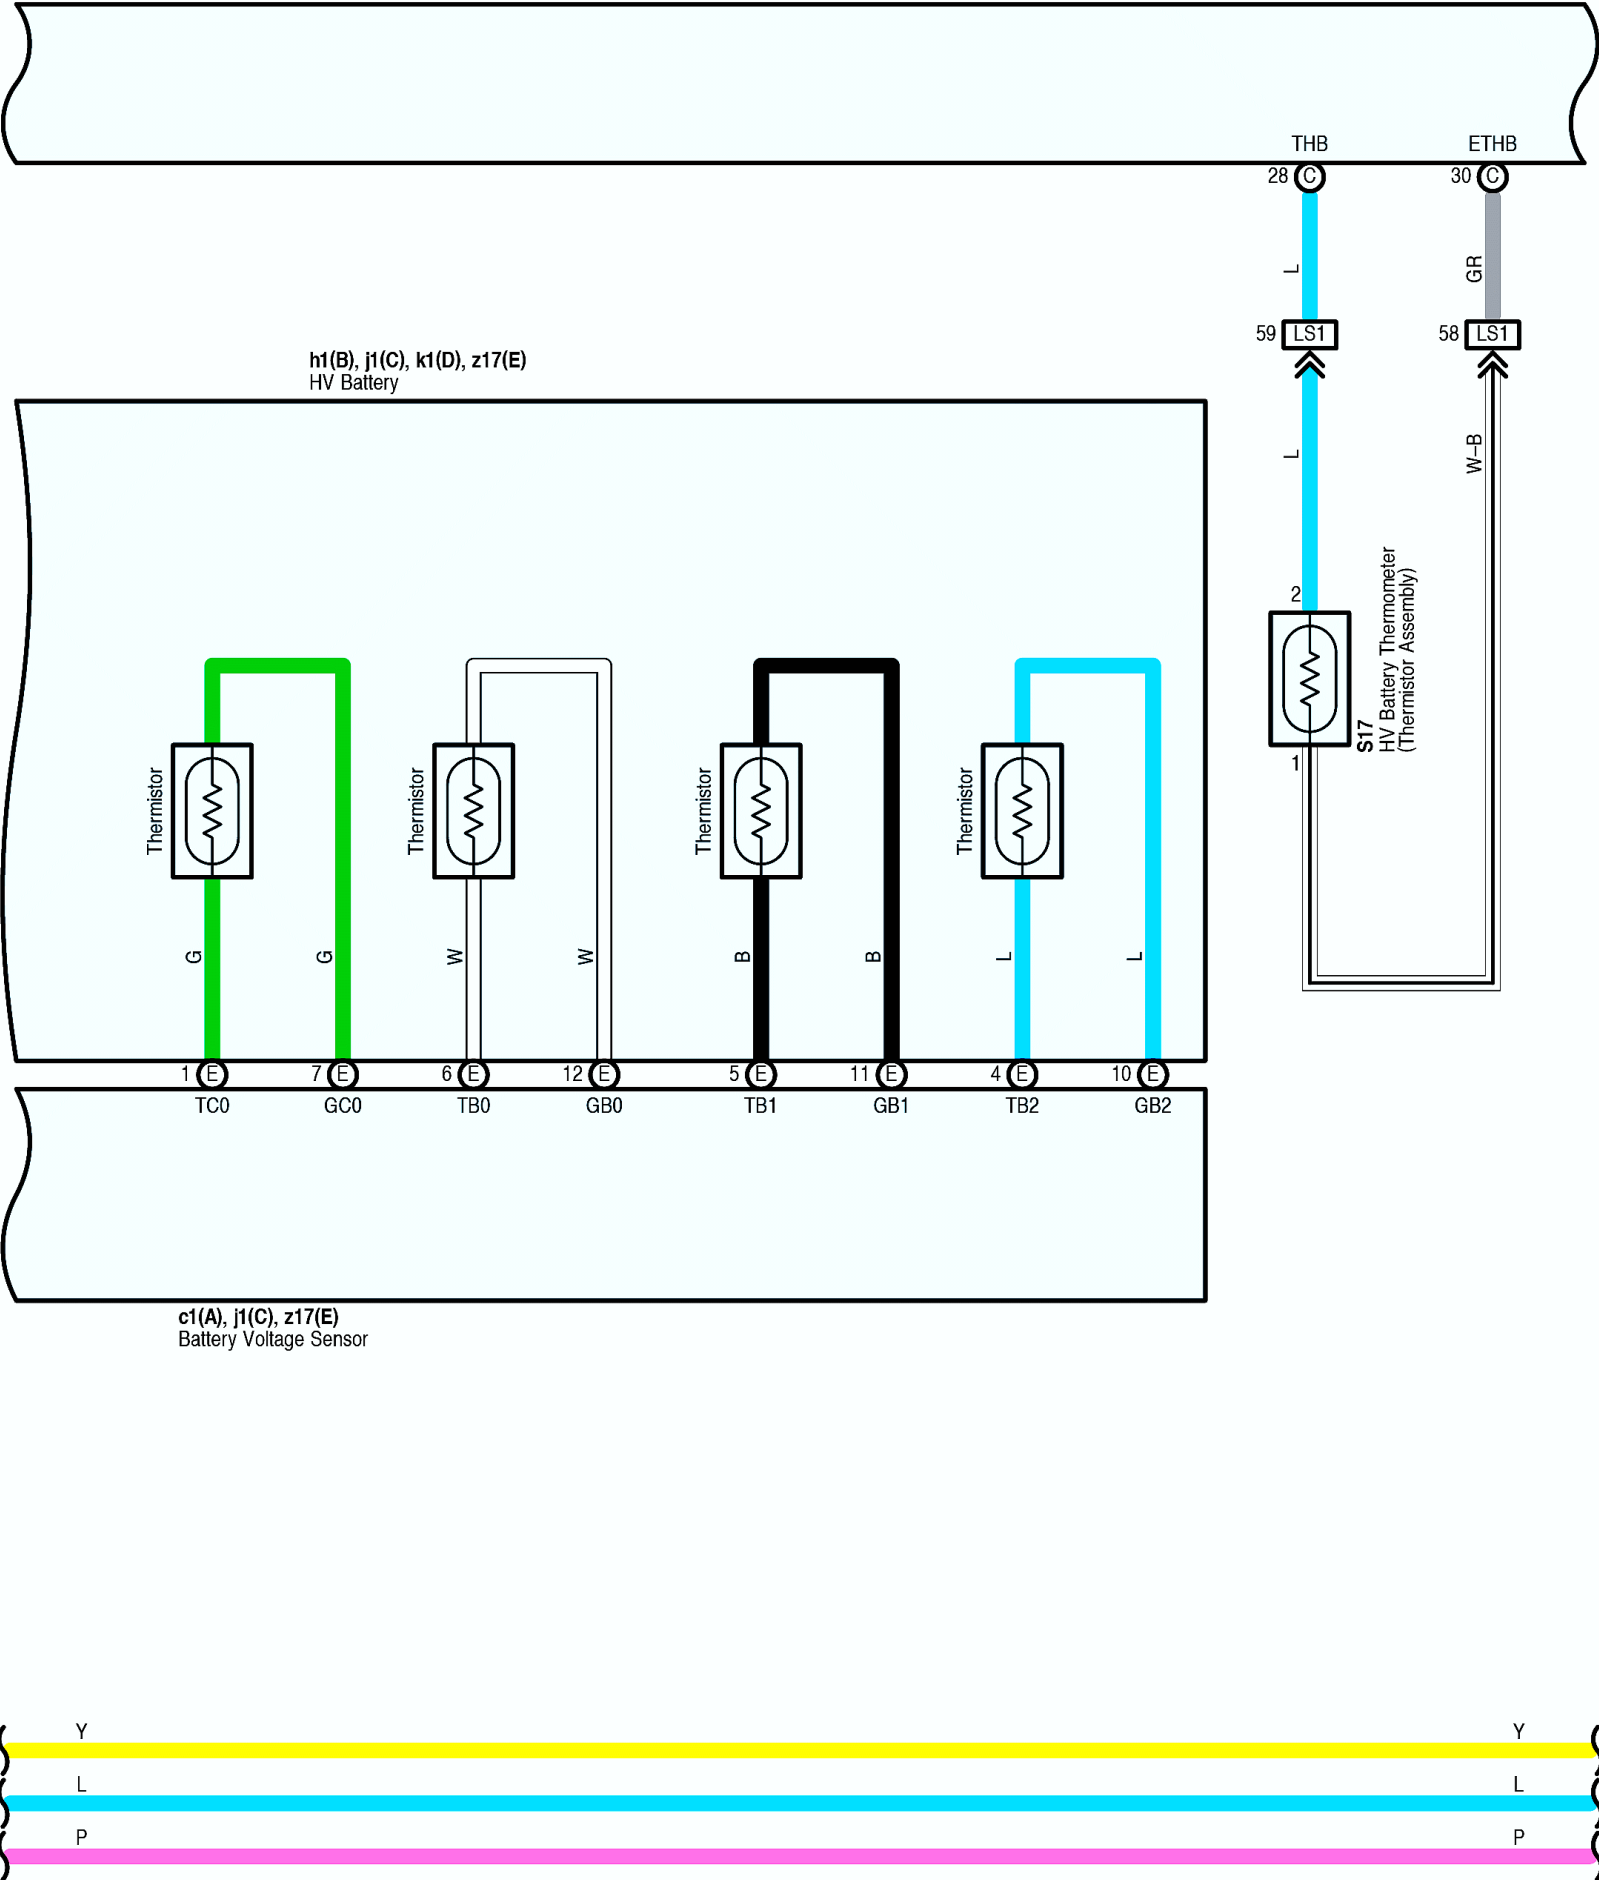

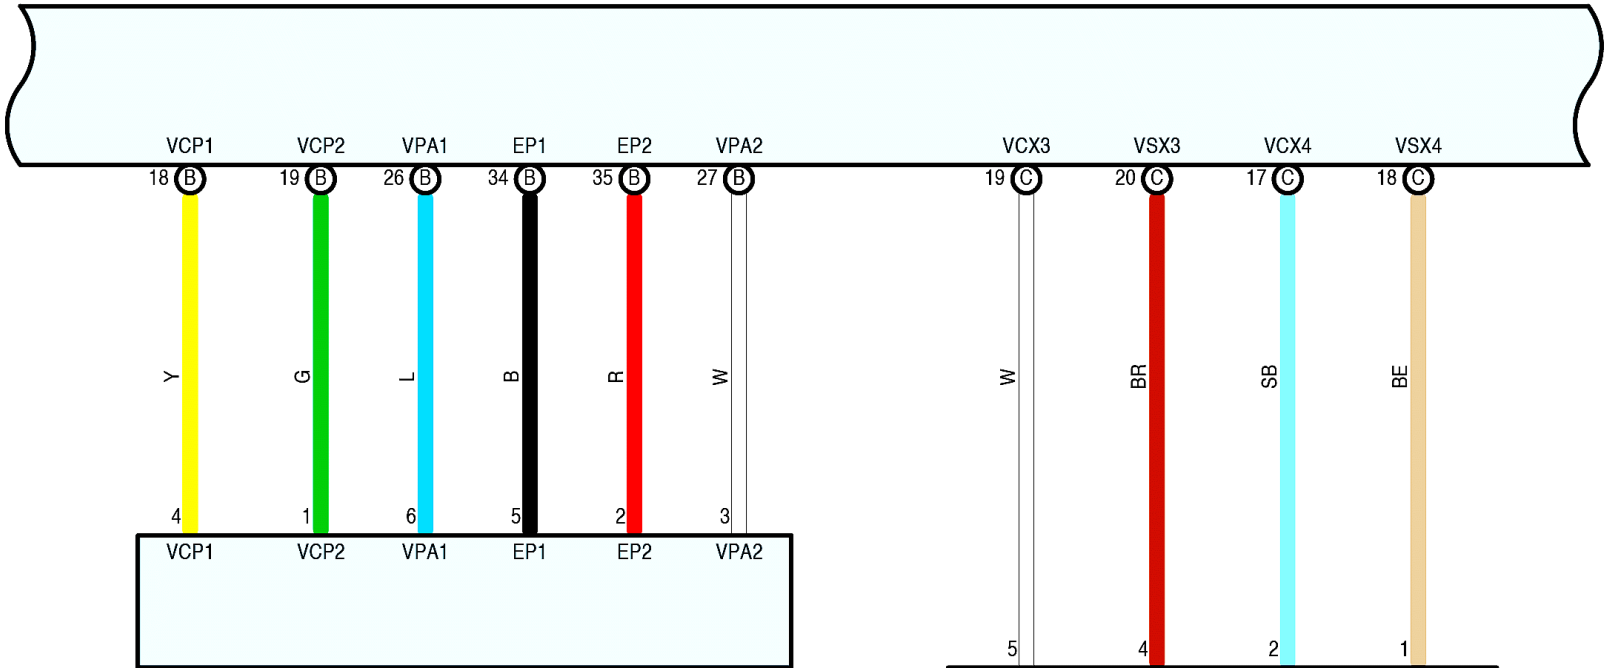


A75
Accelerator Pedal Sensor Assembly

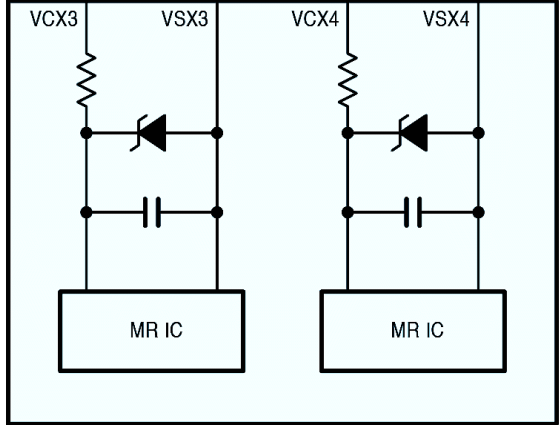 

 
L126
Shift Lever Position Sensor
(Shift Lock Control Unit Assembly)



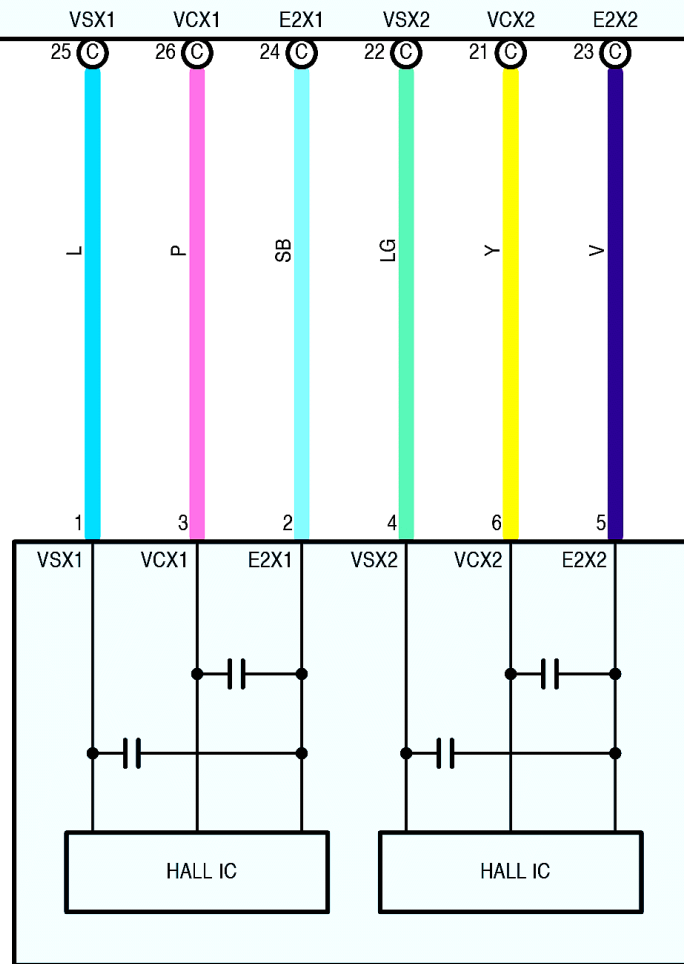


 
L127
No. 2 Shift Lever Position Sensor
(Shift Lock Control Unit Assembly)



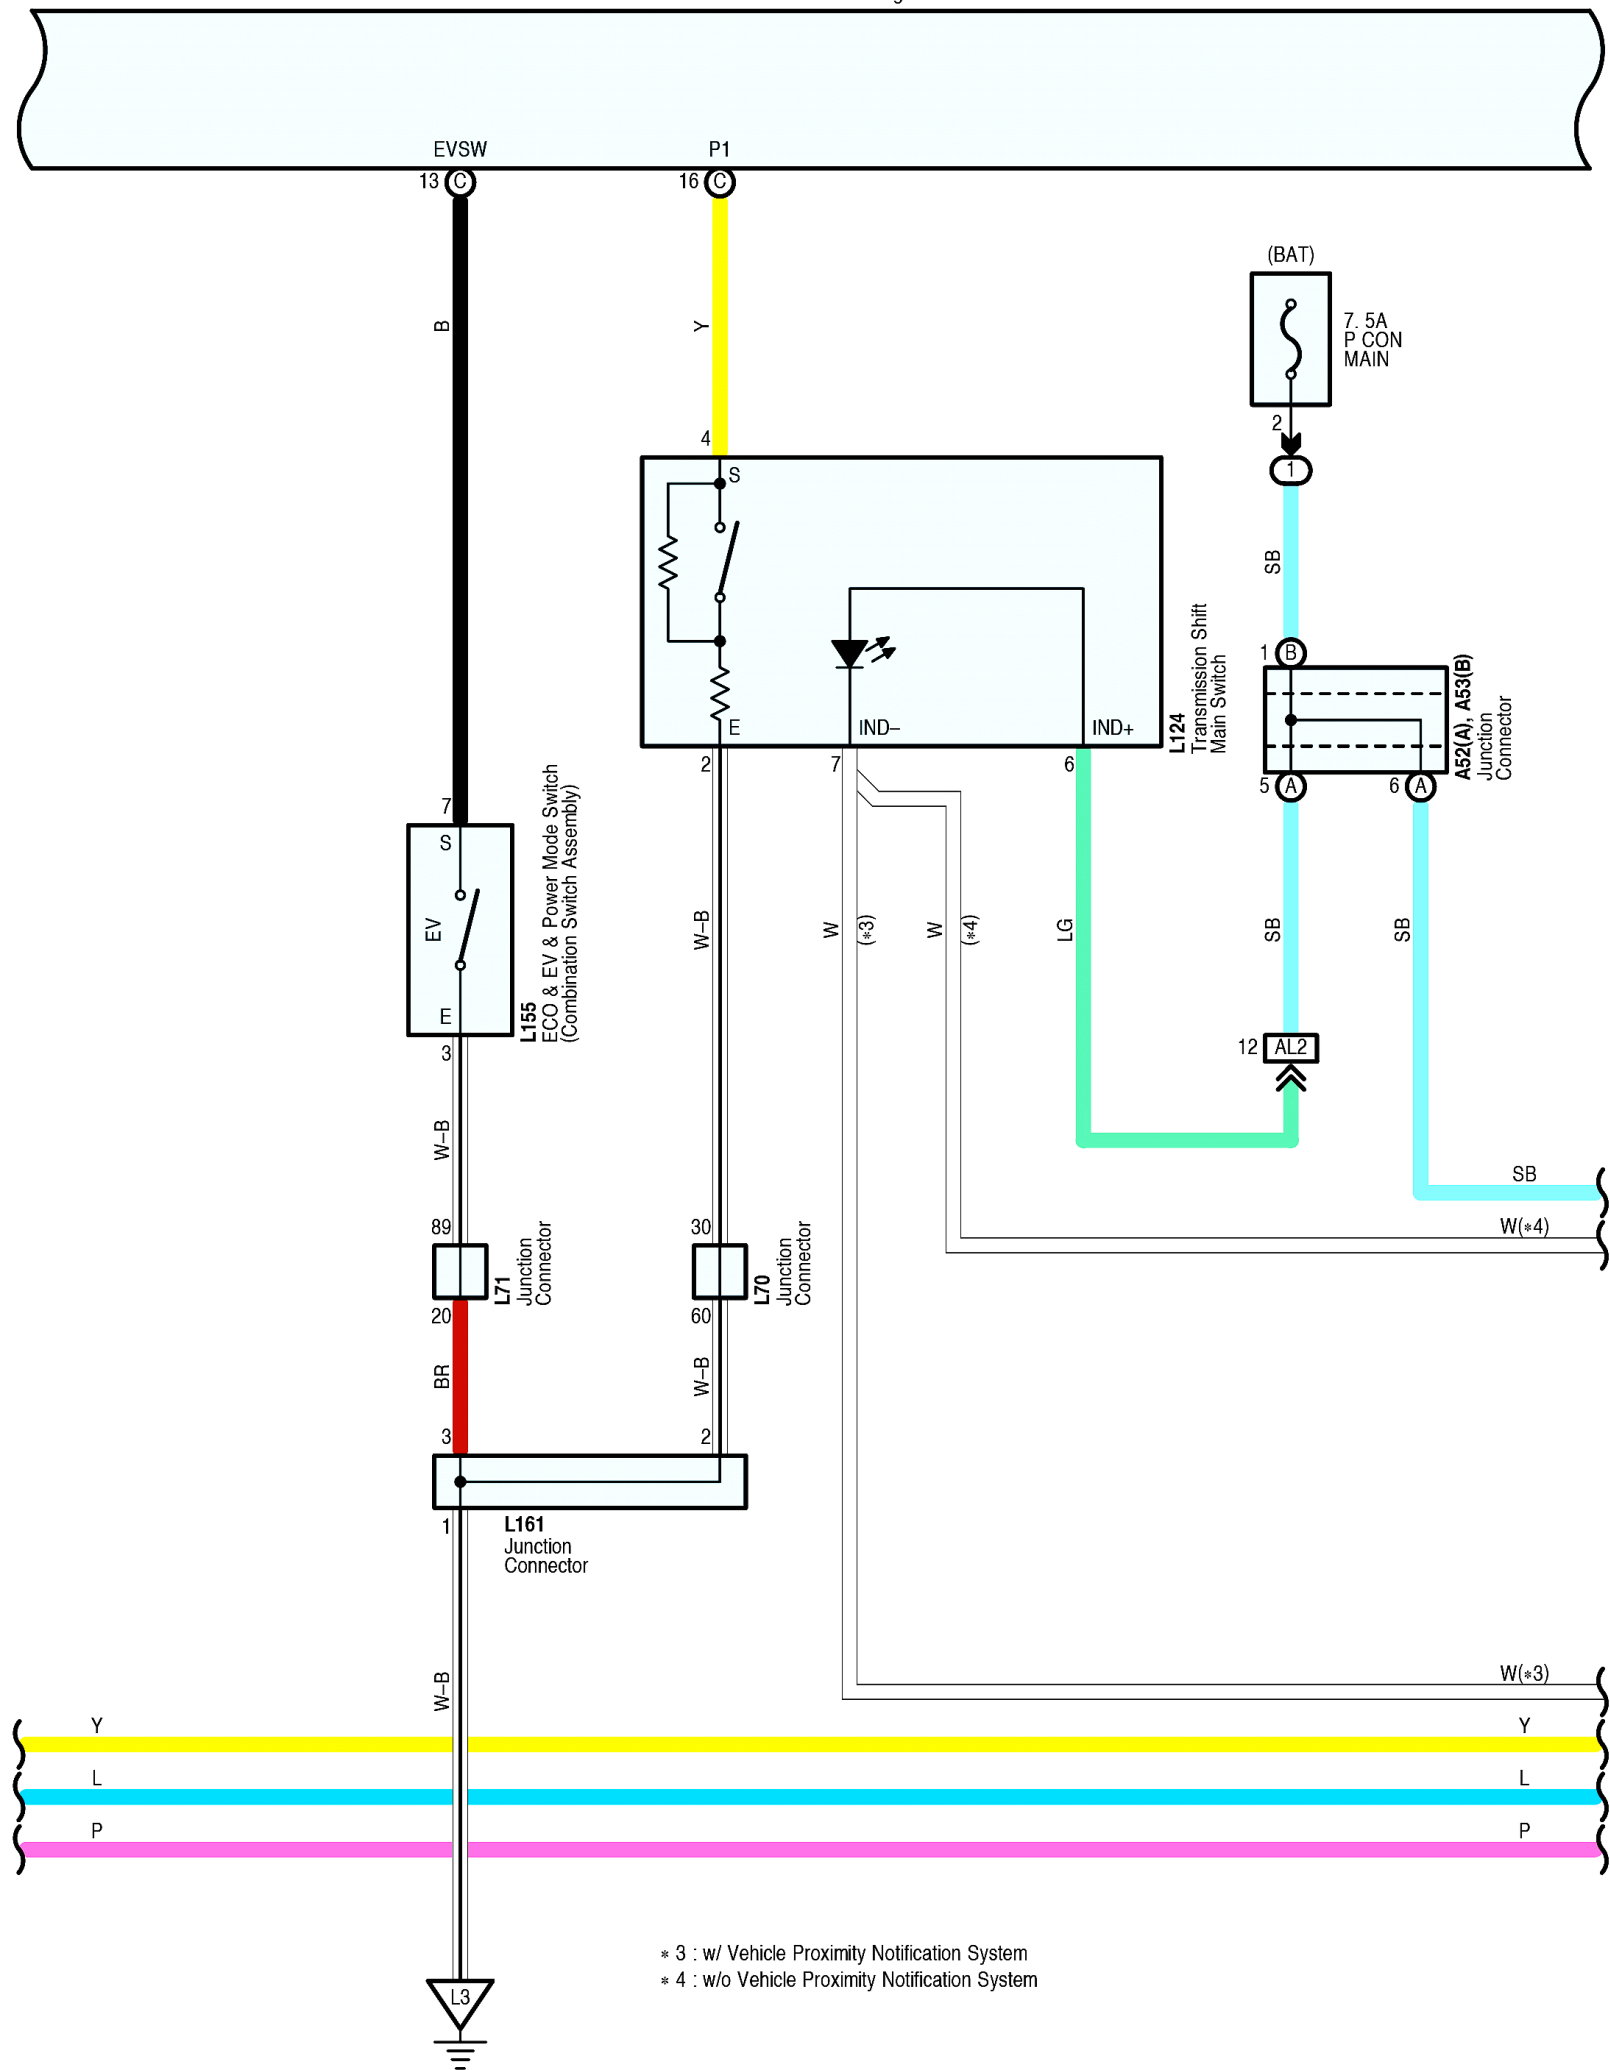



 
 
* 3 : w/ Vehicle Proximity Notification System
* 4 : w/o Vehicle Proximity Notification System

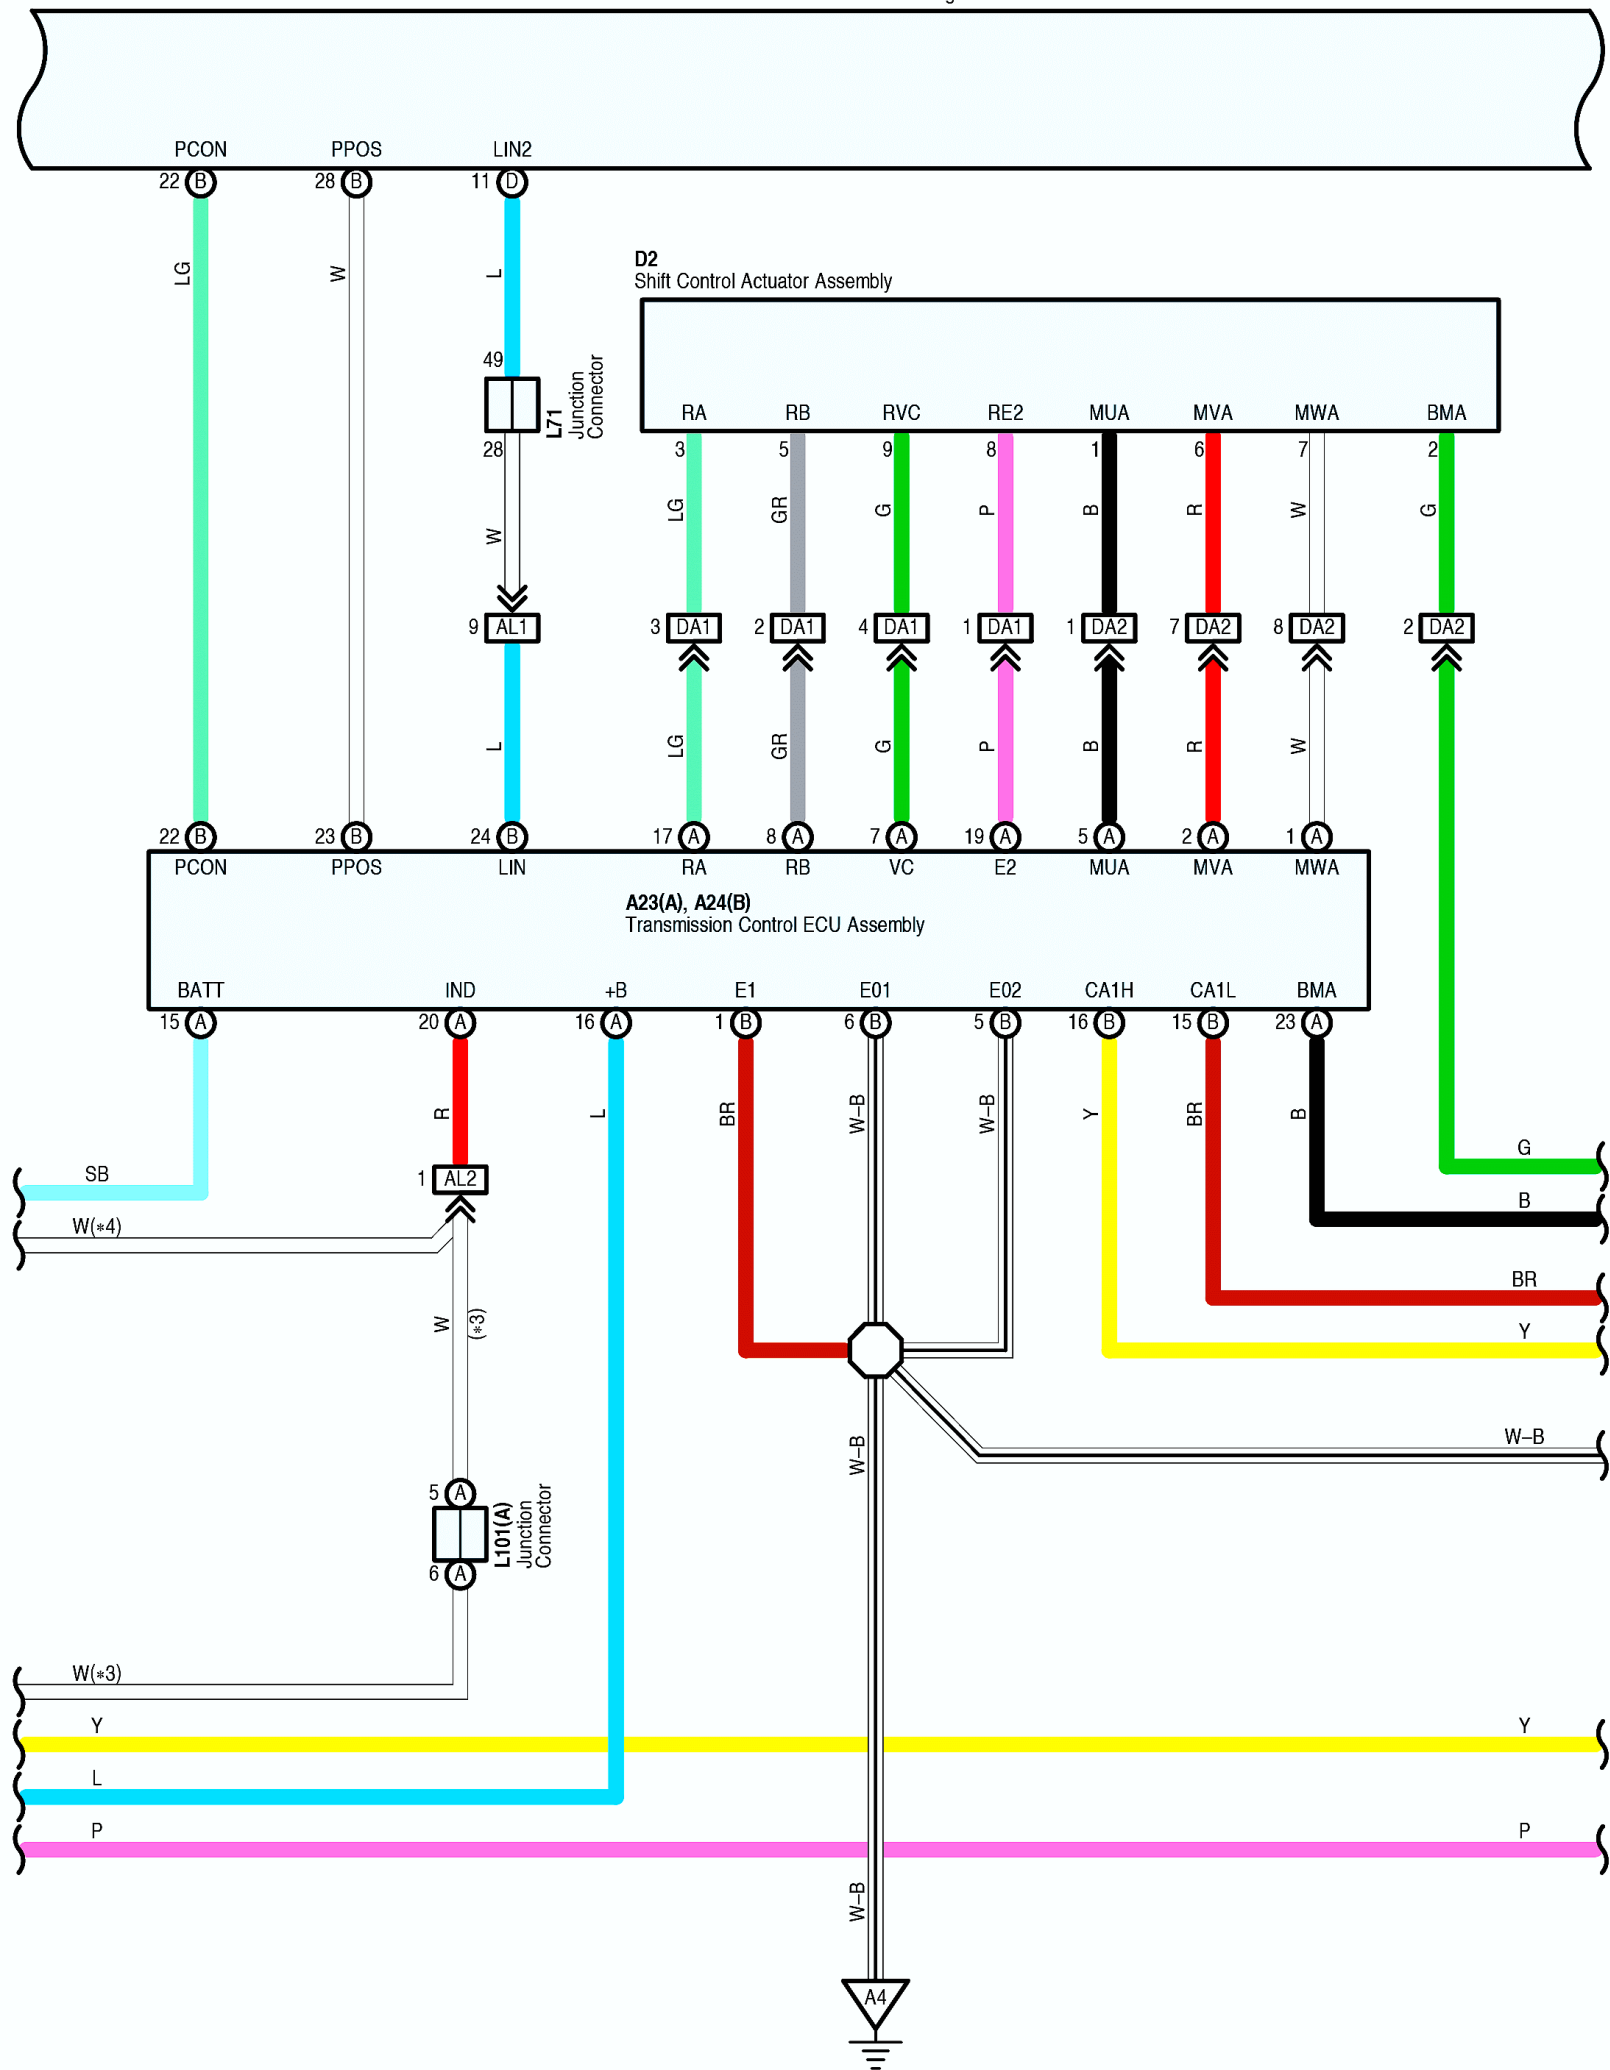

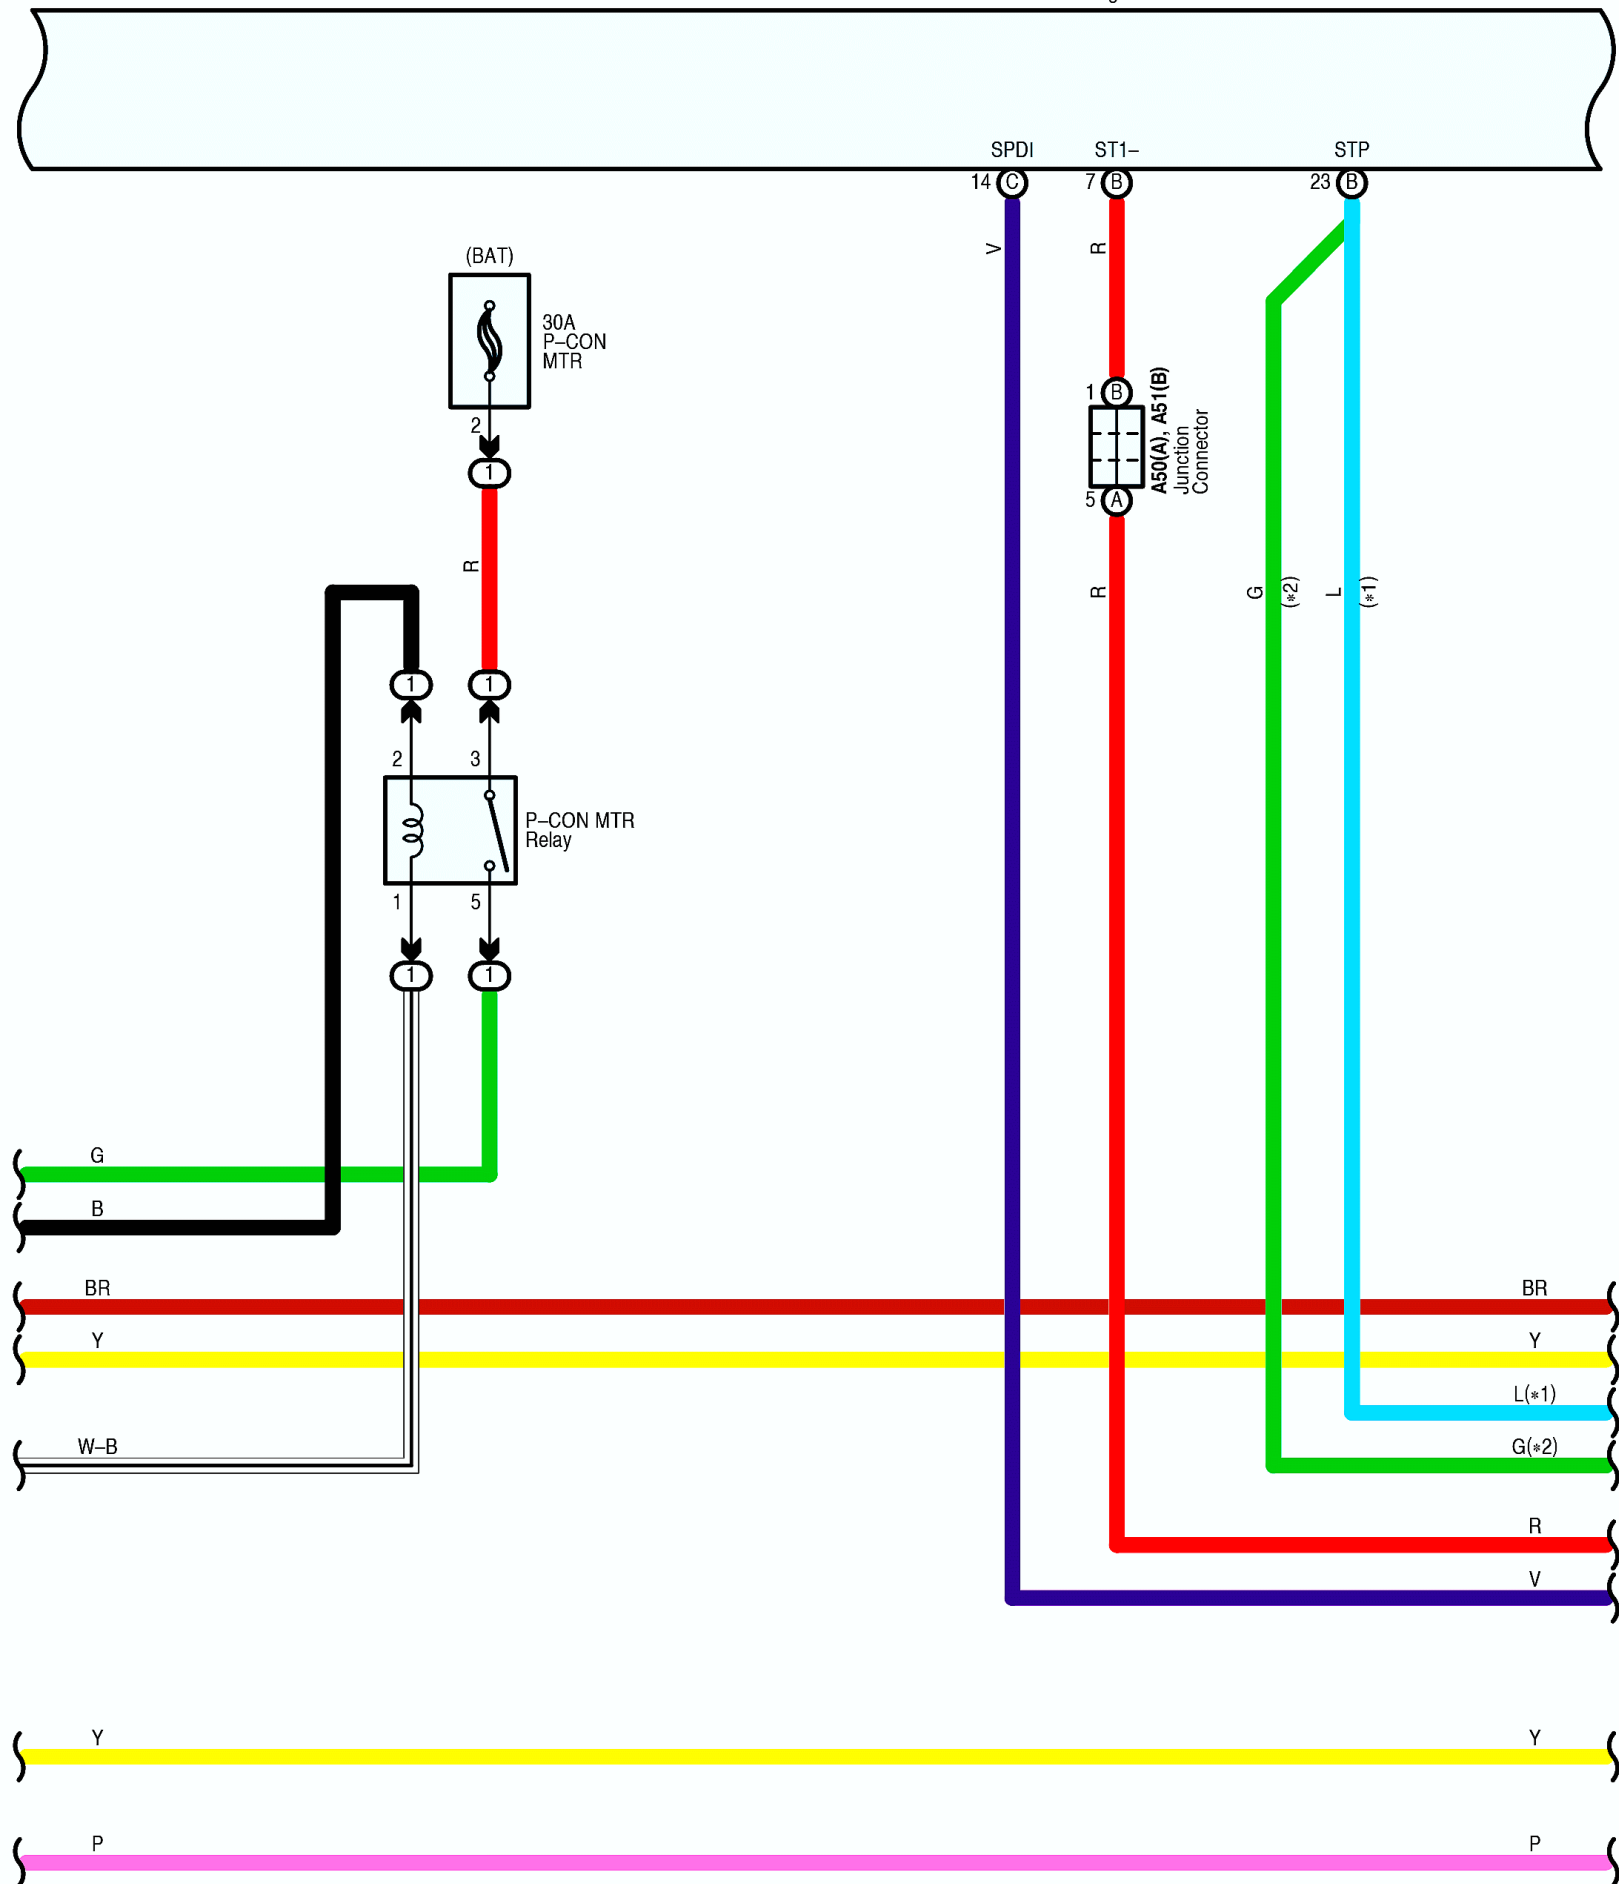



- * 1 : w/ Dynamic Radar Cruise Control
- * 2 : w/o Dynamic Radar Cruise Control
- * 3 : w/ Vehicle Proximity Notification System
- * 4 : w/o Vehicle Proximity Notification System

    
A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU

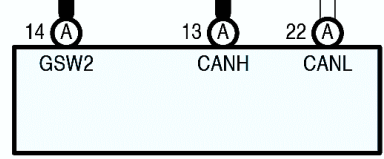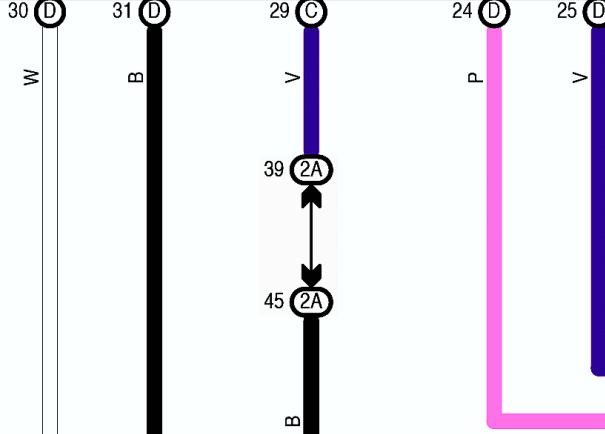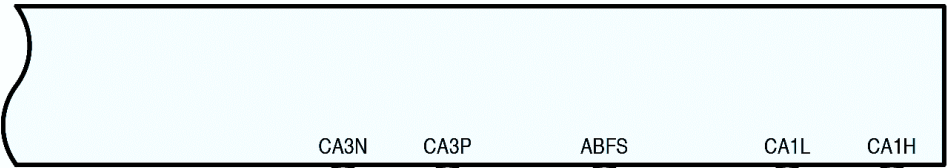


L146(A)
Airbag ECU Assembly

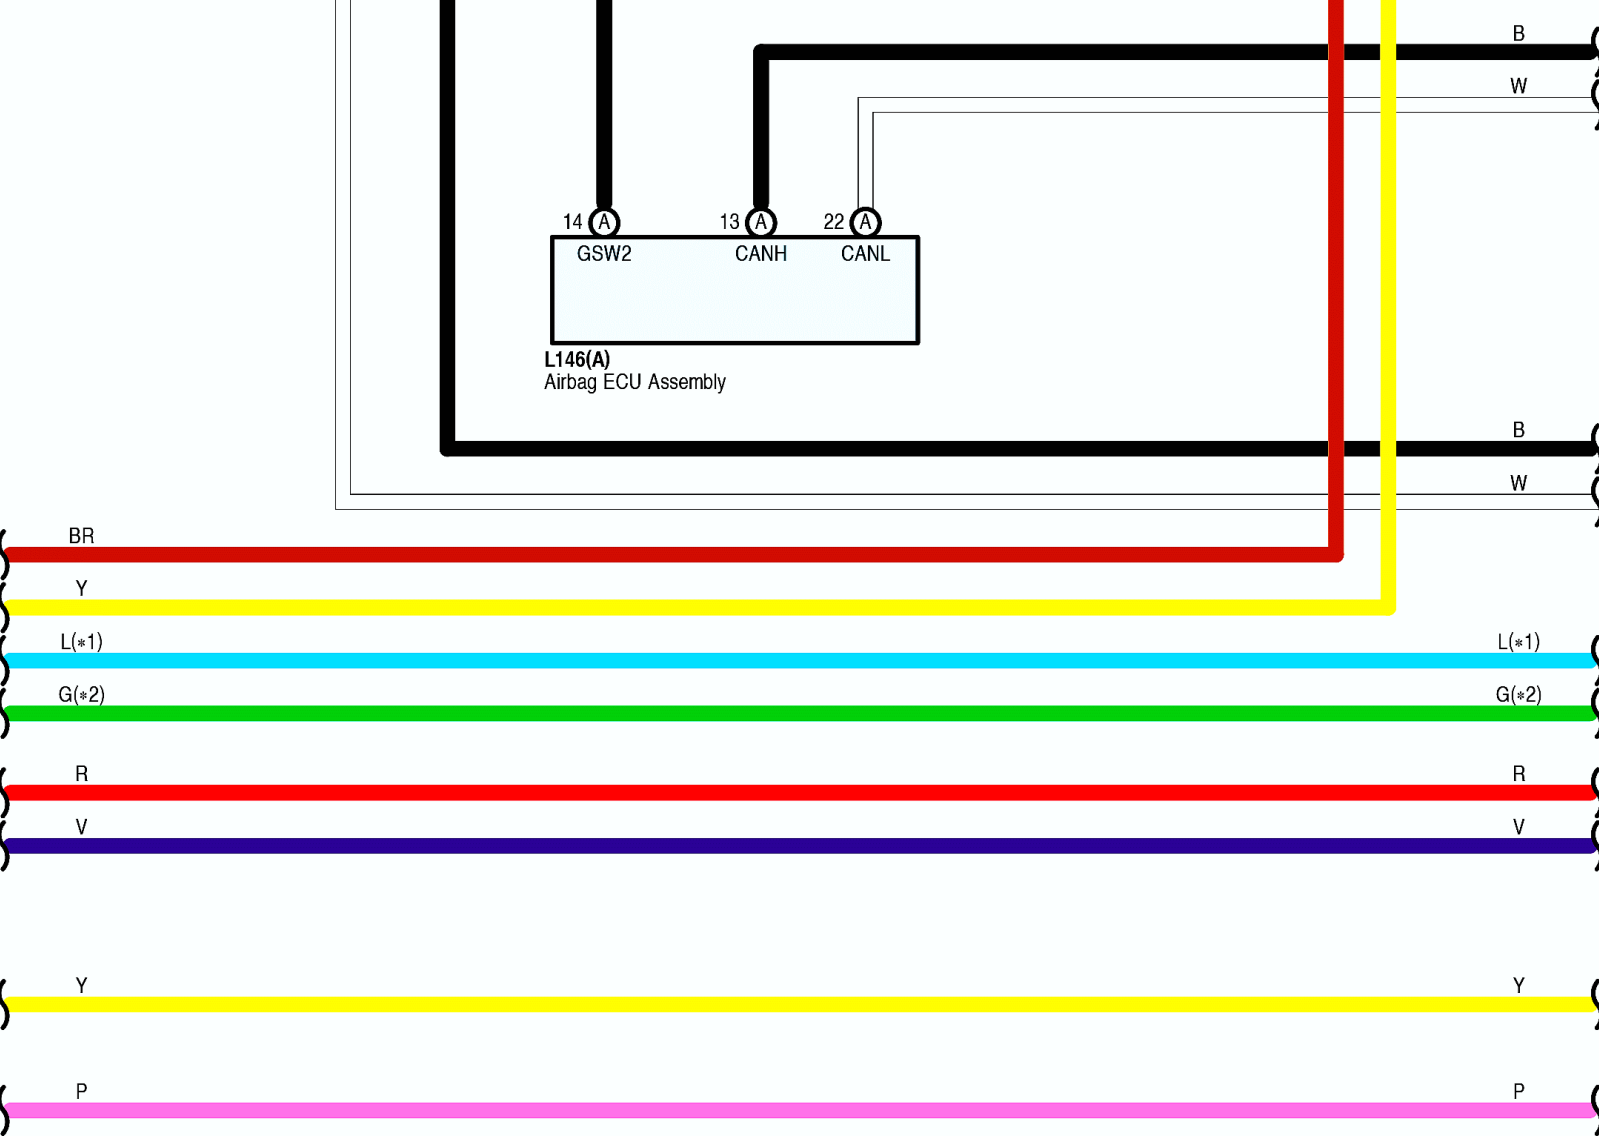 


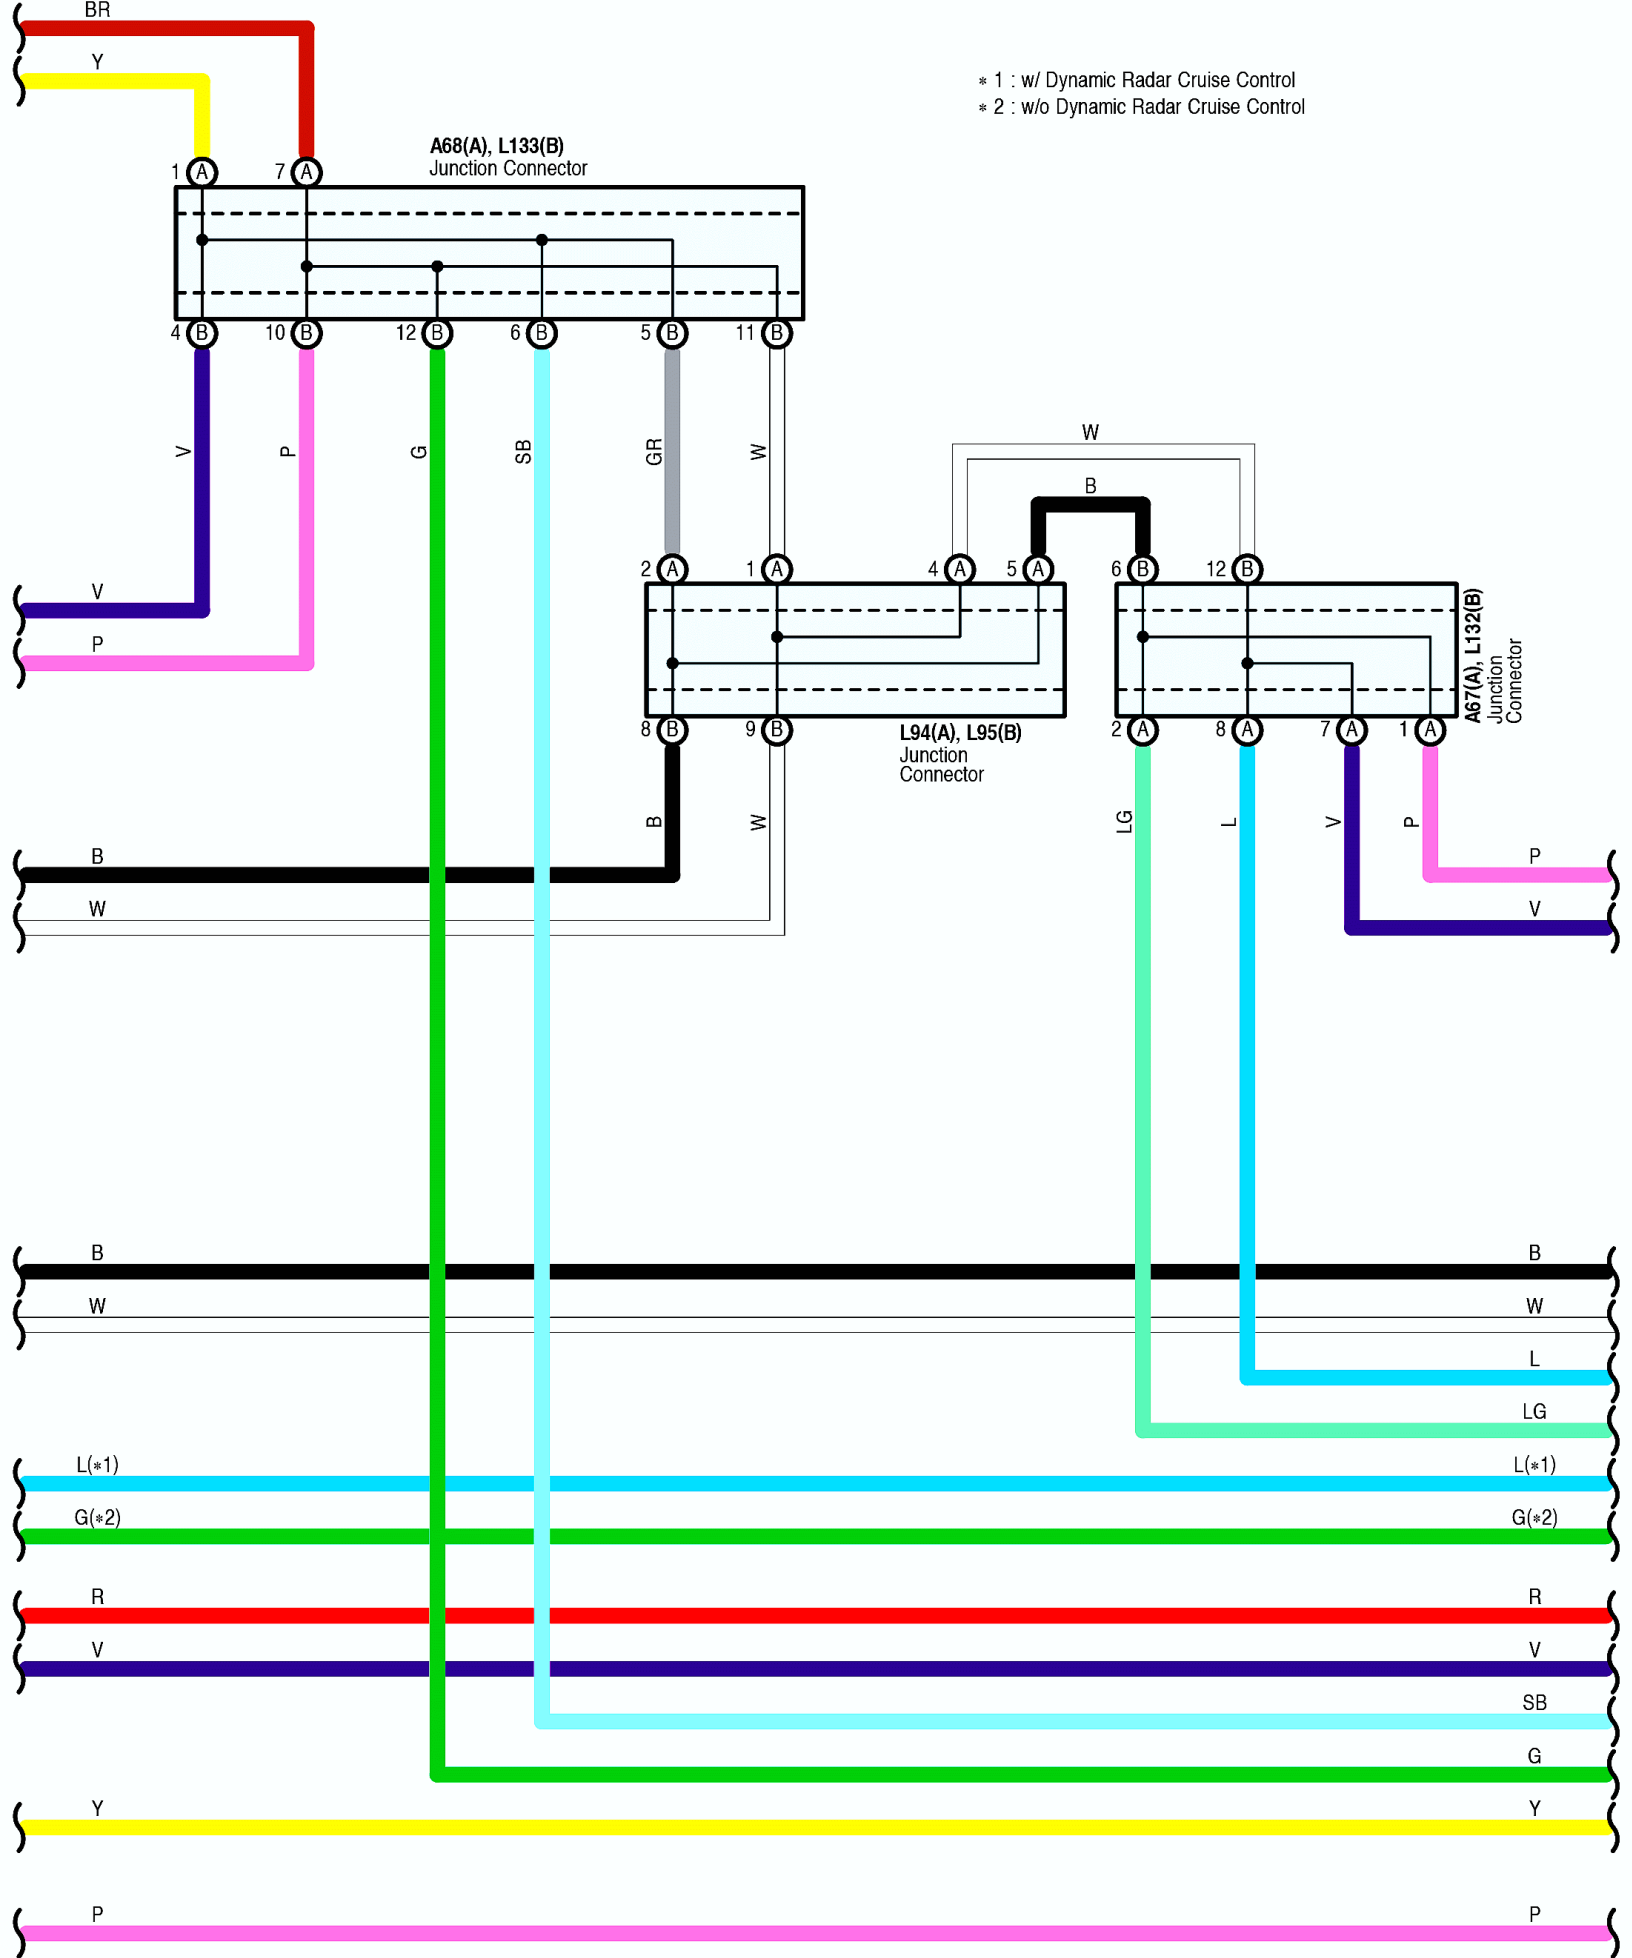 


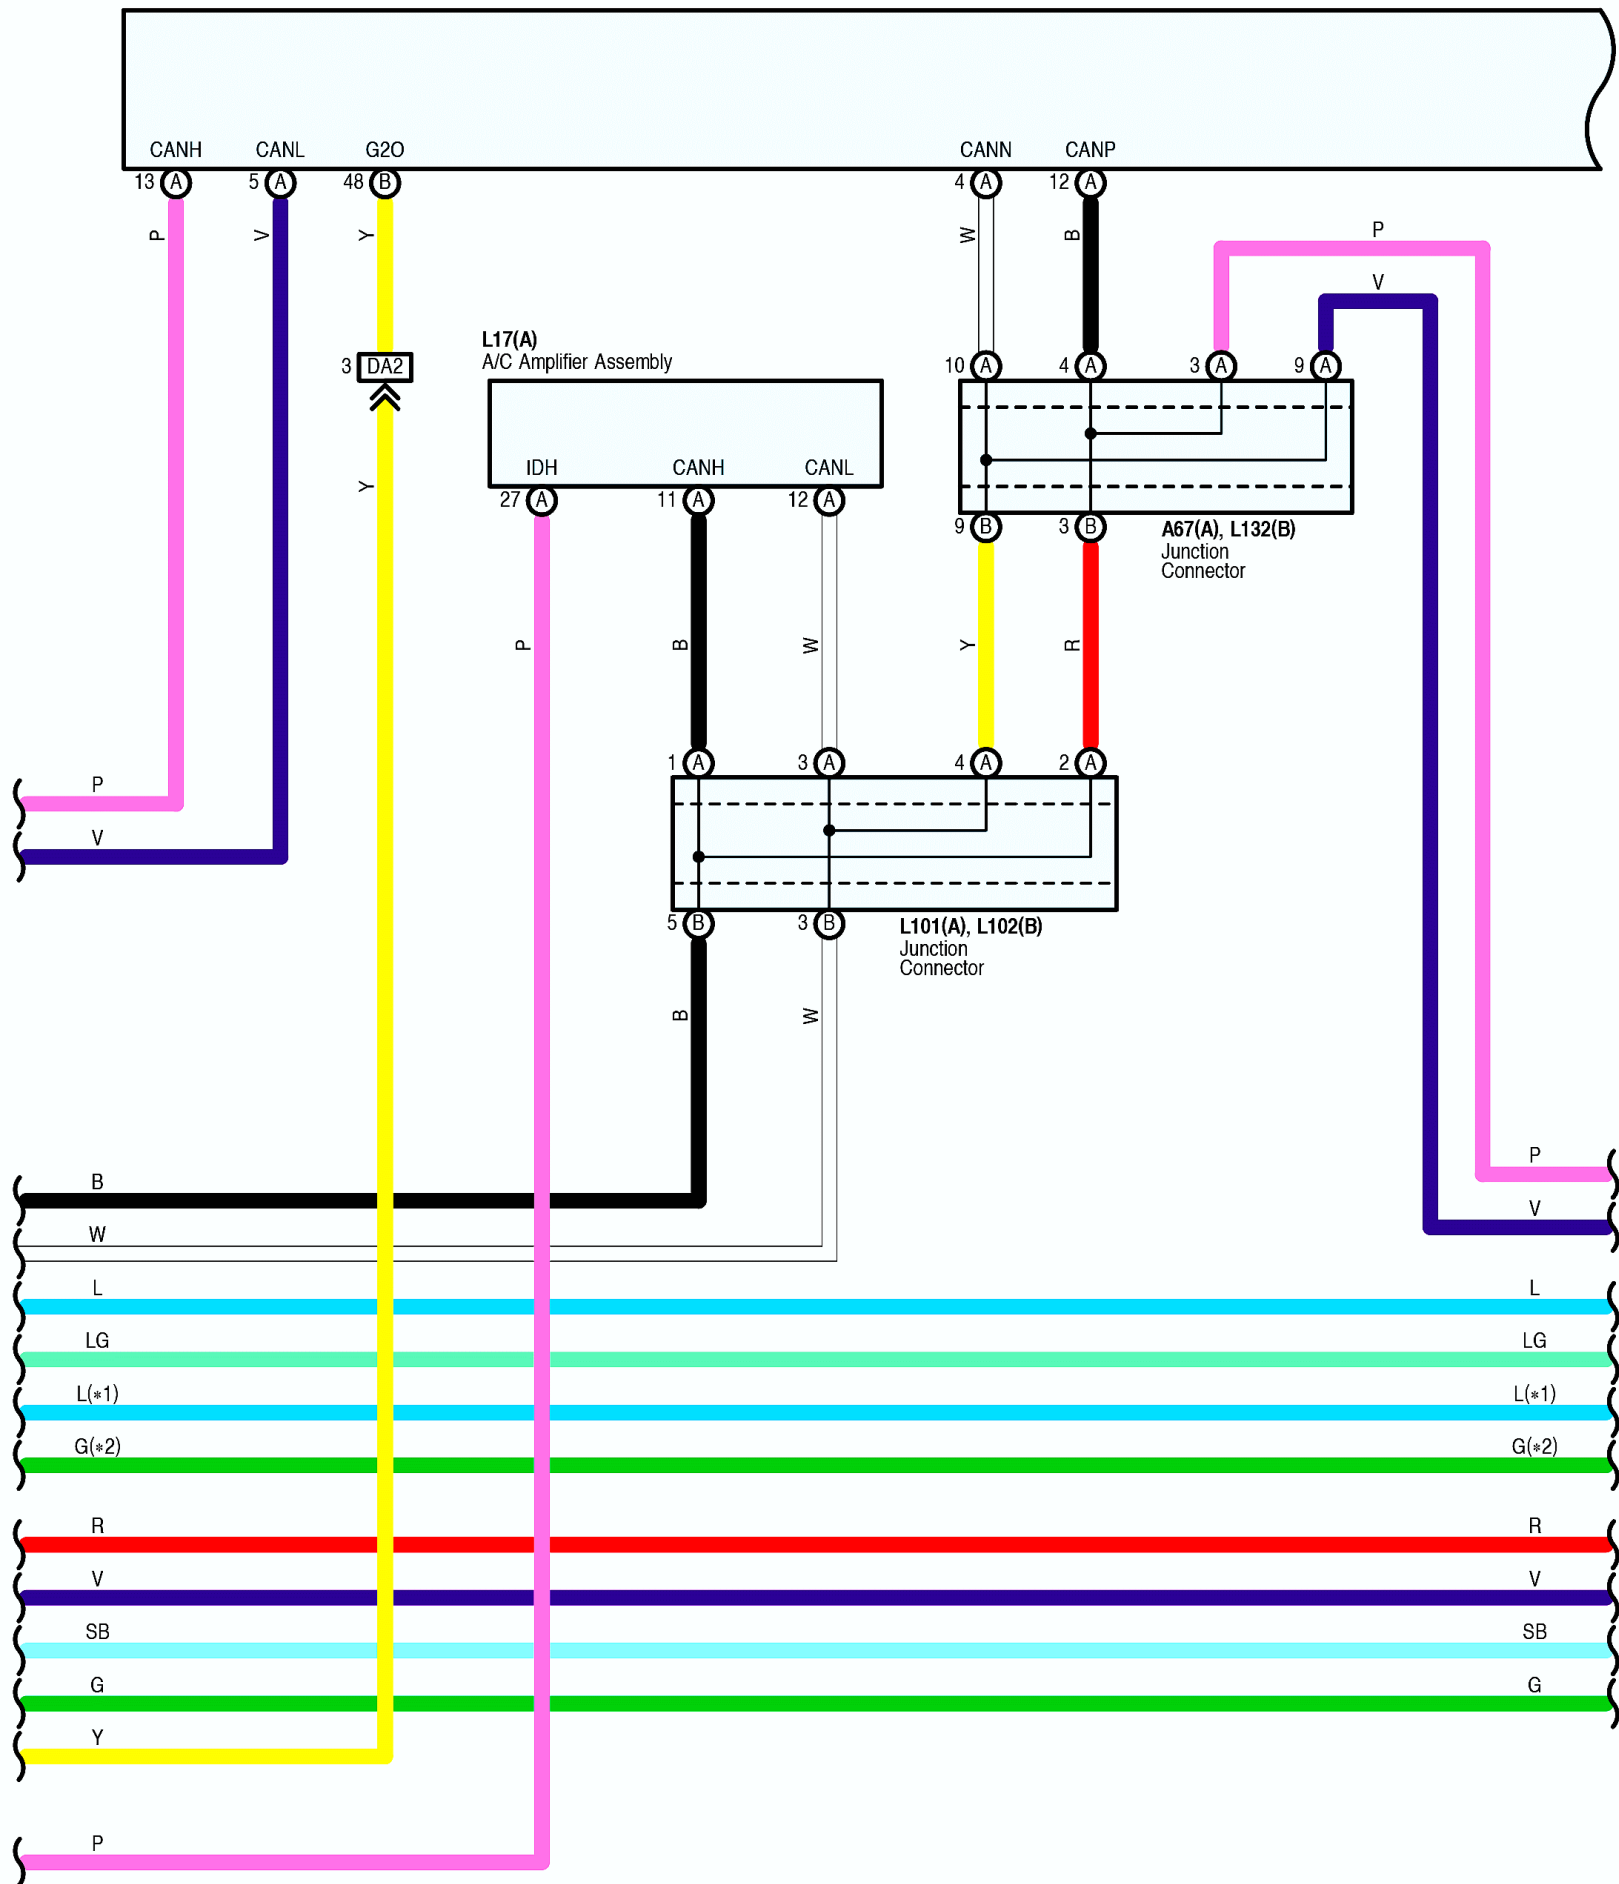 

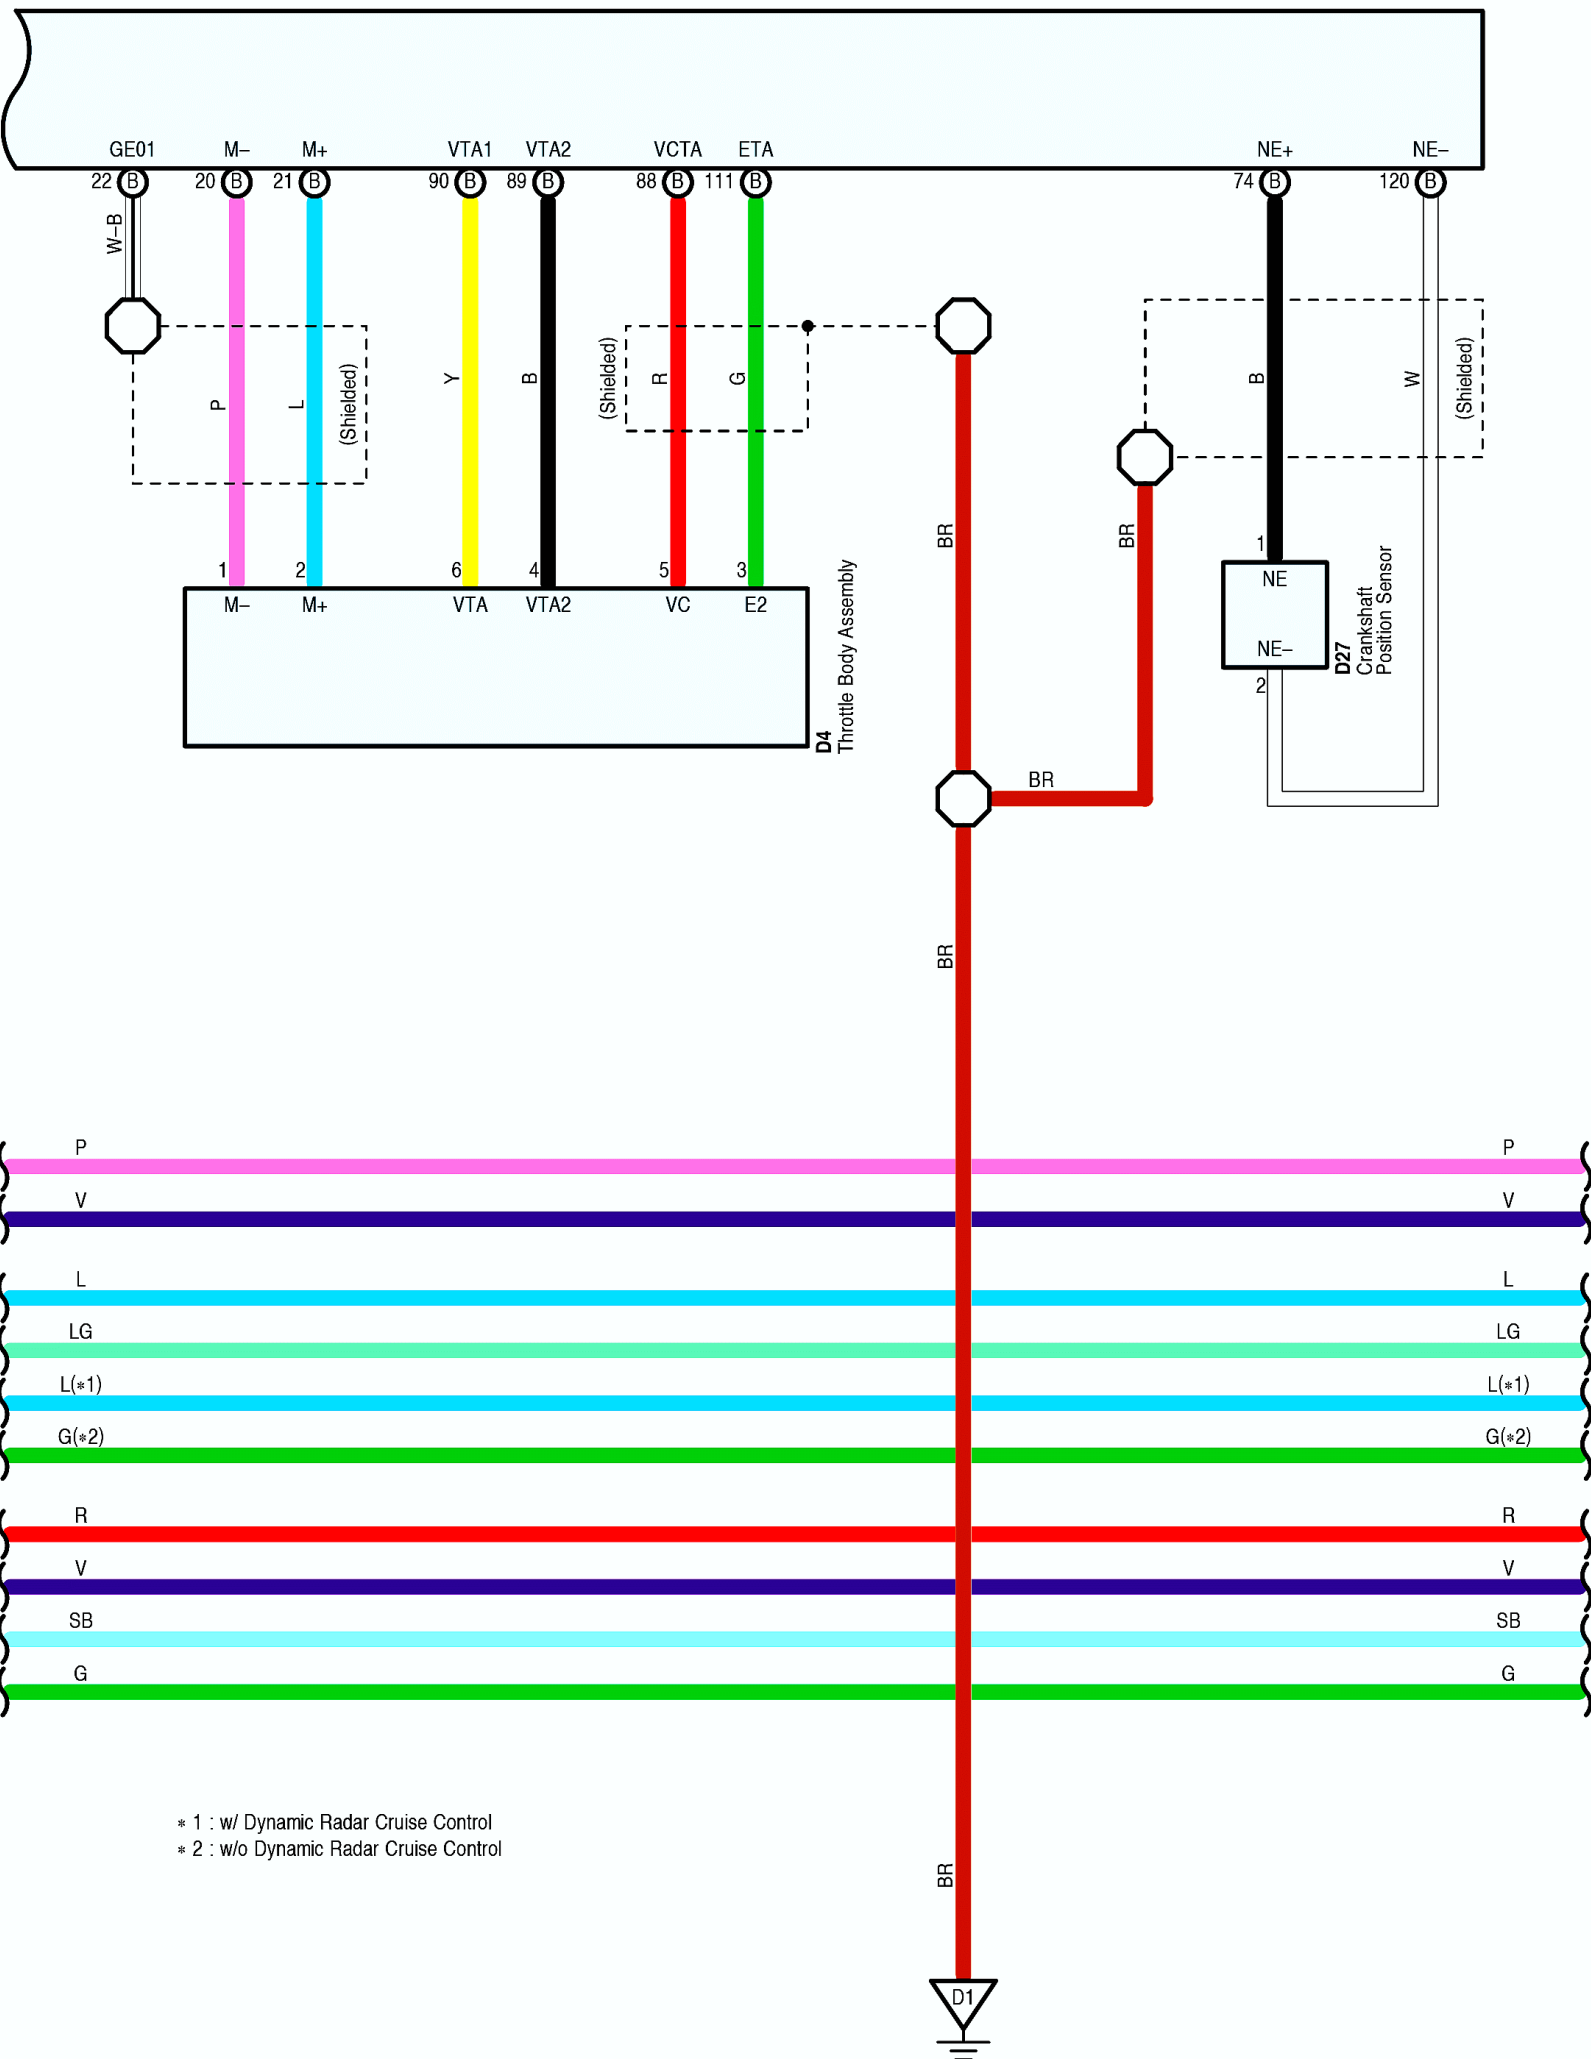 


  * 1 : w/ Dynamic Radar Cruise Control
* 2 : w/o Dynamic Radar Cruise Control

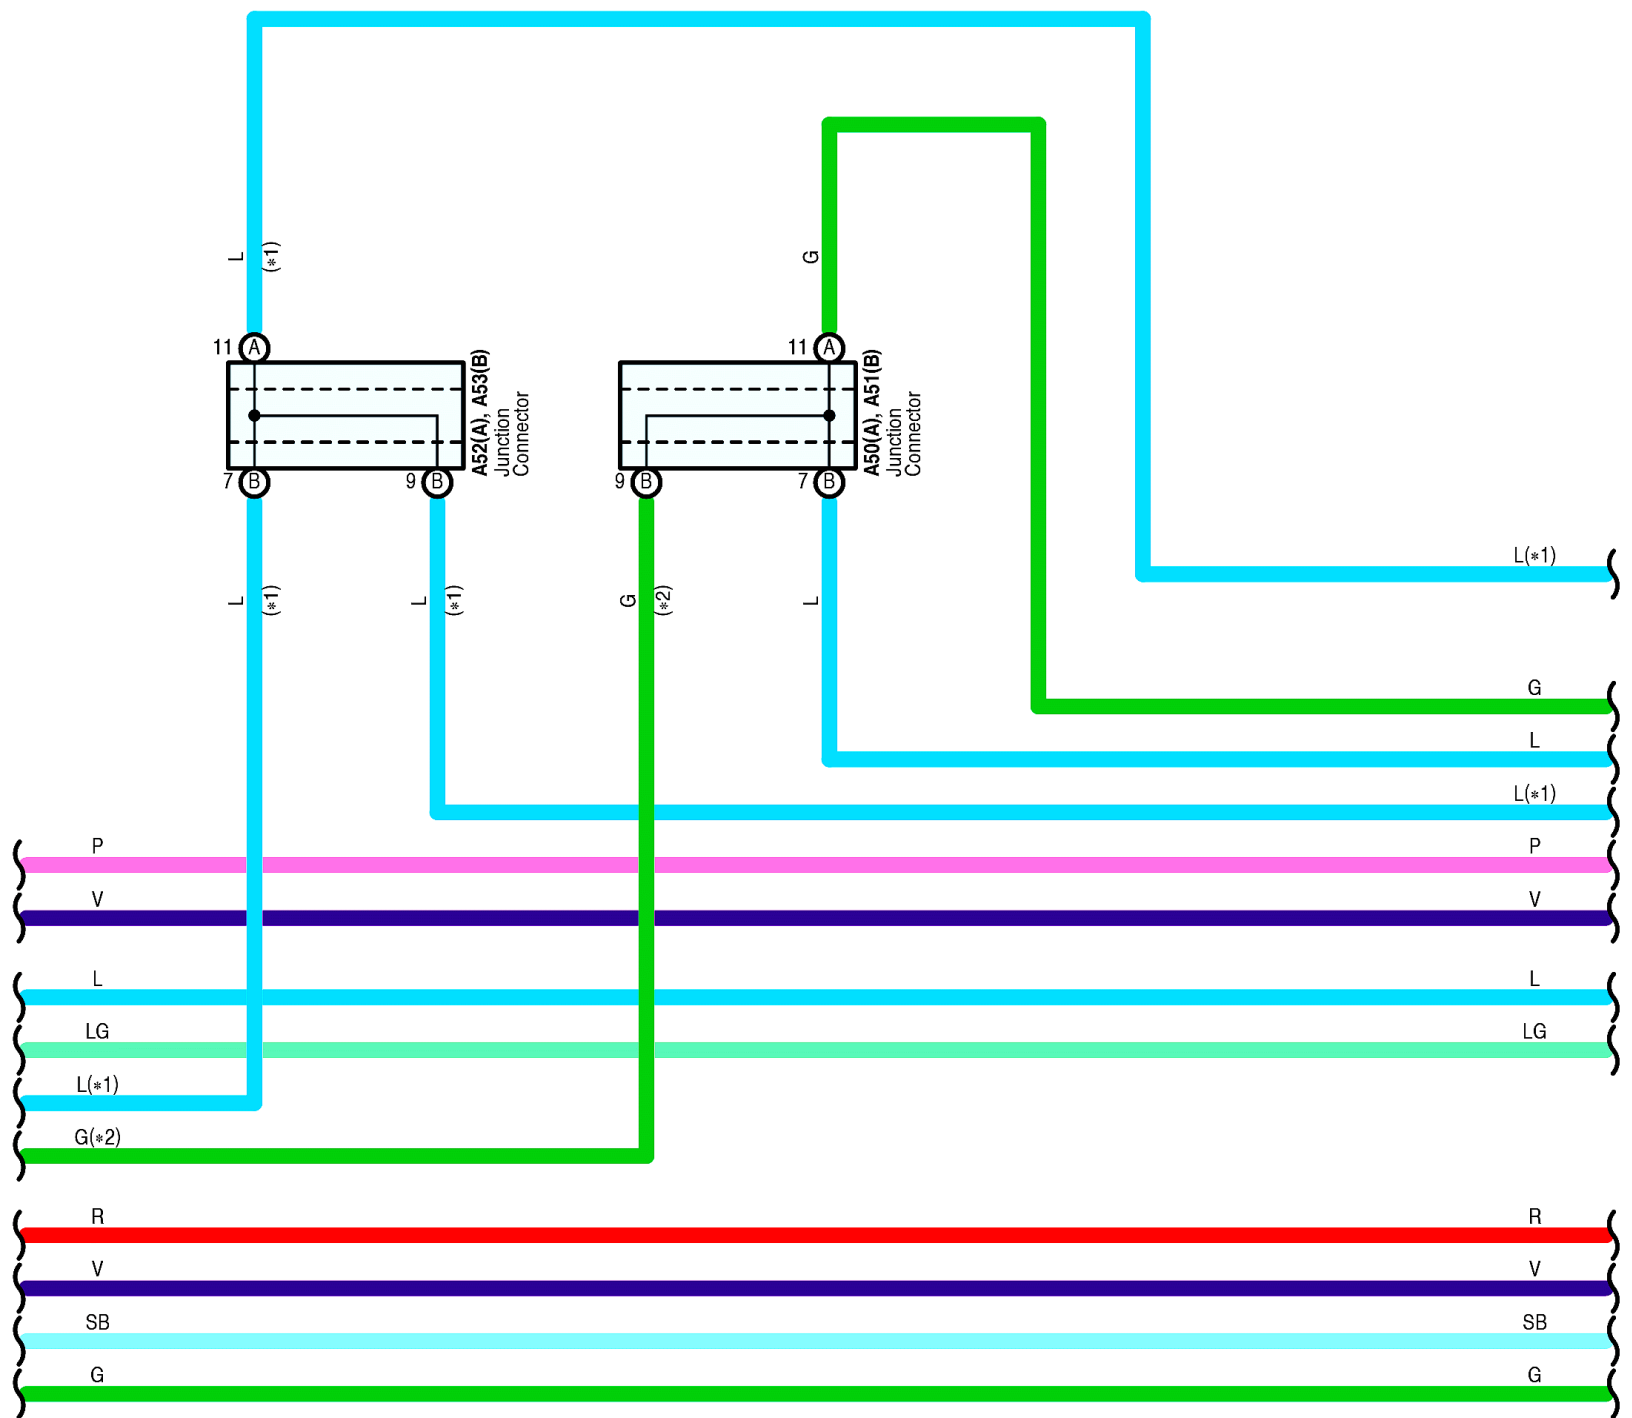


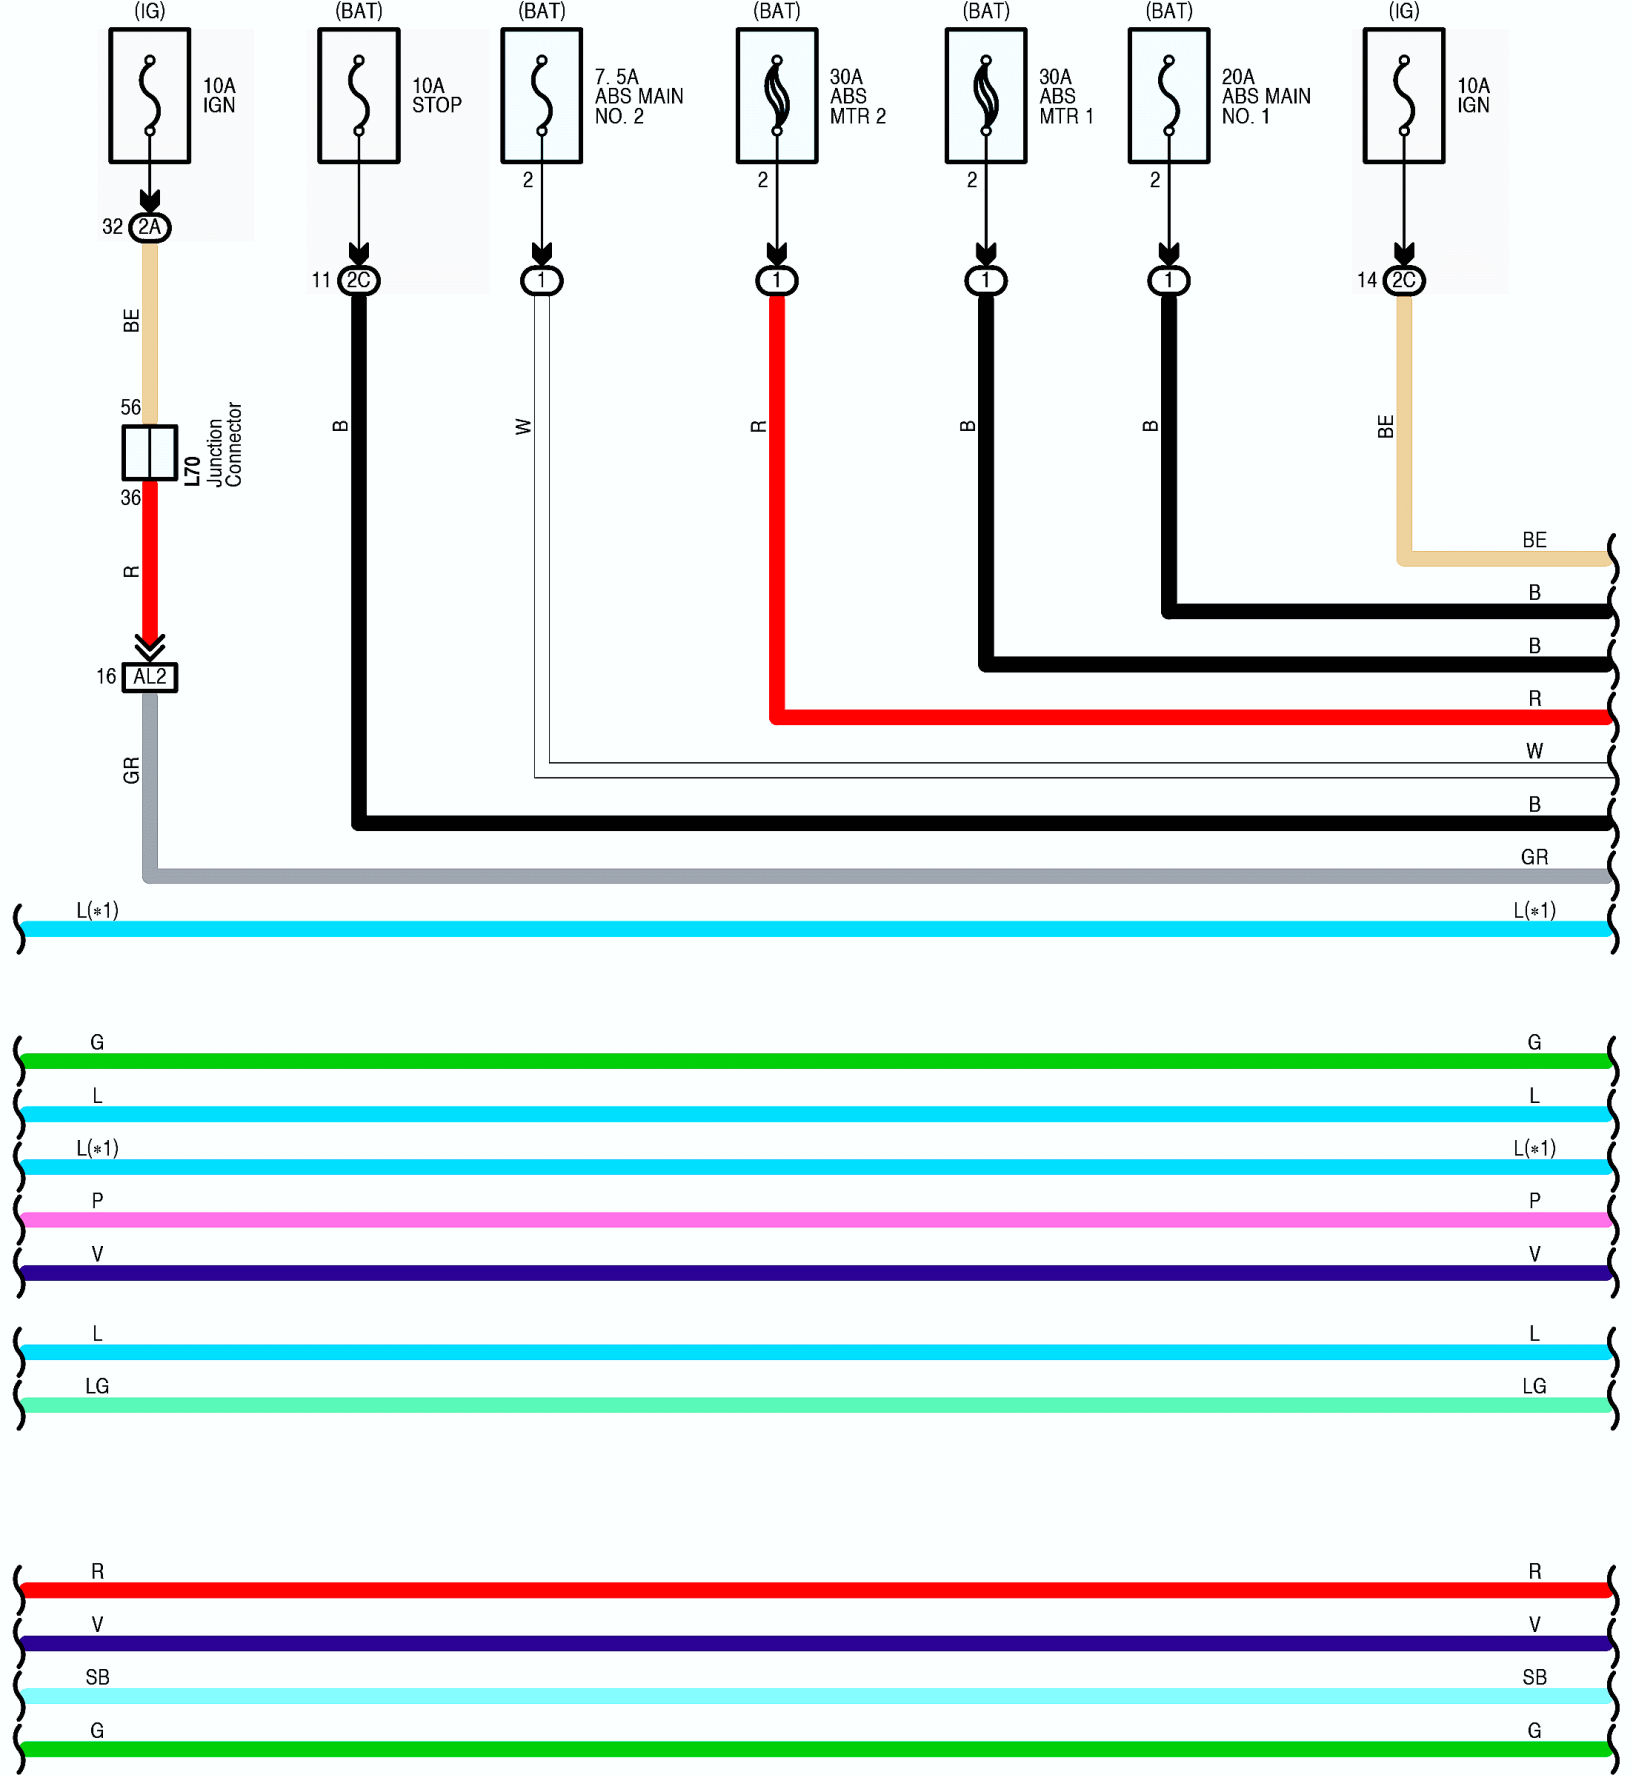

 A58
Skid Control ECU with Actuator Assembly

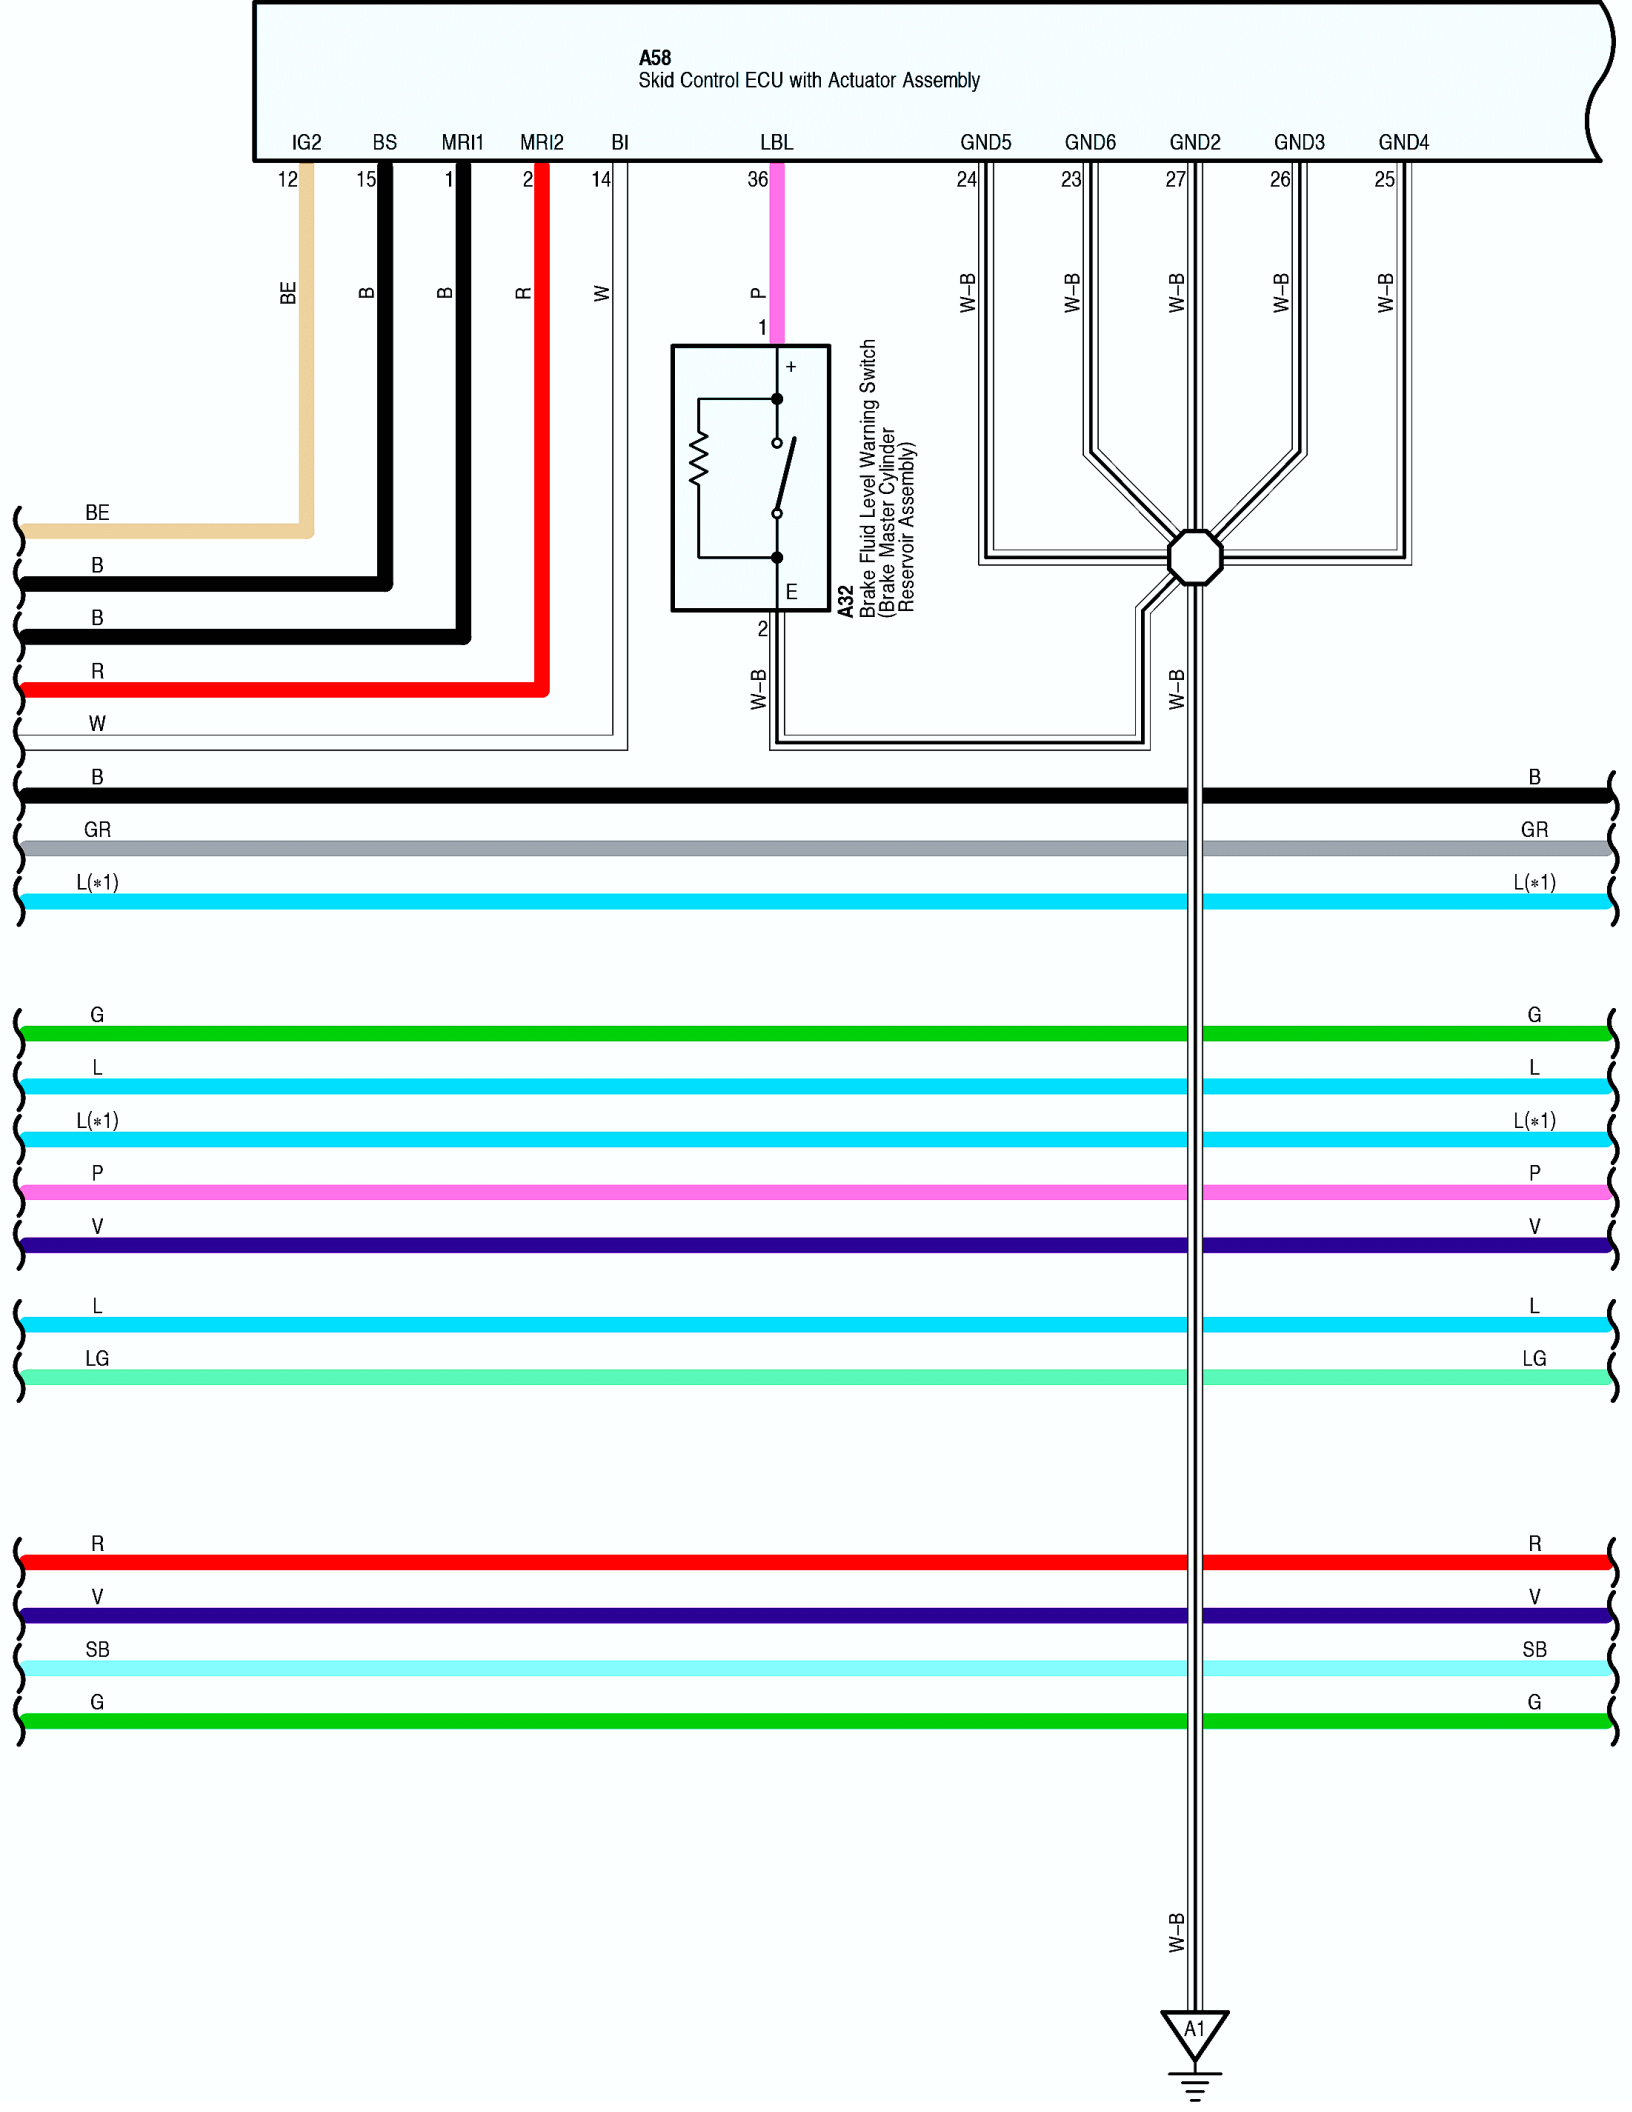


 A58
Skid Control ECU with Actuator Assembly

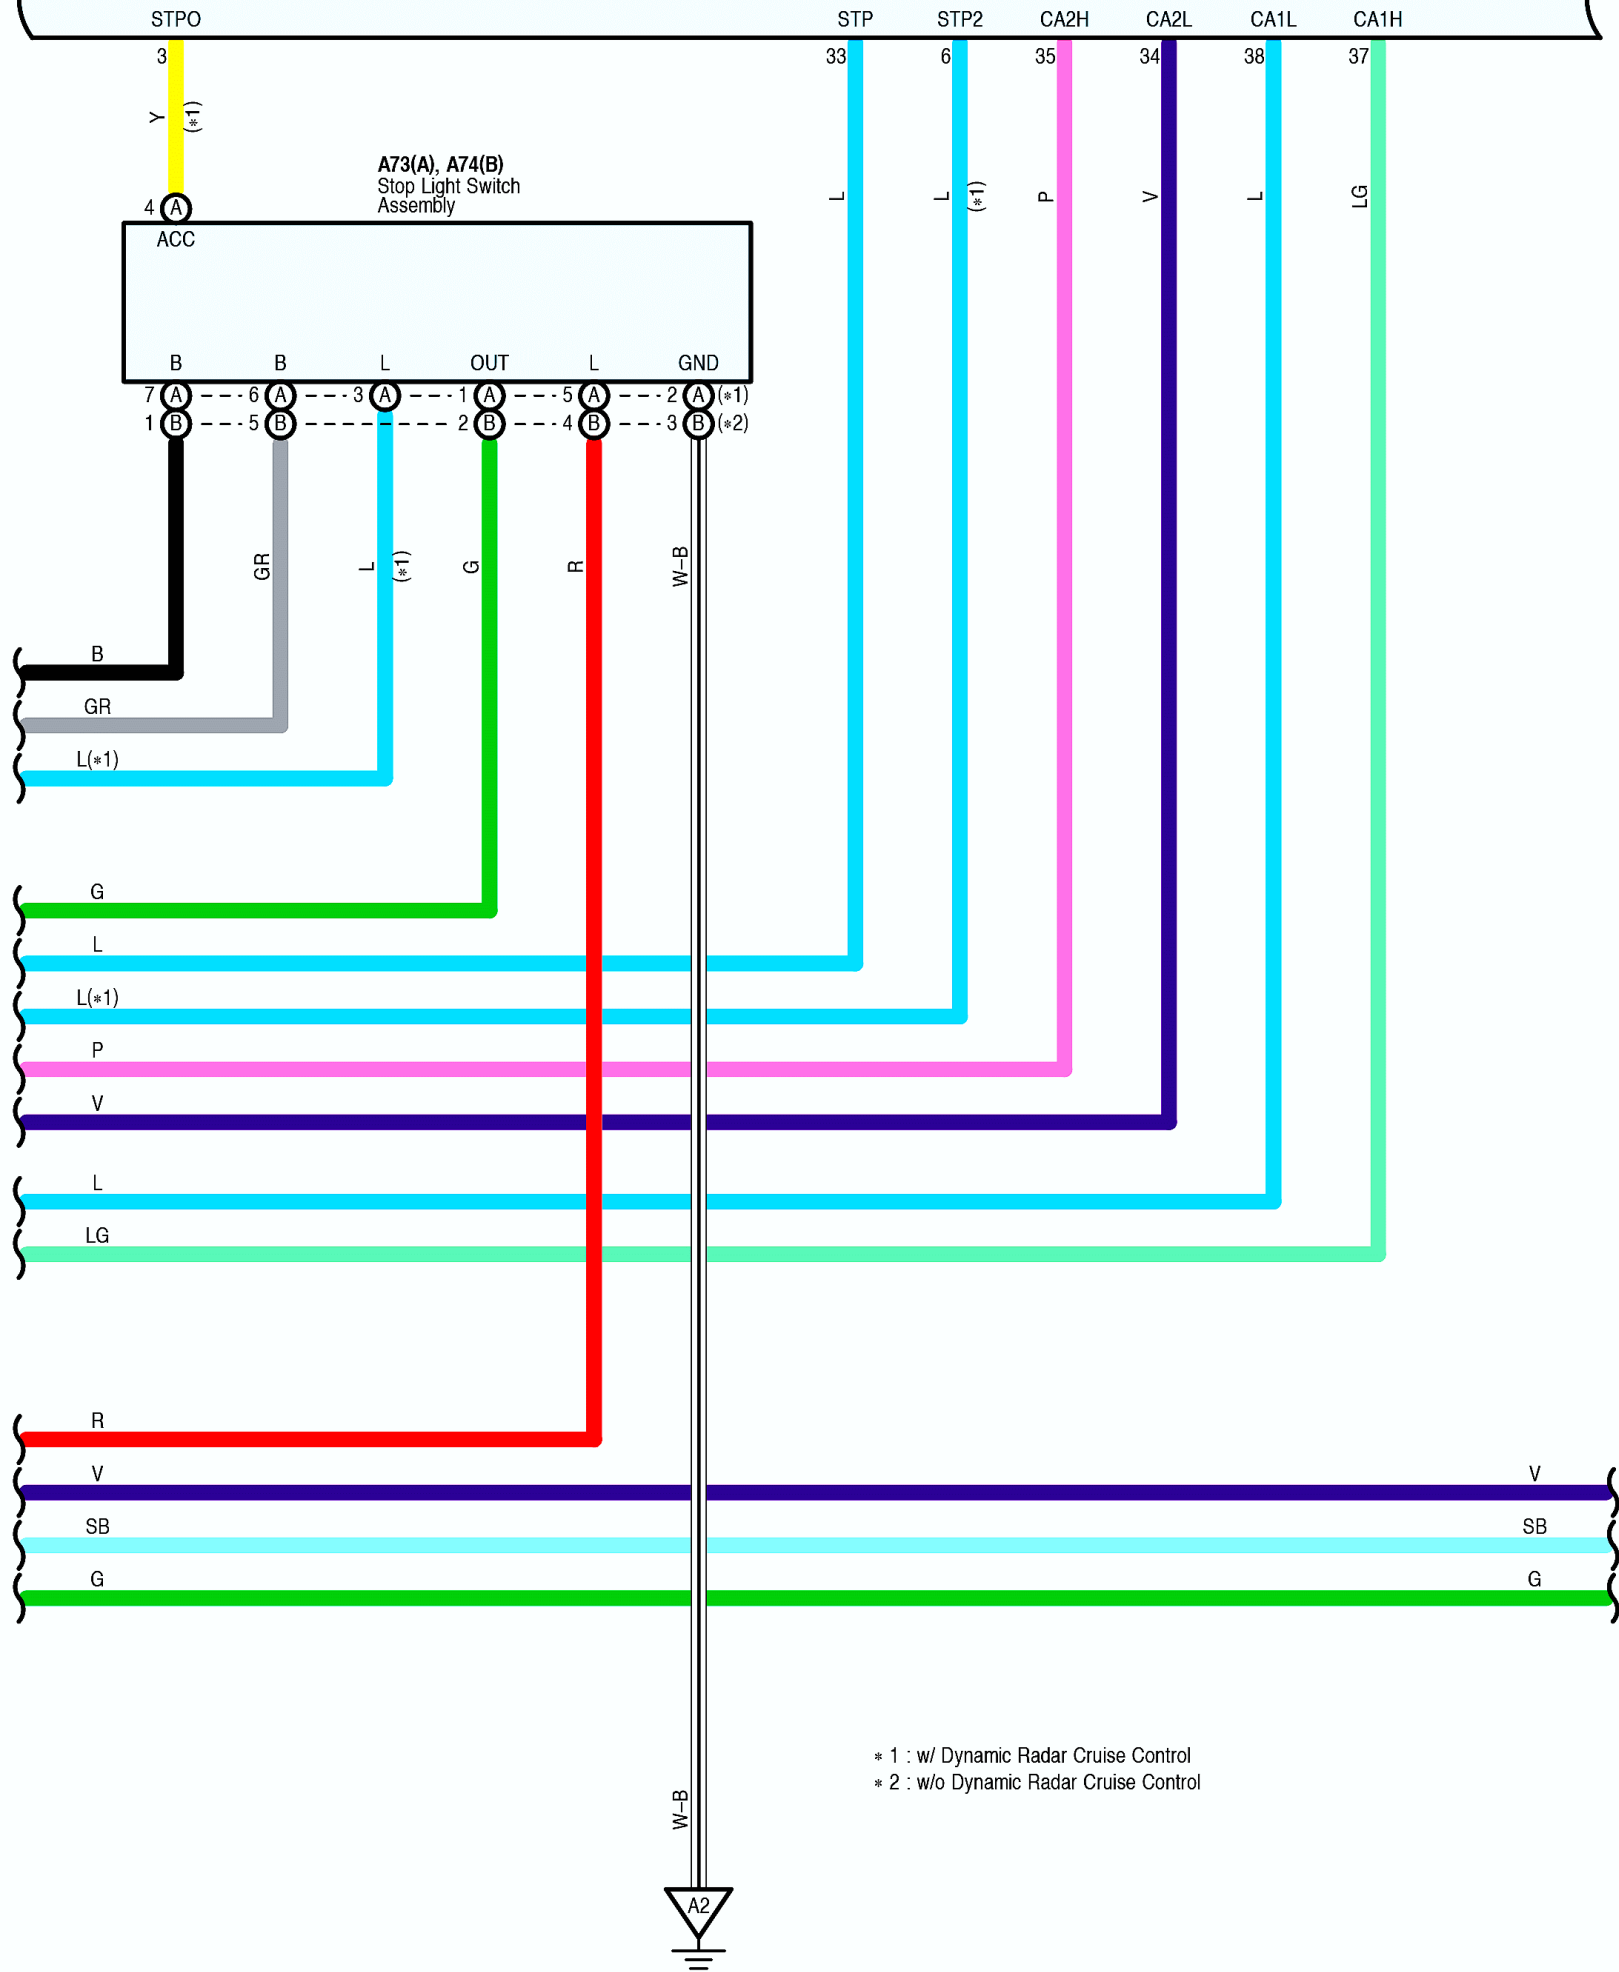

* 1 : w/ Dynamic Radar Cruise Control
* 2 : w/o Dynamic Radar Cruise Control

 A58
Skid Control ECU with Actuator Assembly

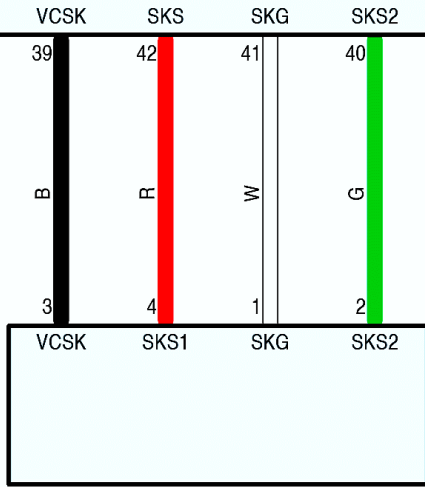

A30
Brake Pedal Stroke Sensor Assembly

GND

W

8

BR

BR

A3

W-B

A56
Junction
Connector

MRO2

B

2 (B)

BM2

M

1 (B)

BR

BR

A3

W-B

MRO1

B

1 (A)

BM1

W-B

 
2 (A)

W-B

W-B

A4

W-B

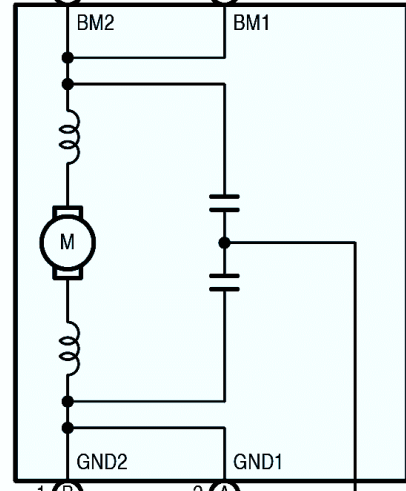

A17(A), A18(B)
Brake Booster Pump Assembly

V

SB

G

V

SB

G

