


## FRONT FOG LIGHT, CIGAR LIGHTER, A/C PANEL INDICATOR

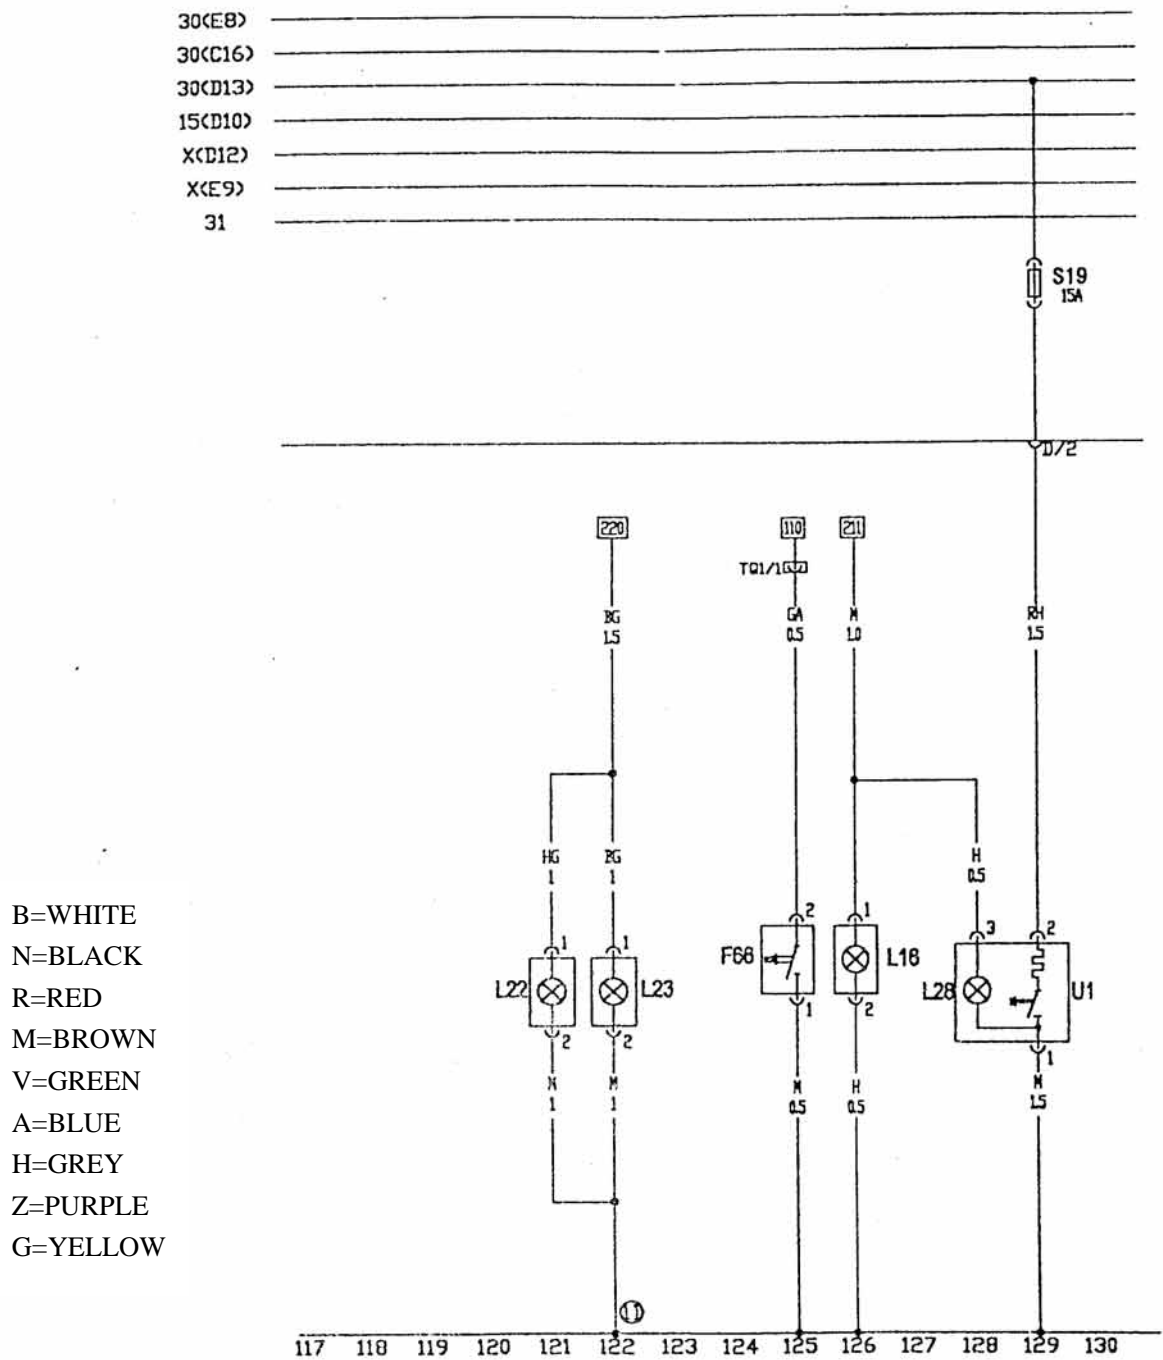

L16 A/C Control Panel Indicator

L22 Left Front Fog Light

L23 Right Front Fog Light


F66 Coolant Level Switch

L28 Cigar Lighter Illumination Light

U1 Cigar Lighter

11 Ground, In headlight wiring harness

# REAR WINDOW HEATING SYSTEM, DUAL PITCH HORN, A/C COMPRESSOR MAGENETIC CLUTCH

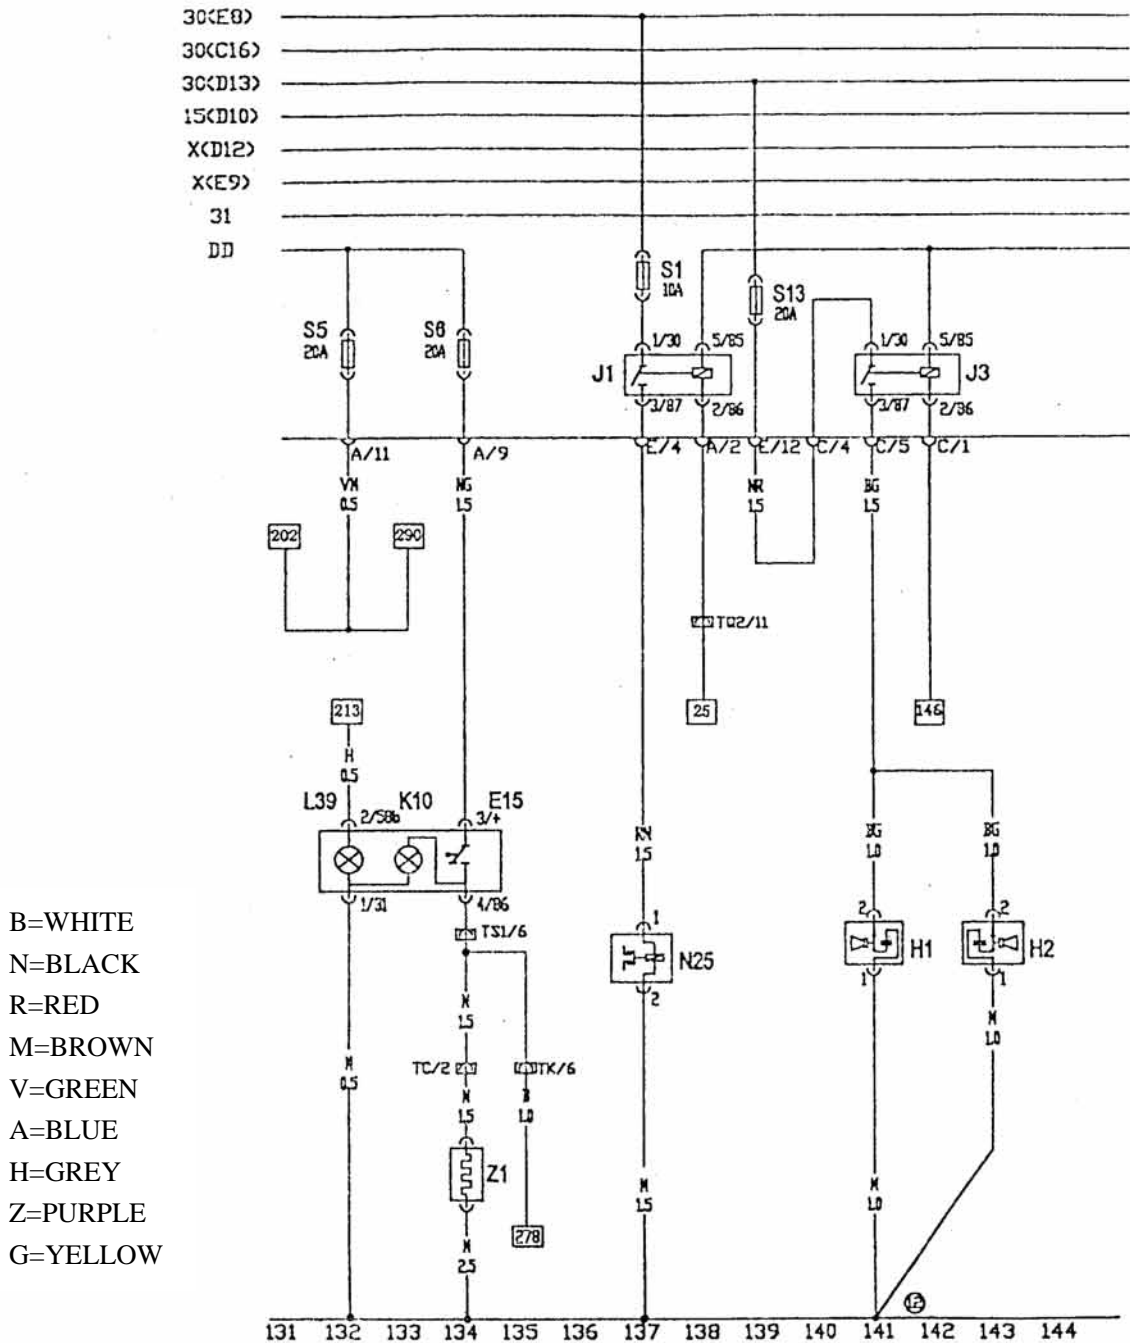

J1 Idle Up Relay (in electrical box)

J3 Dual Pitch Horn

J39 Rear Window Heating Switch Illumination Light

K10 Rear Window Heating Indicator


E15 Rear Window Heater Switch

H1(2) Dual Pitch Horn

12 Ground point, in dual tone horn wiring harness

Z1 Rear Window Heater

## WIPER, HORN BUTTON, WASHER

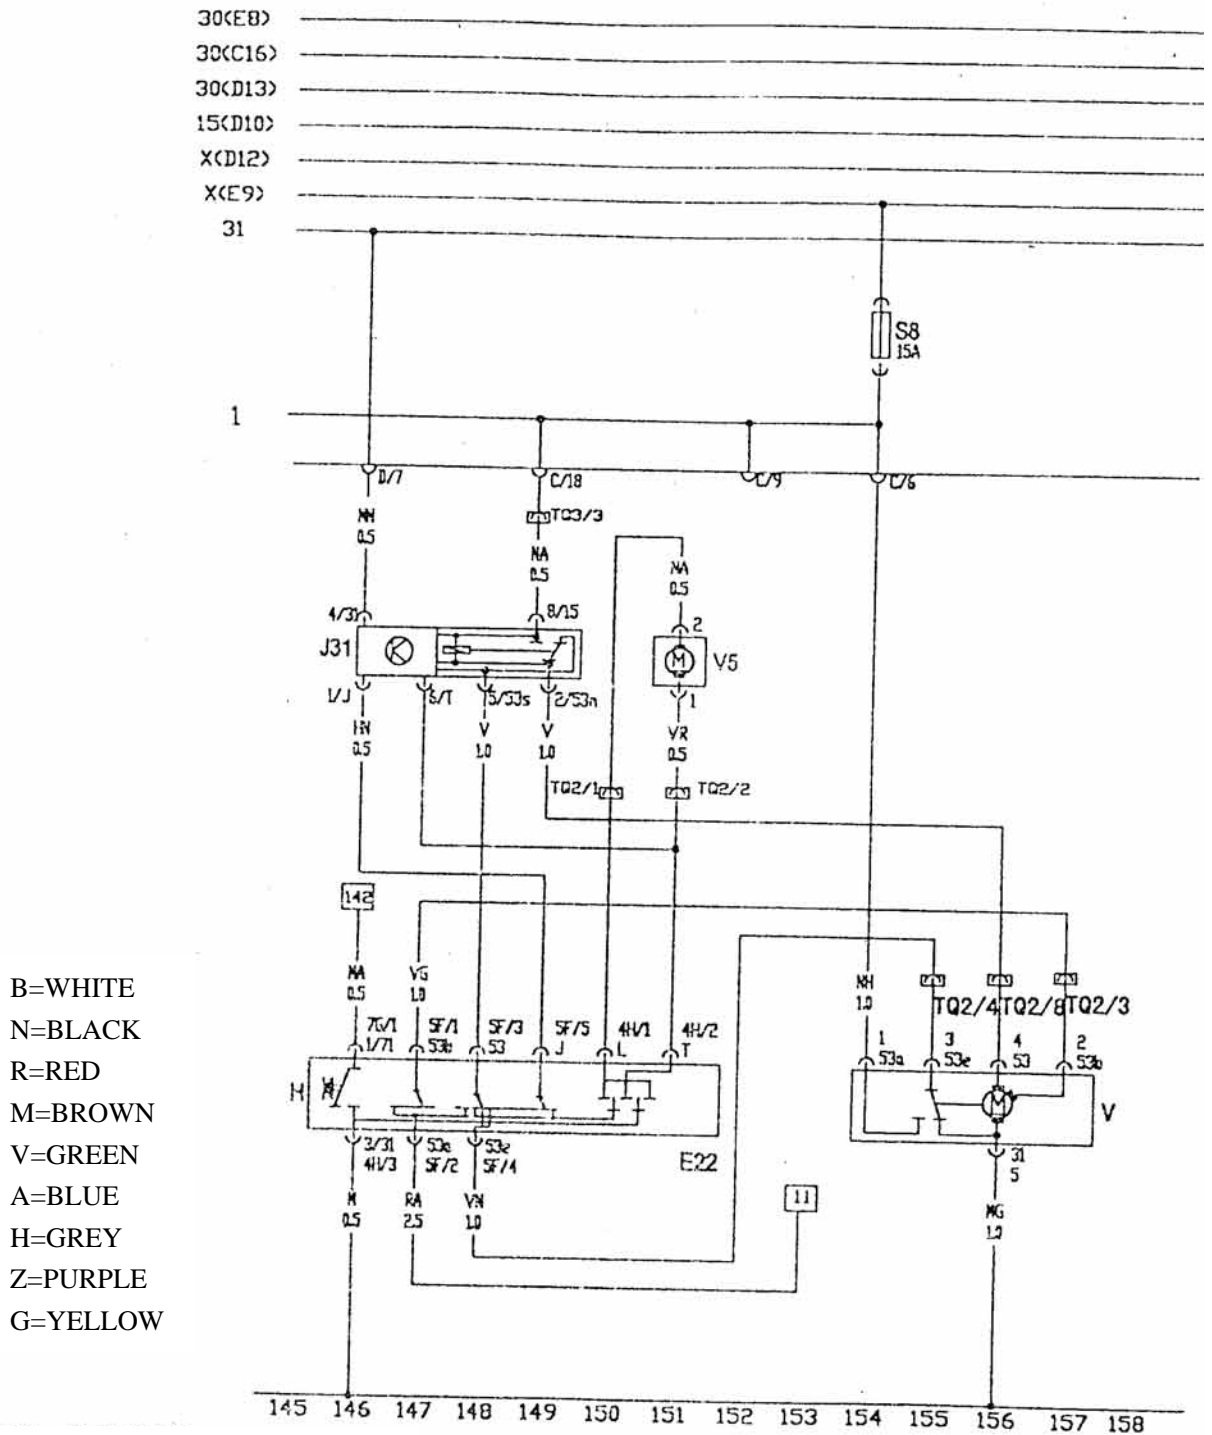


B=WHITE  
N=BLACK  
R=RED  
M=BROWN  
V=GREEN  
A=BLUE  
H=GREY  
Z=PURPLE  
G=YELLOW

E22 wiper switch  
H horn button  
J31 intermittent wiper relay  
S5 fuse 15A  
V wiper motor  
V5 washer

## HEADLIGHT, FRONT POSITION LIGHT, LIGHT RELAY


30(E8)	_____
30(C16)	_____
30(D13)	_____
15(D10)	_____
X(D12)	_____
X(E9)	_____
31	_____

B=WHITE  
 N=BLACK  
 R=RED  
 M=BROWN  
 V=GREEN  
 A=BLUE  
 H=GREY  
 Z=PURPLE  
 G=YELLOW

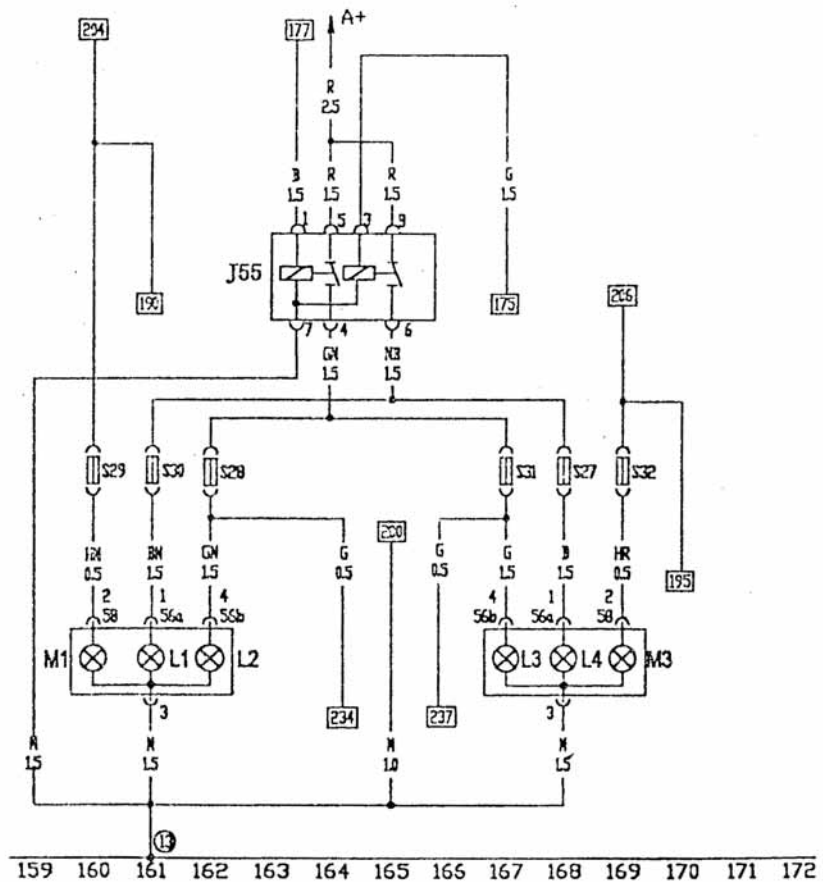


A+ Battery Positive	J55 Light Relay	13 Ground, In headlight wiring harness
L1 Left High Beam Headlight	S27 Right High Beam Headlight Fuse 10A	
L2 Left Low Beam Headlight	S28 Left Low Beam Headlight Fuse 10A	
L3 Right Low Beam Headlight	S29 Left Position Light Fuse 10A	
L4 Right High Beam Headlight	S30 Left High Beam Headlight Fuse 10A	
M1 Left Position Light	S31 Right Low Beam Headlight Fuse 10A	
M3 Right Position Light	S32 Right Position Light Fuse 10A	

## TURN LIGHT, PARKING LIGHT SWITCH, EMERGENCY WARNING RELAY

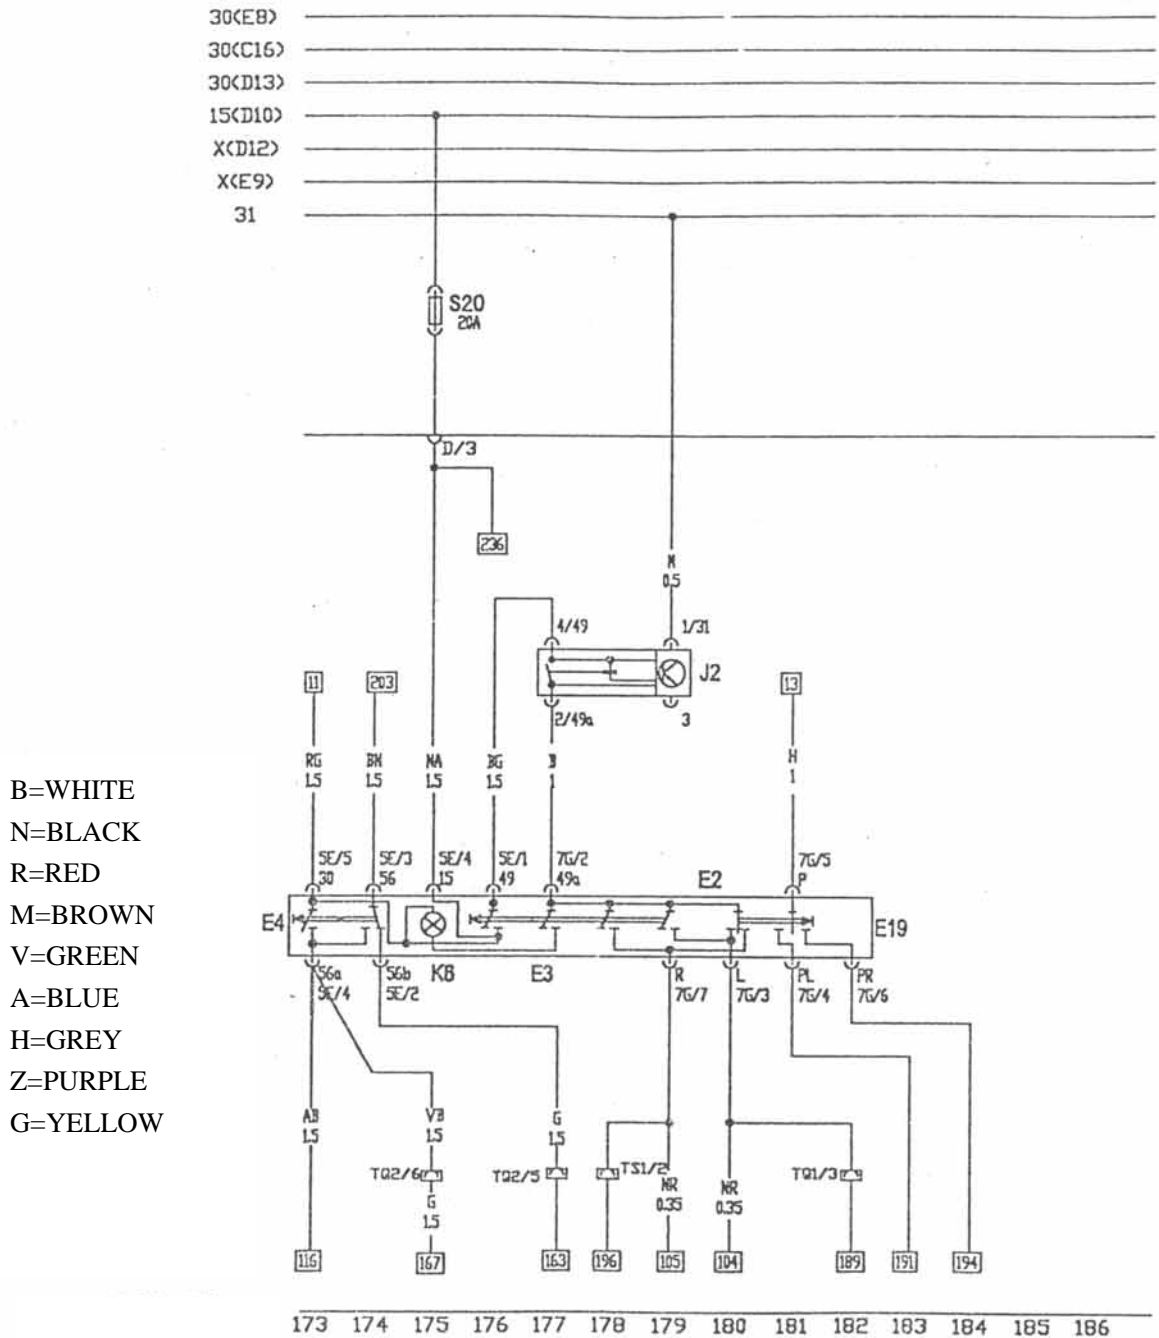

- |     |                                |
|-----|--------------------------------|
| E2  | Turn Light Switch              |
| E3  | Emergency Warning Light Switch |
| E4  | Dimmer and Turn Light Switch   |
| E19 | Parking Light Switch           |
| J2  | Emergency Warning Light Relay  |
| K6  | Emergency Warning Light        |
| S17 | Fuse 10A                       |

## TAILLIGHT, SIDELIGHT, BRAKELIGHT

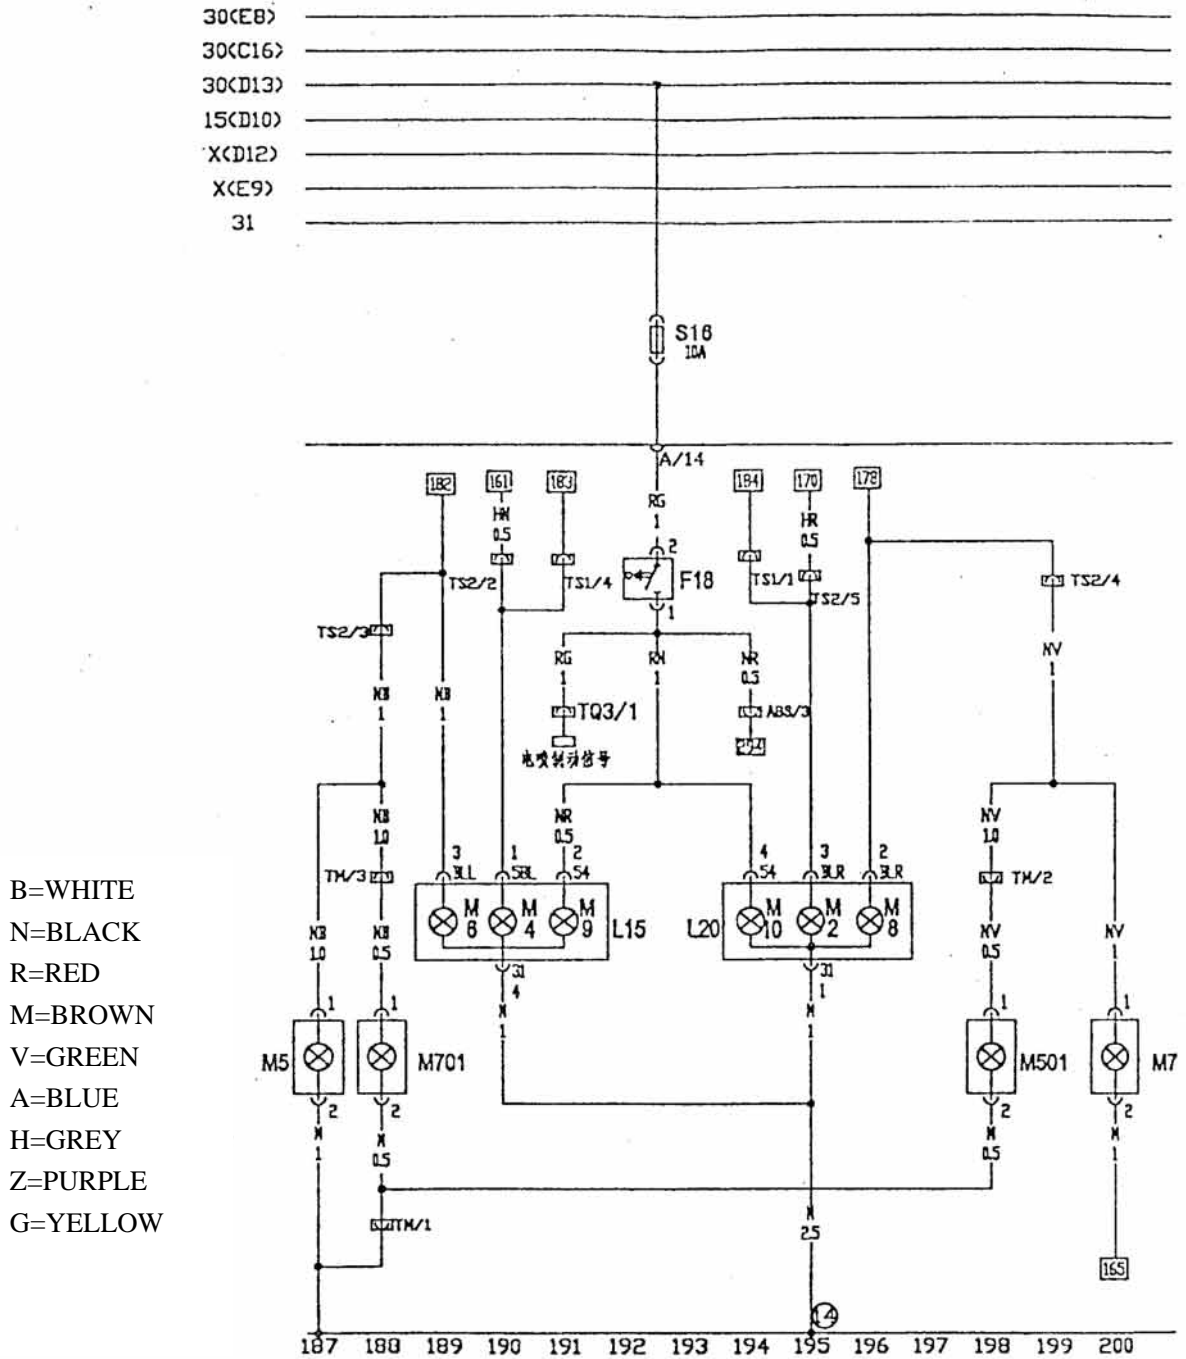

F18 brake light switch

L15 left taillight

L20 right taillight

M2 rear right position light

M4 rear left position light

M5 front left turn light

M6 rear left turn light

M7 front right turn light

M8 rear right turn light

M9 left brake light

M10 right brake light

M501 right side turn light

M701 left side turn light

S20 Fuse 10A


S7 Fuse 10A

S8 Fuse 10A

T3 3 holes connector

T1 single hole connector

14 ground in rear light

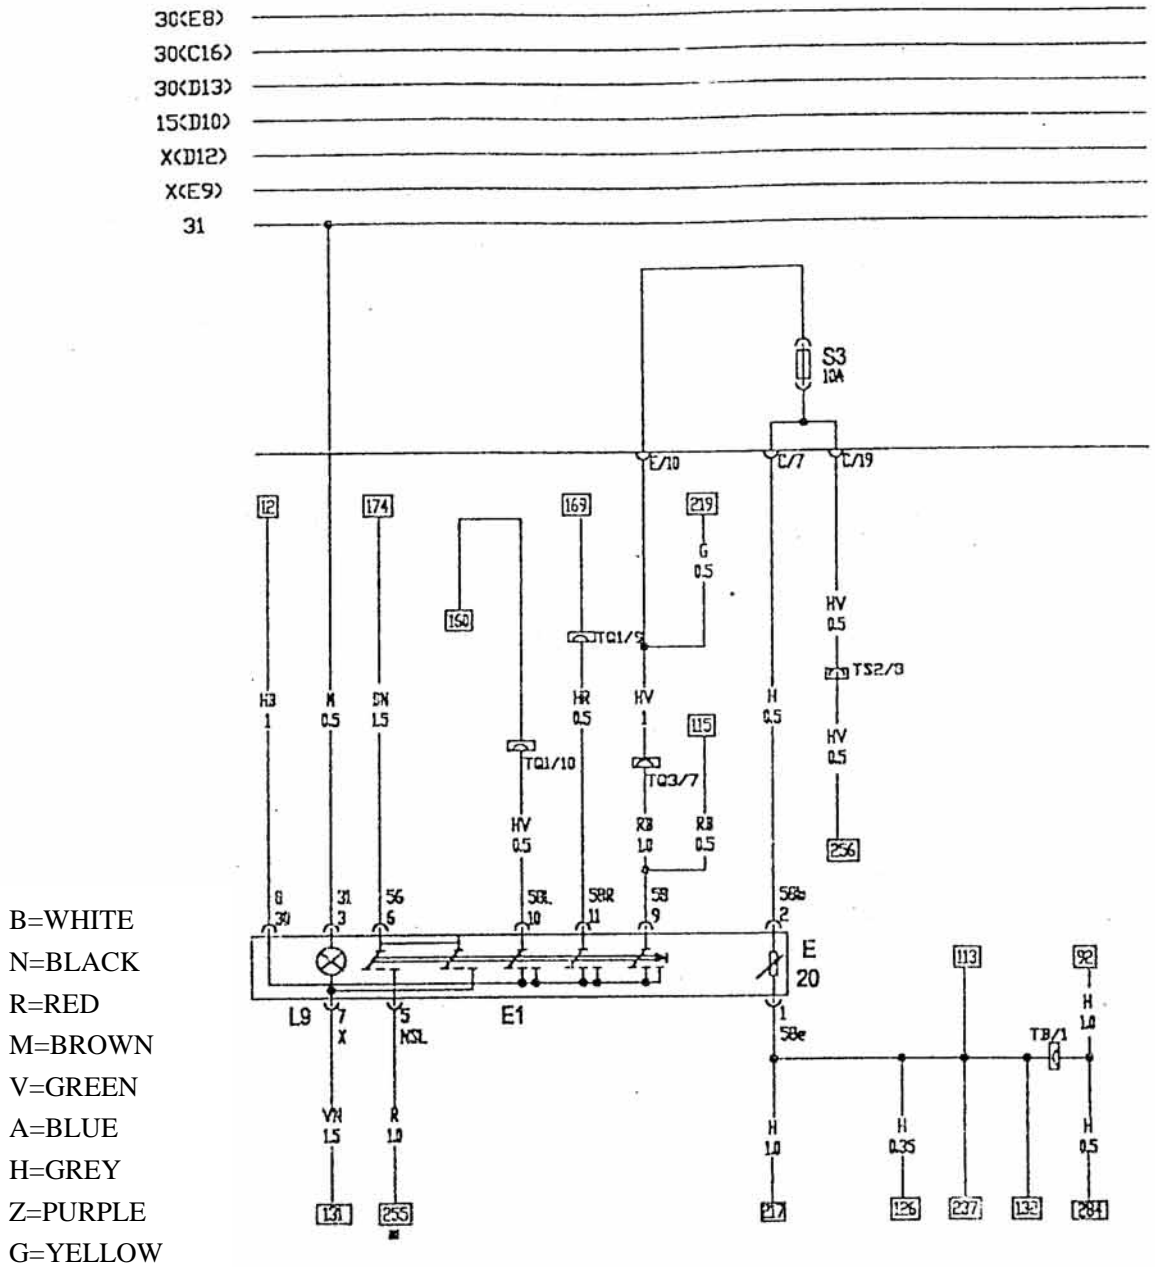


B=WHITE  
N=BLACK  
R=RED  
M=BROWN  
V=GREEN  
A=BLUE  
H=GREY  
Z=PURPLE  
G=YELLOW

201	202	203	204	205	206	207	208	209	210	211	212	213	214
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

E1 Light Switch  
E20 Panel indicator / instruments illumination light variable resistance  
L9 Panel indicator  
S3 Fuse 10A

# BACKLIGHT, REAR FOG LIGHT

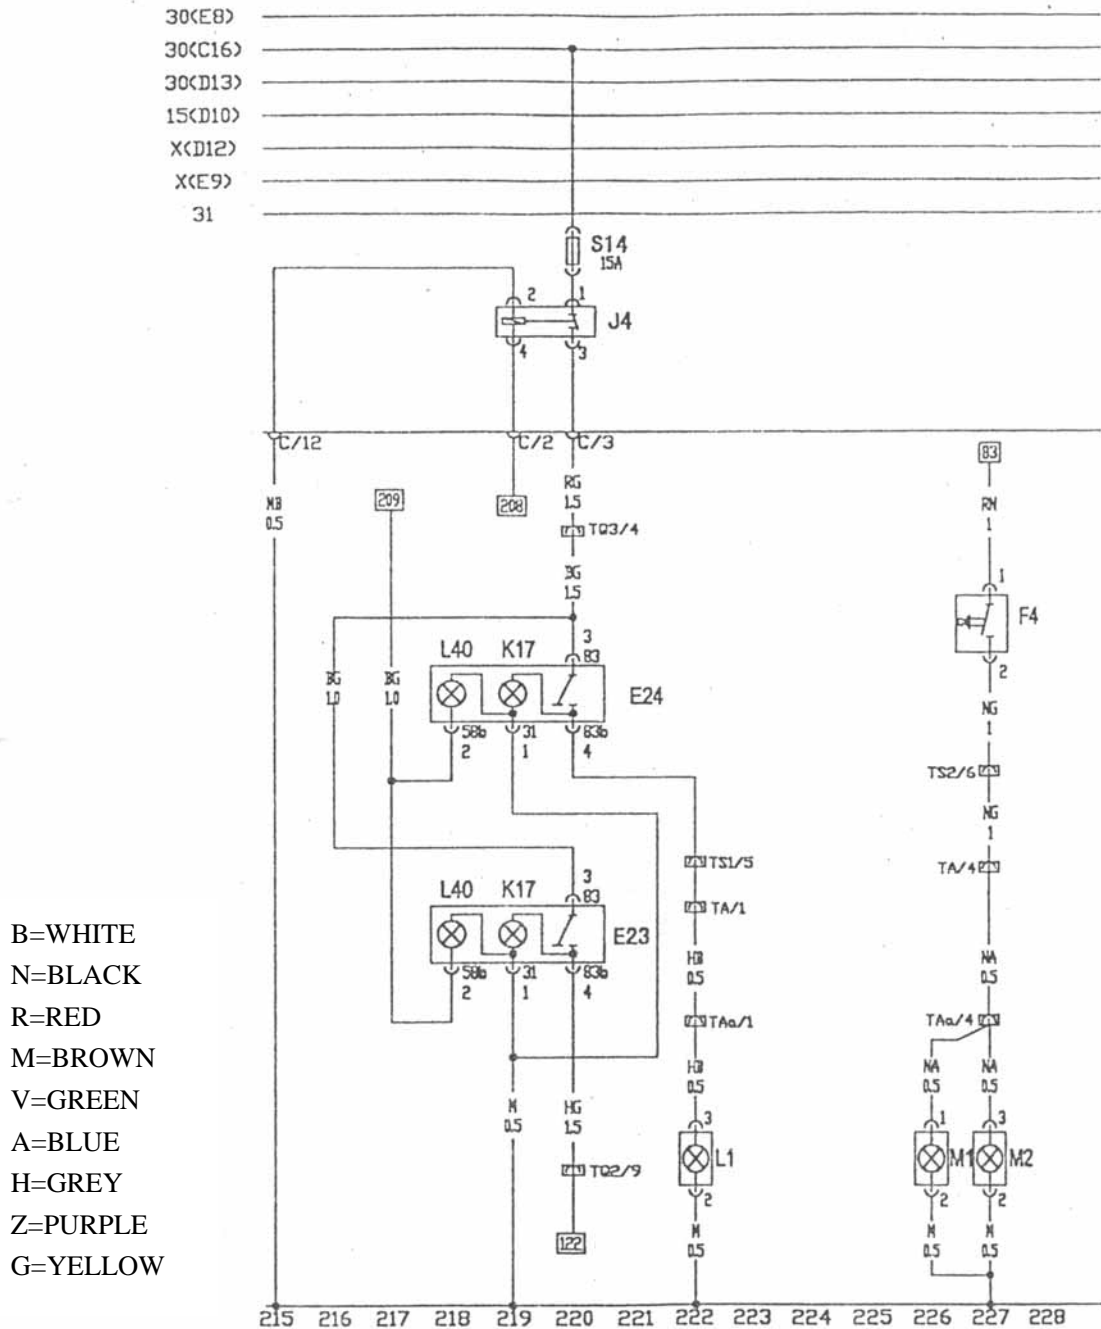


E23	Front Fog Lamp Switch	S10	Fuse 15A	8	In Rear Taillight Moving Parts Wiring
F4	Back Light Switch	S14	Fuse 10A	T3	3 Holes Connector
J4	Fog Lamp Relay (in electrical box)	E24	Rear Fog Lamp Switch	T3a	3 Holes Connector
K17	Rear Fog Lamp Indicator			T2	2 Holes Connector
L1	Rear Fog Lamp			T1	Single Hole Connector
L40	Front & Rear Fog Lamp Switch Illumination Light			T1a	Single Hole Connector
M1	Left Back Light				
M2	Right Back Light				



## HEADLIGHT ADJUSTMENT

30(E8)	_____
30(C16)	_____
30(D13)	_____
15(D10)	_____
X(D12)	_____
X(E9)	_____
31	_____


B=WHITE  
 N=BLACK  
 R=RED  
 M=BROWN  
 V=GREEN  
 A=BLUE  
 H=GREY  
 Z=PURPLE  
 G=YELLOW

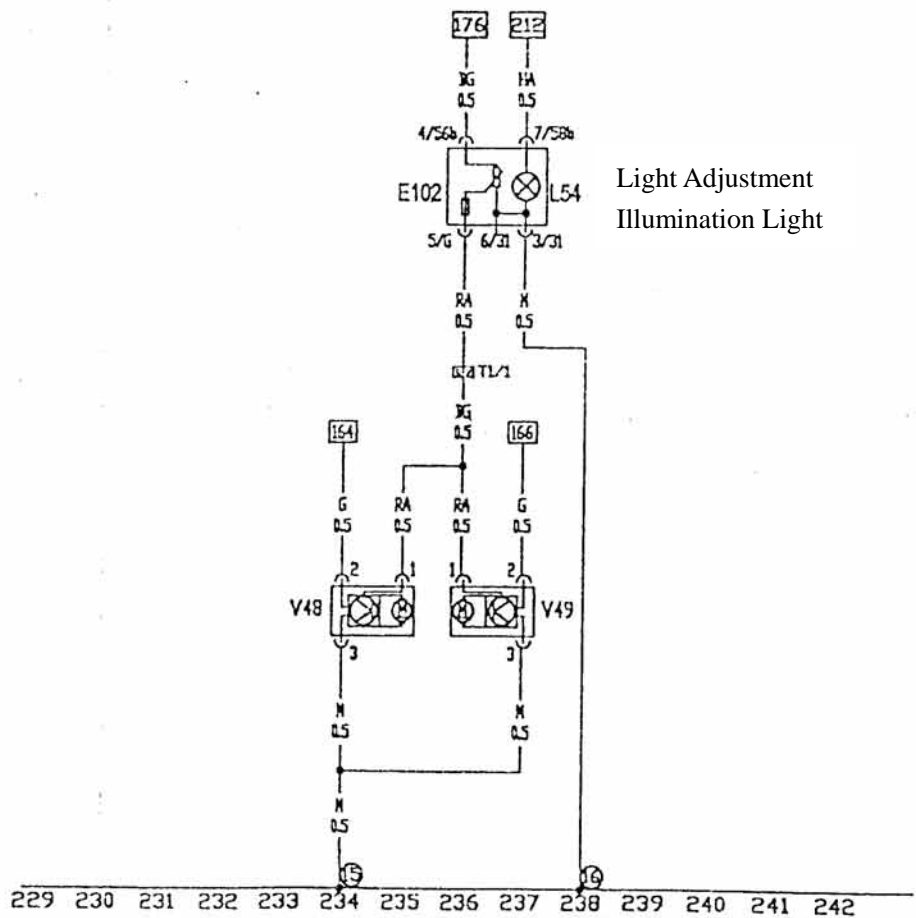

E102 Headlight Height Adjustment Switch  
 L54 Light Adjustment Illumination Light  
 V48 Left Front Headlight Adjustment Motor  
 V49 Right Front Headlight Adjustment Motor


16 Ground, Located Beside Central Electrical Box  
 15 Ground, at headlight  
 T1 Single Hole Connector

FRONT AND REAR INTERIOR LIGHT, LUGGAGE COMPARTMENT LIGHT, SUN VISOR  
LIGHT, LICENSE PLATE LAMP, DOOR TOUCH SWITCH

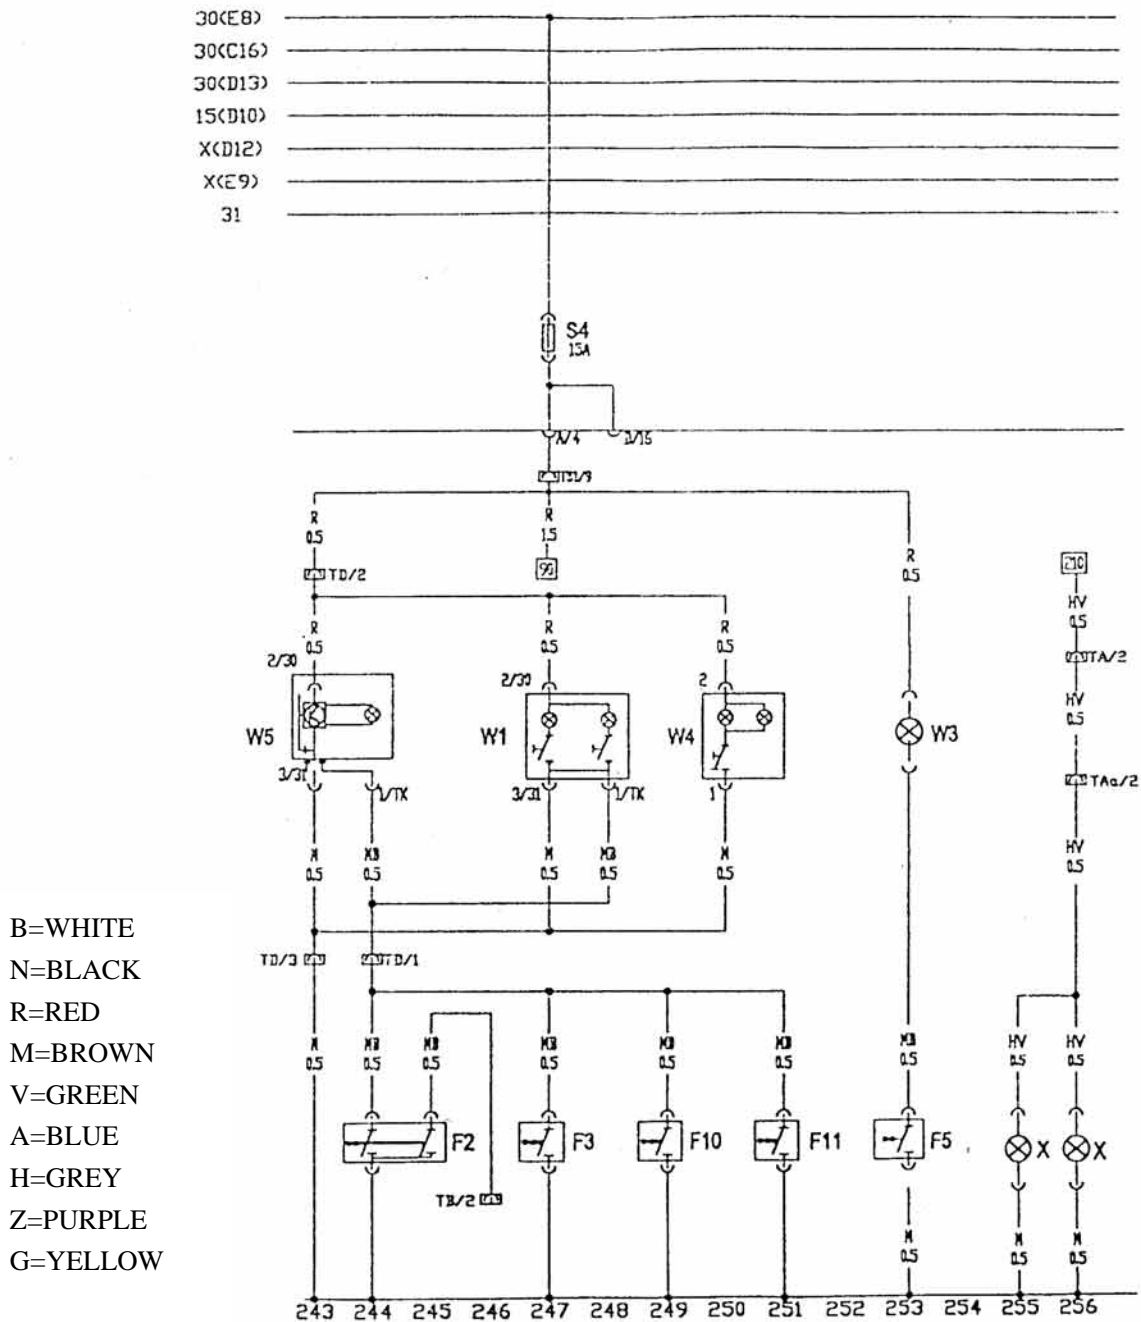


- |     |   |     |  |
|-----|---|-----|--|
| F2  | Left Front Door Touch Switch                  | TAa | 2 Holes Connector, on left side of luggage compartment |
| F3  | Right Front Door Touch Switch                 | W1  | Rear Interior Ceiling Lamp                             |
| F5  | Luggage Compartment Illumination Light Switch | W3  | Luggage Compartment Light                              |
| F10 | Left Rear Door Touch Switch                   | W4  | Sun Visor Light  |
| F11 | Right Rear Door Touch Switch                  | W5  | Front Interior Ceiling Lamp With Delay Close           |
| T8  | 2 Holes Connector                             | X   | License Plate Lamp                                     |
| TD  | 4 Holes Connector                             |     |  |

## CENTRAL LOCKING

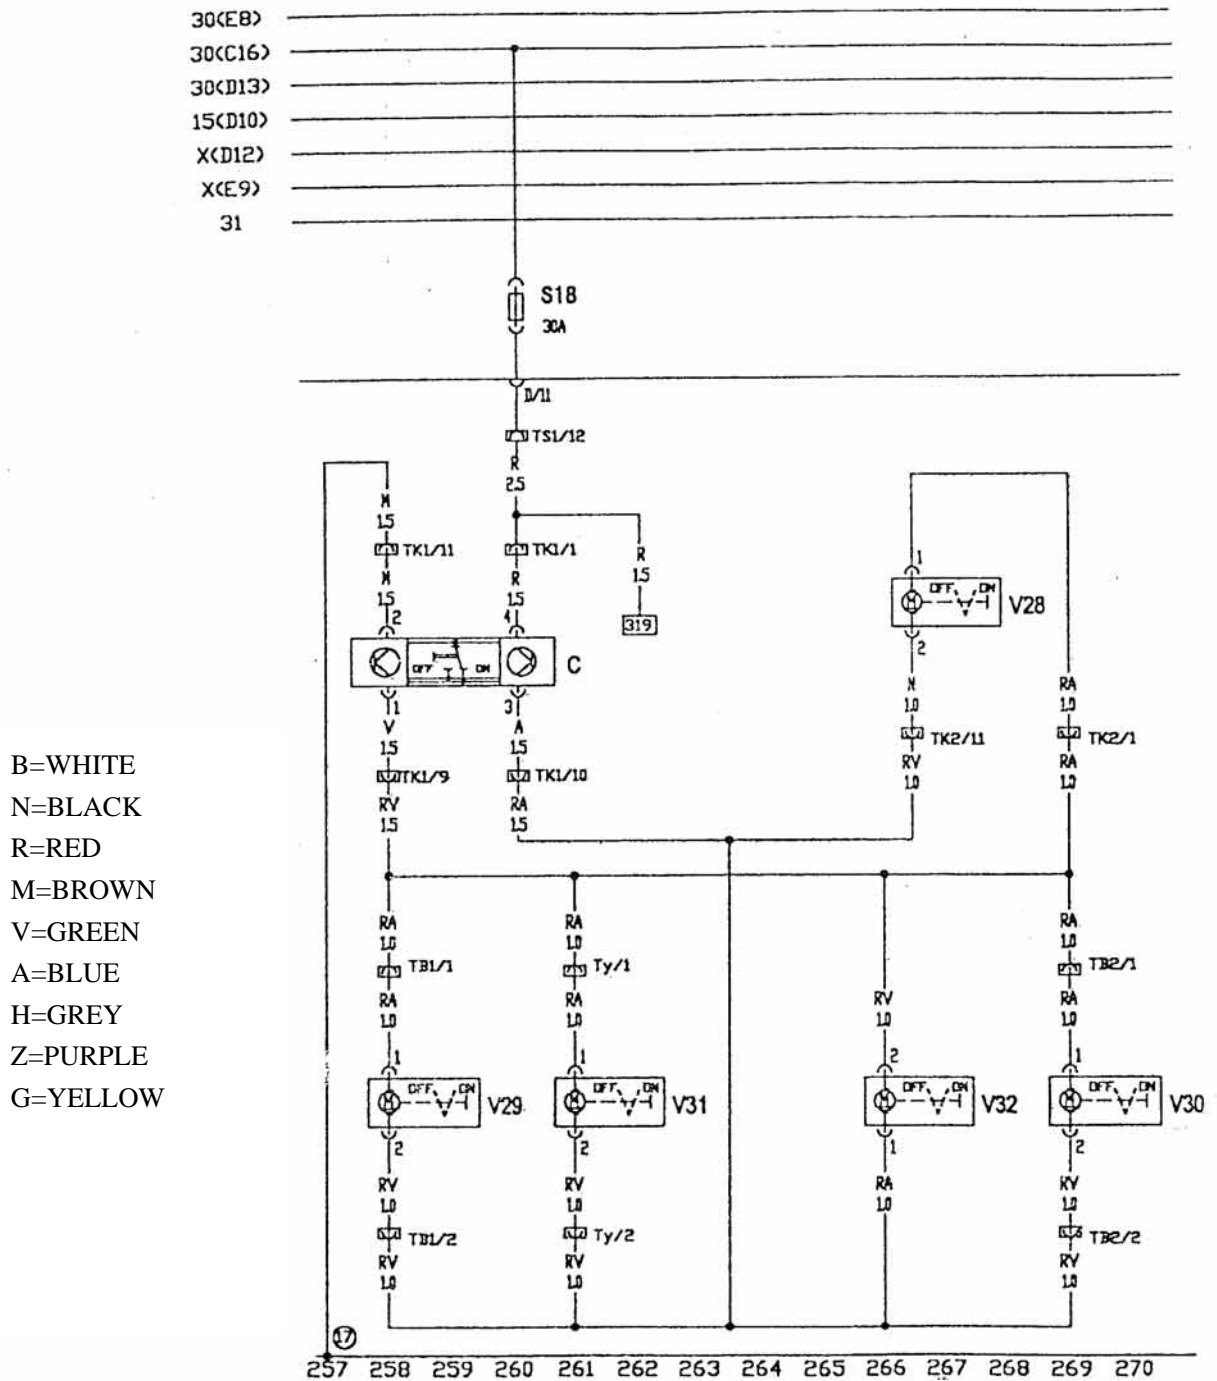

C	Central Locking Control Unit ( in left front door)	TB1	4 Holes Connector (left B pillar side)
V28	Right Front Door Lock Control Motor	TB2	4 Holes Connector (right B pillar side)
V29	Left Rear Door Lock Control Motor	TK1	12 Holes Connector (left A pillar Side)
V30	Right Rear Door Lock Control Motor	TK2	12 Holes Connector (right A pillar Side)
V31	Luggage Compartment Lock Control Motor	Ty	2 Holes Connector (Left C pillar side)
V32	Fuel Tank Door Control Motor	17	Ground Point Beside Central Electrical

## POWER MIRROR

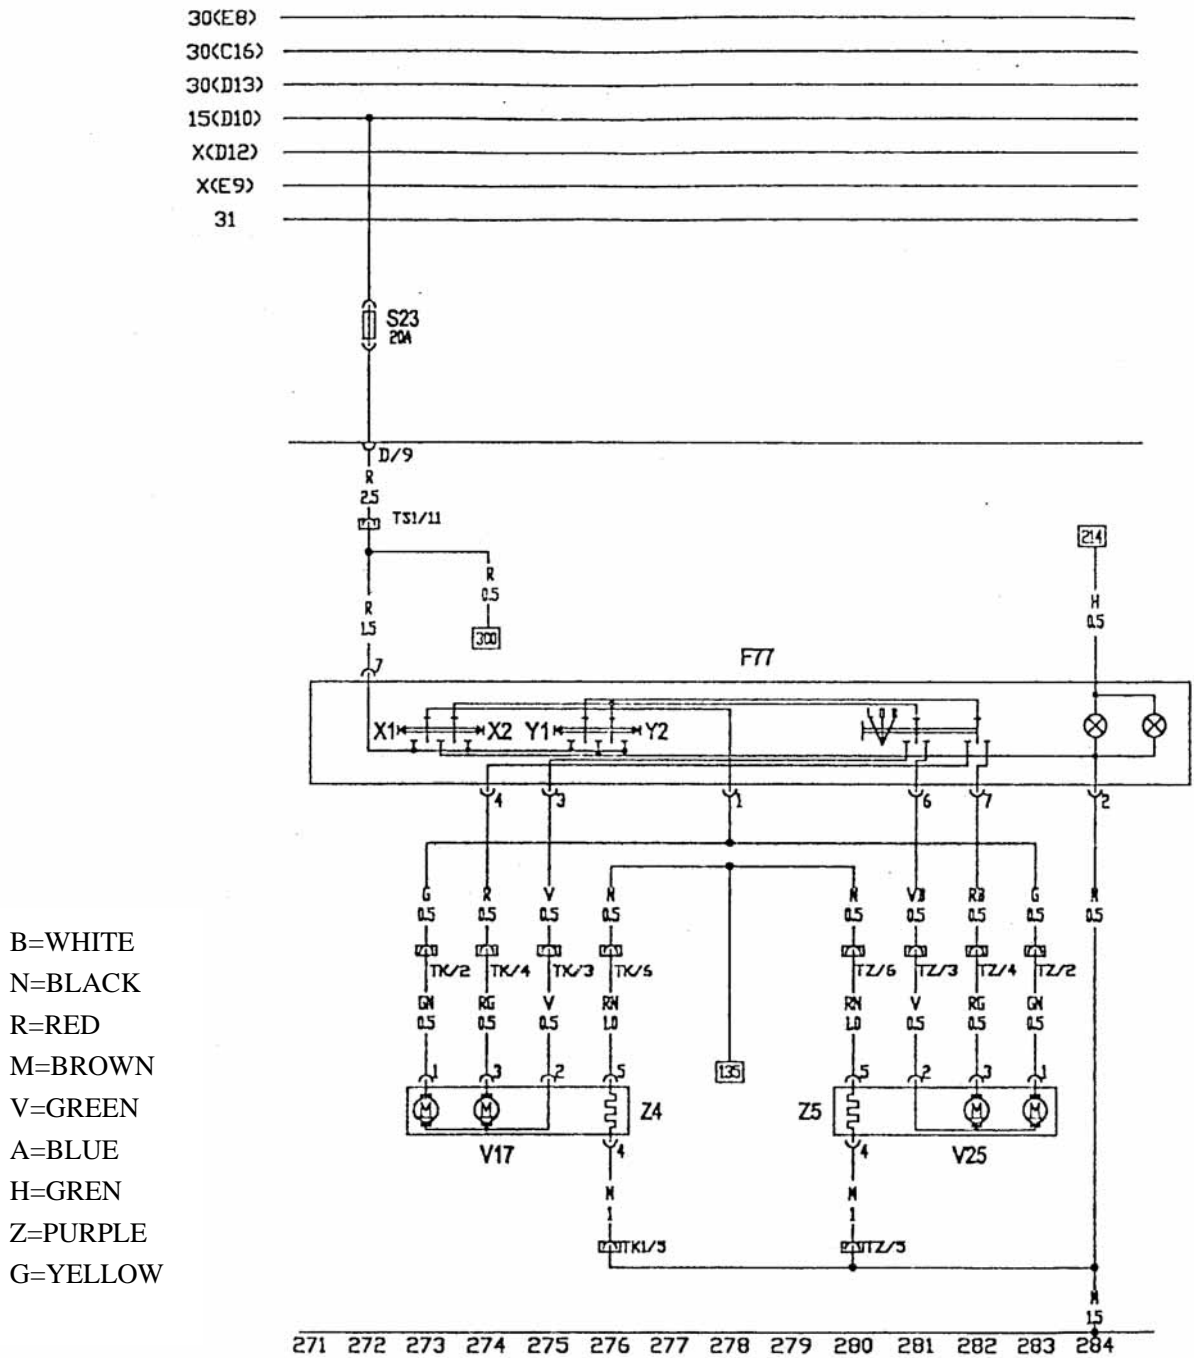

F77 Mirror Switch

X1 Left Adjust

X2 Right Adjust

Y1 Up Adjust

Y2 Down Adjust

V17 Left Mirror Control Motor

V25 Right Mirror Control Motor

Z4 Left Mirror Defogger

Z5 Right Mirror Defogger

TK1 12 Holes Connector (left A pillar side)


TK2 12 Holes Connector (right A pillar side)

TZ 2 Holes Connector (beside central electrical box)

## ABS



B=WHITE  
 N=BLACK  
 R=RED  
 M=BROWN  
 V=GREEN  
 A=BLUE  
 H=GREY  
 Z=PURPLE  
 G=YELLOW

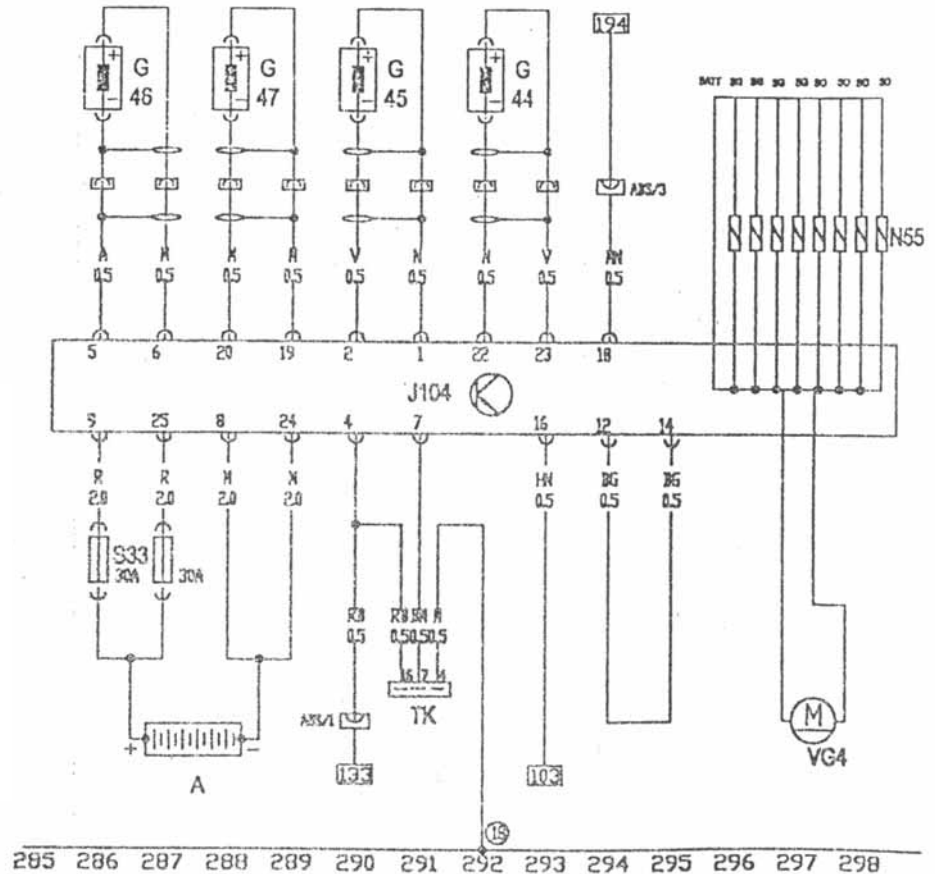

J104 ABS Controller

A Battery

N55 ABS Solenoid

VG4 ABS Hydraulic Pump

G44 Right Rear Wheel RPM Sensor

G45 Left Front Wheel RPM Sensor

G46 Left Rear Wheel RPM Sensor

G47 Right Front Wheel RPM Sensor

S33 ABS Solenoid Valve Power Fuse

S34 ABS Hydraulic Pump Power Fuse


TK Diagnosis Connector

18 Ground point, at ground carrier on central electrical box

## POWER GLASS LIFTER CONTROL UNIT

30(E8)	_____
30(C16)	_____
30(D13)	_____
15(D10)	_____
X(D12)	_____
X(E9)	_____
31	_____

B=WHITE  
 N=BLACK  
 R=RED  
 M=BROWN  
 V=GREEN  
 A=BLUE  
 H=GREY  
 Z=PURPLE  
 G=YELLOW

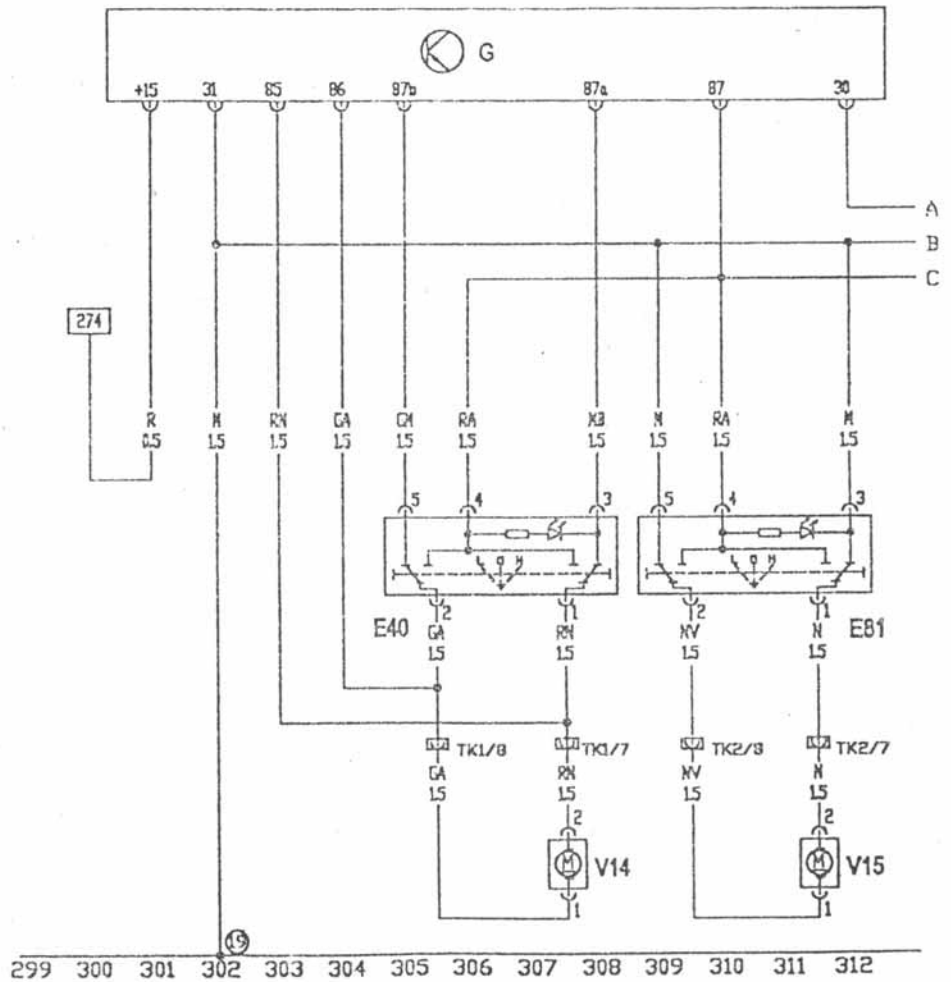


G	Window Glass Lifter Module	19	Beside Central Electrical Box
E40	Left Front Window Lifter Switch	TK1	12 Holes Connector (Left B Pillar Side)
E81	Right Front Window Lifter Switch	TK2	12 Holes Connector (Right B Pillar Side)
V14	Left Front Window Lifter Motor		
V15	Right Front Window Lifter Motor		

## POWER GLASS LIFTER CONTROL SWITCH

30(E8)	
30(C16)	
30(D13)	
15(D10)	
X(D12)	
X(E9)	
31	

B=WHITE  
 N=BLACK  
 R=RED  
 M=BROWN  
 V=GREEN  
 A=BLUE  
 H=GREY  
 Z=PURPLE  
 G=YELLOW

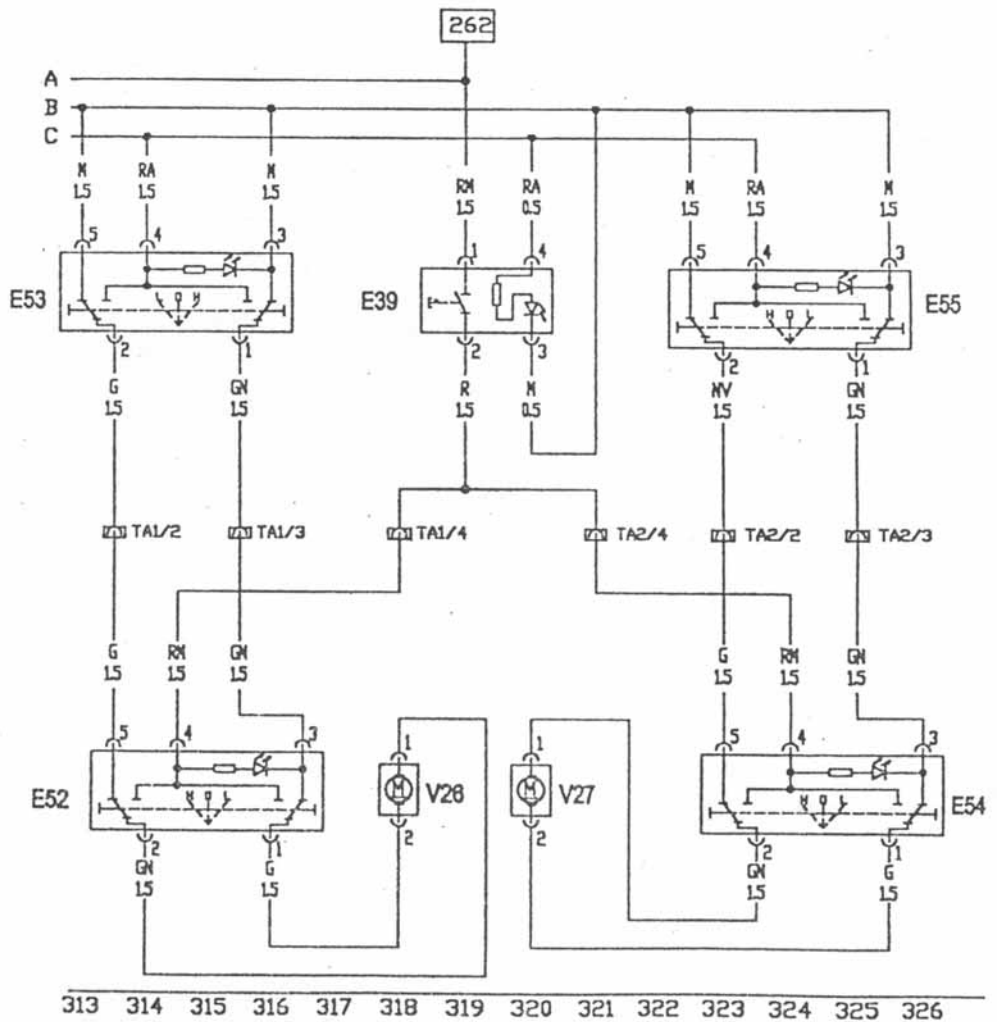

E39 Rear Window Glass Lifter Lock -Out Switch  
 E52 Left Rear Dorr Upper Window Lifter Switch  
 E54 Right Rear Dorr Upper Window Lifter Switch  
 E53 Left Rear Window Glass Lifter Switch  
 E55 Right Rear Window Glass Lifter Switch

V26 Left Rear Window Glass Lifter Motor  
 V27 Right Rear Window Glass Lifter Motor  
 TA1 4 Holes Connector Glass (Left B Pillar Side)  
 TA2 4 Holes Connector Glass (Right B Pillar Side)