


Operation Instructions

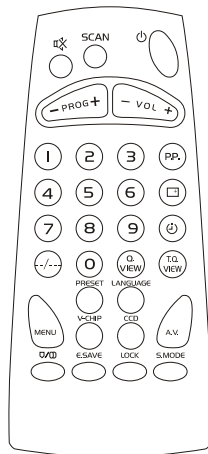

POWER (STAND BY) BUTTON (⏻)

Press this button to turn the TV on/off.

SCAN BUTTON

Press this button, you can automatically browse all the channels having been stored.

MUTE BUTTON (🔇)

Press once to mute the sound, press again to return to preset sound level.

PROGRAM SELECTION BUTTONS (0-9, --/--)

Use 0-9 digit buttons, you can call directly one or two digits program number that you want. when you only want to select one digit program number, you must press 0 button at first, then select a digit from 1-9. You press two digit buttons directly to select two digits program number.

In CATV system if you want to watch the channel from 100 to 125, such as channel 123, please press --/-- first, and press 2 and 3 in turn.

PROGRAM UP/DOWN BUTTON (PROG +/-)

Press the Program Up Button to select the program forwards.

Press the Program Down Button to select the program backwards.

VOLUME UP/DOWN BUTTONS (VOL +/-)

Press Volume Up/Down Buttons to adjust sound level. Or adjust the volume of each item in the menu status.

PERSONAL PRESETS BUTTON (PP)

You can set the picture mode in STANDARD, SPORTS, MOVIES, MILD or CUSTOM mode by pressing this button.

Operation Instructions

RECALL BUTTON ()

Press this button sequentially to call up the program number and time on the screen.

* If you have not set time, " -:--" will display on the screen.

SLEEP BUTTON ()

This key is used to set the sleep timer in 10 minutes step up to four hours. Shorter than 30 minutes, the interval is 10 minutes. Longer than the 30 minutes, the interval is 30 minutes. When the preset time runs to 0, TV set will go into stand by mode. To switch off this function, press this key step by step until "sleep off" is displayed on the screen.

T.Q.VIEW BUTTON

This key is used to set the time of returning previously channel in thirty seconds step up to five minutes. The interval is thirty seconds. TV automatically returns to the previous channel at the preset time.

QUICK VIEW BUTTON (Q.VIEW)

Press this button to return to the previously viewed program.

A.V. BUTTON

Press this button to display external video signal such as VCR or CD video player. AV will be displayed on the screen. Press this button again to switch back to TV signal from AV.

MENU BUTTON (MENU)

Use "MENU" button for tuning procedure, please refer to page 13-14 for the details.

LANGUAGE BUTTON

Press the button the language will be changed.

There are three languages to select, that is English, Français, Español and Portuguese.

PRESET BUTTON

Press this button to enter the PRESET MENU, please refer to page 14 for the details.

V-CHIP BUTTON(OPTION)

Press the button to enter the V-CHIP MENU, please refer to page 14 for the details.

CCD BUTTON

Press this button to enter the CCD MENU

Please read the page 14 for the details.

MONO/STEREO BUTTON (/)

Select the sound system mode.

Mono → stereo → sap → mono/sap.
↑

E.SAVE BUTTON

Energy save on: work in every save mode. The consumption will be lower.

Energy save off: work in normal mode.


Operation Instructions

S.MODE BUTTON

It can switch the sound mode in the following turn.

Custom → Speech → Music → Theater
↑

LOCK BUTTON


Press the "LOCK" button ,The key locked () appears on the screen. Then the symbol will disappear after five seconds and enter child locked mode. In LOCK mode, any pannel key in the TV set in disable and all the keys in the remote controller can be used.

*You can quit "lock " mode by pressing the 'LOCK' button again.

*The locked key is used to control or prevent your children from operating the TV.

Operation Instructions

1. Remove the battery cover.
2. Insert two batteries of the 2 UM3-AA 1.5V type and make sure that polarity (+/-) match the marks inside the unit.
3. Replace the battery cover.
Replace with new batteries when the TV set begins to show the following symptoms:
Operation becomes unsteady or erratic. Sometimes the TV set does not function with Remote Control Unit.

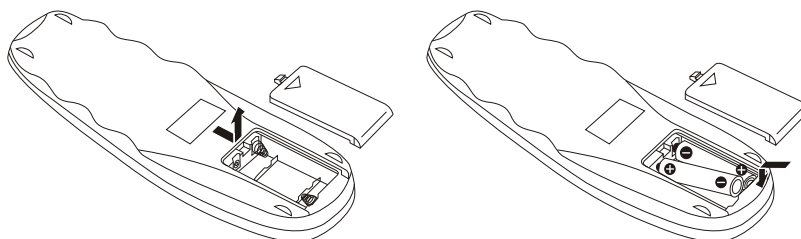

Remark:

- 1) Alkaline Batterie Recommended
- 2) Remove batteries when they are exhausted or if the remote control is not to be used for a long time.

THE CAUSES OF INTERFERENCE

Those incorporated in your TV receiver are the most up-to-date devices to eliminate interference. Local radiation however, can create disturbances which visibly affect picture. Proper installation and , a good aerial are the best safe-guards against these disturbances.

RF INTERFERENCE

Moving ripples across the screen are caused by nearby transmitting or receiving-short-wave radio equipment.

DIATHERMY

Herringbone pattern and partial picture loss can result from the operation of diathermy equipment from a nearby doctor's surgery or hospital.

SNOW

Weak TV signals from distant stations result in unsteady picture and have the effect of falling snow. An antenna adjustment or antenna amplifier may be needed.

GHOST

Multiple image caused by TV signals which are reflected back from surrounding buildings, hills, aircraft, etc. is minimized by correct aerial positioning.


CAR IGNITION

Nearby cars and electrical motors can cause small streaks across the picture or make the picture roll.

Mechanical Disassemblies

CABINET BACK REMOVAL

1. Refer to Figure 1, remove 10 screws.
2. Pull off cabinet back and remove.

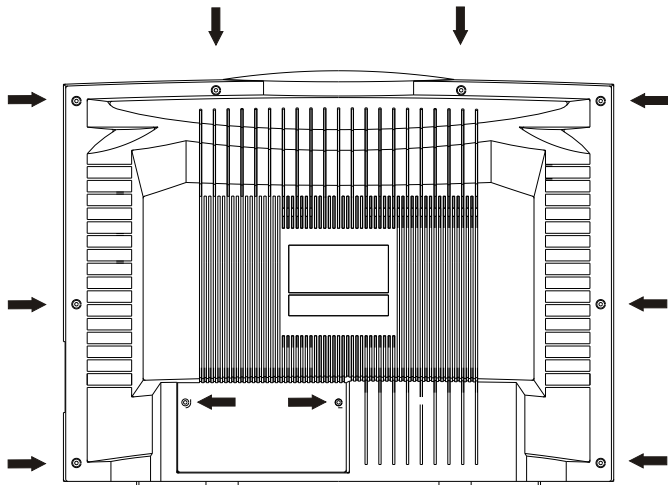

CHASSIS REMOVAL


1. Remove cabinet back.
2. Discharge the picture tube anode (2nd anode lead) to the dag coating (picture tube grounding lead).
3. Disconnect Degaussing coil socket (KE), Picture tube socket, Deflection yoke connector (KDY), Speaker connectors (KL and KR), and 2nd anode lead.
4. Remove chassis completely by sliding it straight back.

PICTURE TUBE REMOVAL


CAUTION: Do not disturb the deflection yoke or magnet assembly on the picture tube Neck. Care must be taken to keep these assemblies intact, unless picture tube is being replaced. Discharge the picture tube to the coating before handling the Tube.

1. Remove chassis, referring to Chassis Removal instructions.
2. Place cabinet front face down on the soft surface.
3. Remove the screw on each corner of the picture tube and GENTLY lift the picture tube out of the cabinet.
4. Install a replacement picture tube in reverse order. Properly install the degaussing coil and picture tube grounding lead on the picture tube. See Figure 2.


Note: If the Picture Tube is being replaced, mount the Degaussing Coil on the picture tube. See following..

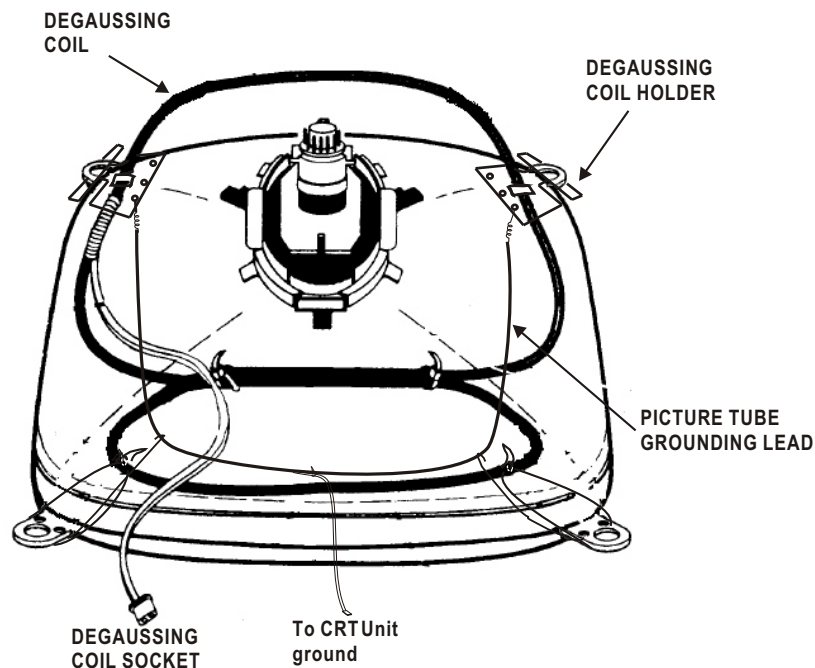

Cabinet Parts List

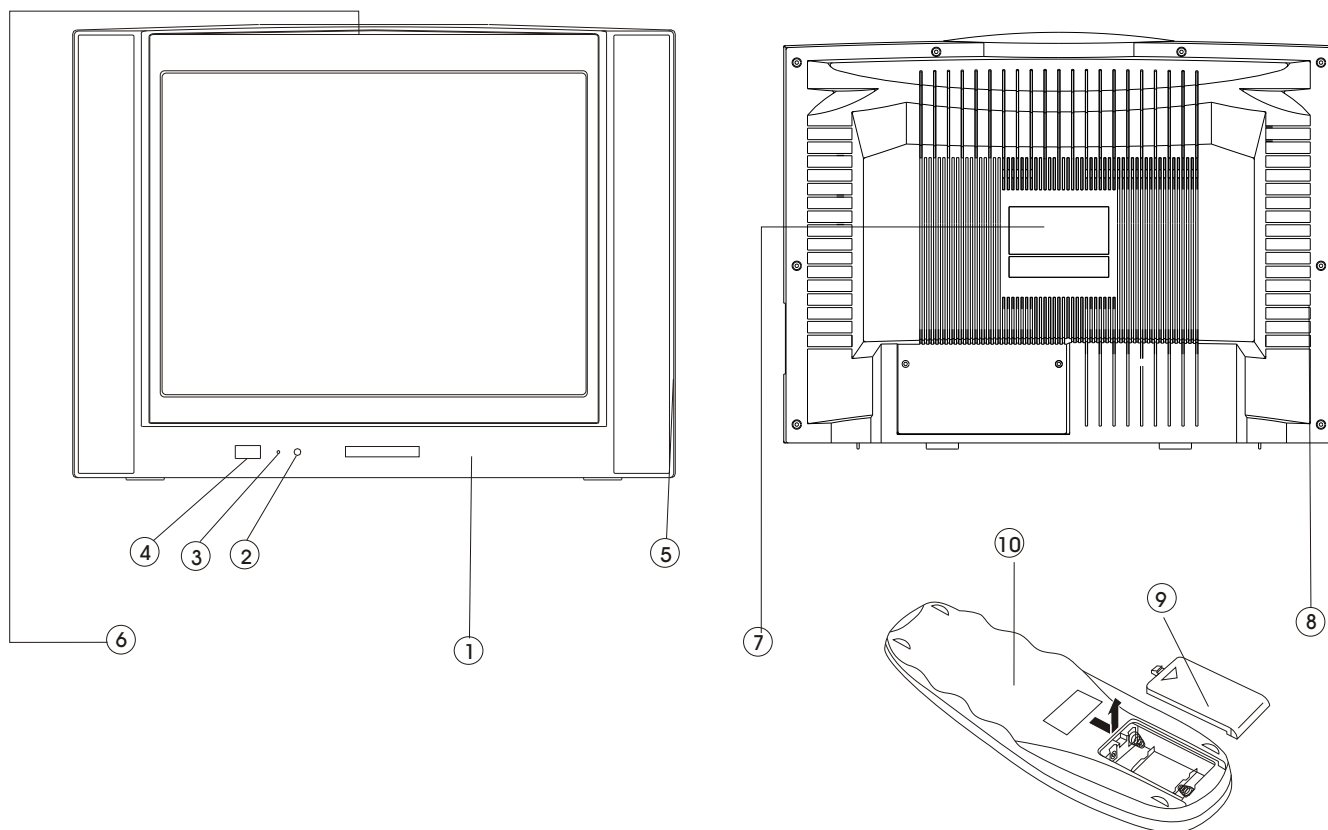

Key No.	PartNo.	Description
1	SKCM 0025TM0110	CABINET COLOUR MATCH-METAL SILVER GREY #MS G001
2	SK100729TM0001	FRONTLENS (REMOTE CONTROL WINDOW)
3	SK100729TM0001	FRONTLENS (LED WINDOW)
4	SK100925TM0001	POWER KNOB-ELECTROPLATING SILVER (ABS)
5	SK100425TM0002	SIDE AV JACK BRACKET-DARK GREY #DG001 (ABS)
6	SK100829TM0001	CONTROL KEY KNOB-ELECTROPLATING SILVER (ABS)
7	SK060125TM00W6	BACK LABEL FISHER TF25M2T W/PCB ENG
8	SK100225TM0003	BACK CABINET-DARK GREY #DG001 (HIPS) 94V-0
9	SK1016HS080006	BATTERY DOOR-METAL SILVER GREY #MSG001 (ABS)
10	SKHS08S0360600	HANDSET-36 KEYS FOR OVERSEAS NORMAL GREY ENG

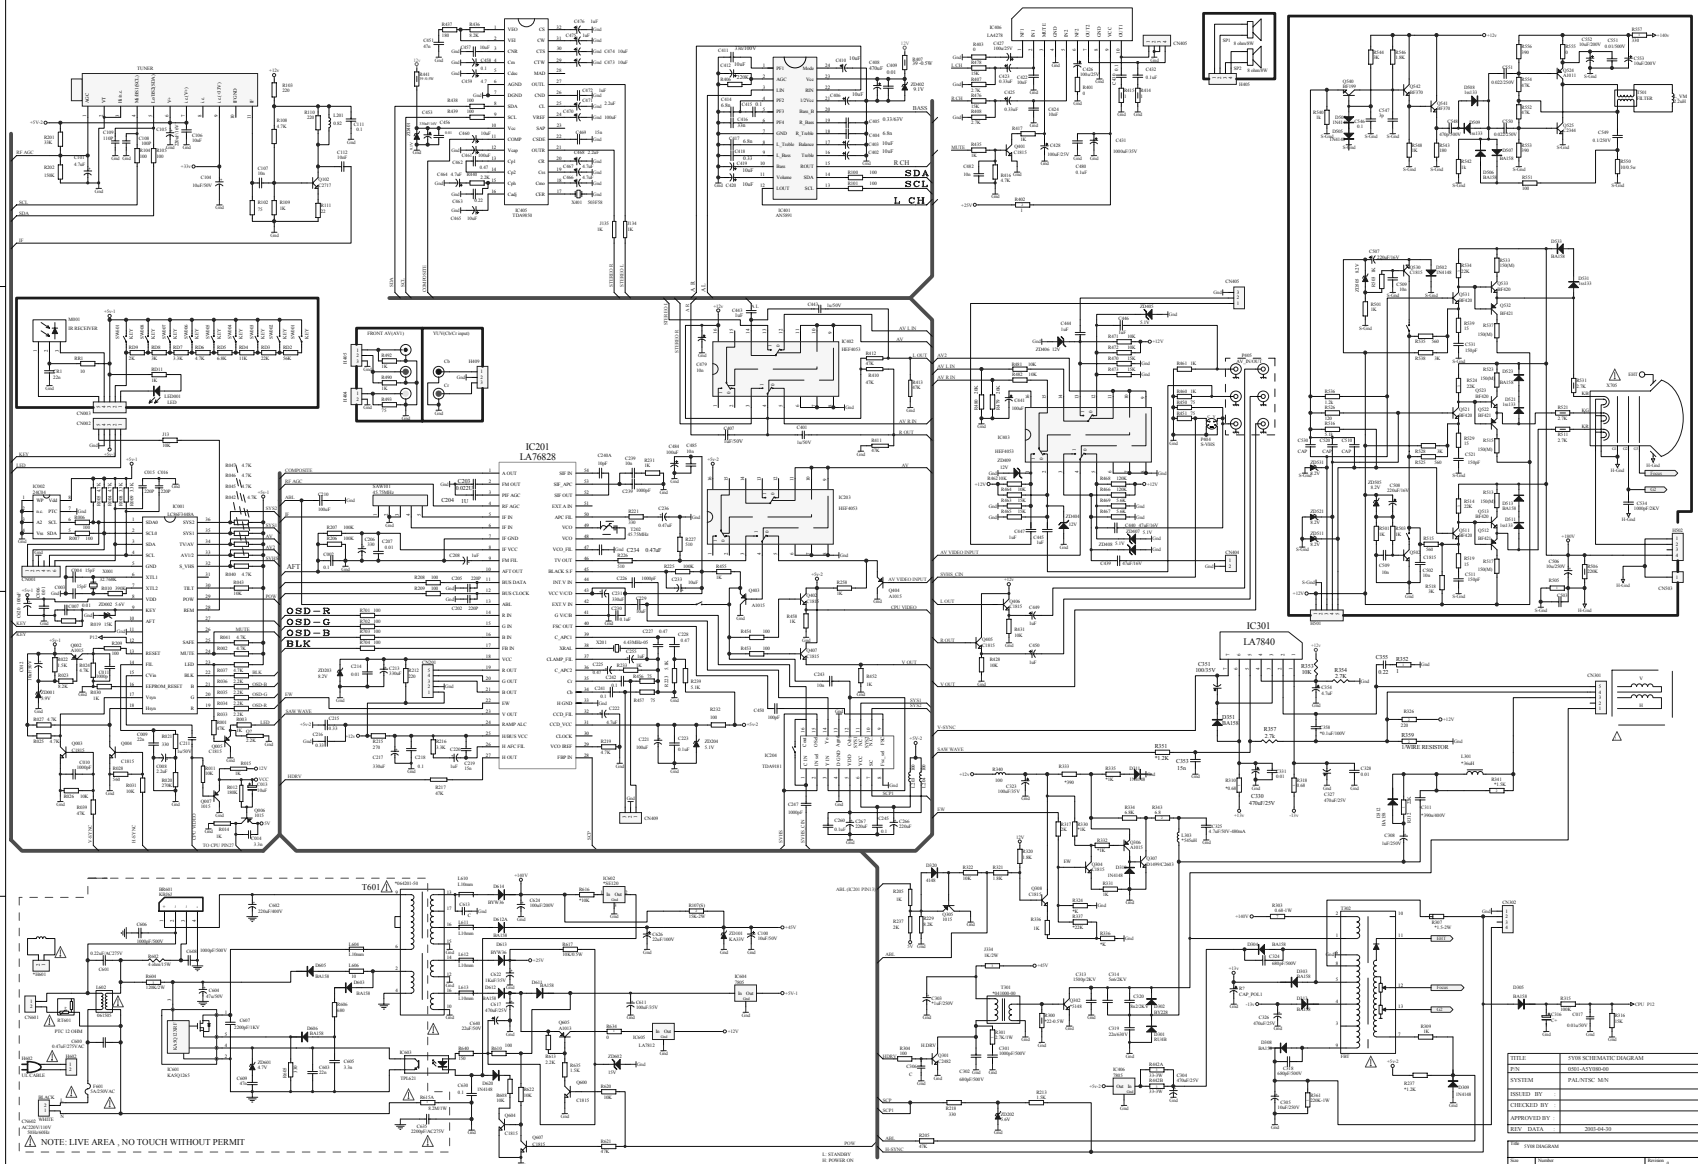

 NOTE: LIVE AREA, NO TOUCH WITHOUT PERMIT