

**DAEWOO**

# Service Manual

## Microwave Oven

**Model: KOR-131G0A**

**KOR-131H0A**

**KOR-130A0A**

**KOR-131G4A**

**KOR-131H4A**

**KOR-131S4A**

### ✓ **Caution**

: In this Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service Information Center (<http://svc.dwe.co.kr>).



# PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not operate or allow the oven to be operated with the door open.
- (b) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary: (1) Interlock operation, (2) Proper door closing, (3) Seal and sealing surfaces (arcing, wear, and other damage), (4) Damage to or loosening of hinges and latches, (5) Evidence of dropping or abuse.
- (c) Before turning on power to the microwave oven for any service test or inspection within the microwave generating compartments, check the magnetron, wave guide or transmission line, and cavity for proper alignment, integrity, and connections.
- (d) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.
- (e) A microwave leakage check to verify compliance with the Federal performance standard should be performed on each oven prior to release to the owner.

## TABLE OF CONTENTS

<b>SAFETY AND PRECAUTIONS .....</b>	<b>2</b>
FOR SAFE OPERATION .....	2
FOR SAFE SERVICE PROCEDURES .....	2
<b>SPECIFICATIONS.....</b>	<b>3</b>
<b>EXTERNAL VIEW .....</b>	<b>4</b>
OUTER DIMENSION .....	4
FEATURE DIAGRAM.....	5
CONTROL PANEL .....	6
<b>INSTALLATION.....</b>	<b>10</b>
<b>OPERATIONS AND FUNCTIONS.....</b>	<b>11</b>
<b>DISASSEMBLY AND ASSEMBLY .....</b>	<b>12</b>
<b>INTERLOCK MECHANISM AND ADJUSTMENT .....</b>	<b>20</b>
<b>TROUBLE SHOOTING GUIDE .....</b>	<b>21</b>
<b>MEASUREMENT AND TEST.....</b>	<b>25</b>
MEASUREMENT OF THE MICROWAVE POWER OUTPUT .....	25
MICROWAVE RADIATION TEST .....	26
COMPONENT TEST PROCEDURE.....	27
<b>WIRING DIAGRAM.....</b>	<b>28</b>
<b>PRINTED CIRCUIT BOARD.....</b>	<b>29</b>
CIRCUIT CHECK PROCEDURE.....	29
P.C.B. CIRCUIT DIAGRAM .....	32
P.C.B. LOCATION NO .....	33
PRINTED CURCUIT BOARD (KOR-131S4)	
CIRCUIT CHECK PROCEDURE.....	35
P.C.B CIRCUIT DIAGRAM .....	39
P.C.B. LOCATION NO .....	40
<b>EXPLODED VIEW AND PARTS LIST .....</b>	<b>42</b>
DOOR ASSEMBLY .....	42
CONTROL PANEL ASSEMBLY .....	42
TOTAL ASSEMBLY.....	42

# PRECAUTIONS

## CAUTION

This Device is to be Serviced Only by Properly Qualified Service Personner. Consult the Service Manual for Proper Service Procedures to Assure Continued Safety Operation and for Precautions to be Taken to Avoid Possible Exposure to Excessive Microwave Energy.

## 1. FOR SAFE OPERATION

Damage that allows the microwave energy ((that cooks or heats the food) to escape will result in poor cooking and may cause serious bodily injury to the operator.

IF ANY OF THE FOLLOWING CONDITIONS EXIST, OPERATOR MUST NOT USE THE APPLIANCE.

(Only a trained service personnel should make repairs.)

- 1) A broken door hinge.
- 2) A broken door viewing screen.
- 3) A broken front panel, oven cavity.
- 4) A loosened door lock.
- 5) A broken door lock.

The door gasket plate and oven cavity surface should be kept clean.

No grease, soil or spatter should be allowed to build up on these surfaces or inside the oven.

DO NOT ATTEMPT TO OPERATE THIS APPLIANCE WITH THE DOOR OPEN. The microwave oven has concealed switches to make sure the power is turned off when the door is opened. Do not attempt to defeat them.

DO NOT ATTEMPT TO SERVICE THIS APPLIANCE UNTIL YOU HAVE READ THIS SERVICE MANUAL.

## 2. FOR SAFE SERVICE PROCEDURES

- 1) If the oven is operative prior to servicing, a microwave emission check should be performed prior to servicing the oven.
- 2) If any certified oven unit is found to servicing, a microwave emission check should be performed prior to servicing the oven.
  - (a) inform the manufacturer, importer or assembler,
  - (b) repair the unit at no cost to the owner,
  - (c) attempt to ascertain the cause of the excessive leakage,
  - (d) tell the owner of the unit not to use the unit until the oven has been brought into compliance.
- 3) If the oven operates with the door open, the service person should tell the user not to operate the oven and contact the manufacturer and CDRH immediately.

## CAUTION

### MICROWAVE RADIATION

PERSONNEL SHOULD NOT BE EXPOSED TO THE MICROWAVE ENERGY WHICH MAY RADIATE FROM THE MAGNETRON OR OTHER MICROWAVE GENERATING DEVICE IF IT IS IMPROPERLY USED OR CONNECTED. ALL INPUT AND OUTPUT MICROWAVE CONNECTIONS, WAVEGUIDE FLANGES AND GASKETS MUST BE SECURE. NEVER OPERATE THE DEVICE WITHOUT A MICROWAVE ENERGY ABSORBING LOAD ATTACHED. NEVER LOOK INTO AN OPEN WAVEGUIDE OR ANTENNA WHILE THE DEVICE IS ENERGIZED.


# SPECIFICATIONS

MODEL	KOR-130A, KOR-131G and KOR-131H	KOR-131G4, KOR-131H4 and KOR-131S4
POWER SUPPLY	120V-60Hz, SINGLE PHASE WITH GROUNDING	
POWER CONSUMPTION	MICROWAVE	1400W
	GRILL	1500W
	COMBINATION	
MICROWAVE ENERGY OUTPUT	1000W	1100W
MICROWAVE FREQUENCY	2450MHz	
OUTSIDE DIMENSIONS (W X H X D)	563 x 318 x 418 mm (22.1 x 12.5 x 16.5in )	
CAVITY DIMENSIONS (W X H X D)	380 x 246 x 386 mm (14.9 x 9.7 x 15.2in)	
NET WEIGHT	APPROX. 16.5kg (36.4lbs)	
TIMER	99min. 99 sec.(59min. 99sec. KOR-131S4)	
FUNCTION SELECTIONS	MICROWAVE	
POWER SELECTIONS	10 LEVELS	
CAVITY VOLUME	1.3 Cu. Ft.	


SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

# EXTERNAL VIEW

## 1. OUTER DIMENSION

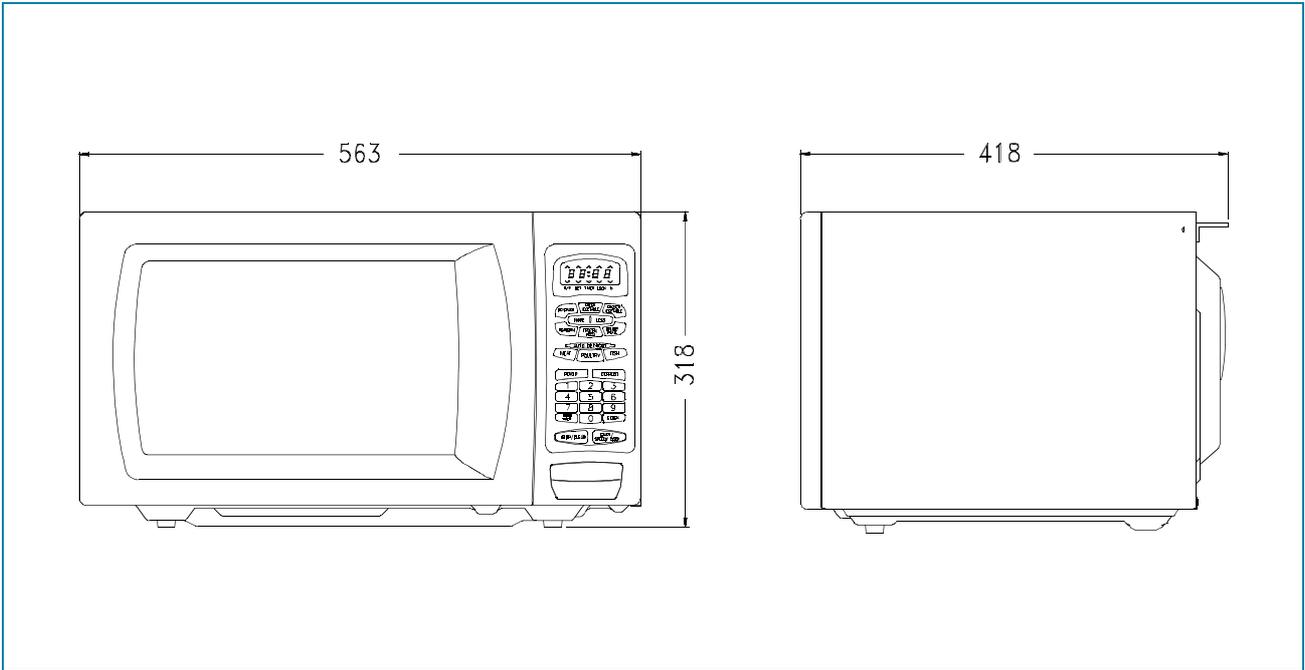

## 2. FEATURE DIAGRAM

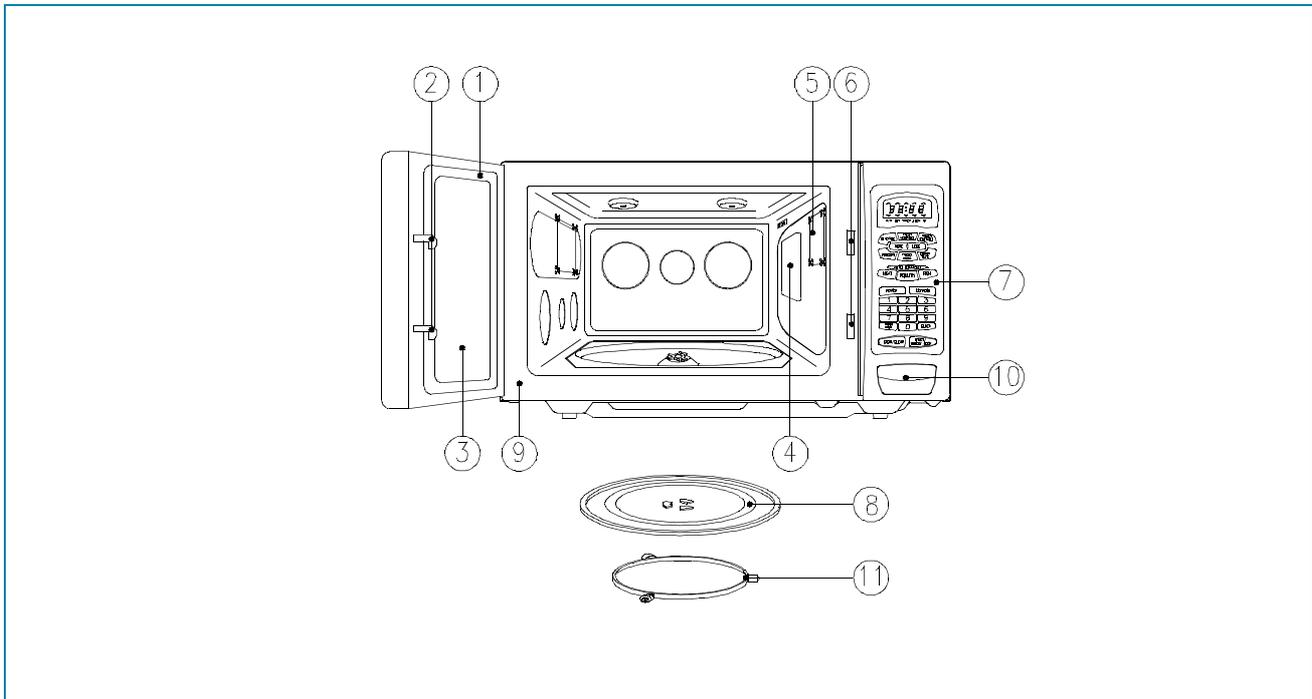

### 1. DOOR SEAL

Door seal maintains the microwave within the oven cavity and prevents microwave leakage.

### 2. DOOR HOOK

When door is closed, it will automatically lock shut. If door is opened while oven is operating, magnetron tube will immediately stop operating.

### 3. DOOR SCREEN

Allows viewing of food. Microwave cannot pass through perforations in screen.

### 4. SPATTER SHIELD

Protects the microwave outlet from splashes of cooking foods.

### 5. OVEN LAMP

Automatically turns on during oven operating.

### 6. SAFETY INTERLOCK SYSTEM

### 7. CONTROL PANEL

### 8. GLASS COOKING TRAY

Made of special heat resistant glass. The tray must always be in proper position before operating. Do not cook food directly on the tray.

### 9. OVEN FRONT PLATE

### 10. DOOR OPENING BUTTON


To open the door, push the door opening button. When door is closed, it will automatically lock shut. If door is opened while oven is operating, magnetron tube will immediately stop operating.

### 11. ROLLER GUIDE

Supports the glass cooking tray.


### 3. CONTROL PANEL

1) KOR-131G / KOR-131G4

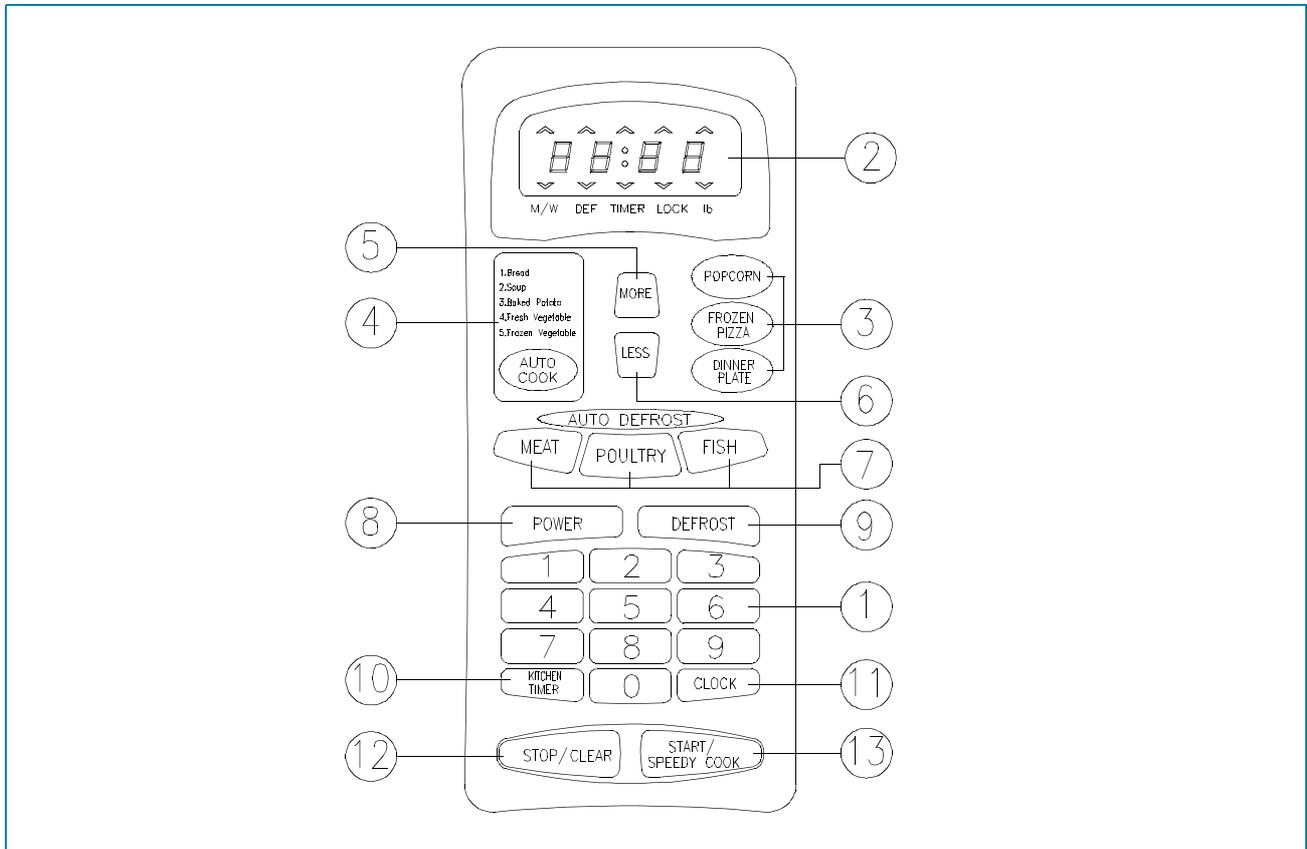


1. **Time set pad** - Used to set the cooking time and the present time.
2. **Display** - Cooking time, power level, indicators and present time are displayed.
3. **One touch** - Used to cook or reheat specific quantities of food.
4. **Auto cook** - Used to cook or reheat.
5. **More** - Used to add time to cooking.
6. **Less** - Used to remove time from cooking.
7. **Auto Defrost** - Used to defrost foods.(for weight)
8. **Power** - Used to set power level.
9. **Defrost** - Used to defrost foods.(for time)
10. **Kitchen Timer** - Used as a minute timer, delay cooking, hold setting after cooking.
11. **Clock** - Used to set clock.
12. **Stop/Clear** - Used to stop the oven operation or to delete the cooking data.
13. **Start /Speedy cook** - Used to start the oven and also to set a reheat time.

## 2) KOR-131H / KOR-131H4

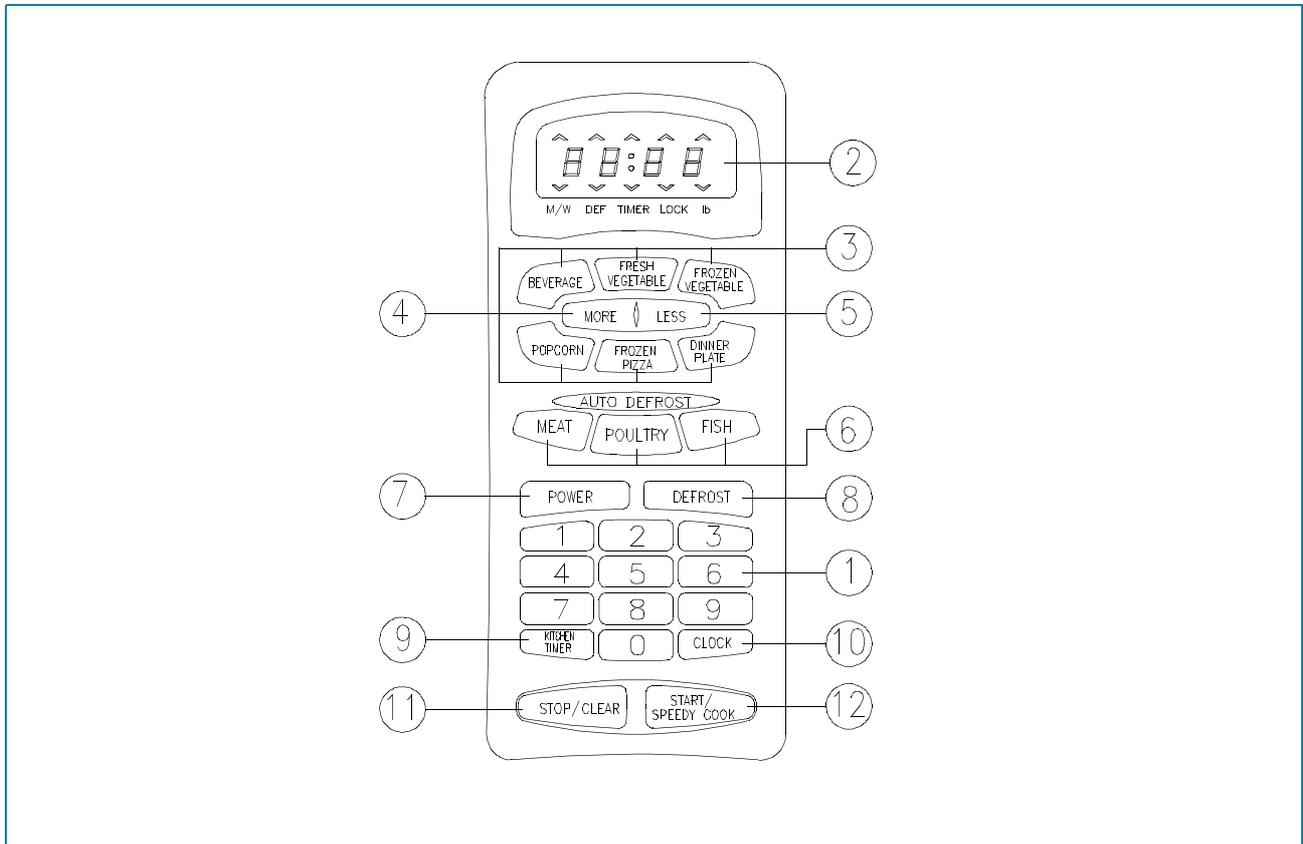


1. **Time set pad** - Used to set the cooking time and the present time.
2. **Display** - Cooking time, power level, indicators and present time are displayed.
3. **One touch** - Used to cook or reheat specific quantities of food.
4. **More** - Used to add time to cooking.
5. **Less** - Used to remove time from cooking.
6. **Auto Defrost** - Used to defrost foods.(for weight)
7. **Power** - Used to set power level.
8. **Defrost** - Used to defrost foods.(for time)
9. **Kitchen Timer** - Used as a minute timer, delay cooking, hold setting after cooking.
10. **Clock** - Used to set clock.
11. **Stop/Clear** - Used to stop the oven operation or to delete the cooking data.
12. **Start/Speedy cook** - Used to start the oven and also used to set a reheat time.

3) KOR-130A

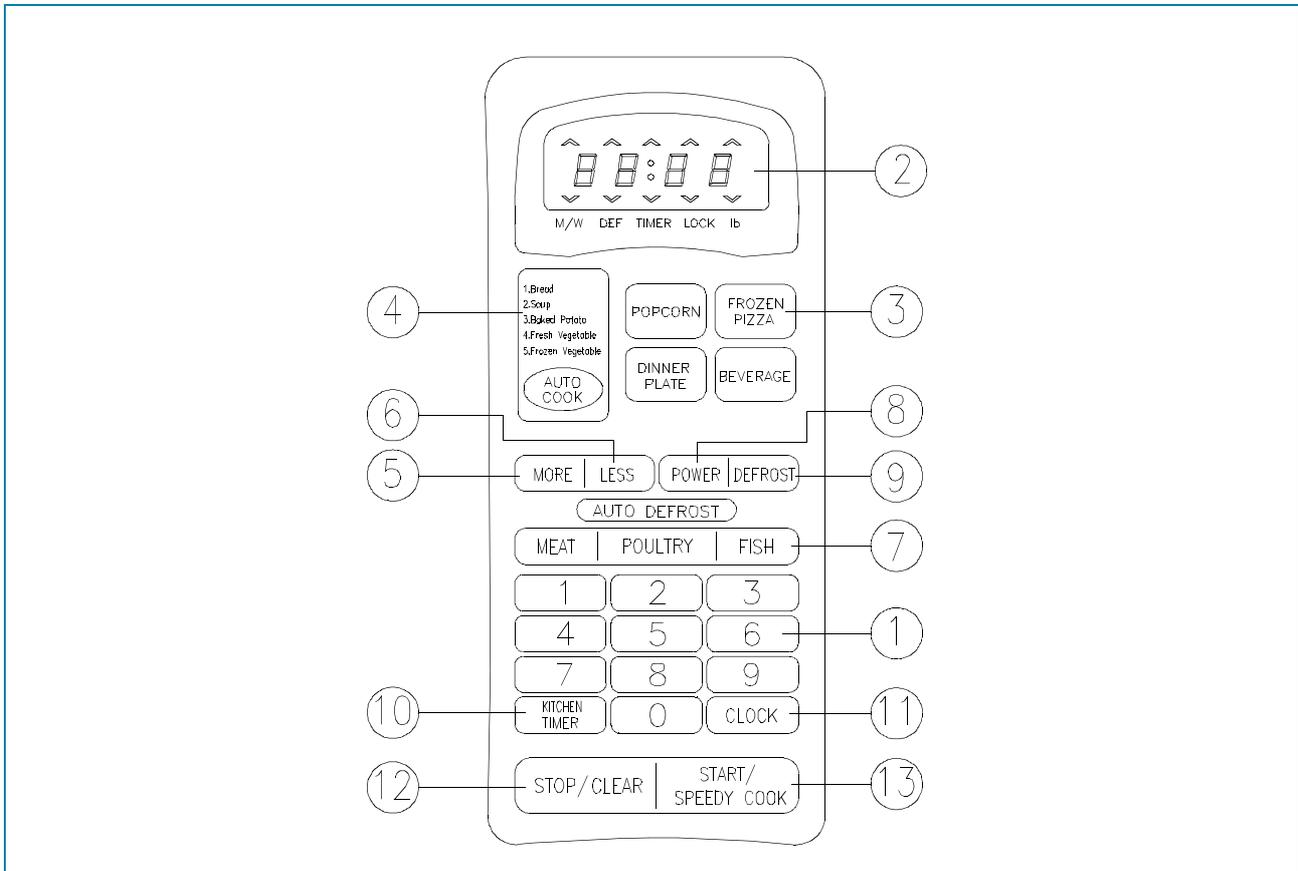

1. **Time set pad** - Used to set the cooking time and the present time.
2. **Display** - Cooking time, power level, indicators and present time are displayed.
3. **One touch** - Used to cook or reheat specific quantities of food.
4. **Auto cook** - Used to cook or reheat.
5. **More** - Used to add time to cooking.
6. **Less** - Used to remove time from cooking.
7. **Auto Defrost** - Used to defrost foods. (for weight)
8. **Power** - Used to set power level.
9. **Defrost** - Used to defrost foods. (for time)
10. **Kitchen Timer** - Used as a minute timer, delay cooking, hold setting after cooking.
11. **Clock** - Used to set clock.
12. **Stop/Clear** - Used to stop the oven operation or to delete the cooking data.
13. **Start/Speedy cook** - Used to start the oven and also used to set a reheat time.

## 4) KOR-131S4

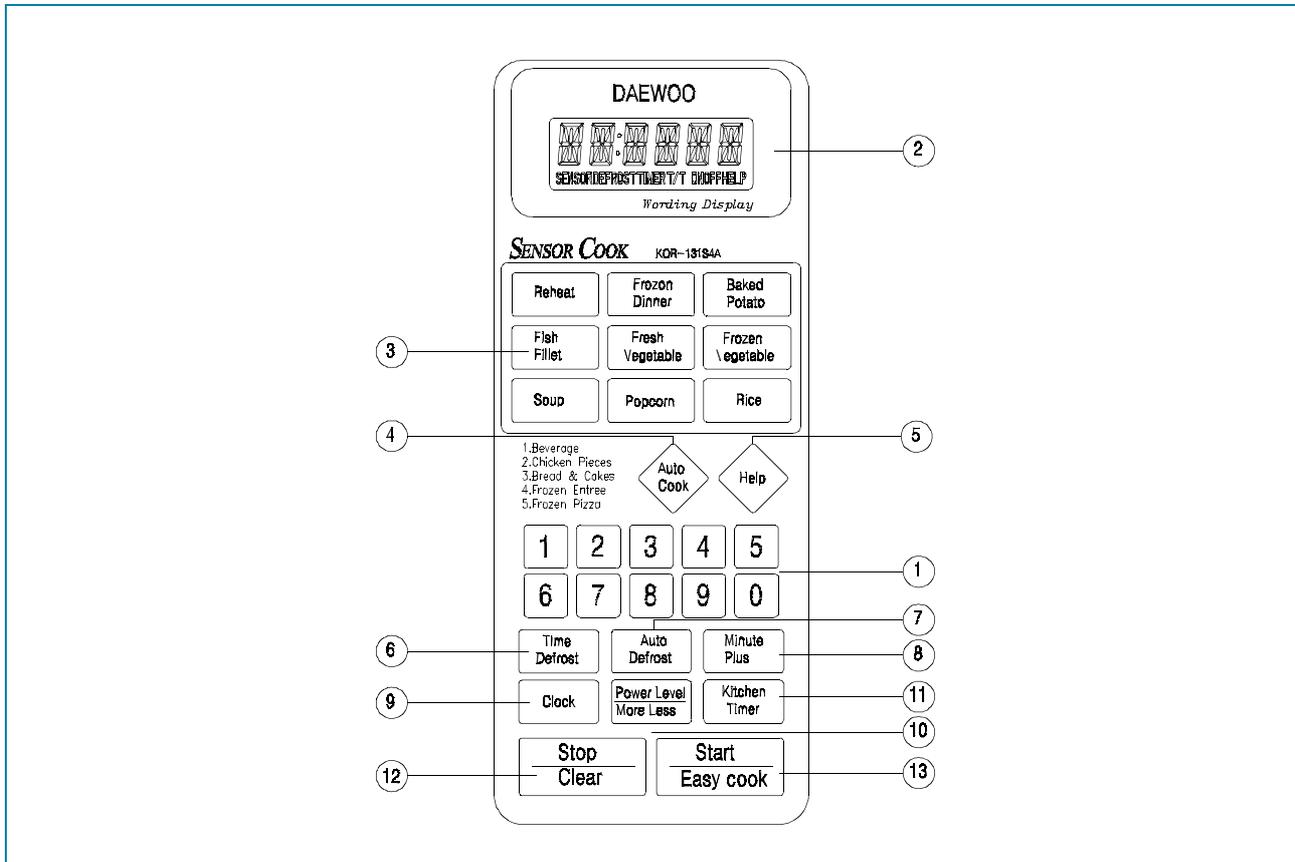

1. **Time set pad** - Used to set the cooking time and the present time.
2. **Display** - Cooking time, power level, indicators and present time are displayed.
3. **Sensor cook** - Used to automatically compute the microwave power and cooking time for foods.
4. **Auto cook** - Used to cook or reheat.
5. **Help** - Used to help you to operate the oven easily.
6. **Time defrost** - Used to defrost food. (for time)
7. **Auto defrost** - Used to defrost foods. (for weight)
8. **Minute plus** - Used to cook at 100% or to increase the cooking time by simply touching the pad.
9. **Clock** - Used to set clock.
10. **Power level/More less** - Used to set power level/Used to increase (or decrease) the cooking time for Sensor & Auto cooking.
11. **Kitchen timer** - Used as a minute timer, to delay the start of cooking, or to set a holding time after cooking.
12. **Stop/Clear** - Used to stop the oven operation or to erase all entries.
13. **Start/Easy cook** - Used to start the oven operation/Used to increase the reheat time by 30 seconds.

# INSTALLATION

## 1. Steady, flat location

This microwave oven should be set on a steady, flat surface.

## 2. Leave space behind and side

All air vents should be kept a clearance. If all vents are covered during operation, the oven may overheat and, eventually, cause oven failure.

## 3. Away from radio and TV sets

Poor television reception and radio interference may result if the oven is located close to a TV, radio, antenna or feeder and so on.

## 4. Away from heating appliances and water taps

Keep the oven away from hot air, steam or splash when choosing a place to position it, or the insulation might be adversely affected and breakdowns occur.


## 5. Power supply

Check your local power source.

This microwave oven requires a current of approximately 12 amperes, 120 Volts, 60 Hz grounded outlet.

Power supply cord is about 0.8 meters long.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
  - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - 2) The extension cord must be a grounding type 3-wire cord.
  - 3) The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

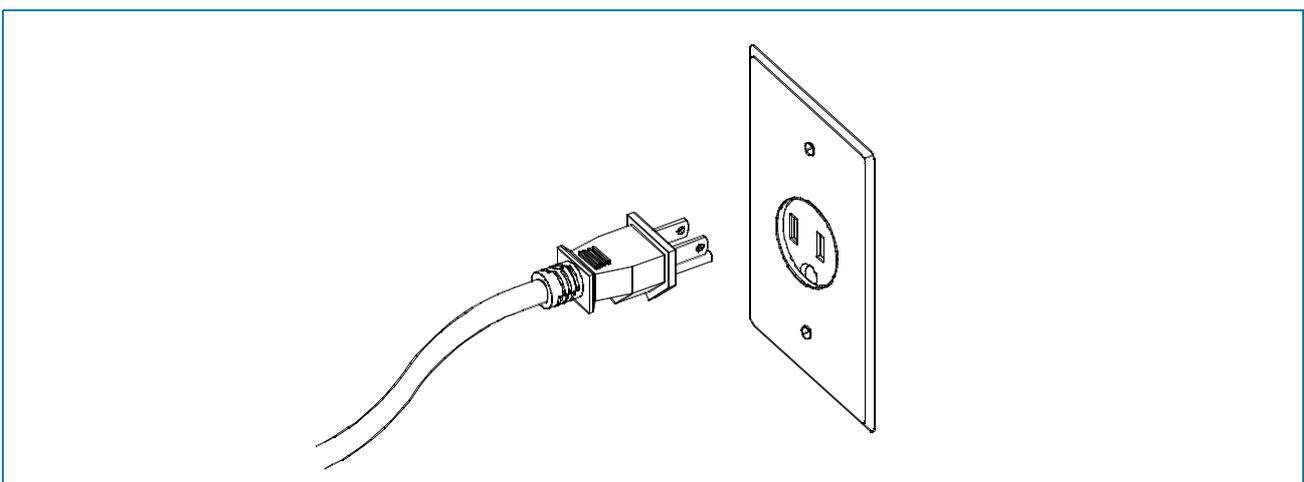

## 6. Examine the oven after unpacking for any damage such as:

A misaligned door, broken door or a dent in cavity.

If any of the above are visible, DO NOT INSTALL, and notify dealer immediately.

# OPERATIONS AND FUNCTIONS

1. Connect the main lead to an electrical outlet..
2. After placing the food in a suitable container, open the oven door and put it on the glass tray. The glass tray must always be in place during cooking.
3. Close the door securely.
4. The oven door can be opened at any time during operation by touching the door release button on the control panel. The oven will automatically shut off. To restart the oven, close the door and then touch START.
5. Each time a pad is touched, a BEEP will sound to acknowledge the touch.
6. The oven automatically cook on full power unless set to a lower power level.
7. The display will show :0 when the oven is plugged in.
8. Time clock returns to the present time when the cooking time ends.
9. When the STOP/CLEAR pad is touched during the oven operation, the oven stops cooking and all information retained. To erase all information (except the present time), touch the STOP/CLEAR pad once more. If the oven door is opened during the oven operation, all information is retained.
10. If the START pad is touched and the oven does not operate, check the area between the door and door is closed securely. The oven will not start cooking under the door is completely closed or the program has been reset.

Make sure the oven is properly installed and plugged into the electrical

## Wattage output chart

The power level is set by pressing the POWER pad. The chart shows the display, the power level and the percentage of power.

Touch Power pad.	Power level (Display)	Approximate Percentage of Power
Once	P-HI	100 %
Twice	P-90	90 %
3 times	P-80	80 %
4 times	P-70	70 %
5 times	P-60	60 %
6 times	P-50	50 %
7 times	P-40	40 %
8 times	P-30	30 %
9 times	P-20	20 %
10 times	P-10	10 %
11 times	P-00	0 %

# DISASSEMBLY AND ASSEMBLY

## Cautions to be observed when trouble shooting

Unlike many other appliances, the microwave oven is high-voltage, high-current equipment. It is completely safe during normal operation. However, carelessness in servicing the oven can result in an electric shock or possible danger from a short circuit. You are asked to observe the following precautions carefully.

1. Always remove the power plug from the outlet before servicing.
2. Use an insulated screwdriver and wear rubber gloves when servicing the high voltage side.
3. Discharge the high voltage capacitor before touching any oven components or wiring.

1) Check the grounding.

Do not operate on a two-wire extension cord.


The microwave oven is designed to be used while grounded.

It is imperative, therefore, to make sure it is grounded properly before beginning repair work.

2) Warning about the electric charge in the high voltage capacitor.

For about 30 seconds after the operation has stopped, electric charge remains in the high voltage capacitor. When replacing or checking parts, short between oven chassis and the negative high terminal of the high voltage capacitor by using a properly insulated screwdriver to discharge.

4. When the 20A fuse is blown due to the operation of the monitor switch; replace primary interlock switch, secondary interlock switch and interlock monitor switch.
5. After repair or replacement of parts, make sure that the screws are properly tightened, and all electrical connections are tightened.
6. Do not operate without cabinet.

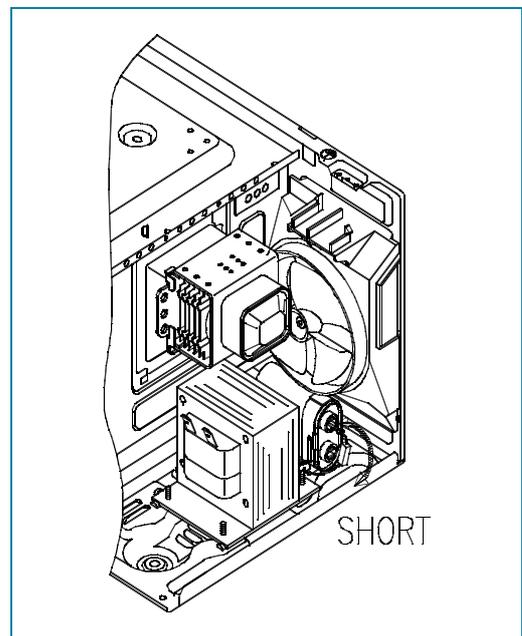

## CAUTION


Service personnel should remove their watches whenever working close to or replacing the magnetron.

## WARNING


When servicing the appliance, take care when touching or replacing high potential parts because of electrical shock or exposing microwave. These parts are as follows - HV Transformer, Magnetron, HV Capacitor, HV Diode.

**1. To remove cabinet**

- 1) Remove three screws on cabinet back.
- 2) Push the cabinet backward.

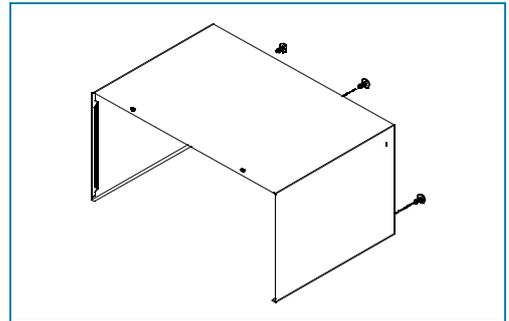**2. To remove door assembly**

- 1) Remove two screws which secure the stopper hinge top.
- 2) Remove the door assembly from top plate of cavity.
- 3) Reverse the above for reassembly.

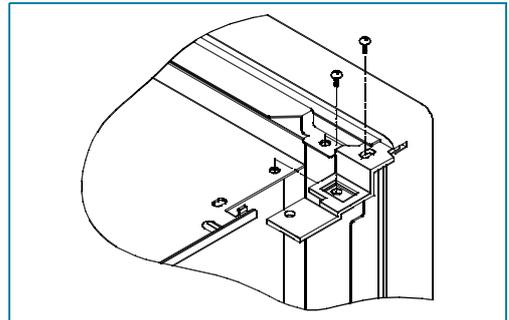
**NOTE**

After replacing the door assembly, perform a check of correct alignment with the hinge and cavity front plate.

✓ **Caution:** In this Service Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service information Center(<http://svc.dwe.co.kr>)

**DISASSEMBLY AND ASSEMBLY**

**3. To remove door parts.**

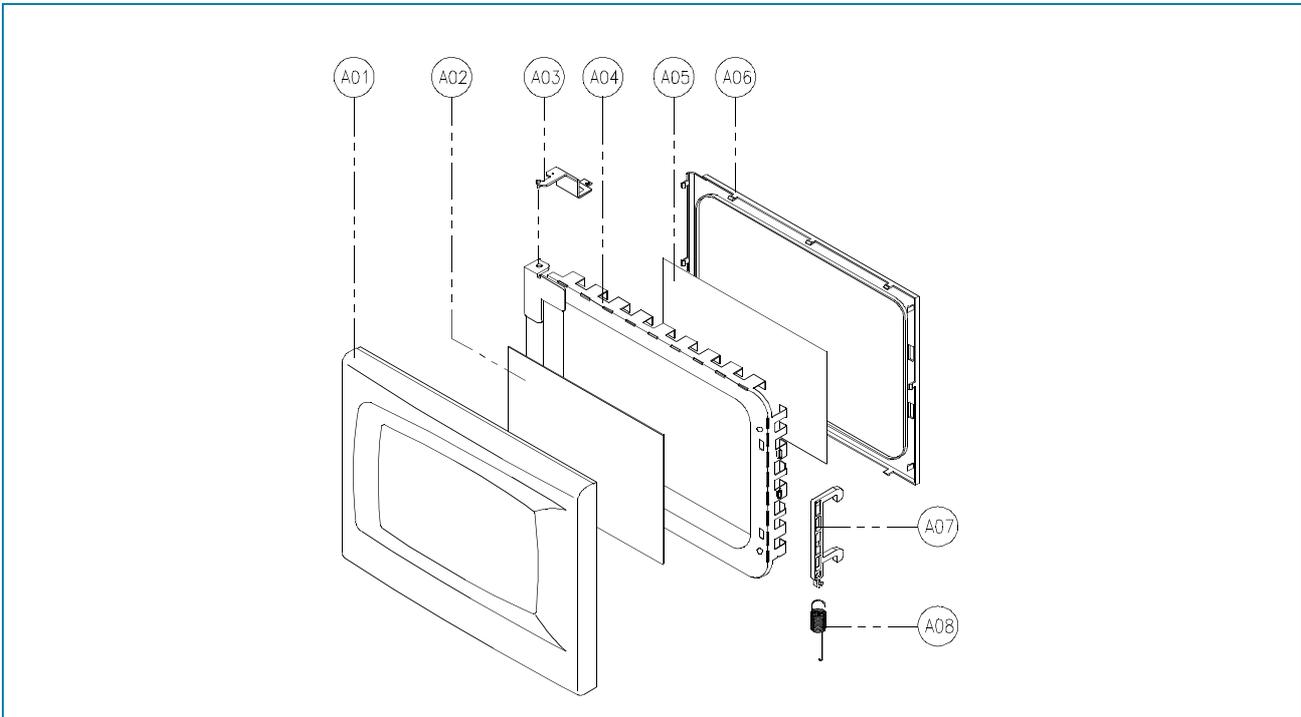

REF. NO	PART CODE	PART NAME	DESCRIPTION	Q'TY
A01	3512204600	FRAME DOOR	ABS XR-401, SR-0320M (KOR-130A)	1
	3512204500	FRAME DOOR	ABS XR-401, SR-0320M (KOR-131G/H)	1
A02	3517006500	BARRIER-SCREEN *O	PEPT T0.25	1
A03	3515202900	STOPPER HINGE *T AS	KOR-121M0A	1
A04	3511713600	DOOR PAINTING AS	KOR-131G0A	1
A05	3517006400	BARRIER SCREEN *I	PE T0.1	1
A06	3512302200	GASKET DOOR	PP	1
A07	3513101400	HOOK	POM	1
A08	3515101900	SPRING HOOK	PW-1	1

- 1) Remove the gasket door from door plate.
- 2) Remove the barrier screen inner from door plate.
- 3) Remove the door frame from door plate.
- 4) Remove the stopper hinge top from door plate.
- 5) Remove the spring and the hook.
- 6) Remove the barrier screen outer from door frame.
- 7) Reverse the above steps for reassembly.


**4. Method to reduce the gap between the door seal and the oven front surface.**

- 1) To reduce gap located on part 'A'.

Loosen two screw on stopper hinge top, and then push the door to contact the door seal to oven front surface. Tighten two screws.

- 2) To reduce gap located on part 'B'

Loosen two screws on stopper hinge under, and then push the door to contact the door seal to oven front surface. Tighten two screws.

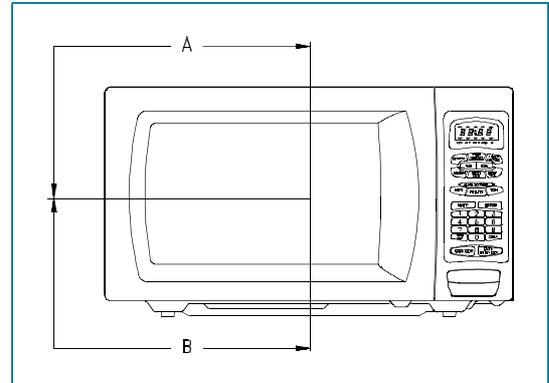
**NOTE**

A small gap may be acceptable if the microwave leakage does not exceed  $4\text{mW}/\text{cm}^2$ .

✓ **Caution:** In this Service Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service information Center(<http://svc.dwe.co.kr>)

**DISASSEMBLY AND ASSEMBLY**

**5. To remove control panel parts.**


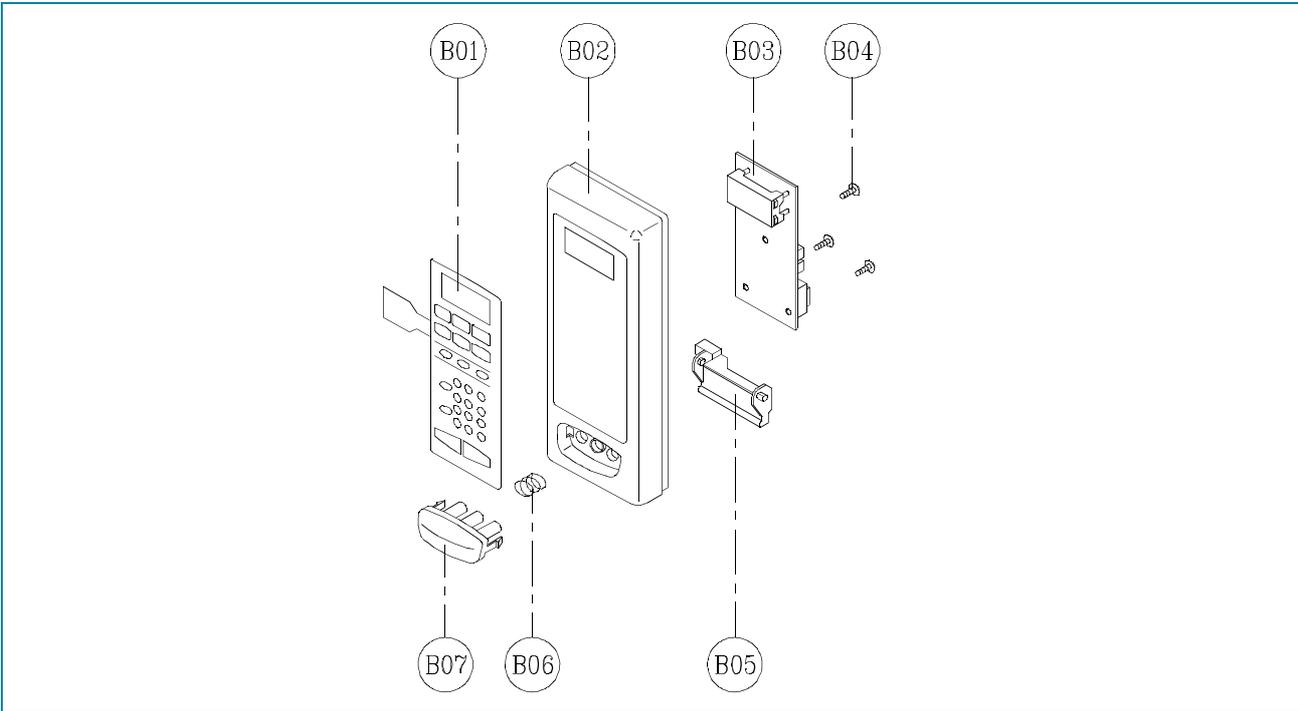


REF. NO	PART CODE	PART NAME	DESCRIPTION	Q'TY
B01	3518522420	SWITCH MEMBRANE	KOR-130A0A	1
	3518522400	SWITCH MEMBRANE	KOR-131G0A	1
	3518522410	SWITCH MEMBRANE	KOR-131H0A	1
	3518522430	SWITCH MEMBRANE	KOR-131S4A	1
B02	3516723900	CONTROL-PANEL	ABS AF-345, VE-0855 (KOR-130A)	1
	3516723910	CONTROL-PANEL	ABS AF-345, VE-0855 (KOR-131G/H,131S)	1
B03	PKMPMSXV00	PCB AS	KOR-130G0A(KOR-130A0A,KOR-131G/H0A)	1
	3514323400	PCB AS	KOR-131H4A(KOR-131H/G4A/S4A)	1
B04	7122401211	SCREW TAPPING	T2S TRS 4*12 MFZN	3
B05	3513702800	LEVER DOOR OPEN	PP	1
B06	441G430171	SPRING BUTTON	SWP DIA. 0.7	1
B07	3516908110	BUTTON DOOR OPEN	ABS AF-345, VE-0855(KOR-131G/H)	1


- 1) Remove the screw which secure the control panel, push up two snap fits and draw forward the control panel assembly.
- 2) Remove the door open lever from the control panel.
- 3) Remove three screws which secure the PCB assembly to control panel.
- 4) Disconnect membrane tail from the connector of the PCB assembly.
- 5) Detach membrane from the control panel.
- 6) Remove door open button and button spring from the control panel.
- 7) Reverse the above steps for reassembly.

**6. To remove high voltage capacitor.**



- 1) Remove a screw which secure the grounding ring terminal of the H.V.diode and the capacitor holder.
- 2) Remove the H.V. diode from the capacitor holder.
- 3) Reverse the above steps for reassembly.

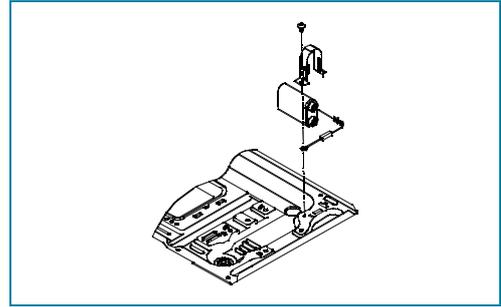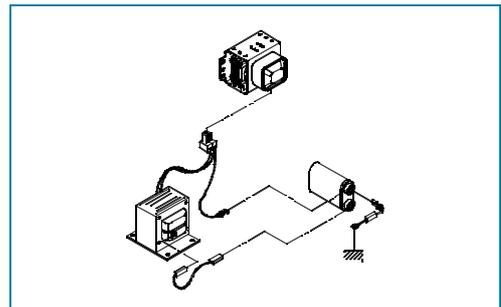**High voltage circuit wiring****7. To remove magnetron.**

- 1) Remove a screw which secure the magnetron.
- 2) Remove the magnetron.
- 3) Reverse the above steps for reassembly.

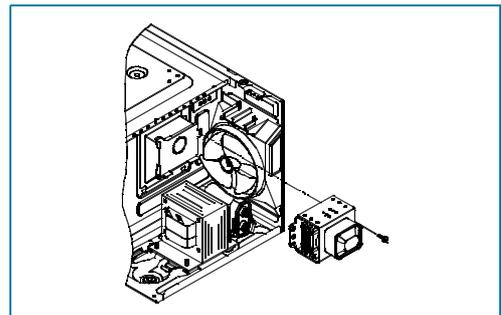**NOTE**


Never install the magnetron without the metallic gasket plate which is packed with each magnetron to prevent microwave leakage. Whenever repair work is carried out on magnetron, check the microwave leakage. It shall not exceed  $4\text{mW}/\text{cm}^2$  for a fully assembled oven with door normally closed.

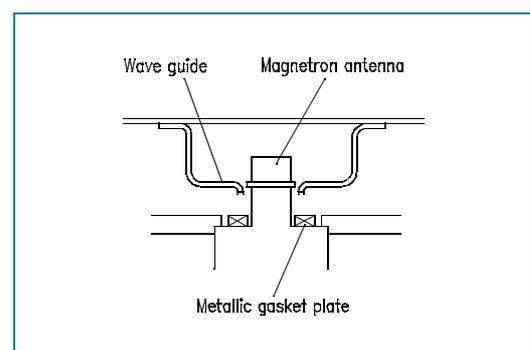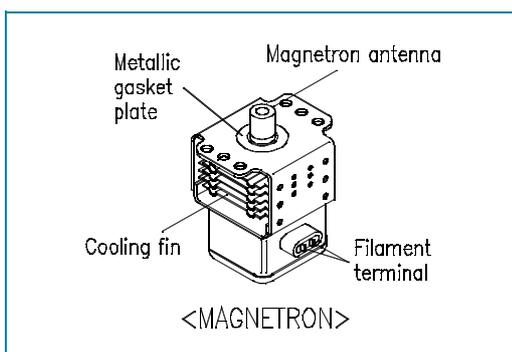

### 8. To remove wind guide assembly.


KOR-131G, KOR-131H and KOR-130A

- (1) Remove a screw which secure the wind guide assembly.
- (2) Draw forward the wind guide assembly.
- (3) Pull the fan from the motor shaft.
- (4) Remove two screws which secure the motor shaded pole.
- (5) Remove the motor shaded pole.
- (6) Reverse the above steps for reassembly.

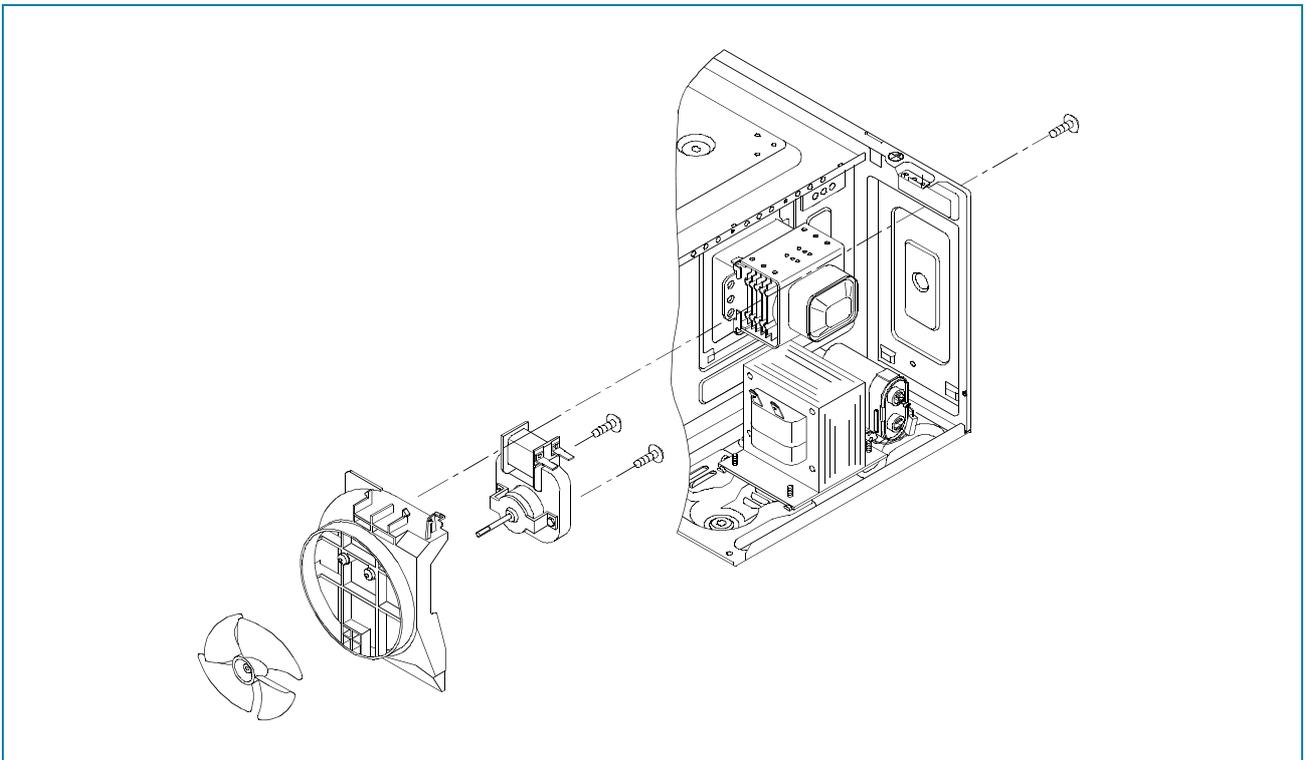


KOR-131H4, KOR-131G4 and KOR-131S4

- (1) Remove a screw which secure the wind guide assembly.
- (2) Draw forward the wind guide assembly.
- (3) Remove the noise filter from the guide wind.
- (4) Pull the fan from the motor shaft.
- (5) Remove two screws which secure the motor shaded pole.
- (6) Remove the motor shaded pole.
- (7) Reverse the above steps for reassembly.

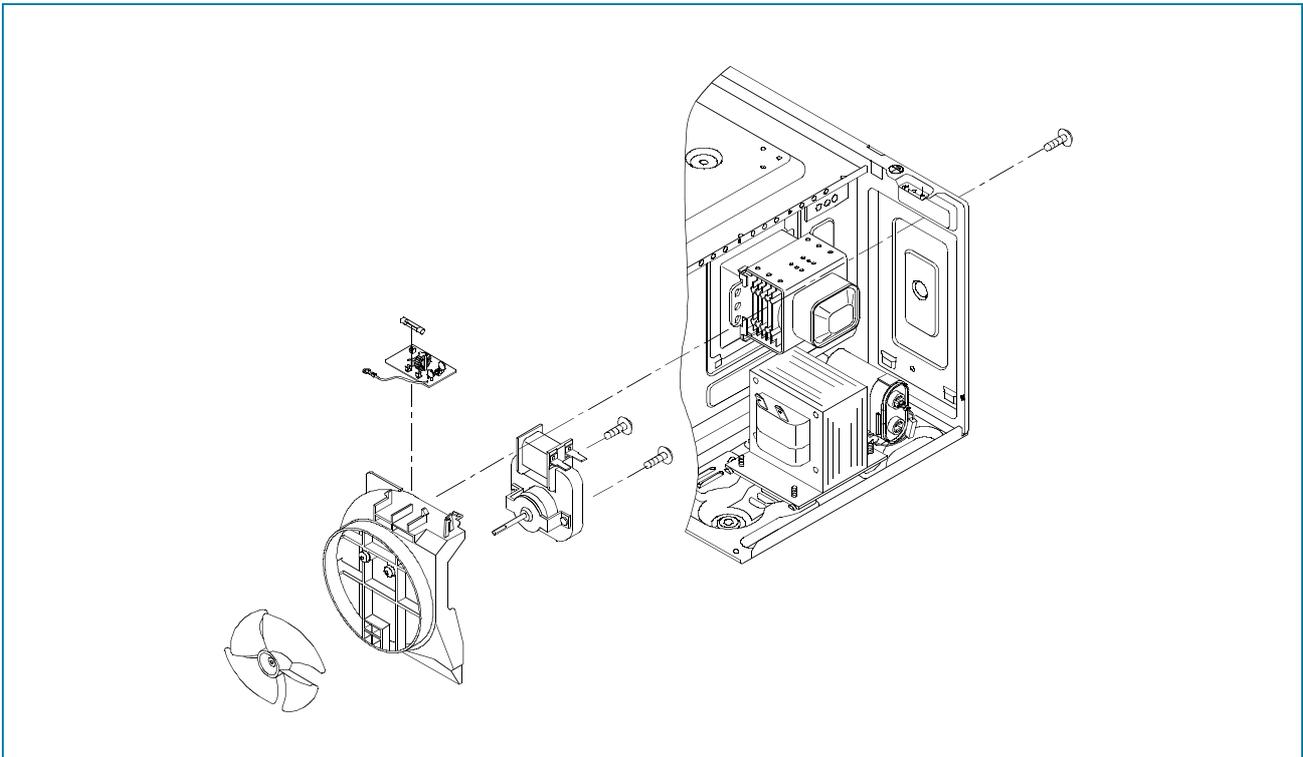


#### 9. To remove H.V.transformer.

- 1) Remove four screws holding the H.V.transformer.
- 2) Remove the H.V.transformer.
- 3) Reverse the above steps for reassembly.

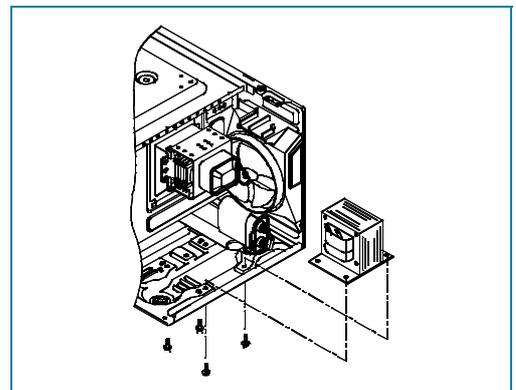

# INTERLOCK MECHANISM AND ADJUSTMENT

The door lock mechanism is a device which has been specially designed to completely eliminate microwave radiation when the door is opened during operation, and thus to perfectly prevent the danger resulting from the leakage of microwave.

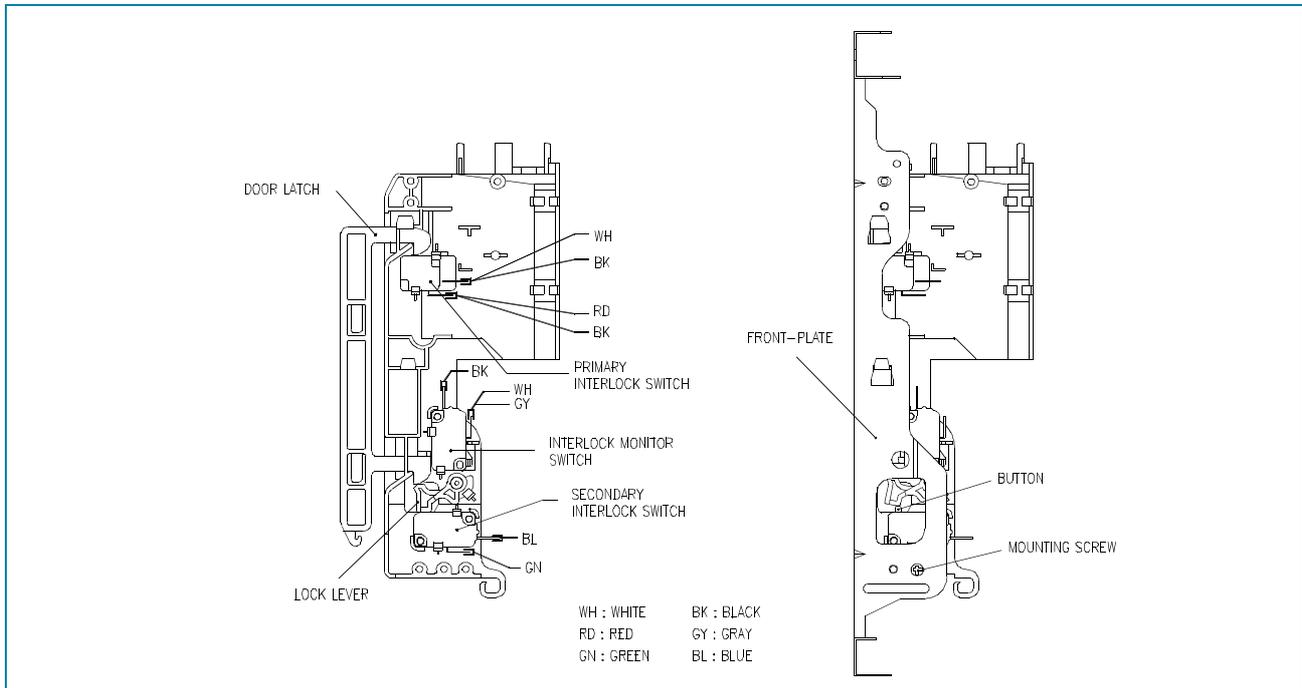

## (1) Primary interlock switch

When the door is closed, the hook locks the oven door. If the door is not closed properly, the oven will not operate.

When the door is closed, the hook pushes the button of the microswitch. Then the button of the primary interlock switch bring it under ON condition.

## (2) Secondary interlock switch and interlock monitor switch

When the door is closed, the hook pushes the lock lever downward, and also presses the button of the interlock

monitor switch to bring it under NO condition. The lock lever presses the button of the secondary interlock switch to bring it under ON condition.

## ADJUSTMENT

### Interlock monitor switch

When the door is closed, the interlock monitor switch should be changed(NO condition) before other switches are closed.

When the door is opened, the interlock monitor switch should be changed(NC condition) after other switches are opened.

## (3) Adjustment steps

- Loosen the one mounting screw.
- Adjust interlock switch assembly position.
- Make sure that lock lever moves smoothly after adjustment is completed.
- Tighten completely one mounting screw.

## NOTE

Microwave emission test should be performed after adjusting interlock mechanism. If the microwave emission exceed  $4\text{mW}/\text{cm}^2$ , readjust interlock mechanism.

# TROUBLE SHOOTING GUIDE


Following the procedure below to check if the oven is defective or not.

- 1) Check grounding before trouble checking.
- 2) Be careful of the high voltage circuit.
- 3) Discharge the high voltage capacitor.
- 4) When checking the continuity of the switches, fuse or high voltage transformer, disconnect one lead wire from these parts and check continuity with the AC plug removed. To do otherwise may result in a false reading or damage to your meter.


## NOTE

When electric parts are checked, be sure the power cord is not inserted the wall outlet.  
Check wire harness, wiring and connected of the terminals and power cord before check the parts listed below.

**(TROUBLE 1)** Oven does not operate at all : any inputs can not be accepted.

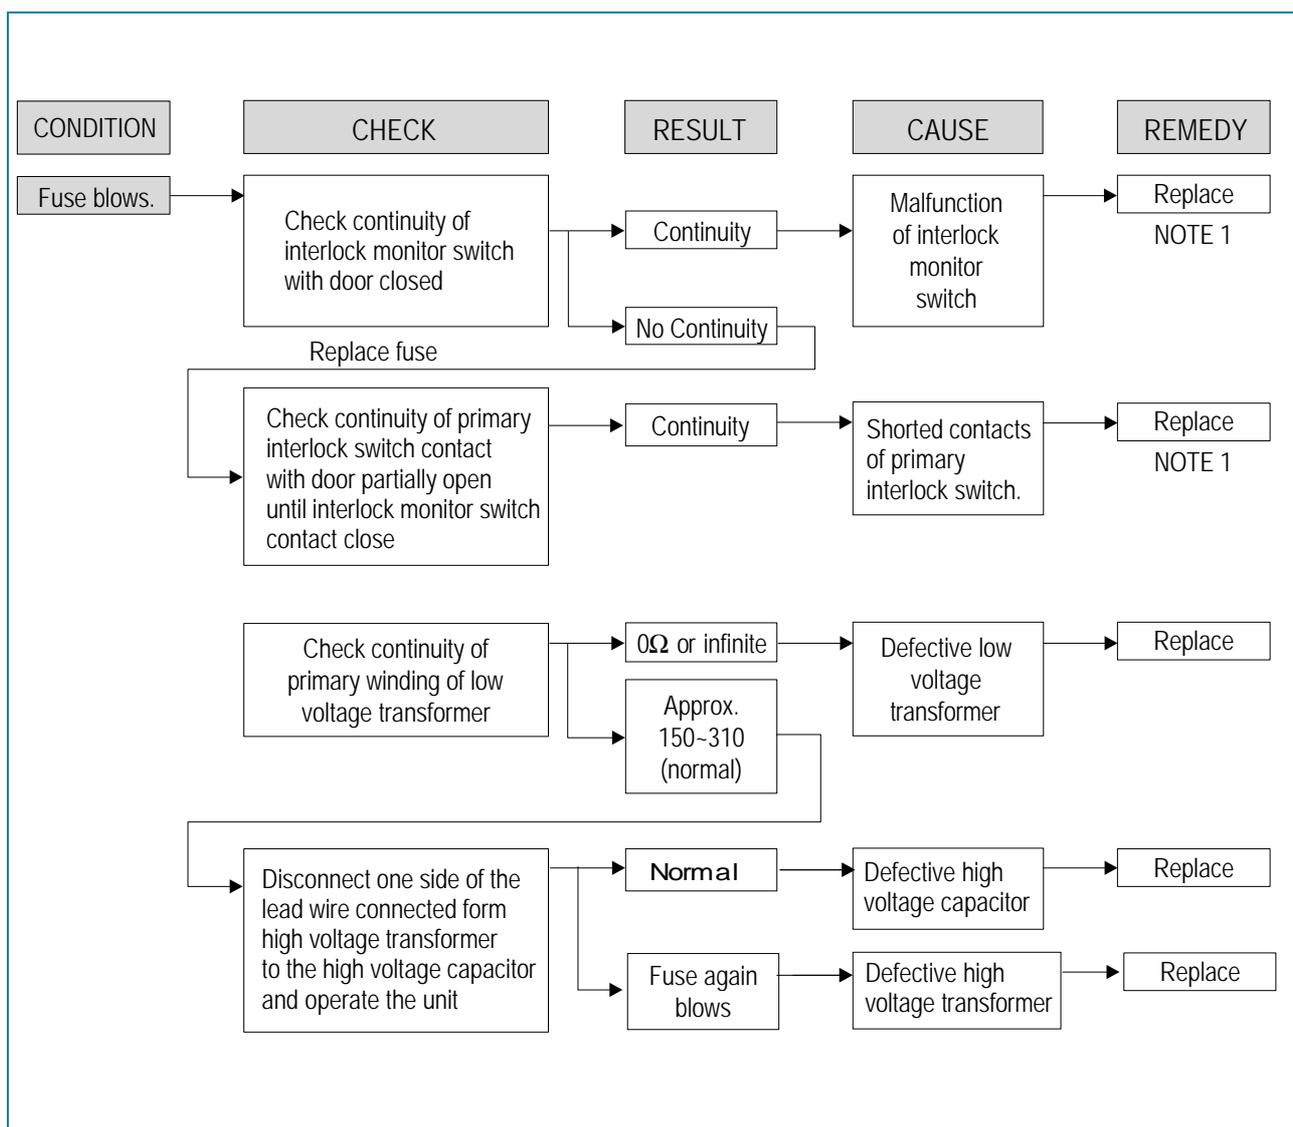


## TROUBLE SHOOTING GUIDE

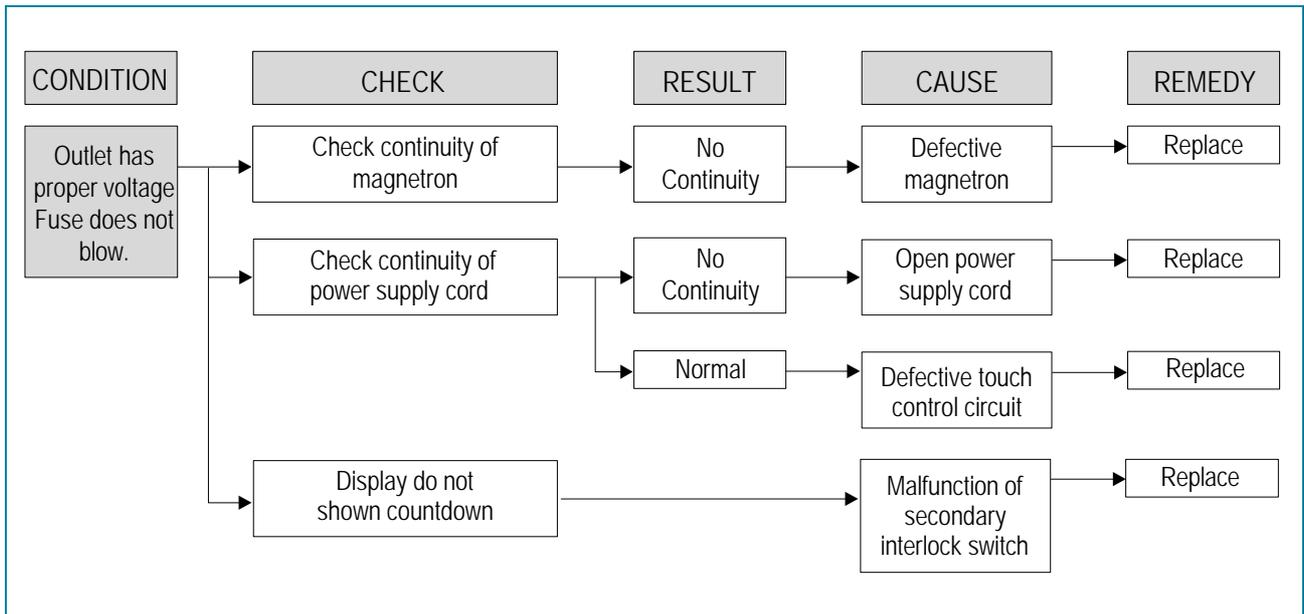


### NOTE

All these switches must be replaced at the same time, please refer to “Interlock Mechanism And Adjustment”.

( **TROUBLE 2** ) Display shows all figures selected, but oven does not start cooking, even though desired program and time are set and start pad is tapped.

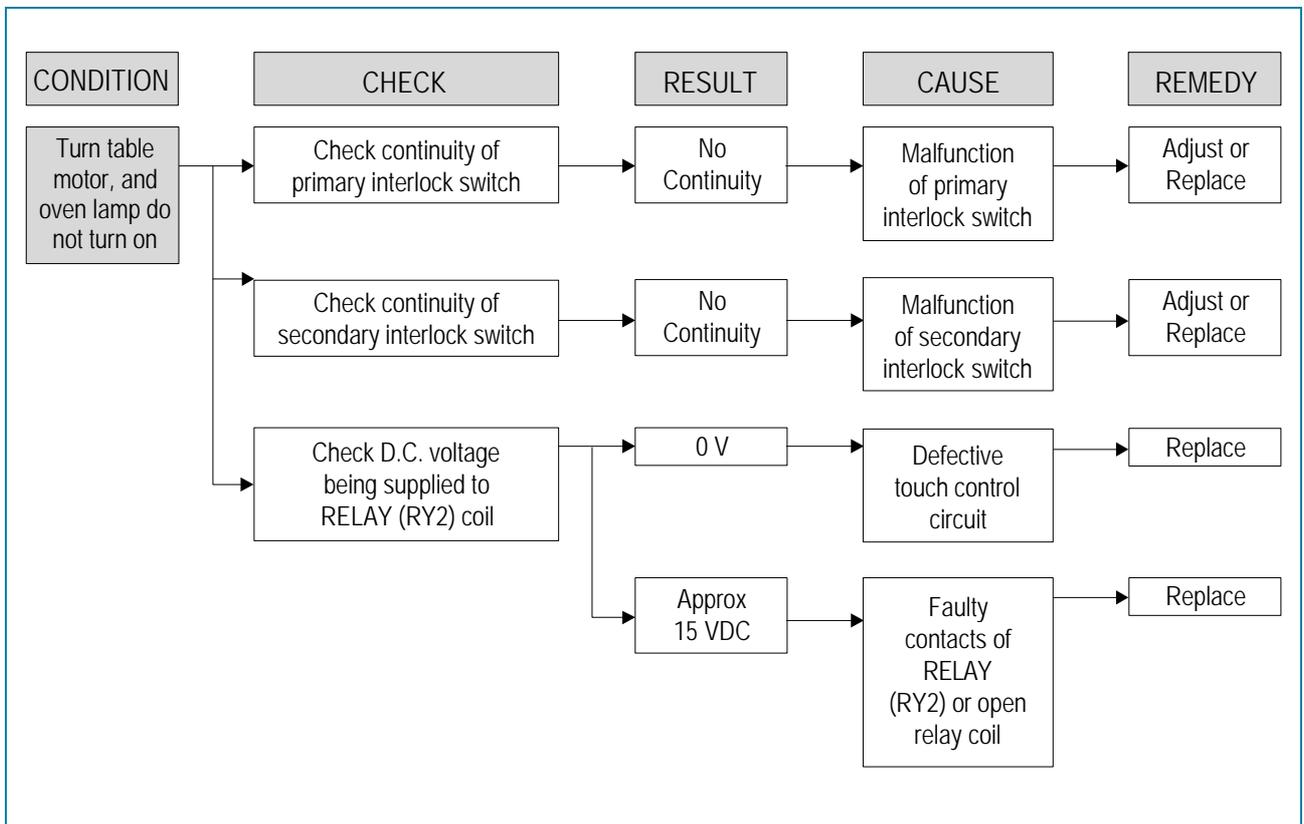



( **TROUBLE 3** ) No microwave oscillation even though fan motor rotates.

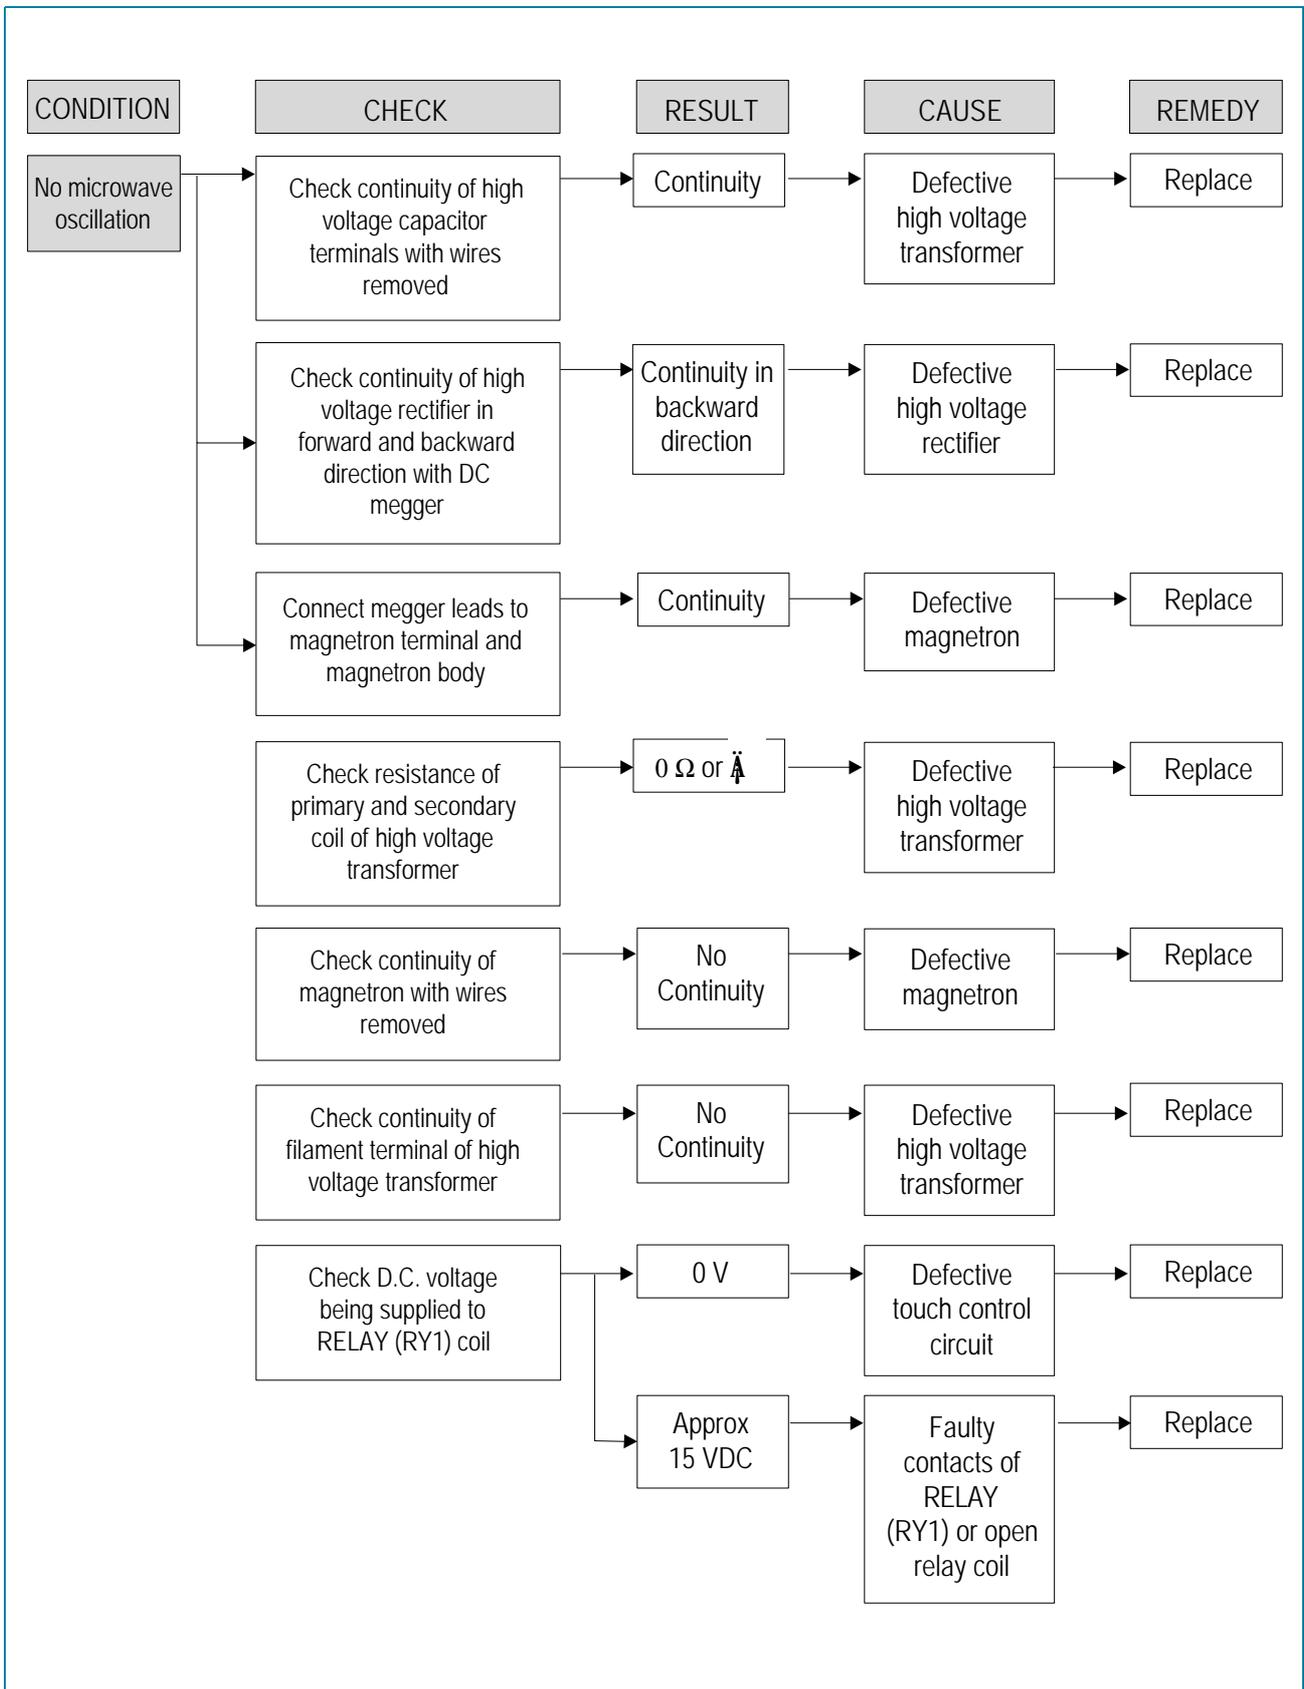

## TROUBLE SHOOTING GUIDE

( **TROUBLE 4** ) The following visual conditions indicate a probable defective touch control circuit or membrane switch assembly.

1. Incomplete segments,
  - 1) Segments missing.
  - 2) Partical segments missing.
  - 3) Digit flickering other than normal display slight flickering.
  - 4) “ : 0 ” does not display when power is on.
2. A distinct change in the diplay are not on when they numbers is the display.
3. One or more digits in the diplay are not on when they should be.
4. Display indicates a number different from one touched.
5. Specific numbers (for example 2 or 3) will not display when the panel is touched.
6. Display does not count down or up with time cooking or clock operation.
7. Oven is programmable and cooks normally but no display shows.
8. Display obviously jumps in time while counting down.
9. Display counts down noticeably too fast while cooking.
10. Display does not show the time of day when clear pad is touched.
11. Oven lamp and turntable motor do not stop although cooking is finished. Check if the RELAY 2 contacts close if they are close, replace touch control circuit.

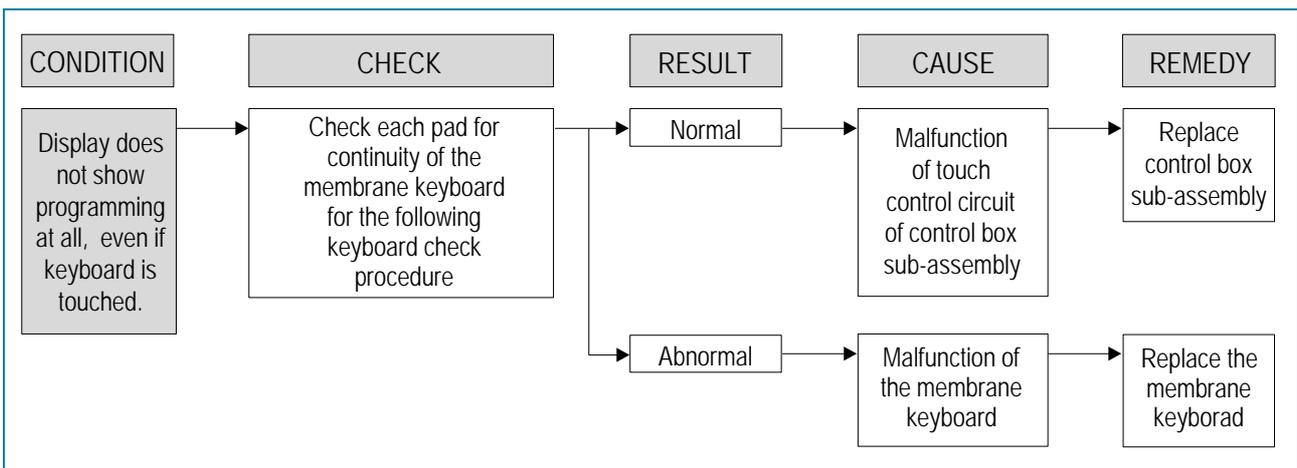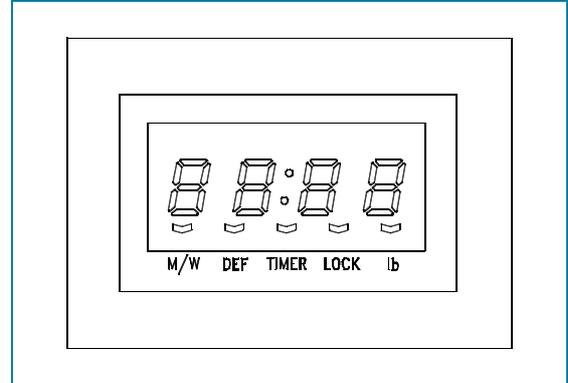

### NOTE

Before following the particular steps listed above in the trouble shooting guide for the membrane keyboard's, failure, please check for the continuity of each wire-harness between the membrane keyboard and P.C.B. assembly.

# MEASUREMENT AND TEST


## 1. MEASUREMENT OF THE MICROWAVE POWER OUTPUT

Microwave output power can be checked by indirectly measuring the temperature rise of a certain amount of water exposed to the microwave as directed below.

### PROCEDURE

- Microwave power output measurement is made with the microwave oven supplied at rated voltage and operated at its maximum microwave power setting with a load of  $1000 \pm 5\text{cc}$  of potable water.
- The water is contained in a cylindrical borosilicate glass vessel having a maximum material thickness of 3 mm and an outside diameter of approximately 190 mm.
- The oven and the empty vessel are at ambient temperature prior to the start of the test. The initial temperature of the water is  $10 \pm 2^\circ\text{C}$  ( $50 \pm 3.6^\circ\text{F}$ ). It is measured immediately before the water is added to the vessel. After addition of the water to the vessel, the load is immediately placed on the center of the shelf, which is in the lowest normal position.
- Microwave power is switched on.
- Heating time should be exactly A seconds.  
(Refer to table as following)  
Heating time is measured while the microwave generator is operating at full power. The filament heat-up time for magnetron is not included.
- The initial and final temperature of water is selected so that the maximum difference between the ambient and final water temperature is 5K.
- The microwave power output P in watts is calculated from the following formula:

$$P = 4187 \times T$$

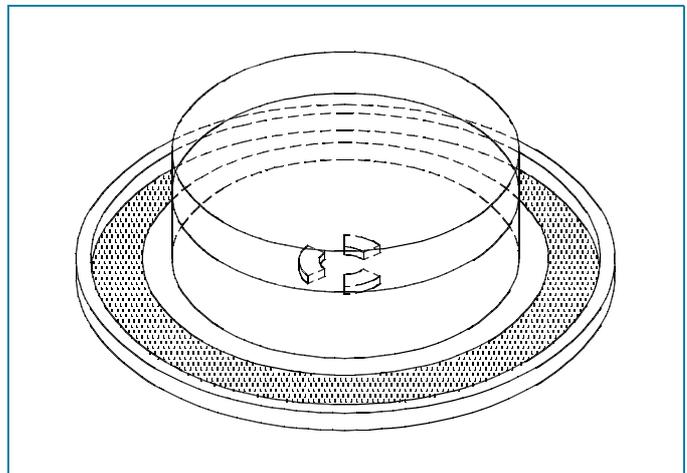

T is difference between initial and ending temperature.

t is the heating time.

The power measured should be B (Refer to SPECIFICATIONS)  $W \pm 10.0\%$ .

### CAUTION

- Water load should be measured exactly to 1 liters.
- Input power voltage should be exactly specified voltage (Refer SPECIFICATIONS).
- Ambient temperature should be  $20 \pm 2^\circ\text{C}$  ( $68 \pm 3.6^\circ\text{F}$ )

\* Heating time for power output:

A (second)	70	64	60	56	52	49	47	44	42	40	38
B (W)	600	650	700	750	800	850	900	950	1000	1050	1100


### 2. MICROWAVE RADIATION TEST

#### CAUTION

1. Make sure to check the microwave leakage before and after repair of adjustment.
2. Always start measuring of an unknown field to assure safety for operating personnel from microwave energy.
3. Do not place your hands into any suspected microwave radiation field unless the safe density level is known.
4. Care should be taken not to place the eyes in direct line with the source of microwave energy.
5. Slowly approach the unit under test until the radiometer reads an appreciable microwave leakage from the unit under the test.

#### PROCEDURE

1. Prepare Microwave Energy Survey Meter, 600cc glass beaker, and glass thermometer 100°C (212°F).
2. Pour 275cc ±15cc of tap water initially at 20 ± 5 °C (68 ± 9°F) in the 600 cc glass beaker with an inside diameter of approx. 95mm(3.5 in.).
3. Place it at the center of the tray and set it in a cavity.
4. Close the door and operate the oven.
5. Measure the leakage by using Microwave Energy Survey Meter with dual ranges, set to 2450MHz.
  - 1) Measured radiation leakage must not exceed the value prescribed below. Leakage for a fully assembled oven with door normally closed must be less than 4mW/cm<sup>2</sup>.
  - 2) When measuring the leakage, always use the 5cm (2 in.) space cone with probe. Hold the probe perpendicular to the cabinet and door. Place the space cone of the probe on the door, cabinet, door seem, door viewing screen, the exhaust air vents and the suction air vents.
  - 3) Measuring should be in a counter-clockwise direction at a rate of 1 in./sec. If the leakage of the cabinet door seem is unknown, move the probe more slowly.
  - 4) When measuring near a corner of the door, keep the probe perpendicular to the areas making sure the probe end at the base of the cone does not get closer than 2 in. from any metal. If it does not, erroneous reading may result.

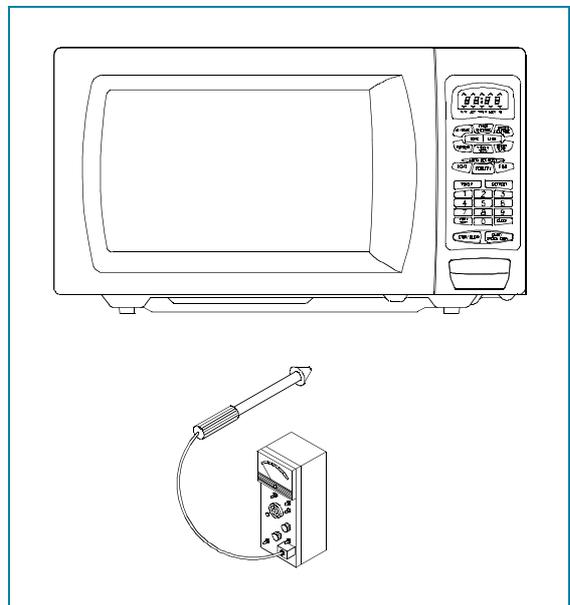

### 3. COMPONENT TEST PROCEDURE

High voltage is present at the high voltage terminal of the high voltage transformer during any cooking cycle.

It is neither necessary nor advisable to attempt measurement of the high voltage.

Before touching any oven components or wiring, always unplug the oven from its power source and discharge the capacitor.

#### 1. High voltage transformer

1) Remove connections from the transformer terminals and check continuity.

2) Normal readings should be as follows :

Secondary winding ... Approx. 110  $\Omega$   $\pm$ 10%

Filament winding ... Approx. 0  $\Omega$

Primary winding ... Approx. 1  $\Omega$

#### 2. High voltage capacitor

1) Check continuity of capacitor with meter on the highest OHM scale.

2) A normal capacitor will show continuity for a short time, and then indicate 10M  $\Omega$  once the capacitor charged.

3) A shorted capacitor will show continuous continuity.

4) An open capacitor will show constant 10M  $\Omega$  .

5) Resistance between each terminal and chassis should be infinite.

#### 3. High voltage diode

1) Isolate the diode from the circuit by disconnecting the leads.

2) With the ohmmeter set on the highest resistance scale measure the resistance across the diode terminals. Reverse the meter leads and again observe the resistance reading. Meter with 6V, 9V or higher voltage batteries should be used to check the front-back resistance of the diode, otherwise an infinite resistance may be read in both directions. A normal diode's resistance will be infinite in one direction and several hundred k  $\Omega$  in the other direction.

#### 4. Magnetron

For complete magnetron diagnosis, refer to "Measurement of the Microwave Power Output. " Continuity checks can only indicate an open filament or a shorted magnetron. To diagnose for an open filament or a shorted magnetron,

1) Isolate magnetron from the circuit by disconnecting the leads.


2) A continuity check across magnetron filament terminals should indicate 0.1  $\Omega$  or less.

3) A continuity check between each filament terminal and magnetron case should read open.

#### 5. Fuse

If the fuse in the primary and monitor switch circuit is blown when the door is opened, check the primary and monitor switch before replacing the blown fuse. In case the fuse is blown by an improper switch operation, replace the defective switch and fuse at the same time. Replace just the fuse if the switches operate normally.

# WIRING DIAGRAM

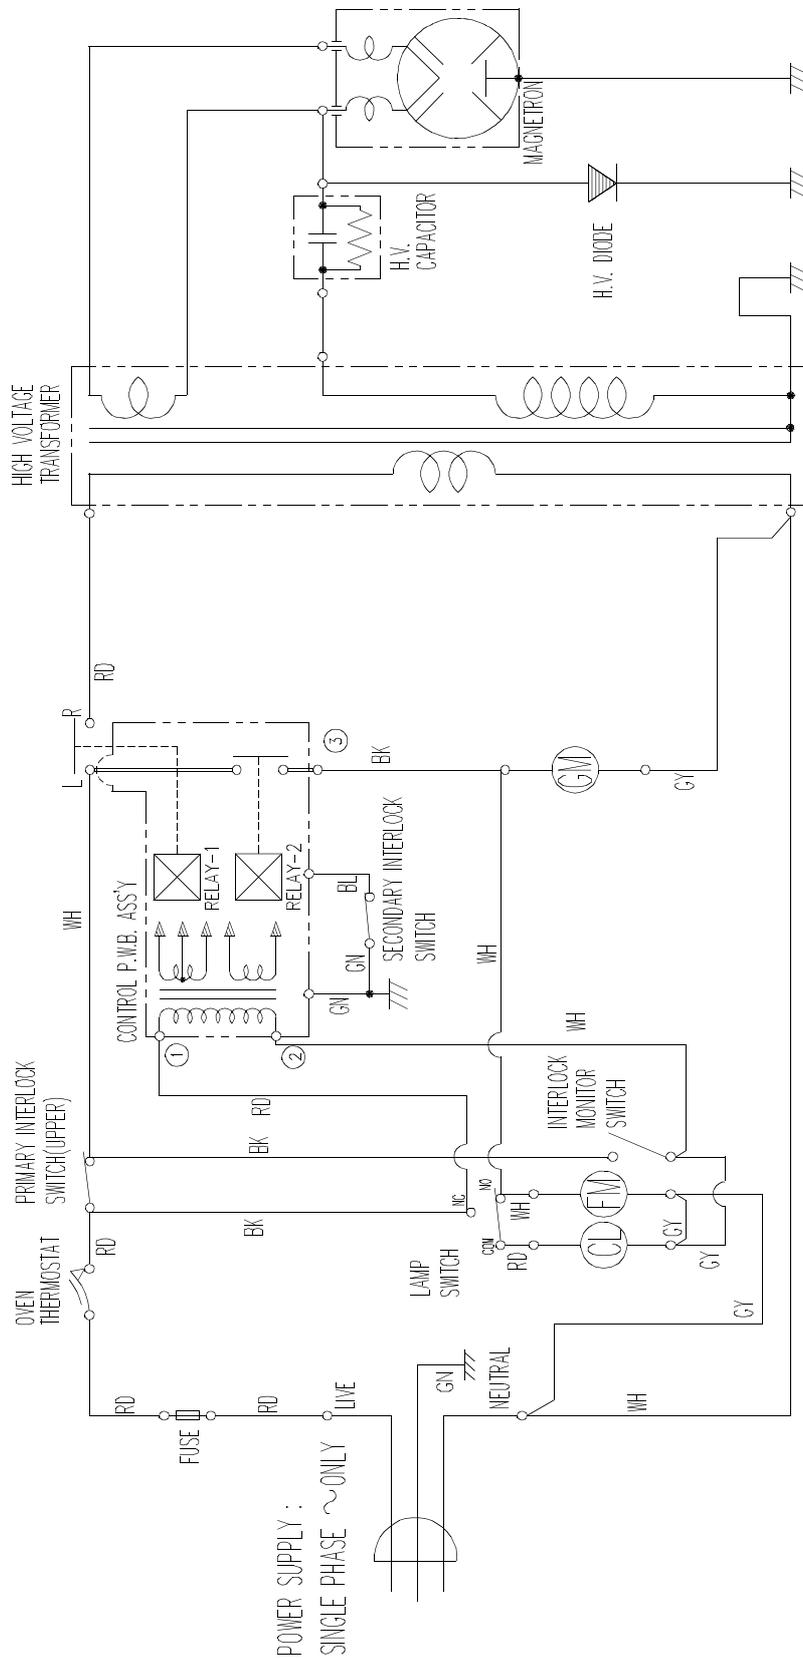

- NOTE : RD : RED  
 WH : WHITE  
 BK : BLACK  
 GN : GREEN  
 BR : BROWN
- OR : ORANGE  
 BL : BLUE  
 BK : BLACK  
 GN : GREEN  
 GE : GREEN/YELLOW
- CL : CAVITY LAMP  
 FM : FAN(BLOWER) MOTOR  
 GM : GEARED MOTOR
- [ CONDITION ]  
 DOOR : CLOSED  
 COOK : OFF

# PRINTED CIRCUIT BOARD

## 1. CIRCUIT CHECK PROCEDURE

### 1. Low voltage transformer check

The low voltage transformer is located on the P.C.B.

Measuring condition: Input voltage: 120 V / Frequency: 60Hz



Terminal Voltage	LOAD	NO LOAD
4 - 7	AC 12.6 V	AC 14.7 V

### NOTE

1. Refer to Circuit Diagram (point 4).
2. Secondary side voltage of the low voltage transformer changes in proportion to fluctuation of power source voltage.
3. The allowable tolerance of the secondary voltage is within  $\frac{3}{4}$  5% of nominal voltage.

### 2. Voltage check

- Key check point

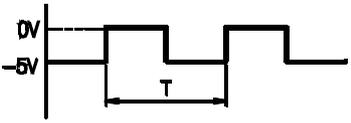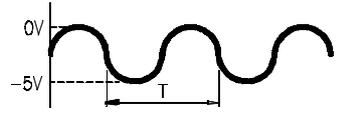
NO	CHECK POINT	REMARK
1	IC1 PIN 2,21,30,34	-5VDC
2	IC1 PIN 35	 <p>T : 16.7ms(60Hz)</p>
3	IC1 PIN 31 OR 32	 <p>T : 250 ns(4MHz)</p>

- Check method

NO	MEASURE POINT	WAVE FORM	REMEDY	REMARK
1	MP1	DC -5V $\pm$ 0.25V	Replace VL1, EC1	NO LOAD
2	MP2	DC -12V $\pm$ 2.0V	Replace EC2, D12,13,14	NO LOAD

### NOTE

Each measure point must be measured with GND points.

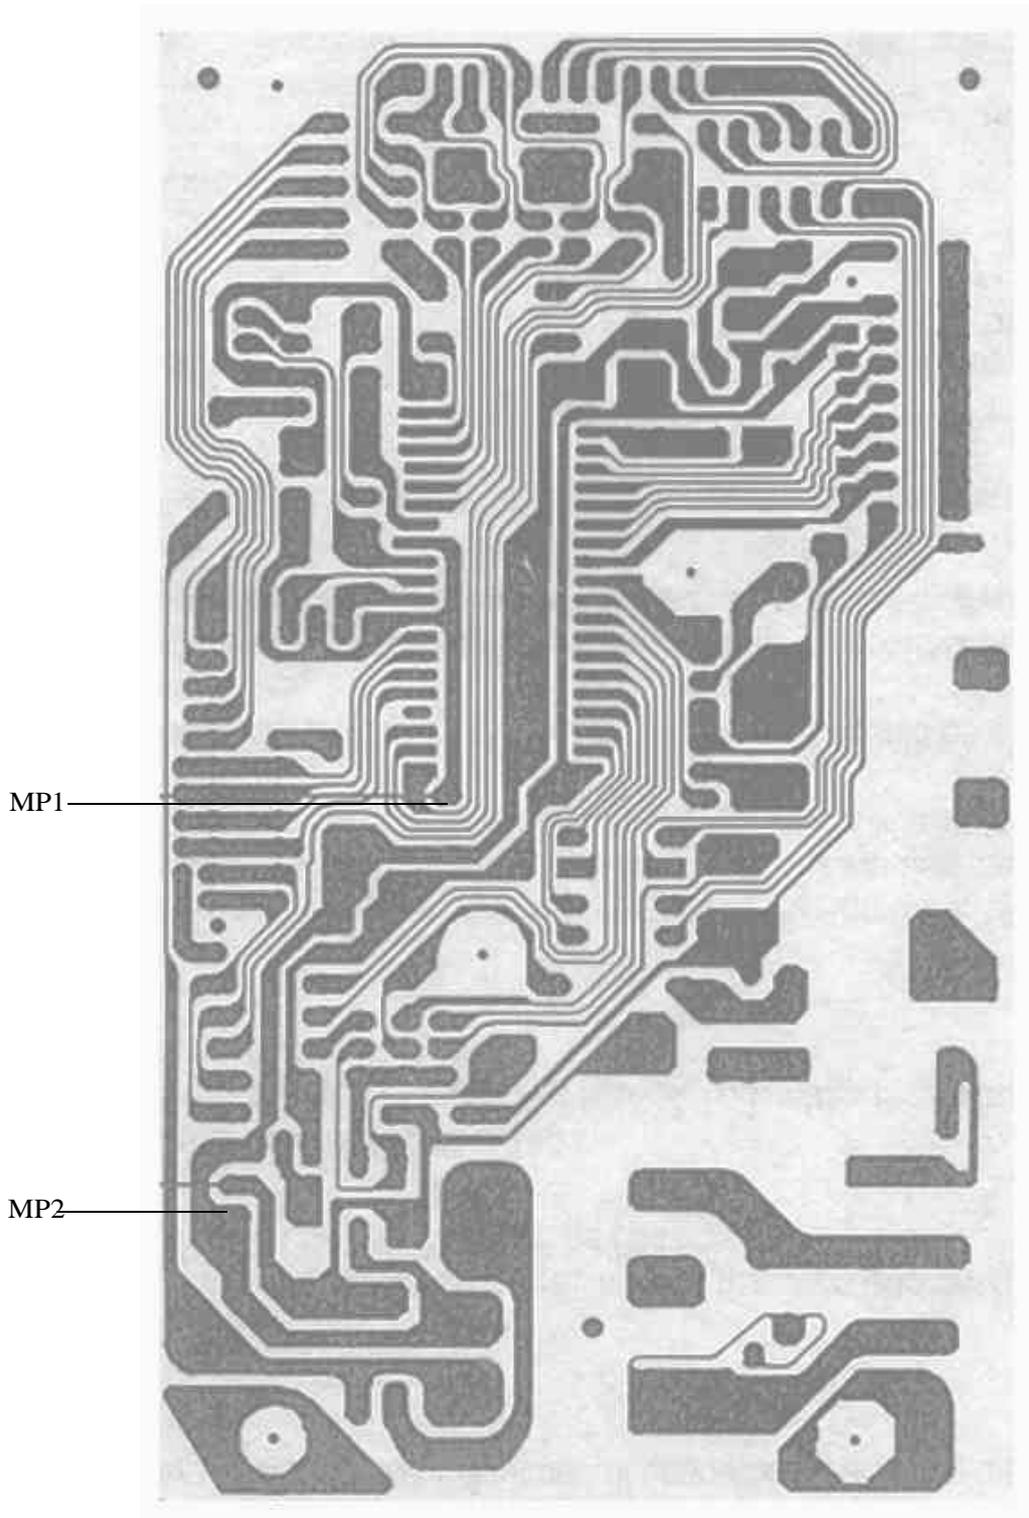

Measure Point

**3. When there is no microwave oscillation**

- 1) When touching **START** pad, oven lamp does not turn on.  
 Fan motor does not rotate, but cook indicator in display comes on.

\* Cause : **RELAY 2** does not operate. ꝑ refer to Circuit Diagram ( Point 3)

- Check method

STATE \ POINT	A	B
<b>RELAY 2 ON</b>	- 5VDC	GND
<b>RELAY 2 OFF</b>	GND	- 12VDC

- 2) When touching **START** pad, oven lamp turns on.  
 Fan motor and turntable rotate and cook indicator in display comes on.

\* Cause : **RELAY 1** does not operate. ꝑ refer to Circuit Diagram ( Point 2 )

- Check method

STATE \ POINT	A	B
<b>RELAY 1 ON</b>	-5VDC	GND
<b>RELAY 1 OFF</b>	GND	-12VDC

**4. When the door is opened during operation, the count down timer does not stop.**

ꝑ refer to Circuit Diagram( Point 1 )

 
- Check method

STATE \ POINT	A	B
1) DOOR OPEN	OPEN	-5VDC
2) DOOR CLOSED	CLOSE	GND

CHECK NO	METHOD	REMEDY
1	Check the stage(ON,OFF) of the secondary interlock switch by resistance measurement.	Replace secondary interlock switch.


**5. When the digital clock does not operate properly.**

ꝑ refer to Circuit Diagram( Point 5 )

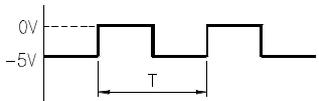POINT	WAVE FORM
A	 <p>T: 16.67 ms(60Hz)</p>

⌀ If clock does not keep exact time, you must check resistor R15,16, zener diode ZD1.

2. P.C.B. CIRCUIT DIAGRAM

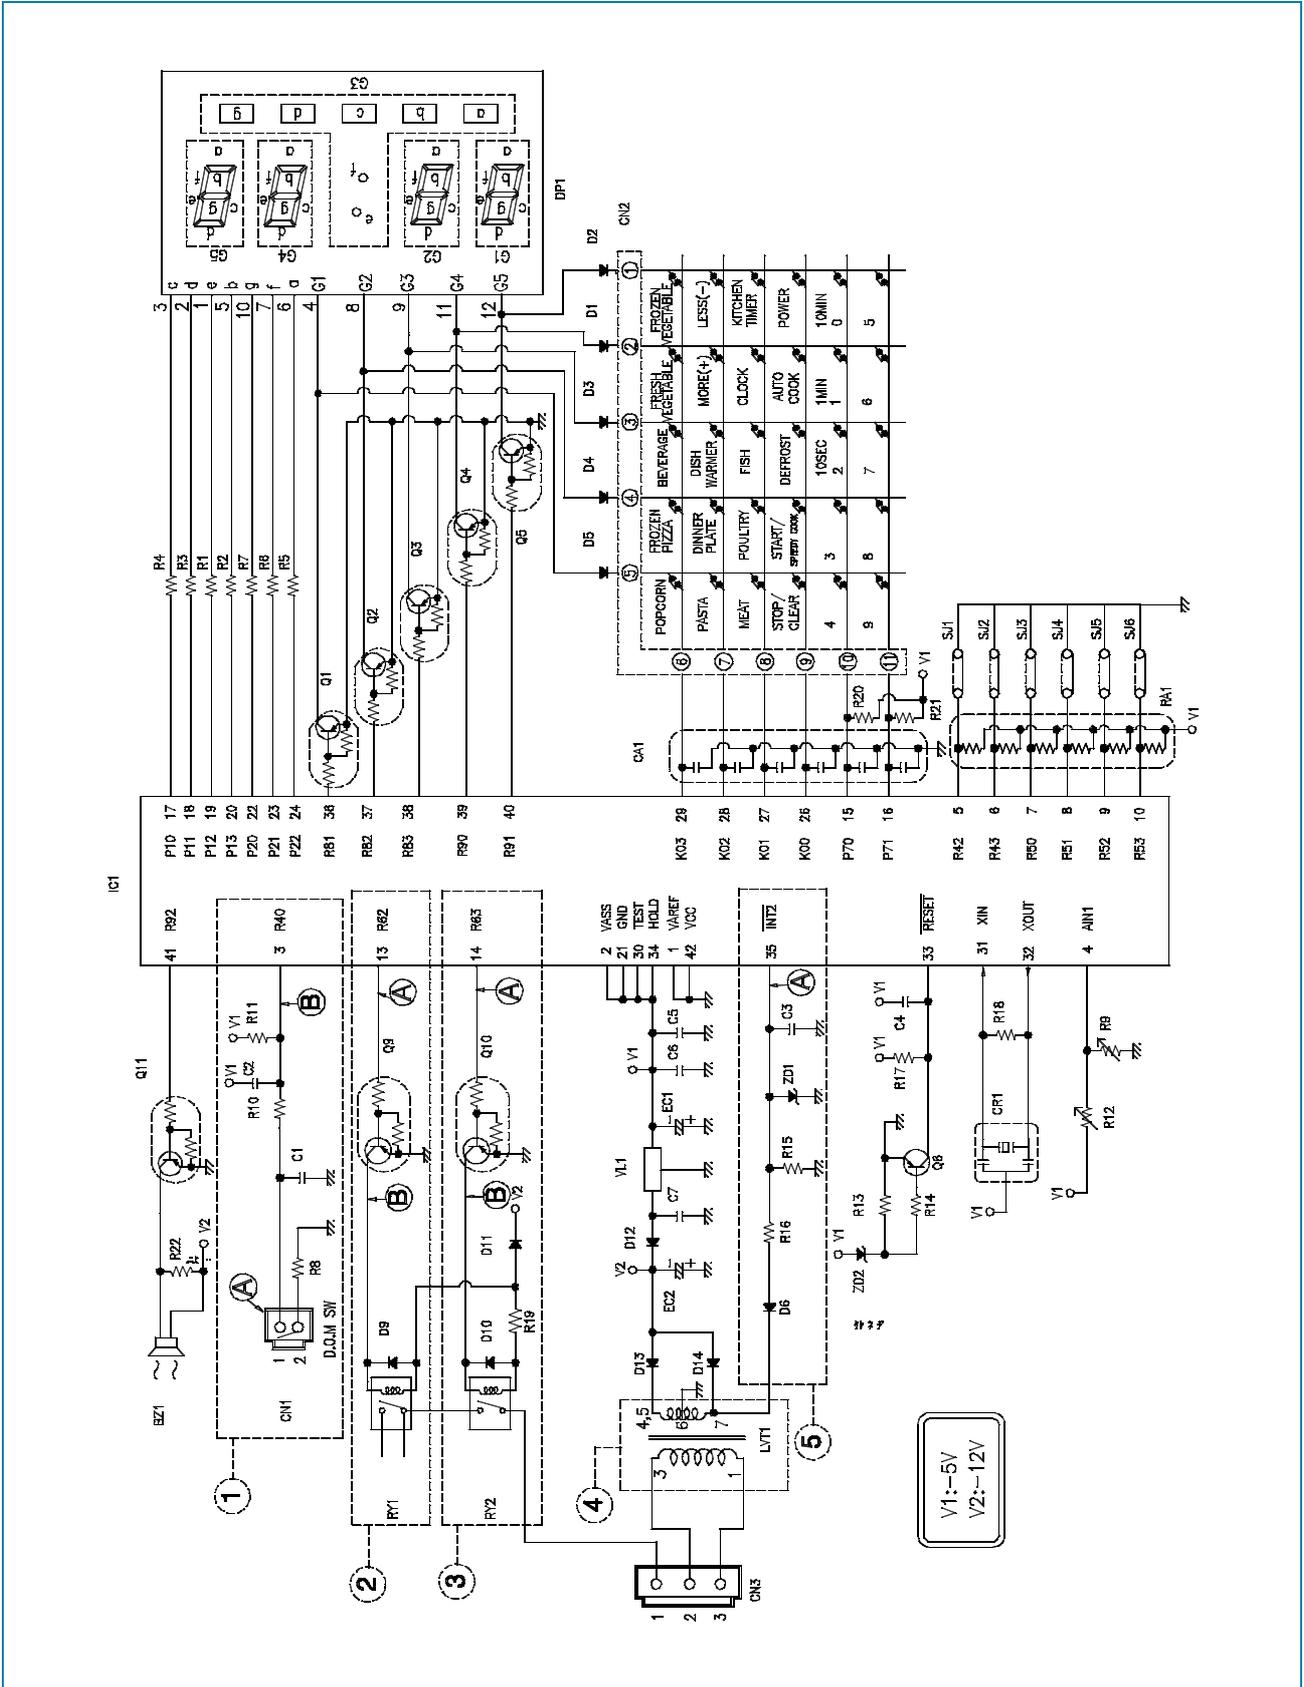

✓ **Caution:** In this Service Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service information Center(<http://svc.dwe.co.kr>)

**PRINTED CIRCUIT BOARD**

**3. P.C.B. LOCATION NO.**

1) KOR-131H, KOR-131G and KOR-130A

NO	NAME	SYMBOL	SPECIFICATION	PART CODE	Q'TY
1	BUZZER	BZ1	BM-20K	3515600100	1
2	C ARRAY	CA1	7P(6) 102 M 50V	CN6XB-102M	1
3	CAPACITOR ELEC	EC1	16V RSS 100uF	CEXF1C101V	1
4	CAPACITOR ELEC	EC2	25V RSS 1000uF	CEXF1E102V	1
5	CONNECTOR WAFER	CN1	YW396-02AV	3519150520	1
6	CONNECTOR WAFER	CN3	YW396-05AV	3519150510	1
7	CONNECTOR WAFER	CN2	FCZ254-11	441M367160	1
8	DIODE RECTIFY	D1~6,9~12	1N4148	DZN4148---	10
9	DIODE RECTIFY	D13,14	1N4004A	DZN4004A--	2
10	DIODE ZENER	ZD1	MTZ 5.1VB 1/2W	DZTZ5R1B--	1
11	DIODE ZENER	ZD2	MTZ 3.9VB 1/2W	DZTZ3R9B--	1
12	LED DISPLAY	DP1	DDG-631H	DDD631H--	1
13	PCB MAIN	M158	81.5X139.9	3514315410	1
14	R ARRAY	RA1	7P(6) 1/8 100K J	RA-87X104J	1
15	RESISTOR	R1~R7	1/6W 330 5%	RD-AZ331J-	7
16	RESISTOR	R8,10,14,22	1/6W 1K 5%	RD-AZ102J-	4
17	RESISTOR	R11,20,21	1/6W 100K 5%	RD-AZ104J-	3
18	RESISTOR	R13	1/6W 100 5%	RD-AZ101J-	1
19	RESISTOR	R15~17	1/6W 10K 5%	RD-AZ103J-	3
20	RESISTOR	R18	1/6W 1M 5%	RD-AZ105J-	1
21	RESISTOR	R19	1/4W 51 5%	RD-4Z510J-	1
22	REGULATOR	VL1	MC7905C	1MC7905C--	1
23	TRANSISTOR	Q1~5,9~11	KRA-106M	TZRA106M--	8
24	TRANSISTOR	Q6	KTA-1266Y	TZTA1266Y-	1
25	TRANS POWER	LVT1	DMR-631P	5EPU035302	1
26	WIRE COPPER	J1-J21	1/0.52 TIN COATING	85801052GY	21
27	WIRE COPPER	SJ3,5	1/0.52 TIN COATING	85801052GY	2
28	IC MICOM	IC1	TMP47C440BN-NG14	13GS1A1GH0	1
29	RESONATOR CERA	CR1	KBR-4.0MSTF	5PKBR40MKS	1
30	SW RELAY	RY1	G5G-1A DC12V	5SC0101121	1
31	SW RELAY	RY2	OJ-SS-112LMIC1P	5SC0101404	1
32	CAPACITOR CERA	C6	102 50V Z AXIAL	CCZB1H102K	1
33	CAPACITOR CERA	C1~5,C7	104 50V Z AXIAL	CCZF1H104Z	6
34	RESISTOR	R9	1/6W 20K 5%	RD-AZ203J-	1
35	RESISTOR	R12,R23	1/6W 4.7K 5%	RD-AZ472J-	2

✓ **Caution:** In this Service Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service information Center(<http://svc.dwe.co.kr>)

## PRINTED CIRCUIT BOARD

### 2) KOR-131H4 and KOR-131G4

NO	NAME	SYMBOL	SPECIFICATION	PART CODE	Q'TY
1	BUZZER	BZ1	BM-20K	3515600100	1
2	C ARRAY	CA1	7P(6) 102 M 50V	CN6XB-102M	1
3	CAPACITOR ELEC	EC1	16V RSS 100uF	CEXF1C101V	1
4	CAPACITOR ELEC	EC2	25V RSS 1000uF	CEXF1E102V	1
5	CONNECTOR WAFER	CN1	YW396-02AV	3519150520	1
6	CONNECTOR WAFER	CN3	YW396-05AV	3519150510	1
7	CONNECTOR WAFER	CN2	FCZ254-11	441M367160	1
8	DIODE RECTIFY	D1~6,9~12	1N4148	DZN4148---	10
9	DIODE RECTIFY	D13,14	1N4004A	DZN4004A--	2
10	DIODE ZENER	ZD1	MTZ 5.1VB 1/2W	DZTZ5R1B--	1
11	DIODE ZENER	ZD2	MTZ 3.9VB 1/2W	DZTZ3R9B--	1
12	LED DISPLAY	DP1	DDG-631H	DDDG631H--	1
13	PCB MAIN	M158	81.5X139.9	3514315410	1
14	R ARRAY	RA1	7P(6) 1/8 100K J	RA-87X104J	1
15	RESISTOR	R1~R7	1/6W 330 5%	RD-AZ331J-	7
16	RESISTOR	R8,10,12,14,22	1/6W 1K 5%	RD-AZ102J-	5
17	RESISTOR	R11,20,21	1/6W 100K 5%	RD-AZ104J-	3
18	RESISTOR	R13	1/6W 100 5%	RD-AZ101J-	1
19	RESISTOR	R15~17,R19	1/6W 10K 5%	RD-AZ103J-	4
20	RESISTOR	R18	1/6W 1M 5%	RD-AZ105J-	1
21	RESISTOR	R19	1/4W 51 5%	RD-4Z510J-	1
22	REGULATOR	VL1	MC7905C	1MC7905C--	1
23	TRANSISTOR	Q1~5,9~11	KRA-106M	TZRA106M--	8
24	TRANSISTOR	Q6	KTA-1270Y	TZTA1270Y-	1
25	TRANS POWER	LVT1	DMR-631P	5EPU035302	1
26	WIRE COPPER	J1-J21	1/0.52 TIN COATING	85801052GY	21
27	WIRE COPPER	SJ3,5	1/0.52 TIN COATING	85801052GY	2
28	IC MICOM	IC1	TMP47C440BN-NG14	13GS1A1GH0	1
29	RESONATOR CERA	CR1	KBR-4.0MSTF	5PKBR40MKS	1
30	SW RELAY	RY1	G5G-1A DC12V	5SC0101121	1
31	SW RELAY	RY2	OJ-SS-112LM1C1P	5SC0101404	1
32	CAPACITOR CERA	C6	102 50V Z AXIAL	CCZB1H102K	1
33	CAPACITOR CERA	C1~5,C7	104 50V Z AXIAL	CCZF1H104Z	6

# PRINTED CIRCUIT BOARD(KOR-131S4)

## 1. CIRCUIT CHECK PROCEDURE

### 1. Low voltage transformer check

The low voltage transformer is located on the P.C.B.

Measuring condition: Input voltage: 120 V / Frequency: 60Hz



Terminal Voltage	LOAD	NO LOAD
4 - 7	AC 12.6 V	AC 14.7 V

### NOTE

1. Refer to Circuit Diagram (point 4).
2. Secondary side voltage of the low voltage transformer changes in proportion to fluctuation of power source voltage.
3. The allowable tolerance of the secondary voltage is within  $\frac{1}{4}$  5% of nominal voltage.

### 2. Voltage check

- Key check point

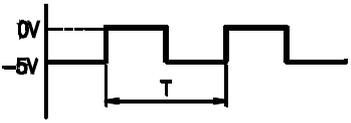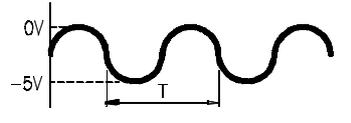
NO	CHECK POINT	REMARK
1	IC1 PIN 2,21,30,34	-5VDC
2	IC1 PIN 35	 <p>T : 16.7ms(60Hz)</p>
3	IC1 PIN 31 OR 32	 <p>T : 250 ns(4MHz)</p>

- Check method

NO	MEASURE POINT	WAVE FORM	REMEDY	REMARK
1	MP1	DC -5V $\pm$ 0.25V	Replace VL1, EC1	NO LOAD
2	MP2	DC -12V $\pm$ 2.0V	Replace EC2, D12,13,14	NO LOAD

### NOTE

Each measure point must be measured with GND points.

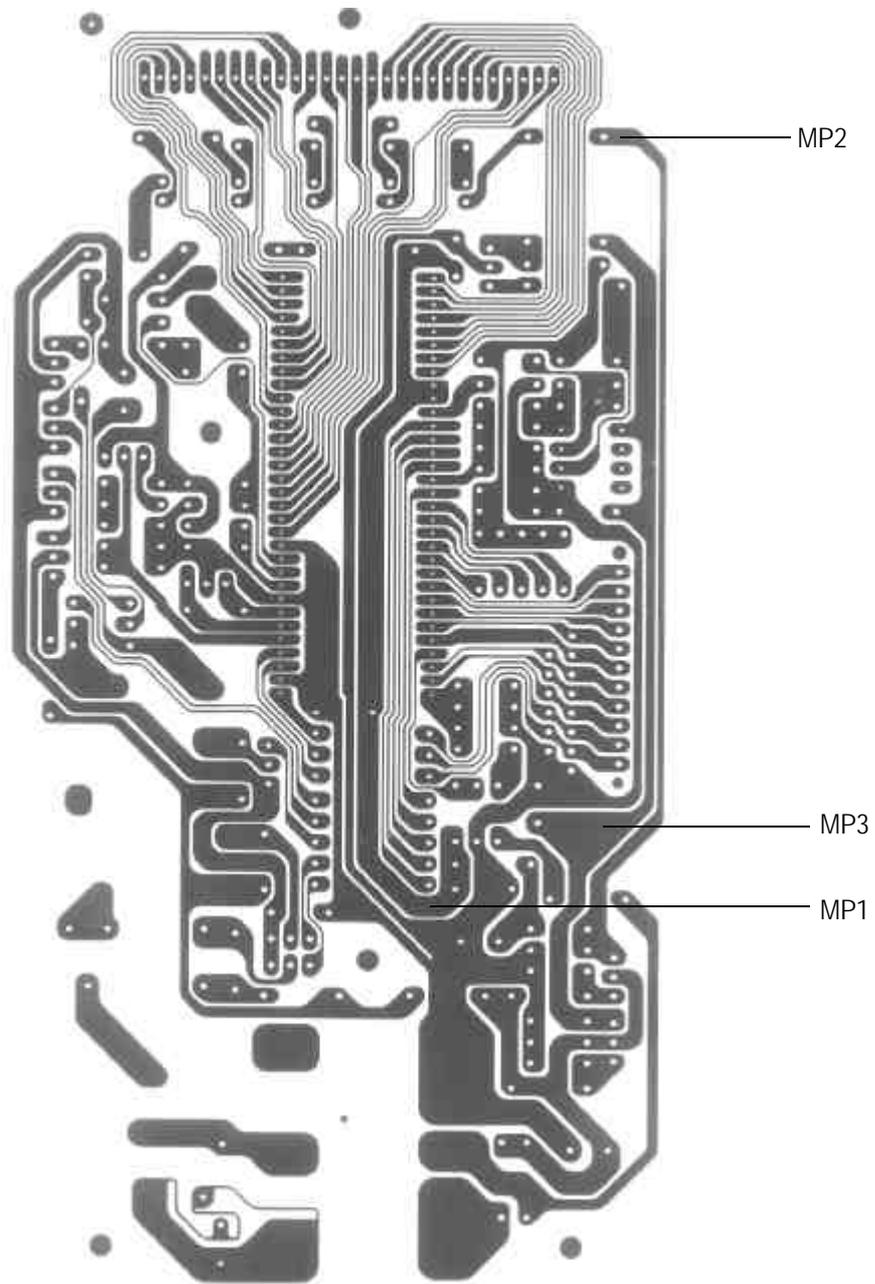

Measure Point

3. When there is no microwave oscillation

1) When touching **START** pad, oven lamp does not turn on.

Fan motor does not rotate, but cook indicator in display comes on.

\* Cause : **RELAY 2** does not operate. ☞ refer to Circuit Diagram ( Point 3)

- Check method

STATE	POINT	A	B
	<b>RELAY 2 ON</b>	+5VDC	GND
	<b>RELAY 2 OFF</b>	GND	+12VDC

2) When touching **START** pad, oven lamp turns on.

Fan motor and turntable rotate and cook indicator in display comes on.

\* Cause : **RELAY 1** does not operate. ☞ refer to Circuit Diagram ( Point 2 )

- Check method

STATE	POINT	A	B
	<b>RELAY 1 ON</b>	+5VDC	GND
	<b>RELAY 1 OFF</b>	GND	+13VDC

4. When the door is opened during operation, the count down timer does not stop.

☞ Refer to Circuit Diagram( Point 1 )

- Check method

STATE	POINT	A	B
	1) DOOR OPEN	OPEN	+5VDC
	2) DOOR CLOSED	CLOSE	GND

CHECK NO	METHOD	REMEDY
1	Check the stage(ON,OFF) of the secondary interlock switch by resistance measurement.	Replace secondary interlock switch.

5. When the digital clock does not operate properly.

☞ Refer to Circuit Diagram( Point 5 )

POINT	WAVE FORM
A	

☞ If clock does not keep exact time, you must check resistor R25,26 zener diodeZD3.

**6. When Er01 & Er03 come on display.**

☞ Refer to circuit diagram (Point 6)

- Check method

\* In AUTO REHEATING just operating, checking point A, B, C & D after 1~2 minutes.

NO	CHECK POINT	REMARK	Tolerance
1	A	0.5V $\hat{A}$ VALUE $\hat{A}$ 3.5V	-
2	B	11.3Vdc	$\frac{3}{4}$ 5%
3	C	4.4Vdc	$\frac{3}{4}$ 5%
4	D	2.2Vdc	$\frac{3}{4}$ 5%

\* R20~24 & connecting status of humidity sensor must be checked before checking point A, B, C & D.


**7. When the oven is plugged in or during operation, the display does not turn on.**

☞ Refer to Circuit diagram (Point 7)

- Check method

POINT	WAVE FORM
A	+5VDC
B	+10.8VDC( $\frac{3}{4}$ 1V)

2. PCB CIRCUIT DIAGRAM

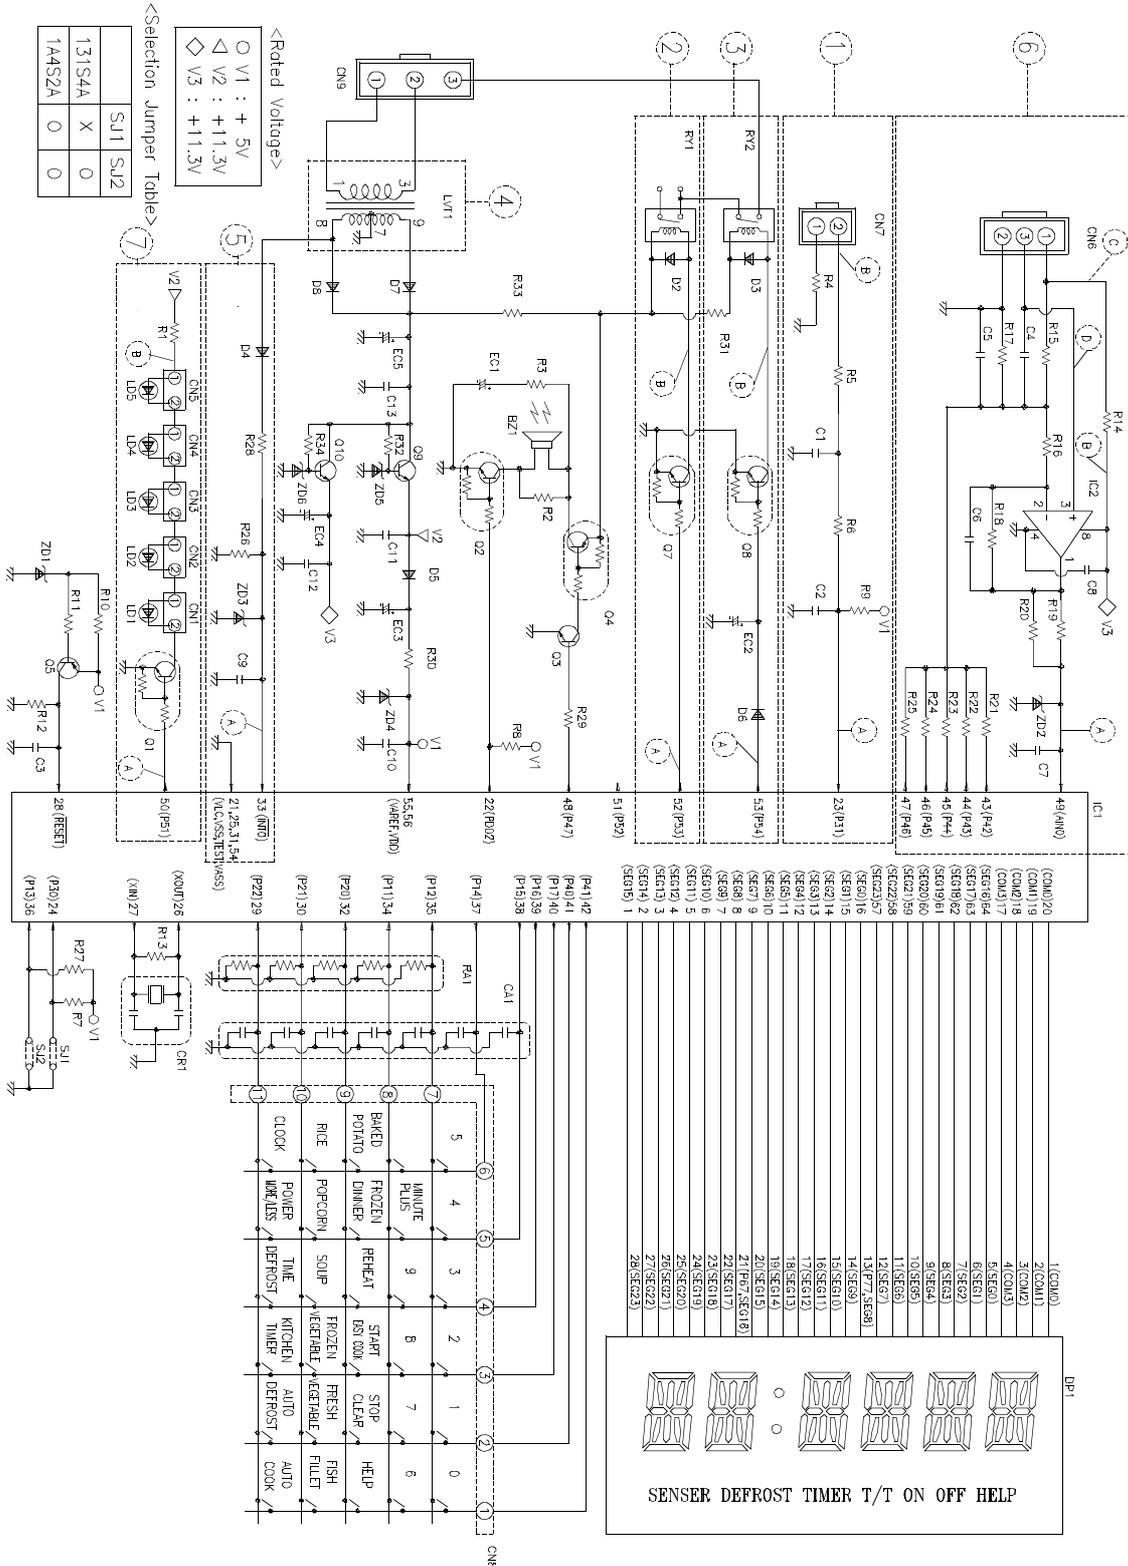

✓ **Caution:** In this Service Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service information Center(<http://svc.dwe.co.kr>)

## PRINTED CIRCUIT BOARD

### 3. P.C.B. LOCATION NO.

NO	NAME	SYMBOL	SPECIFICATION	PART CODE	QTY
1	BUZZER	BZ1	BM-20K	3515600100	1
2	C ARRAY	CA1	7P(8) 102 M 50V	CN7XB-102M	1
3	CAPACITOR CERA	C1~5,7~13	104 Z 50V AXIAL	CCZF1H104Z	12
4	CAPACITOR CERA	C6	102 K 50V AXIAL	CCZB1H102K	1
5	CAPACITOR ELEC	EC1	50V RSS 100uF	CEXF1H101V	1
6	CAPACITOR ELEC	EC2	50V RS 10uF	CEXE1H100A	1
7	CAPACITOR ELEC	EC3	25V RSS 470uF	CEXF1E471V	1
8	CAPACITOR ELEC	EC4	25V RSS 100uF	CEXF1E101V	1
9	CAPACITOR ELEC	EC5	35V RSS 1000uF	CEXF1V102V	1
10	COLOR FILTER	CF1	PET, 100um	3511900500	1
11	CONNECTOR WAFER	CN1~5	42140-2202	3519106010	5
12	CONNECTOR WAFER	CN6	35312-0312	30166M503R	1
13	CONNECTOR WAFER	CN7	YW396-02AV	3519150520	1
14	CONNECTOR FILM	CN8	FCZ 254-11P	441M367160	1
15	CONNECTOR WAFER	CN9	YW396-05AV	3519150510	1
16	DIODE SWITCHING	D2~6	1N4148	DZN4148--	5
17	DIODE RECTIFY	D7~8	1N4004A	DZN4004A--	2
18	DIODE ZENER	ZD1	UZ 3.3RSB 1/2W	DZUZ3R3BSB	1
19	DIODE ZENER	ZD2,3	UZ 4.7VB 1/2W	DZUZ4R7BSB	2
20	DIODE ZENER	ZD4	UZ 5.1BSC 1/2W	DZUZ5R1BSB	1
21	DIODE ZENER	ZD5,6	UZ 12BSC 1/2W	DZUZ12BSC-	2
22	HOLDER LCD	DPH	ARS SG-175	3513003500	1
23	LCD	DP1	KXN33180DAP	DKXN33180D	1
24	LED	LED1~5	DLG-314D	DDLG314D--	5
25	IC MICOM	IC1	TMP87CK29N-1K81	13GS161S2A	1
26	IC	IC2	LM358(OP AMP)	1CPLM358--	1
27	PCB MAIN	M172	87 x 175	3514323200	1
28	R ARRAY	RA1	6P(5) 100K J	RA-86X104J	1
29	RESISTOR	R2,5,6,8,11,28	1/6W 1K 5%	RD-AZ102J-	6
30	RESISTOR	R3,4	1/6W 100 5%	RD-AZ101J-	2
31	RESISTOR	R7,27	1/6W 100K 5%	RD-AZ104J-	2
32	RESISTOR	R9	1/6W 47K 5%	RD-AZ473J-	1
33	RESISTOR	R10,19,20	1/6W 200 5%	RD-AZ201J-	3
30	RESISTOR	R12,26,29	1/6W 10K 5%	RD-AZ103J-	3
31	RESISTOR	R13,21	1/6W 1M 5%	RD-AZ105J-	2
32	RESISTOR	R15,17	1/6W 3.32K 1%	RN-AZ3321F	2
33	RESISTOR	R16	1/6W 1.82K 1%	RN-AZ1821F	1
34	RESISTOR	R18	1/6W 357K 1%	RN-AZ3573F	1

✓ **Caution:** In this Service Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service information Center(<http://svc.dwe.co.kr>)

**PRINTED CIRCUIT BOARD**

NO	NAME	SYMBOL	SPECIFICATION	PART CODE	QTY
35	RESISTOR	R22	1/6W 604K 1%	RN-AZ6043F	1
36	RESISTOR	R23	1/6W 301K 1%	RN-AZ3013F	1
37	RESISTOR	R24	1/6W 150K 1%	RN-AZ1503F	1
38	RESISTOR	R25	1/6W 75K 1%	RN-AZ7502F	1
39	RESISTOR	R1,31	1/4W 27 5%	RD-4Z270J-	2
40	RESISTOR	R33	1/4W 15 5%	RD-4Z150J-	1
41	RESISTOR	R32,34	1/4W 1K 5%	RD-4Z102J-	2
42	RESISTOR	R14,30	1/2W 200 5%	RD-2Z201JS	2
43	RESONATOR CERA	CR1	CRT4.00MS	5P4R00MTS-	1
44	SW RELAY	RY1	G5G-1A 12V	5SC0101121	1
45	SW RELAY	RY2	OJ-SS-112LM	5SC0101404	1
46	TRANSISTOR	Q1,2,7,8	KRC-106M	TZRC106M--	4
47	TRANSISTOR	Q3,9,10	KTC-3198GR	TZTC3198GR	3
48	TRANSISTOR	Q4	KRA-106M	TZRA106M--	1
49	TRANSISTOR	Q5	KTA-1266Y	TZTA1266Y-	1
50	TRANS POWER	LVT1	DMR-161P	5EPU035303	1
51	WIRE COPPER	J1~4,7,16	1/0.25 TIN COAT	85801052GY	6
52	WIRE COPPER	J5,6,8,12	1/0.25 TIN COAT	85801052GY	4
53	WIRE COPPER	J9~11,13,15	1/0.25 TIN COAT	85801052GY	5

# EXPLODED VIEW AND PARTS LIST

## 1. DOOR ASSEMBLY


Refer to Disassembly and assembly.

## 2. CONTROL PANEL ASSEMBLY

Refer to Disassembly and assembly.

## 3. TOTAL ASSEMBLY

1) KOR-131G, KOR-131H and KOR0130A

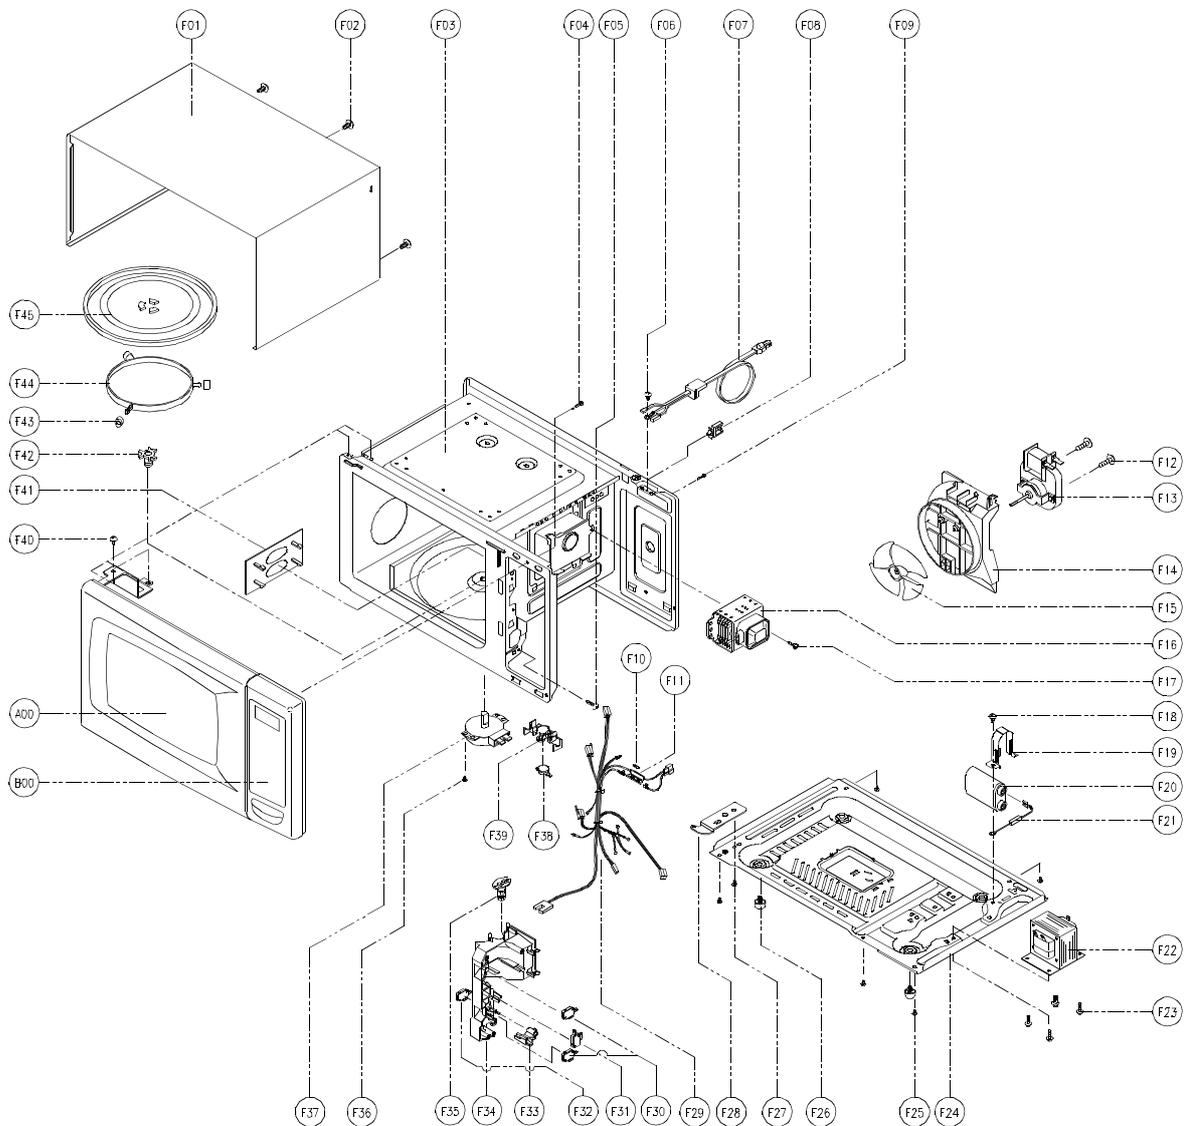

✓ **Caution:** In this Service Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service information Center(<http://svc.dwe.co.kr>)

## EXPLODED VIEW AND PARTS LIST


REF. NO	PART CODE	PART NAME	DESCRIPTION	Q'TY
A00	3511713510	DOOR AS	KOR-130A0A	1
	3511713500	DOOR AS	KOR-131G0A	1
B00	3516724010	CONTROL-PANEL AS	KOR-130A0A	1
	3516724000	CONTROL-PANEL AS	KOR-131G0A	1
	3516724020	CONTROL-PANEL AS	KOR-131H0A	1
F01	3510803100	CABINET	PCM T0.6	1
F02	3516004100	SPECIAL SCREW	T1 TRS LR4 POLE 4*10 SE MFZN	3
F03	3516111500	CAVITY AS	KOR-131G0A	1
	3516111600	CAVITY JOINT AS	KOR-131G0A	1
F04	7122401211	SCREW TAPPING	T2S TRS 4*12 MFZN	1
F05	7122401211	SCREW TAPPING	T2S TRS 4*12 MFZN	1
F06	7112401011	SCREW TAPPING	T1 TRS 4*10 MFZN	1
F07	35113TCNT5	CORD POWER AS	3X16AWG 40X40 120-RTMI	1
F08	4413A90012	CLAMP POWER CORD	NYLON66	1
F09	7122401211	SCREW TAPPING	T2S TRS 4*12 MFZN	1
F10	7121403011	FUSE	65TS 125V 20A	1
F11	3518605800	HOLDER FUSE	NYLON66	1
F12	7121403011	SCREW TAPPING	T2S TRS 4*30 MFZN	2
F13	3963822200	MOTOR SHADED POLE	120V 30W OEM-15DWX1-A03	1
F14	3512520000	GUIDE WIND	PP	1
F15	3511800100	FAN	PP GF20	1
F16	3518002200	MAGNETRON	2M218J(MF) P	1
F17	3516003800	SPECIAL SCREW	T2 FLANGE 5X8 MFZN	1
F18	7272100811	SCREW TAPTITE	TT3 TRS 4X8 MFZN	1
F19	3513003200	HOLDER HV CAPACITOR	SECC T0.6	1
F20	3518302200	CAPACITOR HV	2100VAC 0.98uF #187	1
F21	3518400400	DIODE HV	HR-1X-3AB 12KV #187	1
F22	3518116710	TRANS HV	DY-N95A0-13T	1
F23	3516003700	SPECIAL SCREW	TT3 HEX 4X8 FLG MFZN	4
F24	3510313400	BASE	SBHG T0.7	1
F25	7112401011	SCREW TAPPING	T1 TRS 4X10 MFZN	5
F26	3512100900	FOOT	PP DASF-130	2
F27	7272400811	SCREW TAPTITE	TT3 TRS 4X8 MFZN	1
F28	3515202800	STOPPER HINGE *U AS	KOR -121M0A	1
F29	3512717400	HARNESS MAIN	KOR-131G0A	1
F30	4415A17352	SW MICRO	VP-533A-OF SPNO #187 200G	2
F31	4415A66600	SW MICRO	VP-532A-OF/SZM-V16-FA-62	1

✓ **Caution:** In this Service Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service information Center(<http://svc.dwe.co.kr>)

## EXPLODED VIEW AND PARTS LIST

REF. NO	PART CODE	PART NAME	DESCRIPTION	Q'TY
F32	4415A66910	SW MICRO	VP-531A-OF/SZM-V16-FA-61	1
F33	3513701300	LEVER LOCK	POM	1
F34	3513814300	LOCK	POM BLACK	1
F35	3513601500	LAMP	BL 125V 25W T25 C5A H187	1
F36	7121400611	SCREW TAPPING	T2S PAN 4X6 MFZN	1
F37	3966820200	MOTOR SYNCRO	120V 2W GM-16-12F17	1
F38	3518905300	THERMOSTAT	OFF:75 ON:65 H#187 NB	1
F39	3513003400	HOLDER THERMOSTAT	PBT	1
F40	7272400811	SPECIAL TAPTITE	TT3 TRS 4X8 MFZN	2
F41	3511406200	COVER WAVE GUIDE	HEATPROOF PP	1
F42	3517400620	COUPLER	XAREC	1
F43	441X336020	ROLLER	KOR-100'S TEFLON	3
F44	3512519300	GUIDE ROLLER	PP 5113MF6 A353R	1
F45	441X335A10	TRAY	BORO-S1 GLASS(NFG)	1

2) KOR-131H4 and KOR-131G4

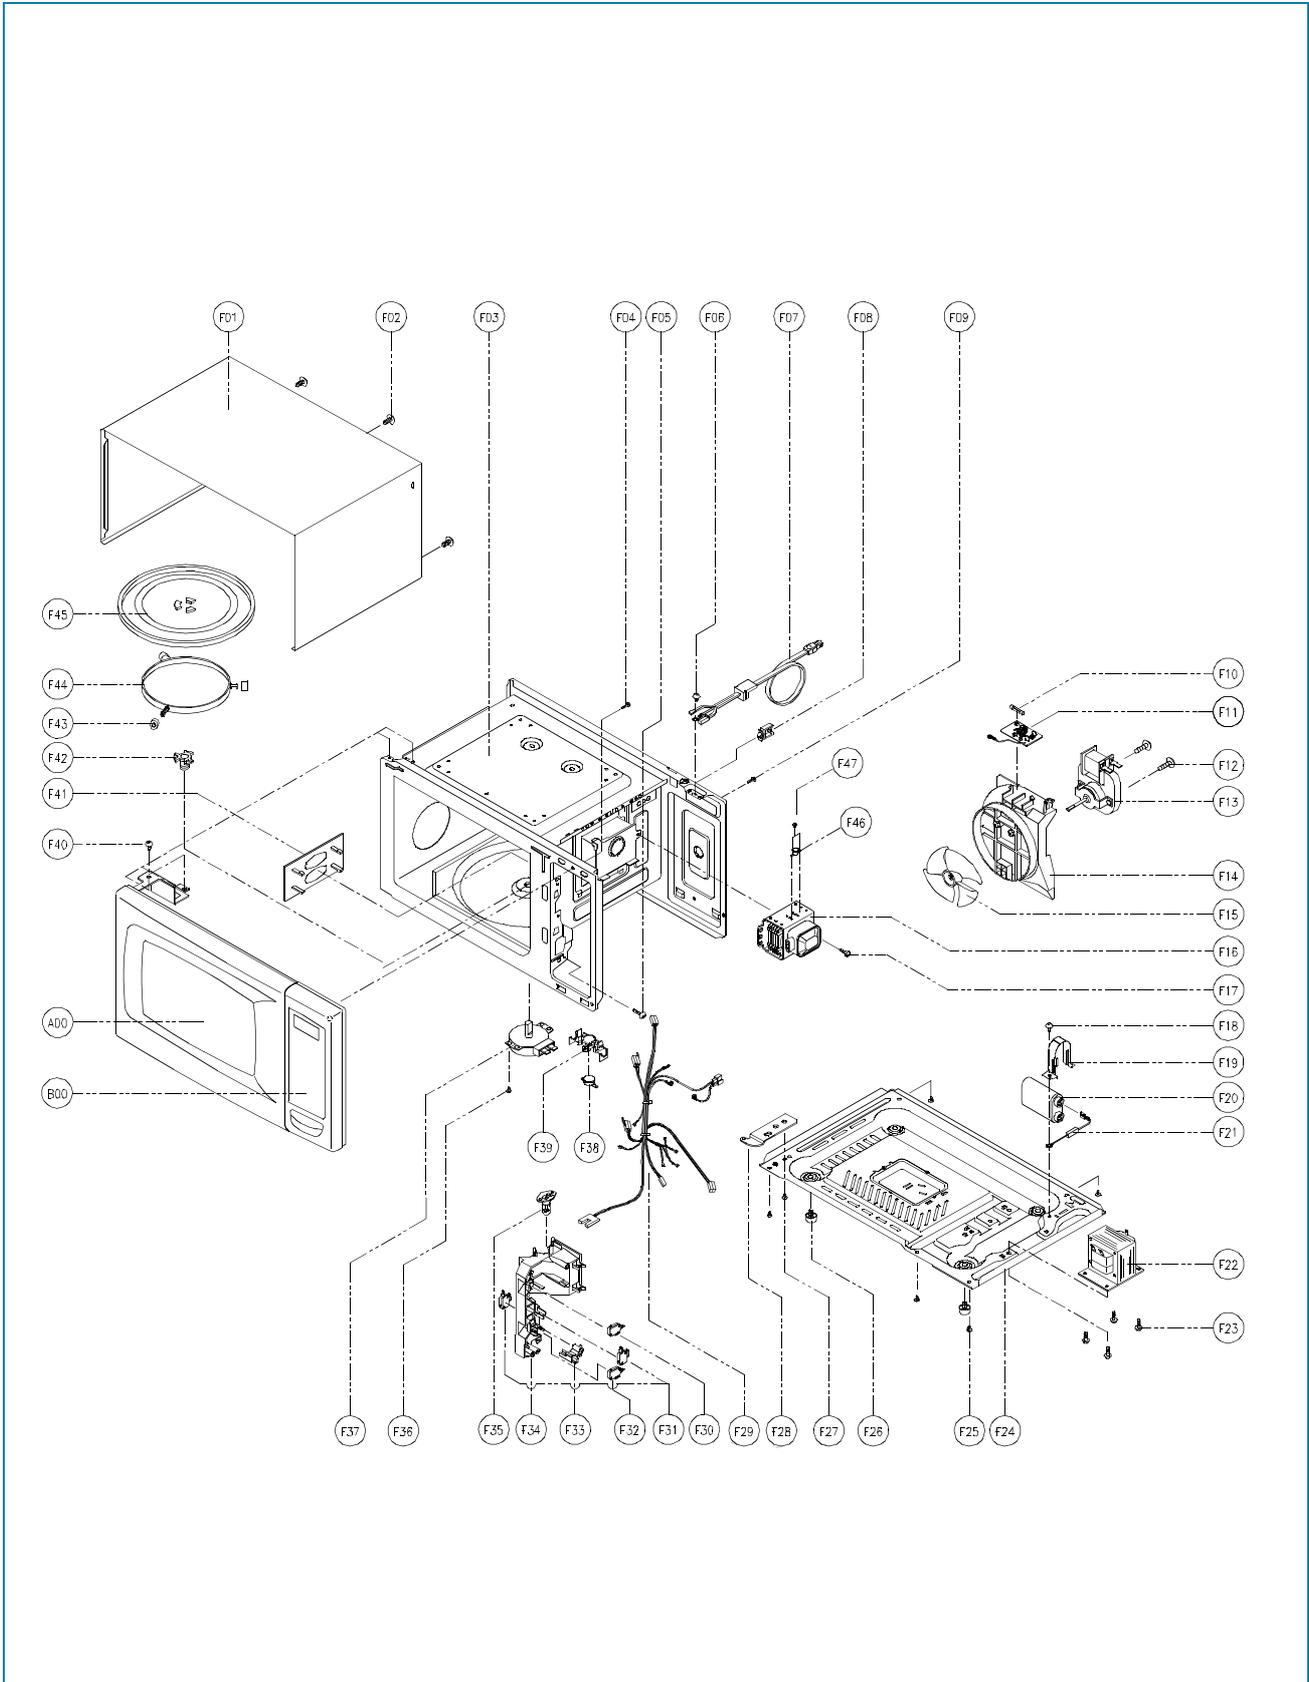


✓ **Caution:** In this Service Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service information Center(<http://svc.dwe.co.kr>)

## EXPLODED VIEW AND PARTS LIST

REF. NO	PART CODE	PART NAME	DESCRIPTION	Q'TY
A00	3511713500	DOOR AS	KOR-131G0A	1
B00	3516724030	CONTROL-PANEL AS	KOR-131H4A	1
	3516724040	CONTROL-PANEL AS	KOR-131G4A	1
F01	3510803100	CABINET	PCM T0.6	1
F02	3516004100	SPECIAL SCREW	T1 TRS LR4 POLE 4*10 SE MFZN	3
F03	3516111500	CAVITY AS	KOR-131G0A	1
	3516111600	CAVITY JOINT AS	KOR-131G0A	1
F04	7122401211	SCREW TAPPING	T2S TRS 4*12 MFZN	1
F05	7122401211	SCREW TAPPING	T2S TRS 4*12 MFZN	1
F06	7112401011	SCREW TAPPING	T1 TRS 4*10 MFZN	1
F07	35113UHWT5	CORD POWER AS	3X14AWG 90X90 120-RTMI	1
F08	4413A90012	CLAMP POWER CORD	NYLON66	1
F09	7122401211	SCREW TAPPING	T2S TRS 4*12 MFZN	1
F10	7121403011	FUSE	65TS 125V 20A	1
F11	3518606600	NOISE FILTER	DWLF-17	1
F12	7121403011	SCREW TAPPING	T2S TRS 4*30 MFZN	2
F13	3963822000	MOTOR SHADED POLE	120V 30W MW15XA-K01	1
	3963822200	MOTOR SHADED POLE	120V 30W OEM-15DWX1-A03	1
F14	3512520000	GUIDE WIND	PP	1
F15	3511800100	FAN	PP GF20	1
F16	3518002800	MAGNETRON	2M248J(DW) - N	1
F17	3516004000	SPECIAL SCREW	T2 BOLT FLANGE 5X12 DARCO	1
F18	7272100811	SCREW TAPTITE	TT3 TRS 4X8 MFZN	1
F19	3513003200	HOLDER HV CAPACITOR	SECC T0.6	1
F20	3518302200	CAPACITOR HV	2100VAC 0.98uF #187	1
F21	3518400400	DIODE HV	HR-1X-3AB 12KV #187	1
F22	3518116740	TRANS HV	DW-N11A0-13T	1
F23	3516003700	SPECIAL SCREW	TT3 HEX 4X8 FLG MFZN	4
F24	3510313400	BASE	SBHG T0.7	1
F25	7112401011	SCREW TAPPING	T1 TRS 4X10 MFZN	5
F26	3512100900	FOOT	PP DASF-130	2
F27	7272400811	SCREW TAPTITE	TT3 TRS 4X8 MFZN	1
F28	3515202800	STOPPER HINGE *U AS	KOR -121M0A	1
F29	3512717410	HARNESS MAIN	KOR-131H4A	1
F30	4415A17352	SW MICRO	VP-533A-OF SPNO #187 200G	2
F31	4415A66600	SW MICRO	VP-532A-OF SPNC #187 200G	1
F32	4415A66910	SW MICRO	VP-531A-OF/SZM-V16-FA-61	1
F33	3513701300	LEVER LOCK	POM	1
F34	3513814300	LOCK	POM BLACK	1
F35	3513601500	LAMP	BL 125V 25W T25 C5A H187	1
F36	7121400611	SCREW TAPPING	T2S PAN 4X6 MFZN	1
F37	3966820200	MOTOR SYNCRO	120V 2W GM-16-12F17	1
F38	3518905300	THERMOSTAT	OFF:75 ON:65 H#187 NB	1
F39	3513003400	HOLDER THERMOSTAT	PBT	1
F40	7272400811	SPECIAL TAPTITE	TT3 TRS 4X8 MFZN	2
F41	3511406200	COVER WAVE GUIDE	HEATPROOF PP	1
F42	3517400620	COUPLER	XAREC	1
F43	3514701501	ROLLER	TEFLON D:14.5	3
F44	3512519300	GUIDE ROLLER	PP 5113MF6 A353R	1
F45	441X335A10	TRAY	BORO-S1 GLASS(NFG)	1
F46	3518903200	THERMOSTAT	OFF:145 ON:135 V#187	1
F47	7121300611	SCREW TAPPING	T2S PAN 3X6 MFZN	2

3) KOR-131S4

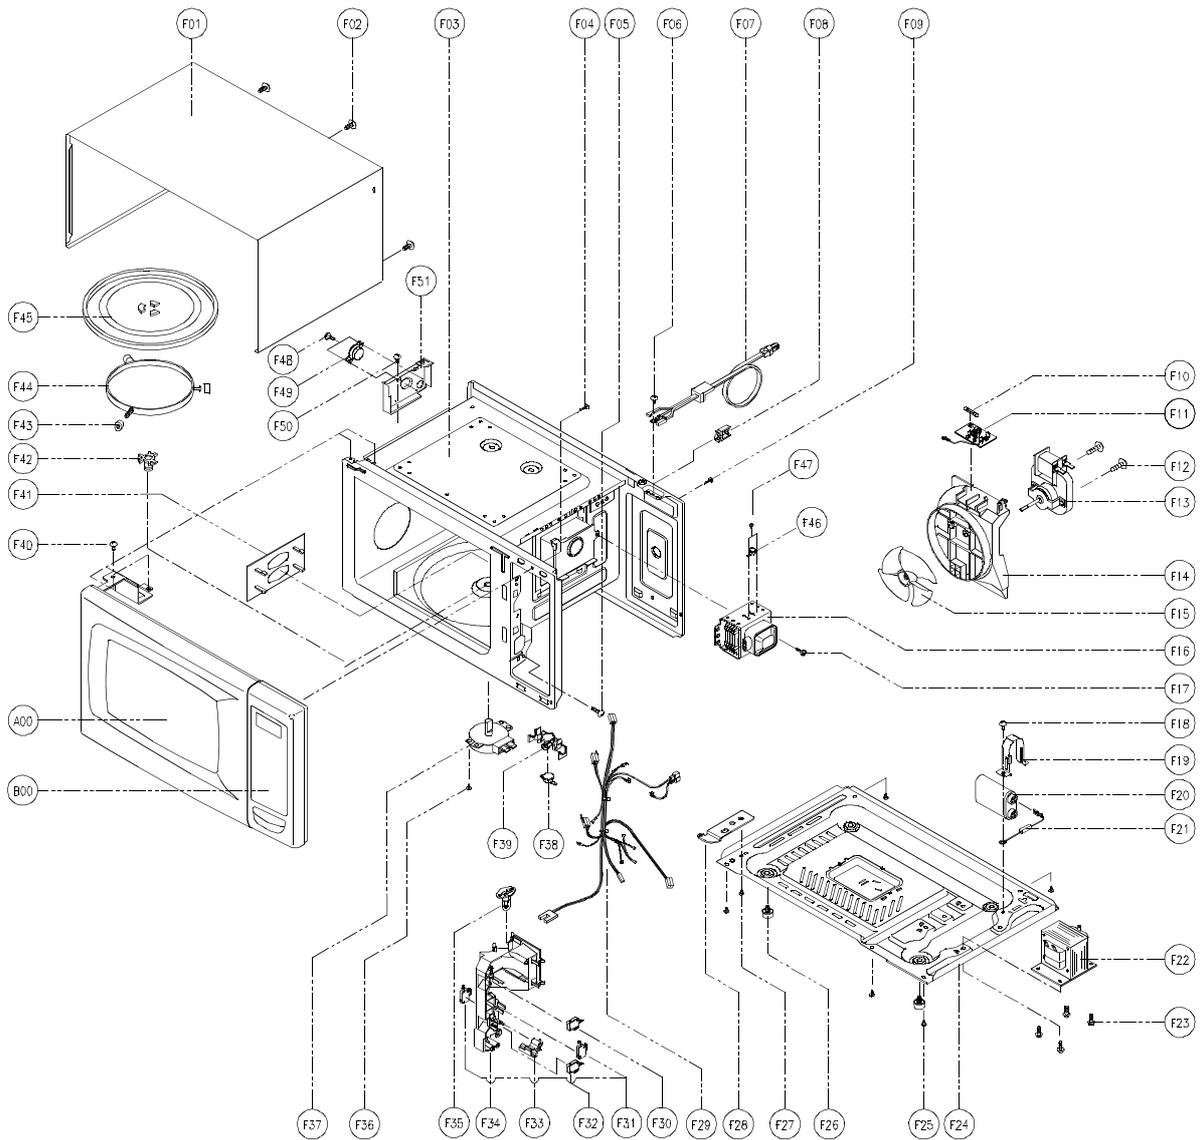

✓ **Caution:** In this Service Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service information Center(<http://svc.dwe.co.kr>)

## EXPLODED VIEW AND PARTS LIST

REF. NO	PART CODE	PART NAME	DESCRIPTION	Q'TY
A00	3511713500	DOOR AS	KOR-131G0A	1
B00	3516704050	CONTROL-PANEL AS	KOR-131S4A	1
F01	3510803100	CABINET	PCM T0.6	1
F02	3516004100	SPECIAL SCREW	T1 TRS LR4 POLE 4*10 SE MFZN	3
F03	3516111500	CAVITY AS	KOR-131G0A	1
	3516111600	CAVITY JOINT AS	KOR-131G0A	1
F04	7122401211	SCREW TAPPING	T2S TRS 4*12 MFZN	1
F05	7122401211	SCREW TAPPING	T2S TRS 4*12 MFZN	1
F06	7112401011	SCREW TAPPING	T1 TRS 4*10 MFZN	1
F07	35113UHWT5	CORD POWER AS	3X14AWG 90X90 120-RTMI	1
F08	4413A90012	CLAMP POWER CORD	NYLON66	1
F09	7122401211	SCREW TAPPING	T2S TRS 4*12 MFZN	1
F10	7121403011	FUSE	65TS 125V 20A	1
F11	3518606600	NOISE FILTER	DWLF-17	1
F12	7121403011	SCREW TAPPING	T2S TRS 4*30 MFZN	2
F13	3963822000	MOTOR SHADED POLE	120V 30W MW15XA-K01	1
	3963822200	MOTOR SHADED POLE	120V 30W OEM-15DWX1-A03	1
F14	3512520000	GUIDE WIND	PP	1
F15	3511800100	FAN	PP GF20	1
F16	3518002800	MAGNETRON	2M248J(DW) - N	1
F17	3516004000	SPECIAL SCREW	T2 BOLT FLANGE 5X12 DARCO	1
F18	7272100811	SCREW TAPTITE	TT3 TRS 4X8 MFZN	1
F19	3513003200	HOLDER HV CAPACITOR	SECC T0.6	1
F20	3518302200	CAPACITOR HV	2100VAC 0.98uF #187	1
F21	3518400400	DIODE HV	HR-1X-3AB 12KV #187	1
F22	3518116740	TRANS HV	DW-N11A0-13T	1
F23	3516003700	SPECIAL SCREW	TT3 HEX 4X8 FLG MFZN	4
F24	3510313400	BASE	SBHG T0.7	1
F25	7112401011	SCREW TAPPING	T1 TRS 4X10 MFZN	5
F26	3512100900	FOOT	PP DASF-130	2
F27	7272400811	SCREW TAPTITE	TT3 TRS 4X8 MFZN	1
F28	3515202800	STOPPER HINGE *U AS	KOR-121M0A	1
F29	3512717410	HARNES MAIN	KOR-131H4A	1
F30	4415A17352	SW MICRO	VP-533A-OF SPNO #187 200G	2
F31	4415A66600	SW MICRO	VP-532A-OF SPNC #187 200G	1
F32	4415A66910	SW MICRO	VP-531A-OF/SZM-V16-FA-61	1
F33	3513701300	LEVER LOCK	POM	1
F34	3513814300	LOCK	POM BLACK	1
F35	3513601500	LAMP	BL 125V 25W T25 C5A H187	1
F36	7121400611	SCREW TAPPING	T2S PAN 4X6 MFZN	1
F37	3966820200	MOTOR SYNCRO	120V 2W GM-16-12F17	1
F38	3518905300	THERMOSTAT	OFF:75 ON:65 H#187 NB	1
F39	3513003400	HOLDER THERMOSTAT	PBT	1
F40	7272400811	SPECIAL TAPTITE	TT3 TRS 4X8 MFZN	2
F41	3511406200	COVER WAVE GUIDE	HEATPROOF PP	1
F42	3517400620	COUPLER	XAREC	1
F43	3514701501	ROLLER	TEFLON D:14.5	3
F44	3512519300	GUIDE ROLLER	PP 5113MF6 A353R	1
F45	441X335A10	TRAY	BORO-S1 GLASS(NFG)	1
F46	3518903200	THERMOSTAT	OFF:145 ON:135 V#187	1
F47	7121300611	SCREW TAPPING	T2S PAN 3X6 MFZN	2
F48	7111300811	SCREW TAPPING	T1 PAN 3X8 MFZN	2
F49	3514801300	SENSOR HUMIDITY	DH-3	1
F50	7112401011	SCREW TAPPING	T1 TRS 4X10 MFZN	1
F51	3512517700	GUIDE AIR OUTLET	SA1D-80 T0.5	1