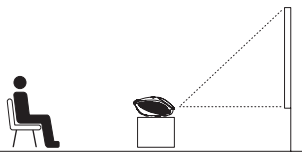
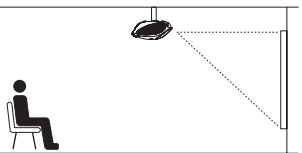
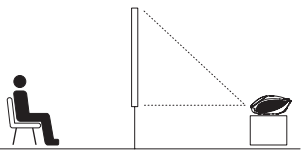
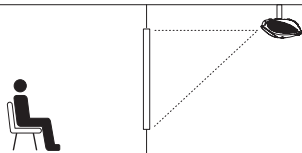


Placement

Placement Styles

This device can be placed in some different placement styles. The factory setting is “floor-mounted front projection” although you can modify the setting according to your needs. Set the **Projection mode** in accordance with your needs through remote control or control panel, enter **SETUP menu**.

Floor-mounted front projection (Standard)	
Ceiling-mounted front projection (Ceiling) TDP-ET10 only	
Floor-mounted rear projection (Rear)	
Ceiling-mounted rear projection (Rear Ceiling) TDP-ET10 only	

WARNING

- Always obey the instructions listed in the IMPORTANT SAFETY INSTRUCTIONS section of this manual when setting up the unit. Attempting to clean/replace the lamp at a high site by yourself may cause you to fall thus resulting in injury.
- If you wish to mount the projector on the ceiling, be sure to ask your dealer to do so. Mounting the projector on a ceiling requires special ceiling brackets (sold separately) and specialized installation knowledge. Improper mounting could cause the projector to fall resulting in a serious injury.
- If the projector is ceiling-mounted, install the breaker for turning off the power in case of anomaly. Let everyone involved with the use of the projector know that fact.

Note

In order to avoid image distortion, place the projector at flat platform, the slope should not over 20 degree. Surface of projection screen or wall should be flat and neat.