


# Connecting and playing a USB mass storage device

The USB connectivity enables you to connect and play MP3 tracks from USB mass storage class. Typically, USB memory devices. (Bulk only transfer)

## Preparation

Before connecting any USB mass storage device to the unit, ensure that the data stored therein has been backed up.

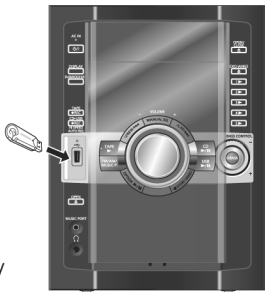

**1** Reduce the volume and connect the USB mass storage device.

**2** Press [▶/||, USB] to start play.

To	Action
Pause play USB 	Press [▶/  , USB]. Press again to resume play.
Stop play CLEAR 	Press [■, CLEAR]. The current track will be memorised. Press [▶/  , USB] to resume play. OR Press [■, CLEAR] again to clear the memory.
Skip tracks V/REW  ^/FF	Press [◀◀, V/REW] or [▶▶, ^/FF]. OR Press the numeric buttons.
Skip album ALBUM	Press [▲/▼, ALBUM].

## Compatible devices

**Devices which are defined as USB mass storage class:**

- USB devices that support bulk only transfer.
- USB devices that support USB 2.0 full speed.

## Supported format

Files must have the extension “.mp3” or “.MP3”.

### Note:

- Folders are defined as album.
- Files are defined as track.
- Track must have the extension “.mp3” or “.MP3”.
- CBI (Control/Bulk/Interrupt) is not supported.
- A device using NTFS file system is not supported.  
[Only FAT 12/16/32 (File Allocation Table 12/16/32) file system is supported]
- Depending on the sector size, some files may not work.
- Maximum album: 255 albums
- Maximum track: 2500 tracks
- Maximum track in one album: 999 tracks
- Only one memory card will be selected when connecting a multiport USB card reader. Typically the first memory card inserted.
- Disconnect the USB card reader from the unit when you remove the memory card. Failure to do so may cause malfunction to the device.
- When you connect a compatible digital audio player to the USB port, charging may be activated. It will not charge when the unit is in standby mode (during “DEMO OFF”).