

5. DIRECTIONS FOR DISASSEMBLY AND ADJUSTMENT

Warning

BEFORE ATTEMPTING TO SERVICE OR ADJUST ANY PART OF THE WASHING MACHINE, DISCONNECT THE POWER CORD FROM THE ELECTRIC OUTLET.

Gear Mechanism Ass'y Replacement

GEAR MECHANISM ASSY REPLACEMENT

- ① Raise the top plate on the outer cabinet.
- ② Loosen four screws mounting outer tub cover and remove outer tub cover from the tub ass'y.



- ③ Remove the cap pulsator from the pulsator assy by using screw driver



- ④ Loosen the pulsator mounting screw and remove the pulsator.



- ⑤ Remove the special nut by using "T" type box wrench.
- ⑥ Remove the special washer.



⑦ Remove the tub i assy.



⑧ Lay the front of the washer on the floor.

⑨ Remove four special bolts of gear protect by using a box wrench and remove gear protect.

⑩ Remove the V-belt.



⑪ Remove four special bolt of gear mechanism assy by using a box wrench.



⑫ Pull out the gear mechanism assy.



NOTES

To assemble the gear mechanism ass'y, reverse the disassembly procedure.