
4. Adjustments

DVD flash Initialization & Update

- **Checking out MICOM & MPEG flash Version**

- 1) Play DVD-DISC or CD-DISC,
- 2) Open DISC-TRAY, Press 'MENU' button on the Remote Control,
- 3) Press '8', '9', '5' one by one, then press 'ENTER'.

- **DVD flash Initialization & Update (firmware)**

- 1) Prepare DISC-CD, DVD or the USB device that contains HEX file for Update.
- 2) Play the DISC or connect the USB cable, then 'Updating' will appear on the screen, then Power will go on and out.
- 3) Then DISC-TRAY will OPEN, then remove DISC or take off USB cable, making Unit 'NO DISC' state.
- 4) Press 'STOP' button of Main Unit 5 seconds more, Display Indicator shows 'INITIALIZE' then Power go out.
- 5) Initialization complete.



Connecting USB



TV Display (On Updating)



Update start