



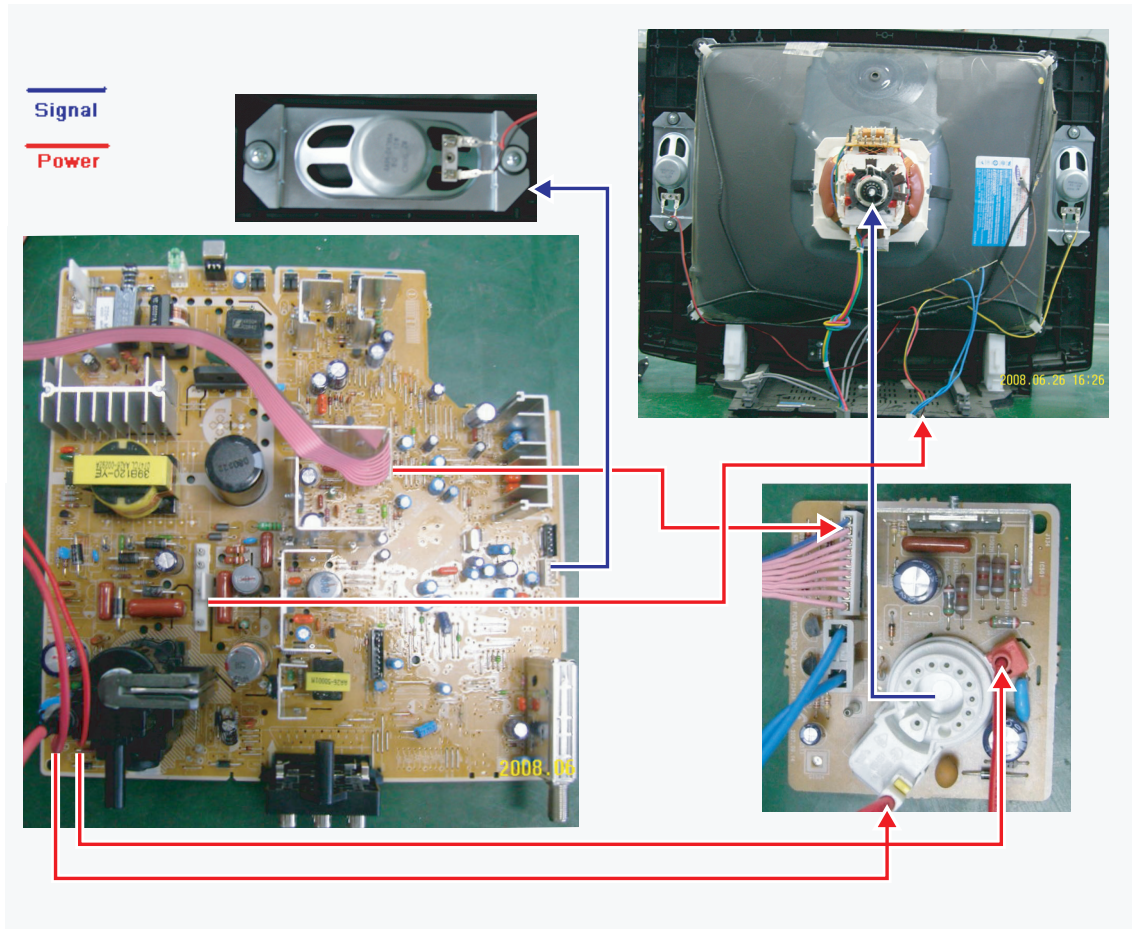

6. Wiring Diagram



6-1 Overall Wiring

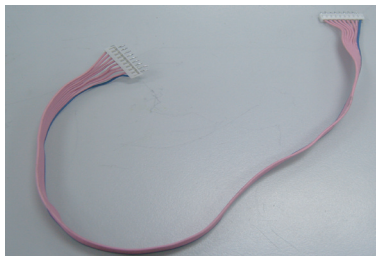

※ The code number of cable(Lead-connector) can be changed, see “5. Exploded View & Part List.”

Use	①CRT Board↔Main Board	② Power Code	③ Speaker Wire
Code	AA39-20620B	AA96-20112C	AA96-04766A
Photo			

6-2 Pin Connection

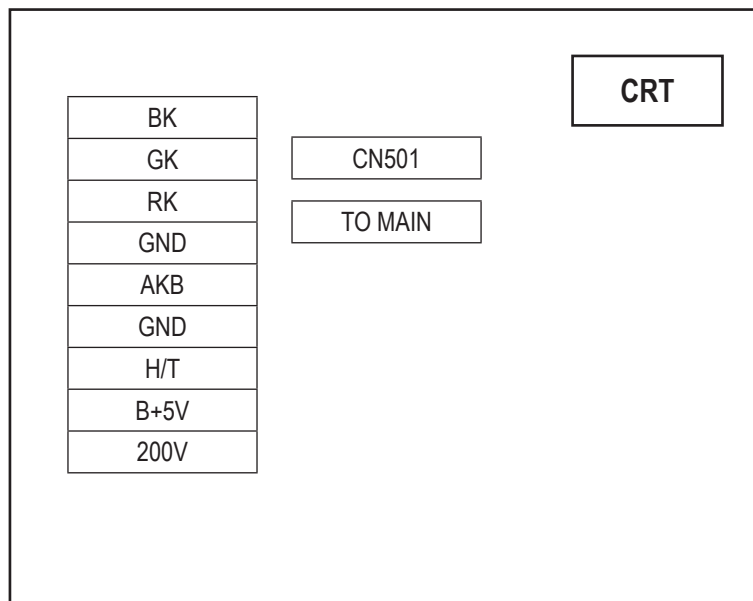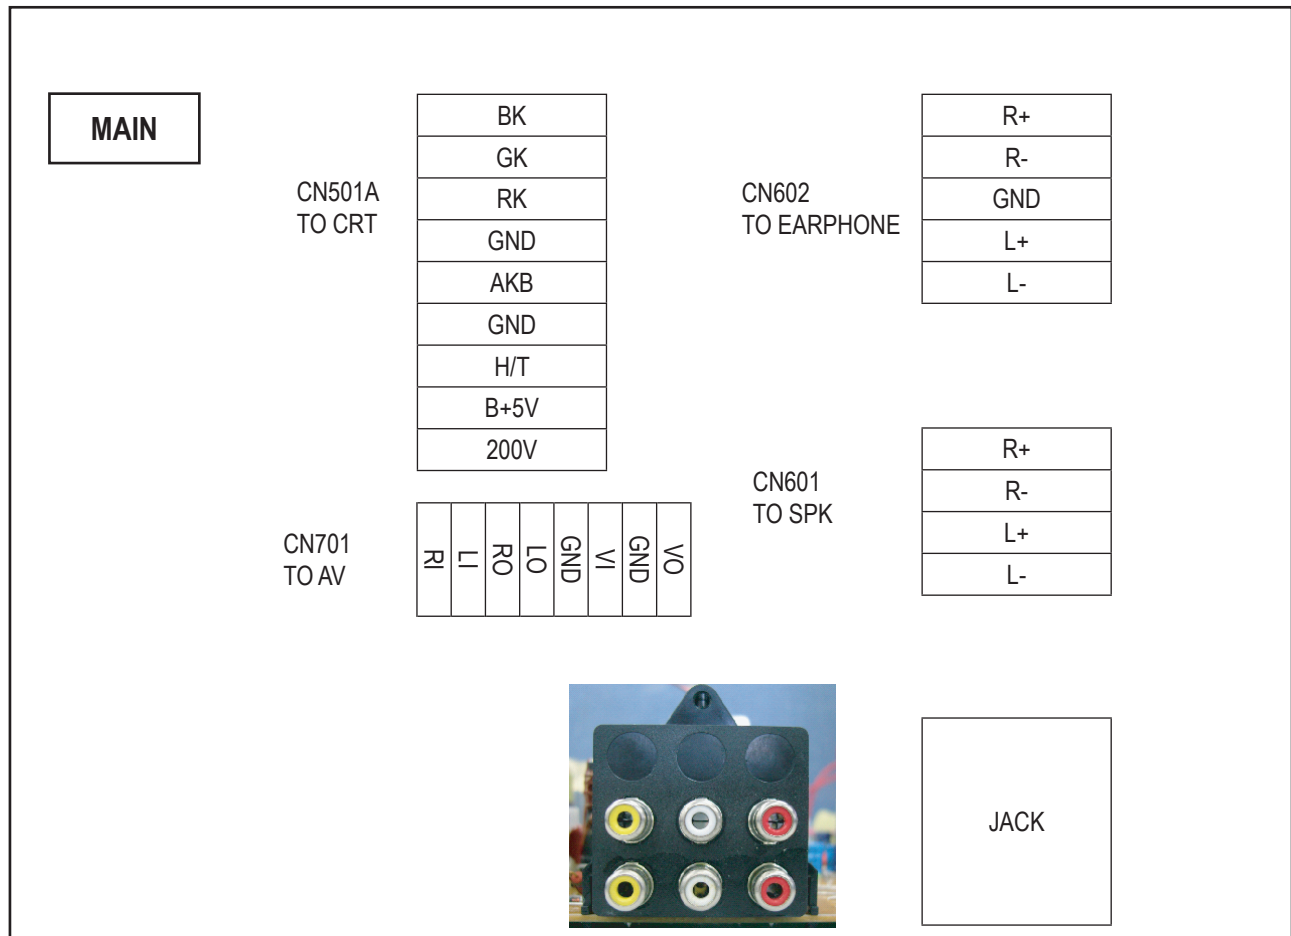

6-2-1 Main Board Connector Pin**CN501A**

CRT Board connection

Pin No.	Pin Name
1	BK
2	GK
3	RK
4	GND
5	AKB
6	GND
7	H/T
8	B+5V
9	200V

CN701

Side-AV connection

Pin No.	Pin Name
1	VO
2	GND
3	VI
4	GND
5	LO
6	RO
7	LI
8	RI

CN602

EARPHONE connection

Pin No.	Pin Name
1	R+
2	R-
3	GND
4	L+
5	L-

CN601

TO SPK

Pin No.	Pin Name
1	R+
2	R-
3	L+
4	L-

CN501

CRT Board connection

Pin No.	Pin Name
1	BK
2	GK
3	RK
4	GND
5	AKB
6	GND
7	H/T
8	B+5V
9	200V

6-2-2 Connector role

Loc. No.	Description
CN501	Main Board and CRT Board connect
CN602	Main Board and Side-AV to E-Phone connect
CN701	Main Board and Side-AV connect
CN601	Main Board and Speaker connect

MEMO