

MODO SERVICIO CHASIS NX 56LA

1.1. The way to enter P-Mode

a) Method one

A) Switch on the TV set.

B) Press the "MENU" key on RC to show the "PICTURE" OSD menu.

C) Move the cursor to "Contrast" item then press the "9", "7", "3", "5" key continuously on RC within 3 seconds then enter P-Mode. The "P" letter will appear on the left low corner of the screen when enter P-Mode. Also the "FACTORY HOTKEY" will be set to "ON (= 1)".

b) Another method

Press the "RECALL" key on RC to enter P-mode directly.

***Notes:**

1. This will be active only when the "FACTORY HOTKEY" had set to "ON (= 1)".

2. When the power on with "FACTORY HOTKEY" had set to "ON (= 1)", the set will enter the P-Mode automatically.

1.2. Exit the P-Mode

Press the "RECALL" or "MENU" key on RC to exit the P-Mode.

1.3. Keys' function on RC at the P-Mode

Use the RC to navigate in P-Mode:

Press "0" to "9" key to select factory adjustment page.

Press "Ch+ Ch-" key to select option.

Press "Vol+ Vol-" key to adjust or select option.

Press "DISPLAY" key to display software version.

Press "MENU" key to exit the P-Mode.

Press "RECALL" key to enter or exit the P-Mode.