


TOSHIBA

FILE NO. 050-200401

SERVICE MANUAL

COLOR TELEVISION

27AF44

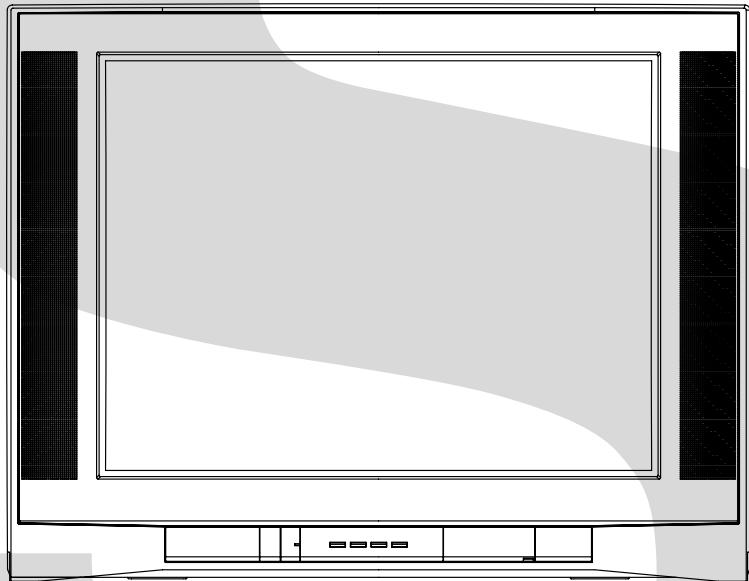

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the eternal exposure metal [Note 2] should be more than 1M ohm by using the 500V insulation resistance meter [Note 1].
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal
Earphone jack

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

IMPORTANT

Inferior silicon grease can damage IC's and transistors.

When replacing an IC's or transistors, use only specified silicon grease (YG6260M).

Remove all old silicon before applying new silicon.

TABLE OF CONTENTS

SERVICING NOTICES ON CHECKING	A1-1
HOW TO ORDER PARTS	A1-1
IMPORTANT	A1-1
TABLE OF CONTENTS	A2-1
GENERAL SPECIFICATIONS	A3-1~A3-5
DISASSEMBLY INSTRUCTIONS	
1. REMOVAL OF ANODE CAP	B1-1
2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC	B2-1, B2-2
SERVICE MODE LIST	C1-1
CONFIRMATION OF HOURS USED	C1-1
WHEN REPLACING EEPROM (MEMORY) IC	C1-1
ELECTRICAL ADJUSTMENTS	D-1~D-5
BLOCK DIAGRAMS	E-1, E-2
PRINTED CIRCUIT BOARDS	
MAIN	F-1~F-4
CRT/VM COIL	F-5, F-6
SCHEMATIC DIAGRAMS	
MICON	G-1, G-2
CHROMA	G-3, G-4
DEFLECTION	G-5, G-6
POWER	G-7, G-8
SOUND	G-9, G-10
TUNER/STEREO	G-11, G-12
AV	G-13, G-14
COMB/FILTER	G-15, G-16
CRT/SVM	G-17, G-18
WAVEFORMS	H-1, H-2
MECHANICAL EXPLODED VIEWS	I-1, I-2
MECHANICAL REPLACEMENT PARTS LIST	J1-1
ELECTRICAL REPLACEMENT PARTS LIST	J2-1~J2-10

GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	27 inch / 676.0mmV
		CRT Type	Flat	
		Deflection	106 degree	
		Magnetic Field	BV/BH	+0.45G/0.18G
		Color System		NTSC
		Speaker		2 Speaker
		Position		Front Side
		Size		1.8 x 3.9 Inch
		Impedance		8 ohm
		Sound Output	MAX 10% (Typical)	5.0+5.0 W 4.0+4.0 W
NTSC3.58+4.43 /PAL60Hz				No
G-2	Tuning System	Broadcasting System		US System M
		Tuner and System		1 Tuner
		Receive CH		USA(W/ CATV)
		Destination		F-Synth
		Tuning System		VHF/UHF 75 ohm
		Input Impedance		2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84
		CH Coverage		
		Intermediate Frequency	Picture(FP) Sound(FS) FP-FS	45.75MHz 41.25MHz 4.50MHz
		Preset CH		No
		Stereo/Dual TV Sound		Yes
G-3	Power	Tuner Sound Muting		Yes
		Power Source	AC DC	120V AC 60Hz
		Power Consumption	at AC	135 W at AC 120 V 60 Hz 3 W at AC 120 V 60 Hz -- kWh/Year
		Stand by (at AC)		
		Per Year		
G-4	Regulation	Protector	Power Fuse Safety Circuit IC Protector(Micro Fuse)	Yes Yes No
		Safety		UL/CSA
		Radiation		FCC/IC
G-5	Temperature	X-Radiation		DHHS/HWC
		Operation		+50°C ~ +400°C
G-6	Operating Humidity	Storage		-200C ~ +600C
				Less than 80% RH

GENERAL SPECIFICATIONS

G-7	On Screen Display	Menu		Yes
		Menu Type		Icon
		Picture		Yes
		Contrast		Yes
		Brightness		Yes
		Color		Yes
		Tint		Yes
		Sharpness		Yes
		Sound		Yes
		Bass		Yes
		Treble		Yes
		Balance		Yes
		BBE On/Off		Yes
		Stable Sound On/Off		Yes
		Surround On/Off		Yes
		Set Up		Yes
		TV/CATV		Yes
		Auto CH Memory		Yes
		Add/ Delete		Yes
		Option		Yes
		Language		Yes
		CH Label		Yes
		Favorite CH		Yes
		V-Chip		Yes
		Lock		Yes
		On/Off Timer		Yes
		Color Stream DVD/DTV		Yes
		Control Level		Yes
		Volume		Yes
		Brightness		Yes
		Contrast		Yes
		Color		Yes
		Tint		Yes
		Sharpness		Yes
		Tuning		No
		Bass		Yes
		Treble		Yes
		Balance		Yes
		Back Light		No
		Stereo, Audio Output, SAP		Yes
		Video		Yes
		Color Stream		Yes
		Channel(TV/Cable)		Yes
		CH Label		Yes
		Game Timer		Yes
		Sleep Timer		Yes
		Sound Mute		Yes
		V-chip Rating		Yes
		16: 9		Yes
G-8	OSD Language		English French Spanish	
G-9	Clock and Timer	Sleep Timer	Max Time Step	120 Min — 10 Min
		On/Off Timer	Program(On Timer / Off Timer)	Yes
		Wake Up Timer		No
		Timer Back-up (at Power Off Mode)	more than	-- Min Sec

GENERAL SPECIFICATIONS

G-10	Remote Control	Unit	RC-GW
		Glow in Dark Remocon	Yes
		Format	Toshiba
		Custom Code	<u>TV:40-BF h</u>
		Power Source	3V
			UM size x 2 pcs
		Total Keys	<u>50 Keys</u>
		Keys	
		Power	Yes
		1	Yes
		2	Yes
		3	Yes
		4	Yes
		5	Yes
		6	Yes
		7	Yes
		8	Yes
		9	Yes
		0	Yes
		100	Yes
		CH Up	Yes
		CH Down	Yes
		Volume Up	Yes
		Volume Down	Yes
		TV/Caption/Text	Yes
		CH1/CH2	Yes
		TV/Video(TV/AV)	Yes
		CH RTN/CH ENT(Quick View)	Yes
		Sleep	Yes
		RE Call(Call)	Yes
		Reset	Yes
		Menu/Enter	Yes
		Mute	Yes
		Exit	Yes
		MTS(Audio Select)	Yes
		Fav.Up	Yes
		Fav.Down	Yes
		16: 9	Yes
		Multi Brand Keys	
		CH Up(VCR)	Yes
		CH Down(VCR)	Yes
		Pause/Still	Yes
		TV/VCR(VCR)	Yes
		FF	Yes
		Rew	Yes
		Rec	Yes
		Play	Yes
		Stop	Yes
		TV	Yes
		VCR	Yes
		Cable	Yes
		DVD	Yes
		CODE	Yes
		Volume Up(DVD)	Yes
		Volume Down(DVD)	Yes
		DVD CLEAR	Yes
		TOP MENU	Yes
		DVD MENU	Yes
		DISPLAY	Yes

GENERAL SPECIFICATIONS

G-11	Features	Auto Degauss	Yes
		Auto Shut Off	Yes
		Canal+	No
		CATV	Yes
		Anti-theft	No
		Rental	No
		Memory(Last CH)	Yes
		Memory(Last Volume)	Yes
		V-Chip	Yes
		Type	<u>USA,Toshiba Type</u>
		BBE	Yes
		Auto Search	No
		CH Allocation	No
		SAP	Yes
		Just Clock Function	No
		CH Label	Yes
		VM Circuit	Yes
		Full OSD	No
		Premiere	No
		Comb Filter	Yes <u>3 Lines</u>
		Auto CH Memory	Yes
		Hotel Lock	No
		Closed Caption	Yes
		Stable Sound	Yes
		FBT Leak Test Protect	Yes
		CH Lock	Yes
		Video Lock	Yes
		Game Timer (Max Time:120 Min)	Yes
		Energy Star	No
		Favorite CH	Yes
		Surround	Yes
		16:9 Mode	Yes
G-12	Accessories	Owner's Manual	Language W/ Warranty
		Remote Control Unit	Yes
		Rod Antenna	No
		Poles Terminal	
		Loop Antenna	No
		Terminal	-
		U/V Mixer	No
		DC Car Cord (Center+)	No
		Guarantee Card	No
		Warning Sheet	No
		Circuit Diagram	No
		Antenna Change Plug	No
		Service Station List	No
		Important Safety Instruction	No
		Dew/AHC Caution Sheet	No
		AC Plug Adapter	No
		Quick Set-up Sheet	No
		Battery	Yes UM size x pcs OEM Brand
			UM-4 x 2 No
		AC Cord	No
		AV Cord (2Pin-1Pin)	No
		Registration Card (NDL Card)	Yes
		PTB Sheet	No
		ESP Card	Yes
		300 ohm to 75 ohm Antenna Adapter	No

GENERAL SPECIFICATIONS

G-13	Interface	Front	Power	Yes	
			System Select	No	
			Main Power SW	No	
			Sub Power	No	
			Channel Up	Yes	
		Rear	Channel Down	Yes	
			Volume Up	Yes	
			Volume Down	Yes	
			AC/DC	No	
			TV/CATV Selector	No	
	Indicator		Degauss	No	
			Main Power SW	No	
			Power	Yes(RED)	
			Stand-by	No	
			On Timer	No	
	Terminals	Front	Video Input = VIDEO3	RCA	
			Audio Input = VIDEO3	RCA x 2	
			Other Terminal	Head Phone	
		Rear	Video Input(Rear1) = VIDEO1	RCA	
			Video Input(Rear2) = VIDEO2	RCA	
			Audio Input(Rear1) = VIDEO1	RCA x 2	
			Audio Input(Rear2) = VIDEO2	RCA x 2	
			Video Output	RCA	
			Audio Output	RCA x 2	
			Euro Scart	No	
			Color Stream	RCA x 3	
			S Input	Yes	
			Diversity	No	
			Ext Speaker	No	
			DC Jack 12V(Center +)	No	
			VHF/UHF Antenna Input	F Type	
			AC Outlet	No	
G-14	Set Size	Approx. W x D x H (mm)	<u>740 x 495 x 574.5</u>		
G-15	Weight	Net (Approx.)	<u>40.0 kg (88.2lbs)</u>		
		Gross (Approx.)	<u>46.5 kg (102.5lbs)</u>		
G-16	Carton	Master Carton	Content	No	
			Material	--- Sets	
			Dimensions W x D x H(mm)	<u>--</u> /--	
			Description of Origin	No	
		Gift Box	Material	Yes	
			Dimensions W x D x H(mm)	Double/Brown	
			Design	<u>850 x 620 x 665</u>	
			Description of Origin	As per Buyer's	
	Drop Test		Height (cm)	Yes	
			Container Stuffing	Natural Dropping At 1 Corner / 2 Edges / 4 Surfaces	
				40 (ORION SPEC:25)	
G-17	Cabinet Material	Cabinet	Cabinet Front	<u>PS 94V0 DE CABROM</u>	
			Cabinet Rear	<u>PS 94V0 DE CABROM</u>	
		PCB	Non-Halogen Demand	No	
			Eyelet Demand	Yes	
G-18	Environment	Pb Free	Lead-free Solder	No	
		Cd Free		No	

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- * After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- * Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 1-1.)**

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.

A cracking noise will be heard as the voltage is discharged.

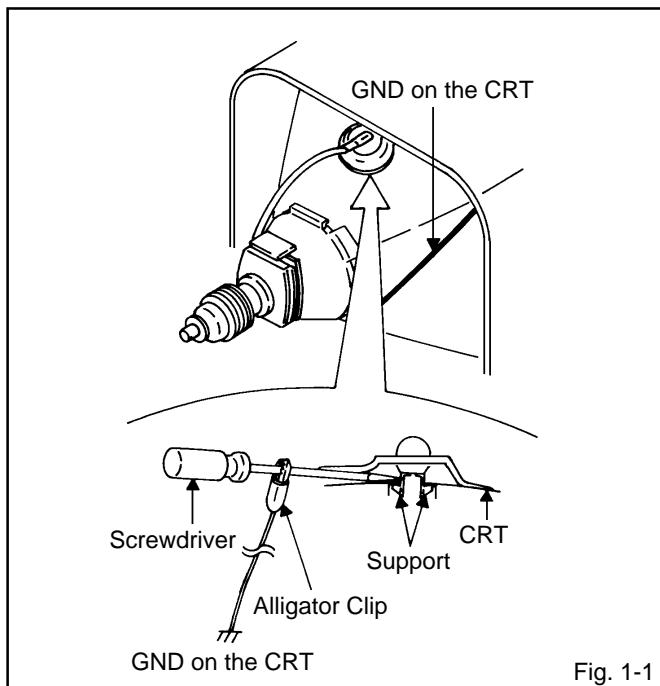


Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 1-2.)**

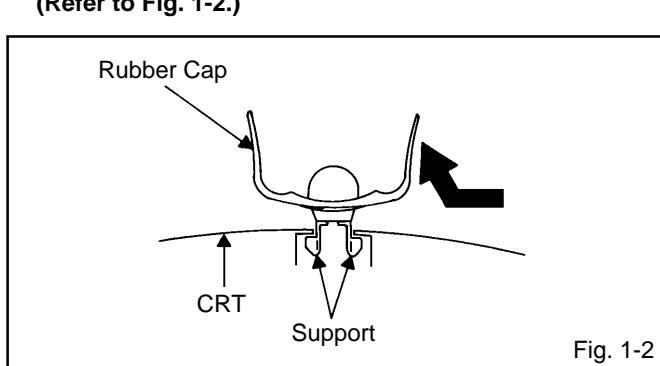


Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 1-3.)**

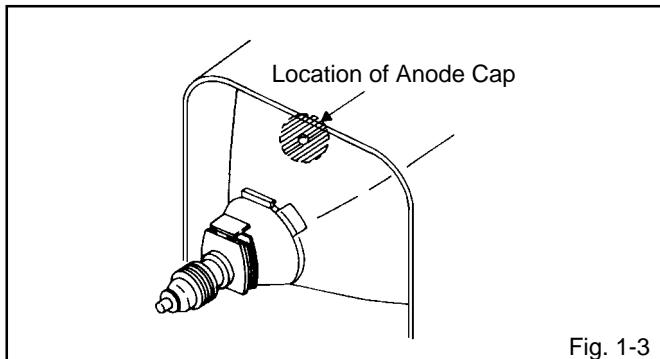


Fig. 1-3

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 1-4.)**

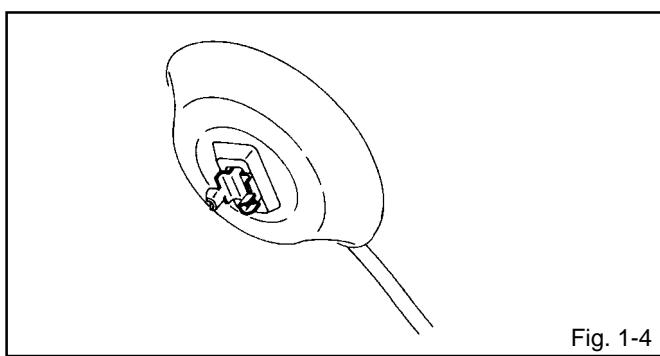


Fig. 1-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in **Fig. 1-5**.

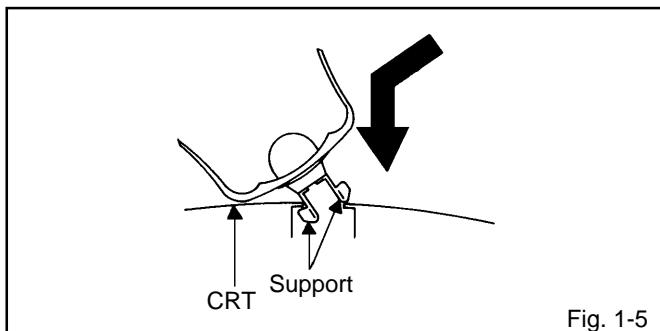


Fig. 1-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS


2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 2-1.)

NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

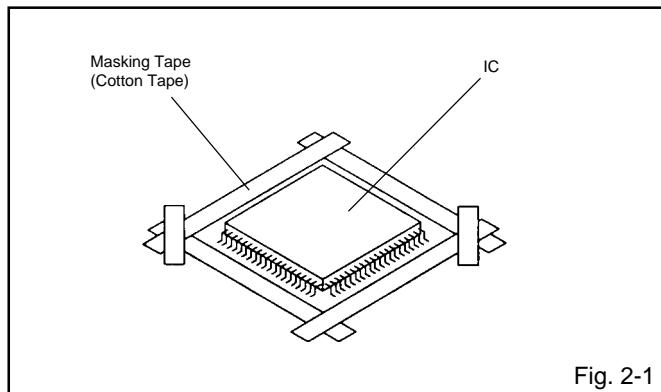

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 2-2.)

NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

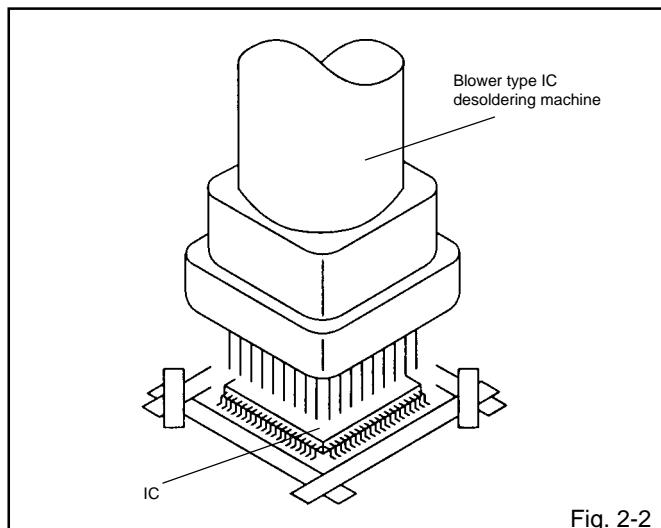

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using the tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 2-3.)

NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

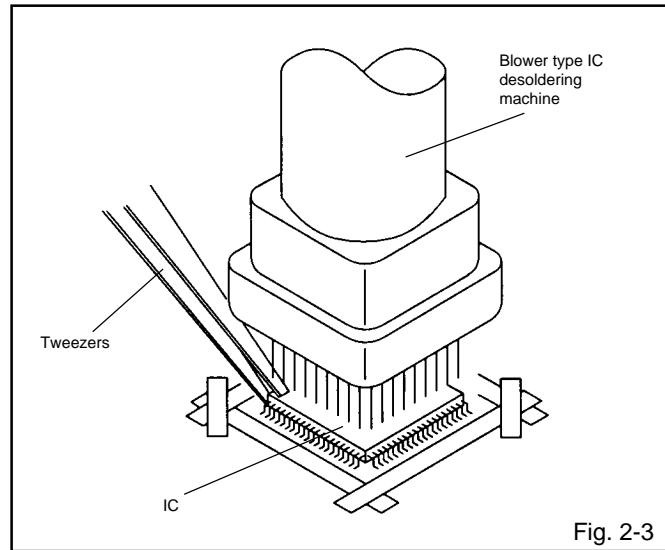

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 2-4.)

NOTE

Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

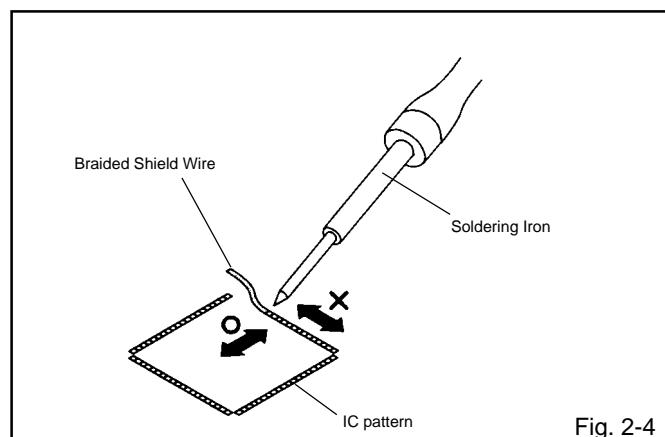

DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily.
(Refer to Fig. 2-5.)

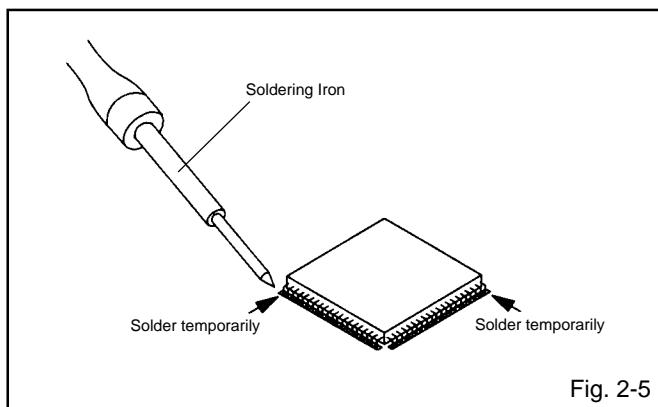


Fig. 2-5

2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads.
(Refer to Fig. 2-6.)

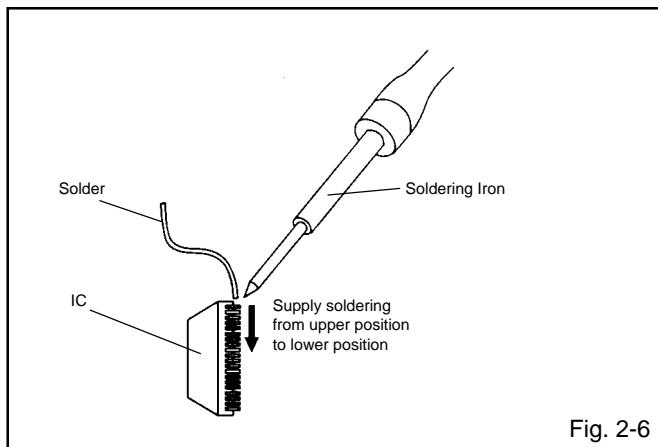


Fig. 2-6

3. Absorb the solder left on the lead using the Braided Shield Wire. **(Refer to Fig. 2-7.)**

NOTE

Do not absorb the solder to excess.

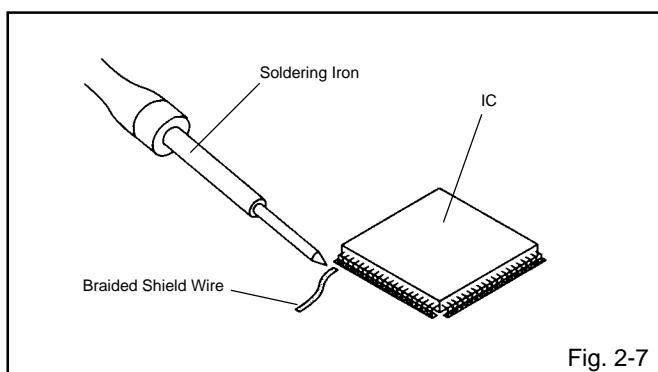


Fig. 2-7

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. **(Refer to Fig. 2-8.)**

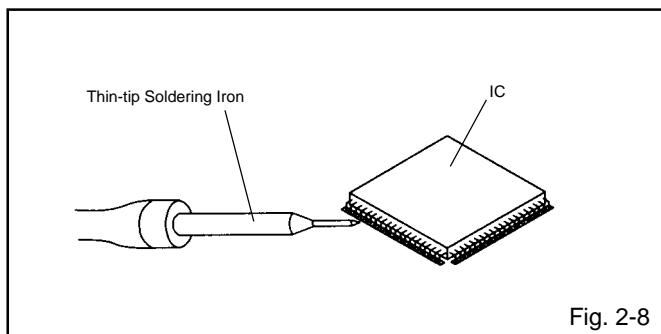


Fig. 2-8

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, always be sure to replace the IC in this case.

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.
To enter the Service Mode, press both set key and remote control key for more than 1 second.


Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED". Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

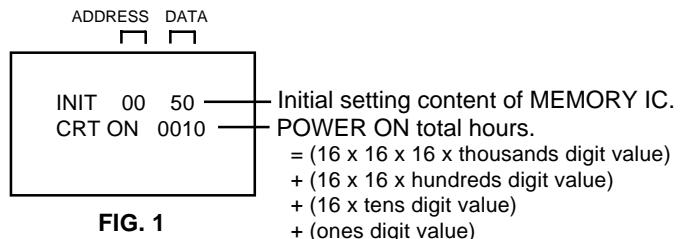

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: No need setting for after INI 1F due to the adjustment value.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	50	E8	0A	44	5E	B3	24	B7	3D	AC	AA	04	80	80	80	59
10	70	00	00	00	00	00	06	00	3F	0F	0D	E2	A8	21	42	00

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second. ADDRESS and DATA should appear as FIG 1.
3. ADDRESS is now selected and should "blink". Using the VOL. UP/DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using VOL. UP/DOWN button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.
After the data input, set to the initializing of shipping.
9. Turn POWER on.
10. Press both VOL. DOWN button on the set and Channel button **(1)** on the remote control for more than 1 second.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.

The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL ADJUSTMENTS

1. ADJUSTMENT PROCEDURE

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Multi-sound Generator
4. Pattern Generator

On-Screen Display Adjustment

1. In the condition of NO indication on the screen. Press the VOL. DOWN button on the set and the Channel button (9) on the remote control for more than 1 second to appear the adjustment mode on the screen as shown in Fig. 1-1.

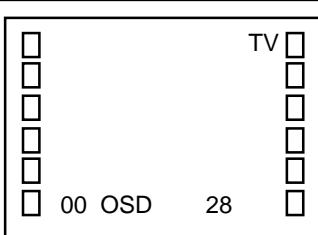


Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button (0-9) on the remote control to select the options shown in Fig. 1-2.
4. Press the MENU button on the remote control to end the adjustments.

NO. FUNCTION	NO. FUNCTION
00 OSD H	19 CONTRAST CENT
01 CUT OFF	20 CONTRAST MIN
02 H. VCO	21 COLOR MAX
03 H. PHASE	22 COLOR CENTER
04 AFC GAIN	23 COLOR MIN
05 V. SHIFT	24 TINT
06 H. SIZE	25 SHARPNESS
07 V. SIZE	26 Cb DELAY FINE
08 V. LINEARITY	27 Cr DELAY FINE
09 VS CORRECTION	28 Cb PEDESTAL ADJ
10 DRIVE R	29 Cr PEDESTAL ADJ
11 DRIVE B	30 E/W PARABOLA
12 R CUT OFF	31 E/W CORNER
13 G CUT OFF	32 E/W TRAPEZIUM
14 B CUT OFF	33 LEVEL
15 BRIGHT MAX	34 SEPARATION1
16 BRIGHT CENT	35 SEPARATION2
17 BRIGHT MIN	36 READ DATA
18 CONTRAST MAX	

Fig. 1-2

2. BASIC ADJUSTMENTS

2-1: CONSTANT VOLTAGE

1. Place the set with Aging Test for more than 5 minutes.
2. Set condition is AV MODE without signal.
3. Connect the digital voltmeter to the **TP003**.
4. Adjust the **VR502** until the digital voltmeter is $135 \pm 0.5V$.

2-2: CUT OFF

1. Place the set with Aging Test for more than 15 minutes.
2. Activate the adjustment mode display of Fig. 1-1 and press the channel button (01) on the remote control to select "CUT OFF".
3. Adjust the **Screen Volume** until a dim raster is obtained.

2-3: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 10 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (12) on the remote control to select "R. BIAS".
5. Press the CH. UP/DOWN button on the remote control to select the "R. BIAS", "G. BIAS", "B. BIAS", "B. DRIVE" or "G. DRIVE".
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R. BIAS, G. BIAS, B. BIAS, B. DRIVE, and G. DRIVE at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

2-4: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

2-5: HORIZONTAL PHASE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (03) on the remote control to select "H. PHAS".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

ELECTRICAL ADJUSTMENTS

2-6: HORIZONTAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(06)** on the remote control to select "H. SIZE".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes 10%.

2-7: VERTICAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Adjust the **VR401** until the horizontal line becomes fit to the notch of the shadow mask.

2-8: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(07)** on the remote control to select "V. SIZE".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes $9 \pm 2\%$.

2-9: VERTICAL LINEARITY

NOTE: Adjust after performing adjustments in section 2-8.
After the adjustment of Vertical Linearity, reconfirm the Vertical Position and Vertical Size adjustments.

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(08)** on the remote control to select "V. LIN".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

2-10: LEVEL

1. Receive the VHF HIGH (70dB).
2. Connect the AC voltmeter to **pin 6 of CP101**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(33)** on the remote control to select "LEVEL".
4. Press the VOL. UP/DOWN button on the remote control until the AC voltmeter is $75 \pm 2\text{mV}$.

2-11: CORNER

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(31)** on the remote control to select "CORNER".
4. Press the VOL. UP/DOWN button on the remote control until the right and left vertical lines are straight.

2-12: TRAPEZIUM

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(32)** on the remote control to select "TRAPEZIUM".
4. Press the VOL. UP/DOWN button on the remote control until the both vertical lines of the screen become parallel.

2-13: SEPARATION 1, 2

Please do the method (1) or method (2) adjustment.

Method (1)

1. Set the multi-sound signal generator for each different L-ch and R-ch frequency (Ex. L-ch=2KHz, R-ch=400Hz) and receive the RF.
2. Connect the oscilloscope to the **Audio Out Jack**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(34)** on the remote control to select "SEP 1".
4. Press the VOL. UP/DOWN button on the remote control to adjust it until the audio output wave becomes a fine sine wave.
5. Press the CH UP button once the set to "SEP 2" mode. Then perform the above adjustment 4.

Method (2)

1. Set the multi-sound signal generator L-ch=1KHz, R-ch =Non input and receive the RF.
2. Connect the oscilloscope to the **Audio Out Jack (R-ch)**.
3. Press the AUDIO SELECT button on the remote control to set to the stereo mode.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(34)** on the remote control to select "SEP 1".
5. Press the VOL. UP/DOWN button on the remote control to adjust it until the R-ch output becomes minimum.
6. Set the multi-sound signal generator L-ch=Non input, R-ch=1KHz and receive the RF.
7. Connect the oscilloscope to the **Audio Out Jack (L-ch)**.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(35)** on the remote control to select "SEP 2".
9. Press the VOL. UP/DOWN button on the remote control to adjust it until the L-ch output becomes minimum.

ELECTRICAL ADJUSTMENTS

2-14: BRIGHT CENT

1. Receive the monoscope pattern. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI CENT".
4. Press the VOL. UP/DOWN button on the remote control until the white 0% is starting to be visible
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.
7. Press the TV/VIDEO button on the remote control to set to the CS mode.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI CENT".
9. Press the VOL. UP/DOWN button on the remote control until the brightness step No. becomes "90".

2-15: TINT/COLOR CENT

1. Receive the color bar pattern.
2. Connect the oscilloscope to **TP806**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(24)** on the remote control to select "TINT".
4. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes as straight line **(Refer to Fig. 2-1)**
5. Connect the oscilloscope to **TP804**.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(22)** on the remote control to select "COL.CENT".
7. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to $120 \pm 10\%$ of the white level. **(Refer to Fig. 2-2)**
8. Receive the color bar pattern. (Audio Video Input)
9. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~7.
10. Press the TV/VIDEO button on the remote control to set to the CS mode.
11. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV mode.

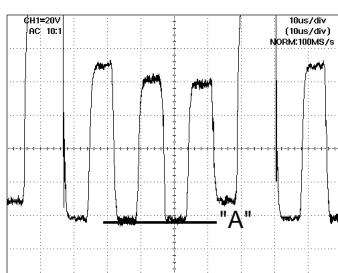


Fig. 2-1

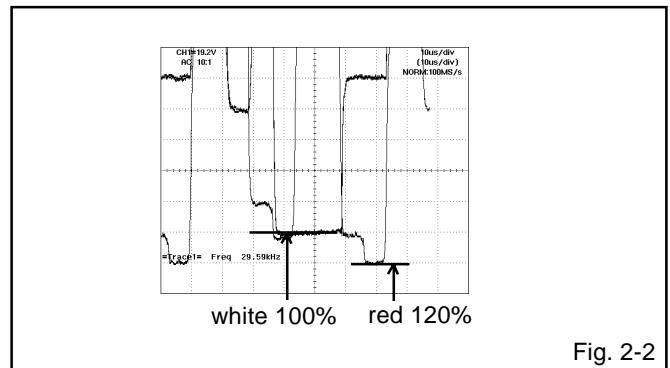


Fig. 2-2

2-16: CONTRAST MAX MANUAL

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(18)** on the remote control to select "CONT. MAX".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "100".
3. Receive a broadcast and check if the picture is normal.
4. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 1~3. Press the TV/VIDEO button on the remote control to set to
5. the CS mode. Then perform the above adjustments 1~3.

2-17: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. **(Refer to Fig. 2-3)**

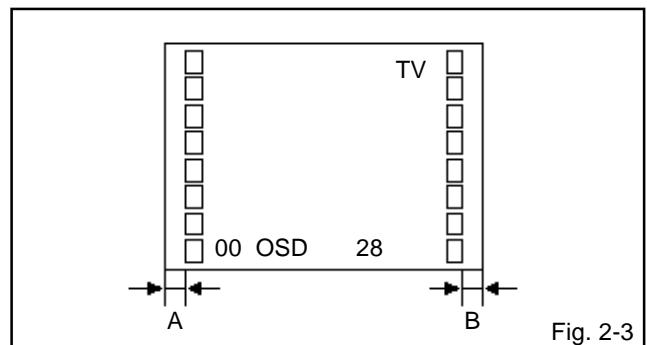


Fig. 2-3

2-18: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below. (RF/AV/CS)

NO. FUNCTION	STEP NO.	NO. FUNCTION	STEP NO.
02 H.VCO	03	21 COL.MAX	90
04 AFC GAIN	06	23 COL.MIN	00
05 V.SHIFT	02	25 SHARPNESS	40
09 VS.CORRECTION	38	26 CB DL	00
15 BRI.MAX	160	27 CR DL	00
17 BRI.MIN	30	28 CB PED	08
19 CONT.CENT	64	29 CR PED	08
20 CONT.MIN	05		

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. (**Refer to Fig. 3-1**)
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue color.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

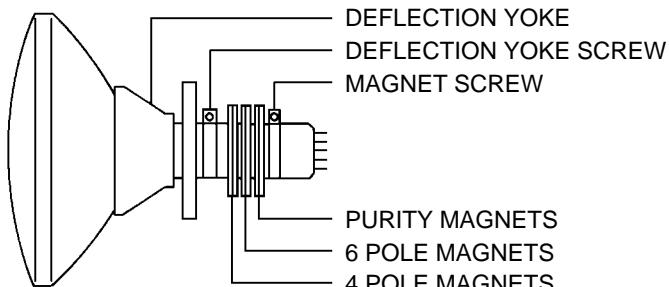


Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. (**Refer to Fig. 3-2-a**)
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. (**Refer to Fig. 3-2-b**)


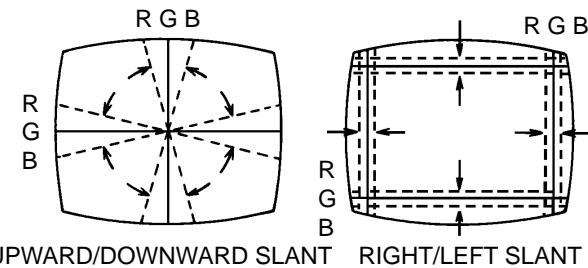


Fig. 3-2-a

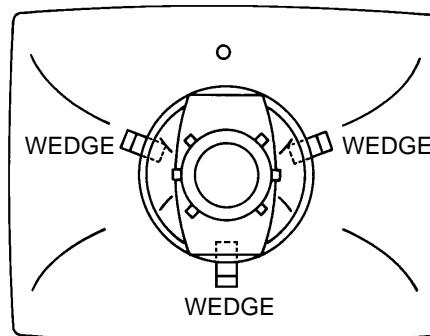


WEDGE POSITION


Fig. 3-2-b

ELECTRICAL ADJUSTMENTS


4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

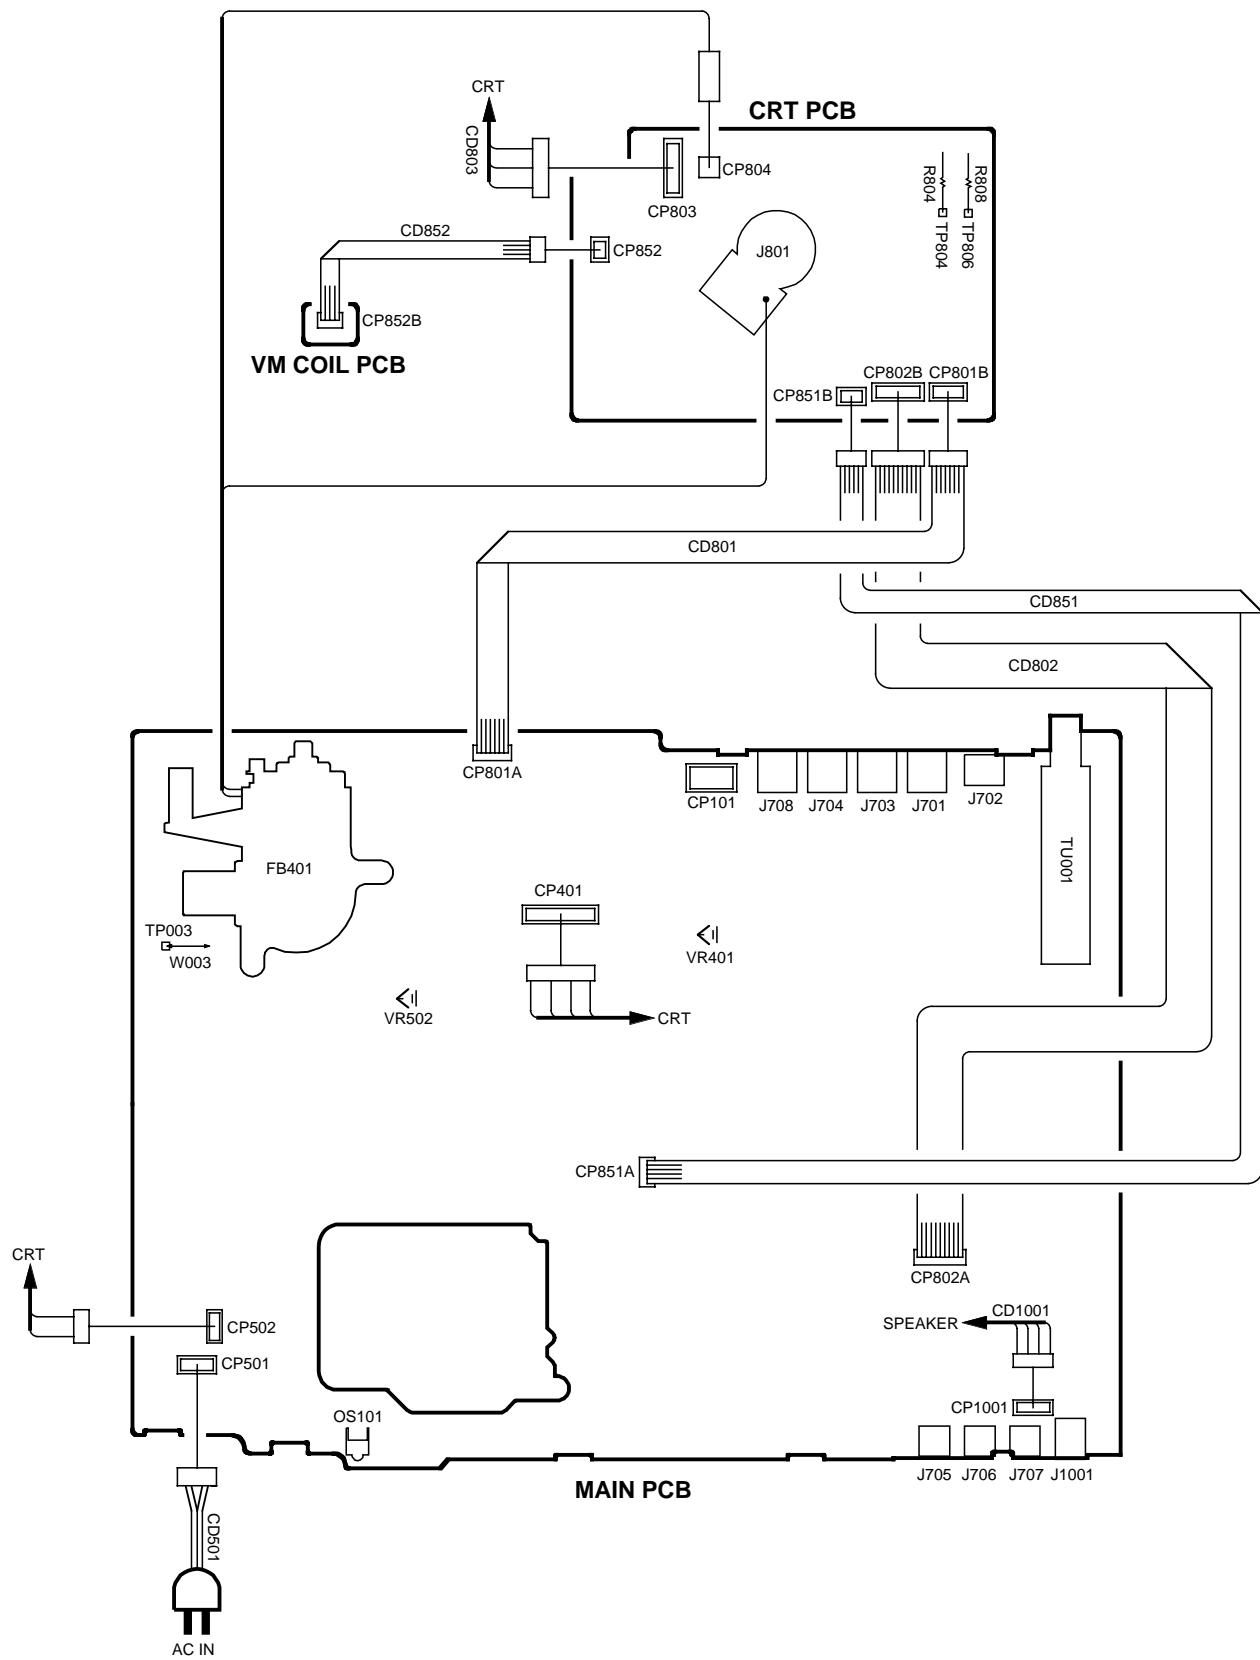


BLOCK DIAGRAM

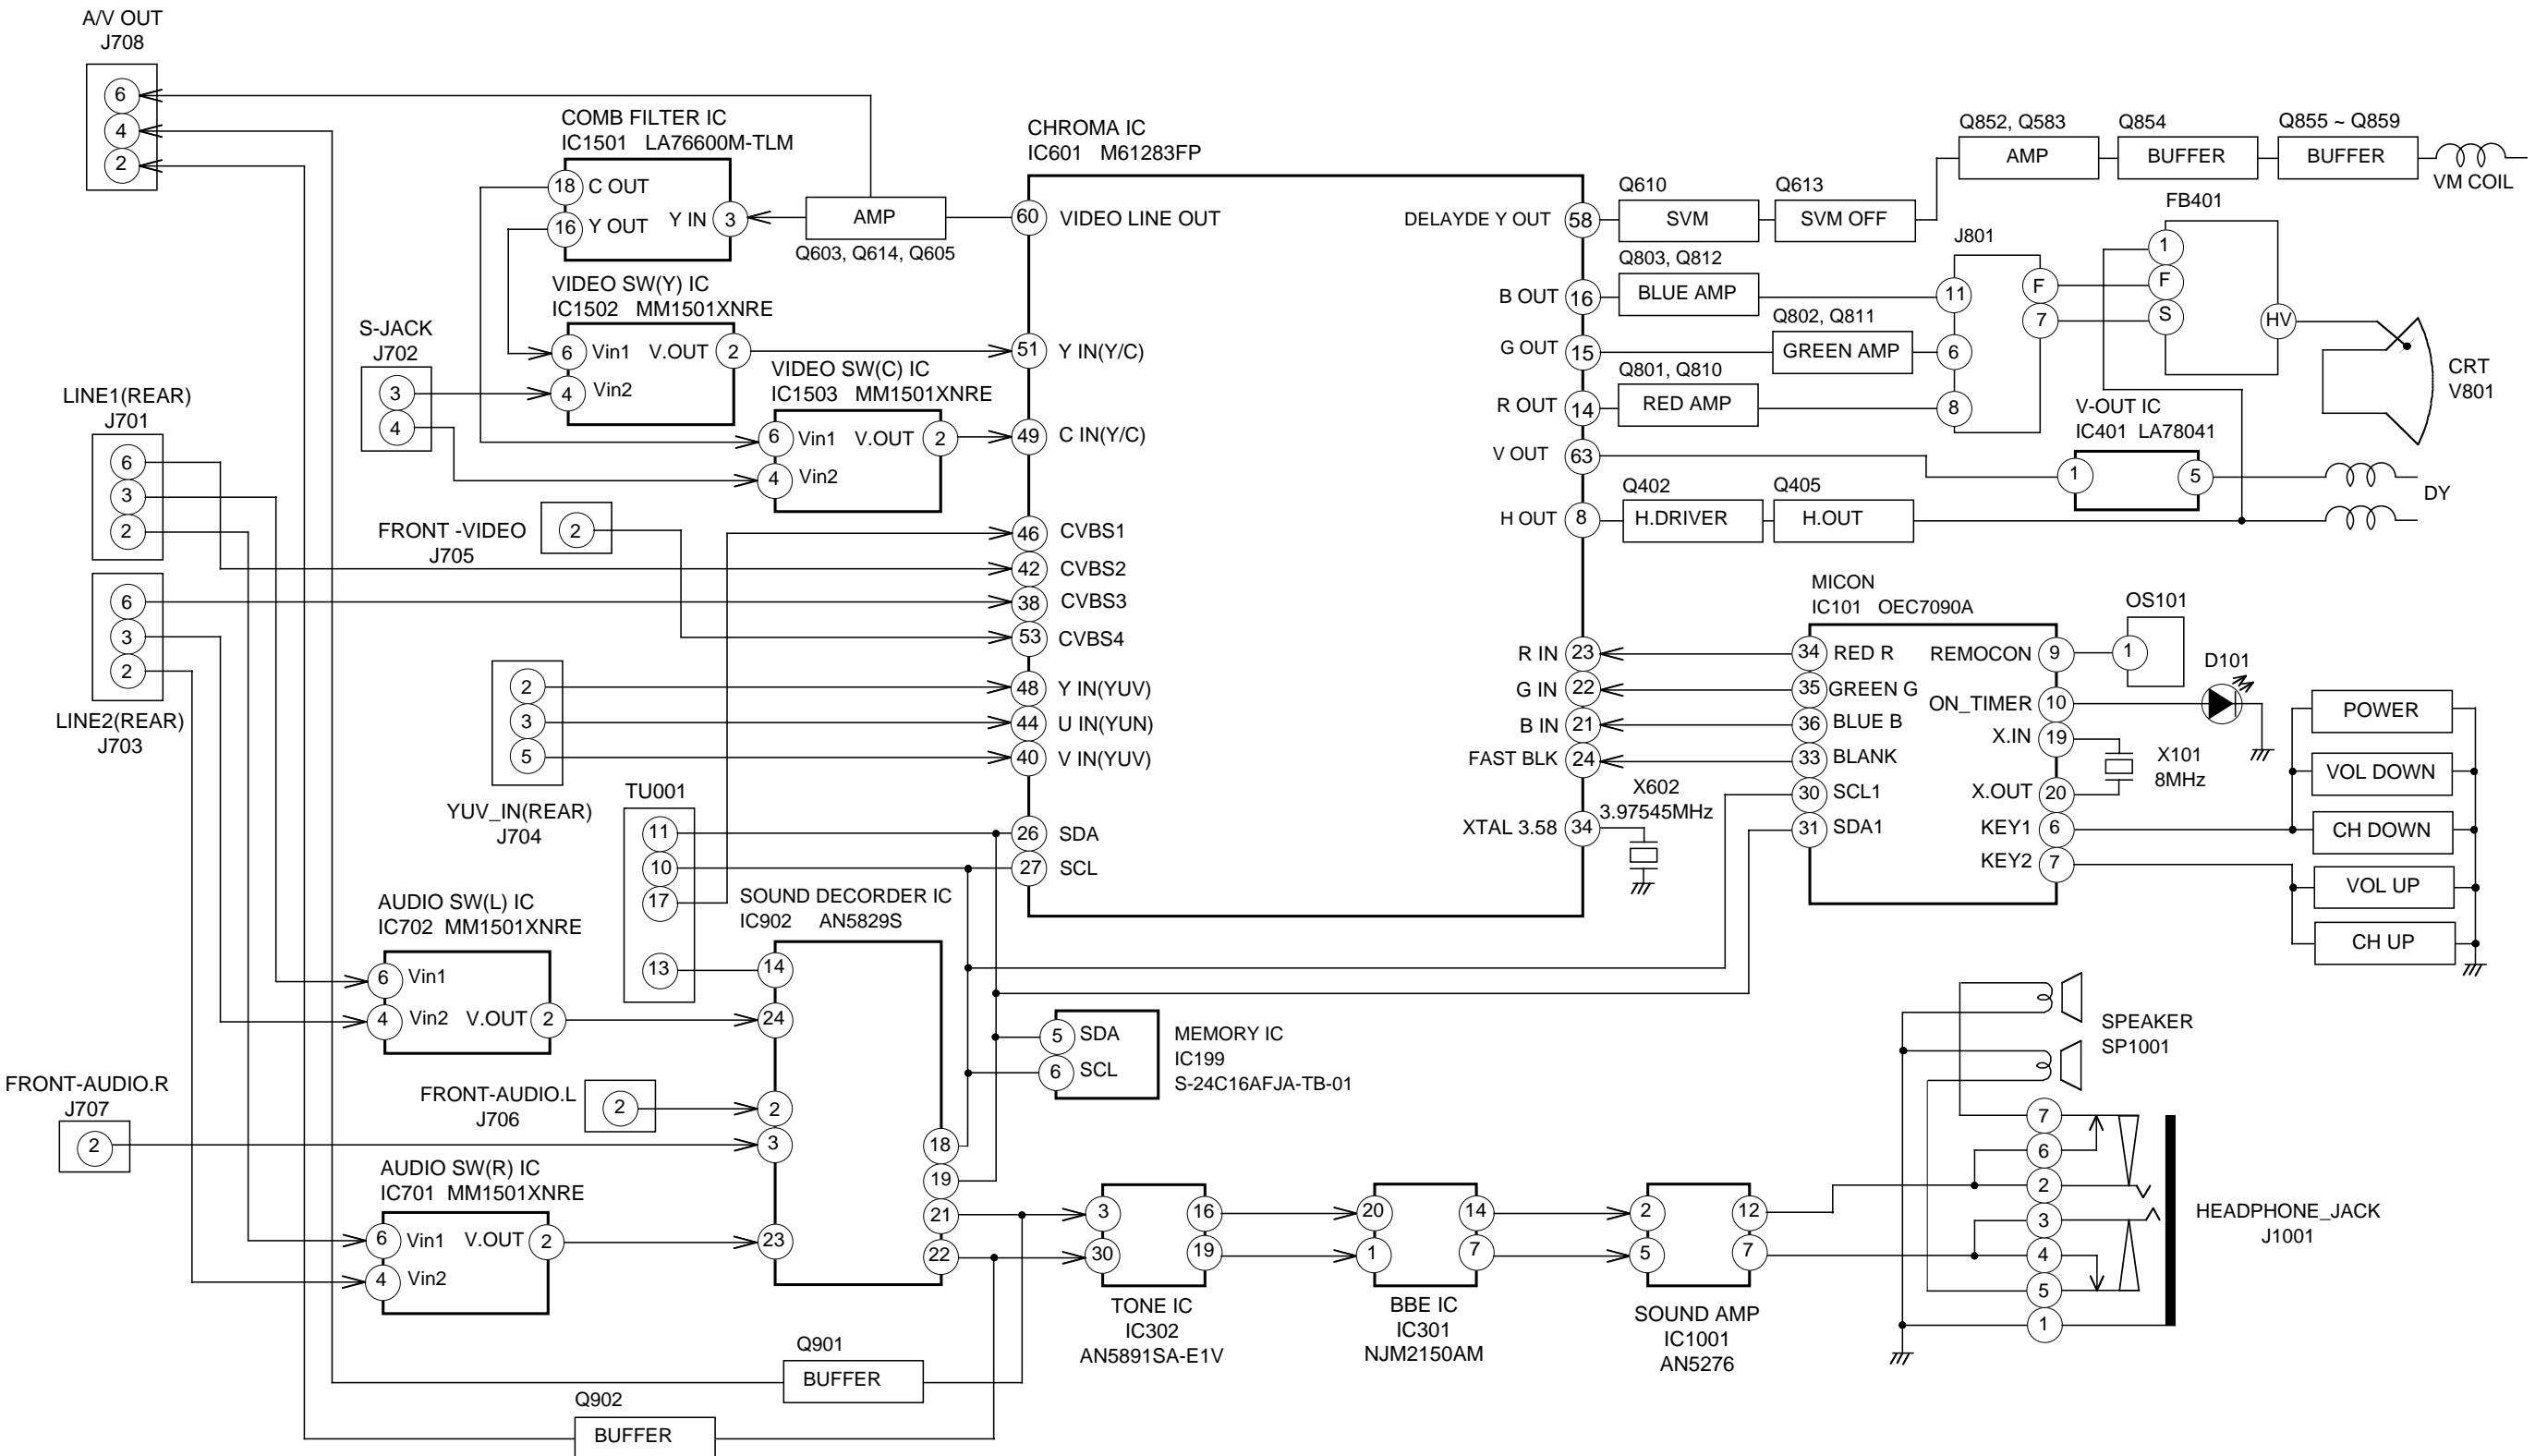


PRINTED CIRCUIT BOARDS MAIN (INSERTED PARTS) SOLDER SIDE

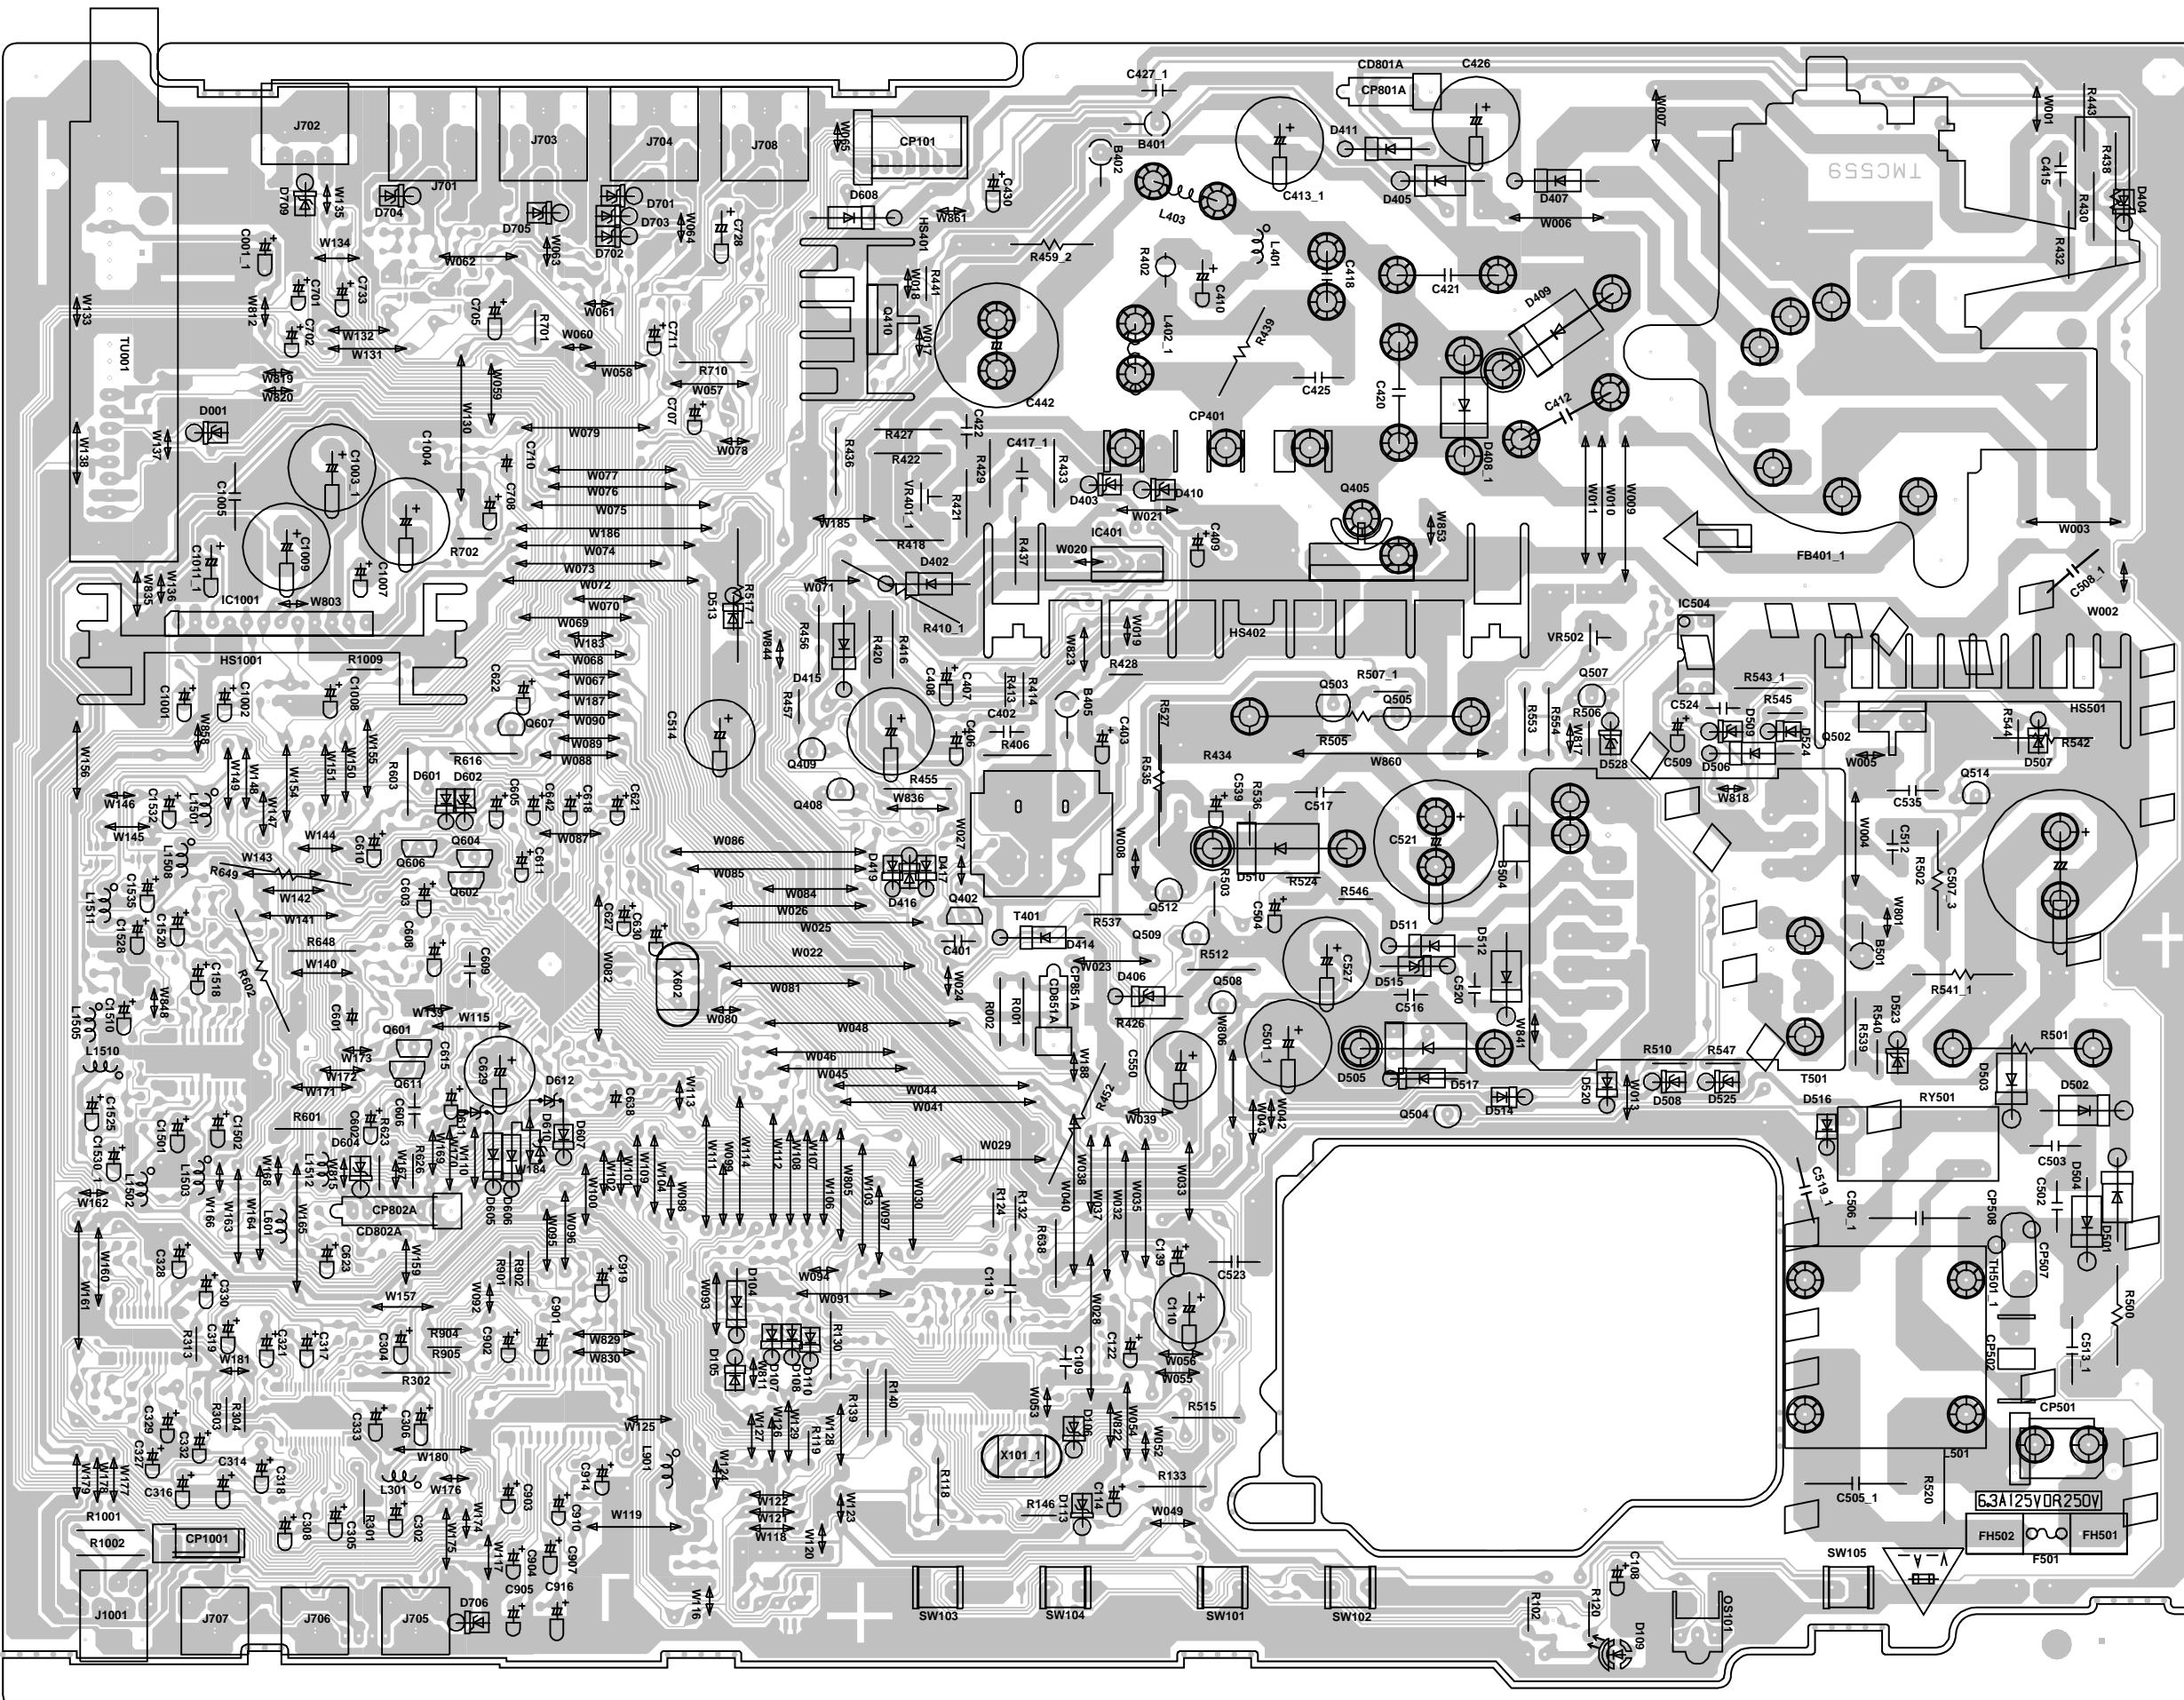


**PRINTED CIRCUIT BOARDS
MAIN (CHIP MOUNTED PARTS)
SOLDER SIDE**

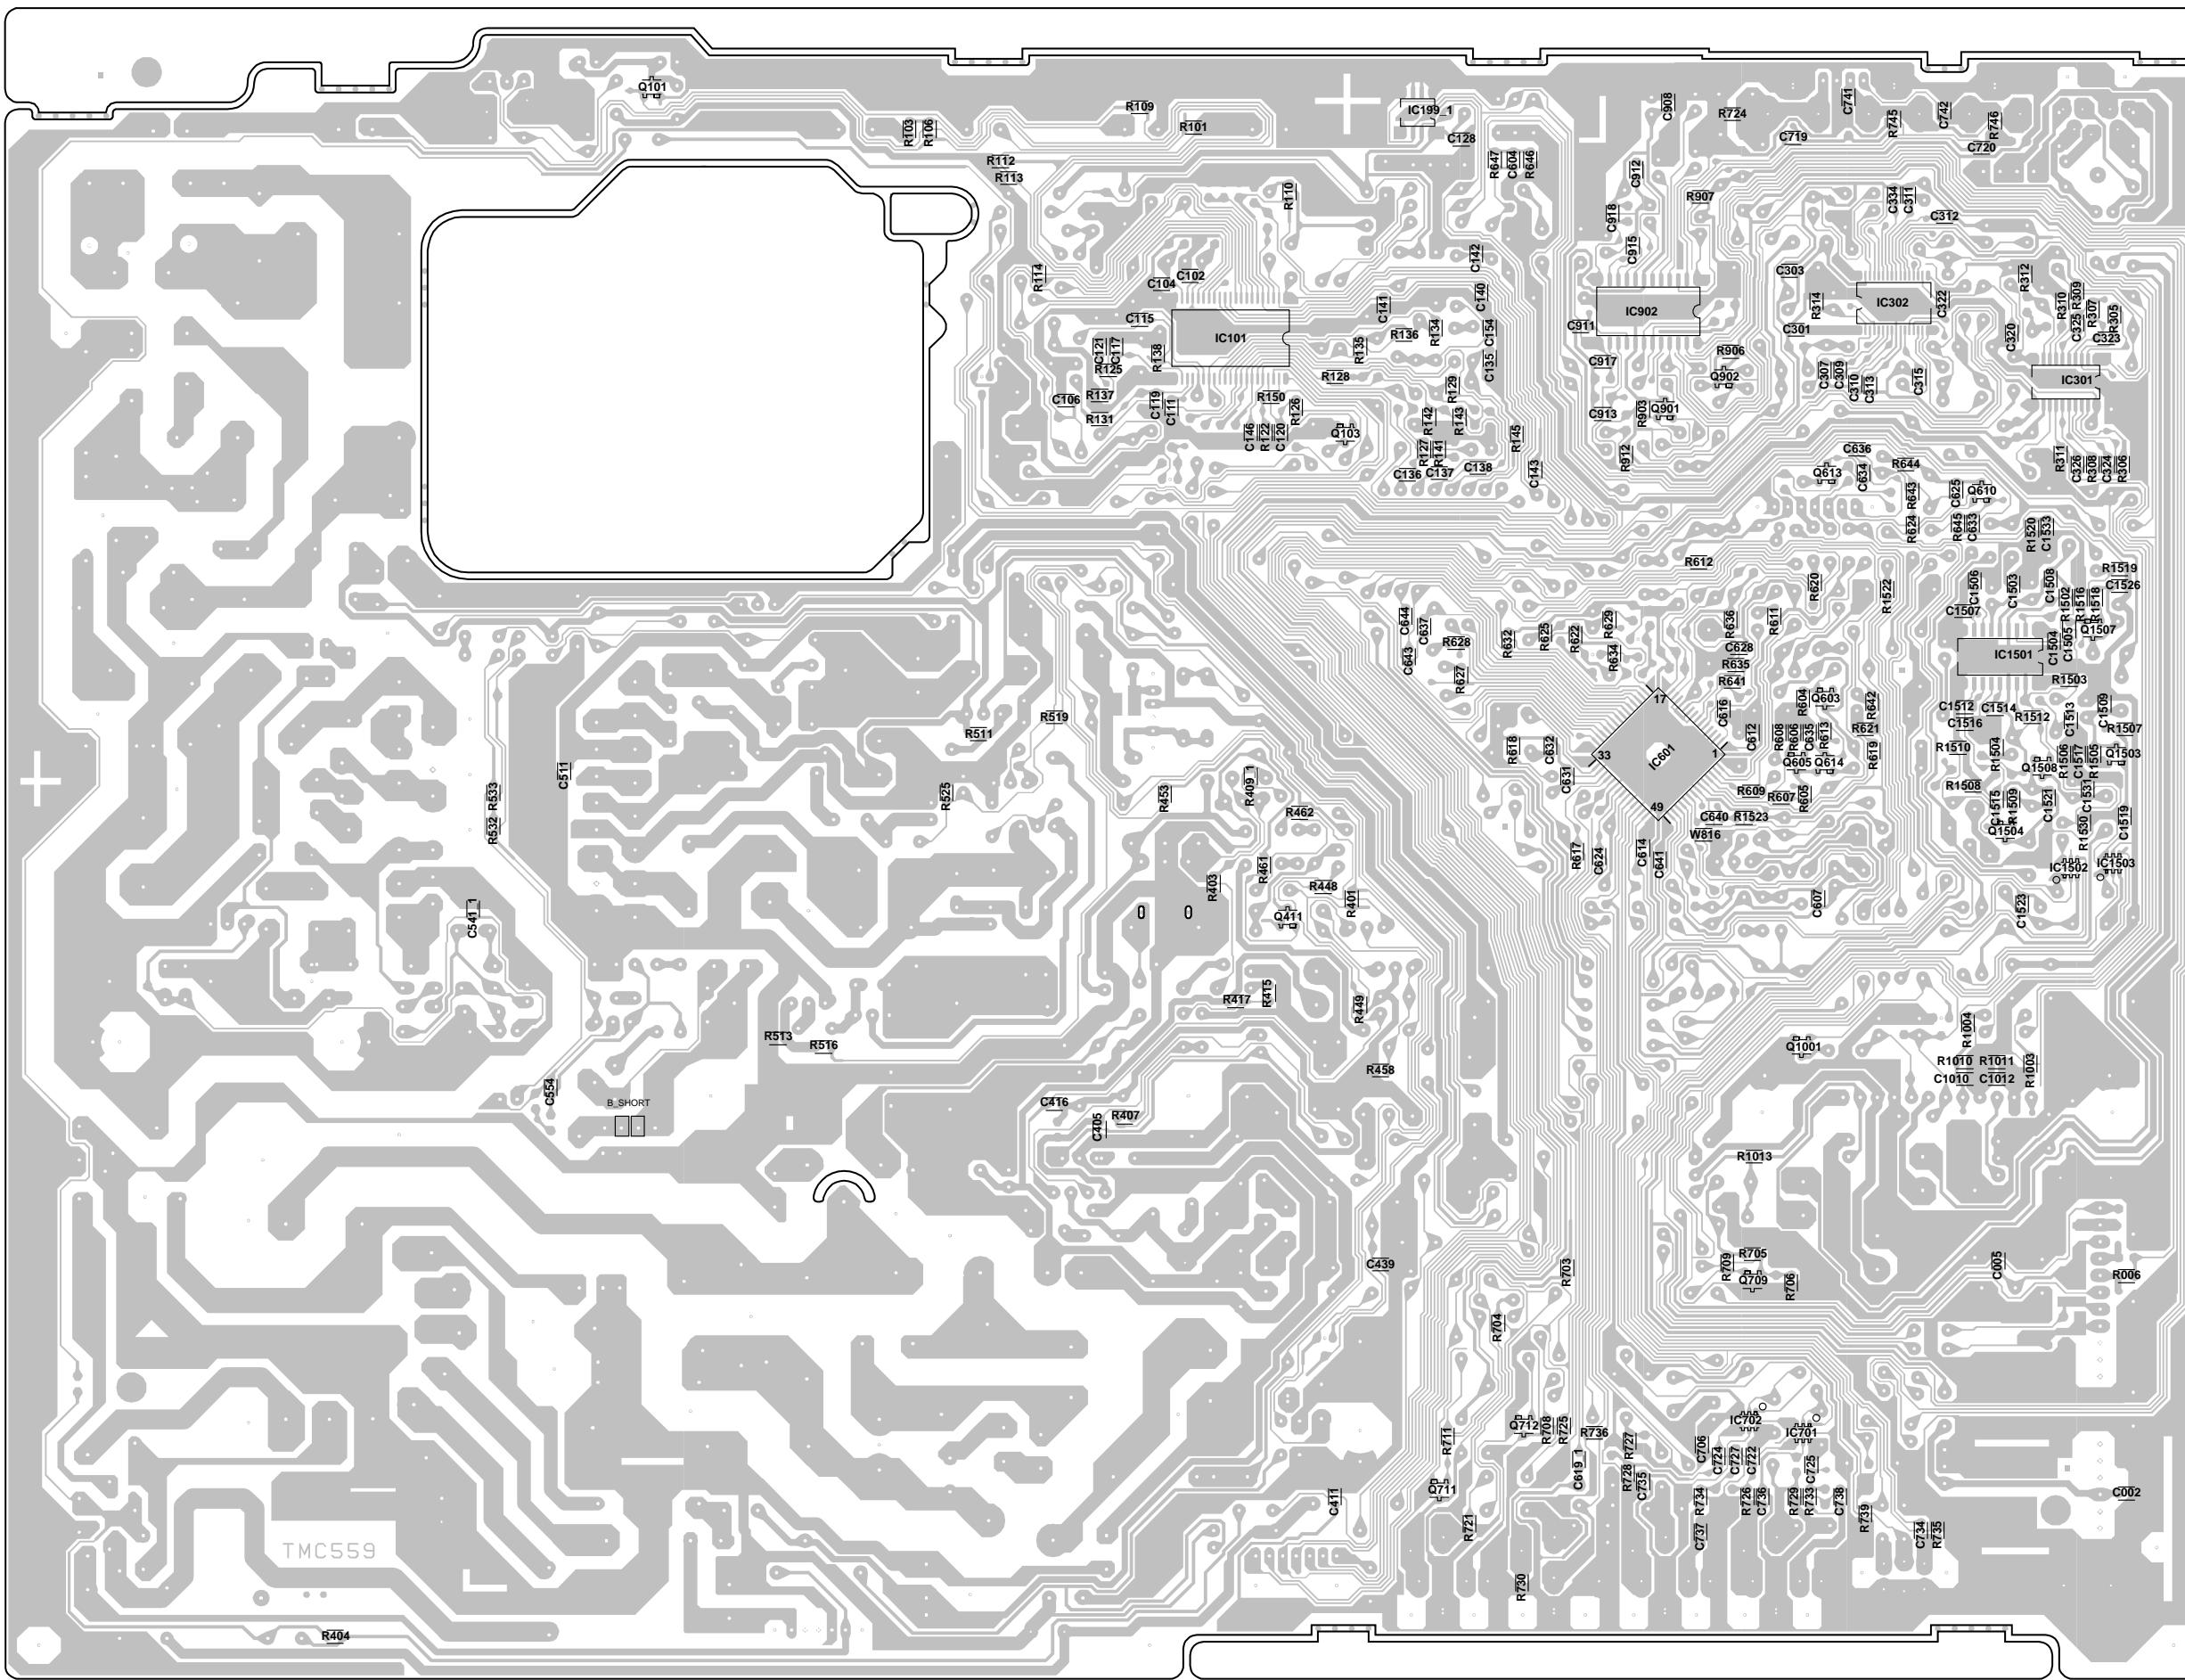


**PRINTED CIRCUIT BOARDS
CRT/VM COIL
SOLDER SIDE**

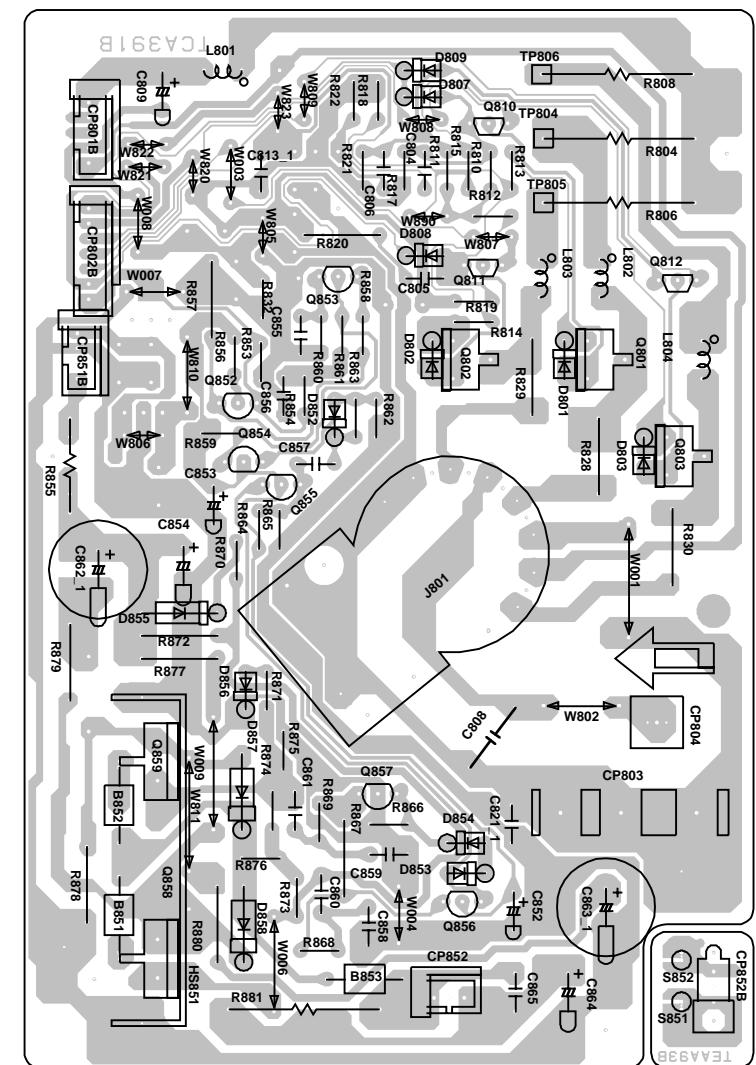

MICON SCHEMATIC DIAGRAM (MAIN PCB)

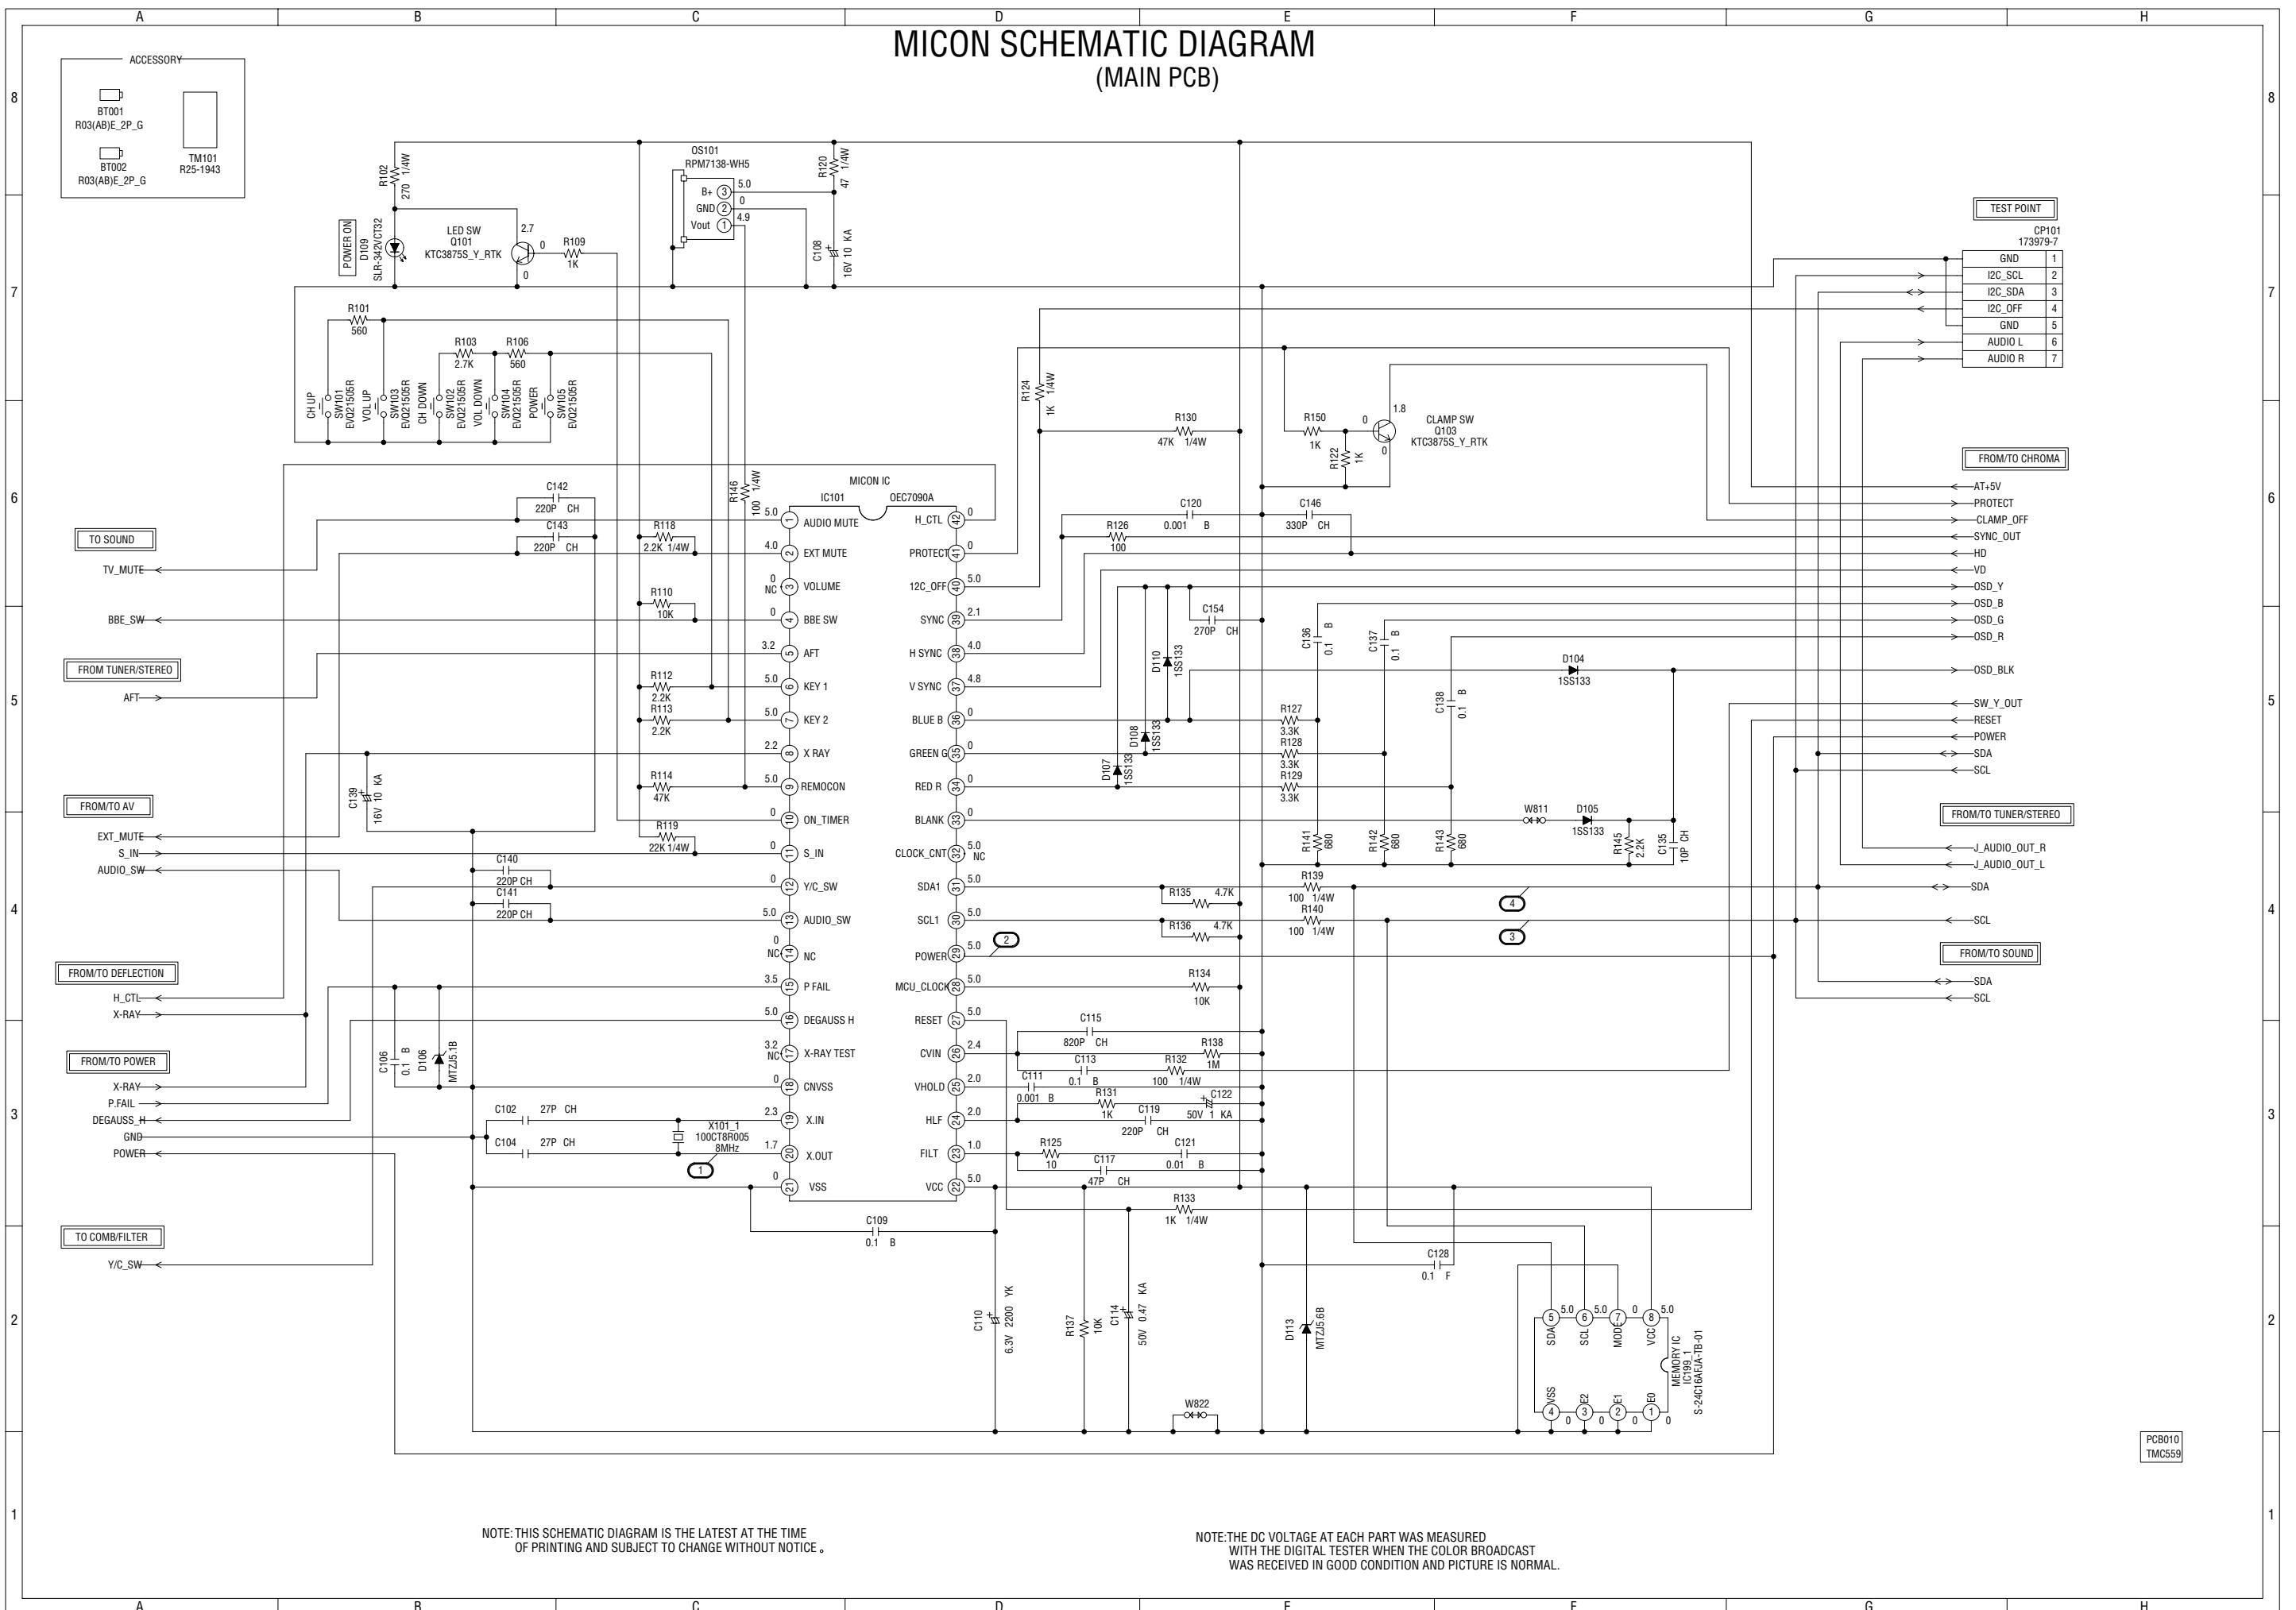

CHROMA SCHEMATIC DIAGRAM (MAIN PCB)

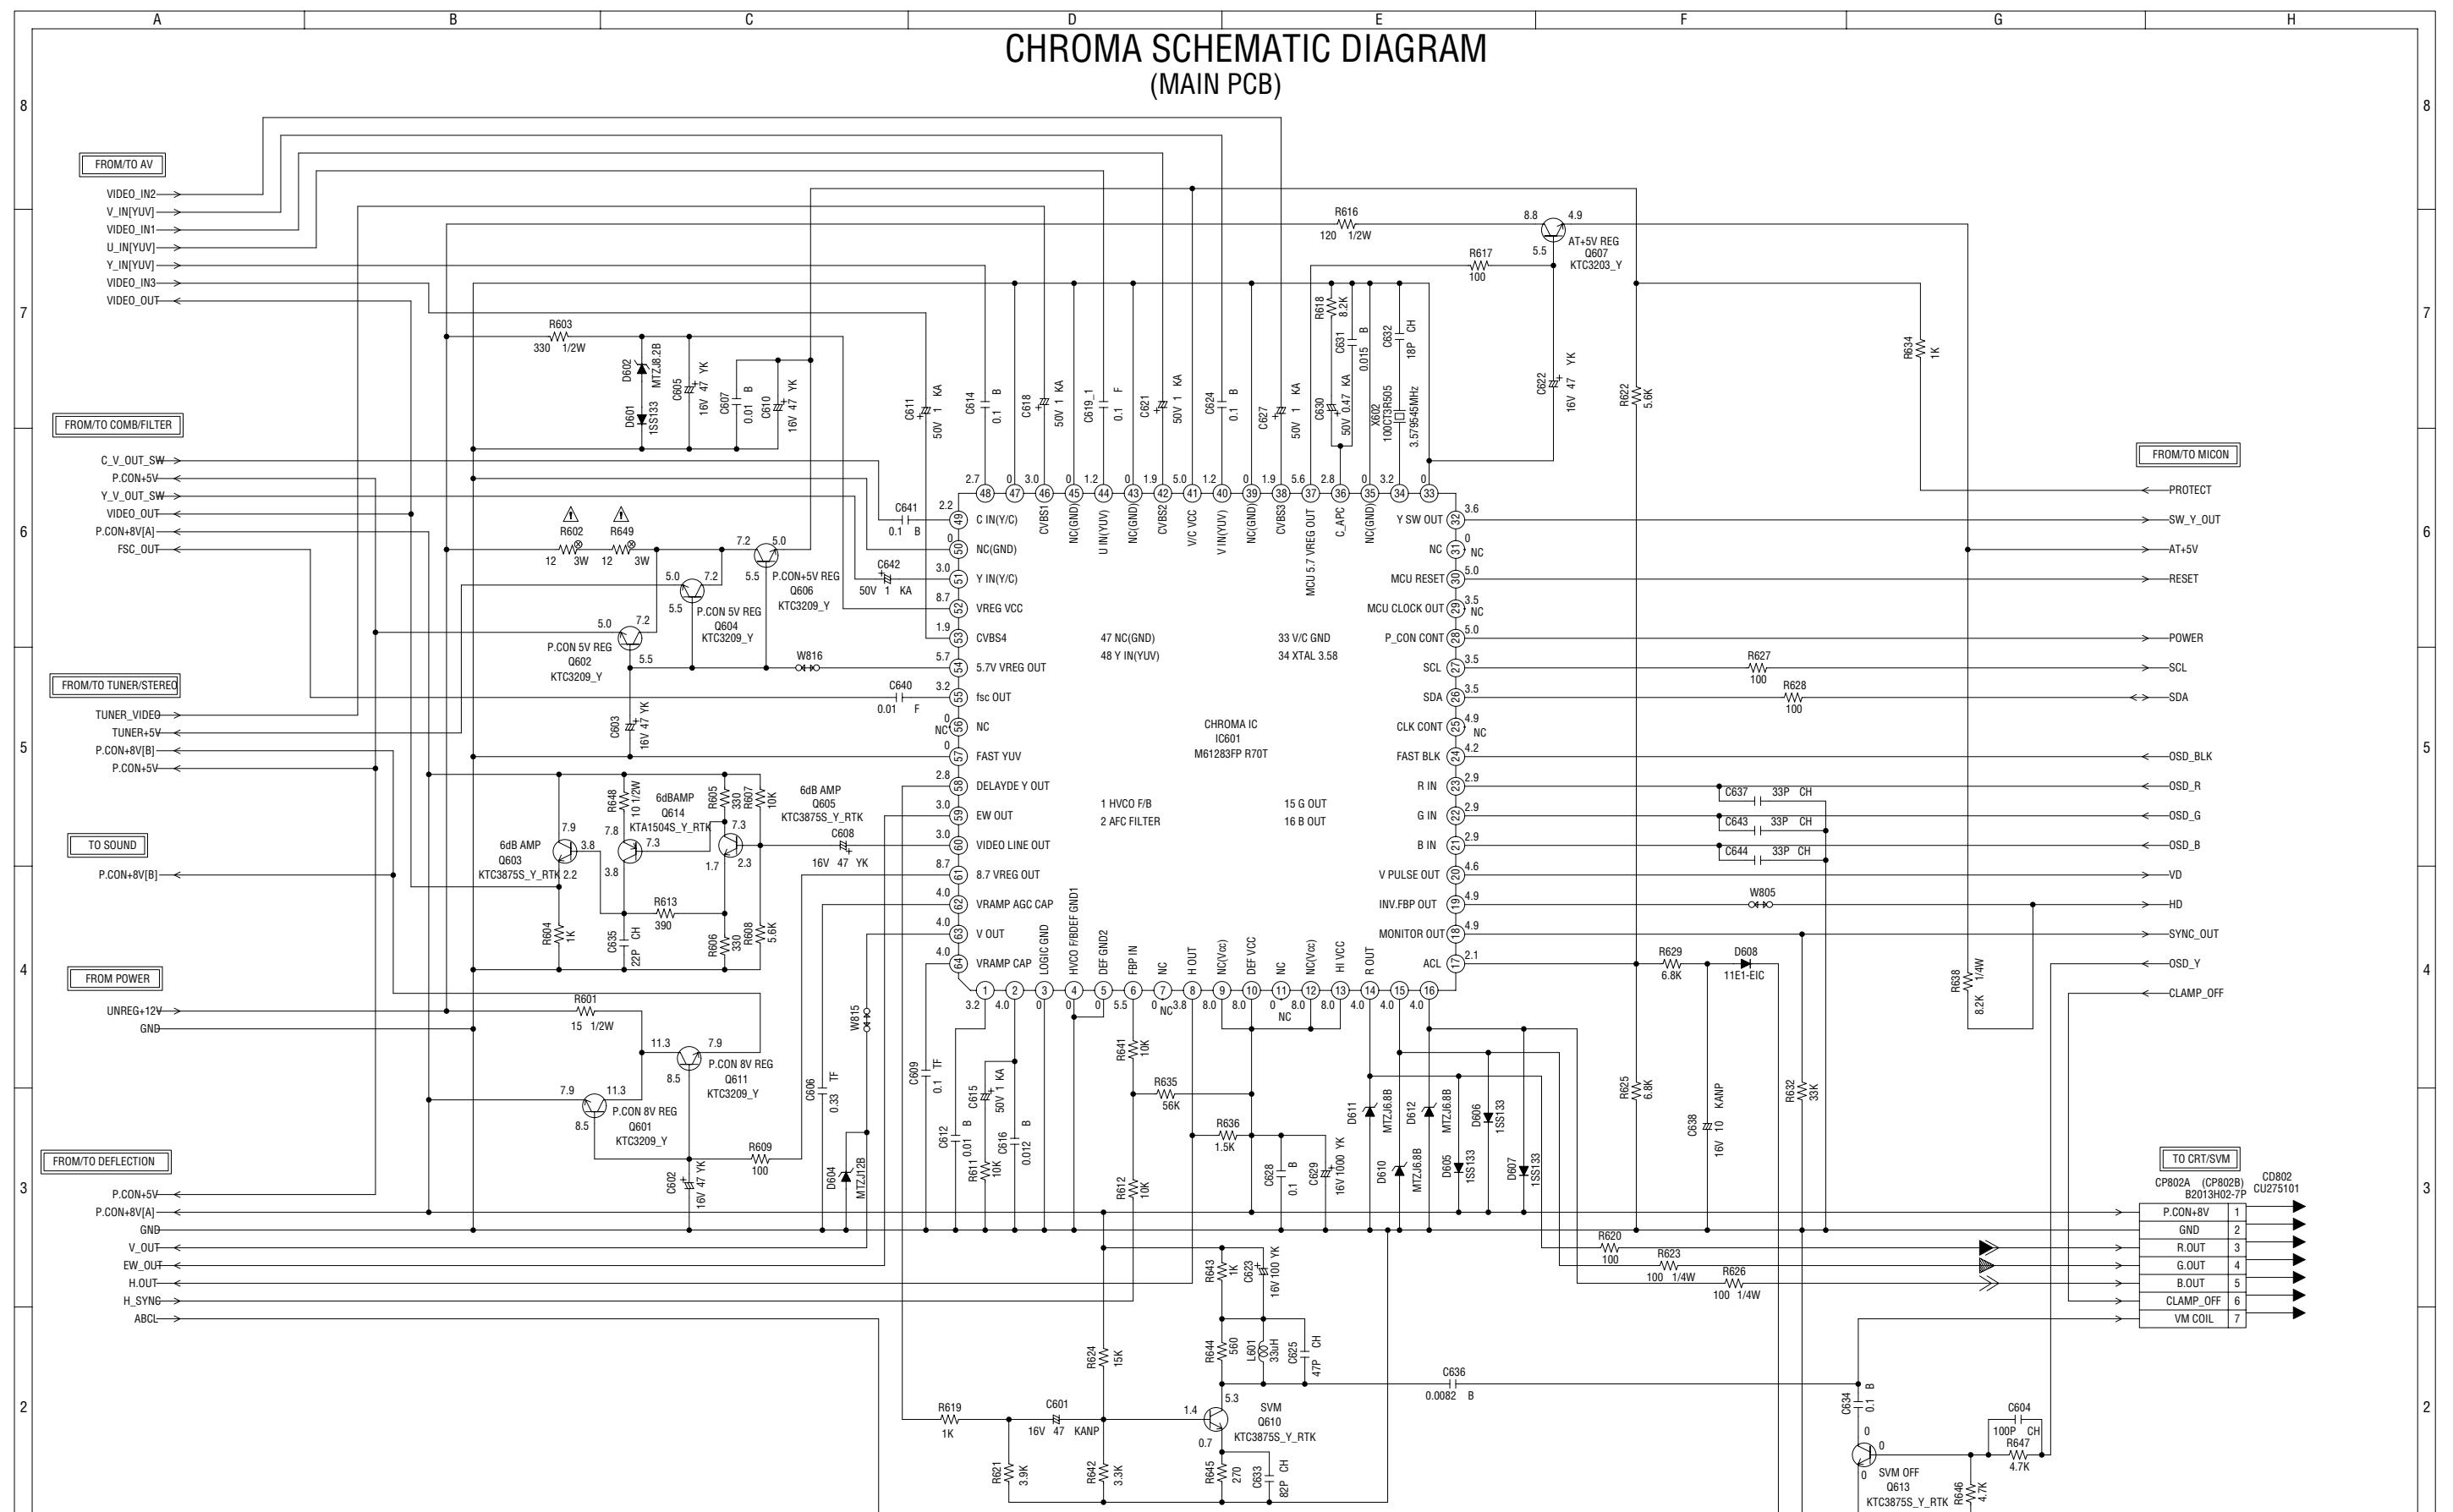


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

◀ R.SIGNAL
▲ G.SIGNAL
◀ B.SIGNAL

DEFLECTION SCHEMATIC DIAGRAM (MAIN PCB)

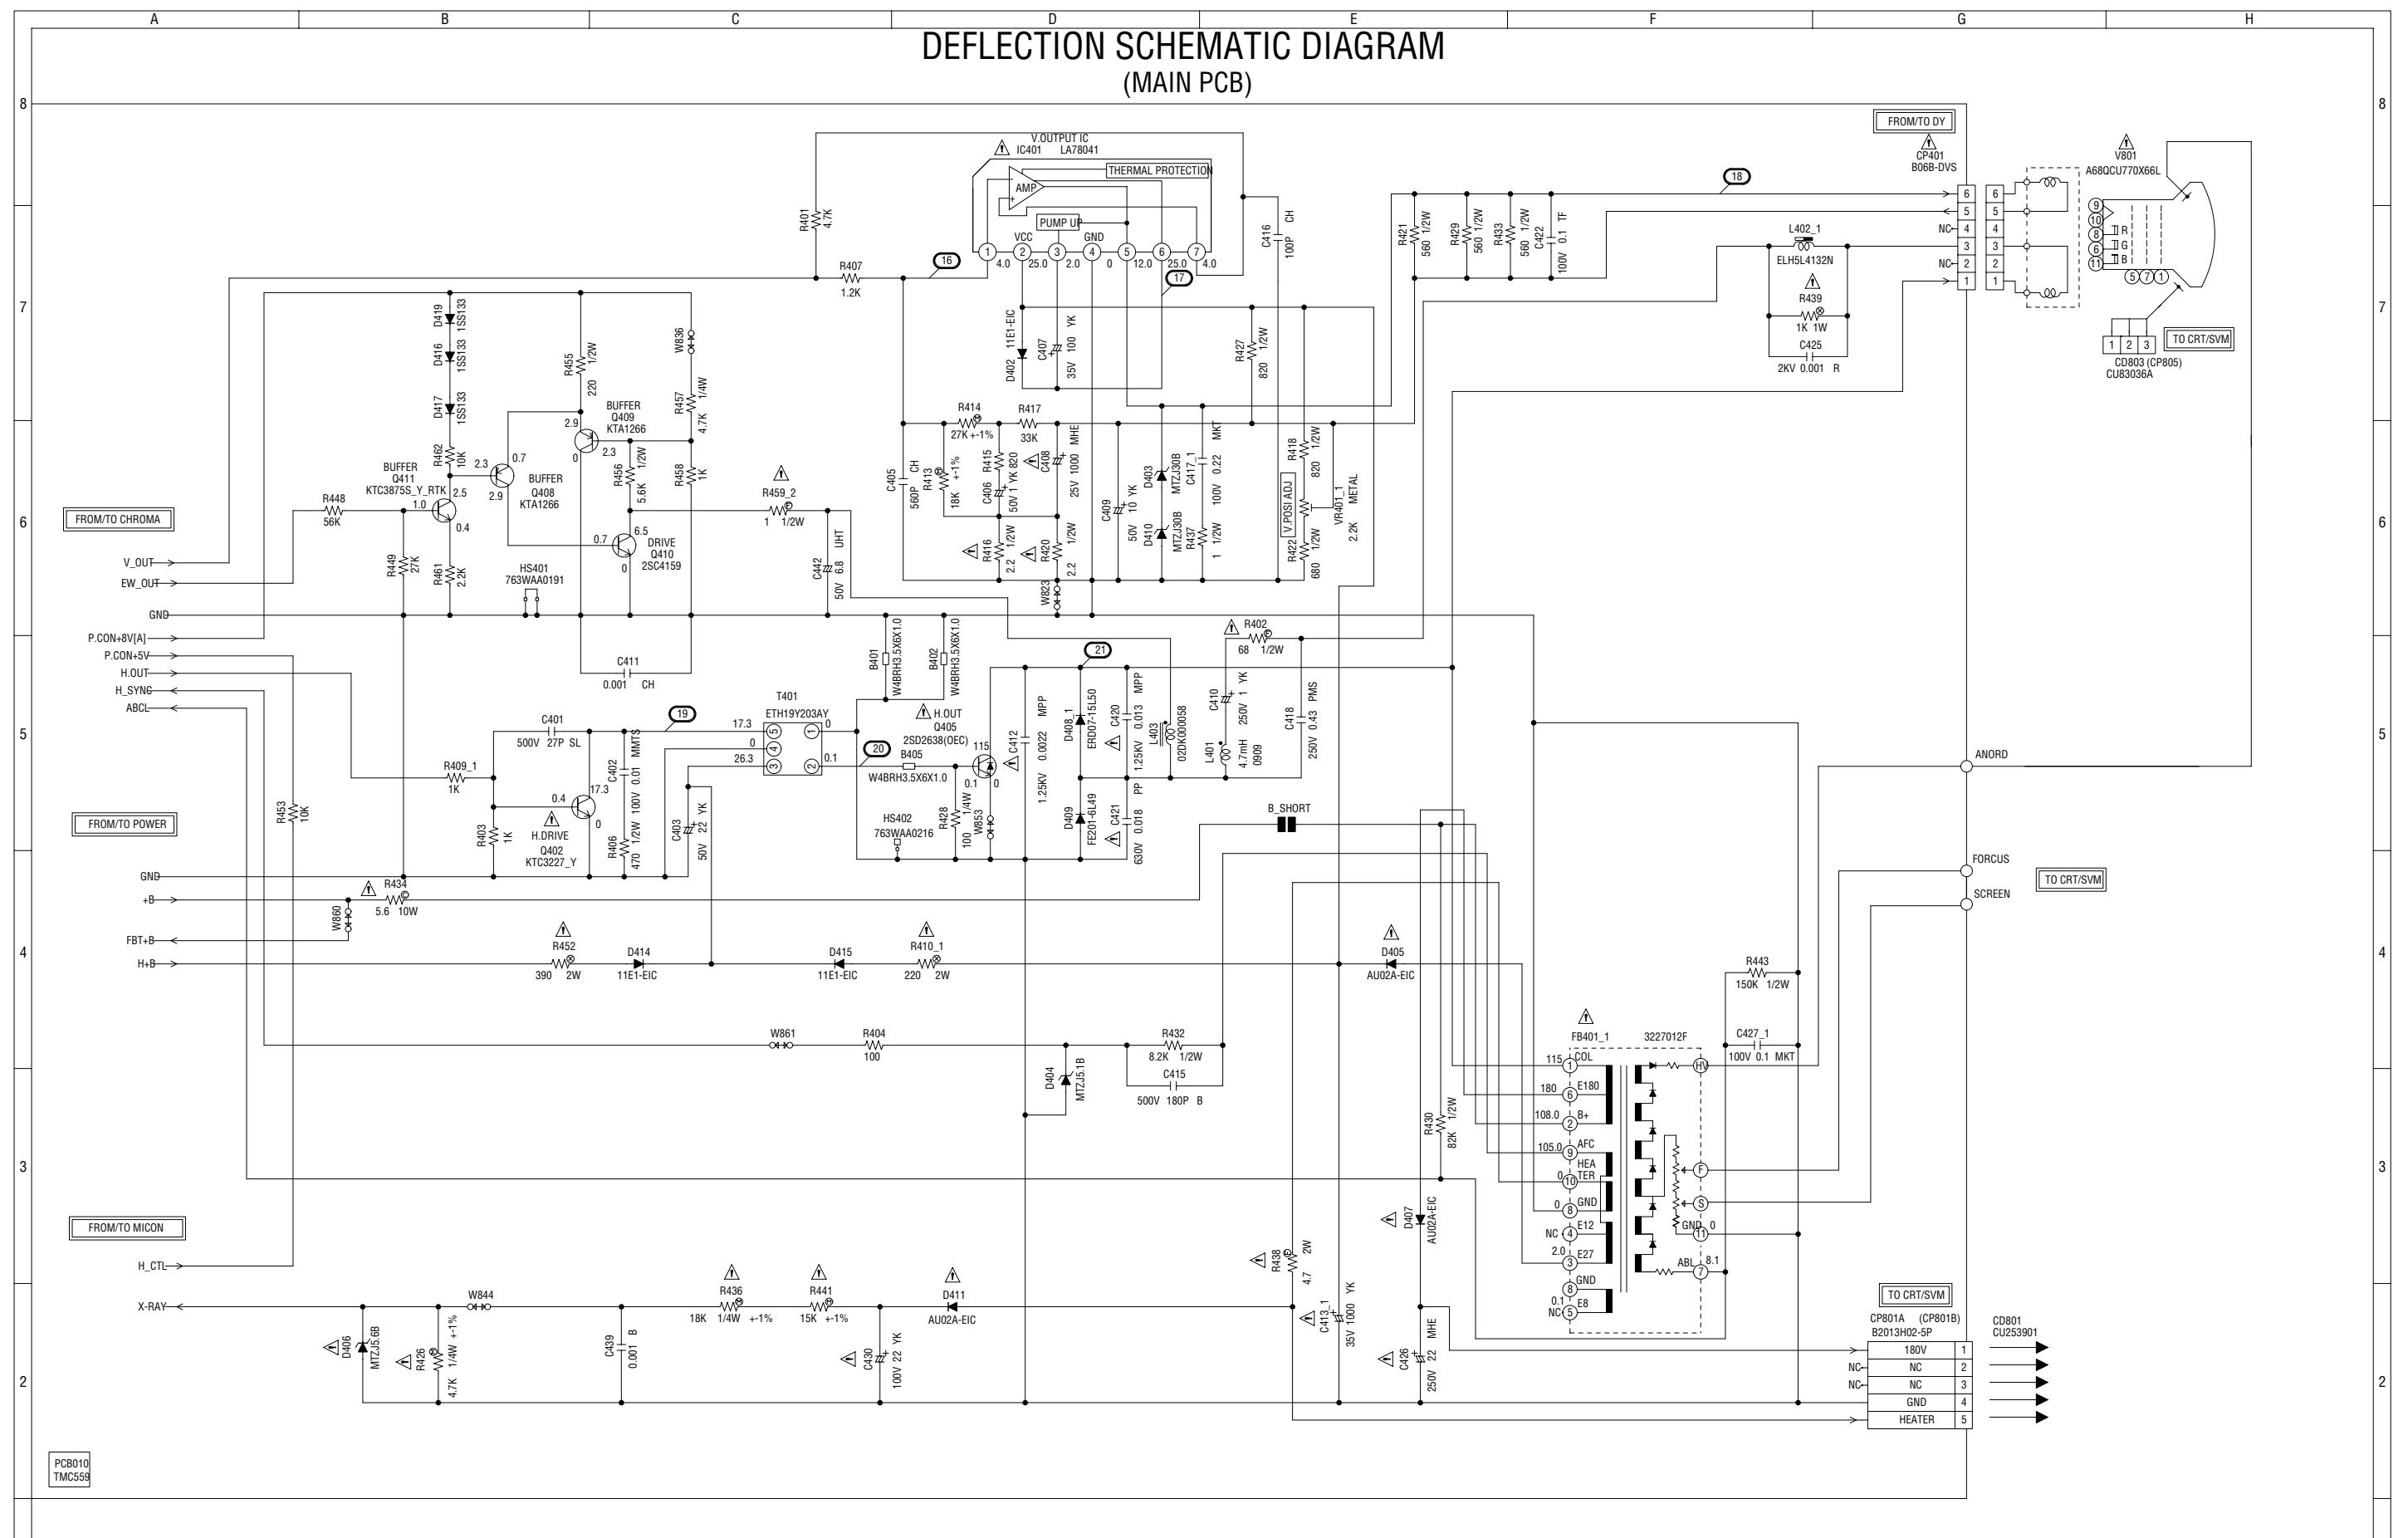

POWER SCHEMATIC DIAGRAM (MAIN PCB)

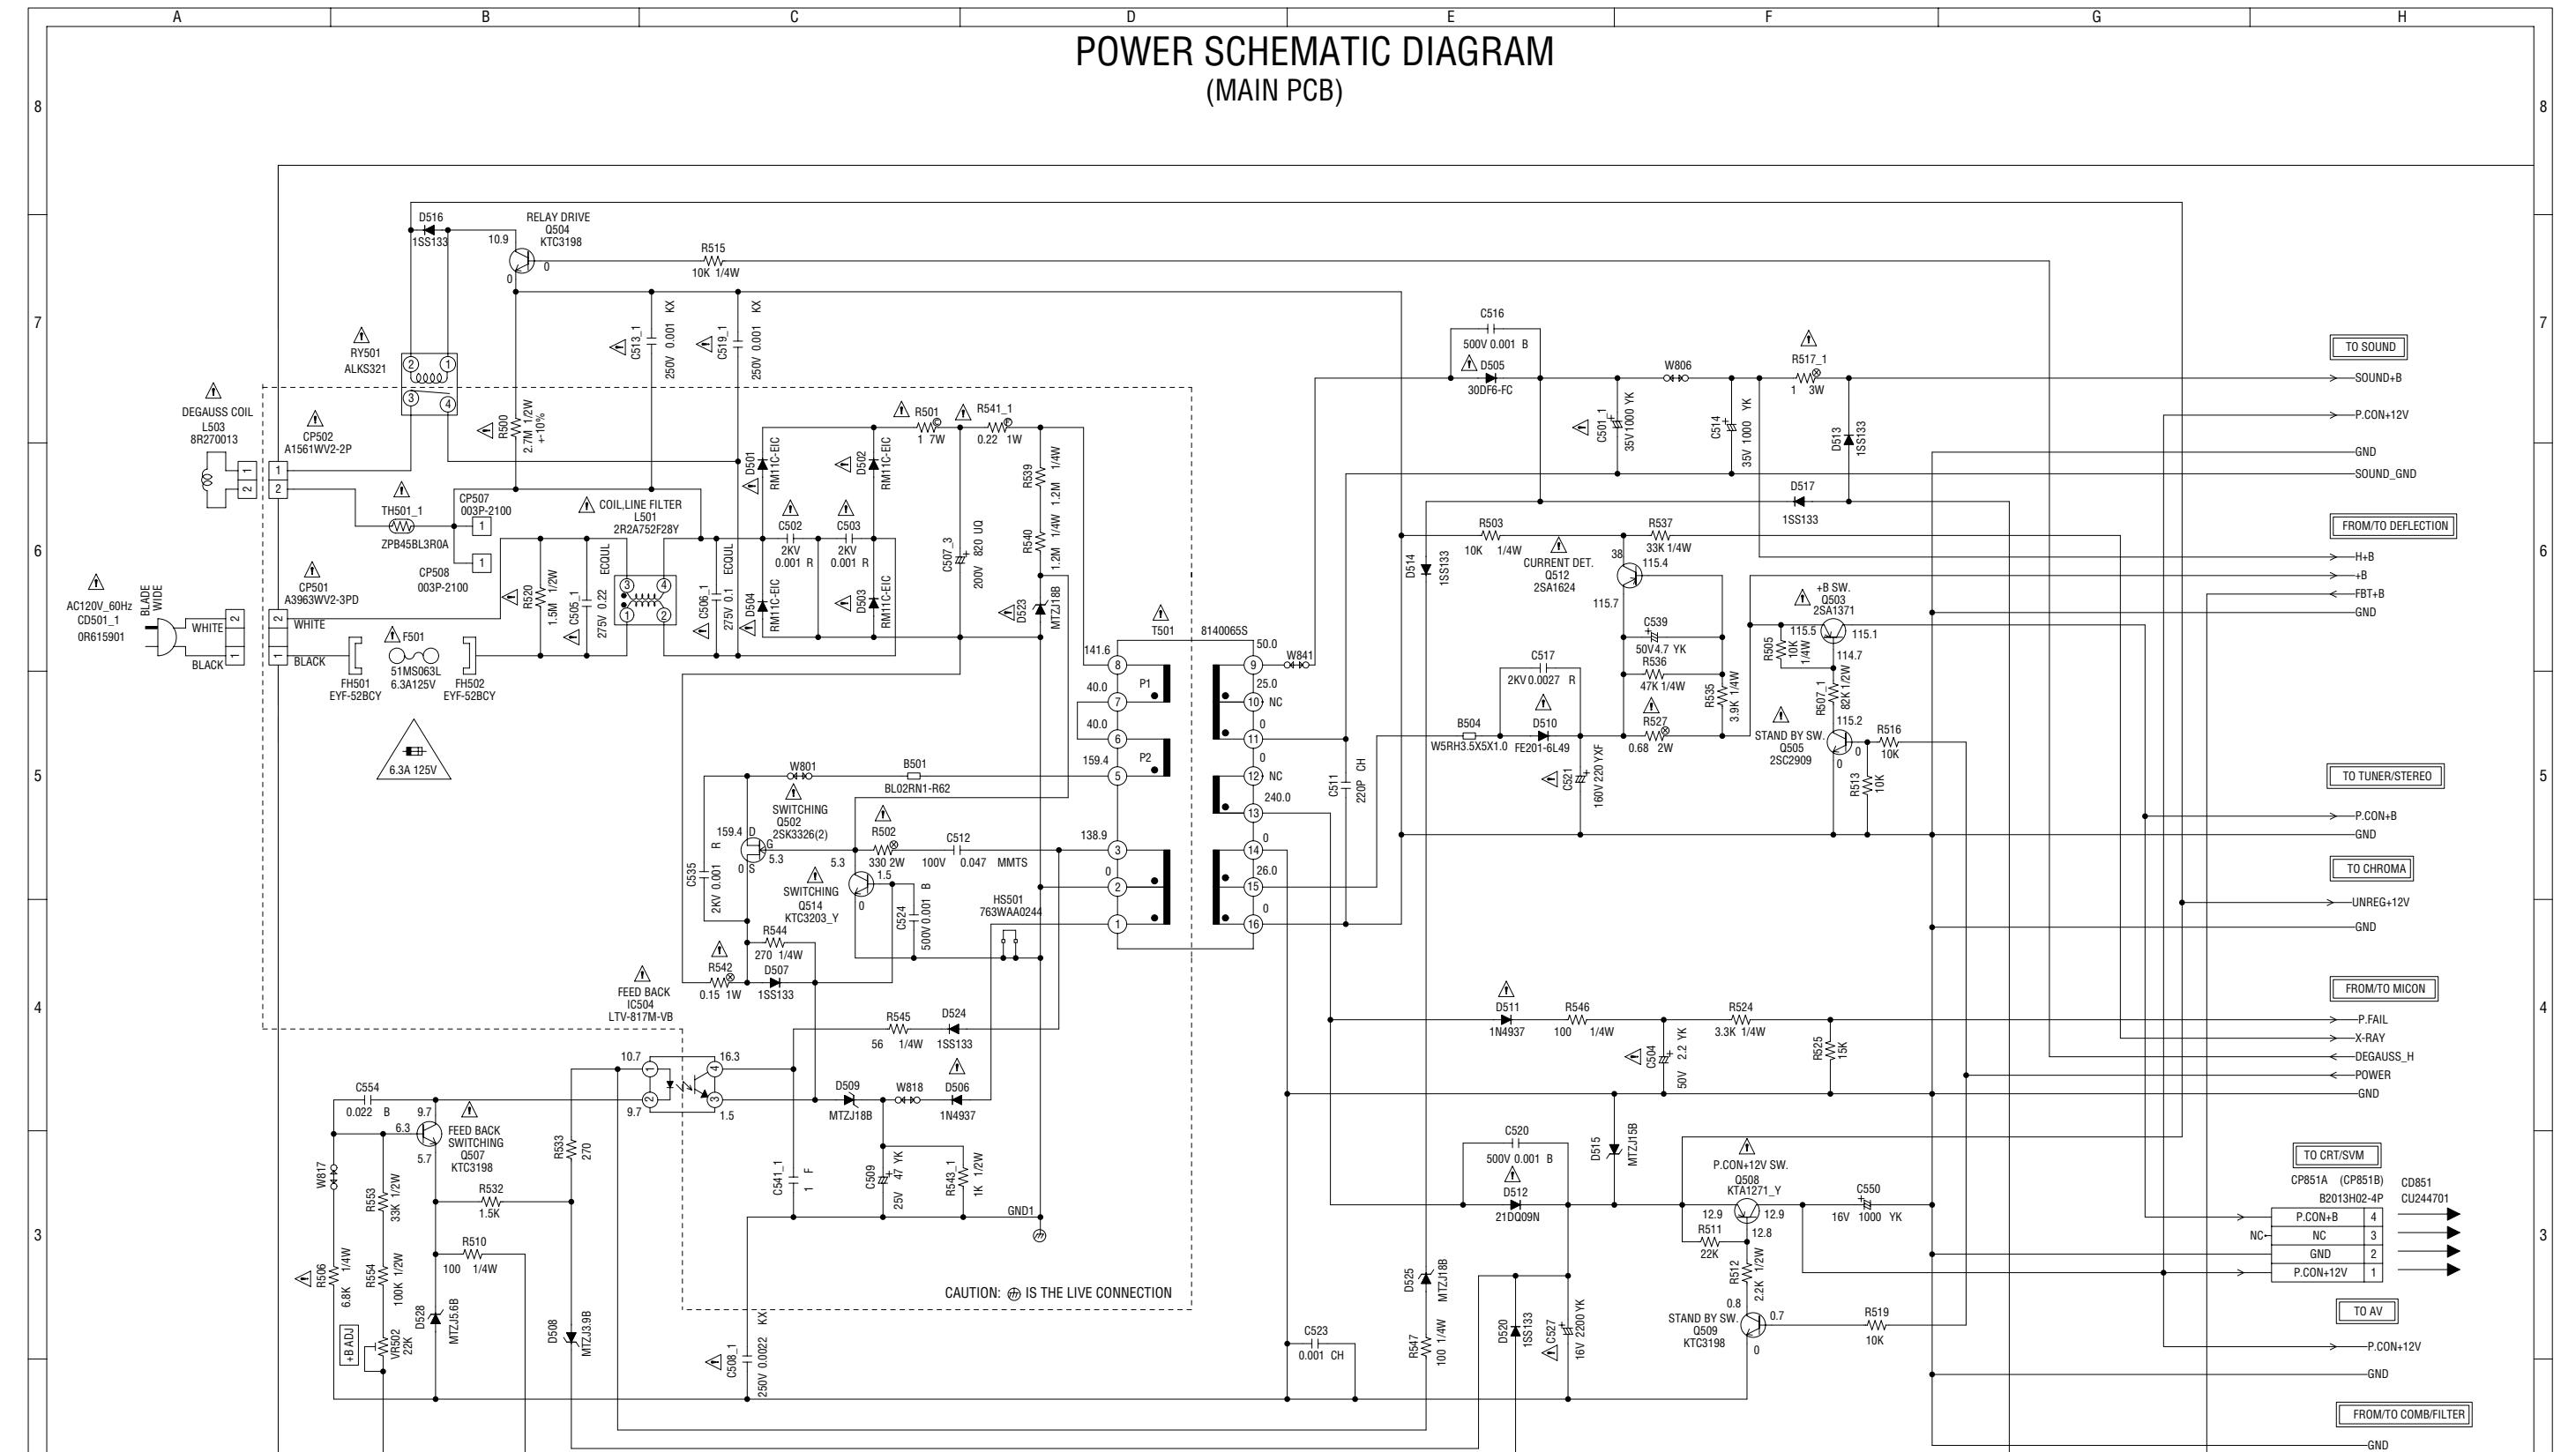

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE
6.3A 125V (F501).

ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEINTE
N'UTILISER QUE DES FUSIBLES DE MEME TYPE
6.3A 125V(F501).

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.
THE ALUMI ELECTROLYTIC CAPACITOR MARKED N
IS NON POLAR ONE.


ATTENTION: LES PIECES REPARÉES PAR UN  ETANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION SINCE THESE PARTS MARKED BY  ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.


SOUND SCHEMATIC DIAGRAM (MAIN PCB)

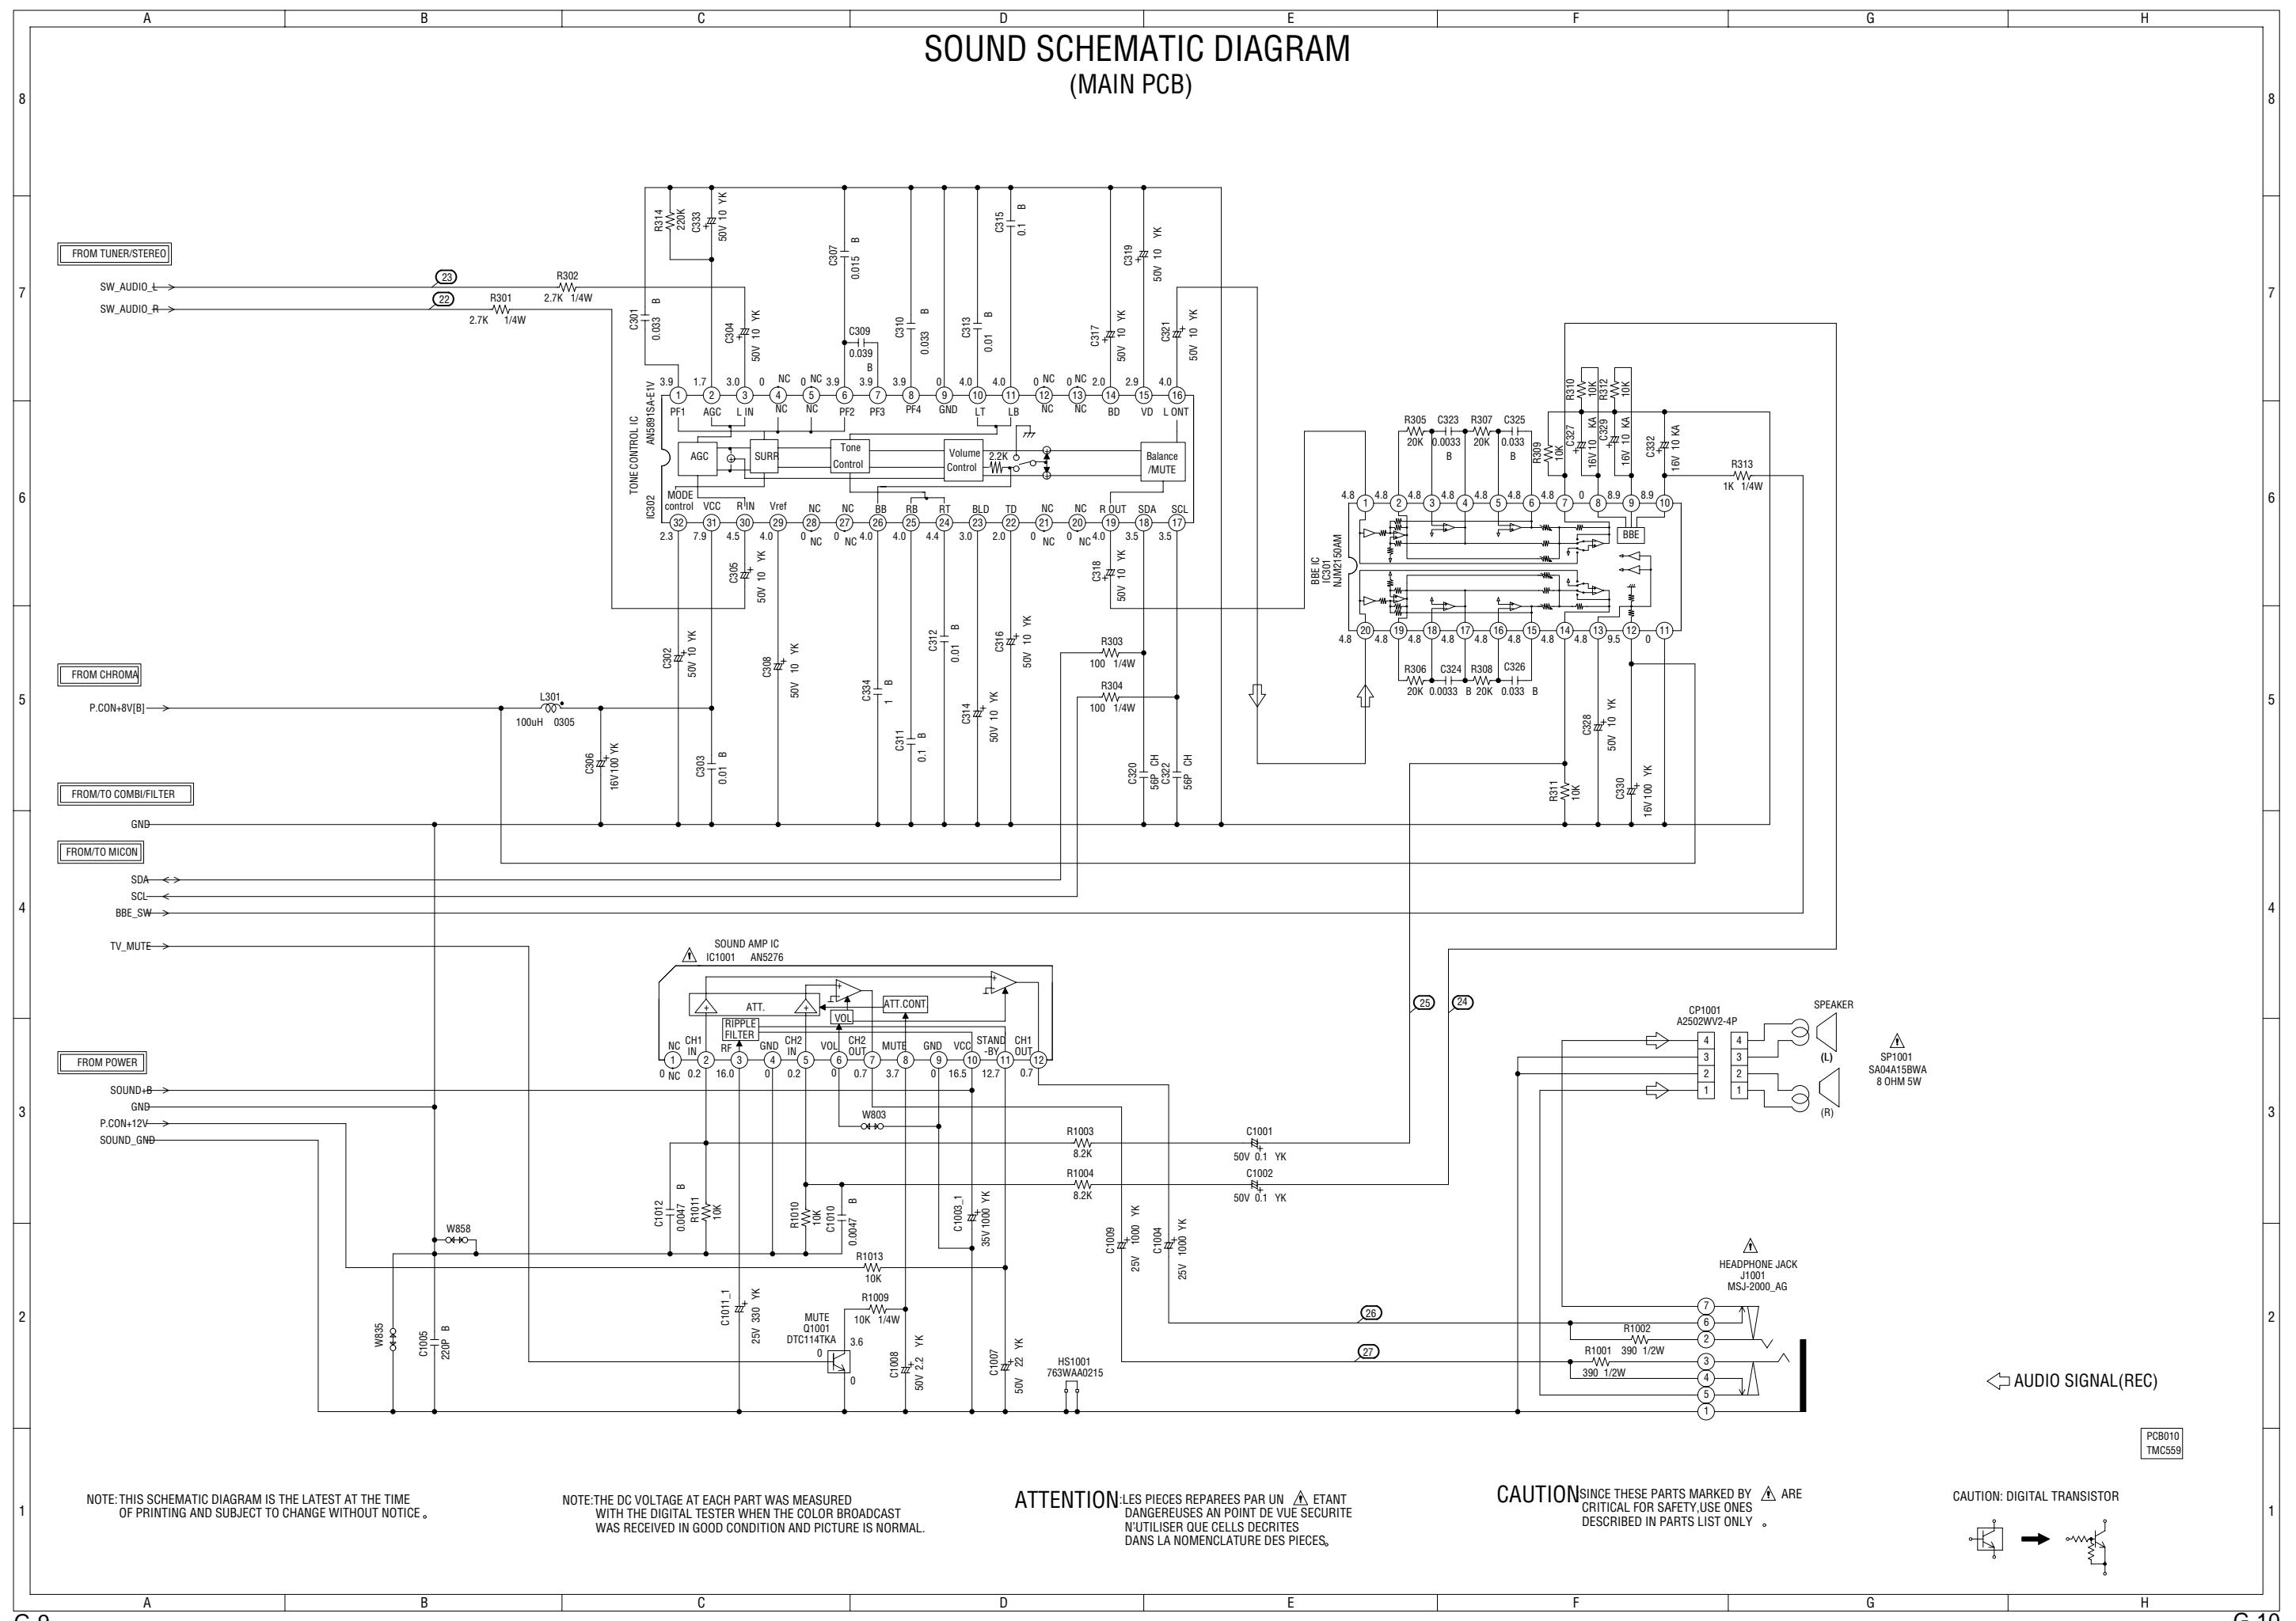


TUNER/STEREO SCHEMATIC DIAGRAM (MAIN PCB)

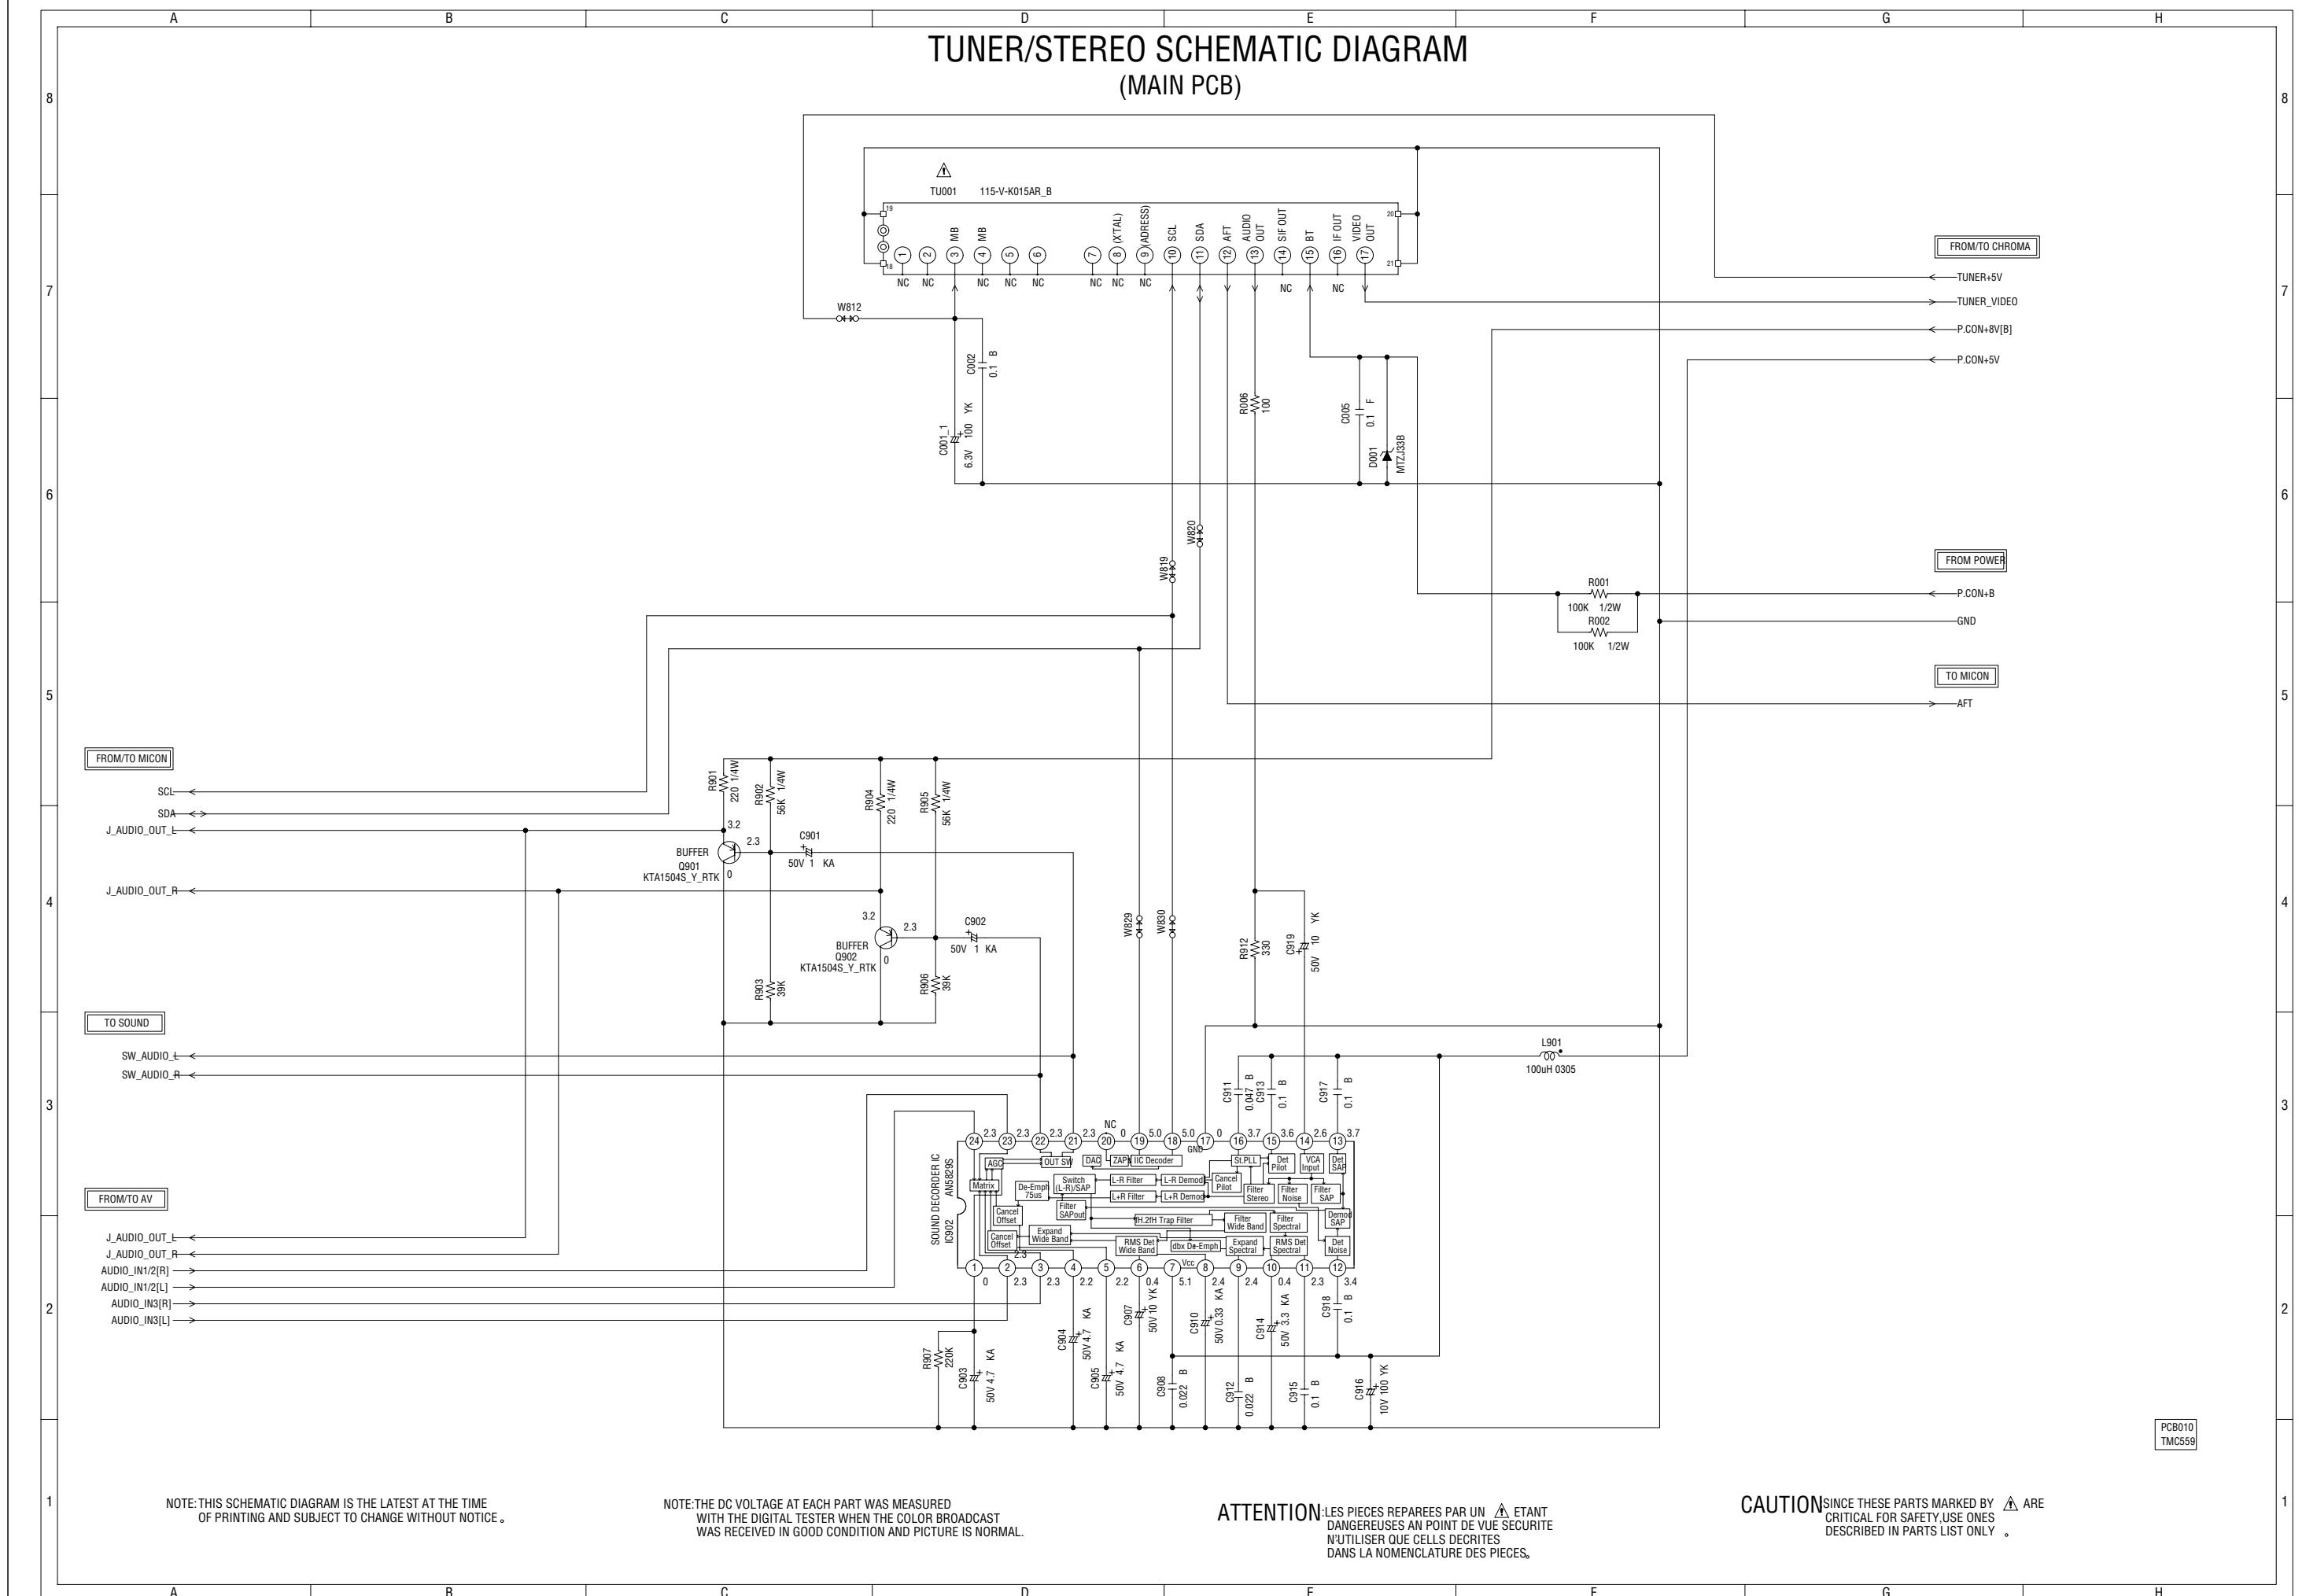


AV SCHEMATIC DIAGRAM (MAIN PCB)

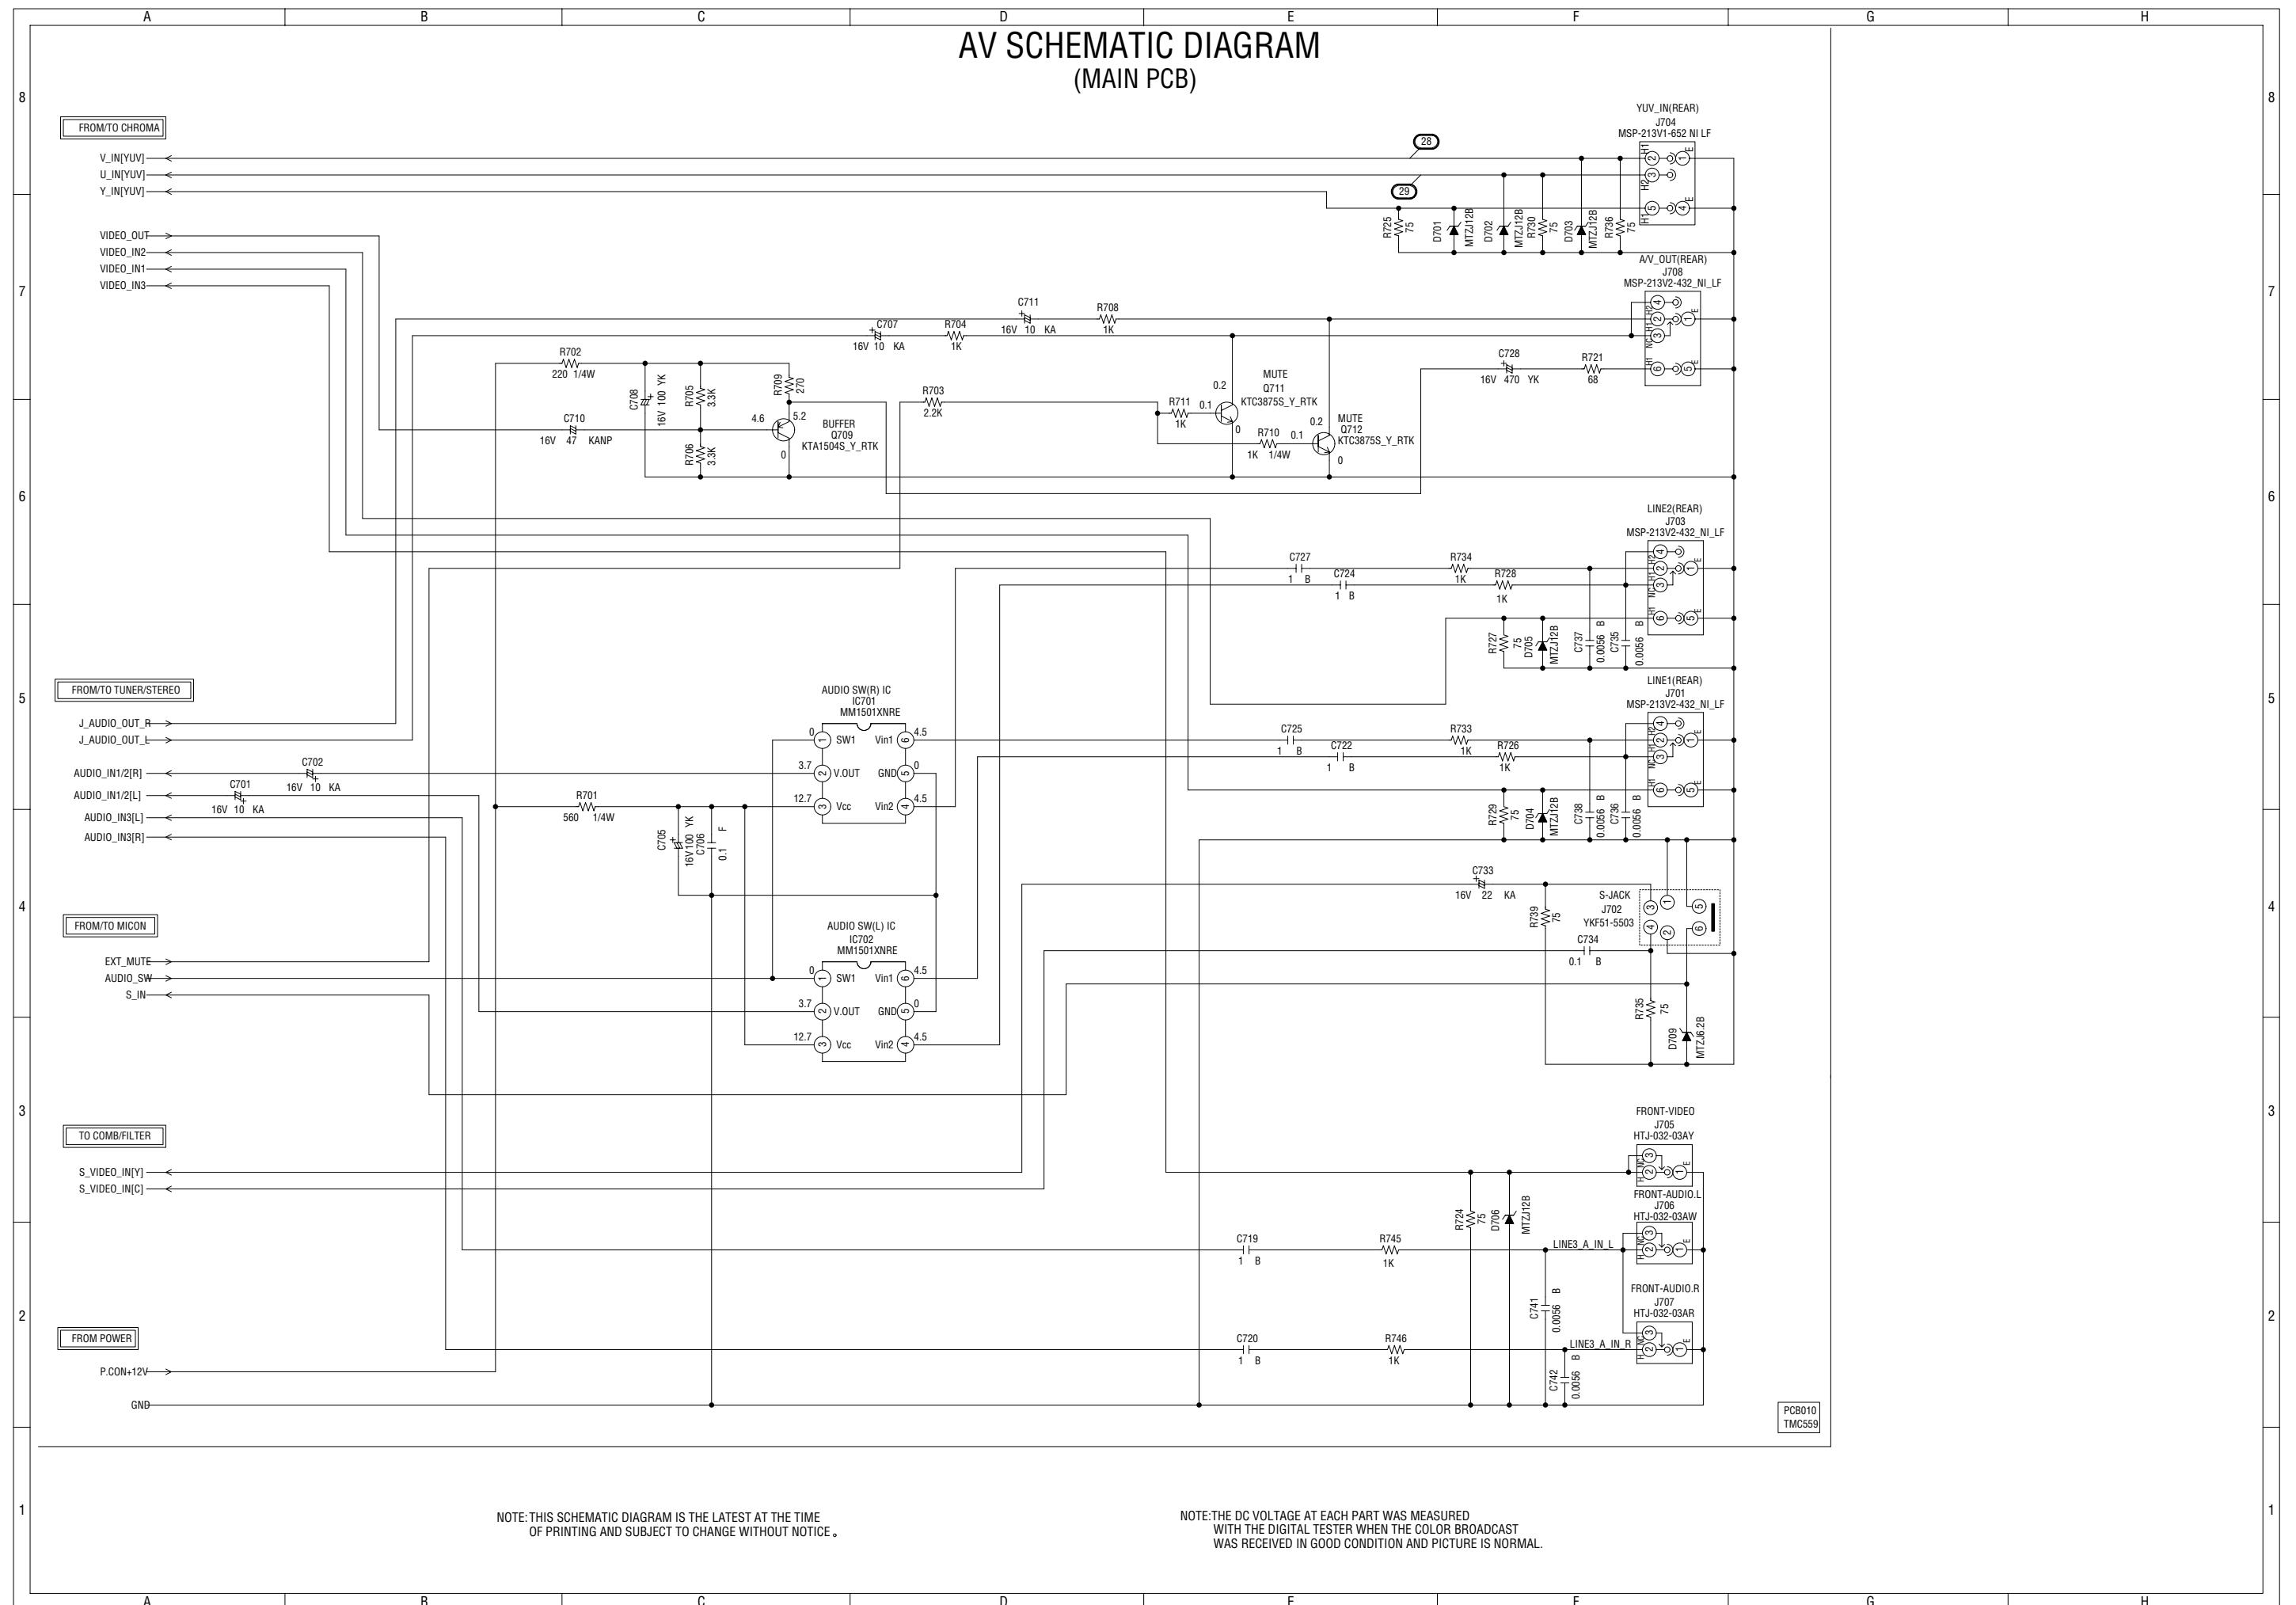

**COMB/FILTER SCHEMATIC DIAGRAM
(MAIN PCB)**


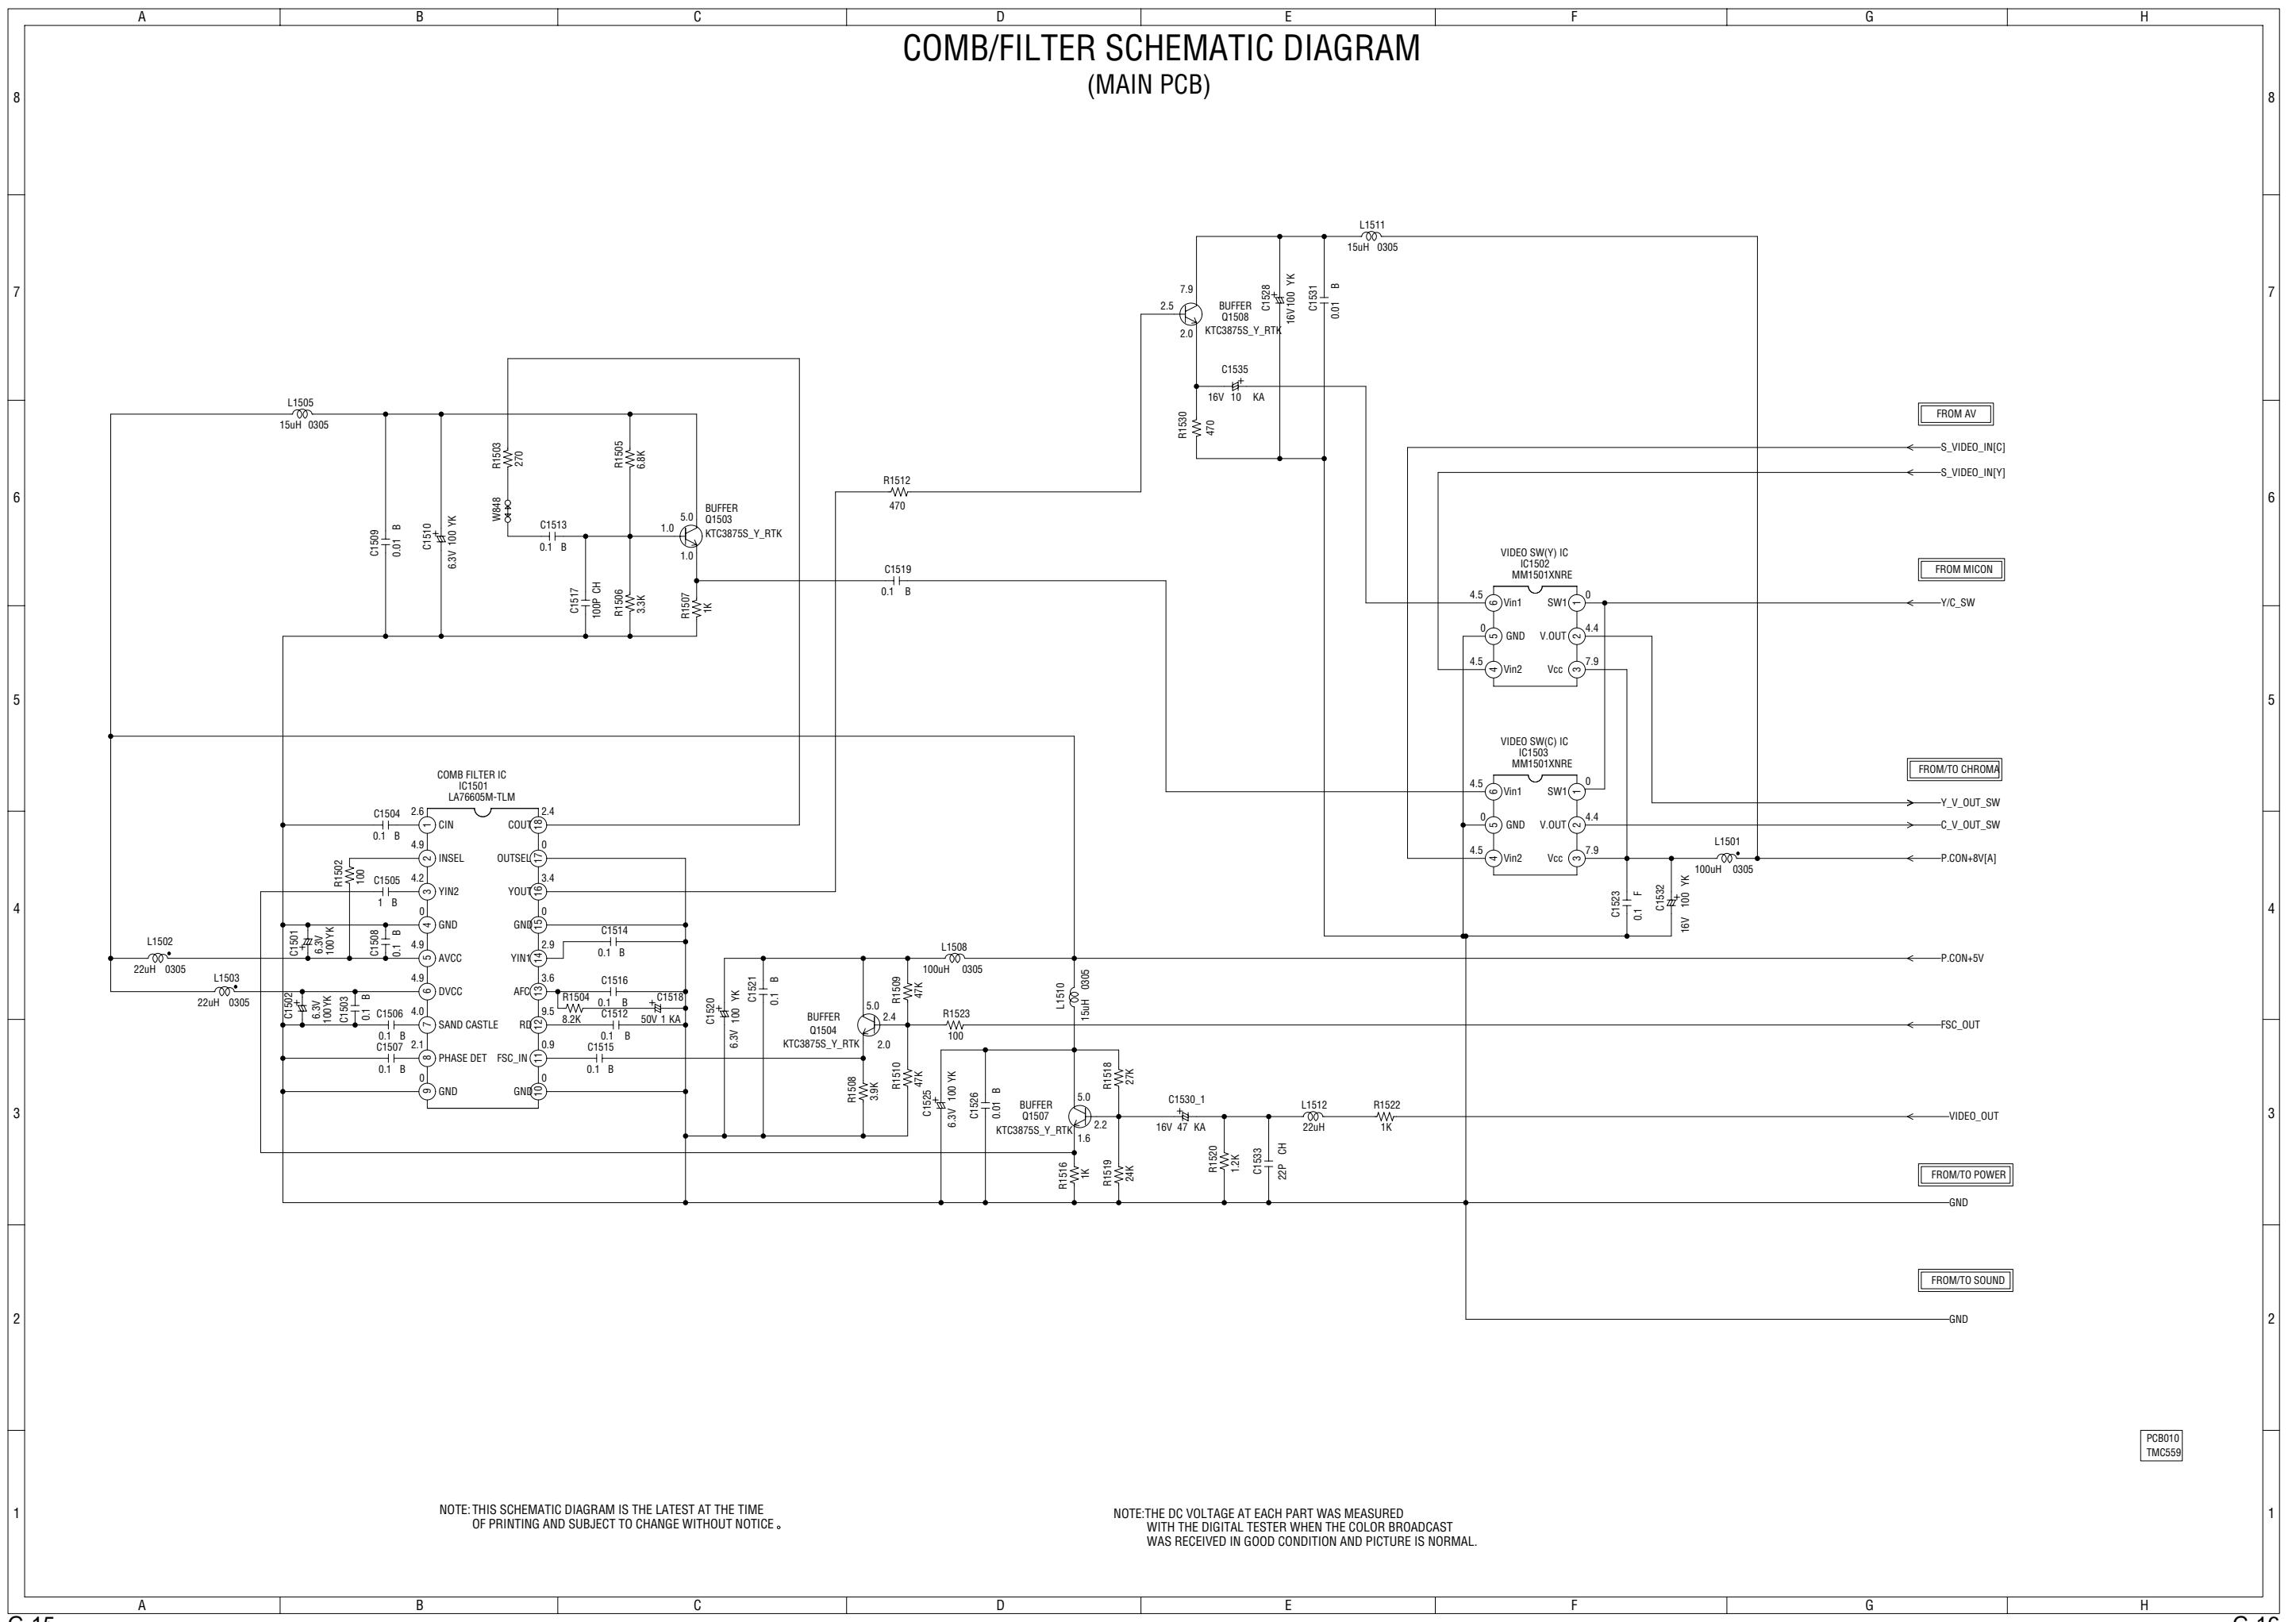


CRT/SVM SCHEMATIC DIAGRAM (CRT PCB)









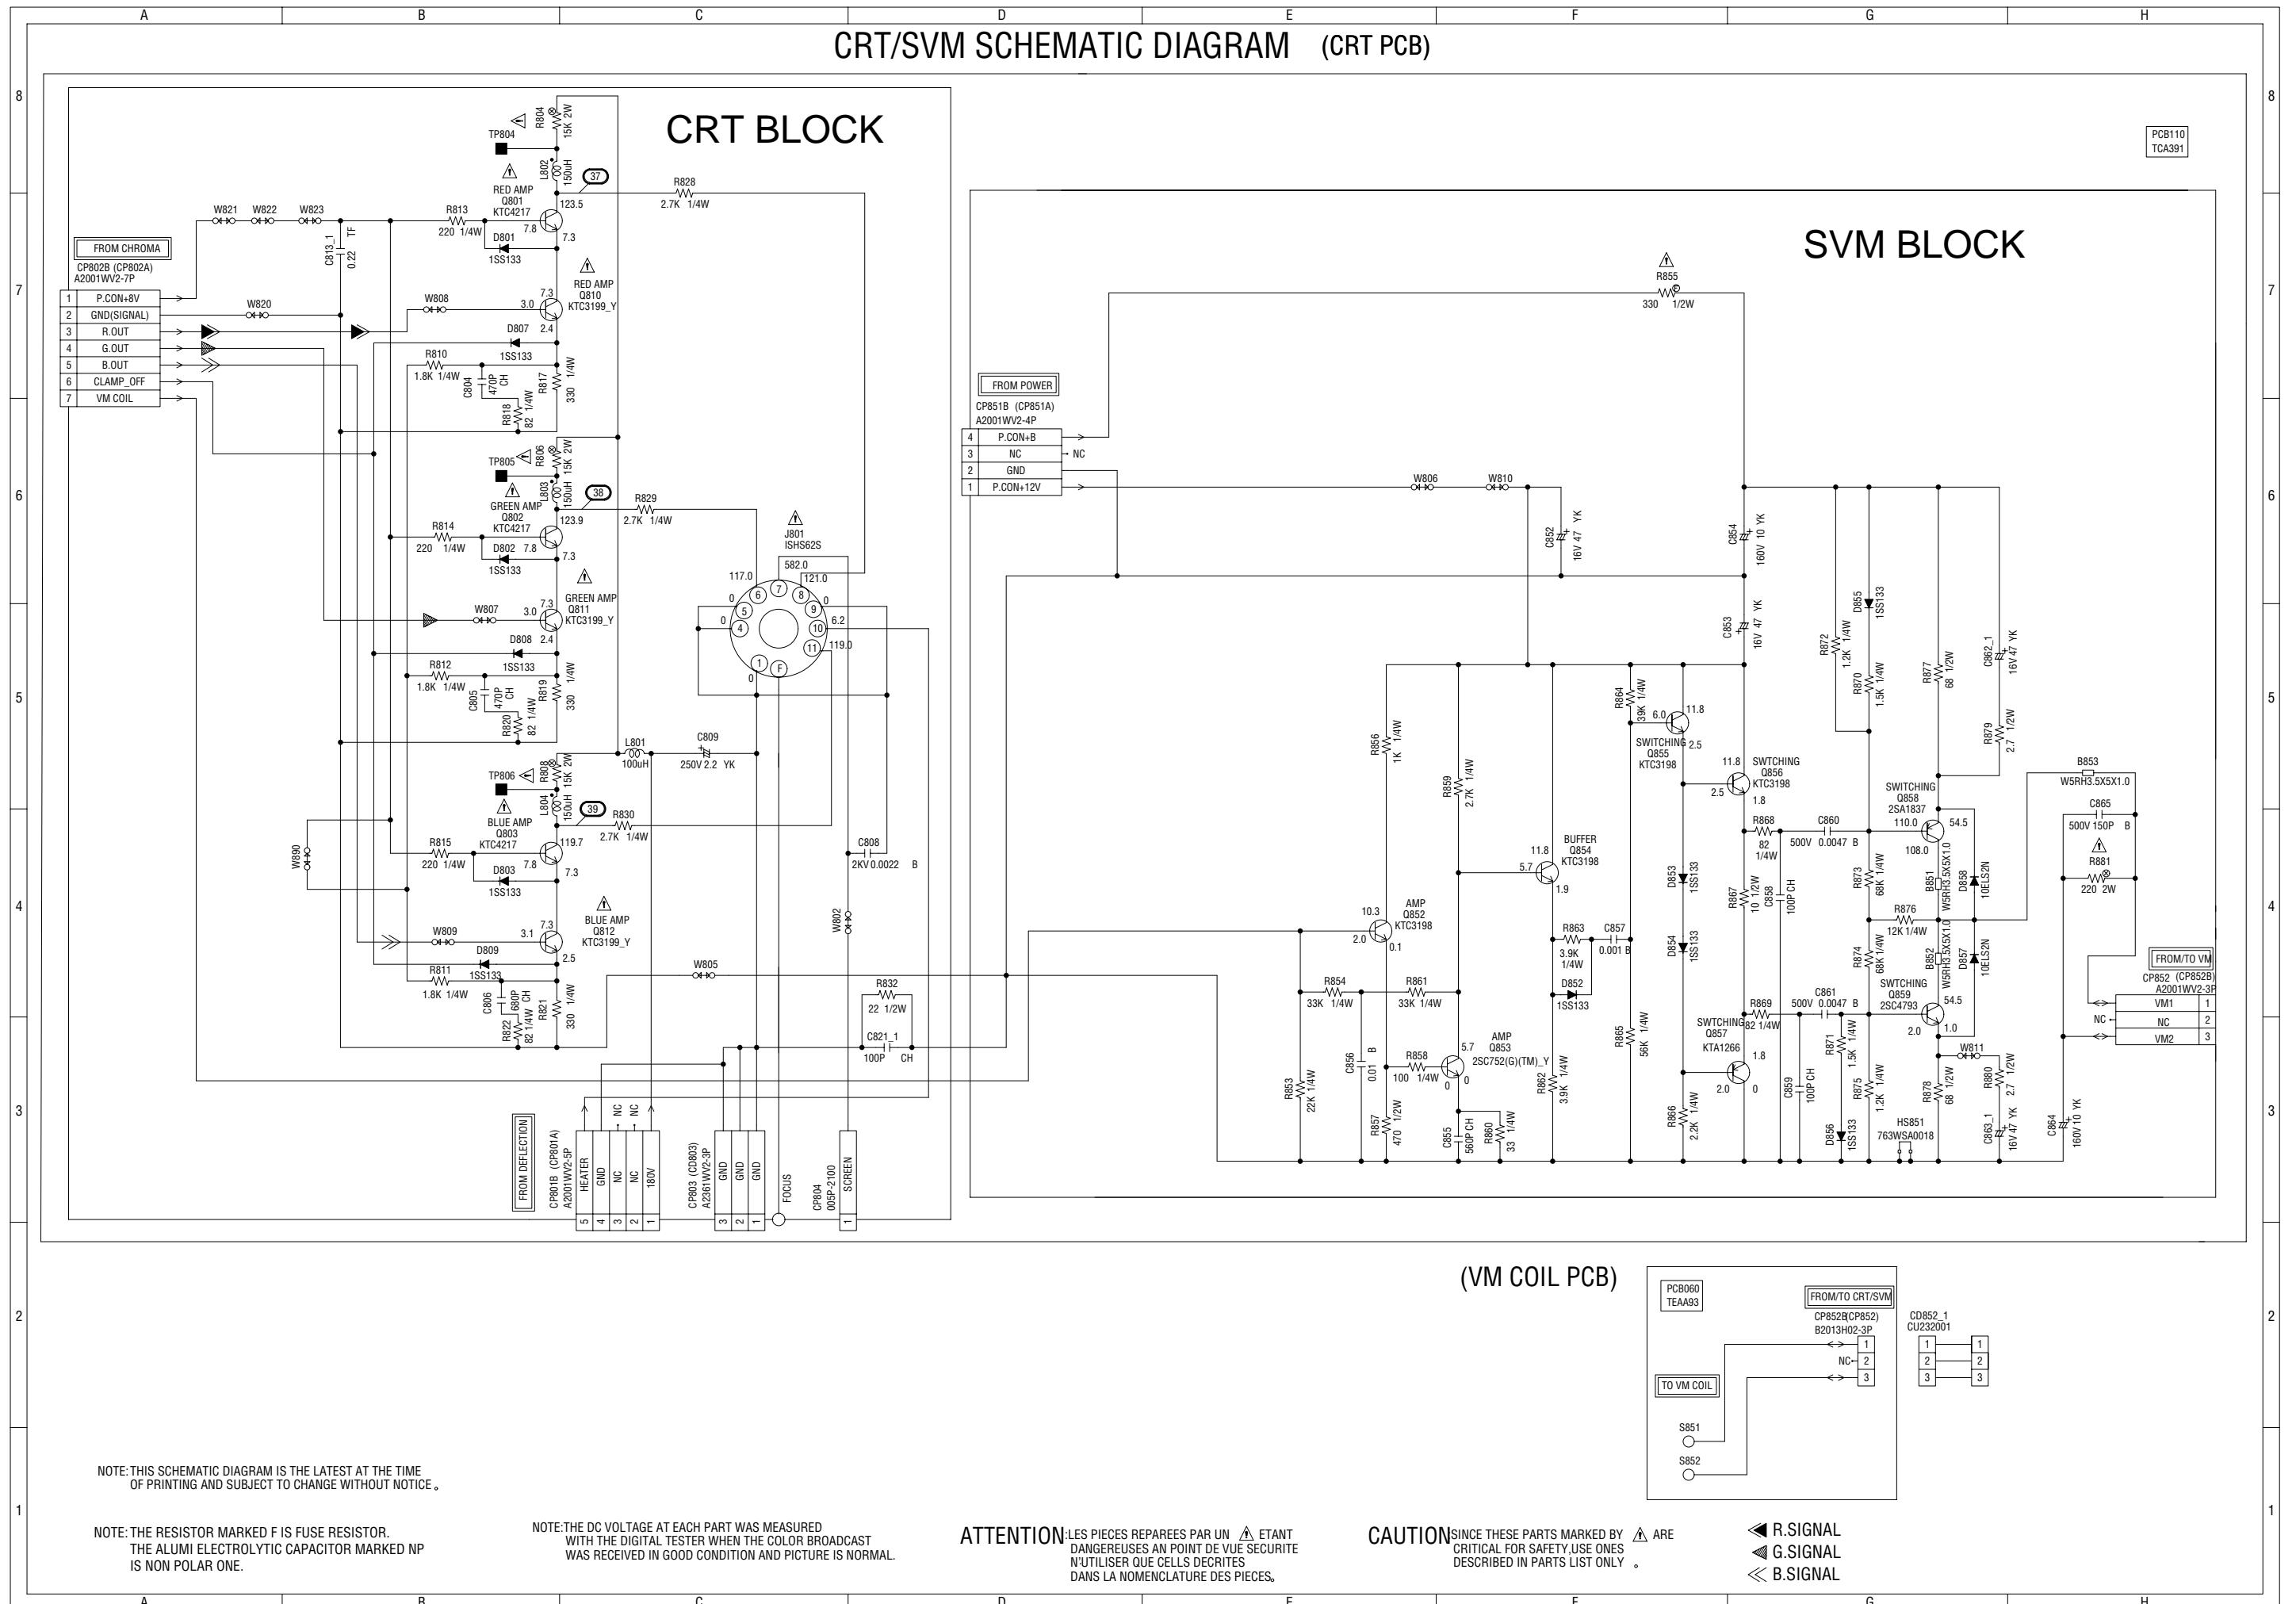


WAVEFORMS




MICON

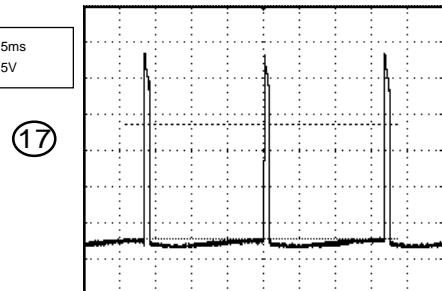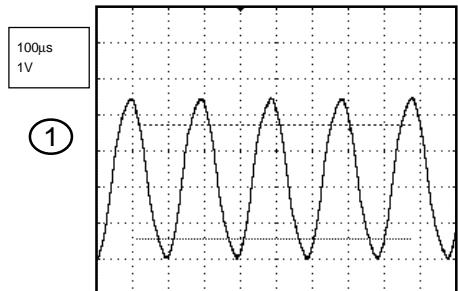

SOUND

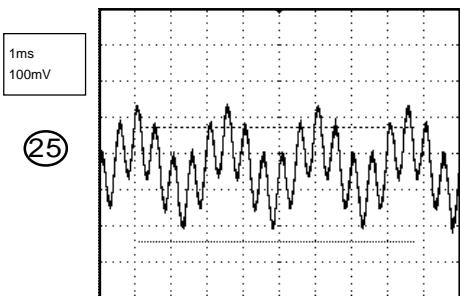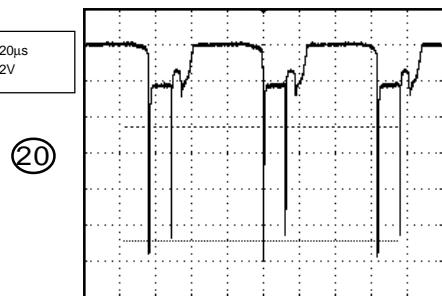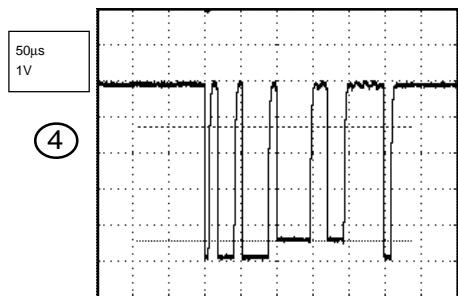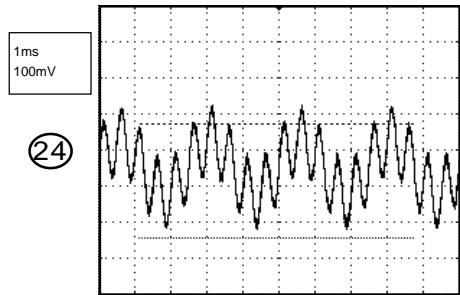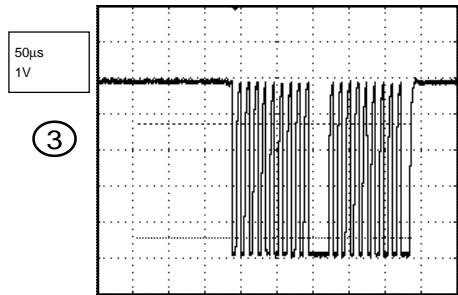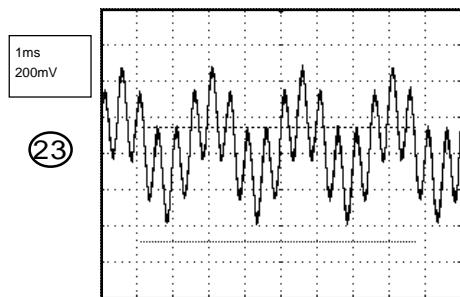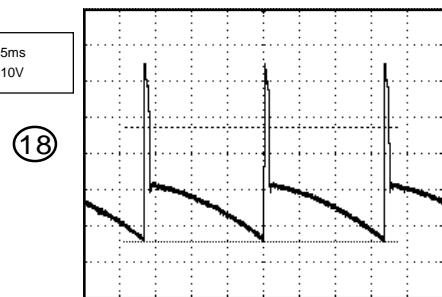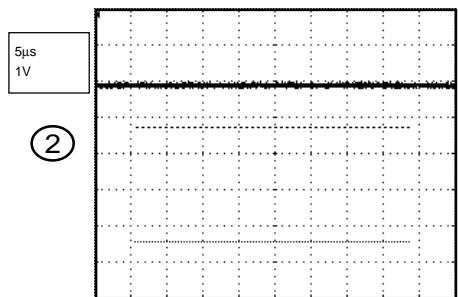
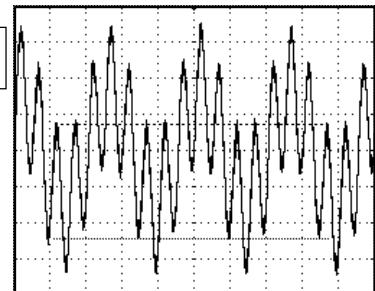


DEFLECTION

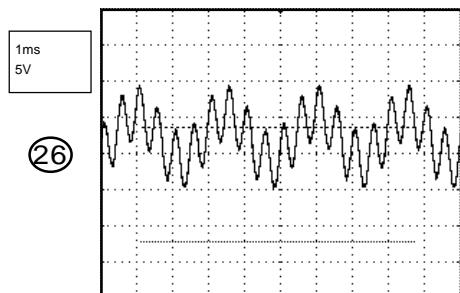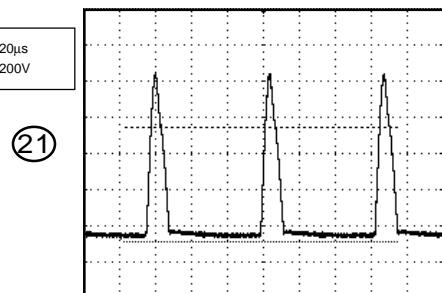
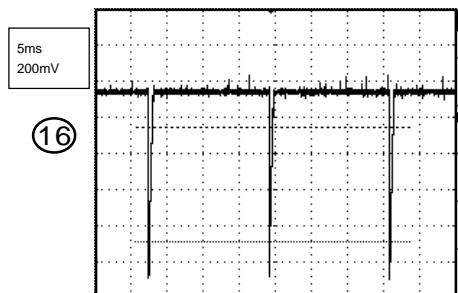


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.



WAVEFORMS

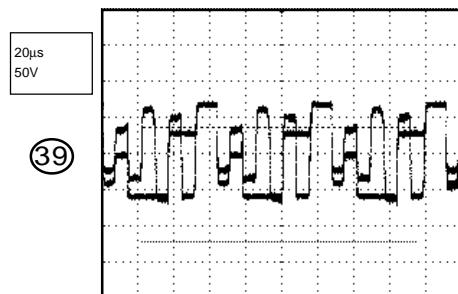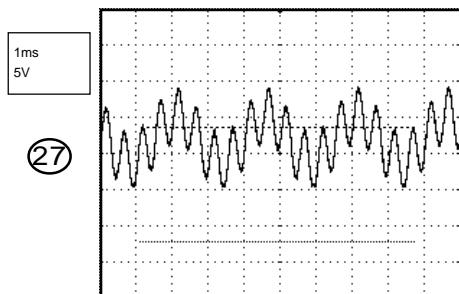

AV

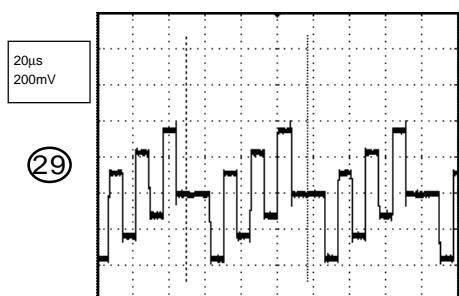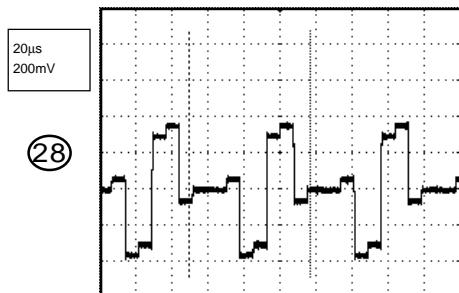


CRT/SVM

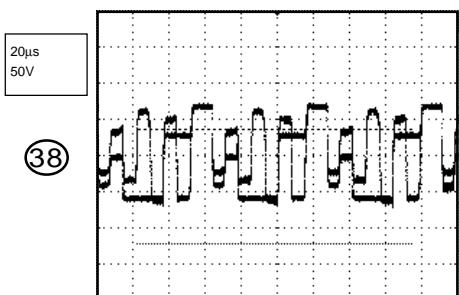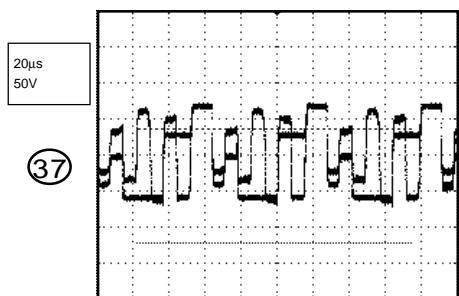


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

MECHANICAL EXPLODED VIEW

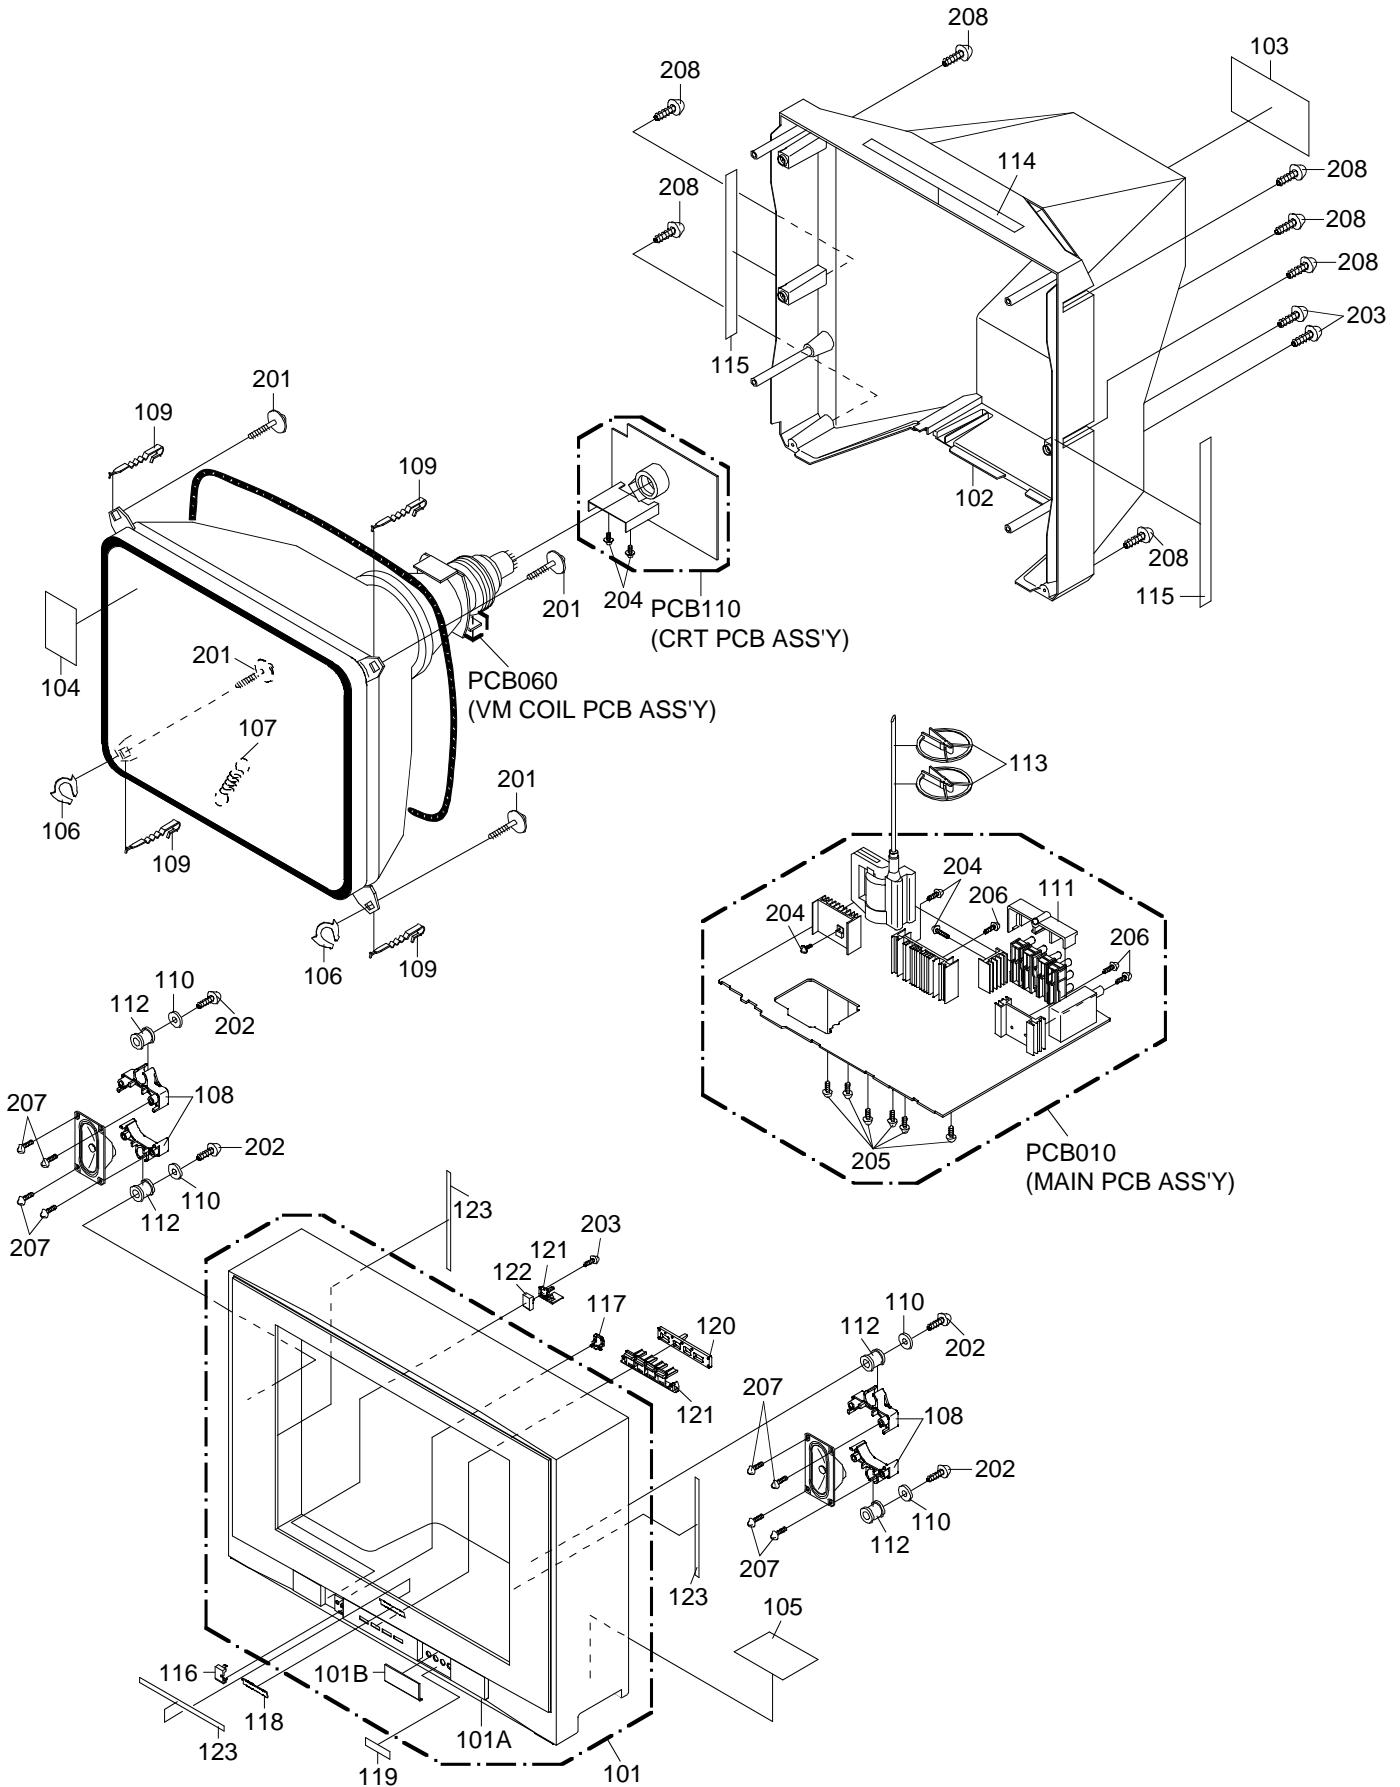

MECHANICAL EXPLODED VIEW (PACKING DIAGRAM)

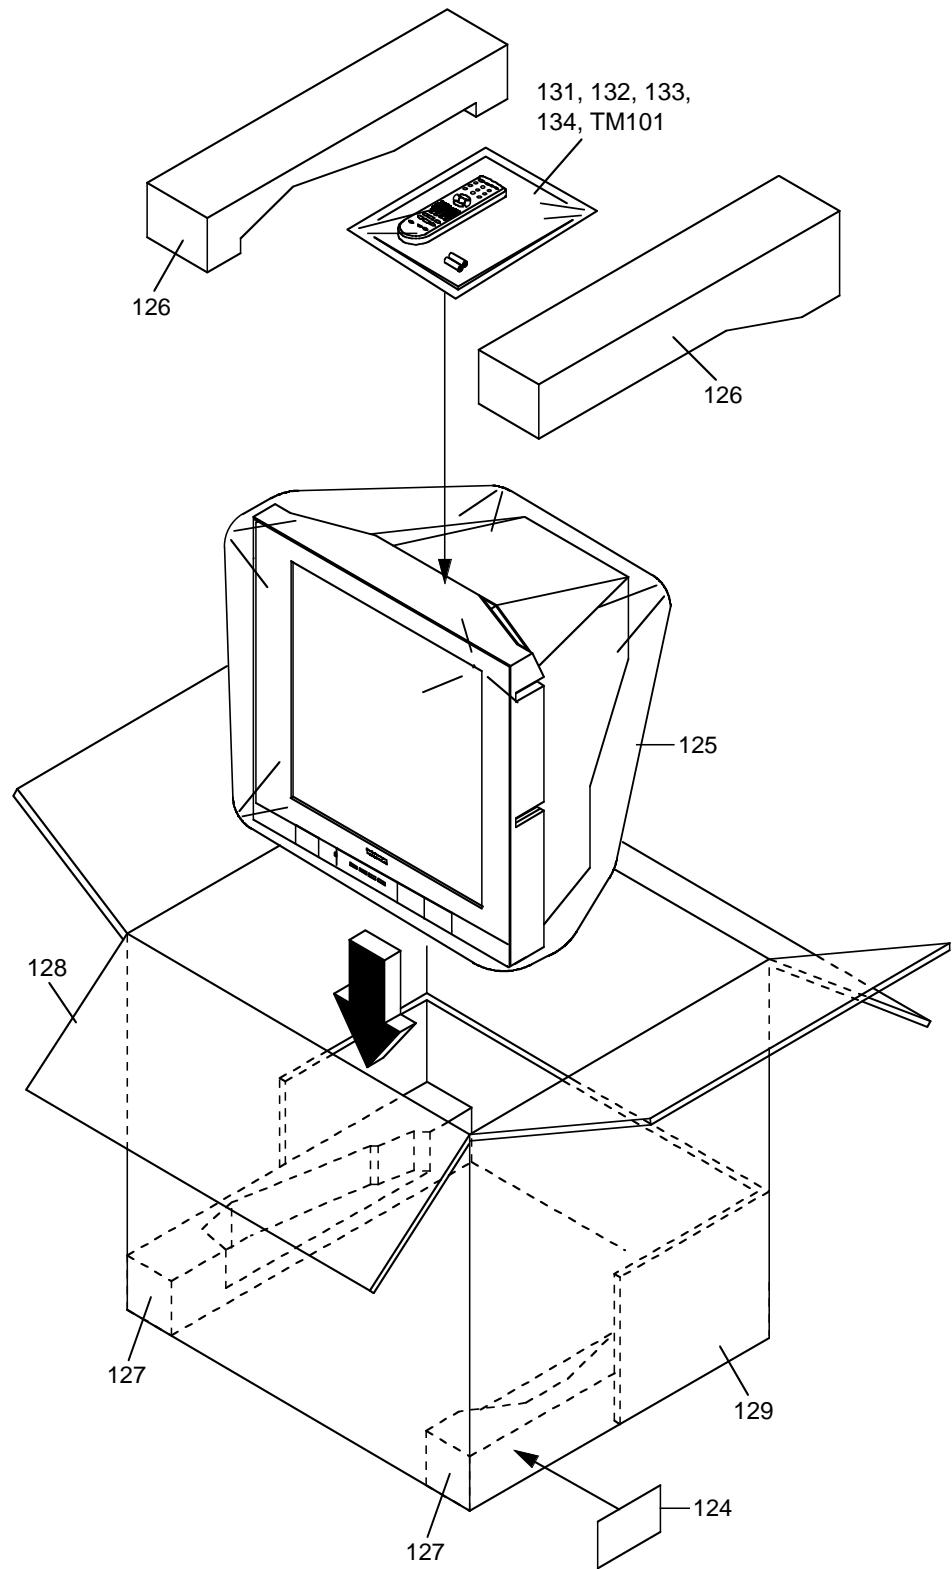

MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
101	AE003013	A3N115F720K	CABINET,FRONT ASSY	
101A	AE003014	701APJA127	CABINET,FRONT	
101B	AE003015	712APBA005	DOOR	
102	AE003016	A3N115F740K	CABINET,BACK ASSY	
103	AE003017	722549A244	SHEET,RATING	
104	AE003018	723000C288	POP LABEL	
105	AD301425	7240001120	SHEET,CSA	
106	AE003019	769WSA0017	WASHER,CRT T=1	
107	AD300759	741WUA0021	SPRING,EARTH	
108	AE003226	761WPA0090	HOLDER,SPEAKER	
109	BZ710259	762WPA0011	HOLDER,CRT WIRE	
110	AD300519	82A40B0104	FLAT WASHER	
111	AD301616	761WPA0263	HOLDER,JACK	
112	AD300518	801WR00001	DAMPER,SPEAKER	
113	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
114	AE003020	800WQ0A050	FELT SHEET	
115	AE003021	800WQ0A072	FELT SHEET	
116	AD302318	711WPA0189	PLATE,FRONT	
117	AD302320	713WPA0279	GLASS,LED	
118	AE003022	723549A026	BADGE,BRAND	
119	AE003023	723549A030	AV LABEL	
120	AD302324	735WPA0755	STOPPER,BUTTON	
121	AE003024	735WPBA948	BUTTON,FRAME	
122	AE003025	735WPJA817	BUTTON,POWER	
123	AE003026	800WQ0A079	FELT SHEET	
124	AE003027	723000C358	SHEET,BAR CODE	
125	AE003028	791AHA0025	FILM,BAG	
126	AE003029	792AHA0002	PACKAGE,TOP	
127	AE003030	792AHA003	PACKAGE,BOTTOM	
128	AE003031	793ACDA175	GIFT BOX	
129	AE000218	795ACA0010	PAD	378x1114
130	AE003032	A3N115E975	INSTRUCTION BOOK KIT	
131	AD301384	JA4LD300	POLYBAG,INSTRUCTION(RED CAUTION)	
132	AE003033	J3K10517B	REGISTRATION CARD	
133	AE003034	J3K10536B	ESP CARD	
134	AE003035	J3N11501A	INSTRUCTION BOOK	
201	AE003036	8141J60D54	SCREW,TAP TITE(P) GW18	6x45
202	BZ710035	8117540A64	SCREW,TAPPING(B0) TRUSS	4x16
203	BZ710031	8110630A04	SCREW,TAP TITE(P) BRAZIER	3x10
204	BZ710239	8109130A04	SCREW,TAP TITE(B) WH7	3x10
205	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
206	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8
207	BZ710030	8110630804	SCREW,TAP TITE(P) BRAZIER	3x8
208	BZ710036	8117540B04	SCREW,TAPPING(B0) TRUSS	4x20

ELECTRICAL REPLACEMENT PARTS LIST (FOR U.S.A.)

Location No.	TSB P/N	Reference No.	Description
RESISTORS			
△R402	BZ210041	R635U2680J	R,FUSE
△R410	BZ210087	R3X18A221J	R,METAL OXIDE
△R426	BZ210030	R4X5T4472F	R,METAL
△R434	AD301972	R5X2CF5R6J	R,CEMENT
△R436	BZ210023	R4X5T4183F	R,METAL
△R438	BZ210169	R6358A4R7J	R,FUSE
△R439	AE000676	R3K181102J	R,METAL
△R441	AD300037	R4X5T6153F	R,METAL
△R452	AD301385	R3X18A391J	R,METAL OXIDE
△R459	AD301595	R65582010J	R,FUSE
△R500	BZ210080	R0G3K2275K	RC
△R501	AD301596	R5X2AE010J	R,CEMENT
△R502	AD301016	R3X28A331J	R,METAL OXIDE
△R506	BZ210162	R002T4682J	RC
△R517	BZ210191	R3X28B010J	R,METAL
△R520	BZ210206	R002T2155J	RC
△R527	BZ210149	R3X18AR68J	R,METAL OXIDE
△R541	BZ210190	R63581R22J	R,FUSE
△R542	AD301017	R3X181R15J	R,METAL OXIDE
△R602	AD301975	R3X28B120J	R,METAL OXIDE
△R649	AD301975	R3X28B120J	R,METAL OXIDE
△R804	BZ210026	R3X18A153J	R,METAL OXIDE
△R806	BZ210026	R3X18A153J	R,METAL OXIDE
△R808	BZ210026	R3X18A153J	R,METAL OXIDE
R832	AE000901	R00202220J	RC
△R855	AD301019	R65582331J	R,FUSE
△R881	BZ210087	R3X18A221J	R,METAL OXIDE
CAPACITORS			
C408	BZ110032	E5EZF3102M	CE
C412	BZ110060	P4N8FJ222H	CMPP
C413	AD301977	E0ELF4102M	CE
C418	AE001019	P4J7F3434J	CMPP
△C420	AD301978	P4N8FJ133H	CMPP
C421	AD300048	P3N1F5183J	CPP
C425	BZ110202	C0PLRR713K	CC
C426	AD300061	E5EZFD220M	CE
△C430	BZ110195	E02LU8220M	CE
C442	AD301601	E53FF56R8M	CE
C501	AD300067	E02LF4102M	CE
C502	BZ110202	C0PLRR713K	CC
C503	BZ110202	C0PLRR713K	CC
△C505	BZ110025	P2122B224M	CMP
△C506	BZ110035	P2122B104M	CMP
C507	AE000417	E51DFC821M	CE
△C508	AD301108	CD39E0MH3M	CC
△C513	AD301026	CD39E0M13M	CC
C514	AD300067	E02LF4102M	CE
C517	BZ110213	C03L0R7K3K	CC
△C519	AD301026	CD39E0M13M	CC
C521	AD301025	E62NFB221M	CE
C527	BZ110119	E02LF2222M	CE
C535	BZ110202	C0PLRR713K	CC
C808	BZ110226	C0JBB07H3K	CC
C1003	AD300067	E02LF4102M	CE
C1004	BZ110053	E02LF3102M	CE
C1009	BZ110053	E02LF3102M	CE
DIODES			
D001	BZ410037	D97U03301B	DIODE,ZENER
D104	BZ410006	D1VT001330	DIODE,SILICON
D105	BZ410006	D1VT001330	DIODE,SILICON
D106	BZ410020	D97U05R11B	DIODE,ZENER
D107	BZ410006	D1VT001330	DIODE,SILICON
D108	BZ410006	D1VT001330	DIODE,SILICON
D109	BZ410054	0021721150	LED
D110	BZ410006	D1VT001330	DIODE,SILICON
D113	BZ410021	D97U05R61B	DIODE,ZENER
D402	BZ410043	D2WT011E10	DIODE,SILICON
D403	BZ410019	D97U03001B	DIODE,ZENER
D404	BZ410020	D97U05R11B	DIODE,ZENER
D405	BZ410063	D2WTAU02A0	DIODE,SILICON
△D406	BZ410021	D97U05R61B	DIODE,ZENER

ELECTRICAL REPLACEMENT PARTS LIST (FOR U.S.A.)

Location No.	TSB P/N	Reference No.	Description
DIODES			
D407	BZ410063	D2WTAU02A0	DIODE,SILICON
D408	AD302110	D2CF0715L0	DIODE,SILICON
D409	AD301980	D2CF2016L0	DIODE,SILICON
D410	BZ410019	D97U03001B	DIODE,ZENER
△D411	BZ410063	D2WTAU02A0	DIODE,SILICON
D414	BZ410043	D2WT011E10	DIODE,SILICON
D415	BZ410043	D2WT011E10	DIODE,SILICON
D416	BZ410006	D1VT001330	DIODE,SILICON
D417	BZ410006	D1VT001330	DIODE,SILICON
D419	BZ410006	D1VT001330	DIODE,SILICON
△D501	BZ410062	D2WTRM11C0	DIODE,SILICON
△D502	BZ410062	D2WTRM11C0	DIODE,SILICON
△D503	BZ410062	D2WTRM11C0	DIODE,SILICON
△D504	BZ410062	D2WTRM11C0	DIODE,SILICON
D505	AD300076	D28F30DF60	DIODE,RECTIFIER
D506	AD300731	D2WXN49370	DIODE,SILICON
D507	BZ410006	D1VT001330	DIODE,SILICON
D508	BZ410064	D97U03R91B	DIODE,ZENER
D509	AD300671	D97U01801B	DIODE,ZENER
D510	AD301980	D2CF2016L0	DIODE,SILICON
D511	AD300731	D2WXN49370	DIODE,SILICON
D512	BZ410010	D28T21DQN9	DIODE,SCHOTTKY
D513	BZ410006	D1VT001330	DIODE,SILICON
D514	BZ410006	D1VT001330	DIODE,SILICON
D515	AD300670	D97U01501B	DIODE,ZENER
D516	BZ410006	D1VT001330	DIODE,SILICON
D517	BZ410006	D1VT001330	DIODE,SILICON
D520	BZ410006	D1VT001330	DIODE,SILICON
D523	AD300671	D97U01801B	DIODE,ZENER
D524	BZ410006	D1VT001330	DIODE,SILICON
D525	AD300671	D97U01801B	DIODE,ZENER
D528	BZ410021	D97U05R61B	DIODE,ZENER
D601	BZ410006	D1VT001330	DIODE,SILICON
D602	BZ410058	D97U08R21B	DIODE,ZENER
D604	AD300070	D97U01201B	DIODE,ZENER
D605	BZ410006	D1VT001330	DIODE,SILICON
D606	BZ410006	D1VT001330	DIODE,SILICON
D607	BZ410006	D1VT001330	DIODE,SILICON
D608	BZ410043	D2WT011E10	DIODE,SILICON
D610	BZ410022	D97U06R81B	DIODE,ZENER
D611	BZ410022	D97U06R81B	DIODE,ZENER
D612	BZ410022	D97U06R81B	DIODE,ZENER
D701	AD300070	D97U01201B	DIODE,ZENER
D702	AD300070	D97U01201B	DIODE,ZENER
D703	AD300070	D97U01201B	DIODE,ZENER
D704	AD300070	D97U01201B	DIODE,ZENER
D705	AD300070	D97U01201B	DIODE,ZENER
D706	AD300070	D97U01201B	DIODE,ZENER
D709	BZ410066	D97U06R21B	DIODE,ZENER
D801	BZ410006	D1VT001330	DIODE,SILICON
D802	BZ410006	D1VT001330	DIODE,SILICON
D803	BZ410006	D1VT001330	DIODE,SILICON
D807	BZ410006	D1VT001330	DIODE,SILICON
D808	BZ410006	D1VT001330	DIODE,SILICON
D809	BZ410006	D1VT001330	DIODE,SILICON
D852	BZ410006	D1VT001330	DIODE,SILICON
D853	BZ410006	D1VT001330	DIODE,SILICON
D854	BZ410006	D1VT001330	DIODE,SILICON
D855	BZ410006	D1VT001330	DIODE,SILICON
D856	BZ410006	D1VT001330	DIODE,SILICON
D857	BZ410011	D28TELS2N2	DIODE,RECTIFER
D858	BZ410011	D28TELS2N2	DIODE,RECTIFER
ICS			
IC101	AD301981	I56F07090A	IC
IC199	AE003001	A3N115E015	IC
IC301	AD300055	I0QF021500	IC
IC302	AD301983	I01FF58910	IC
IC401	AD300414	I03TD80410	IC
△IC504	BZ410088	0002E00610	PHOTO COUPLER
IC601	AE002803	I06FC1283A	IC

ELECTRICAL REPLACEMENT PARTS LIST (FOR U.S.A.)

Location No.	TSB P/N	Reference No.	ICS	Description
IC701	AD301988	I0UF015010	IC	MM1501XNRE
IC702	AD301988	I0UF015010	IC	MM1501XNRE
IC902	AD300059	I01FF58290	IC	AN5829S
IC1001	AD300056	I0FSP52760	IC	AN5276
IC1501	AE003002	I03FE76605	IC	LA76605M-TLM
IC1502	AD301988	I0UF015010	IC	MM1501XNRE
IC1503	AD301988	I0UF015010	IC	MM1501XNRE
TRANSISTORS				
Q101	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q103	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q402	BZ510097	TCAT03227Y	TRANSISTOR,SILICON	KTC3227_Y-AT
Q405	AD302136	TD50026380	TRANSISTOR,SILICON	2SD2638(OEC)
Q408	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q409	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q410	AD300027	TC30041590	TRANSISTOR,SILICON	2SC4159(D,E)
Q411	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q502	BZ510098	T220033260	FET	2SK3326(2)
Q503	BZ510005	TA3T1371A0	TRANSISTOR,SILICON	2SA1371(D,E)-AE
Q504	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q505	BZ510011	TC3T029090	TRANSISTOR,SILICON	2SC2909(S,T)-AA
Q507	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q508	BZ510077	TAAT012714	TRANSISTOR,SILICON	KTA1271_Y-AT
Q509	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q512	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA
Q514	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q601	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q602	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q603	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q604	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q605	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q606	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q607	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q610	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q611	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q613	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q614	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q709	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q711	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q712	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
△Q801	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
△Q802	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
△Q803	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
△Q810	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
△Q811	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
△Q812	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
Q852	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q853	AD300024	TCUT00752Y	TRANSISTOR,SILICON	2SC752(G)(TM)_Y
Q854	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q855	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q856	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q857	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q858	AD300029	TAU0018370	TRANSISTOR,SILICON	2SA1837
Q859	AD300025	TCU0047930	TRANSISTOR,SILICON	2SC4793
Q901	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q902	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q1001	BZ510022	TNYJJ05001	COMPOUND TRANSISTOR	DTC114TKAT146
Q1503	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1504	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1507	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1508	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
COILS & TRANSFORMERS				
L301	BZ310041	02167F101J	COIL	100 UH
L401	BZ310004	021679472K	COIL	4.7 MH
L402	AD300400	022100034A	COIL,LINEARITY	ELH5L4132N
L403	AD301606	02DK000058	COIL,CHOKE	02DK000058
△L501	AD301124	029T000101	COIL,LINE FILTER	2R2A752F28Y
△L503	AE003003	028R270013	COIL,DEGAUSS	8R270013
L601	AD301990	021LA6330J	COIL	33 UH
L801	BZ310002	021673101K	COIL	100 UH
L802	AD300123	021673151K	COIL	150 UH
L803	AD300123	021673151K	COIL	150 UH

ELECTRICAL REPLACEMENT PARTS LIST (FOR U.S.A.)

Location No.	TSB P/N	Reference No.	Description	
COILS & TRANSFORMERS				
L804	AD300123	021673151K	COIL	150 UH
L901	BZ310041	02167F101J	COIL	100 UH
L1501	BZ310041	02167F101J	COIL	100 UH
L1502	BZ310039	02167F220J	COIL	22 UH
L1503	BZ310039	02167F220J	COIL	22 UH
L1505	AD300613	02167F150J	COIL	15 UH
L1508	BZ310041	02167F101J	COIL	100 UH
L1510	AD300613	02167F150J	COIL	15 UH
L1511	AD300613	02167F150J	COIL	15 UH
L1512	AD301033	021LA6220J	COIL	22 UH
T401	AD301125	0450190161	TRANS,HORIZONTAL DRIVE	ETH19Y203AY
△T501	AD301355	048140065S	TRANSFORMER,SWITCHING	8140065S
JACKS				
J701	AD301038	060J431019	RCA JACK	MSP-213V2-432 PBSN
J702	AD300108	063Q700002	JACK	YKF51-5503
J703	AD301038	060J431019	RCA JACK	MSP-213V2-432 PBSN
J704	AD301037	060J411024	RCA JACK	MSP-213V1-652 PBSN
J705	AD300110	060G401047	RCA JACK	HTJ-032-03AY
J706	AD300111	060G401046	RCA JACK	HTJ-032-03AW
J707	AD300112	060G401039	RCA JACK	HTJ-032-03AR
J708	AD301038	060J431019	RCA JACK	MSP-213V2-432 PBSN
△J801	AD301936	066F130021	SOCKET,CATHODE RAY,TUBE	ISHS62S
J1001	BZ614361	060J131015	HEADPHONE JACK	MSJ-2000
SWITCHES				
SW101	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW102	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW103	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW104	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW105	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
VARIABLE RESISTORS				
VR401	BZ210218	V1K63H3BTE	VOLUME,SEMI FIXED	NVG6TLTAB222
VR502	BZ210101	V1163H4BTC	VOLUME,SEMI FIXED	EVNCYAA03BE4
P.C.BOARD ASSEMBLIES				
PCB010	AE003004	A3N115F010K	PCB ASS'Y (FOR USA)	TMC559D
PCB060	AE003005	A3N115F060K	PCB ASS'Y	TEAA93B
PCB110	AE003006	A3N115F110K	PCB ASS'Y	TCA391B
MISCELLANEOUS				
B401	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
B402	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
B405	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
B501	BZ310045	024AT03481	CORE,BEADS	BL02RN1-R62T2
B504	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B851	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B852	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B853	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
BT001	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
BT002	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
△CD501	AD300746	120R615901	CORD,AC BUSH	0R615901
CD801	BZ614457	06CU253901	CORD,CONNECTOR	CU253901
CD802	AD302370	06CU275101	CORD,CONNECTOR	CU275101
CD803	AE003007	06CU83036A	CORD,CONNECTOR	CU83036A
CD851	AD302371	06CU244701	CORD,CONNECTOR	CU244701
CD852	AD301043	06CU232001	CORD,CONNECTOR	CU232001
CP101	BZ614102	0694270139	CONNECTOR PCB SIDE	173979-7
CP401	AD300095	069X460029	CONNECTOR PCB SIDE	B06B-DVS
CP501	BZ614176	069S320419	CONNECTOR PCB SIDE	A3963WV2-3PD
CP502	AD300687	069S420110	CONNECTOR PCB SIDE	A1561WV2-2P
CP507	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
CP508	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
CP803	AD301996	069S330010	CONNECTOR PCB SIDE	A2361WV2-3P
CP804	BZ614058	069W010010	CONNECTOR PCB SIDE	005P-2100
CP852	BZ614350	069S230629	CONNECTOR PCB SIDE	A2001WV2-3P
CP1001	AD301045	069S140419	CONNECTOR PCB SIDE	A2502WV2-4P
CP801A	BZ614276	067U005049	WIRE HOLDER	B2013H02-5P
CP801B	AD300752	069S250629	CONNECTOR PCB SIDE	A2001WV2-5P
CP802A	AD301997	067U007029	WIRE HOLDER	B2013H02-7P
CP802B	BZ614485	069S270629	CONNECTOR PCB SIDE	A2001WV2-7P
CP851A	BZ614334	067U004029	WIRE HOLDER	B2013H02-4P
CP851B	AD301998	069S240629	CONNECTOR PCB SIDE	A2001WV2-4P
CP852B	BZ614349	067U003029	WIRE HOLDER	B2013H02-3P

ELECTRICAL REPLACEMENT PARTS LIST (FOR U.S.A.)

Location No.	TSB P/N	Reference No.	Description	
MISCELLANEOUS				
EL001	BZ614044	124120301A	EYE LET	XRY20X30BD
EL002	BZ614043	124116281A	EYE LET	XRY16X28BD
△F501	AD301046	081PC6R305	FUSE	51MS063L
△FB401	AD302315	043227012F	TRANSFORMER,FLYBACK	3227012F
FH501	AE002634	06710T0009	HOLDER,FUSE	EYF-52BCY
FH502	AE002634	06710T0009	HOLDER,FUSE	EYF-52BCY
OS101	AD301048	0773071001	REMOTE RECEIVER	RPM7138-WH5
△RY501	AD300114	0560V20115	RELAY	ALKS321
△SP1001	AE003008	070C546006	SPEAKER	SA04A15BWA
△TH501	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT	ZPB45BL3R0A
TM101	AE003009	076R0GW020	TRANSMITTER	R25-1943
△TU001	AE000273	016330005	RF UNIT	115-V-K015AR_B
V801	AE003010	098T270904	CRT W/DY	A68QCU770X66L
X101	AD302002	100CT8R005	CRYSTAL	HC-49/U-S
X602	AD302003	100CT3R505	CRYSTAL	HC-49/C

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC.....	CERAMIC CAPACITOR
CE.....	ALUMI ELECTROLYTIC CAPACITOR
CP.....	POLYESTER CAPACITOR
CPP.....	POLYPROPYLENE CAPACITOR
CPL.....	PLASTIC CAPACITOR
CMP.....	METAL POLYESTER CAPACITOR
CMPL.....	METAL PLASTIC CAPACITOR
CMPP.....	METAL POLYPROPYLENE CAPACITOR

ELECTRICAL REPLACEMENT PARTS LIST (FOR CND)

Location No.	TSB P/N	Reference No.	Description	
RESISTORS				
△R402	BZ210041	R635U2680J	R,FUSE	68 OHM 1/2W
△R410	BZ210087	R3X18A221J	R,METAL OXIDE	220 OHM 2W
△R426	BZ210030	R4X5T4472F	R,METAL	4.7K OHM 1/4W
△R434	AD301972	R5X2CF5R6J	R,CEMENT	5.6 OHM 10W
△R436	BZ210023	R4X5T4183F	R,METAL	18K OHM 1/4W
△R438	BZ210169	R6358A4R7J	R,FUSE	4.7 OHM 2W
△R439	AE000676	R3K181102J	R,METAL	1K OHM 1W
△R441	AD300037	R4X5T6153F	R,METAL	15K OHM 1/6W
△R452	AD301385	R3X18A391J	R,METAL OXIDE	390 OHM 2W
△R459	AD301595	R65582010J	R,FUSE	1 OHM 1/2W
△R500	BZ210080	R0G3K2275K	RC	2.7M OHM 1/2W
△R501	AD301596	R5X2AE010J	R,CEMENT	1 OHM 7W
△R502	AD301016	R3X28A331J	R,METAL OXIDE	330 OHM 2W
△R506	BZ210162	R002T4682J	RC	6.8K OHM 1/4W
△R517	BZ210191	R3X28B010J	R,METAL	B 1 OHM 3W
△R520	BZ210206	R002T2155J	RC	1.5M OHM 1/2W
△R527	BZ210149	R3X18AR68J	R,METAL OXIDE	0.68 OHM 2W
△R541	BZ210190	R63581R22J	R,FUSE	0.22 OHM 1W
△R542	AD301017	R3X181R15J	R,METAL OXIDE	0.15 OHM 1W
△R602	AD301975	R3X28B120J	R,METAL OXIDE	12 OHM 3W
△R649	AD301975	R3X28B120J	R,METAL OXIDE	12 OHM 3W
△R804	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W
△R806	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W
△R808	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W
R832	AE000901	R00202220J	RC	22 OHM 1/2W
△R855	AD301019	R65582331J	R,FUSE	330 OHM 1/2W
△R881	BZ210087	R3X18A221J	R,METAL OXIDE	220 OHM 2W
CAPACITORS				
C408	BZ110032	E5EZF3102M	CE	1000 UF 25V
C412	BZ110060	P4N8FJ222H	CMPP	0.0022UF 1.25KV
C413	AD301977	E0ELF4102M	CE	1000 UF 35V
C418	AE001019	P4J7F3434J	CMPP	0.43 UF 250V PMS
△C420	AD301978	P4N8FJ133H	CMPP	0.013 UF 1.25KV
C421	AD300048	P3N1F5183J	CPP	0.018 UF 630V
C425	BZ110202	C0PLRR713K	CC	0.001 UF 2KV R
C426	AD300061	E5EZFD220M	CE	22 UF 250V
△C430	BZ110195	E02LU8220M	CE	22 UF 100V
C442	AD301601	E53FF56R8M	CE	6.8 UF 50V NP
C501	AD300067	E02LF4102M	CE	1000 UF 35V
C502	BZ110202	C0PLRR713K	CC	0.001 UF 2KV R
C503	BZ110202	C0PLRR713K	CC	0.001 UF 2KV R
△C505	BZ110025	P2122B224M	CMP	0.22 UF 275V ECQUL
△C506	BZ110035	P2122B104M	CMP	0.1 UF 275V ECQUL
C507	AE000417	E51DFC821M	CE	820 UF 200V
△C508	AD301108	CD39E0MH3M	CC	0.0022UF 250V
△C513	AD301026	CD39E0M13M	CC	0.001 UF 250V
C514	AD300067	E02LF4102M	CE	1000 UF 35V
C517	BZ110213	C03L0R7K3K	CC	0.0027UF 2KV R
△C519	AD301026	CD39E0M13M	CC	0.001 UF 250V
C521	AD301025	E62NFB221M	CE	220 UF 160V
C527	BZ110119	E02LF2222M	CE	2200 UF 16V
C535	BZ110202	C0PLRR713K	CC	0.001 UF 2KV R
C808	BZ110226	C0JBB07H3K	CC	0.0022UF 2KV B
C1003	AD300067	E02LF4102M	CE	1000 UF 35V
C1004	BZ110053	E02LF3102M	CE	1000 UF 25V
C1009	BZ110053	E02LF3102M	CE	1000 UF 25V
DIODES				
D001	BZ410037	D97U03301B	DIODE,ZENER	MTZJ33B T-77
D104	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D105	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D106	BZ410020	D97U05R11B	DIODE,ZENER	MTZJ5.1B T-77
D107	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D108	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D109	BZ410054	0021721150	LED	SLR-342VCT32
D110	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D113	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D402	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D403	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77
D404	BZ410020	D97U05R11B	DIODE,ZENER	MTZJ5.1B T-77
D405	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
△D406	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77

ELECTRICAL REPLACEMENT PARTS LIST (FOR CND)

Location No.	TSB P/N	Reference No.	Description
		DIODES	
D407	BZ410063	D2WTAU02A0	DIODE,SILICON
D408	AD302110	D2CF0715L0	DIODE,SILICON
D409	AD301980	D2CF2016L0	DIODE,SILICON
D410	BZ410019	D97U03001B	DIODE,ZENER
△D411	BZ410063	D2WTAU02A0	DIODE,SILICON
D414	BZ410043	D2WT011E10	DIODE,SILICON
D415	BZ410043	D2WT011E10	DIODE,SILICON
D416	BZ410006	D1VT001330	DIODE,SILICON
D417	BZ410006	D1VT001330	DIODE,SILICON
D419	BZ410006	D1VT001330	DIODE,SILICON
△D501	BZ410062	D2WTRM11C0	DIODE,SILICON
△D502	BZ410062	D2WTRM11C0	DIODE,SILICON
△D503	BZ410062	D2WTRM11C0	DIODE,SILICON
△D504	BZ410062	D2WTRM11C0	DIODE,SILICON
D505	AD300076	D28F30DF60	DIODE,RECTIFIER
D506	AD300731	D2WXN49370	DIODE,SILICON
D507	BZ410006	D1VT001330	DIODE,SILICON
D508	BZ410064	D97U03R91B	DIODE,ZENER
D509	AD300671	D97U01801B	DIODE,ZENER
D510	AD301980	D2CF2016L0	DIODE,SILICON
D511	AD300731	D2WXN49370	DIODE,SILICON
D512	BZ410010	D28T21DQN9	DIODE,SCHOTTKY
D513	BZ410006	D1VT001330	DIODE,SILICON
D514	BZ410006	D1VT001330	DIODE,SILICON
D515	AD300670	D97U01501B	DIODE,ZENER
D516	BZ410006	D1VT001330	DIODE,SILICON
D517	BZ410006	D1VT001330	DIODE,SILICON
D520	BZ410006	D1VT001330	DIODE,SILICON
D523	AD300671	D97U01801B	DIODE,ZENER
D524	BZ410006	D1VT001330	DIODE,SILICON
D525	AD300671	D97U01801B	DIODE,ZENER
D528	BZ410021	D97U05R61B	DIODE,ZENER
D601	BZ410006	D1VT001330	DIODE,SILICON
D602	BZ410058	D97U08R21B	DIODE,ZENER
D604	AD300070	D97U01201B	DIODE,ZENER
D605	BZ410006	D1VT001330	DIODE,SILICON
D606	BZ410006	D1VT001330	DIODE,SILICON
D607	BZ410006	D1VT001330	DIODE,SILICON
D608	BZ410043	D2WT011E10	DIODE,SILICON
D610	BZ410022	D97U06R81B	DIODE,ZENER
D611	BZ410022	D97U06R81B	DIODE,ZENER
D612	BZ410022	D97U06R81B	DIODE,ZENER
D701	AD300070	D97U01201B	DIODE,ZENER
D702	AD300070	D97U01201B	DIODE,ZENER
D703	AD300070	D97U01201B	DIODE,ZENER
D704	AD300070	D97U01201B	DIODE,ZENER
D705	AD300070	D97U01201B	DIODE,ZENER
D706	AD300070	D97U01201B	DIODE,ZENER
D709	BZ410066	D97U06R21B	DIODE,ZENER
D801	BZ410006	D1VT001330	DIODE,SILICON
D802	BZ410006	D1VT001330	DIODE,SILICON
D803	BZ410006	D1VT001330	DIODE,SILICON
D807	BZ410006	D1VT001330	DIODE,SILICON
D808	BZ410006	D1VT001330	DIODE,SILICON
D809	BZ410006	D1VT001330	DIODE,SILICON
D852	BZ410006	D1VT001330	DIODE,SILICON
D853	BZ410006	D1VT001330	DIODE,SILICON
D854	BZ410006	D1VT001330	DIODE,SILICON
D855	BZ410006	D1VT001330	DIODE,SILICON
D856	BZ410006	D1VT001330	DIODE,SILICON
D857	BZ410011	D28TELS2N2	DIODE,RECTIFER
D858	BZ410011	D28TELS2N2	DIODE,RECTIFER
		ICS	
IC101	AD301981	I56F07090A	IC
IC199	AE003012	A3N117E015	IC
IC301	AD300055	I0QF021500	IC
IC302	AD301983	I01FF58910	IC
IC401	AD300414	I03TD80410	IC
△IC504	BZ410088	0002E00610	PHOTO COUPLER
IC601	AE002803	I06FC1283A	IC

ELECTRICAL REPLACEMENT PARTS LIST (FOR CND)

Location No.	TSB P/N	Reference No.	ICS	Description
IC701	AD301988	I0UF015010	IC	MM1501XNRE
IC702	AD301988	I0UF015010	IC	MM1501XNRE
IC902	AD300059	I01FF58290	IC	AN5829S
IC1001	AD300056	I0FSP52760	IC	AN5276
IC1501	AE003002	I03FE76605	IC	LA76605M-TLM
IC1502	AD301988	I0UF015010	IC	MM1501XNRE
IC1503	AD301988	I0UF015010	IC	MM1501XNRE
TRANSISTORS				
Q101	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q103	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q402	BZ510097	TCAT03227Y	TRANSISTOR,SILICON	KTC3227_Y-AT
Q405	AD302136	TD50026380	TRANSISTOR,SILICON	2SD2638(OEC)
Q408	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q409	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q410	AD300027	TC30041590	TRANSISTOR,SILICON	2SC4159(D,E)
Q411	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q502	BZ510098	T220033260	FET	2SK3326(2)
Q503	BZ510005	TA3T1371A0	TRANSISTOR,SILICON	2SA1371(D,E)-AE
Q504	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q505	BZ510011	TC3T029090	TRANSISTOR,SILICON	2SC2909(S,T)-AA
Q507	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q508	BZ510077	TAAT012714	TRANSISTOR,SILICON	KTA1271_Y-AT
Q509	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q512	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA
Q514	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q601	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q602	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q603	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q604	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q605	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q606	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q607	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q610	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q611	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q613	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q614	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q709	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q711	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q712	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
△Q801	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
△Q802	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
△Q803	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
△Q810	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
△Q811	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
△Q812	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT
Q852	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q853	AD300024	TCUT00752Y	TRANSISTOR,SILICON	2SC752(G)(TM)_Y
Q854	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q855	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q856	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q857	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q858	AD300029	TAU0018370	TRANSISTOR,SILICON	2SA1837
Q859	AD300025	TCU0047930	TRANSISTOR,SILICON	2SC4793
Q901	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q902	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q1001	BZ510022	TNYJJ05001	COMPOUND TRANSISTOR	DTC114TKAT146
Q1503	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1504	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1507	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q1508	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
COILS & TRANSFORMERS				
L301	BZ310041	02167F101J	COIL	100 UH
L401	BZ310004	021679472K	COIL	4.7 MH
L402	AD300400	022100034A	COIL,LINEARITY	ELH5L4132N
L403	AD301606	02DK000058	COIL,CHOKE	02DK000058
△L501	AD301124	029T000101	COIL,LINE FILTER	2R2A752F28Y
△L503	AE003003	028R270013	COIL,DEGAUSS	8R270013
L601	AD301990	021LA6330J	COIL	33 UH
L801	BZ310002	021673101K	COIL	100 UH
L802	AD300123	021673151K	COIL	150 UH
L803	AD300123	021673151K	COIL	150 UH

ELECTRICAL REPLACEMENT PARTS LIST (FOR CND)

Location No.	TSB P/N	Reference No.	Description	
COILS & TRANSFORMERS				
L804	AD300123	021673151K	COIL	150 UH
L901	BZ310041	02167F101J	COIL	100 UH
L1501	BZ310041	02167F101J	COIL	100 UH
L1502	BZ310039	02167F220J	COIL	22 UH
L1503	BZ310039	02167F220J	COIL	22 UH
L1505	AD300613	02167F150J	COIL	15 UH
L1508	BZ310041	02167F101J	COIL	100 UH
L1510	AD300613	02167F150J	COIL	15 UH
L1511	AD300613	02167F150J	COIL	15 UH
L1512	AD301033	021LA6220J	COIL	22 UH
T401	AD301125	0450190161	TRANS,HORIZONTAL DRIVE	ETH19Y203AY
△T501	AD301355	048140065S	TRANSFORMER,SWITCHING	8140065S
JACKS				
J701	AD301038	060J431019	RCA JACK	MSP-213V2-432 PBSN
J702	AD300108	063Q700002	JACK	YKF51-5503
J703	AD301038	060J431019	RCA JACK	MSP-213V2-432 PBSN
J704	AD301037	060J411024	RCA JACK	MSP-213V1-652 PBSN
J705	AD300110	060G401047	RCA JACK	HTJ-032-03AY
J706	AD300111	060G401046	RCA JACK	HTJ-032-03AW
J707	AD300112	060G401039	RCA JACK	HTJ-032-03AR
J708	AD301038	060J431019	RCA JACK	MSP-213V2-432 PBSN
△J801	AD301936	066F130021	SOCKET,CATHODE RAY,TUBE	ISHS62S
J1001	BZ614361	060J131015	HEADPHONE JACK	MSJ-2000
SWITCHES				
SW101	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW102	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW103	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW104	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW105	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
VARIABLE RESISTORS				
VR401	BZ210218	V1K63H3BTE	VOLUME,SEMI FIXED	NVG6TLTAB222
VR502	BZ210101	V1163H4BTC	VOLUME,SEMI FIXED	EVNCYAA03BE4
P.C.BOARD ASSEMBLIES				
PCB010	AE003011	A3N117F010K	PCB ASS'Y	TMC559D
PCB060	AE003005	A3N115F060K	PCB ASS'Y	TEAA93B
PCB110	AE003006	A3N115F110K	PCB ASS'Y	TCA391B
MISCELLANEOUS				
B401	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
B402	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
B405	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
B501	BZ310045	024AT03481	CORE,BEADS	BL02RN1-R62T2
B504	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B851	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B852	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B853	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
BT001	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
BT002	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
△CD501	AD300746	120R615901	CORD,AC BUSH	0R615901
CD801	BZ614457	06CU253901	CORD,CONNECTOR	CU253901
CD802	AD302370	06CU275101	CORD,CONNECTOR	CU275101
CD803	AE003007	06CU83036A	CORD,CONNECTOR	CU83036A
CD851	AD302371	06CU244701	CORD,CONNECTOR	CU244701
CD852	AD301043	06CU232001	CORD,CONNECTOR	CU232001
CP101	BZ614102	0694270139	CONNECTOR PCB SIDE	173979-7
CP401	AD300095	069X460029	CONNECTOR PCB SIDE	B06B-DVS
CP501	BZ614176	069S320419	CONNECTOR PCB SIDE	A3963WV2-3PD
CP502	AD300687	069S420110	CONNECTOR PCB SIDE	A1561WV2-2P
CP507	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
CP508	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
CP803	AD301996	069S330010	CONNECTOR PCB SIDE	A2361WV2-3P
CP804	BZ614058	069W010010	CONNECTOR PCB SIDE	005P-2100
CP852	BZ614350	069S230629	CONNECTOR PCB SIDE	A2001WV2-3P
CP1001	AD301045	069S140419	CONNECTOR PCB SIDE	A2502WV2-4P
CP801A	BZ614276	067U005049	WIRE HOLDER	B2013H02-5P
CP801B	AD300752	069S250629	CONNECTOR PCB SIDE	A2001WV2-5P
CP802A	AD301997	067U007029	WIRE HOLDER	B2013H02-7P
CP802B	BZ614485	069S270629	CONNECTOR PCB SIDE	A2001WV2-7P
CP851A	BZ614334	067U004029	WIRE HOLDER	B2013H02-4P
CP851B	AD301998	069S240629	CONNECTOR PCB SIDE	A2001WV2-4P
CP852B	BZ614349	067U003029	WIRE HOLDER	B2013H02-3P

ELECTRICAL REPLACEMENT PARTS LIST (FOR CND)

Location No.	TSB P/N	Reference No.	Description	
MISCELLANEOUS				
EL001	BZ614044	124120301A	EYE LET	XRY20X30BD
EL002	BZ614043	124116281A	EYE LET	XRY16X28BD
△F501	AD301046	081PC6R305	FUSE	51MS063L
△FB401	AD302315	043227012F	TRANSFORMER,FLYBACK	3227012F
FH501	AE002634	06710T0009	HOLDER,FUSE	EYF-52BCY
FH502	AE002634	06710T0009	HOLDER,FUSE	EYF-52BCY
OS101	AD301048	0773071001	REMOTE RECEIVER	RPM7138-WH5
△RY501	AD300114	0560V20115	RELAY	ALKS321
△SP1001	AE003008	070C546006	SPEAKER	SA04A15BWA
△TH501	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT	ZPB45BL3R0A
TM101	AE003009	076R0GW020	TRANSMITTER	R25-1943
△TU001	AE000273	016330005	RF UNIT	115-V-K015AR_B
V801	AE003010	098T270904	CRT W/DY	A68QCU770X66L
X101	AD302002	100CT8R005	CRYSTAL	HC-49/U-S
X602	AD302003	100CT3R505	CRYSTAL	HC-49/C

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC.....	CERAMIC CAPACITOR
CE.....	ALUMI ELECTROLYTIC CAPACITOR
CP.....	POLYESTER CAPACITOR
CPP.....	POLYPROPYLENE CAPACITOR
CPL.....	PLASTIC CAPACITOR
CMP.....	METAL POLYESTER CAPACITOR
CMPL.....	METAL PLASTIC CAPACITOR
CMPP.....	METAL POLYPROPYLENE CAPACITOR

TOSHIBA CORPORATION

1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN