

# Service Manual

## Color Television

CHASSIS : CN-001M

Model	
DTQ-14P2/P3FCM	U.S.A CANADA (AC120V)
DTQ-14P2/V1FCWM/P2SCM	
DTQ-14V1/V5FCM/V1/V4SCM	
DTQ-14V5FCNM/15U5SCM	
DTQ-14V6FCBM/FCPM/FBBM/FPPM	
DTQ-14J4FCGM/FCCM	
DTQ-20V1/V4/V5FCM	
DTQ-20V1/V4SCM	
DTQ-20P2/P3FCM/P2SCM	
DTQ-14V6NBM/NPM	Middle America (AC 110V)
DTQ-14V1/V3/V5FSM	
DTQ-14V1/V3/V4/V5/V8/V9SSM	
DTQ-14U1FSM/SSM/20U1FSM/SSM	
DTQ-20P2SSM/15U5FSM	
DTQ-20V1/V3/V4FSM	
DTQ-20V1/V3/V4/V8/V9SSM	
DTQ-14V1/V4/V5FSPM	Chile, Peru, Philippines (AC220V)
DTQ-14V1/V4/V5/U1SSPM	
DTQ-14V6NBPM/NPPM	
DTQ-20V1/V4FSPM	
DTQ-20V1/V3/V4/U1SSPM	
DTQ-15U5SSPM	
DTQ-14V1/V4SSFM	Dominica (AC60~180)
DTQ-20V1/V4SSFM	
DTQ-14V4/20V4FCFM	Korea, USA, Japan(AC90~250V)

**DAEWOO ELECTRONICS CO., LTD**

[http : //svc.dwe.co.kr](http://svc.dwe.co.kr)

May. 2002

## TABLE OF CONTENTS

<b>SAFETY PRECAUTIONS .....</b>	<b>2</b>
PRODUCT SAFETY SERVICING GUIDELINES FOR AUDIO - VIDEO PRODUCTS .....	2
PRODUCT SAFETY SERVICING GUIDELINES FOR COLOR TELEVISION RECEIVERS .....	3
<b>SPECIFICATIONS .....</b>	<b>5</b>
<b>BLOCK DIAGRAM .....</b>	<b>6</b>
<b>ALIGNMENT INSTRUCTIONS .....</b>	<b>7</b>
SERVICE MODE ADJUSTMENTS .....	7
ASSEMBLY ADJUSTMENTS .....	8
PARENTAL CONTROL PASSWORD SETTINGS .....	12
<b>VOLTAGE CHART .....</b>	<b>13</b>
<b>WAVEFORMS.....</b>	<b>16</b>
<b>SCHEMATIC DIAGRAM .....</b>	<b>19</b>
<b>EXPLODED VIEW .....</b>	<b>20</b>
<b>ELECTRICAL PARTS LIST.....</b>	<b>28</b>

*APPENDIX (Appendix is provide only by internet [<http://svc.dwe.co.kr>])*

<b>IC DESCRIPTION .....</b>	<b>1</b>
<b>TROUBLE SHOOTING CHARTS.....</b>	<b>8</b>
NO POWER .....	8
NO PICTURE .....	9
NO SOUND .....	10
CH DON'T MEMORY or CH SKIP .....	11
NO COLOR .....	12
NO VERTICAL DEFLECTION .....	12
NO ON-SCREEN DISPLY .....	13
REMOTE CONTROL DOES NOT OPERATE .....	13

# PRODUCT SAFETY SERVICING GUIDELINES FOR AUDIO - VIDEO PRODUCTS

**CAUTION :** DO NOT ATTEMPT TO MODIFY THIS PRODUCT IN ANY WAY. NEVER PERFORM CUSTOMIZED INSTALLATIONS WITHOUT MANUFACTURER'S APPROVAL. UNAUTHORIZED MODIFICATIONS WILL NOT ONLY VOID THE WARRANTY, BUT MAY LEAD TO YOUR BEING LIABLE FOR ANY RESULTING PROPERTY DAMAGE OR USER INJURY.

SERVICE WORK SHOULD BE PERFORMED ONLY AFTER YOU ARE THOROUGHLY FAMILIAR WITH ALL OF THE FOLLOWING SAFETY CHECKS AND SERVICING GUIDELINES. TO DO OTHERWISE, INCREASES THE RISK OF POTENTIAL HAZARDS AND INJURY TO THE USER.


WHILE SERVICING, USE AN ISOLATION TRANSFORMER FOR PROTECTION FROM A.C. LINE SHOCK.

## SAFETY CHECKS

AFTER THE ORIGINAL SERVICE PROBLEM HAS BEEN CORRECTED, A CHECK SHOULD BE MADE OF THE FOLLOWING:

### SUBJECT: FIRE & SHOCK HAZARD

1. BE SURE THAT ALL COMPONENTS ARE POSITIONED IN SUCH A WAY AS TO AVOID POSSIBILITY OF ADJACENT COMPONENT SHORTS. THIS IS ESPECIALLY IMPORTANT ON THOSE MODULES WHICH ARE TRANSPORTED TO AND FROM THE REPAIR SHOP.
2. NEVER RELEASE A REPAIR UNLESS ALL PROTECTIVE DEVICES SUCH AS INSULATORS, BARRIERS, COVERS, SHIELDS, STRAIN RELIEFS, POWER SUPPLY CORDS, AND OTHER HARDWARE HAVE BEEN REINSTALLED PER ORIGINAL DESIGN. BE SURE, THAT THE SAFETY PURPOSE OF THE POLARIZED LINE PLUG HAS NOT BEEN DEFEATED.
3. SOLDERING MUST BE INSPECTED TO DISCOVER POSSIBLE COLD SOLDER JOINTS, SOLDER SPLASHES OF SHARP SOLDER POINTS. BE CERTAIN TO REMOVE ALL LOOSE FOREIGN PARTICLES.
4. CHECK FOR PHYSICAL EVIDENCE OF DAMAGE OR DETERIORATION TO PARTS AND COMPONENTS, FOR FRAYED LEADS, DAMAGED INSULATION (INCLUDING A.C. CORD), AND REPLACE IF NECESSARY. FOLLOW ORIGINAL LAYOUT, LEAD LENGTH AND DRESS.
5. NO LEAD OR COMPONENT SHOULD TOUCH A RECEIVING TUBE OR A RESISTOR RATED AT 1 WATT OR MORE. LEAD TENSION AROUND PROTRUDING METAL SURFACES MUST BE AVOIDED.
6. ALL CRITICAL COMPONENTS SUCH AS FUSES, FLAMEPROOF RESISTOR, CAPACITORS, ETC. MUST BE REPLACED WITH EXACT FACTORY TYPES. DO NOT USE REPLACEMENT COMPONENTS OTHER THAN THOSE SPECIFIED OR MAKE UNRECOMMENDED CIRCUIT MODIFICATIONS.
7. AFTER RE-ASSEMBLY OF THE SET ALWAYS PERFORM AN A.C. LEAKAGE TEST ON ALL EXPOSED METALLIC PARTS OF THE CABINET. (THE CHANNEL SELECTOR KNOB, ANTENNA TERMINALS, HANDLE AND SCREWS) TO BE SURE THE SET IS SAFE TO OPERATE WITHOUT DANGER OF ELECTRICAL SHOCK. DO NOT USE A LINE ISOLATION TRANSFORMER DURING THIS TEST USE AN A.C. VOLTMETER, HAVING 5000 OHMS PER VOLT OR MORE SENSITIVITY, IN THE FOLLOWING MANNER : CONNECT A 1500 OHM 10 WATT RESISTOR, PARALLELED BY A .15 MFD. 150V A.C. TYPE CAPACITOR BETWEEN A KNOWN GOOD EARTH GROUND (WATER PIPE, CONDUIT, ETC.) AND THE EXPOSED METALLIC PARTS, ONE AT A TIME. MEASURE THE A.C. VOLTAGE ACROSS THE COMBINATION OF 1500 OHM RESISTOR AND .15 MFD CAPACITOR. REVERSE THE A.C. PLUG AND REPEAT A.C. VOLTAGE MEASUREMENTS FOR EACH EXPOSED METALLIC PART. VOLTAGE MEASURED MUST NOT EXCEED .75 VOLTS R.M.S THIS CORRESPONDS TO 0.5 MILLIAMPS A.C. ANY VALUE EXCEEDING THIS LIMIT CONSTITUTES A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED IMMEDIATELY.

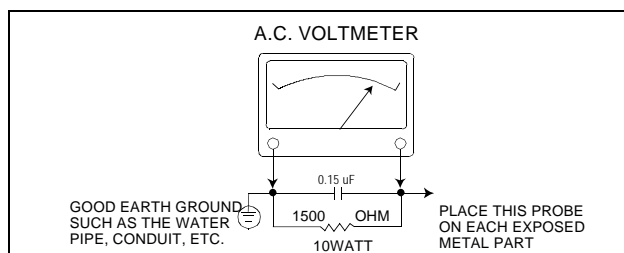

### SUBJECT : GRAPHIC SYMBOLS



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE SERVICE PERSONNEL TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE SERVICE PERSONNEL TO THE PRESENCE OF IMPORTANT SAFETY INFORMATION ON SERVICE LITERATURE.

### SUBJECT : X-RADIATION

1. BE SURE PROCEDURES AND INSTRUCTIONS TO ALL SERVICE PERSONNEL COVER THE SUBJECT OF X-RADIATION. THE ONLY POTENTIAL SOURCE OF X-RAYS IN CURRENT T.V. RECEIVERS IS THE PICTURE TUBE. HOWEVER, THIS TUBE DOES NOT EMIT X-RAYS WHEN THE HIGH VOLTAGE IS AT THE FACTORY SPECIFIED LEVEL. THE PROPER VALUE IS GIVEN IN THE APPLICABLE SCHEMATIC. OPERATION AT HIGHER VOLTAGES MAY CAUSE A FAILURE OF THE PICTURE TUBE OR HIGH VOLTAGE SUPPLY AND UNDER CERTAIN CIRCUMSTANCES, MAY PRODUCE RADIATION IN EXCESS OF DESIRABLE LEVELS.
2. ONLY FACTORY SPECIFIED C.R.T ANODE CONNECTORS MUST BE USED. DEGAUSSING SHIELDS ALSO SERVE AS X-RAY SHIELD IN COLOR SETS. ALWAYS RE-INSTALL THEM.
3. IT IS ESSENTIAL THAT SERVICE PERSONNEL HAVE AVAILABLE AN ACCURATE AND RELIABLE HIGH VOLTAGE METER. THE CALIBRATION OF THE METER SHOULD BE CHECKED PERIODICALLY AGAINST A REFERENCE STANDARD. SUCH AS THE ONE AVAILABLE AT YOUR DISTRIBUTOR.
4. WHEN THE HIGH VOLTAGE CIRCUITRY IS OPERATING PROPERLY THERE IS NO POSSIBILITY OF AN X-RADIATION PROBLEM. EVERY TIME A COLOR CHASSIS IS SERVICED, THE BRIGHTNESS SHOULD BE RUN UP AND DOWN WHILE MONITORING THE HIGH VOLTAGE WITH A METER TO BE CERTAIN THAT THE HIGH VOLTAGE DOES NOT EXCEED THE SPECIFIED VALUE AND THAT IT IS REGULATING CORRECTLY. WE SUGGEST THAT YOU AND YOUR SERVICE ORGANIZATION REVIEW TEST PROCEDURES SO THAT VOLTAGE REGULATION IS ALWAYS CHECKED AS A STANDARD SERVICING PROCEDURE, AND THAT THE HIGH VOLTAGE READING BE RECORDED ON EACH CUSTOMER'S INVOICE.
5. WHEN TROUBLESHOOTING AND MAKING TEST MEASUREMENTS IN A PRODUCT WITH A PROBLEM OF EXCESSIVE HIGH VOLTAGE, AVOID BEING UNNECESSARILY CLOSE TO THE PICTURE TUBE AND THE HIGH VOLTAGE SUPPLY. DO NOT OPERATE THE PRODUCT LONGER THAN IS NECESSARY TO LOCATE THE CAUSE OF EXCESSIVE VOLTAGE.
6. REFER TO HV, B+ AND SHUTDOWN ADJUSTMENT PROCEDURES DESCRIBED IN THE APPROPRIATE SCHEMATIC AND DIAGRAMS (WHERE USED).

### SUBJECT : IMPLSION

1. ALL DIRECT VIEWED PICTURE TUBES ARE EQUIPPED WITH AN INTEGRAL IMPLSION PROTECTION SYSTEM. BUT CARE SHOULD BE TAKEN TO AVOID DAMAGE DURING INSTALLATION. AVOID SCRATCHING THE TUBE. OF SCRATCHED REPLACE IT.
2. USE ONLY RECOMMENDED FACTORY REPLACEMENT TUBES.

### SUBJECT : TIPS ON PROPER INSTALLATION

1. NEVER INSTALL ANY PRODUCT IN A CLOSED-IN RECESS, CUBBYHOLE OR CLOSELY FITTING SHELF SPACE, OVER OR CLOSE TO HEAT DUCT, OR IN THE PATH OF HEATED AIR FLOW.
2. AVOID CONDITIONS OF HIGH HUMIDITY SUCH AS: OUTDOOR PATIO INSTALLATIONS WHERE DEW IS A FACTOR, NEAR STEAM RADIATORS WHERE STEAM LEAKAGE IS A FACTOR, ETC.
3. AVOID PLACEMENT WHERE DRAPERIES MAY OBSTRUCT REAR VENTING. THE CUSTOMER SHOULD ALSO AVOID THE USE OF DECORATIVE SCARVES OR OTHER COVERINGS WHICH MIGHT OBSTRUCT VENTILATION.
4. WALL AND SHELF MOUNTED INSTALLATIONS USING A COMMERCIAL MOUNTING KIT, MUST FOLLOW THE FACTORY APPROVED MOUNTING INSTRUCTIONS. A PRODUCT MOUNTED TO A SHELF OR PLATFORM MUST RETAIN ITS ORIGINAL FEET (OR THE EQUIVALENT THICKNESS IN SPACERS) TO PROVIDE ADEQUATE AIR FLOW ACROSS THE BOTTOM, BOLTS OR SCREWS USED FOR FASTENERS MUST NOT TOUCH ANY PARTS OR WIRING. PERFORM LEAKAGE TEST ON CUSTOMIZED INSTALLATIONS.
5. CAUTION CUSTOMERS AGAINST THE MOUNTING OF A PRODUCT ON SLOPING SHELF OR A TILTED POSITION, UNLESS THE PRODUCT IS PROPERLY SECURED.
6. A PRODUCT ON A ROLL-ABOUT CART SHOULD BE STABLE ON ITS MOUNTING TO THE CART. CAUTION THE CUSTOMER ON THE HAZARDS OF TRYING TO ROLL A CART WITH SMALL CASTERS ACROSS THRESHOLDS OR DEEP PILE CARPETS.
7. CAUTION CUSTOMERS AGAINST THE USE OF A CART OR STAND WHICH HAS NOT BEEN LISTED BY UNDERWRITERS LABORATORIES, INC. FOR USE WITH THEIR SPECIFIC MODEL OF TELEVISION RECEIVER OR GENERICALLY APPROVED FOR USE WITH T.V.S OF THE SAME OR LARGER SCREEN SIZE.
8. CAUTION CUSTOMERS AGAINST THE USE OF EXTENSION CORDS, EXPLAIN THAT A FOREST OF EXTENSIONS SPROUTING FROM A SINGLE OUTLET CAN LEAD TO DISASTROUS CONSEQUENCES TO HOME AND FAMILY.

# PRODUCT SAFETY SERVICING GUIDELINES FOR COLOR TELEVISION RECEIVERS


**CAUTION :** Do not attempt to modify this product in any way. Unauthorized modifications will not only void the warranty, but may lead to your being liable for any resulting property damage or user injury. Service work should be performed only after you are thoroughly familiar with all of the following safety checks and servicing guidelines. To do otherwise, increases the risk of potential hazards and injury to the user.

## SAFETY CHECKS


After the original service problem has been corrected, a check should be made of the following:

### SUBJECT : FIRE & SHOCK HAZARD

1. Be sure that all components are positioned in such a way as to avoid possibility of adjacent component shorts. This is especially important on those chassis which are transported to and from the repair shop.
2. Never release a repair unless all protective devices such as insulators, barriers, covers, shields, strain reliefs, and other hardware have been reinstalled per original design.
3. Soldering must be inspected to discover possible cold solder joints, frayed leads, damaged insulation (including A.C. cord), solder splashes or sharp solder points. Be certain to remove all loose foreign particulates.
4. Check for physical evidence of damage or deterioration to parts and components, and replace if necessary follow original layout, lead length and dress.
5. No leads or components should touch a receiving tube or a resistor rated at 1 watt or more. Lead tension around protruding metal surfaces must be avoided.
6. All critical components such as fuses, flameproof resistors, capacitors, etc. must be replaced with exact factory types. Do not use replacement components other than those specified or make unrecommended circuit modifications.
7. After re-assembly of the set always perform an A.C. leakage test on all exposed metallic parts of the cabinet, (the channel selector knob, antenna terminals, handle and screws) to be sure the set is safe to operate without danger of electrical shock. Do not use a line isolation transformer during this test. Use an A.C. voltmeter, having 5000 ohms per volt or more sensitivity, in the following manner : connect a 1500 ohm 10 watt resistor, paralleled by a 15 mfd. 150V A.C. type capacitor between a known good earth ground (water pipe, conduit, etc.) and the exposed metallic parts, one at a time. Measure the A.C. voltage across the combination of 1500 ohm resistor and 0.15 MFD capacitor. Reverse the A.C. plug and repeat A.C. voltage measurements for each exposed metallic part. Voltage measured must not exceed 0.75 volts R.M.S. This corresponds to 0.5 milliamp A.C. Any value exceeding this limit constitutes a potential shock hazard and must be corrected immediately.

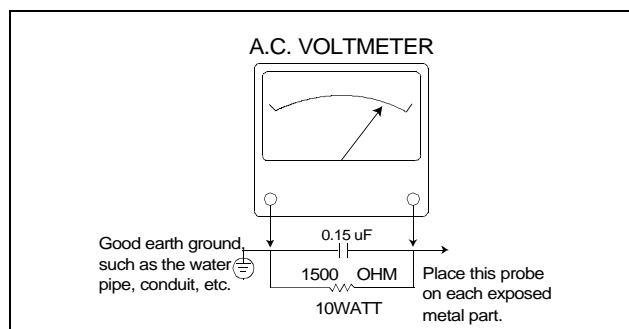


## GRAPHIC SYMBOLS :

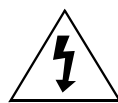

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the service personnel to the presence of uninsulated "dangerous voltage" that may be of sufficiently magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the service personnel to the presence of important safety information in service literature.

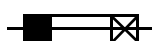

Fuse symbol is printed on pcb adjacent to the fuse, with "RISK OF FIRE REPLACE FUSE AS MARKED". The symbol is explained in the service manual with the following wording or equivalent.

**"CAUTION :** FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH SAME TYPE (4A, 125V)" and **"ATTENTION:** AFIN D'ASSU UNE PROTECTION PERMANENTE CONTRE LES RISQUES D'INCENDIE, REMPLACER UNIQUEMENT PAR UN FUSIBLE DE MEME TYPE ET DE "4A, 125V".

### SUBJECT : X-RADIATION

1. Be sure procedures and instructions to all service personnel cover the subject of X-rays in current T.V. receivers is the picture tube. However, this tube does not emit X-rays when the high voltage is at the factory specified level. The proper value is given in the applicable schematic. Operation at higher voltages may cause a failure of the picture tube or high voltage supply and, under certain circumstances, may produce radiation in excess of desirable levels.
2. Only factory specified C.R.T. anode connectors must be used. Degaussing shields also serve as X-ray shield in color sets. Always re-install them.
3. It is essential that the serviceman has available an accurate and reliable high voltage meter. The calibration of the meter should be checked periodically against a reference standard. Such as the one available at your distributor.
4. When the high voltage circuitry is operating properly there is no possibility of an X-radiation problem. Every time a color chassis is serviced, the brightness should be run up and down while monitoring the high voltage with a meter to be certain that the high voltage does not exceed the specified value and that it is regulating correctly. We suggest that you and your service organization review test procedures so that voltage regulation is always checked as a standard servicing procedure. And that the high voltage reading be recorded on each customer's invoice.
5. When troubleshooting and making test measurements in a receiver with a problem of excessive high voltage, avoid being unnecessarily close to the picture tube and the high voltage compartment. Do not operate the chassis longer than is necessary to locate the cause of excessive voltage.
6. Refer to HV, B+ and Shutdown adjustment procedures described in the appropriate schematic and diagrams (where used).

---

**SUBJECT : IMPLOSION**

1. All direct viewed picture tubes are equipped with an integral implosion protection system, but care should be taken to avoid damage during installation. Avoid scratching the tube. If scratched, replace it.
2. Use only recommended factory replacement tubes.


**SUBJECT : TIPS ON PROPER INSTALLATION**

1. Never install any receiver in closed-in recess, cubbyhole or closely fitting shelf space over, or close to heat duct, or in the path of heated air flow.
2. Avoid conditions of high humidity such as : Outdoor patio installations where dew is a factor. Near steam radiators where steam leakage is a factor, etc.
3. Avoid placement where draperies may obstruct rear venting. The customer should also avoid the use of decorative scarves or other coverings which might obstruct ventilation.
4. Wall and shelf mounted installations using a commercial mounting kit, must follow the factory approved mounting instructions. A receiver mounted to a shelf or platform must retain its original feet(or the equivalent thickness in spacers) to provide adequate air flow across the bottom, bolts or screws used for fasteners must not touch and parts or wiring. Perform leakage test on customized installations.
5. Caution customers against the mounting of a receiver on sloping shelf or a tilted position, unless the receiver is properly secured.
6. A receiver on a roll-about cart should be stable on its mounting to the cart. Caution the customer on the hazards of trying to roll a cart with small casters across thresholds or deep pile carpets.
7. Caution customers against the use of a cart or stand which has not been listed by underwriters laboratories, inc. For use with their specific model of television receiver or generically approved for use with T.V.'s of the same or larger screen size.

# SPECIFICATIONS

ITEMS	MODEL	DTQ-14P2/P3FCM DTQ-14P2/V1FCWM/P2SCM DTQ-14V1/V5FCM/V1/V4SCM DTQ-14V5FCNM/15U5SCM DTQ-14V6FCBM/FCPM/FBBM/FPPM DTQ-14J4FCGM/FCCM DTQ-20V1/V4/V5FCM DTQ-20V1/V4SCM DTQ-20P2/P3FCM/P2SCM DTQ-14V6NBM/NPM DTQ-14V1/V3/V5FSM DTQ-14V1/V3/V4/V5/V8/V9SSM DTQ-14U1FSM/SSM/20U1FSM/SSM DTQ-20P2SSM/15U5FSM DTQ-20V1/V3/V4FSM DTQ-20V1/V3/V4/V8/V9SSM	DTQ-14V1/V4/V5FSPM DTQ-14V1/V4/V5/U1SSPM DTQ-14V6NBPM/NPPM	DTQ-20V1/V4FSPM DTQ-20V1/V3/V4/U1SSPM DTQ-15U5SSPM	DTQ-14V1/V4SSF DTQ-20V1/V4SSF DTQ-14V4/20V4FCFM	REMARKS
TV STANDARD	NTSC-M					
POWER INPUT	AC 120V 60 Hz	AC 220V 50/60 Hz			AC60-180V(SSFM Series) AC90-250V(FCFM Series)	
POWER CONSUMPTION	14 = 55W 20 = 68W					
TUNING SYSTEM	Frequency Synthesizer ( FS ) Tuning System					
TUNING RANGES	VHF : 2 ~ 13 (12) UHF : 14 ~ 69 (56) CATV : 1 ~ 125 (125)					
SOUND OUTPUT	1.3 W (14/20U1 Series/20V8 Series 1.3W + 1.3W)					
SPEAKER	3 W 8 ohm					
ANTENNA INPUT IMPEDANCE	75 ohm Unbalanced					
AUXILIARY INPUT TERMINAL	Front : Video, Audio Rear : Video, Audio "P" Series Without Video, Audio					
INTERMEDIATE FREQUENCIES	Picture IF Carrier Frequency : 45.75 MHz Sound IF Carrier Frequency : 41.25 MHz Color Sub-Carrier Frequency : 3.579545 MHz					
REMOTE CONTROL	R-43A08					
SPECIAL FUNCTIONS	3-Language OSD With CAPTION Wake-up On/Off Time Sleep Timer Power Restore					

## BLOCK DIAGRAM

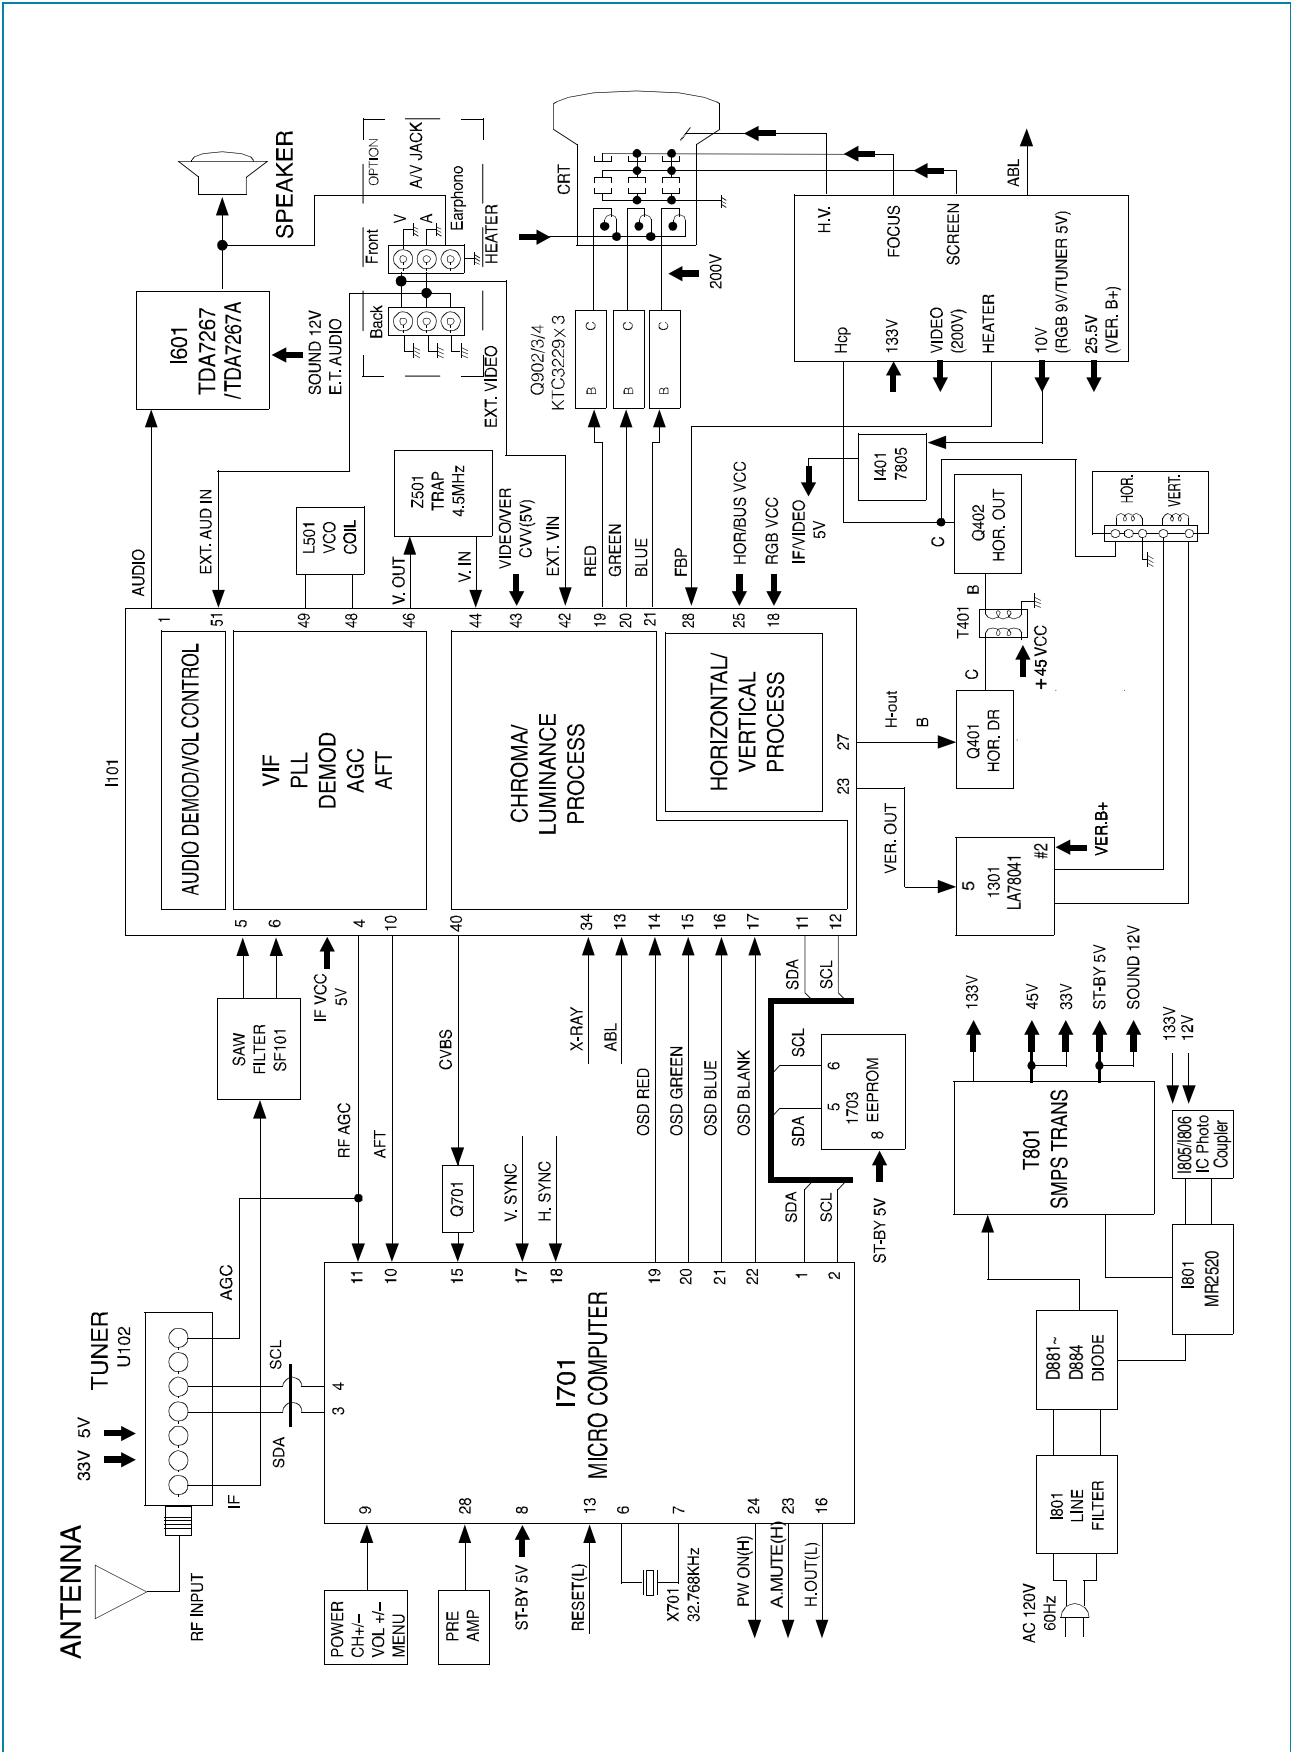

# ALIGNMENT INSTRUCTIONS

## 1. SERVICE MODE ADJUSTMENTS


Follow the steps below whenever service adjustment is required. See Table- A and Table- B to determine if service adjustments are required.

### 1) How to enter the service mode using the user remote control.

- Turn the set on.
- Direct the remote control to the reception window of TV.
- Push buttons of remote control in sequence as follows.

**1 ® MUTE ® DISPLAY ® MUTE**

- Then, the screen will appear as follows.

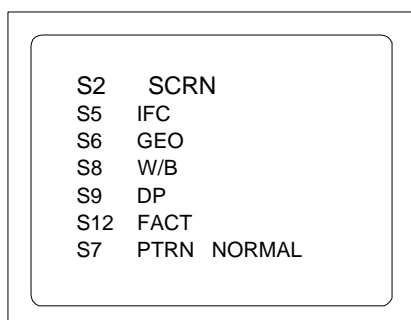

- Using the channel up or channel down button, select the item you wish to adjust.  
(The color of selected item turns into the red.)
- Press the volume up or down button to enter in the service mode you wish to adjust.

### 2) How to memorize the adjusted values in the service mode.

- Must press **DISPLAY** button the state which the screen is displaying each of service menus after all adjustments are completed each of all service menu.

**Table-A : Adjust the values of service mode when a part is replaced.**

PART REPLACED	ADJUSTMENT		NOTES								
	NECESSARY	UNNECESSARY									
I701 (U-COM)		O	Data is stored in I703.								
I101 (MAIN)		O									
I703 (EEPROM)	O		Initial setting values are written from I701. Adjusting Items <table><tr><td>S5</td><td>RFAGCD</td></tr><tr><td>S6</td><td>H.PHASE/V.POSI/V.SIZE</td></tr><tr><td>S8</td><td>RD/BD/RB/GB/BB</td></tr><tr><td>S9</td><td>Subbrightness</td></tr></table>	S5	RFAGCD	S6	H.PHASE/V.POSI/V.SIZE	S8	RD/BD/RB/GB/BB	S9	Subbrightness
S5	RFAGCD										
S6	H.PHASE/V.POSI/V.SIZE										
S8	RD/BD/RB/GB/BB										
S9	Subbrightness										
CRT	O		Adjust items related to picture tube only.(White Balance adjustment)								



## ALIGNMENT INSTRUCTIONS

Table-B

MODE	ADJUSTMENT ITEMS	DATA		REMARKS
		INITIAL	RANGE	
S2	Screen Adjustment	-	-	
S5	Auto RF AGC	-	-	
	Video Level (VIDEOL)	7	0 ~ 7	Must be set to 7
	RF AGC Delay (RFAGCD)	*	0 ~ 63	Align RF AGC threshold
	FM Level (FM.LEV)	8	0 ~ 31	Must be set to 30
	AGC Point	3.75	-	Select AGC reference voltage
	A/D VALUE	-	-	
S6	Horizontal Phase(H.PHASE)	*	0 ~ 31	Align sync to flyback pulse, using internal cross pattern(S7)
	Vertical Position (V.POSI)	*	0 ~ 63	Align vertical DC bias, using internal cross pattern(S7)
	Vertical Size (V.SIZE)	*	0 ~ 127	Align vertical amplitude, using internal cross pattern(S7)
	NO SD POWER OFF	YES	-	Automatically turn off in 15min for no received signal.
	Vertical S-Correction (V SC)	0	0 ~ 31	Must be set to 7
	Vertical Linearity (V LIN)	18	0 ~ 31	Must be set to 18
S7	Internal Black	-	-	Display internal BLACK pattern
	Internal 100% White	-	-	Display internal 100% WHITE
	Internal 60% White	-	-	Display internal 60% WHITE
	Internal Cross Pattern	-	-	Display internal CROSS pattern
S8	Red Drive (RD)	*	0 ~ 127	Align RED OUT AC level
	Green Drive (GD)	10	0 ~ 15	Must be set to 10
	Blue Drive (BD)	*	0 ~ 127	Align BLUE OUT AC level
	Red Bias (RB)	*	0 ~ 255	Align RED OUT DC level
	Green Bias (GB)	*	0 ~ 255	Align GREEN OUT DC level
	Blue Bias (BB)	*	0 ~ 255	Align BLUE OUT DC level
S9	Subbrightness	*	0 ~ 127	Align common RGB DC level
	Contrast	10	0 ~ 27	Must be set to 20
	Tint	27	0 ~ 77	Must be set to 32
	Color	15	0 ~ 47	Must be set to 32
	Sharp	30	0 ~ 30	Must be set to 20
S11	RGDEF	1	0,1	
	BGSLC	3	0~3	
	HBR	1	0~7	
	HBL	6	0~7	
	GYAng	1	0,1	
	CkOPE	1	0~7	
	WPL	0	0,1	
	PREADJ	0	0~3	
	Dcrest	3	0~3	
	BLKSTR	3	0~3	
	BLKGAN	3	0~3	
	Hout On	3	0~31	
	Hout of	3	0~31	
S12	Forwarding Mode	-		Factory Initialization

\* indicates the items with different settings each of sets

## 2. ASSEMBLY ADJUSTMENTS

### 1) SCREEN ADJUSTMENT (S2)

- Enter the service mode and select service adjustment S2.
- You can see the one horizontal line on the screen.
- Adjust the Screen Control Volume (located on FBT) so that the horizontal line onscreen may be disappeared.
- Press the volume up or down button to exit in the screen adjustment mode.

#### NOTE

IN THE SCREEN ADJUSTMENT MODE, DON'T PRESS OTHER BUTTONS EXCEPT VOLUME UP OR DOWN BUTTON.

### 2) FOCUS ADJUSTMENT

- Turn in a local station and adjust the Focus Control knob (located on FBT) for best picture details at high light condition.

### 3) RF AGC DELAY ADJUSTMENT (S5)

- Receive a good local channel.
- Enter the service mode and select service adjustment S5.
- You can see the OSD as shown in below.

IF	CONTROL	
AUTO	RFAGC	START
VIDEO L		7
RFAGCD		10
FM.LEV		30
AGC POINT		3.75
<div> <div></div> <div></div> <div>MOVE</div> <div></div> <div></div> <div>ADJUST</div> <div>RECALL : SET</div> </div>		


- Select RFAGCD item, press the volume up or down button until noise or beat in picture disappears.
- Press the DISPLAY button to memorize the data.

## ALIGNMENT INSTRUCTIONS


### 4) GEOMETRIC ADJUSTMENTS (S6)

- Enter the service mode and select service adjustment S7.
- Whenever you select the “S7” using the volume up or down button, the screen is changing like this.

NORMAL → BLACK → WHITE100 → WHITE60 → CROSS

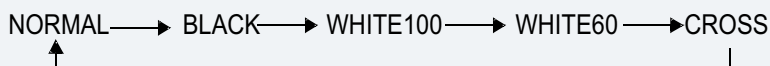

- Using the volume up or down button, select internal cross pattern.
- Select service adjustment S6
- You can see the OSD as shown in below.

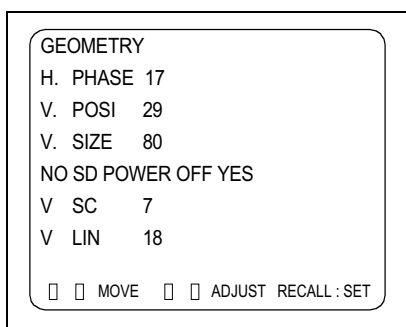

#### 4-1. Horizontal Position Adjustment


- Select H.PHASE item, adjust H.PHASE data value to obtain proper horizontal centering of the internal cross pattern at the left and right of the screen.

#### 4-2. Vertical Position Adjustment

- Select V.POSI item, adjust V.POSI data value to center the raster properly on the screen.


#### 4-3. Vertical Size Adjustment

- Select “V.SIZE” item, adjust “V.SIZE” data value to proper vertical size as follows.

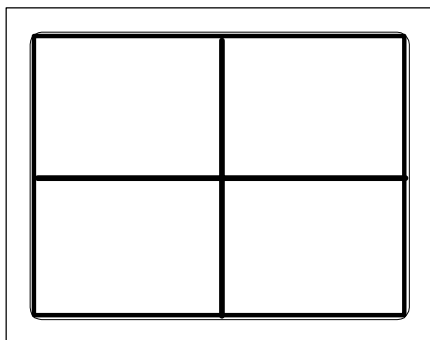

**5) WHITE BALANCE ADJUSTMENT(S8)**


- Receive a good local channel.
- Enter the service mode and select service adjustment S8.
- You can see the OSD as shown in below.

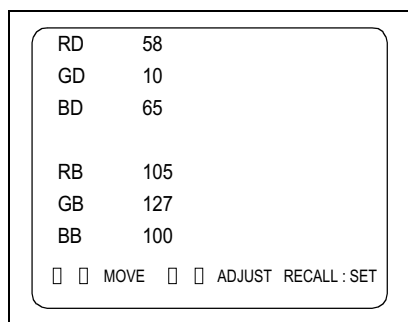

- Using volume up or volume down, adjust service adjustment data of RD/GD/BD and RB/GB/BB until a good gray scale with normal whites is obtained.
- Press the DISPLAY button to memorize the data.

**6) DIGITAL PRESET(D.P) ADJUSTMENTS(S9)****SUBBRIGHTNESS ADJUSTMENT**

- Receive a good local channel.
- Enter the service mode and select service adjustment S9.
- You can see the OSD as shown in below.

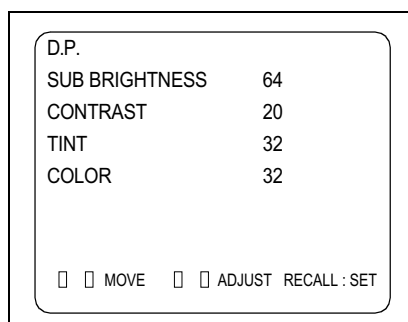

- Select Subbrightness item, adjust Subbrightness data value to obtain normal brightness level.
- Press the DISPLAY button to memorize the data.

**CONTRAST**

- Fixed value = 20

**TINT**

- Fixed value = 32

**COLOR**

- Fixed value = 32




**7) FACTORY OUTGOING MODE (S12 : FACT)**





- If you select the S12, then the set becomes factory outgoing status.
- You can see the OSD "outgoing OK"

### 3. PARENTAL CONTROL PASSWORD SETTINGS

If user forget Parental Control Password as follows.


#### 1) CHANGE THE PASSWORD.




- Turn the set on.
- Direct the remote control to the reception window of your TV/VCR
- Using the MENU buttons, select the Special menu.
- Using the the channel up (  ) or down (  ) buttons, select prental control.
- Using the volume up (  ), set the password Menu.
- Push buttons of remote control in sequence as follows.  
2 → 2 → 1 → 1
- Parental control password is reset.
- Using the 0-9 buttons, enter the password.
- Using the 0-9 buttons, repeat the password.

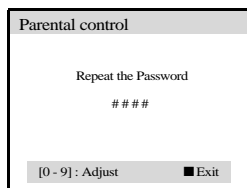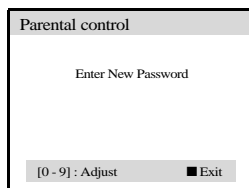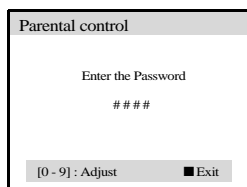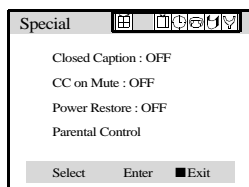

#### 2) RESET THE PASSWORD

- Turn the set on.
- Direct the remote control to the reception window of your TV/VCR.
- Push buttons of remote control in sequence as follows.  
1 → MUTE → DISPLAY → MUTE
- Then, the screen will appear as follows.

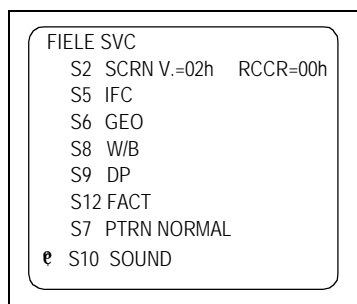

- Using the channel up (  ) or down (  ) buttons, select S12 FACT.  
Press the volume up (  ) button, the set becomes factory outgoing status.
- Parental control password is reset.
- Using the MENU buttons, select the parental control menu, set the new password.

# VOLTAGE CHART

LOC	PIN	MODE		LOC	PIN	MODE	
		ON	OFF			ON	OFF
I501	1	2.17	0		44	2.63	0
	2	1.95	0		45	2.39	0
	3	2.7	0		46	2.16	0
	4	2.39	0.49		47	3.62	0
	5	2.86	0		48	4.23	0.51
	6	2.86	0		49	4.23	0.51
	7	0	0		50	2.3	0
	8	4.87	0.57		51	2.19	0.65
	9	1.76	0		52	1.99	0.32
	10	2.46	0.28		53	2.39	0
	11	4.9	4.93		54	3.08	0.3
	12	4.86	4.92	LOC	PIN	MODE	
	13	3.59	0			ON	OFF
	14	1.38	0	I301	1	2.21	0
	15	1.39	0		2	25.7	0
	16	1.39	0		3	2.27	3.63
	17	0	0		4	0	0
	18	8.11	0.235		5	13.65	0
	19	2.61	0.232		6	26.2	0.43
	20	2.57	0		7	2.21	0
	21	2.71	0	LOC	PIN	MODE	
	22	NC	NC			ON	OFF
	23	2.27	0	I401	1	7.66	0
	24	2.59	0		2	0	0
	25	5.12	4.23		3	4.95	0.6
	26	2.62	2.2	LOC	PIN	MODE	
	27	0.94	0.16			ON	OFF
	28	0.86	1.37	I601	1	12.09	7.19
	29	1.69	1.4		2	6.2	0
	30	4.96	0.706		3	6.5	0
	31	0	0		4	0.824	0
	32	2.73	0.31		5	0	0
	33	0	0		6	0	0
	34	0	0		7	0	0
	35	2.37	0		8	0	0
	36	3.38	0		9	0	0
	37	1.72	0		10	0	0
	38	2.77	0.35		11	0	0
	39	5.09	0		12	0	0
	40	2.12	0		13	0	0
	41	0	0		14	0	0
	42	2.45	0		15	0	0
	43	4.84	0.5		16	0	0

## VOLTAGE CHART

LOC	PIN	MODE		LOC	PIN	MODE	
		ON	OFF			ON	OFF
I701	1	4.86	4.96	I703	1	0	0
	2	4.81	4.94		2	0	0
	3	5.03	4.97		3	0	0
	4	5.03	4.97		4	0	0
	5	0	0		5	4.91	4.94
	6	1.9	1.87		6	4.86	4.92
	7	2.71	2.67		7	0	0
	8	4.99	4.91		8	5.01	4.95
	9	5.04	4.95	LOC	PIN	MODE	
	10	0	0			ON	OFF
	11	2.28	0	I801	1	2.47	0
	12	0	4.88		2	2.33	1.33
	13	4.93	4.87		3	0	0
	14	3.71	3.64		4	18.28	9.19
	15	2.66	2.44		5	137.2	145
	16	0	4.88		6	0.067	0
	17	4.96	0.71		7	137.2	145
	18	4.07	4.95				
	19	0	0				
	20	0	0				
	21	0	0				
	22	0	0				
	23	4.84	4.56				
	24	0	0				
	25	0	0				
	26	0	0				
	27	0	0.22				
	28	5.03	4.93				
	29	4.8	4.7				
	30	5.05	4.95				
	31	0	4.88				
	32	5.05	4.95				
	33	0	0				
	34	0	0				
	35	0	0				
	36	0	0				


## VOLTAGE CHART

LOC	PIN	MODE		LOC	PIN	MODE	
		ON	OFF			ON	OFF
Q201	C	5.03	4.95	Q703	C	5.04	4.17
	E	3.29	3.26		E	0.44	0
	B	2.51	2.47		B	1.06	0
Q401	C	-3.63	35.55	Q704	C	5	4.92
	E	0	0		E	4.97	4.89
	B	0.35	0		B	4.35	4.28
Q402	C	130.2	102.3	Q707	C	5.05	4.98
	E	0	0		E	0.18	4.19
	B	0	0		B	0.06	4.89
Q404	C	10.23	0	Q804	C	0	0
	E	0	0		E	132.6	102.2
	B	0	0		B	132.2	102.2
Q501	C	0	0	Q805	C	12.12	7.19
	E	3.59	0		E	5.03	4.96
	B	4.53	0		B	5.63	5.59
Q575	C	-0.1	0	Q806	C	5.13	0
	E	10	0		E	5.05	4.98
	B	10.22	0		B	4.46	5.45
Q653	C	6.52	0	Q871	C	12.09	0.03
	E	0	0		E	0	0
	B	0	0.71		B	0.04	0.7
Q701	C	4.07	4.96	Q873	C	0.04	5.45
	E	0	0		E	0	0
	B	0	0		B	0.68	0




# WAVEFORMS


(1) I101 PIN 19

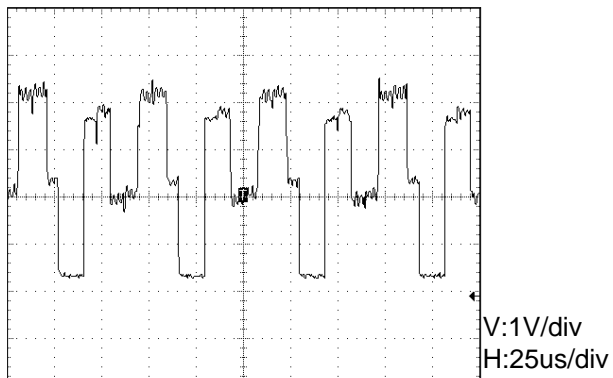


(2) I101 PIN 20

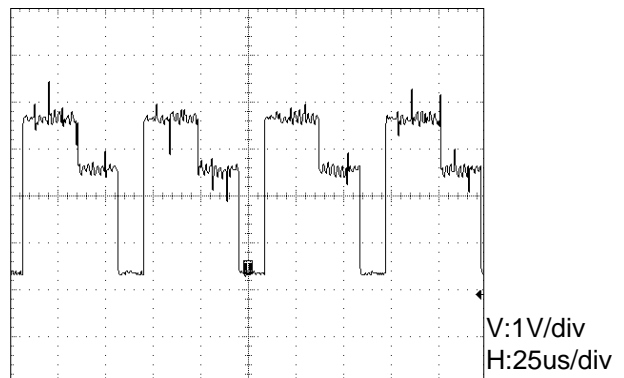


(3) I101 PIN 21

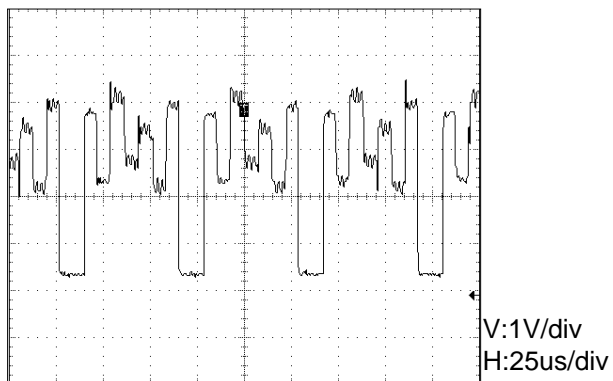


(4) I101 PIN 23

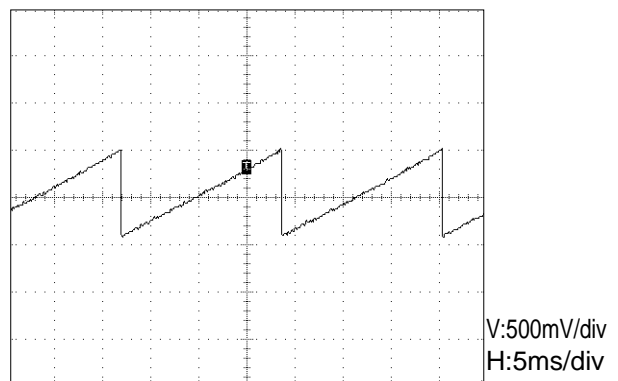


(5) I101 PIN 40

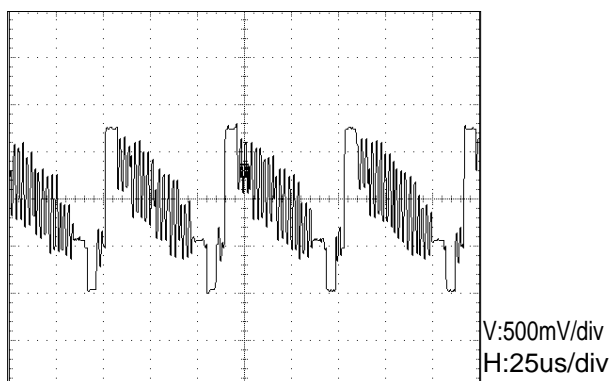


(6) I101 PIN 44

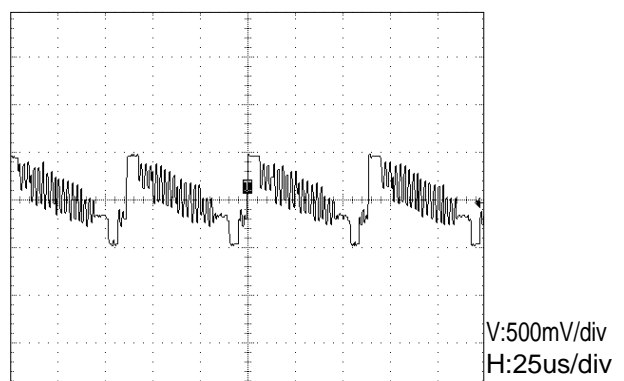


(7) I101 PIN 46

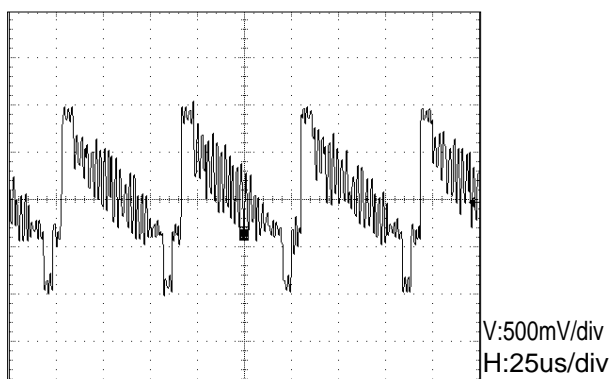


(8) I101 PIN 6

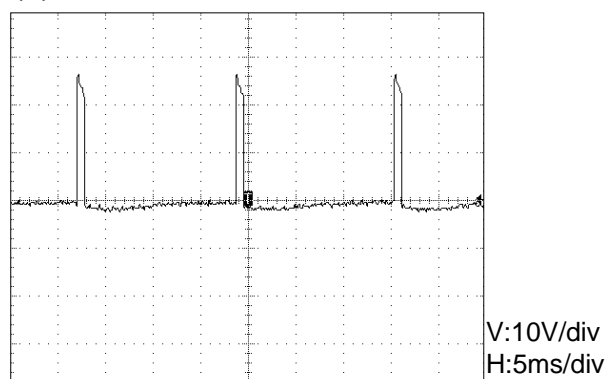


(9) I701 PIN 7

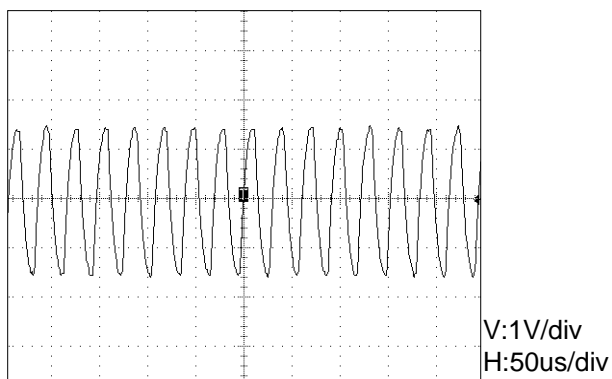


(10) I101 PIN 17

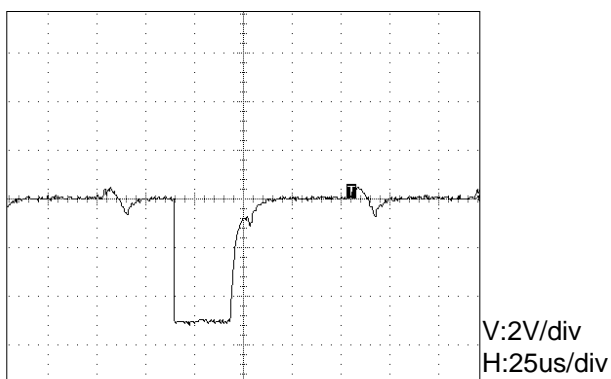


(11) I701 PIN 18

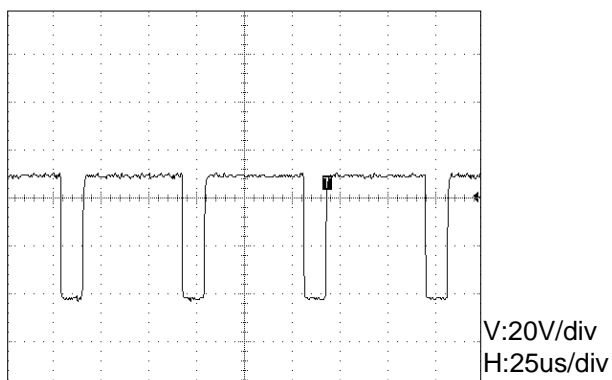


(12) I801 PIN 7

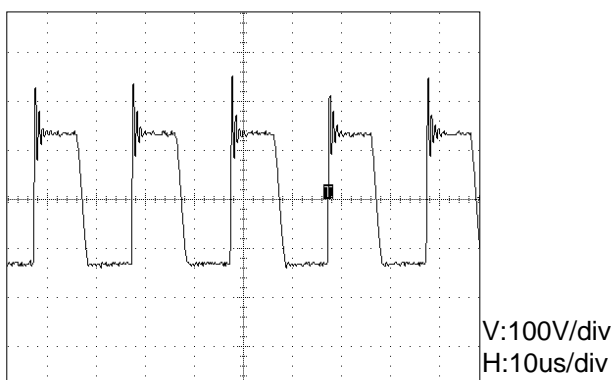


(13) T402 PIN 25.5V

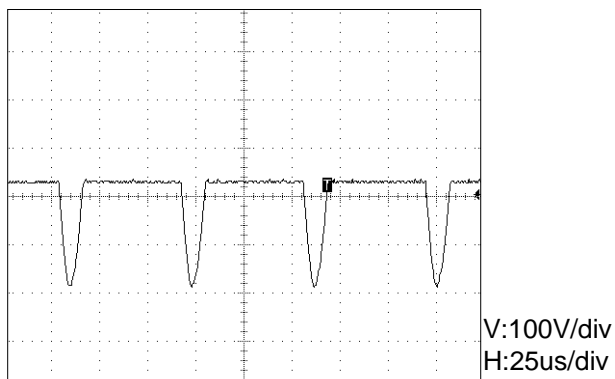


(14) T402 PIN 10.5V

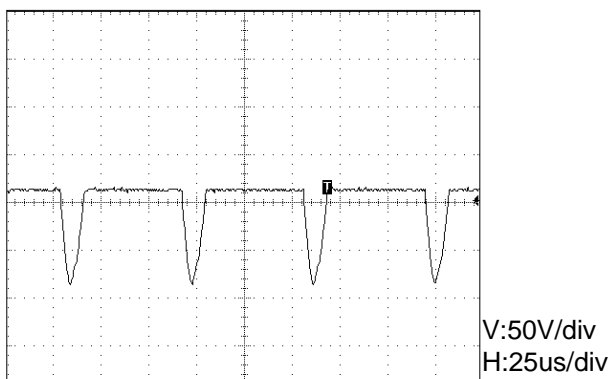

(15) T402 PIN HEATER

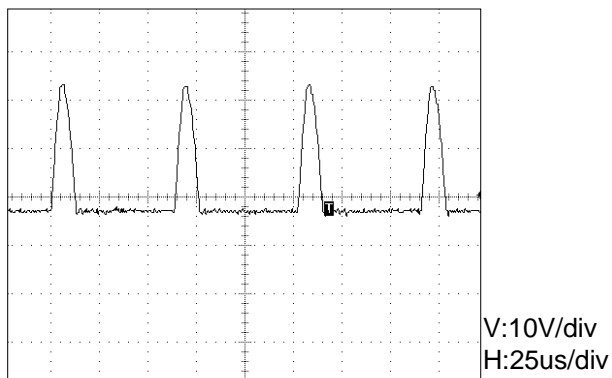


(16) T402 PIN 200V

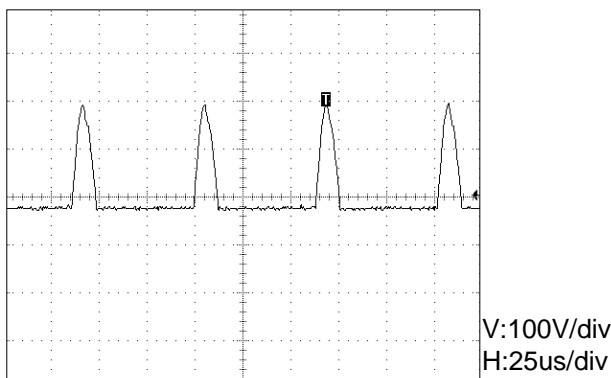


## WAVEFORMS


(17) T401 PIN H.V

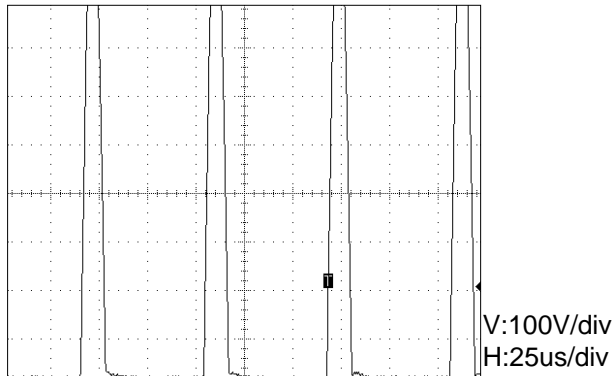


(18) T801 PIN 133V

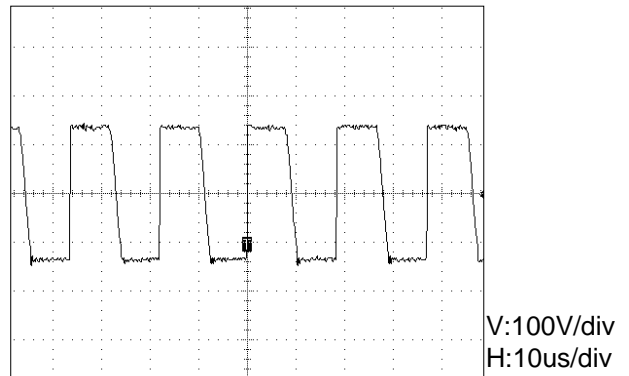


(19) Q401 COLLECTOR

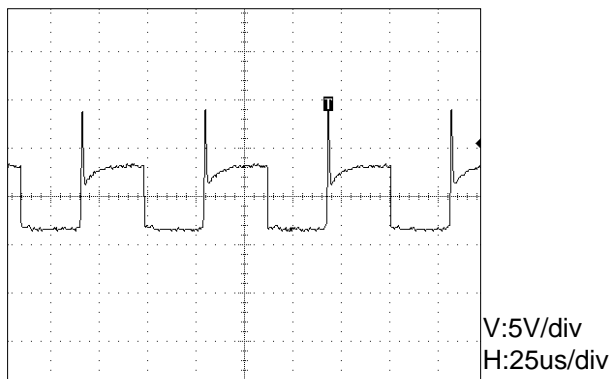


(20) CRT SOCKET PIN B

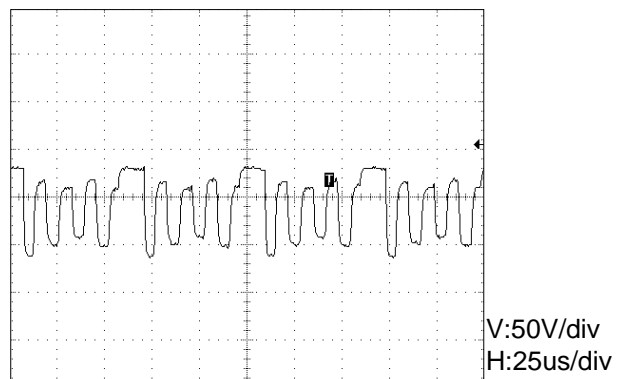

(21) CRT SOCKET PIN R

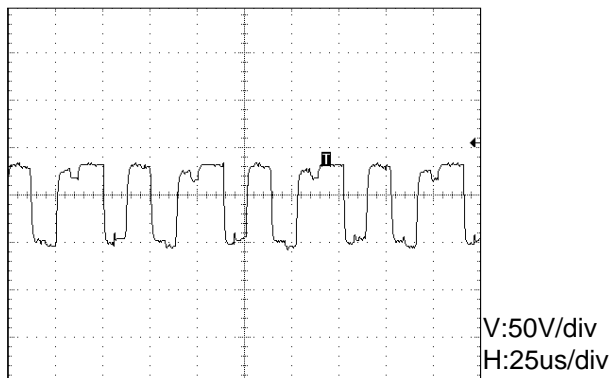

(22) CRT SOCKET PIN G

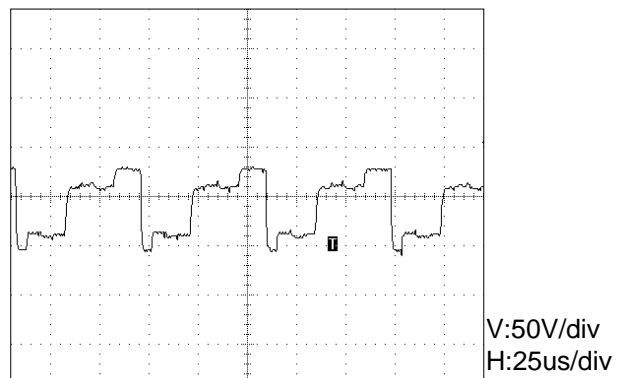


# SCHEMATIC DIAGRAM

## CN-001M SCHEMATIC DIAGRAM CN-001K (Korea)

2002.05.16.

I: KOREA (NTSC)  
 II: JAPAN (NTSC)  
 III: TAIWAN (NTSC)  
 IV: PHILIPPINES (NTSC)  
 V: USA / CANADA / MEXICO (NTSC)  
 VI: BRAZIL / ARGENTINA (PAL M/N)  
 VII: CHILE / PERU / PANAMA (NTSC)  
 VIII: VENEZUELA / COLOMBIA (NTSC)

NORTH AMERICA  
 SOUTH AMERICA  
 MIDDLE AMERICA

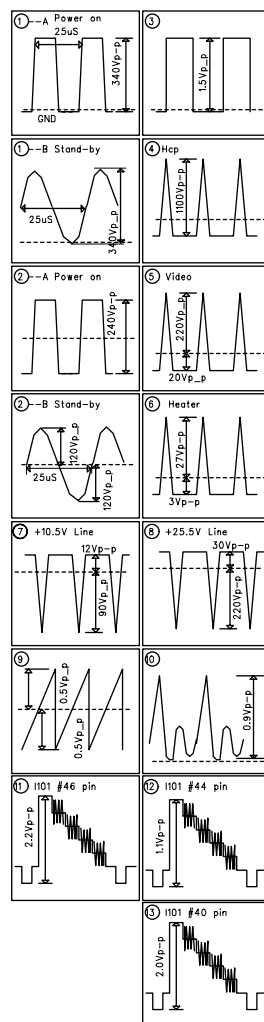

**1. CAUTION**

SYMBOL WARNED PARTS IN THE SCHEMATIC DIAGRAM DESIGNATE THE COMPONENTS WHICH HAVE SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY AND SHOULD BE REPLACED ONLY WITH TYPES IDENTICAL TO THOSE IN ORIGINAL CIRCUIT OR SPECIFIED IN THE PARTS LIST.

DO NOT DEGRADE THE SAFETY OF THE RECEIVER THROUGH IMPROPER SERVICING.

### WARNING :


BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION" "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" IN THE SERVICE MANUAL.

### CAUTION TO THE SERVICE TECHNICIANS :

BEFORE RETURNING THE RECEIVER TO THE CUSTOMER, APPROPRIATE LEAKAGE CURRENT OR RESISTANCE MEASUREMENT SHOULD BE CONDUCTED TO DETERMINE THAT EXPOSED PARTS ARE PROPERLY INSULATED FROM THE SUPPLY CIRCUIT.

### NOTE :


- RESISTANCE IS SHOWN IN OHMS. K=1,000 M=1,000,000
- UNLESS OTHERWISE NOTED IN SCHEMATIC ALL CAPACITOR VALUES LESS THAN 1 ARE EXPRESSED IN P.F. AND THE VALUES MORE THAN 1 IN μF.
- VOLTAGES READ WITH "V.I.V.M" FROM POINT INDICATE TO CHASSIS GROUND USING A COLOR BAR SIGNAL WITH ALL CONTROLS AT NORMAL LINE VOLTAGE 100 VOLTS AC. VOLTAGE READINGS SHOWN ARE NORMAL VALUES AND MAY VARY +20% EXCEPT HV.
- IN CASE OF 10" RECEIVER THE COMPONENT WITH THE MARK \* SHOULD BE USED ONLY.
- THE CIRCUIT DIAGRAM IS A STANDARD ONE. CIRCUITS PRINTED MAY BE SUBJECT TO CHANGE FOR PRODUCT IMPROVEMENT WITHOUT PRIOR NOTICE.

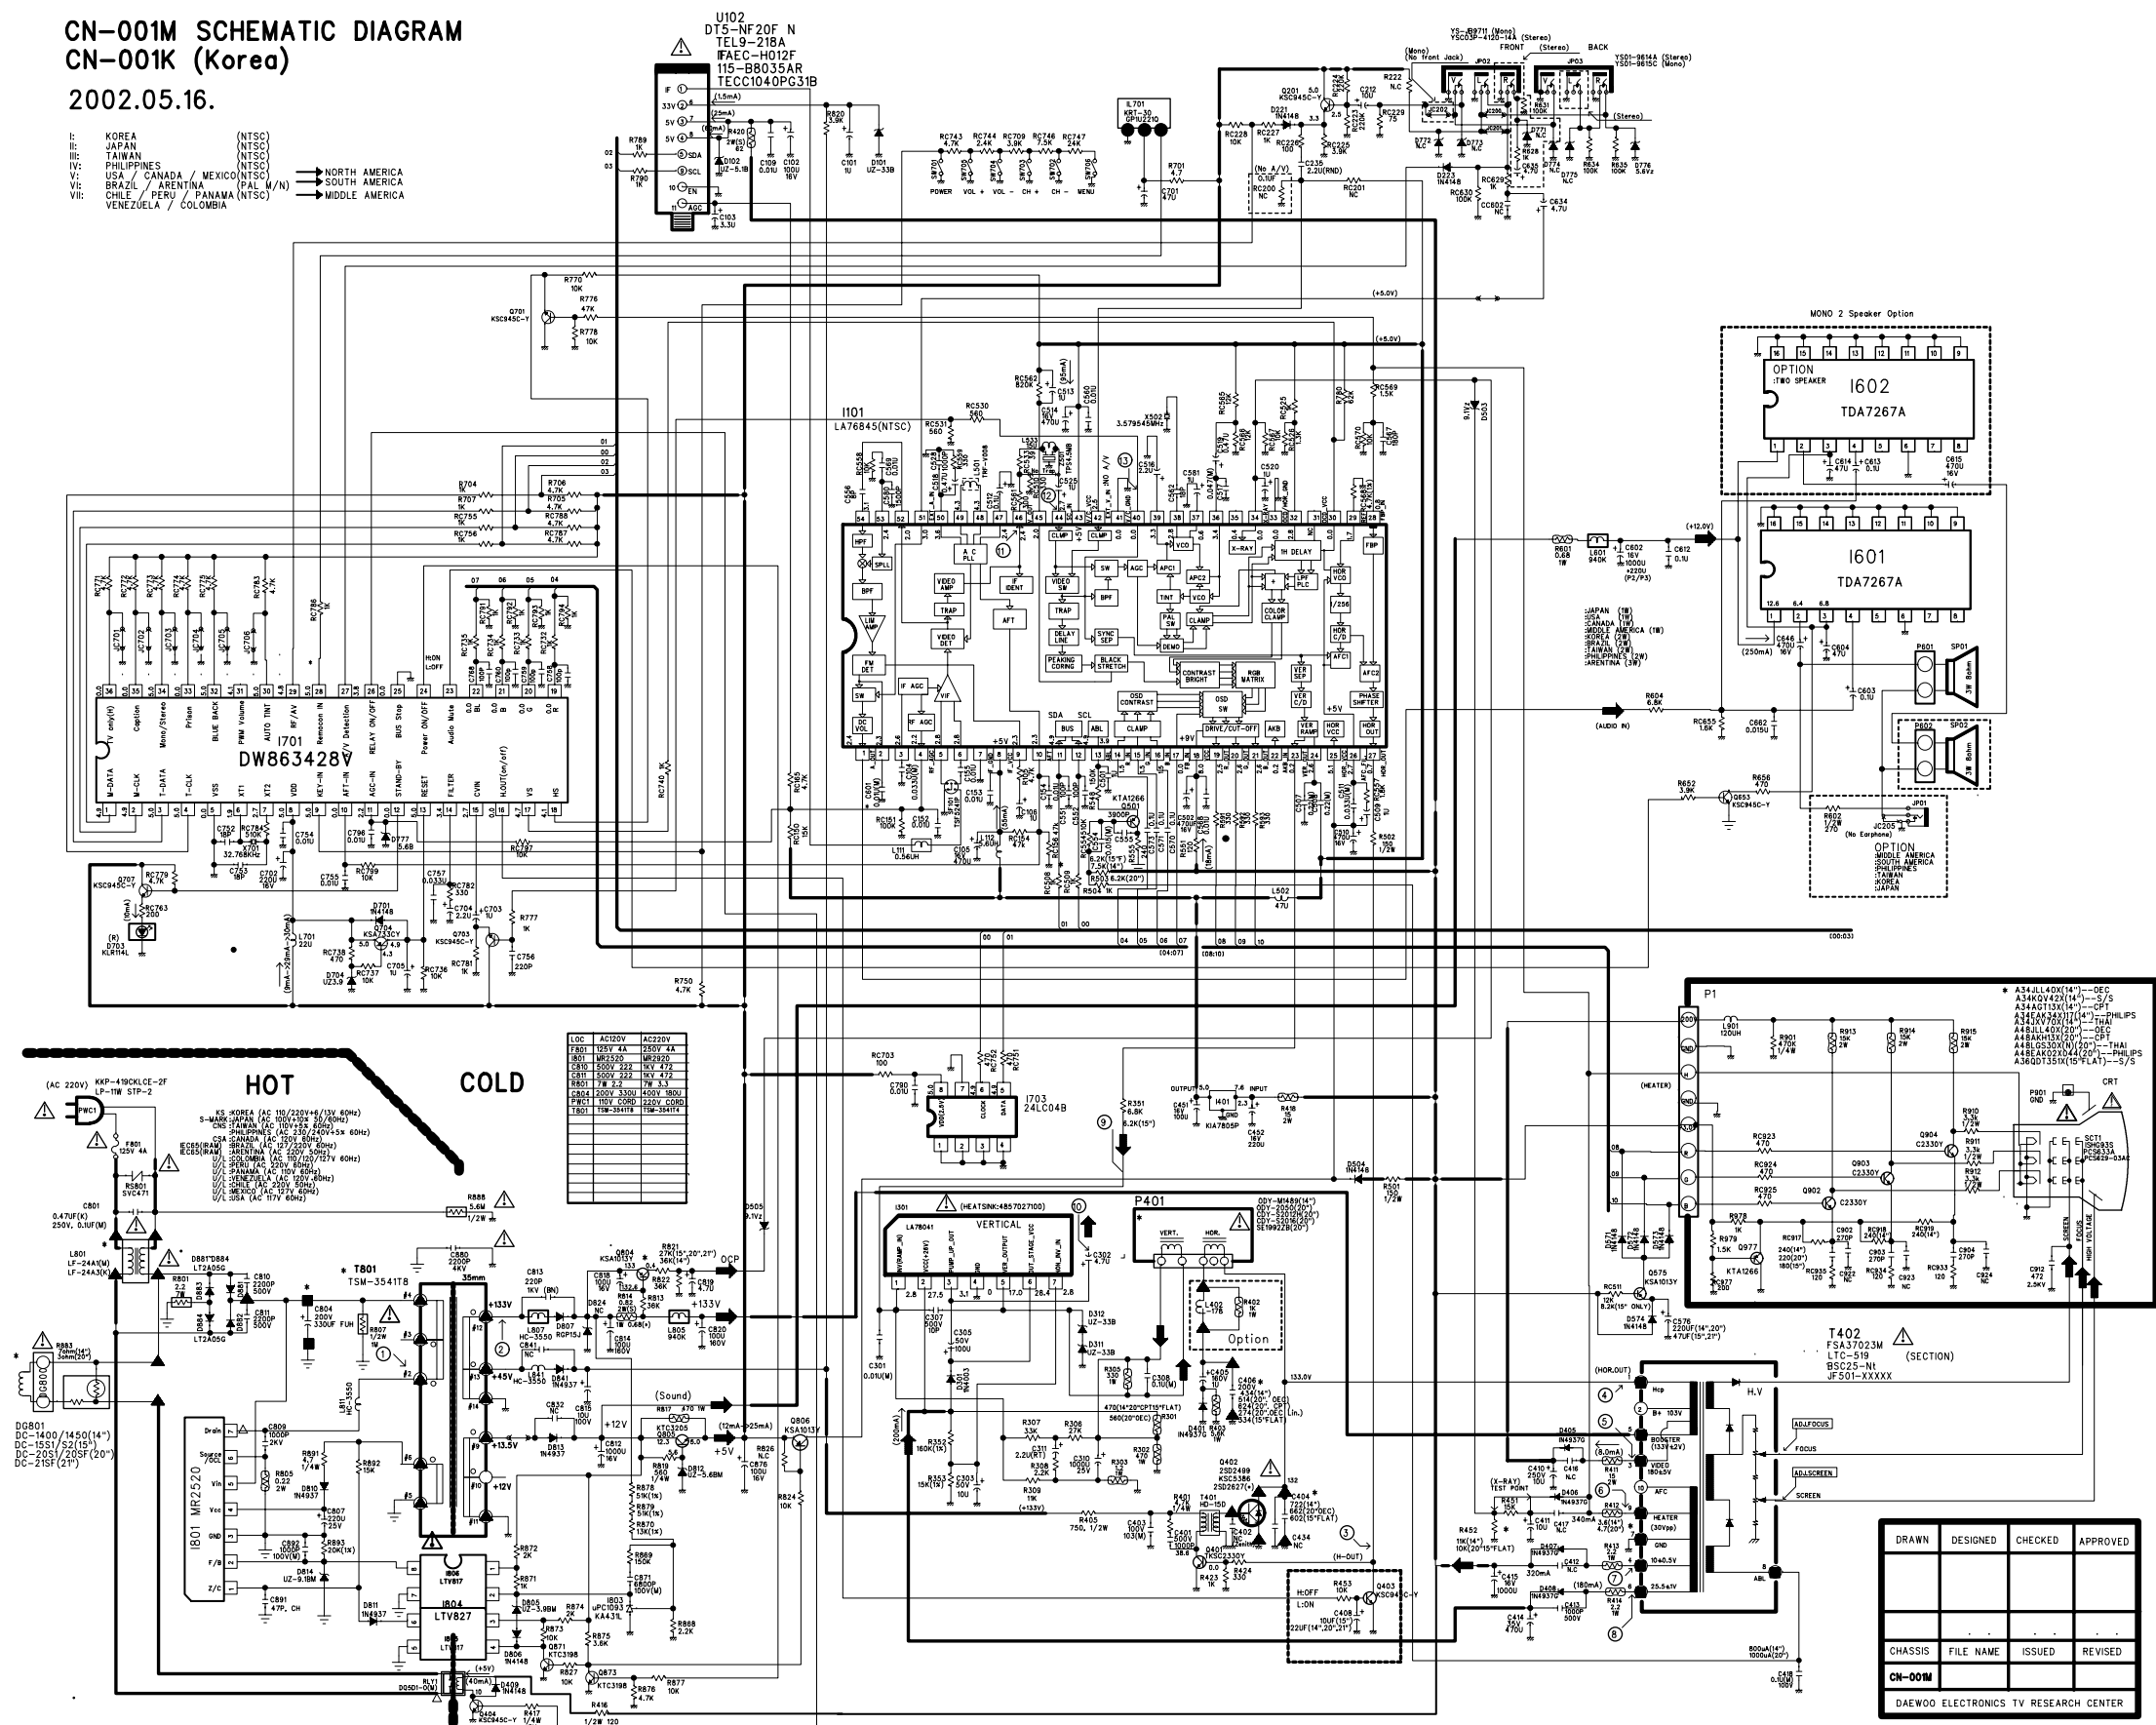

DRAWN	DESIGNED	CHECKED	APPROVED
CHASSIS	FILE NAME	ISSUED	REVISED
CN-001M			
DAEWOO ELECTRONICS TV RESEARCH CENTER			


# EXPLODED VIEW

## 1. DTQ-14V1FSM

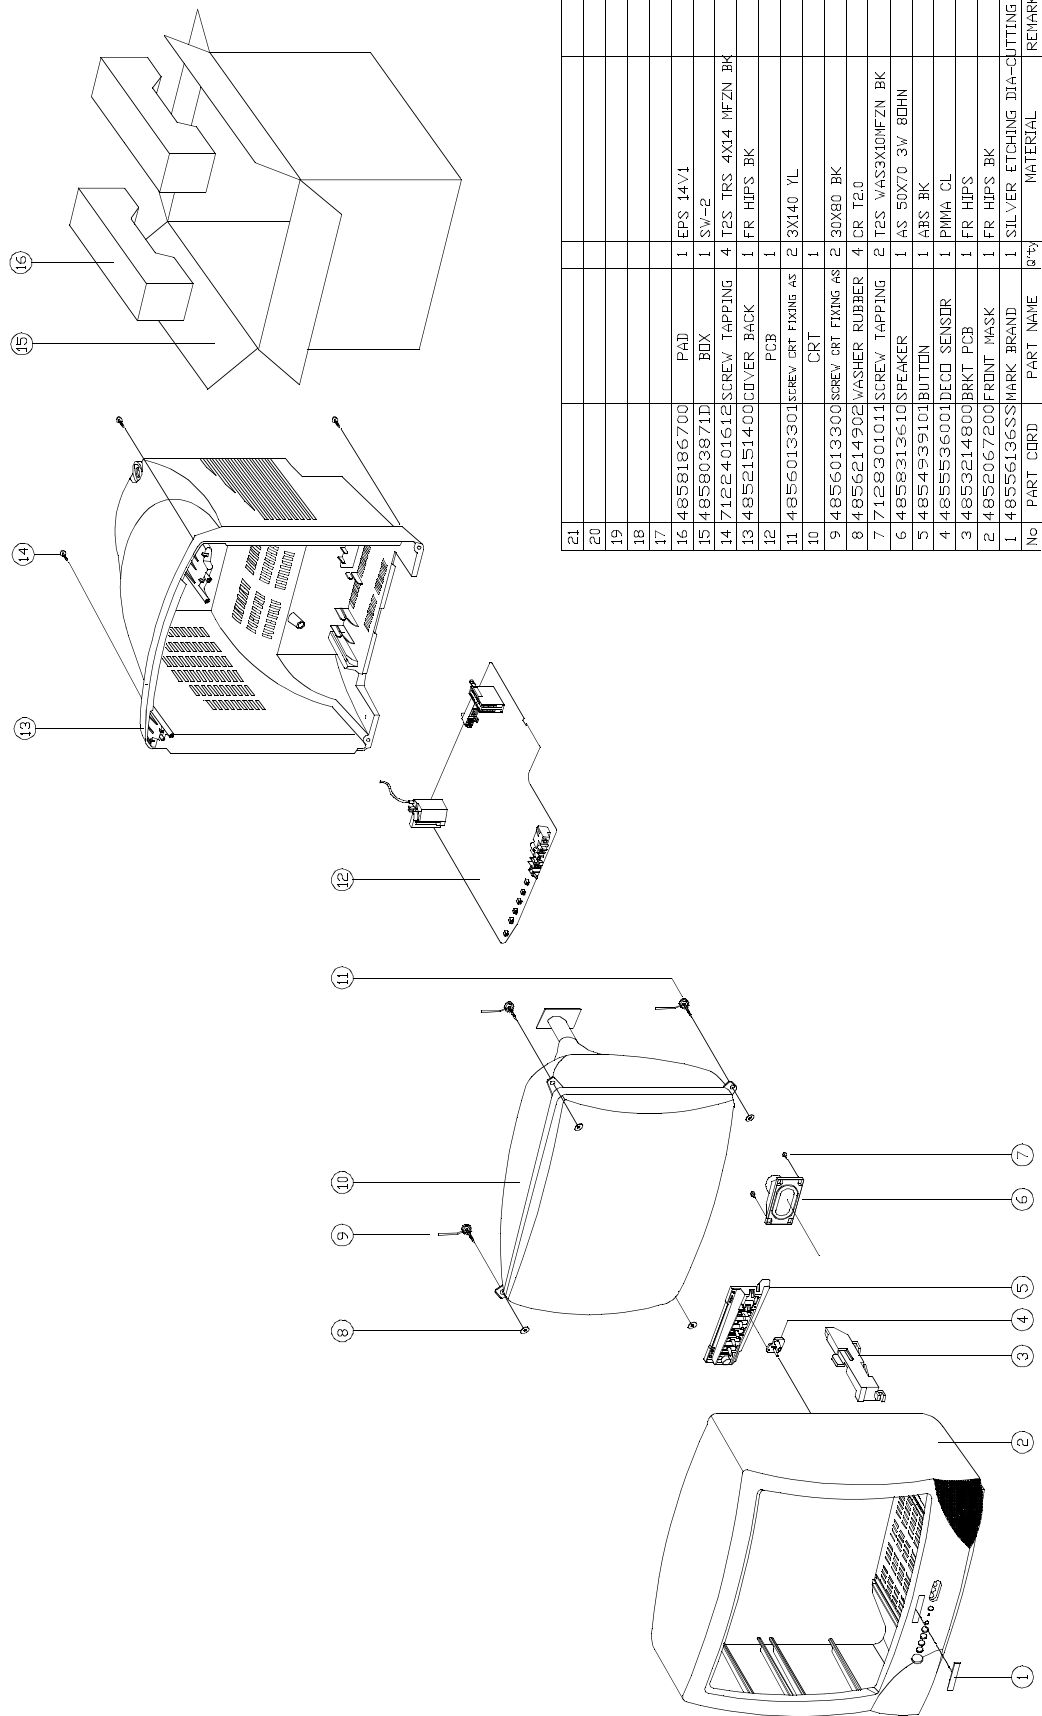


No	PART CORD	PART NAME	Q'ty	MATERIAL	REMARKS
21					
20					
19					
18					
17					
16	4858186700	PAD	1	EPS 14V1	
15	485803871D	BOX	1	SW-2	
14	7122401612	SCREW TAPPING	4	T2S TRS 4X14 MFZN BK	
13	4852151400	COVER BACK	1	FR HIPS BK	
12		PCB	1		
11	4856013301	SCREW CRT FIXING AS	2	3X140 YL	
10		CRT	1		
9	4856013300	SCREW CRT FIXING AS	2	30X80 BK	
8	4856214902	WASHER RUBBER	4	CR T20	
7	7128301011	SCREW TAPPING	2	T2S WAS3X10MFZN BK	
6	4858313610	SPEAKER	1	AS 50X70 3W 8OHM	
5	4854939101	BUTTON	1	ABS BK	
4	4855536001	DECO SENSOR	1	PMMA CL	
3	4853214800	BRKT PCB	1	FR HIPS	
2	4852067200	FRONT MASK	1	FR HIPS BK	
1	4855613655	MARK BRAND	1	SILVER ETCHING DIA-CUTTING	

## 2. DTQ-14V3FSM

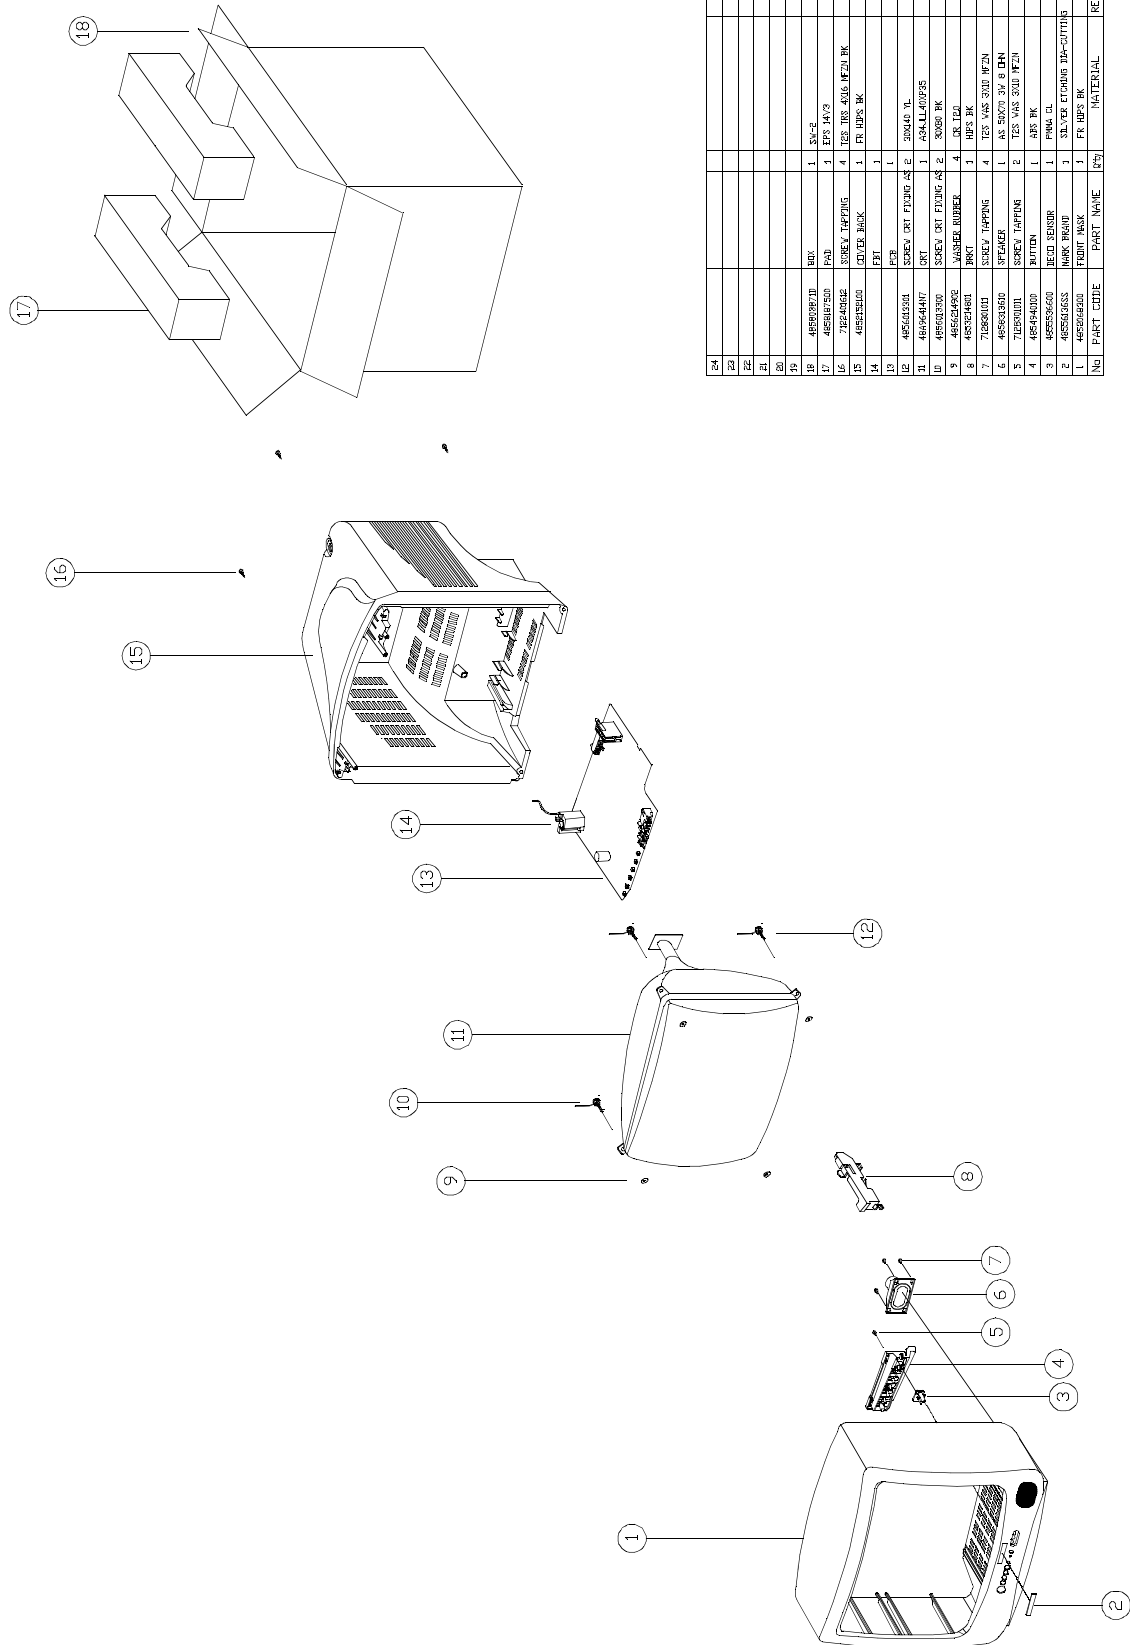


EXPLODED VIEW

3. DTQ-14V5FCM / FSM

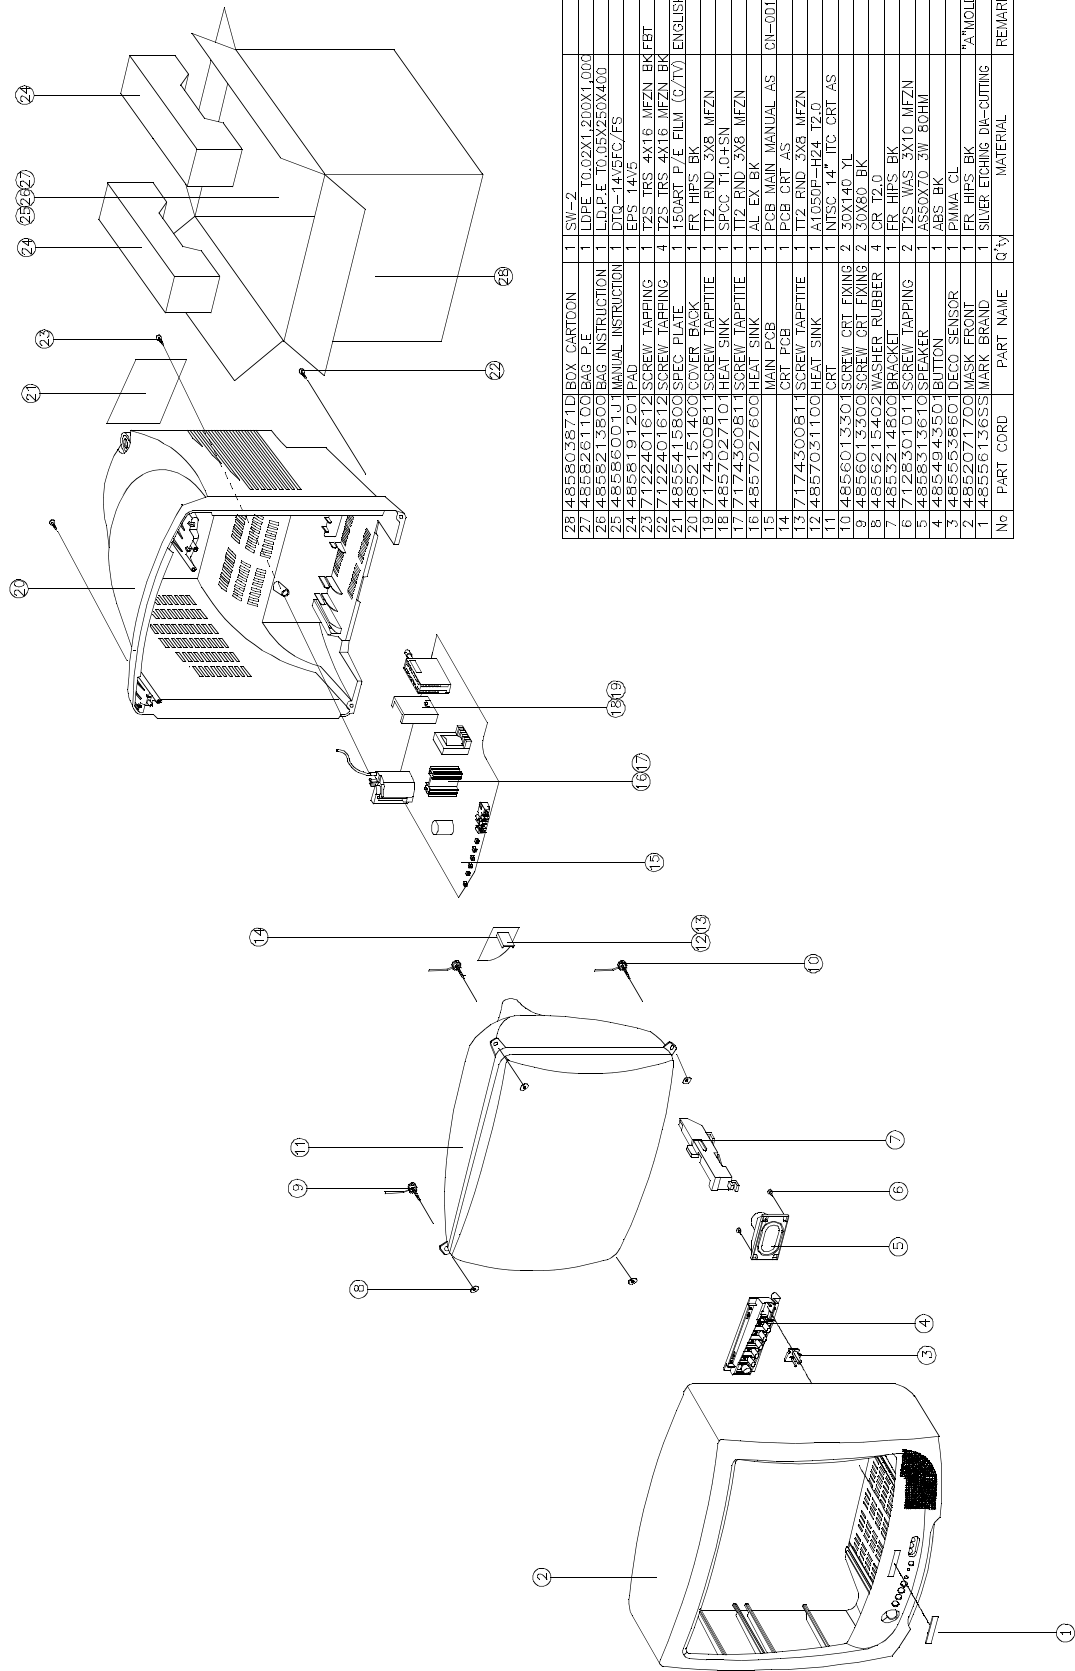


28	48580387	1	BOX	CARTON	1	SW-2
27	48582611	1	TOO	BAG	1	LDPE T0.02X1.200X1.00G
26	48582611	1	TOO	BAG	1	LDPE T0.05X250X400
25	48586001	1	J	MANUAL	1	DTQ-14V5FC/FS
24	48581912	1	PA		1	EPS 14/5
23	71224016	1	2	SCREW	4	T2S TRS 4X16 MFZN BK/FET
22	71224016	1	2	SCREW	4	T2S TRS 4X16 MFZN BK
21	48554158	1	COVER	BACK	1	FR HIPS BK
20	48521514	1	COVER	BACK	1	FR HIPS BK
19	71743008	1	SCREW	TAP/TITE	1	IT2 RND 3X8 MFZN
18	48570271	1	HEAT	SINK	1	SPCC T1.0+SN
17	71743008	1	SCREW	TAP/TITE	1	IT2 RND 3X8 MFZN
16	48570276	1	HEAT	SINK	1	AL EX BK
15		1	MAIN	PCB	1	PCB MAIN MANUAL AS CN-001A
14		1	CRT	PCB	1	PCB CRT AS
13	71743008	1	SCREW	TAP/TITE	1	IT2 RND 3X8 MFZN
12	48570511	1	TOO	HEAT	1	AT050P-H24 T2.0
11	48560134	1	TOO	CRT	1	NTSC 14" ITC CRT AS
10	48560134	1	TOO	CRT	2	30X146 TL
9	48560134	1	TOO	CRT	2	30X146 TL
8	48560154	1	TOO	CRT	2	30X146 TL
7	48532148	1	TOO	CRT	2	30X146 TL
6	71283010	1	TOO	CRT	2	30X146 TL
5	48583136	1	TOO	CRT	2	30X146 TL
4	48549435	1	TOO	CRT	2	30X146 TL
3	48555386	1	TOO	CRT	2	30X146 TL
2	48520717	1	TOO	CRT	2	30X146 TL
1	48556136	1	TOO	CRT	2	30X146 TL
N6 PART CORD					QTY	REMARKS
PART NAME					MATERIAL	
QTY						
REMARKS						

## 4. DTQ-14U1FSM

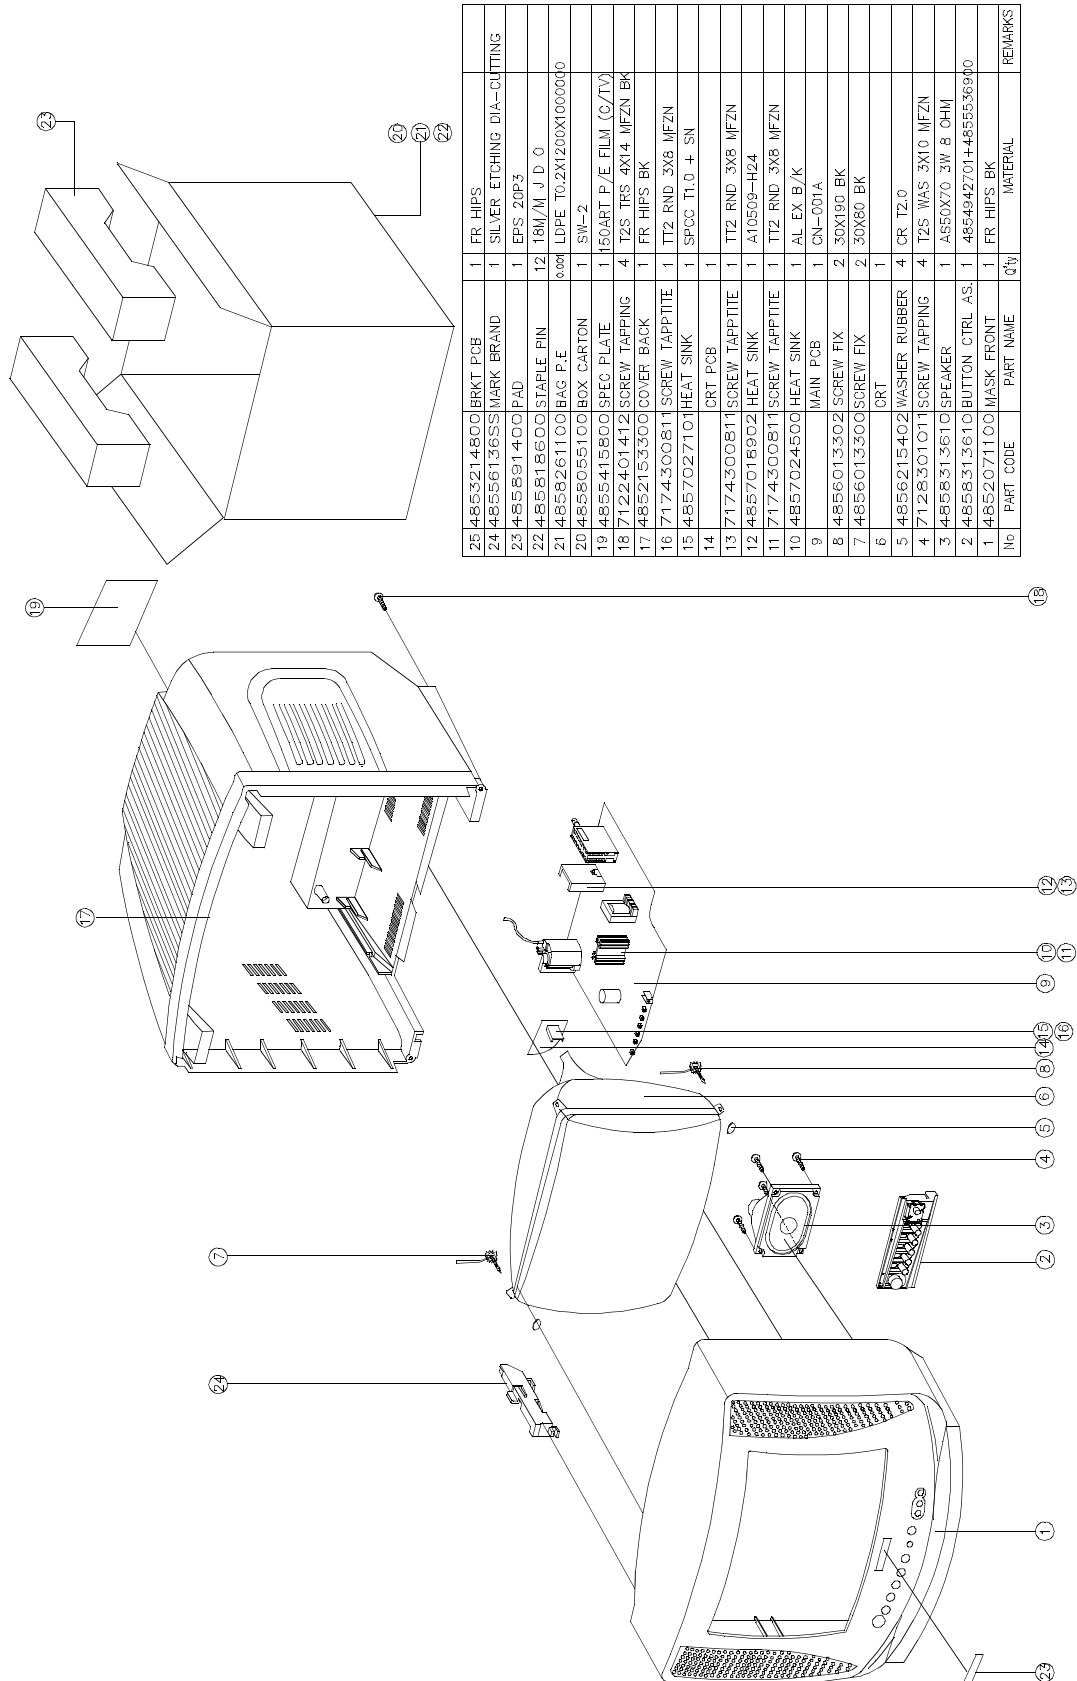




5. DTQ-20V1FSM

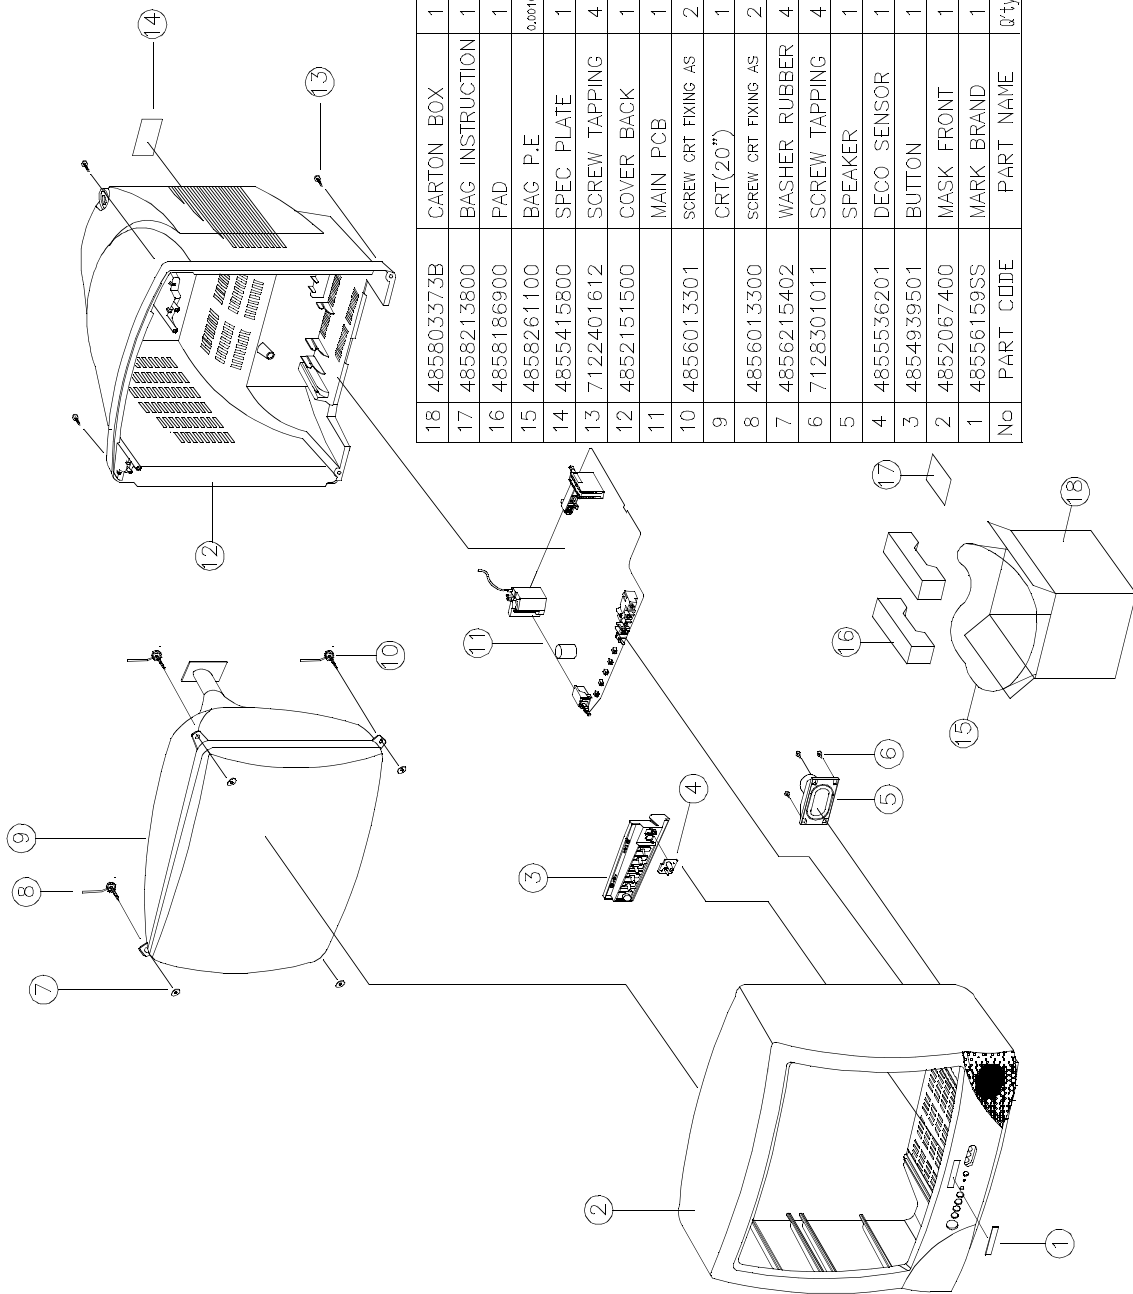

18	485803373B	CARTON BOX	1	DW-3A	
17	4858213800	BAG INSTRUCTION	1	LDPE T0.05X250X400	
16	4858186900	PAD	1	EPS 20V1	
15	4858261100	BAG P.E	0.0000	LDPE T0.02X1200X1000000	
14	4855415800	SPEC PLATE	1	150 ART P/E FILM(C/TV)	
13	7122401612	SCREW TAPPING	4	T2S TRS 4X16 MFZN BK	
12	4852151500	COVER BACK	1	FR HIPS BK	
11		MAIN PCB	1	CN-001A	
10	4856013301	SCREW CRT FIXING AS	2	30X140YL	
9		CRT(20")	1		
8	4856013300	SCREW CRT FIXING AS	2	30X80BK	
7	4856215402	WASHER RUBBER	4	CR T2.1	
6	7128301011	SCREW TAPPING	4	T2S WAS 3X10 MFZN	
5		SPEAKER	1		
4	4855536201	DECO SENSOR	1	PMMA CL	
3	4854939501	BUTTON	1	ABS BK	
2	4852067400	MASK FRONT	1	FR HIPS BK	
1	48556159SS	MARK BRAND	1	SILVER ETCHING DIA-CUTTING	
No	PART CODE	PART NAME	Qty	MATERIAL	REMARKS

6. DTQ-20V3FSM

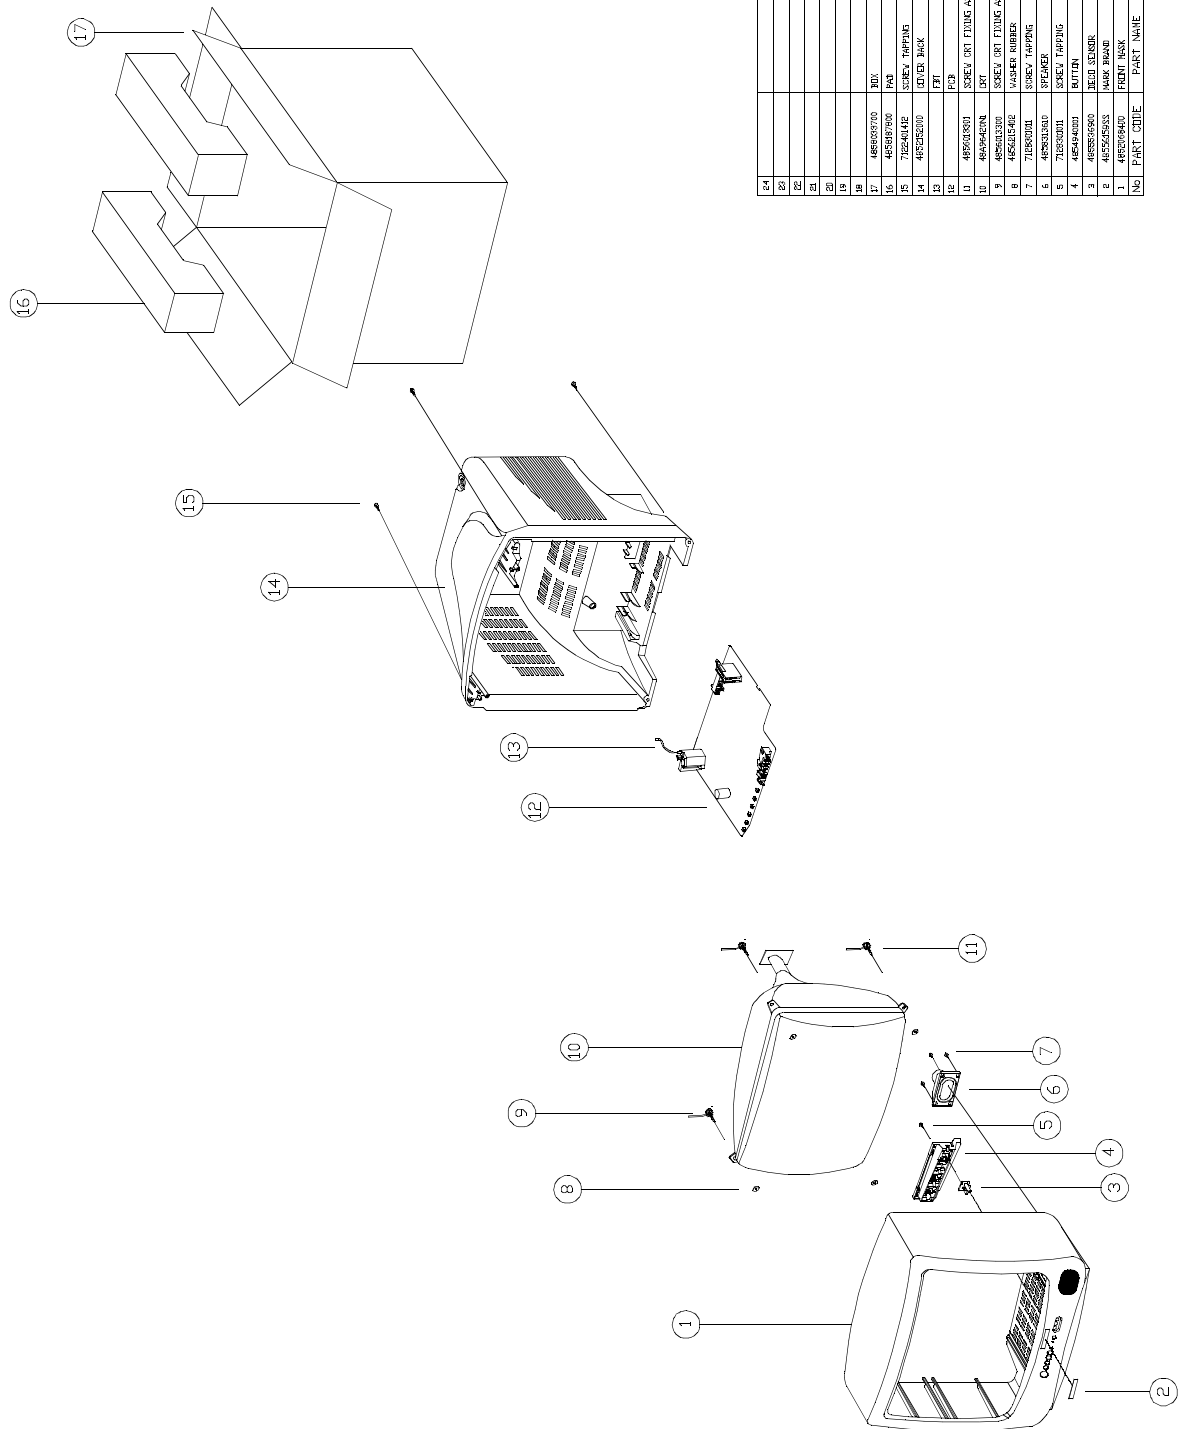


NO.	PART CODE	PART NAME	QTY	MATERIAL	REMARKS
1	46R000400	FRONT MASK	1	FR. HIPS BK	
2	46R000400	FRONT MASK	1	FR. HIPS BK	
3	46R000400	FRONT MASK	1	FR. HIPS BK	
4	46R000400	FRONT MASK	1	FR. HIPS BK	
5	46R000400	FRONT MASK	1	FR. HIPS BK	
6	46R000400	FRONT MASK	1	FR. HIPS BK	
7	46R000400	FRONT MASK	1	FR. HIPS BK	
8	46R000400	FRONT MASK	1	FR. HIPS BK	
9	46R000400	FRONT MASK	1	FR. HIPS BK	
10	46R000400	FRONT MASK	1	FR. HIPS BK	
11	46R000400	FRONT MASK	1	FR. HIPS BK	
12	46R000400	FRONT MASK	1	FR. HIPS BK	
13	46R000400	FRONT MASK	1	FR. HIPS BK	
14	46R000400	FRONT MASK	1	FR. HIPS BK	
15	46R000400	FRONT MASK	1	FR. HIPS BK	
16	46R000400	FRONT MASK	1	FR. HIPS BK	
17	46R000400	FRONT MASK	1	FR. HIPS BK	

## 7. DTQ-20V4FSM



## 8. DTQ-20U1FSM

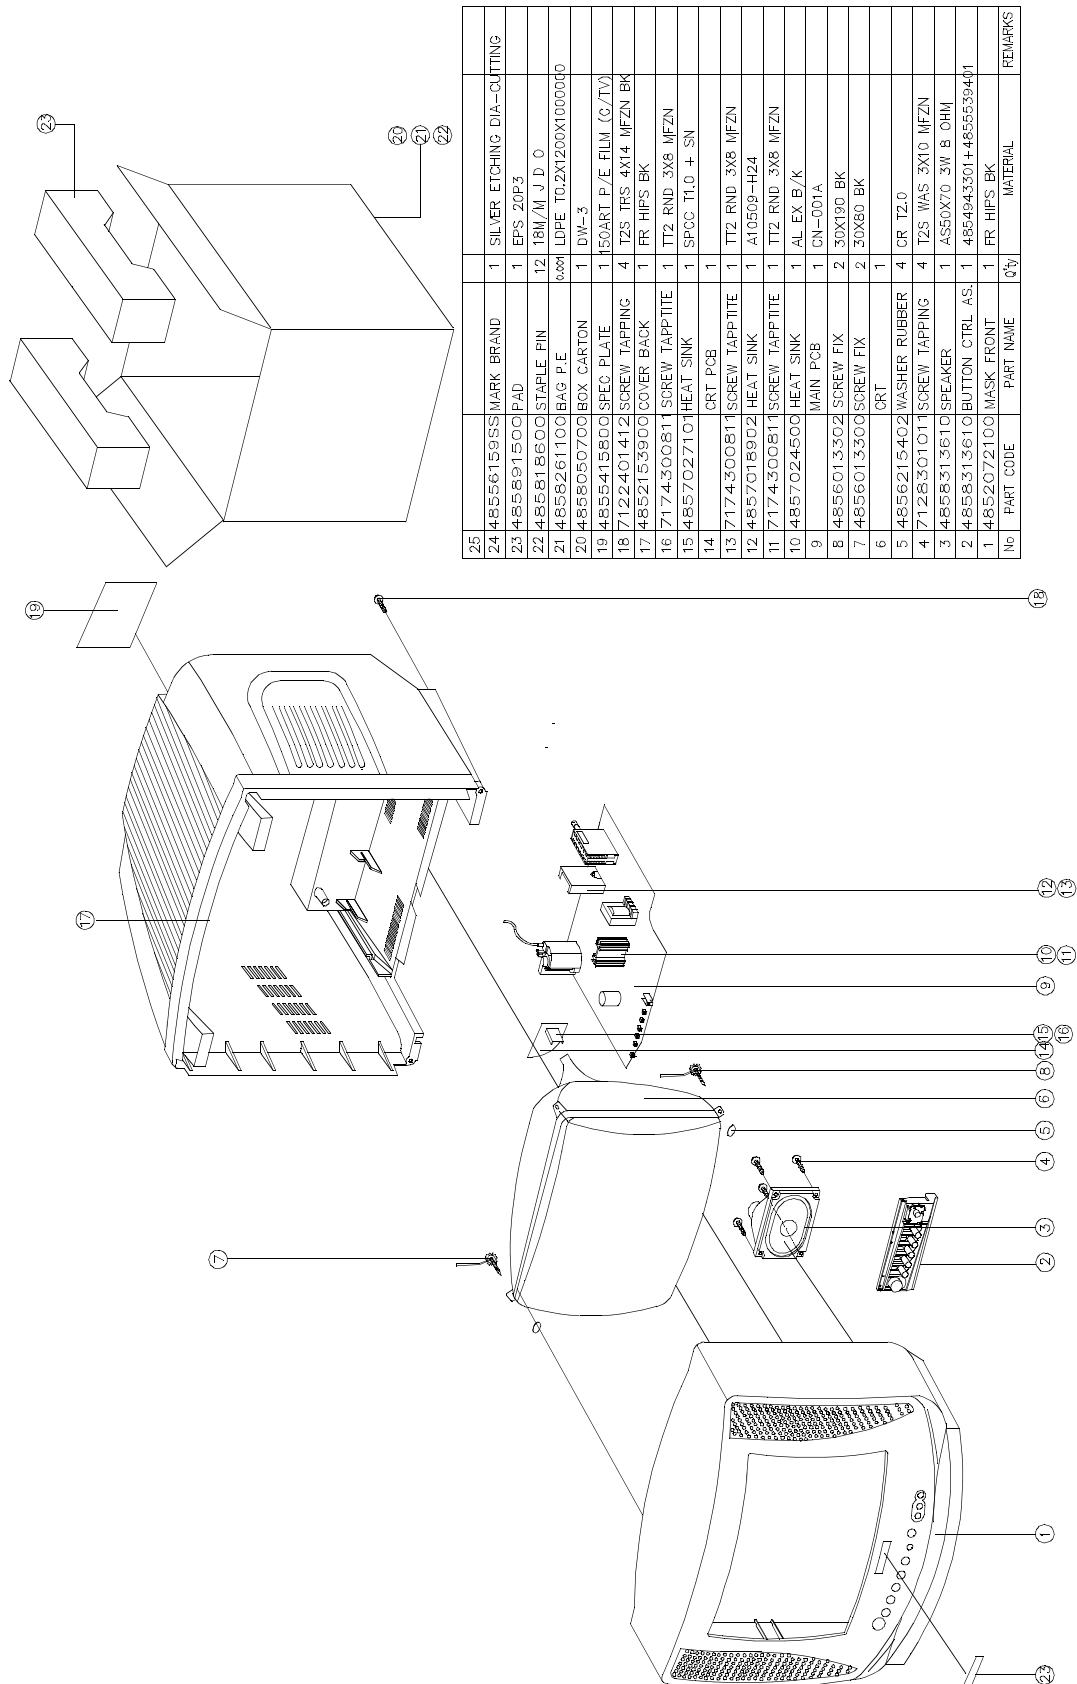

# ELECTRICAL PARTS LIST

## CAUTION

"⚠" is a safety part, so it must be used the same part.

"®" is a recommendable part for essential stock.

z_loc	z_parts_code	parts_name	parts_descr	remark
ZZ100	48B434A08	TRANSMITTER REMOCON	R-43A08 (AA)	
ZZ110	PTACPDH394	ACCESSORY AS	DTQ-14P2FC	
00010	4850A02510	ANT ROD	S3BW216B (L=600 MM)	
00030	4850Q00810	BATTERY	R6P/LN	
00040	4850A00250	TRANS ANT MATCHING	IMT-06	
10000	48586001E2	MANUAL INSTRUCTION	DTQ-20V1FS	
M821	4858213800	BAG INSTRUCTION	L.D.P.E T0.05X250X400	
ZZ120	PTBCSHH567	COVER BACK AS	DTQ-14V1FCM	
M211	4852151400	COVER BACK	FR HIPS BK	
M211B	4857817640	CLOTH BLACK	FELT 100X20X0.7	
ZZ130	PTPKCPH567	PACKING AS	DTQ-14V1FCM	
10	6520010100	STAPLE PIN	AUTO W65	
M801	485803871D	BOX CARTON	SW-2	
M811	4858186700	PAD	EPS 14V1	
M821	4858215700	BAG PE	PE FOAM 10.5x1000X950	
ZZ131	58G0000078	COIL DEGAUSSING	DC-1400	
ZZ132	48519A4710	CRT GROUND NET	1401S-1015-1P	
ZZ140	PTCACA567	CABINET AS	DTQ-14V1FCM	
CRT1	PTRTPDH394	CRT AS	"NTSC 14" ITC CRT AS"	⚠ ®
V01	58D0000082	COIL DY	ODY-M1489	⚠
V04	2224050026	BOND SILICON	RTV 122 CARTRIDGE	
V05	4850PM001-	MAGNET CP	NY-225 (MINI NECK)	
V06	48A96R004-	RUBBER WEDGE	HMR 28 SR (/0X54)	
V901	48A96314C3	CRT BARE	A34KQV42X	
M201A	4856013350	SCREW CRT FIXING	25X80 BK	
M201B	4856215402	WASHER RUBBER	CR T2.0	
M211A	7172401412	SCREW TAPPTITE	TT2 TRS 4X14 MFZN BK	
M541	4855415800	SPEC PLATE	150ART P/E FILM (C/TV)	
M601	4856013351	SCREW CRT FIXING	25X140 YL	
M681	4856812001	TIE CABLE	NYLON66 DA100	
SP01A	7178301011	SCREW TAPPTITE	TT2 WAS 3X10 MFZN	
ZZ200	PTFMSJH567	MASK FRONT AS	DTQ-14V1FCM	
M191	4851931800	BUTTON CTRL	4939100+5536001	
M191A	7178301011	SCREW TAPPTITE	TT2 WAS 3X10 MFZN	
M201	4852067200	MASK FRONT	FR HIPS BK	
M321	4853214800	BRKT	FR HIPS BK	
M561	4855613600	MARK BRAND	COPPER T0.4	
ZZ202	PTSPPDH407	SPEAKER AS	DTQ-14J4FC	
PA601	4850703S50	CONNECTOR	YH025-03+35098+ULW=200	
SP01	4858314010	SPEAKER	SP-5070F01 3W 8 OHM	®
ZZ290	PTMPMSH567	PCB MAIN MANUAL AS	DTQ-14V1FCM	®
10	2193102005	SOLDER BAR	SN:PB=63:47 S63S-1320	
30	2291050616	FLUX SOLDER	JS-64T3	
40	2291050301	FLUX SOLVENT	IM-1000	
C404	CMYH3C722H	C MYLAR	1.6KV BUP 7200PF H	

z_loc	z_parts_code	parts_name	parts_descr	remark
C406	CMYE2D434J	C MYLAR	200V PU 0.43MF J	
C801	CL1UC3104M	C LINE ACROSS	WORLD AC250V 0.1UF M R.47	
C804	CEYN2D331P	C ELECTRO	200V LHS 330MF	
D703	DLH2PR—	LED BLOCK	LH-2P-R	
I101	1LA76845N-	IC	LA76845N	®
I301	PTD2SW7100	HEAT SINK ASS'Y	1LA78041— + 7174300811	
00001	1LA78041—	IC VERTICAL	LA78041	®
0000A	4857027100	HEAT SINK	SPCC T1.0+SN	
0000B	7174300811	SCREW TAPPTITE	TT2 RND 3X8 MFZN	
I401	1K1A7805P1	IC REGULATOR	KIA7805API	
I601	1TDA7267—	IC AUDIO AMP	TDA7267	®
I701	1DW8634NA3	IC MICOM	DW863432W-NA3(50C5)	®
I703	124LC04B—	IC MEMORY	24LC04B	®
I801	1MR2520—	IC POWER	MR2520	⚠ ®
I805	1LTV817C—	IC PHOTO COUPLER	LTV-817C	
I806	1LTV817C—	IC PHOTO COUPLER	LTV-817C	
IL701	1356VF6—	IC PREAMP	356VF6	
JP02	4859109950	JACK PIN BOARD	PH-JB-9710A	
JP03	4859109150	JACK PIN BOARD	PH-JB-9615C	
L501	58N0000042	COIL VCO	TRF-V008	
L801	5PLF24A1—	FILTER LINE	LF-24A1	⚠
M681	4856812001	TIE CABLE	NYLON66 DA100	
P401	4859240020	CONN WAFER	YFW500-05	
P501	4850708N11	CONNECTOR	BIC-08T-25T+C-20T+ULW=300	
PWC1	4859907910	CORD POWER AS	ME301P+TER=1830	⚠ ®
Q402	PTA2SW7201	HEAT SINK ASS'Y	T2SD2627YB + 7174300811	
00001	T2SD2627YB	TR	2SD2627LS-YB	®
0000A	4857027201	HEAT SINK	AL T1.0	
0000B	7174300811	SCREW TAPPTITE	TT2 RND 3X8 MFZN	
R801	RX07B229JP	R CEMENT	7W 2.2 OHM J BEN 15MM 4P	
RLY1	5SC0101338	SW RELAY	DQ5D1-Q(M)/GJ-SS-105LM	⚠
RS801	DSVC471D14	VARISTOR	SVC471D14A	⚠
SCT1	4859303930	SOCKET CRT	ISMG03S INCHANG	⚠ ®
SF101	5PTSF5241P	FILTER SAW	TSF5241P	
T401	50D10A3—	TRANS DRIVE	TD-10A3	
T402	50H0000241	FBT	FSA37023M	⚠ ®
T801	50M3541T8-	TRANS SMPS	TSM-3541T8	⚠
U102	4859721730	TUNER VARACTOR	DT5-NF20F N	⚠ ®
X701	5XYR03276C	CRYSTAL QUARTZ	C-001R 32.768000KHZ 20PPM	
Z501	5PYXT4R5MB	FILTER CERA	XT 4.5MB	
ZZ200	PTMPJ2H567	PCB CHIP MOUNT B AS	DTQ-14V1FCM	
JC568	HRFS000-BA	R CHIP	1/16 0 OHM 1608	
JC701	HRFS000-BA	R CHIP	1/16 0 OHM 1608	
JC702	HRFS000-BA	R CHIP	1/16 0 OHM 1608	
JC703	HRFS000-BA	R CHIP	1/16 0 OHM 1608	

# ELECTRICAL PARTS LIST

z_loc	z_parts_code	parts_name	parts_descr	remark	z_loc	z_parts_code	parts_name	parts_descr	
JC704	HRFS000-BA	R CHIP	1/16 0 OHM 1608		RC752	HRFS471JBA	R CHIP	1/16 470 OHM J 1608	
RC150	HRFS153JBA	R CHIP	1/16 15K OHM J 1608		RC755	HRFS102JBA	R CHIP	1/16 1K OHM J 1608	
RC151	HRFS104JBA	R CHIP	1/16 100K OHM J 1608		RC756	HRFS102JBA	R CHIP	1/16 1K OHM J 1608	
RC154	HRFS473JBA	R CHIP	1/16 47K OHM J 1608		RC763	HRFS201JBA	R CHIP	1/16 200 OHM J 1608	
RC156	HRFS473JBA	R CHIP	1/16 47K OHM J 1608		RC775	HRFS472JBA	R CHIP	1/16 4.7K OHM J 1608	
RC165	HRFS472JBA	R CHIP	1/16 4.7K OHM J 1608		RC778	HRFS103JBA	R CHIP	1/16 10K OHM J 1608	
RC223	HRFS224JBA	R CHIP	1/16 220K OHM J 1608		RC779	HRFS472JBA	R CHIP	1/16 4.7K OHM J 1608	
RC224	HRFS224JBA	R CHIP	1/16 220K OHM J 1608		RC781	HRFS102JBA	R CHIP	1/16 1K OHM J 1608	
RC225	HRFS392JBA	R CHIP	1/16 3.9K OHM J 1608		RC782	HRFS331JBA	R CHIP	1/16 330 OHM J 1608	
RC226	HRFS101JBA	R CHIP	1/16 100 OHM J 1608		RC783	HRFS472JBA	R CHIP	1/16 4.7K OHM J 1608	
RC227	HRFS102JBA	R CHIP	1/16 1K OHM J 1608		RC784	HRFS514JBA	R CHIP	1/16 510K OHM J 1608	
RC228	HRFS103JBA	R CHIP	1/16 10K OHM J 1608		RC785	HRFS000-BA	R CHIP	1/16 0 OHM 1608	
RC229	HRFS750JBA	R CHIP	1/16 75 OHM J 1608		RC786	HRFS102JBA	R CHIP	1/16 1K OHM J 1608	
RC508	HRFS102JBA	R CHIP	1/16 1K OHM J 1608		RC787	HRFS472JBA	R CHIP	1/16 4.7K OHM J 1608	
RC509	HRFS102JBA	R CHIP	1/16 1K OHM J 1608		RC788	HRFS472JBA	R CHIP	1/16 4.7K OHM J 1608	
RC510	HRFS331JBA	R CHIP	1/16 330 OHM J 1608		RC791	HRFS102JBA	R CHIP	1/16 1K OHM J 1608	
RC511	HRFS123JBA	R CHIP	1/16 12K OHM J 1608		RC792	HRFS102JBA	R CHIP	1/16 1K OHM J 1608	
RC525	HRFS102JBA	R CHIP	1/16 1K OHM J 1608		RC793	HRFS102JBA	R CHIP	1/16 1K OHM J 1608	
RC526	HRFS132JBA	R CHIP	1/16 1.3K OHM J 1608		RC794	HRFS102JBA	R CHIP	1/16 1K OHM J 1608	
RC530	HRFS561JBA	R CHIP	1/16 560 OHM J 1608		RC797	HRFS103JBA	R CHIP	1/16 10K OHM J 1608	
RC531	HRFS561JBA	R CHIP	1/16 560 OHM J 1608		RC799	HRFS103JBA	R CHIP	1/16 10K OHM J 1608	
RC533	HRFS390JBA	R CHIP	1/16 39 OHM J 1608		RC917	HRFS241JBA	R CHIP	1/16 240 OHM J 1608	
RC554	HRFS514JBA	R CHIP	1/16 510K OHM J 1608		RC918	HRFS241JBA	R CHIP	1/16 240 OHM J 1608	
RC557	HRFS302JBA	R CHIP	1/16 3K OHM J 1608		RC919	HRFS241JBA	R CHIP	1/16 240 OHM J 1608	
RC558	HRFS103JBA	R CHIP	1/16 10K OHM J 1608		RC923	HRFS471JBA	R CHIP	1/16 470 OHM J 1608	
RC559	HRFS331JBA	R CHIP	1/16 330 OHM J 1608		RC924	HRFS471JBA	R CHIP	1/16 470 OHM J 1608	
RC561	HRFS301JBA	R CHIP	1/16 300 OHM J 1608		RC925	HRFS471JBA	R CHIP	1/16 470 OHM J 1608	
RC562	HRFS824JBA	R CHIP	1/16 820K J 1608		RC933	HRFS471JBA	R CHIP	1/16 470 OHM J 1608	
RC565	HRFS123JBA	R CHIP	1/16 12K OHM J 1608		RC934	HRFS471JBA	R CHIP	1/16 470 OHM J 1608	
RC566	HRFS123JBA	R CHIP	1/16 12K OHM J 1608		RC935	HRFS471JBA	R CHIP	1/16 470 OHM J 1608	
RC567	HRFS103JBA	R CHIP	1/16 10K OHM J 1608		RC977	HRFS201JBA	R CHIP	1/16 200 OHM J 1608	
RC568	HRFS472FBA	R CHIP	1/16 4.7K OHM F 1608		ZZ200	PTMPJ0H567	PCB MAIN (RHU) AS	DTQ-14V1FCM	
RC569	HRFS152JBA	R CHIP	1/16 1.5K OHM J 1608		C105	CEXF1C471V	C ELECTRO	16V RSS 470MF (8X12)TP	
RC570	HRFS103JBA	R CHIP	1/16 10K OHM J 1608		C310	CEXF1E102V	C ELECTRO	25V RSS 1000MF (13X20) TP	
RC629	HRFS102JBA	R CHIP	1/16 1K OHM J 1608		C410	CEXF2E100V	C ELECTRO	250V RSS 10MF (10X20) TP	
RC630	HRFS104JBA	R CHIP	1/16 100K OHM J 1608		C414	CEXF1V471V	C ELECTRO	35V RSS 470MF (10X20) TP	
RC655	HRFS162JBA	R CHIP	1/16 1.6K OHM J 1608		C415	CEXF1C102V	C ELECTRO	16V RSS 1000MF (10X20) TP	
RC703	HRFS101JBA	R CHIP	1/16 100 OHM J 1608		C502	CEXF1C471V	C ELECTRO	16V RSS 470MF (8X12)TP	
RC709	HRFS392JBA	R CHIP	1/16 3.9K OHM J 1608		C507	CMXM2A224J	C MYLAR	100V 0.22MF J	
RC732	HRFS102JBA	R CHIP	1/16 1K OHM J 1608		C508	CMXM2A224J	C MYLAR	100V 0.22MF J	
RC733	HRFS102JBA	R CHIP	1/16 1K OHM J 1608		C510	CEXF1C471V	C ELECTRO	16V RSS 470MF (8X12)TP	
RC734	HRFS102JBA	R CHIP	1/16 1K OHM J 1608		C514	CEXF1C471V	C ELECTRO	16V RSS 470MF (8X12)TP	
RC735	HRFS102JBA	R CHIP	1/16 1K OHM J 1608		C602	CEXF1C102V	C ELECTRO	16V RSS 1000MF (10X20) TP	
RC736	HRFS103JBA	R CHIP	1/16 10K OHM J 1608		C646	CEXF1C471V	C ELECTRO	16V RSS 470MF (8X12)TP	
RC737	HRFS103JBA	R CHIP	1/16 10K OHM J 1608		C809	CBXB3D102K	C CERA SEMI	2KV BL(N) 1000PF K (T)	
RC738	HRFS471JBA	R CHIP	1/16 470 OHM J 1608		C812	CEXF1C102V	C ELECTRO	16V RSS 1000MF (10X20) TP	
RC740	HRFS102JBA	R CHIP	1/16 1K OHM J 1608		C813	CCXB3A221K	C CERA	1KV B 220PF K (TAPPING)	
RC741	HRFS000-BA	R CHIP	1/16 0 OHM 1608		C814	CEXF2C101V	C ELECTRO	160V RSS 100MF (16X25) TP	
RC743	HRFS472JBA	R CHIP	1/16 4.7K OHM J 1608		C820	CEXF2C101V	C ELECTRO	160V RSS 100MF (16X25) TP	
RC744	HRFS242JBA	R CHIP	1/16 2.4K OHM J 1608		C881	CH1BEE472M	C CERA AC	U/C/V 2.5KV 4700PF TP	△
RC746	HRFS752JBA	R CHIP	1/16 7.5K OHM J 1608		C882	CH1BEE472M	C CERA AC	U/C/V 2.5KV 4700PF TP	△
RC747	HRFS243JBA	R CHIP	1/16 24K OHM J 1608		C912	CH1BEE472M	C CERA AC	U/C/V 2.5KV 4700PF TP	
RC751	HRFS471JBA	R CHIP	1/16 470 OHM J 1608		F802	5FUMK4021L	FUSE GLASS TUBE	UL TL 4.0A 125V CASE	△ ®

# ELECTRICAL PARTS LIST

z_loc	z_parts_code	parts_name	parts_descr	remark	z_loc	z_parts_code	parts_name	parts_descr	remark
R881	DDT7R0M140	POSISTOR	ECPAC7R0M140		C301	CMXM2A103J	C MYLAR	100V 0.01MF J (TP)	
ZZ200	PTMPJBH567	PCB MAIN M-10 AS	DTQ-14V1FCM		C302	CEXF1H479V	C ELECTRO	50V RSS 4.7MF (5X11) TP	
10	2TM18006BE	TAPE MASKING	6.2X500		C303	CEXF1H100V	C ELECTRO	50V RSS 10MF (5X11) TP	
D401	D1N4937G—	DIODE	1N4937G (TAPPING)		C305	CEXF1H101V	C ELECTRO	50V RSS 100MF (8X11.5) TP	
D405	D1N4937G—	DIODE	1N4937G (TAPPING)		C307	CXSL2H100D	C CERA	500V SL 10PF D (TAPPING)	
D406	D1N4937G—	DIODE	1N4937G (TAPPING)		C308	CMXM2A104J	C MYLAR	100V 0.1MF J (TP)	
D407	D1N4937G—	DIODE	1N4937G (TAPPING)		C311	CEXD1H229Q	C ELECTRO	50V RT 2.2MF (6.3X11) TP	
D408	D1N4937G—	DIODE	1N4937G (TAPPING)		C401	CCXB2H102K	C CERA	500V B 1000PF K (TAPPING)	
D807	DRGP15J—	DIODE	RGP15J		C403	CMXM2A103J	C MYLAR	100V 0.01MF J (TP)	
D810	D1N4937G—	DIODE	1N4937G (TAPPING)		C405	CEXF2C109V	C ELECTRO	160V RSS 1MF (6.3X11) TP	
D811	D1N4937G—	DIODE	1N4937G (TAPPING)		C411	CEXF1H100V	C ELECTRO	50V RSS 10MF (5X11) TP	
D881	DLT2A05G—	DIODE	LT2A05G (TP)		C413	CCXB2H102K	C CERA	500V B 1000PF K (TAPPING)	
D882	DLT2A05G—	DIODE	LT2A05G (TP)		C418	CMXM2A104J	C MYLAR	100V 0.1MF J (TP)	
D883	DLT2A05G—	DIODE	LT2A05G (TP)		C451	CEXF1C101V	C ELECTRO	16V RSS 100MF (6.3X11) TP	
D884	DLT2A05G—	DIODE	LT2A05G (TP)		C452	CEXF1C221V	C ELECTRO	16V RSS 220MF (8X11.5) TP	
E001	4856310600	EYE LET	BSR T0.2 (R2.3)		C501	CMXL1J105J	C MYLAR	63V MEU 1MF J	
E006	4856310600	EYE LET	BSR T0.2 (R2.3)		C509	CEXF1H109V	C ELECTRO	50V RSS 1MF (5X11) TP	
E007	4856310600	EYE LET	BSR T0.2 (R2.3)		C511	CMXM2A333J	C MYLAR	100V 0.033MF J (TP)	
E008	4856310600	EYE LET	BSR T0.2 (R2.3)		C512	CEXF1H108V	C ELECTRO	50V RSS 0.1MF (5X11) TP	
E011	4856310300	EYE LET	BSR T0.2 (R1.6)		C513	CEXF1H109V	C ELECTRO	50V RSS 1MF (5X11) TP	
E012	4856310300	EYE LET	BSR T0.2 (R1.6)		C516	CEXF1H229V	C ELECTRO	50V RSS 2.2MF (5X11) TP	
E013	4856310300	EYE LET	BSR T0.2 (R1.6)		C517	CMXM2A473J	C MYLAR	100V 0.047MF J (TP)	
E014	4856310300	EYE LET	BSR T0.2 (R1.6)		C518	CEXF1H478V	C ELECTRO	50V RSS 0.47MF (5X11) TP	
E018	4856310300	EYE LET	BSR T0.2 (R1.6)		C519	CEXF1H478V	C ELECTRO	50V RSS 0.47MF (5X11) TP	
E020	4856310300	EYE LET	BSR T0.2 (R1.6)		C520	CEXF1H109V	C ELECTRO	50V RSS 1MF (5X11) TP	
E023	4856310300	EYE LET	BSR T0.2 (R1.6)		C525	CEXF1H109V	C ELECTRO	50V RSS 1MF (5X11) TP	
E025	4856310300	EYE LET	BSR T0.2 (R1.6)		C554	CMXM2A153J	C MYLAR	100V 0.015MF J (TP)	
E030	4856310600	EYE LET	BSR T0.2 (R2.3)		C556	CXCH1H809D	C CERA	50V CH 8PF D (TAPPING)	
E031	4856310600	EYE LET	BSR T0.2 (R2.3)		C576	CEXF1C221V	C ELECTRO	16V RSS 220MF (8X11.5) TP	
E034	4856310600	EYE LET	BSR T0.2 (R2.3)		C580	CCXB1H152K	C CERA	50V B 1500PF K (TAPPING)	
E036	4856310600	EYE LET	BSR T0.2 (R2.3)		C581	CEXF1H109V	C ELECTRO	50V RSS 1MF (5X11) TP	
E038	4856310600	EYE LET	BSR T0.2 (R2.3)		C601	CMXM2A103J	C MYLAR	100V 0.01MF J (TP)	
E039	4856310300	EYE LET	BSR T0.2 (R1.6)		C603	CEXF1H108V	C ELECTRO	50V RSS 0.1MF (5X11) TP	
E040	4856310300	EYE LET	BSR T0.2 (R1.6)		C604	CEXF1C101V	C ELECTRO	16V RSS 100MF (6.3X11) TP	
E041	4856310300	EYE LET	BSR T0.2 (R1.6)		C634	CEXF1H479V	C ELECTRO	50V RSS 4.7MF (5X11) TP	
E043	4856310300	EYE LET	BSR T0.2 (R1.6)		C662	CCXF1H153Z	C CERA	50V F 0.015MF Z	
E044	4856310300	EYE LET	BSR T0.2 (R1.6)		C701	CEXF1H470V	C ELECTRO	50V RSS 47MF (6.3X11) TP	
E045	4856310300	EYE LET	BSR T0.2 (R1.6)		C702	CEXF1C221V	C ELECTRO	16V RSS 220MF (8X11.5) TP	
E046	4856310300	EYE LET	BSR T0.2 (R1.6)		C703	CEXF1H109V	C ELECTRO	50V RSS 1MF (5X11) TP	
P601	485923162S	CONN WAFER	YW025-03 (STICK)		C704	CEXF1H229V	C ELECTRO	50V RSS 2.2MF (5X11) TP	
P801A	4857417500	TERM PIN	DA-IB0214(D2.3/DY PIN)		C705	CEXF1H109V	C ELECTRO	50V RSS 1MF (5X11) TP	
P801B	4857417500	TERM PIN	DA-IB0214(D2.3/DY PIN)		C757	CCXF1H333Z	C CERA	50V F 0.033MF Z (TAPPING)	
R601	RF01Z688K-	R FUSIBLE	1W 0.68 OHM K (TAPPING)		C807	CEXF1E221V	C ELECTRO	25V RSS 220MF (8X11.5) TP	
R805	RS02Z228JS	R M-OXIDE FILM	2W 0.22 OHM J SMALL		C810	CCXB2H222K	C CERA	500V B 2200PF K (TAPPING)	△
R814	RS02Z282JS	R M-OXIDE FILM	2W 0.82 OHM J SMALL		C811	CCXB2H222K	C CERA	500V B 2200PF K (TAPPING)	△
ZZ200	PTMPJRH567	PCB MAIN RADIAL AS	DTQ-14V1FCM		C815	CEXF2A100V	C ELECTRO	100V RSS 10MF (6.3X11) TP	
C101	CEXF1H109V	C ELECTRO	50V RSS 1MF (5X11) TP		C818	CEXF1C101V	C ELECTRO	16V RSS 100MF (6.3X11) TP	
C102	CEXF1C101V	C ELECTRO	16V RSS 100MF (6.3X11) TP		C819	CEXF1H479V	C ELECTRO	50V RSS 4.7MF (5X11) TP	
C103	CEXF1H339V	C ELECTRO	50V RSS 3.3MF (5X11) TP		C871	CMXM2A682J	C MYLAR	100V 6800PF J (TP)	
C104	CMXM2A333J	C MYLAR	100V 0.033MF J (TP)		C876	CEXF1C101V	C ELECTRO	16V RSS 100MF (6.3X11) TP	
C106	CEXF1H109V	C ELECTRO	50V RSS 1MF (5X11) TP		C892	CMXM2A102J	C MYLAR	100V 1000PF J (TP)	
C212	CEXF1H100V	C ELECTRO	50V RSS 10MF (5X11) TP		I803	1KA431L—	IC	KA431L	
C235	CEXD1H229F	C ELECTRO	50V RND 2.2MF (5X11) TP		L601	58CX430599	COIL CHOKE	AZ-9004Y 940K TP	

# ELECTRICAL PARTS LIST

z_loc	z_parts_code	parts_name	parts_descr	remark	z_loc	z_parts_code	parts_name	parts_descr	
L805	58CX430599	COIL CHOKE	AZ-9004Y 940K TP		C551	CCZB1H101K	C CERA	50V B 100PF K (AXIAL)	
L901	5CPX121J—	COIL PEAKING	120UH J (RADIAL)		C552	CCZB1H101K	C CERA	50V B 100PF K (AXIAL)	
Q201	TKSC945CY-	TR	KSC 945C-Y (TAPPING)		C555	CBZR1C392M	C CERA	16V Y5R 3900PF M (AXIAL)	
Q401	TKSC2330Y-	TR	KSC2330Y (TP)		C560	CCZF1H103Z	C CERA	50V F 0.01MF Z	
Q404	TKSC945CY-	TR	KSC 945C-Y (TAPPING)		C562	CZCH1H180J	C CERA	50V CH 18PF J (AXIAL)	
Q501	TKTA1266Y-	TR	KTA1266Y (TP)		C567	CCZB1H181K	C CERA	50V B 180PF K (AXIAL)	
Q575	TKTA1275Y-	TR	KTA1275Y (TP)		C568	CCZF1H103Z	C CERA	50V F 0.01MF Z	
Q653	TKSC945CY-	TR	KSC 945C-Y (TAPPING)		C569	CCZF1H103Z	C CERA	50V F 0.01MF Z	
Q701	TKSC945CY-	TR	KSC 945C-Y (TAPPING)		C570	CBZF1H104Z	C CERA SEMI	50V F 0.1MF Z	
Q703	TKSC945CY-	TR	KSC 945C-Y (TAPPING)		C571	CBZF1H104Z	C CERA SEMI	50V F 0.1MF Z	
Q704	TKTA1266Y-	TR	KTA1266Y (TP)		C573	CBZF1H104Z	C CERA SEMI	50V F 0.1MF Z	
Q707	TKSC945CY-	TR	KSC 945C-Y (TAPPING)		C612	CBZF1H104Z	C CERA SEMI	50V F 0.1MF Z	
Q804	TKTA1275Y-	TR	KTA1275Y (TP)		C752	CZCH1H180J	C CERA	50V CH 18PF J (AXIAL)	
Q805	TKTC3205Y-	TR	KTC3205Y (TP)		C753	CZCH1H180J	C CERA	50V CH 18PF J (AXIAL)	
Q806	TKTA1266Y-	TR	KTA1266Y (TP)		C754	CCZF1H103Z	C CERA	50V F 0.01MF Z	
Q871	TKSC945CY-	TR	KSC 945C-Y (TAPPING)		C755	CCZF1H103Z	C CERA	50V F 0.01MF Z	
Q873	TKSC945CY-	TR	KSC 945C-Y (TAPPING)		C756	CCZB1H221K	C CERA	50V B 220PF K (AXIAL)	
Q902	TKSC2330Y-	TR	KSC2330Y (TP)		C758	CCZB1H101K	C CERA	50V B 100PF K (AXIAL)	
Q903	TKSC2330Y-	TR	KSC2330Y (TP)		C759	CCZB1H101K	C CERA	50V B 100PF K (AXIAL)	
Q904	TKSC2330Y-	TR	KSC2330Y (TP)		C760	CCZB1H101K	C CERA	50V B 100PF K (AXIAL)	
Q977	TKTA1266Y-	TR	KTA1266Y (TP)		C768	CCZB1H101K	C CERA	50V B 100PF K (AXIAL)	
R301	RN01B471JS	R METAL FILM	1W 470 OHM J SMALL		C790	CCZF1H103Z	C CERA	50V F 0.01MF Z	
R302	RN02B471JS	R METAL FILM	2W 470 OHM J SMALL		C796	CCZF1H103Z	C CERA	50V F 0.01MF Z	
R303	RN01B129JS	R METAL FILM	1W 1.2 OHM J SMALL		C870	CBZF1H104Z	C CERA SEMI	50V F 0.1MF Z	
R305	RN01B331JS	R METAL FILM	1W 330 OHM J SMALL		C891	CZSL1H470J	C CERA	50V SL 47PF J (AXIAL)	
R403	RN01B562JS	R METAL FILM	1W 5.6K OHM J SMALL		C902	CCZB1H271K	C CERA	50V B 270PF K	
R411	RN02B150JS	R METAL FILM	2W 15 OHM J SMALL		C903	CCZB1H271K	C CERA	50V B 270PF K	
R412	RN01B369JS	R METAL FILM	1W 3.6 OHM J SMALL		C904	CCZB1H271K	C CERA	50V B 270PF K	
R413	RN01B229JS	R METAL FILM	1W 2.2 OHM J SMALL		D101	DUZ33B—	DIODE ZENER	UZ-33B	
R414	RN01B229JS	R METAL FILM	1W 2.2 OHM J SMALL		D102	DUZ5R1B—	DIODE ZENER	UZ-5.1B	
R418	RN02B150JS	R METAL FILM	2W 15 OHM J SMALL		D221	D1N4148—	DIODE	1N4148 (TAPPING)	
R420	RN02B620JS	R METAL FILM	2W 62 OHM J SMALL		D301	D1N4004S—	DIODE	1N4004S	
R817	RN01B471JS	R METAL FILM	1W 470 OHM J SMALL		D311	DBZX55C62-	DIODE ZENER	BZX55C-62	
R913	RN02B153JS	R METAL FILM	2W 15K OHM J SMALL		D312	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
R914	RN02B153JS	R METAL FILM	2W 15K OHM J SMALL		D409	D1N4148—	DIODE	1N4148 (TAPPING)	
R915	RN02B153JS	R METAL FILM	2W 15K OHM J SMALL		D503	DUZ9R1BM—	DIODE ZENER	UZ-9.1BM	
SW701	5S50101090	SW TACT	THVH472GCA		D504	D1N4148—	DIODE	1N4148 (TAPPING)	
SW702	5S50101090	SW TACT	THVH472GCA		D505	DUZ9R1BM—	DIODE ZENER	UZ-9.1BM	
SW703	5S50101090	SW TACT	THVH472GCA		D571	D1N4148—	DIODE	1N4148 (TAPPING)	
SW704	5S50101090	SW TACT	THVH472GCA		D572	D1N4148—	DIODE	1N4148 (TAPPING)	
SW705	5S50101090	SW TACT	THVH472GCA		D573	D1N4148—	DIODE	1N4148 (TAPPING)	
SW706	5S50101090	SW TACT	THVH472GCA		D574	D1N4148—	DIODE	1N4148 (TAPPING)	
X502	5XEX3R579C	CRYSTAL QUARTZ	HC-49/U 3.579545M (TP)		D701	D1N4148—	DIODE	1N4148 (TAPPING)	
ZZ200	PTMPJAH567	PCB MAIN AXIAL AS	DTQ-14V1FCM		D704	DUZ3R9B—	DIODE ZENER	UZ-3.9B	
10	2TM10006LB	TAPE MASKING	3M #232-MAP-C 6.2X2000M		D777	DUZ5R6BM—	DIODE ZENER	UZ-5.6BM	
20	2TM14006LB	TAPE MASKING	3M #232 6.0X2000M		D805	DUZ3R9B—	DIODE ZENER	UZ-3.9B	
A001	4859815791	PCB MAIN	246X246		D806	D1N4148—	DIODE	1N4148 (TAPPING)	
C109	CCZF1H103Z	C CERA	50V F 0.01MF Z		D812	DUZ5R6BM—	DIODE ZENER	UZ-5.6BM	
C152	CCZF1H103Z	C CERA	50V F 0.01MF Z		D813	D1N4937G—	DIODE	1N4937G (TAPPING)	
C153	CCZF1H103Z	C CERA	50V F 0.01MF Z		D841	D1N4937G—	DIODE	1N4937G (TAPPING)	
C154	CCZF1H103Z	C CERA	50V F 0.01MF Z		J001	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
C155	CCZF1H103Z	C CERA	50V F 0.01MF Z		J002	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
C527	CCZB1H102K	C CERA	50V B 1000PF K (AXIAL)		J003	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	



# ELECTRICAL PARTS LIST

z_loc	z_parts_code	parts_name	parts_descr	remark	z_loc	z_parts_code	parts_name	parts_descr	remark
J007	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J709	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J009	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J710	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J010	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J711	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J011	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J712	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J012	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J713	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J013	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J714	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J014	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J733	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J015	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J734	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J016	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J738	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J017	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J739	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J018	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J753	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J019	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J770	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J020	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J778	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J021	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J790	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J022	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J809	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J023	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J810	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J024	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J840	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J025	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J841	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J026	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J842	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J028	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J843	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J029	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J844	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J030	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J860	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J032	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J861	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J034	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J862	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J036	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J881	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J042	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J923	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J045	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J924	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J047	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J925	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J050	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J977	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J053	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		J999	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING	
J055	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		L111	5CPZ568M02	COIL PEAKING	0.56UH M (AXIAL 3.5MM)	
J056	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		L112	5CPZ569K02	COIL PEAKING	5.6UH K (AXIAL 3.5MM)	
J057	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		L502	5CPZ470K04	COIL PEAKING	47UH 10.5MM K (LAL04TB)	
J058	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		L533	5CPZ150K02	COIL PEAKING	15UH K (AXIAL 3.5MM)	
J060	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		L701	5CPZ220K02	COIL PEAKING	22UH K (AXIAL 3.5MM)	
J062	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		L807	5MC0000100	COIL BEAD	HC-3550	
J072	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		L811	5MC0000100	COIL BEAD	HC-3550	
J080	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		L841	5MC0000100	COIL BEAD	HC-3550	
J111	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R105	RD-AZ472J-	R CARBON FILM	1/6 4.7K OHM J	
J112	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R306	RD-AZ273J-	R CARBON FILM	1/6 27K OHM J	
J113	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R307	RD-AZ333J-	R CARBON FILM	1/6 33K OHM J	
J202	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R308	RD-AZ222J-	R CARBON FILM	1/6 2.2K OHM J	
J402	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R309	RD-AZ113J-	R CARBON FILM	1/6 11K OHM J	
J444	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R351	RD-AZ682J-	R CARBON FILM	1/6 6.8K OHM J	
J445	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R352	RN-4Z1603F	R METAL FILM	1/4 160K OHM F	
J507	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R353	RN-4Z1502F	R METAL FILM	1/4 15K OHM F	
J508	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R401	RD-4Z472J-	R CARBON FILM	1/4 4.7K OHM J	
J512	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R405	RD-2Z751J-	R CARBON FILM	1/2 750 OHM J	
J524	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R416	RD-2Z121J-	R CARBON FILM	1/2 120 OHM J	
J567	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R417	RD-4Z302J-	R CARBON FILM	1/4 3K OHM J	
J570	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R423	RD-AZ102J-	R CARBON FILM	1/6 1K OHM J	
J652	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R424	RD-AZ331J-	R CARBON FILM	1/6 330 OHM J	
J708	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING		R451	RD-4Z153J-	R CARBON FILM	1/4 15K OHM J	

# ELECTRICAL PARTS LIST


z_loc	z_parts_code	parts_name	parts_descr	remark	z_loc	z_parts_code	parts_name	parts_descr	
R452	RD-4Z113J-	R CARBON FILM	1/4 11K OHM J		R910	RD-2Z332J-	R CARBON FILM	1/2 3.3K OHM J	
R501	RD-2Z151J-	R CARBON FILM	1/2 150 OHM J		R911	RD-2Z332J-	R CARBON FILM	1/2 3.3K OHM J	
R502	RD-2Z151J-	R CARBON FILM	1/2 150 OHM J		R912	RD-2Z332J-	R CARBON FILM	1/2 3.3K OHM J	
R503	RD-AZ752J-	R CARBON FILM	1/6 7.5K OHM J		R978	RD-AZ102J-	R CARBON FILM	1/6 1K OHM J	
R504	RD-AZ102J-	R CARBON FILM	1/6 1K OHM J		R979	RD-AZ152J-	R CARBON FILM	1/6 1.5K OHM J	
R548	RD-AZ154J-	R CARBON FILM	1/6 150K OHM J						
R551	RD-AZ121J-	R CARBON FILM	1/6 120 OHM J						
R555	RD-AZ241J-	R CARBON FILM	1/6 240 OHM J						
R591	RD-4Z331J-	R CARBON FILM	1/4 330 OHM J						
R592	RD-4Z331J-	R CARBON FILM	1/4 330 OHM J						
R593	RD-4Z331J-	R CARBON FILM	1/4 330 OHM J						
R602	RD-2Z271J-	R CARBON FILM	1/2 270 OHM J						
R604	RD-4Z682J-	R CARBON FILM	1/4 6.8K OHM J						
R652	RD-AZ392J-	R CARBON FILM	1/6 3.9K OHM J						
R656	RD-AZ471J-	R CARBON FILM	1/6 470 OHM J						
R701	RD-AZ479J-	R CARBON FILM	1/6 4.7 OHM J						
R704	RD-AZ102J-	R CARBON FILM	1/6 1K OHM J						
R705	RD-AZ472J-	R CARBON FILM	1/6 4.7K OHM J						
R706	RD-AZ472J-	R CARBON FILM	1/6 4.7K OHM J						
R707	RD-AZ102J-	R CARBON FILM	1/6 1K OHM J						
R750	RD-AZ472J-	R CARBON FILM	1/6 4.7K OHM J						
R770	RD-AZ103J-	R CARBON FILM	1/6 10K OHM J						
R776	RD-AZ473J-	R CARBON FILM	1/6 47K OHM J						
R777	RD-AZ102J-	R CARBON FILM	1/6 1K OHM J						
R780	RD-AZ623J-	R CARBON FILM	1/6 62K OHM J						
R789	RD-4Z102J-	R CARBON FILM	1/4 1K OHM J						
R790	RD-4Z102J-	R CARBON FILM	1/4 1K OHM J						
R796	85801065GY	WIRE COPPER	AWG22 1/0.65 TIN COATING						
R807	RD-2Z105J-	R CARBON FILM	1/2 1M OHM J						
R813	RD-4Z363J-	R CARBON FILM	1/4 36K OHM J						
R819	RD-4Z561J-	R CARBON FILM	1/4 560 OHM J						
R820	RD-4Z392J-	R CARBON FILM	1/4 3.9K OHM J						
R821	RD-AZ363J-	R CARBON FILM	1/6 36K OHM J						
R822	RD-AZ363J-	R CARBON FILM	1/6 36K OHM J						
R824	RD-AZ103J-	R CARBON FILM	1/6 10K OHM J						
R827	RD-AZ103J-	R CARBON FILM	1/6 10K OHM J						
R868	RN-AZ2201F	R METAL FILM	1/6 2.2K OHM F						
R869	RD-AZ154J-	R CARBON FILM	1/6 150K OHM J						
R870	RN-AZ1302F	R METAL FILM	1/6 13K OHM F						
R871	RD-AZ102J-	R CARBON FILM	1/6 1K OHM J						
R872	RD-AZ202J-	R CARBON FILM	1/6 2K OHM J						
R873	RD-AZ103J-	R CARBON FILM	1/6 10K OHM J						
R874	RD-AZ202J-	R CARBON FILM	1/6 2K OHM J						
R875	RD-AZ362J-	R CARBON FILM	1/6 3.6K OHM J						
R876	RD-AZ472J-	R CARBON FILM	1/6 4.7K OHM J						
R877	RD-AZ103J-	R CARBON FILM	1/6 10K OHM J						
R878	RN-AZ5102F	R METAL FILM	1/6 51.0K OHM F						
R879	RN-AZ5102F	R METAL FILM	1/6 51.0K OHM F						
R888	RC-2Z565KP	R CARBON COMP	1/2 5.6M OHM K	△					
R891	RD-4Z479J-	R CARBON FILM	1/4 4.7 OHM J						
R892	RD-4Z153J-	R CARBON FILM	1/4 15K OHM J						
R893	RN-4Z2002F	R METAL FILM	1/4 20.0K OHM F						
R901	RD-4Z474J-	R CARBON FILM	1/4 470K OHM J						

**DAEWOO**

**DAEWOO ELECTRONICS CO., LTD**

686, AHYEON-DONG MAPO-GU  
SEOUL, KOREA  
C.P.O. BOX 8003 SEOUL, KOREA  
TELEX : DWELEC K28177-8  
CABLE : "DAEWOOELEC"

## U-COM(I701)

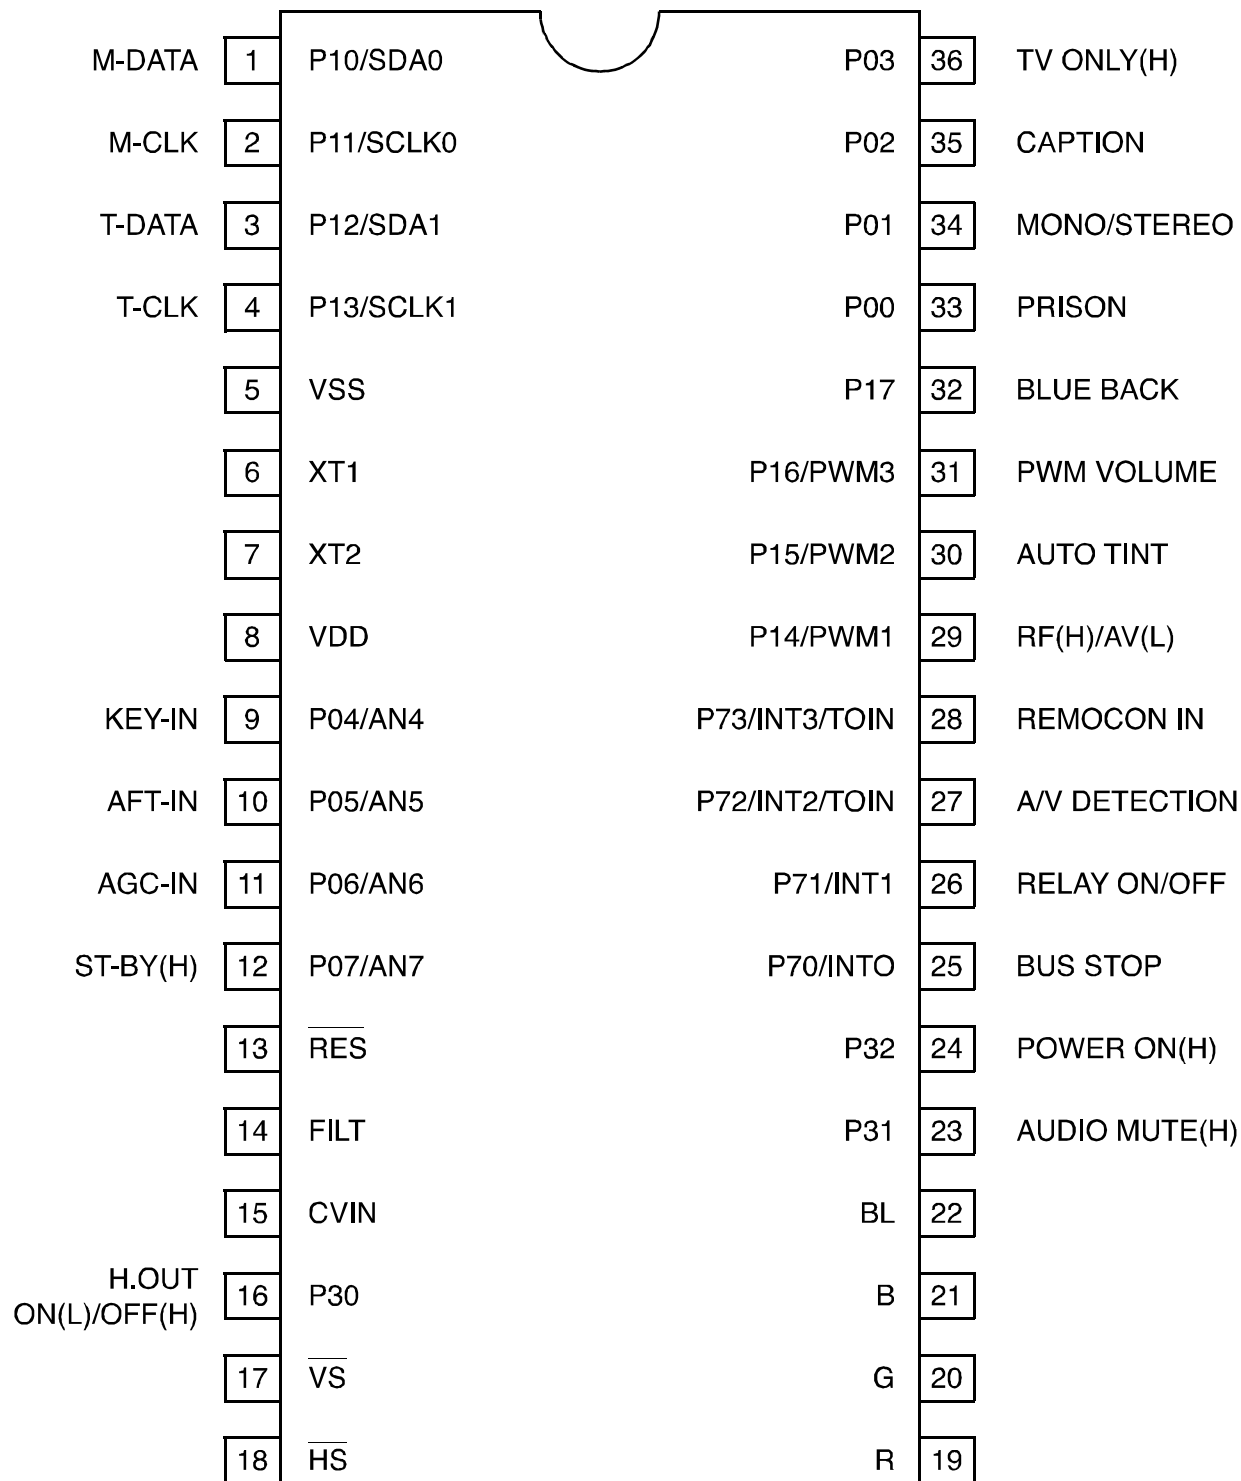

XTAL:32.768 KHz

**1. Abstract.**

This specification is 1-Tuner Mono Model for North/South America, CCD 1-Chip MICOM LC863228A.

It is developing software specification for tuning only NTSC

**2. H/W Outline.**

1) ROM : 28,672 x 8bits.tsc

: 15,872 x 8 bits for CGROM.

2) RAM : 512 x 8bits.

: 352 x 9bits.(for CRT Display)

3) OSD Function.

☞ Screen Display. : 36 characters x 16 lines.(by software)

☞ RAM : 352 words. (9 bits per word)

Display area. : 36 words. x 8 lines.

1st control area. : 8 words. x 8 lines.

☞ Characters.

244 patterns programmable.

Up to 244 kinds of 16 x 17 dot characters.

Up to 244 kinds of 8 x 9 dot characters.

or

Up to 244 kinds of 16 x 32 dot characters used 16K bytes.

☞ Various characters attributes.

Character colors. : 16 colors

Character background colors. : 16 colors

Fringe / shadow colors. : 16 colors

Full screen colors. : 16 colors

Rounding.

Underline.

Italic character.(slanting)

☞ Attribute can be changed without spacing.

☞ Vertical display start line number can be set for each row independently.(Row can be overlapped.)

☞ Horizontal display start position can be set for each row independently.

☞ Different display modes can be set for each row independently.

Caption and Text mode/ OSD mode 1/ OSD mode 2(Quarter size)/ Simplified graphic mode.

☞ Ten character sizes.

Horiz. x Vert. = (1x1),(1x2),(2x2),(2x4),(0.5x0.5)

(1.5x1),(1.5x2),(3x2),(3x4),(0.75x0.5)

☞ Shuttering and scrolling on each row.

**3. System Feature.**

1) The system for TV tuning is Frequency Synthesis type.

2) Closed Captions function is interior designed.

- 3) On Screen Displays function is interior designed.
- 4) Package. : 36 PIN SDIP.
- 5) Tuner (Pre-scaler.) : I<sup>2</sup>C Bus.  
/PLL IC : TAU 6014-S(SIEMENS).
- 6) Remocon. : The IC of Transmission (MITSUBISHI M50560)
- 7) E<sup>2</sup>PROM. : 24C04(I<sup>2</sup>C Bus) ◇ Apply one byte Read/Write mode.
- 8) 6-Local Key. : A/D Input Control.(Power, Ch Up/Down, Vol Up/Down, Menu)
- 9) Option S/W : Port Input Option Check.
- 10) IF/V/C/D IC : DTC814(LA79814)

#### 4. Function.

- 1) C. C. D. function.
  - A section of C. C. D. operates FCC based specification.
- 2) C. C. D. controlled function.
  - Closed Caption Mode. (Off<-->C1<-->C2<-->T1<-->T2<-->Off)
  - CC On Mute.(Off <-->C1<-->C2<-->Off)
  - Closed Caption is prior to CC On Mute.
- 3) Tuning Function.
  - I<sup>2</sup>C Bus.
  - PLL IC Interface.
  - FS 181 Channel (AIR 2-69CH, CABLE 1-125CH)
  - AFT Operation(Fine Tuning ) -2.5Fn+2.5MHz
  - AIR/CABLE (STD, HRC, IRC ). Only Cable 5,6CH is that AFT range is cover over broad-band. -2.5MHzFn+3.5MHz..
  - Memorize Channels.(If a channel is broadcasting, the channel is memorized.)
  - Direct Tuning(09KEY)
  - Channel Up/Down.(Memorized Channels) -> The Ch Up/Down buttons on the Remocon and on the front panel are same function.
  - Search Channel Up/Down.(If No-Memory or only 1CH is Memory)
  - Channel Memory.(ADD/DELETE)
  - Channel Review Function.
  - Last Channel Memory Function.
- 4) OSD Function.
  - In Line(Video) Mode, Things(Items) that is concerned with Air and Cable disappear in the Menu.
  - Channel, AV display.
  - Small & Graphic ICON Menu.
  - Volume / Picture control --> I<sup>2</sup>C Bus Control
- 5) The Others Function.
  - Video/Audio Mute Function.
  - If a Channel is no signal, after 15 minutes is Auto-Power Off Function.

- Auto Power On Function.(Power Restore function in the Special Menu)
- Heat Run Function. --- OSD White Back-Ground
- Sleep Timer.
- Wake Up Time Function.
- Off Time Function.
- Remote Reception & Control.
- Auto Tint.----- (Option)
- Power Restore.
- Input(TV/Line) Controlled function. ----- (Option)
- Reception.(Air/Cable : Factory Initial Condition)
- Blue Background.----- (Option)
- 3-Language (North America : ENG/SPA/FRA, South America : ENG/SPA/POR ).
- E<sup>2</sup>PROM Interface (I<sup>2</sup>C Bus Control)
- CH 6 TRAP Function.(IS-31 )
- PLL IC Band Data.(Control Byte 2-->P3~P0)
- VHF L : 1
- VHF H : 2
- CH6 TRAP : 5 (IS-31) AIR(Cable) CH 6 Only
- UHF : 8

### 5. The Table of Option and Schedule.

Model Name	Pin	Option	Application	Reference
CN - 001N	#30	Auto Tint	O	- Low(DC_0V) : ON(Auto Tint)
				- High(DC_5V) : OFF
	#32	Bule Back	O	- Low(DC_0V) : Blue Back
				- High(DC_5V) : No Blue Back
	#33	Prison	O	- Low(DC_0V) :Normal
				- High(DC_5V) : Prison
	#34	Mono/Stereo	O	- Low(DC_0V) : Mono
				- High(DC_5V) :Stereo
	#35	Caption	X	- No Use.
				- No Use.
	#36	TV only	O	- Low(DC_0V) :TV/Video
				- High(DC_5V) :TV/Only
Total Sun			6	- Use. (No Use.)

## 6. Pin Description

PIN	Terminal	Name	Explanation	Remarks								
1	P10/SDA0	ROM Data Main IC Data	6 bit input/output port Input/output can be Specified for each bit Other function. <table><tr><td>P10</td><td>IIC0 data I/O</td></tr><tr><td>P11</td><td>IIC0 clock output.</td></tr><tr><td>P12</td><td>IIC1 data I/O</td></tr><tr><td>P13</td><td>IIC1 clock output.</td></tr></table>	P10	IIC0 data I/O	P11	IIC0 clock output.	P12	IIC1 data I/O	P13	IIC1 clock output.	
P10	IIC0 data I/O											
P11	IIC0 clock output.											
P12	IIC1 data I/O											
P13	IIC1 clock output.											
2	P11/SCLK0	ROM CLK Main IC CLK										
3	P12/SDA1	Tuner Data										
4	P13/SCLK1	Tuner CLK										
5	VSS	GND	GND Negative power supply.									
6	XT1	XT1	It uses 32.768KHz X-TAL. 10 pin is input terminal for crystal oscillator. 11 pin is output terminal for crystal oscillator.									
7	XT2	XT2										
8	VDD	VDD	+5V ( 0.5V) Positive power supply.									
9	P04/AN4	KEY-IN	Power, Ch up/down, Vol up/down, Menu									
10	P05/AN5	AFT-IN	Dc value that comes from the 10 pin of LA76810/14									
11	P06/AN6	AGC-IN	Connect this port to AGC of Tuner Default Voltage : 3.75V Variable Voltage : 3.25V, 3.5V, 4.0V									
12	P07/AN7	ST-BY(H)	Use only japan Model. This port uses when is Stand - By status Condition : Input AC Power On Power off : High (DC 5V) Output. (Red) Power on : Low (DC 0V) Output.									
13	/FES	/RES	Reset terminal. Active Low									
14	FILT	Filter	Filter terminal for PLL Output terminal									
15	CVIN	CVSB IN	Video signal input terminal									
16	P01	TV/VID	TV Mode : High Line(Video) Mode : Low									
17	/VS	/VS	Vertical synchronization signal input terminal									
18	/HS	/HS	Horizontal synchronization signal input terminal									
19	R	R	Red output terminal of RGB image									
20	G	G	Green output terminal of RGB image									



PIN	Terminal	Name	Explanation
21	B	B	Blue output terminal of RGB image
22	BL	BL	Fast blanking control signal Switch TV image Signal and caption / OSD image signal Output terminal
23	P31	Audio Mute	Use only read data of LA76814/10
24	P32	Power On	Use when does power off/on Power off: Output Low(DC 0V) Power on: Output High(DC 5V)
25	P70/INT0	Bus Stop	No Use
26	P71/INT1	Relay On/Off	Relay On/Off Terminal
27	P72/INT2	A/V Detection	Detect port of Front A/V
28	P73/INT3	Remocon In	Input of Remocon Signal
29	P14/PWM1	RF(H)/AV(L)	High: RF only mode Low: RF/AV mode
30	P15/PWM2	AUTO TINT	Low (DC-0V) : On(Auto Tint) High (DC-5V) : Off
31	P16/PWM3	PWM VOLUME	Use only to control Sound of Stereo mode
32	P17	BLUE BACK	High (DC-5V) : No Blue Back Low (DC-0V) : Blue Back
33	P00	PRISON	Low (DC-0V) : Normal High (DC-5V) : Prison
34	P01	MONO/STEREO	Low (DC-0V) : Mono High (DC-5V) : Stereo
35	P02	CAPTION	No Use
36	P03	TV ONLY(H)	Low (DC-0V) : TV/Video High (DC-5V) : TV Only


Output form and existence of pull- up resistor for every port can be specified for each bit.

At port 1, Programable pull- up resistor provided when specifying either COOS or N- ch open drain output.  
Port status in reset.


Teriminal	I/O	Pull- up resistor status at selection pull- up option.
Port 0	I	Pull- up resistor OFF, ON after reset release.
Port 1	I	Programmable pull- resistor OFF.

**I101**

LA76845 : IC VIDEO PROCESSOR

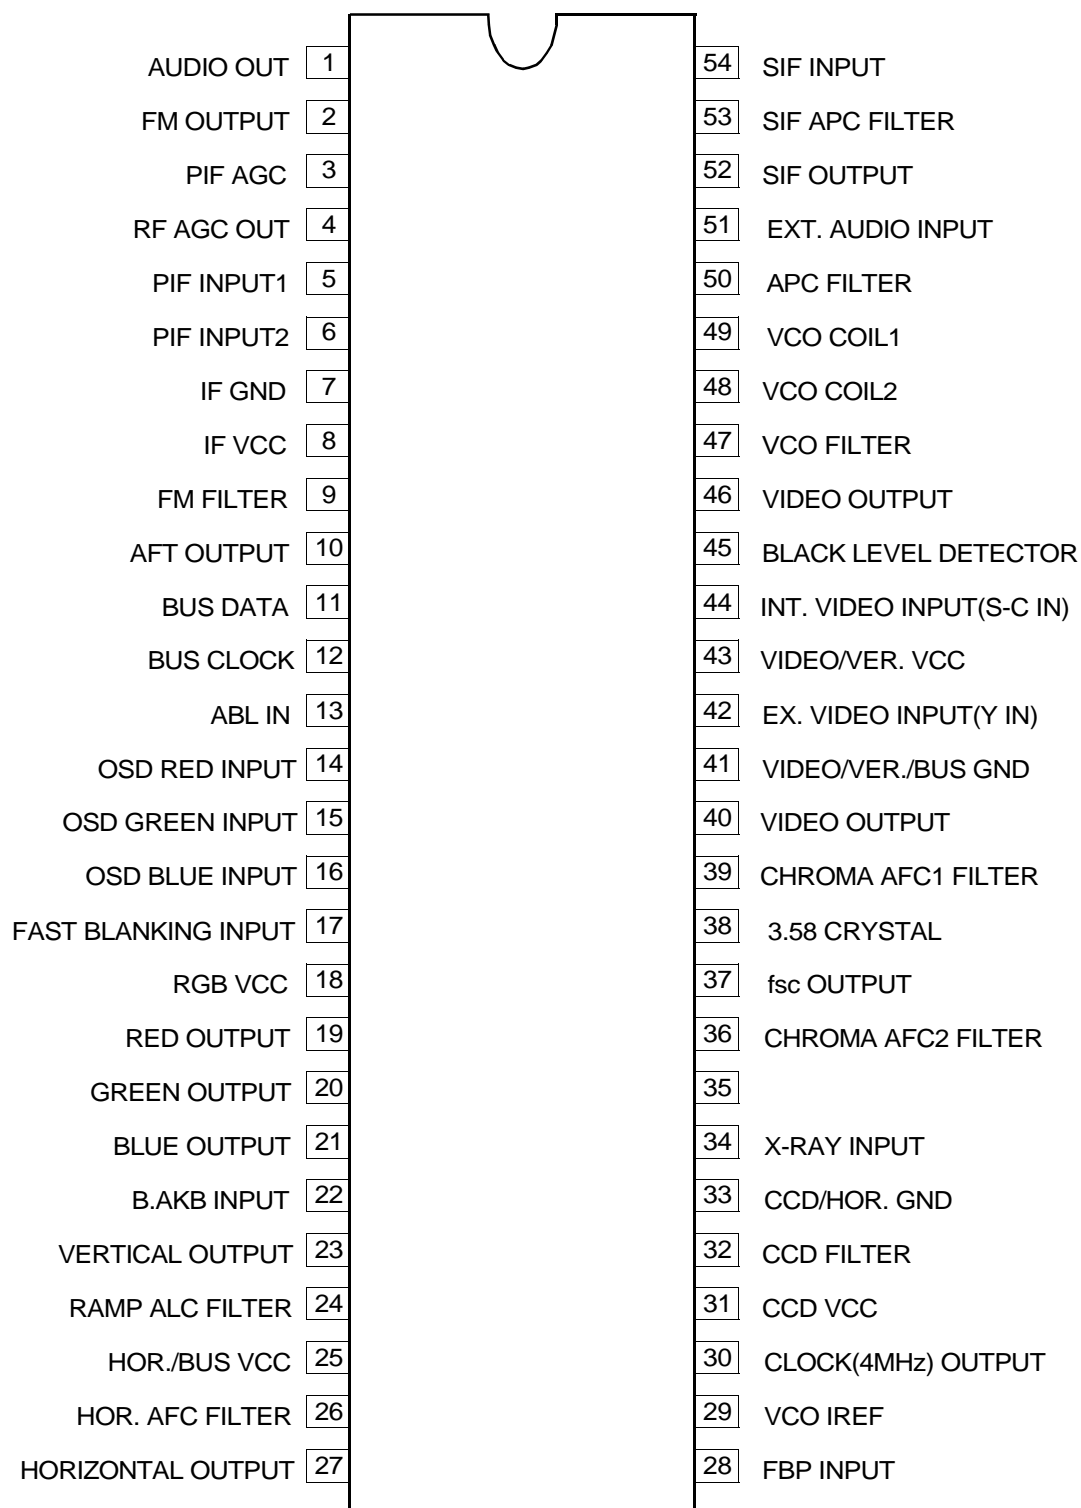


## 1. NO POWER

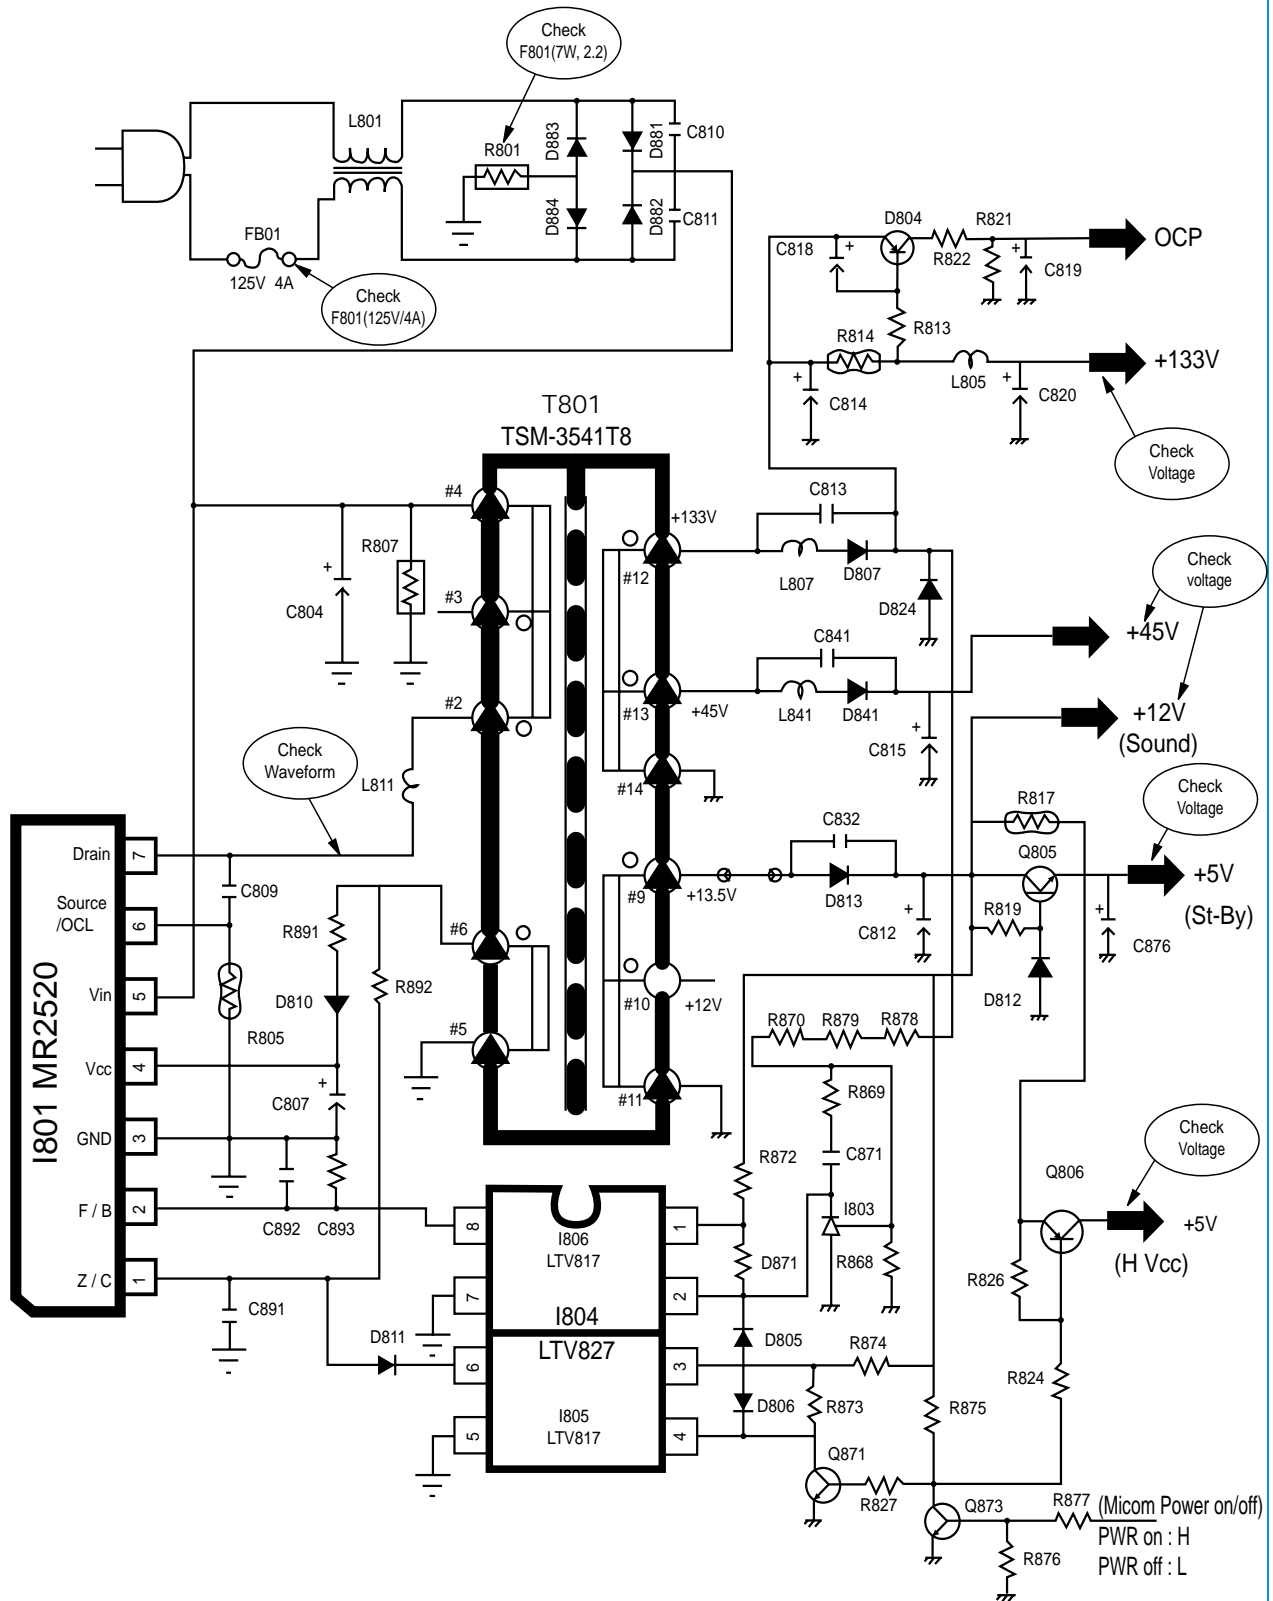

## 2. NO PICTURE

Check the waveform of I101 #46	NG : GO to the figure ㉓
	OK : Go the figure ㉔

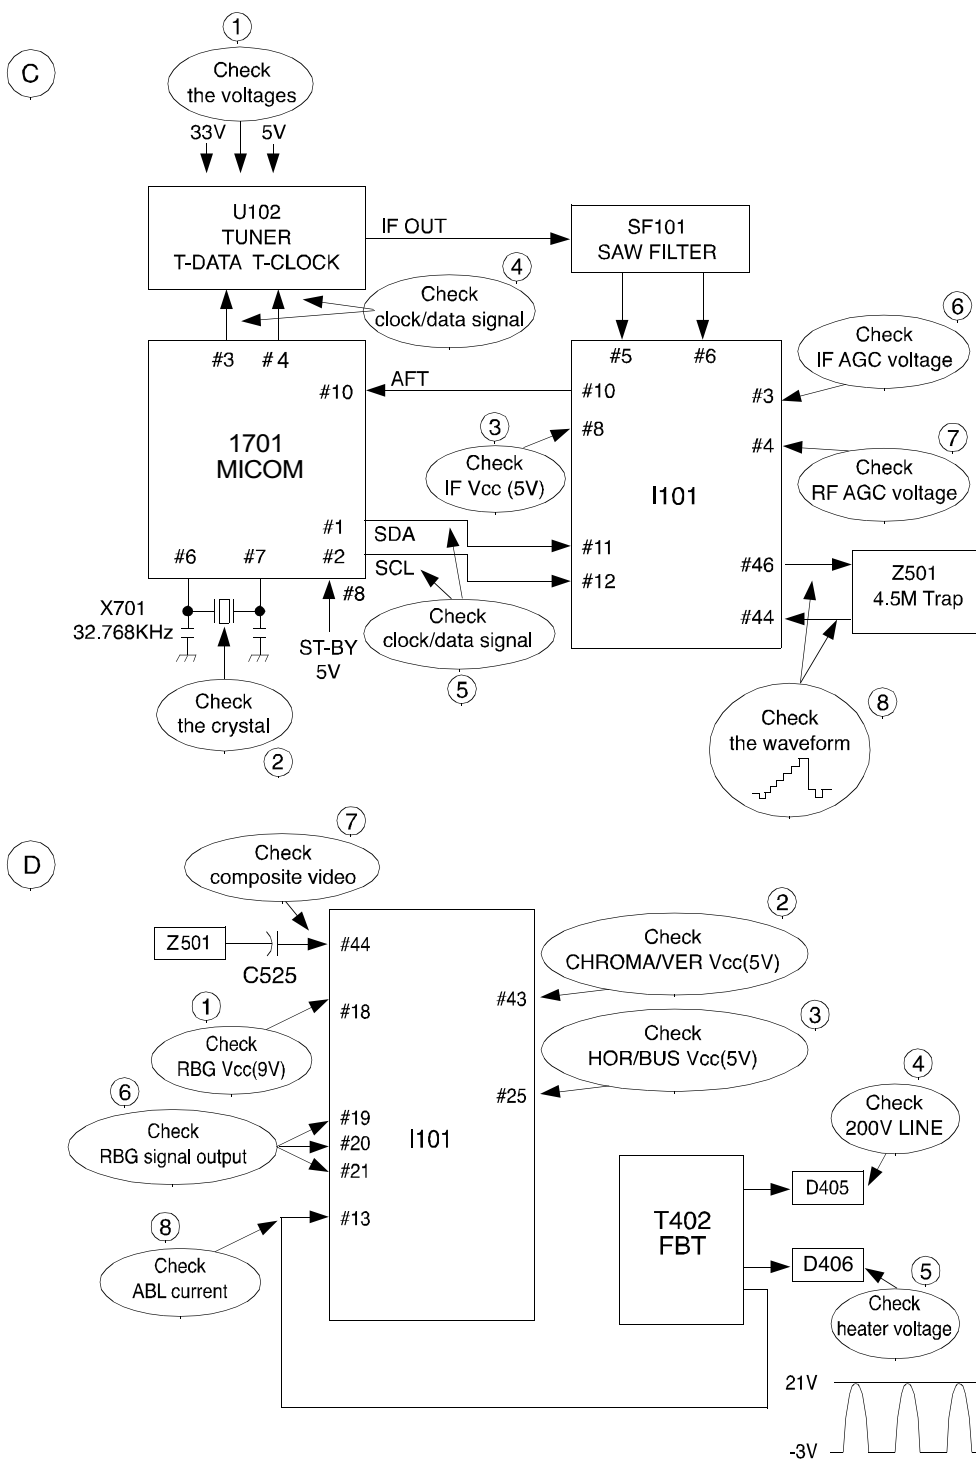


## 3. NO SOUND

Check audio output signal of I101 #1

NG : Go to the figure ㉔


OK : Go to the figure ㉕ ㉖

㉔

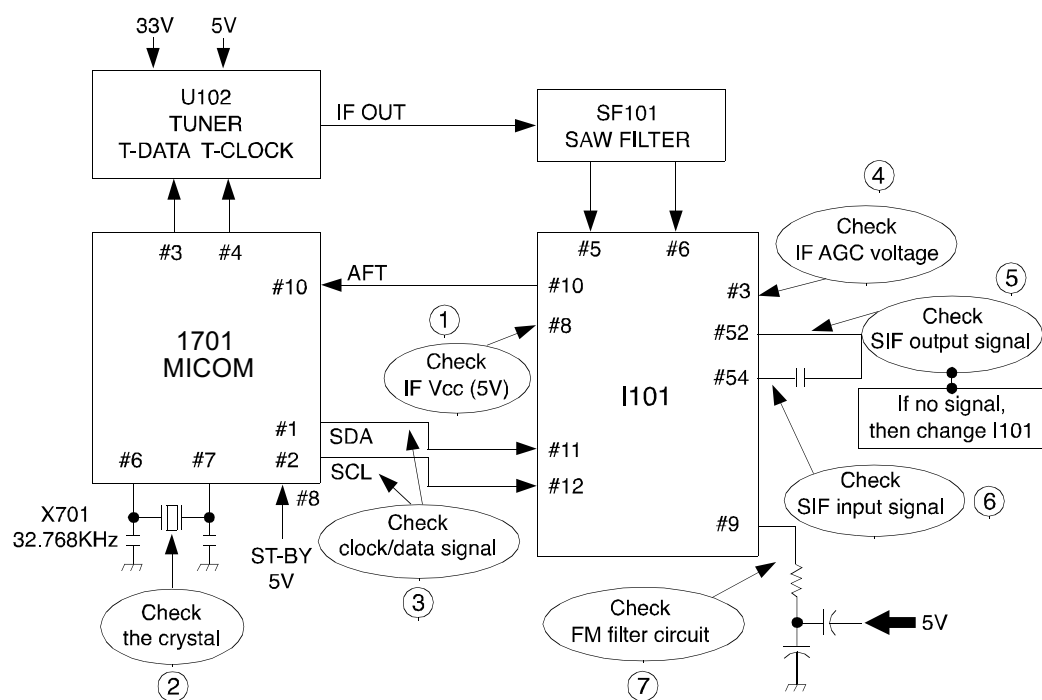


㉕

(MONO ONLY)

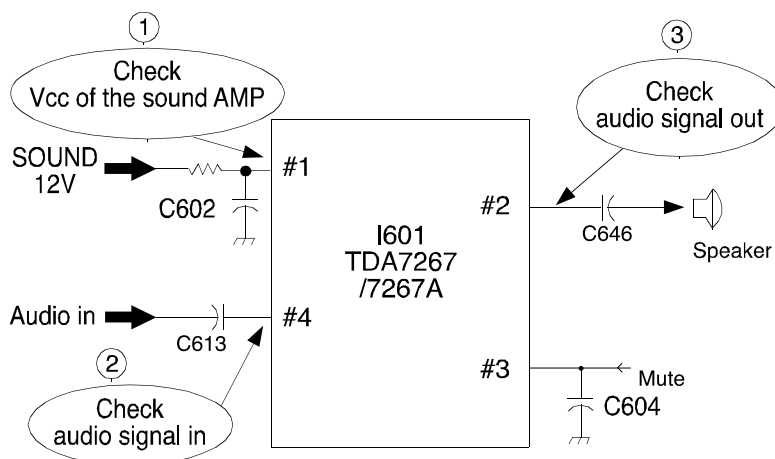


## 4. CH DON'T MEMORY or SKIP


Check the input signal conditions	NG : Loss of signal or weak signal
	OK : Go to the figure (H)

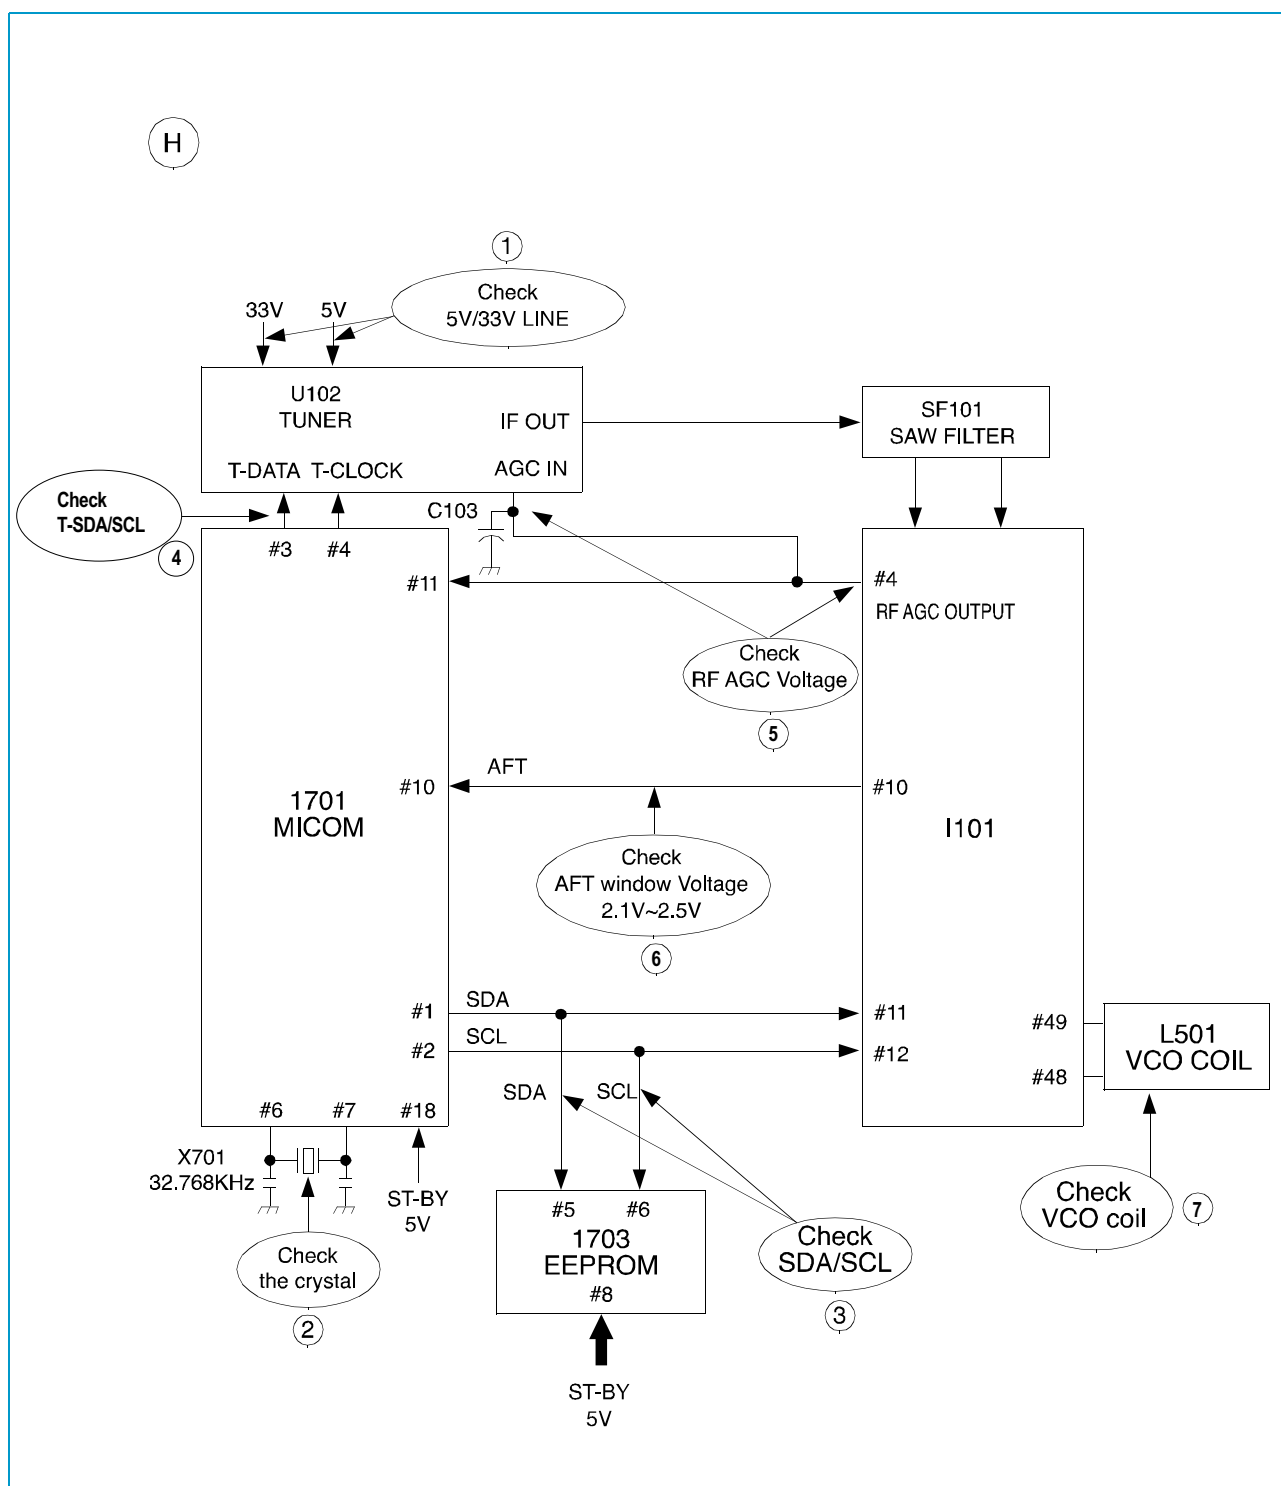


## 5. NO COLOR

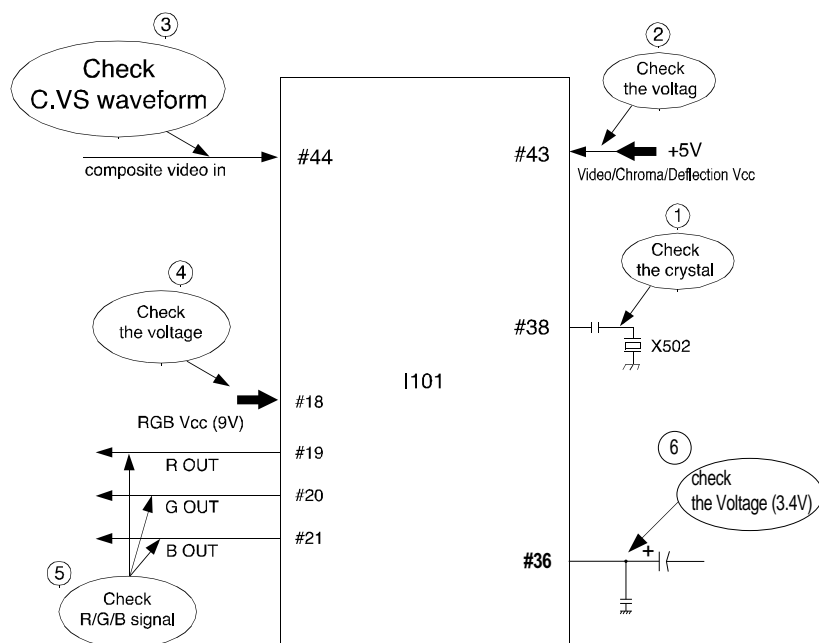

## 6. NO VERTICAL DEFLECTION

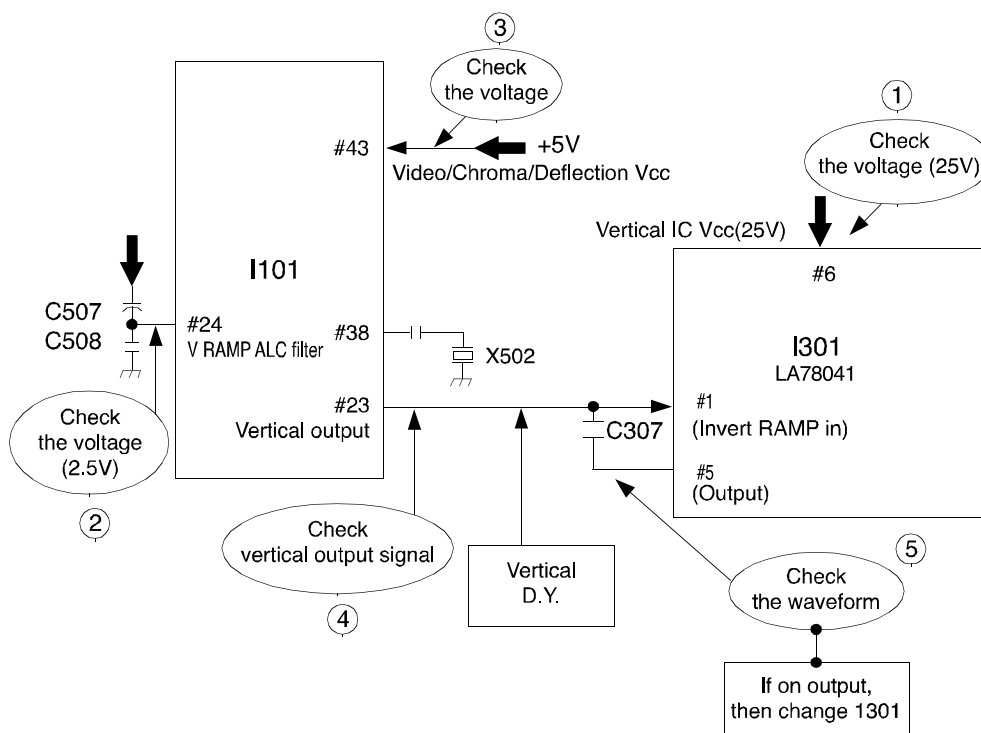

## 7. NO ON-SCREEN DISPLAY

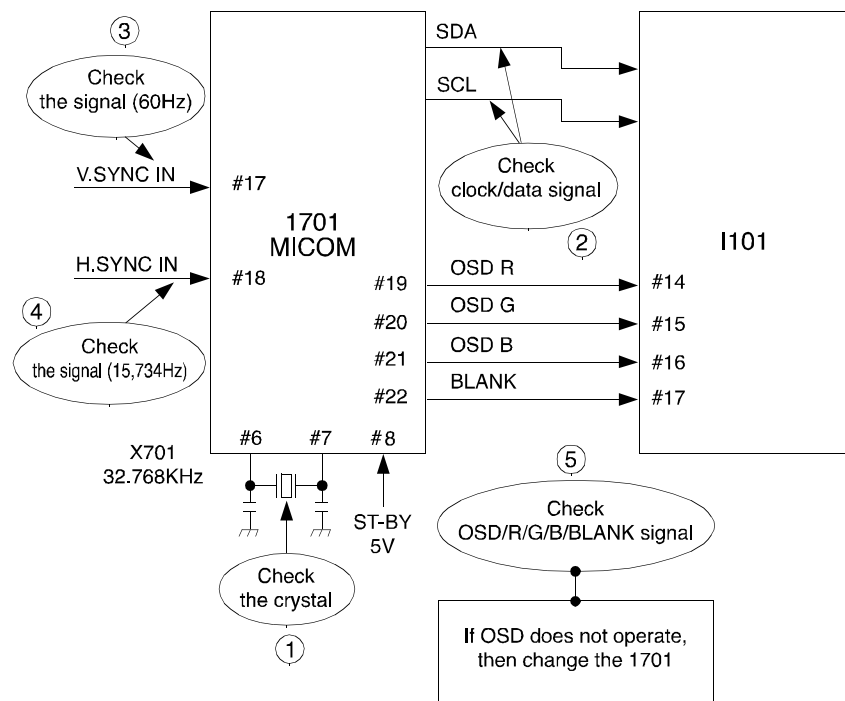

## 8. REMOTE CONTROL DOES NOT OPERATE

