

ONKYO® SERVICE MANUAL

Integrated Stereo Amplifier MODEL A-8170

UD	120V AC, 60Hz
UG	220V AC, 50Hz
UQ	240V AC, 50Hz
UW, UWX	120V/220V AC, 50Hz/60Hz

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PARTS NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

TABLE OF CONTENTS

Specifications	2
Block diagram	3
Adjustment procedures	4
Precautions	4
Packing procedures	5
Chassis exploded view	6
Exploded view parts list	7
Front panel facilities	8
System connections	8
IC block diagram	9
Printed circuit board parts list	10
Schematic diagram (120V model)	13
Printed circuit board view	15
Schematic diagram (120V/220V model)	17
Schematic diagram (220V, 240V model)	21


ONKYO
AUDIO COMPONENTS

SPECIFICATIONS

Power Output:	80 watts per channel, min RMS. at 8 ohms, both channels driven from 20 Hz to 20 kHz, with no more than 0.008% Total harmonic distortion.
Dynamic Power:	224 watts 2 ohms, 170 watts 4 ohms
Total Harmonic Distortion	0.008% at rated power 0.008% at 1 watt output
Intermodulation Distortion:	0.005% at rated power
Damping Factor:	50 at 8 ohms.
Input Sensitivity/ Impedance :	Phono (MM): 2.5 mV/50 kohms Phono (MC): 160 μ V/220 ohms CD DIRECT: 150 mV/50 kohms TUNER: 150 mV/50 kohms Tape Play: 150 mV/50 kohms VCR Play: 150 mV/50 kohms VDP Play: 150 mV/50 kohms
Output Level/Impedance:	Tape Rec: 150 mV/1.5 kohms (Phono)
Phono Overload:	Phono (MM): 200 mV RMS. at 1 kHz, 0.015% THD.
Tone Control (Vol -20 dB):	CONTRABASS: +10 dB at 20 Hz BASS: $\pm$ 10 dB at 70 Hz TREBLE: $\pm$ 8 dB at 20 kHz
High Cut:	6 kHz (6 dB/Octave) (TREBLE min.)
Frequency Response:	CD, Tuner: 2 Hz-50 kHz (+0, -1 dB)
RIAA Deviation:	Phono (MM): $\pm$ 0.3 dB, 20 Hz-20 kHz
Signal to Noise Ratio (IHF-A):	Phono (MM): 93 dB (5 mV input) Phono (MC): 74 dB (0.5 mV input) CD DIRECT: 107 dB
Muting:	-20 dB
Power Supply:	USA & Canadian models: AC120V, 60 Hz European models: AC220V, 50 Hz U.K & Australia models: AC240V, 50 Hz Worldwide models: AC120V 60Hz and AC220V 50Hz switchable
Dimensions:	435(W) x 147(H) x 388(D) mm 17-1/8" x 5-13/16" x 15-5/16"
Weight:	11.2 kg, 24.7 lbs.

Specifications and features are subject to change without notice.

BLOCK DIAGRAM

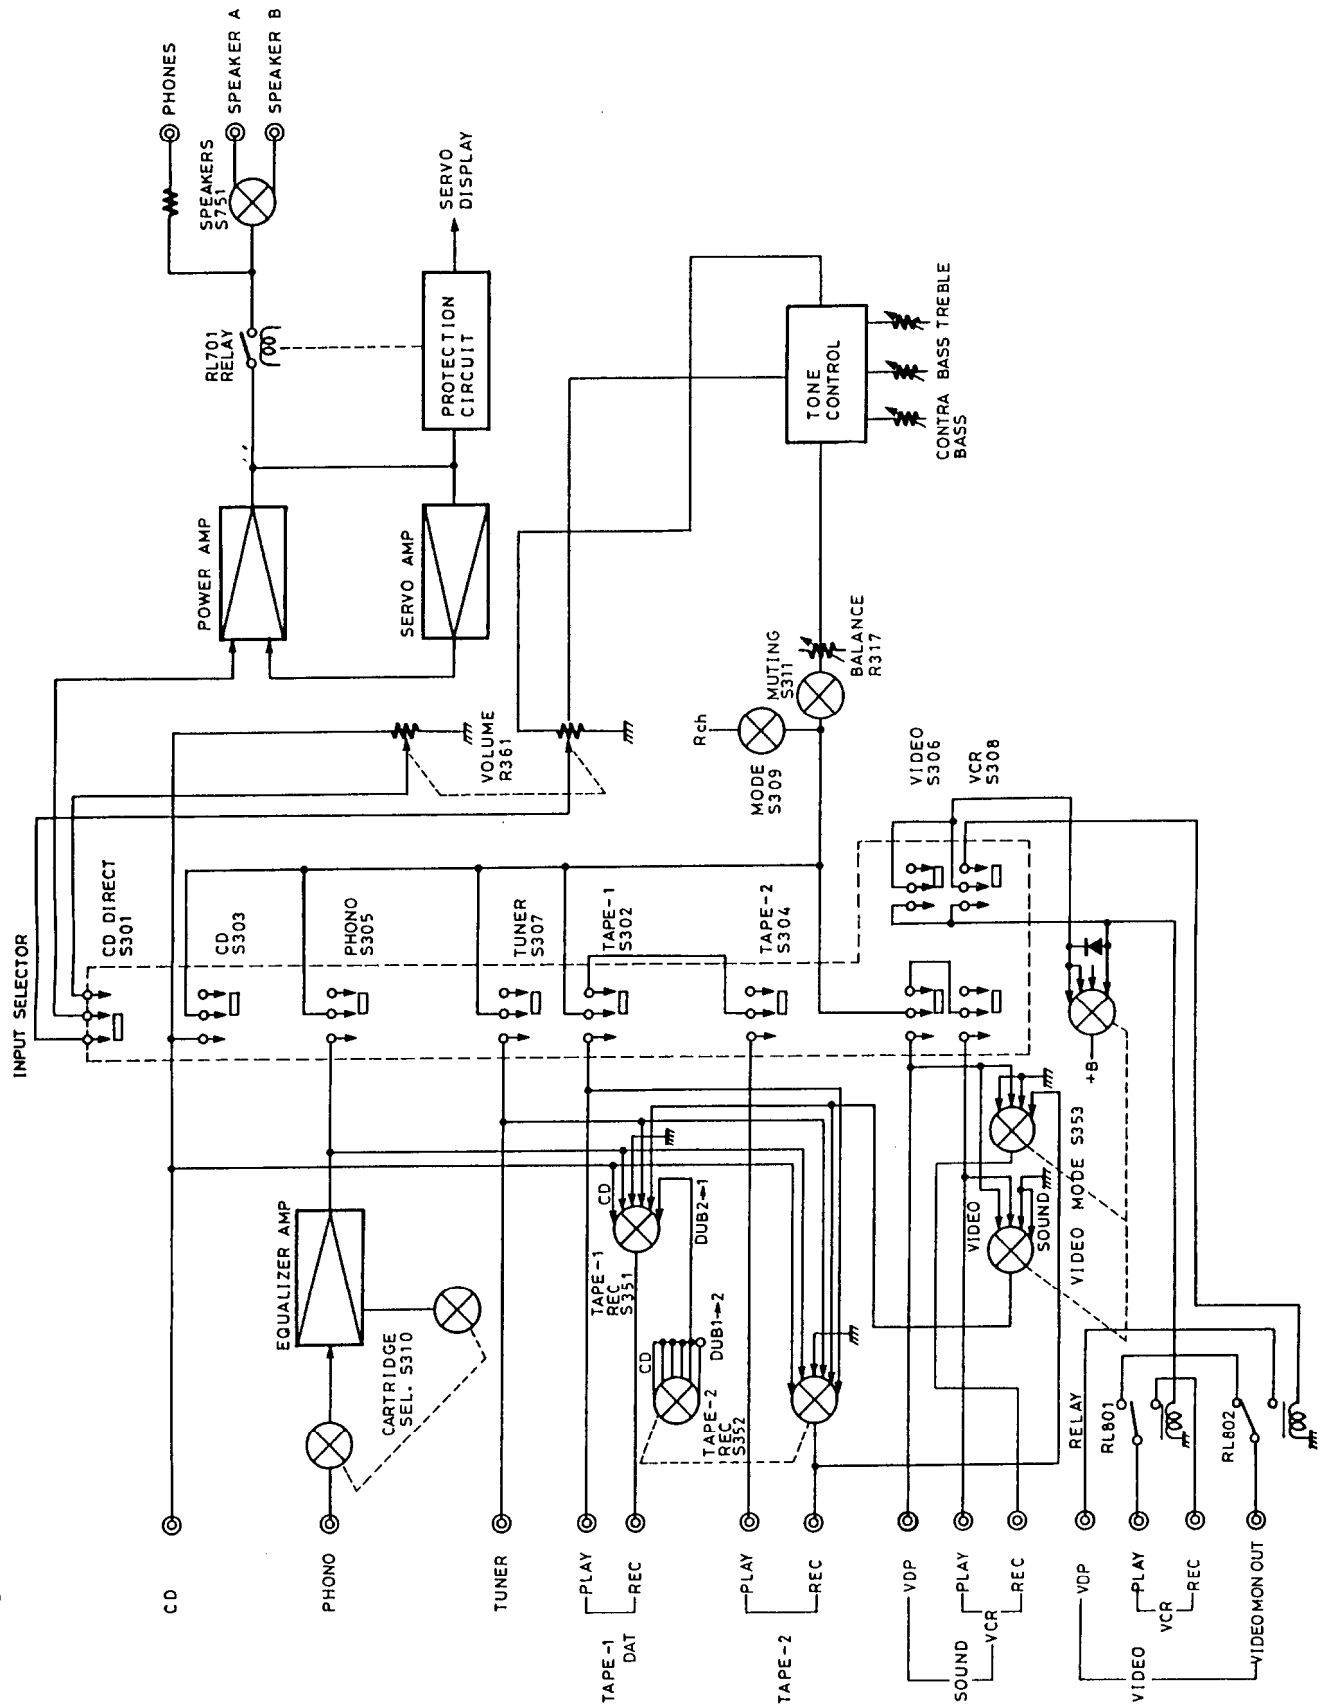

ADJUSTMENT PROCEDURES

1. Preparations

- 1) Leave the machine in a normal condition parallel to the work bench, maintaining a clearance of 15mm from the bottom for air circulation.
- 2) Set the level to minimum with no load and no signal.
- 3) When making the adjustment, there must be no breeze blowing from the outside.

2. Adjustment of idling current

- 1) Turn ON the power switch, and leave the unit as is for about 5 minutes.
- 2) Adjust the semi-fixed resistor R531 (R532) so that the voltage between the terminals V_{CT} and I_{ID} of the printed circuit board NAAF-2983 is 7.5mV.

3. Operating check of protection circuit

- 1) When the power switch is turned ON.
 - After about 5 second, relay RL701 of the NAAF-2983 printed circuit board go ON.
 - Operation indicator lights.
- 2) When the power is turned OFF.
 - Immediately a relay go OFF.
- 3) With no load, when $\pm 200\text{mV}$ DC is CD input, the speaker relay go OFF.

Caution: During this test, there should be absolutely no load connected and the load terminals must not be shorted.

PRECAUTIONS

1. Replacing the fuses

For continued protection against risk fire, replace only with same type and same rating fuse.



CIRCUIT NO.	PART NO.	DESCRIPTION
F901	252050	6 A(ST-6), Primary fuse (120V model)
F902	252076 or	3.15 A-SE-EAK Primary fuse (220V, 240V, 120V/220V model)
	252076CC	3.15 A-SE-EAK Primary fuse (220V, 240V, 120V/220V model)

2. Insulation resistance measurement (Only U.S.A. model)


Connect the insulating-resistance tester between the plug of power supply cable and the terminal GND on the back panel.
Specifications; More than 10 M Ω at 500V.

3. Voltage selector (rear panel)

Worldwide models are equipped with a voltage selector to conform with local power supplies. Be sure to set this switch to match the voltage of the power supply in your area before turning the power switch on. Voltage is changed by sliding the groove in the switch with a screwdriver or similar instrument to up or down position. Confirm that the switch has been moved all the way to up or down before turning the power switch on. If there is no voltage selector switch on the unit you have purchased, it can only be used in areas where the power supply voltage is the same as that of the unit.

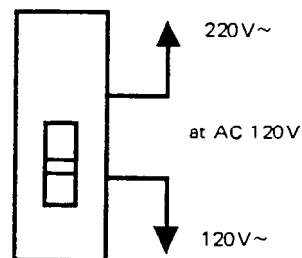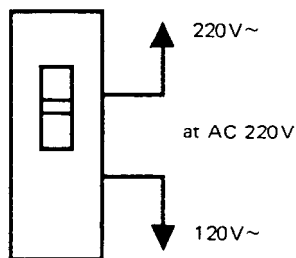

PACKING PROCEDURES

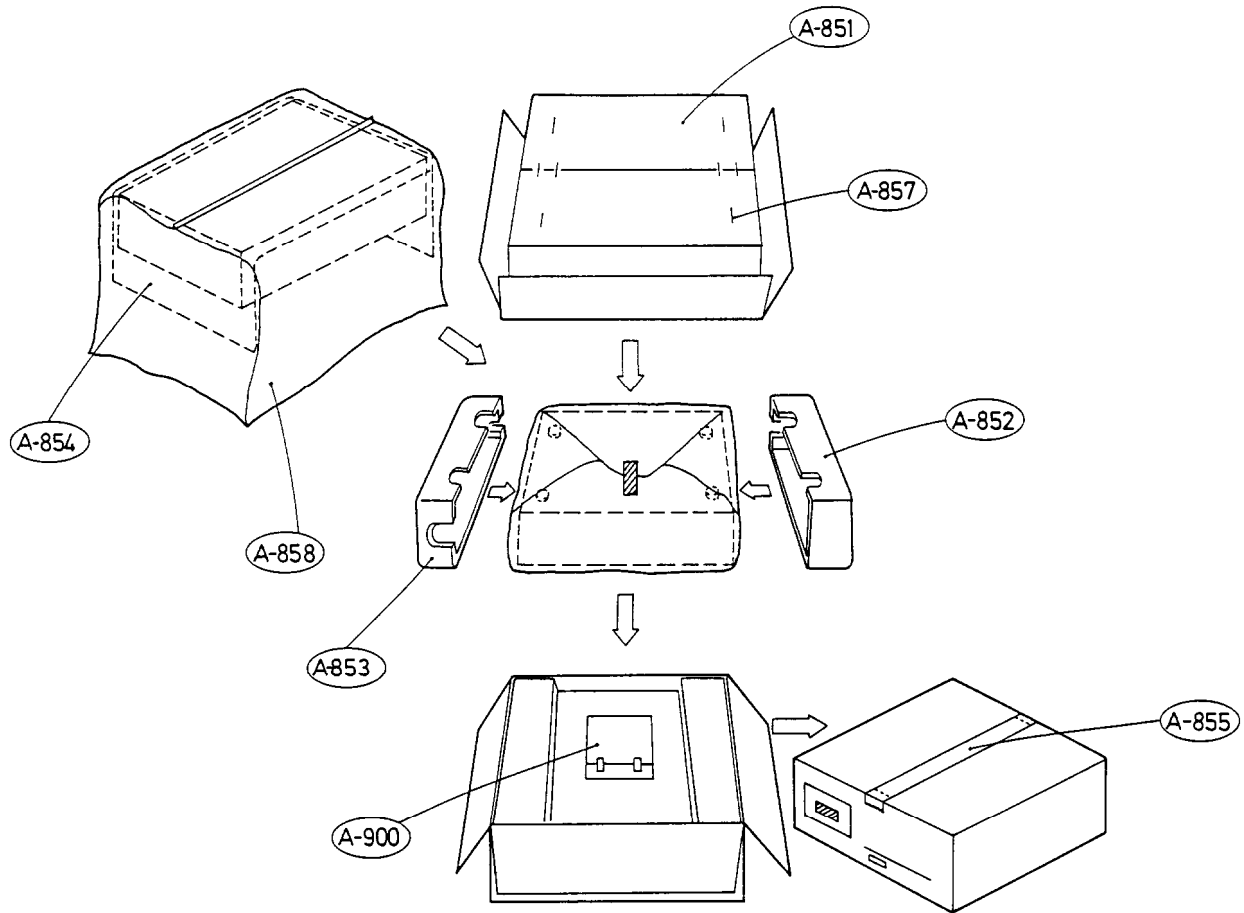


REF. NO.	PART NO.	DESCRIPTION
A851	29051538	MASTER CARTON BOX
A851	29051559	MASTER CARTON BOX [X]
A852	29091159	PAD LEFT
A853	29091160	PAD RIGHT
A854	29095012-1	SHEET 800×500
A855	260012	DAMPLON TAPE W50 BROWN
A857	282301	STAPLE 16H
A858	29100038A	POLY BAG 720×950
	29360778	LABEL (FLASH) [N]
	29360815	LABEL (120) [X]
	29380084	CAUTION (120) [X]
	29360816	LABEL (220) [X]
	29380085	LABEL (220) [X]
	28330072	CAP (AC OUTLET) [X]
A900		ACCESSARYBAG
	29341154	INSTRUCTION MANUAL [D] [N] [X]
	29341155	INSTRUCTION MANUAL [G] [W] [A] [B]
	29341160	INSTRUCTION MANUAL (I) [G] [W]

REF. NO.	PART NO.	DESCRIPTION
	29365019	WARRANTY CARD [N]
	29365021	WARRANTY CARD [X]
	29358002E	SERVICE STATION LIST [N] [X]
	25055018	CONVERSION PLUG CV-K-1 [W]
	25055251	CONVERSION PLUG CV-CP [X]
	29100006A	POLY BAG 350×250

NOTE

[D] : ONLY 120V MODEL
 [G] : ONLY 220V MODEL
 [W] : ONLY 120V/220V MODEL
 [N] : ONLY U.S.A. MODEL
 [X] : ONLY MILITARY MARKET MODEL
 [A] : ONLY AUSTRALIAN MODEL
 [B] : ONLY BRITISH MODEL

CHASSIS-EXPLODED VIEW

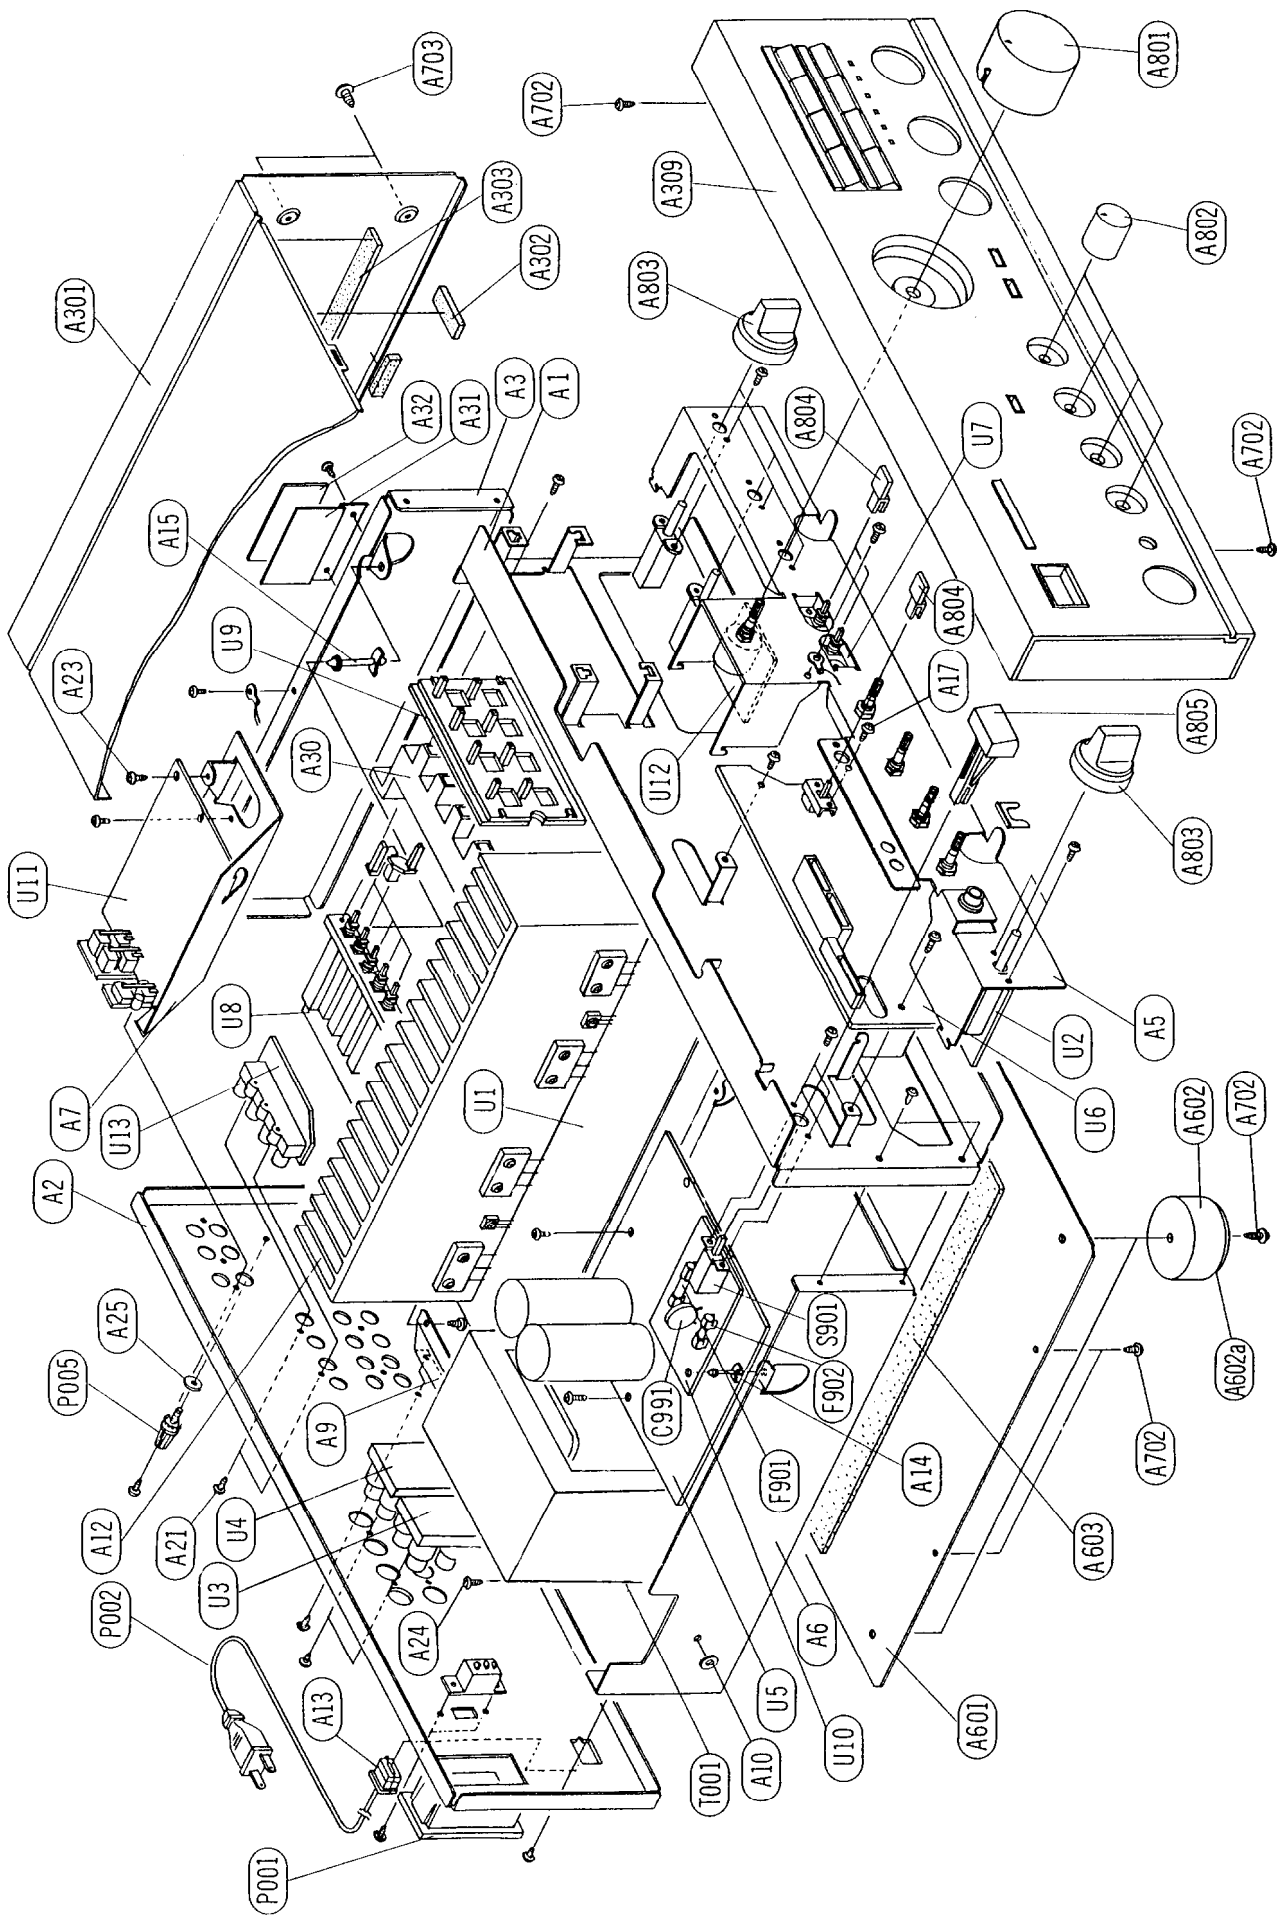


CHASSIS-EXPLODED VIEW-PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
A1	27110361	FRONT BRACKET	Δ S001	25065123	SLIDE SWITCH, NSS-1258P	U7	1A026590-1	NAAF-2990-1, TONE CONTROL
A2	27121004	BACK PANEL			[W] [X]			CIRCUIT PC BOARD ASS'Y
A2	27121005	BACK PANEL [G]	Δ S901	25035398	POWER SWITCH, NPS-111-L362P	U8	1A026591-1	NASW-2991-1, INPUT SELECTOR
A2	27121007	BACK PANEL [W]	Δ P001	25050293	AC SOCKET, NSCT-6P120 [D] [X]			SWITCH PC BOARD ASS'Y
A2	27121008	BACK PANEL [X]	Δ P002	253123 or	AC CORD, AS-UC-6#18 or [D] [X]	U9	1A026592-1	NADIS-2992-1, DISPLAY LED
A2	27121009	BACK PANEL [A] [B]		253136 or	AC CORD, AS-UC-6#18 or [D] [X]			PC BOARD ASS'Y
A3	27115224	SIDE BRACKET		253140	AC CORD, AS-UC-6#18 [D] [X]	U10	1A026593-1	NASW-2993-1, POWER SWITCH
A5	27130473	BRACKET (F)	Δ P002	253130A or	AC CORD, AS-CEE or [G]			PC BOARD ASS'Y
A6	27130474	BRACKET (L)		253128B	AC CORD, AS-CEE [G]	U10	1A026593-1A	NASW-2993-1A, POWER SWITCH
A7	27130450	BRACKET (EQ)	Δ P002	253092-1A	AC CORD, AS-CEE-2 [W]			PC BOARD ASS'Y [G] [A] [B]
A8	28140730	CUSHION	Δ P002	253118	AC CORD, AS-SAA [A]	U10	1A025593-1B	NASW-2993-1B, POWER SWITCH
A9	27141084A	BRACKET (H)	Δ P002	728320 or	AC CORD, 2-0.75BS16 BLK/GRY			PC BOARD ASS'Y [W]
A10	27270212	SPACER			[B]	U10	1A025593-1C	NASW-2993-1C, POWER SWITCH
A11	27270213	SPACER (PT)		728328	AC CORD, 2-0.75BS16 BLK/GRY			PC BOARD ASS'Y [X]
A12	27160203	HEATSINK			[B]	U11	1A026594-1	NAAF-2994-1, EQUALIZER
A13	27300750	BUSHING (CORD)	P005	25060044	TERMINAL			CIRCUIT PC BOARD ASS'Y
A14	27190011	HOLDER LCBS-6NS		252051	FUSE, 6A ST-6	U11	1A026594-1B	NAAF-2994-1B, EQUALIZER
A15	27190532	HOLDER KGLS-7S	Δ F901	250113	FUSE HOLDER, S-N5051			CIRCUIT PC BOARD ASS'Y
A17	82143006	PAN HEAD SCREW, 3P+6FNBC	Δ F901a	252076 or	FUSE, 3.15A-SE-EAK			[G] [W] [X]
A21	834430108	TAP-TIGHT SCREW, 3TTS+10BBC	Δ F902	252076C	[G] [W] [X] [A] [B]	U12	1A026595-1	NAAF-2995-1, VOLUME
A23	831130088	TAP-TIGHT SCREW, 3TTW+8B			[G] [W] [X] [A] [B]			CONTROL PC BOARD ASS'Y
A24	830440109	TAP-TIGHT SCREW, 4TTC+10CBC			[G] [W] [X] [A] [B]	U13	1A026596-1	NAETC-2996-1, VIDEO
A25	87613010	WASHER, W3X10F	Δ F902a	25050065	FUSE HOLDER, YSH403T			TERMINAL PC BOARD ASS'Y
A30	27273059A	JOINT ASS'Y			[G] [W] [X] [A] [B]			
A31	27150236	SHIELD PLATE	Δ C991	3500065A	0.01μF, AC 400V/125V,	NOTE		
A32	28175140	INSULATING PLATE			CAPACITOR (IS)	[D]: ONLY 120V MODEL		
A301	28184365	TOP COVER	Q517, Q518	2212864 or	2SC3419 Y or	[G]: ONLY 220V MODEL		
A302	28140020	CUSHION	Q609, Q610	2212863	2SC3419 O	[W]: ONLY 120V/220V MODEL		
A303	28140695	CUSHION		2201803 or	2SC3857 O or	[X]: ONLY MILITARY MARKET MODEL		
A309	1A025121	FRONT PANEL		2201806 or	2SC3857 P or	[A]: ONLY AUSTRALIAN MODEL		
A601	27170234B	BOTTOM BOARD		2201804	2SC3857 Y	[B]: ONLY BRITISH MODEL		
A602	27175153	LEG ASS'Y	Q611, Q612	2201793 or	2SA1493 O or			
(A602a)	28140747	CUSHION		2201796 or	2SA1493 P or			
A701	834430088	TAP-TIGHT SCREW, 3TTS+8BBC	U1	2201794	2SA1493 Y			
A702	838440089	TAP-TIGHT SCREW, 4TTB+8CBC		1A026583-1	NAAF-2983-1, REC.SELECTOR			
A801	28323027	KNOB (VOL)			AND POWER AMPLIFIER			
A802	28323029	KNOB (TONE)	U2	1A026584-1	CIRCUIT PC BOARD ASS'Y			
A803	28322700	KNOB (SP)			NASW-2984-1, SPEAKER			
A804	28322701	KNOB (PUSH)	U3	1A026585-1	SWITCH PC BOARD ASS'Y			
A805	28322702A	KNOB (POW)			NAETC-2985-1, SPEAKER			
Δ T001	2300230	POWER TRANSFORMER, NPT-962D	U4	1A026586-1	TERMINAL PC BOARD ASS'Y			
Δ T001	2300231	POWER TRANSFORMER, NPT-962G [G]			NAETC-2986-1, SPEAKER			
Δ T001	2300232	POWER TRANSFORMER, NPT-962DG [W] [X]	U5	1A026588-1	TERMINAL PC BOARD ASS'Y			
Δ T001	2300233	POWER TRANSFORMER, NPT-962Q [A] [B]	U6	1A026589-1	PC BOARD ASS'Y			


NOTE: THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

SCHEMATIC DIAGRAM (120V Model)

A B C D E F G

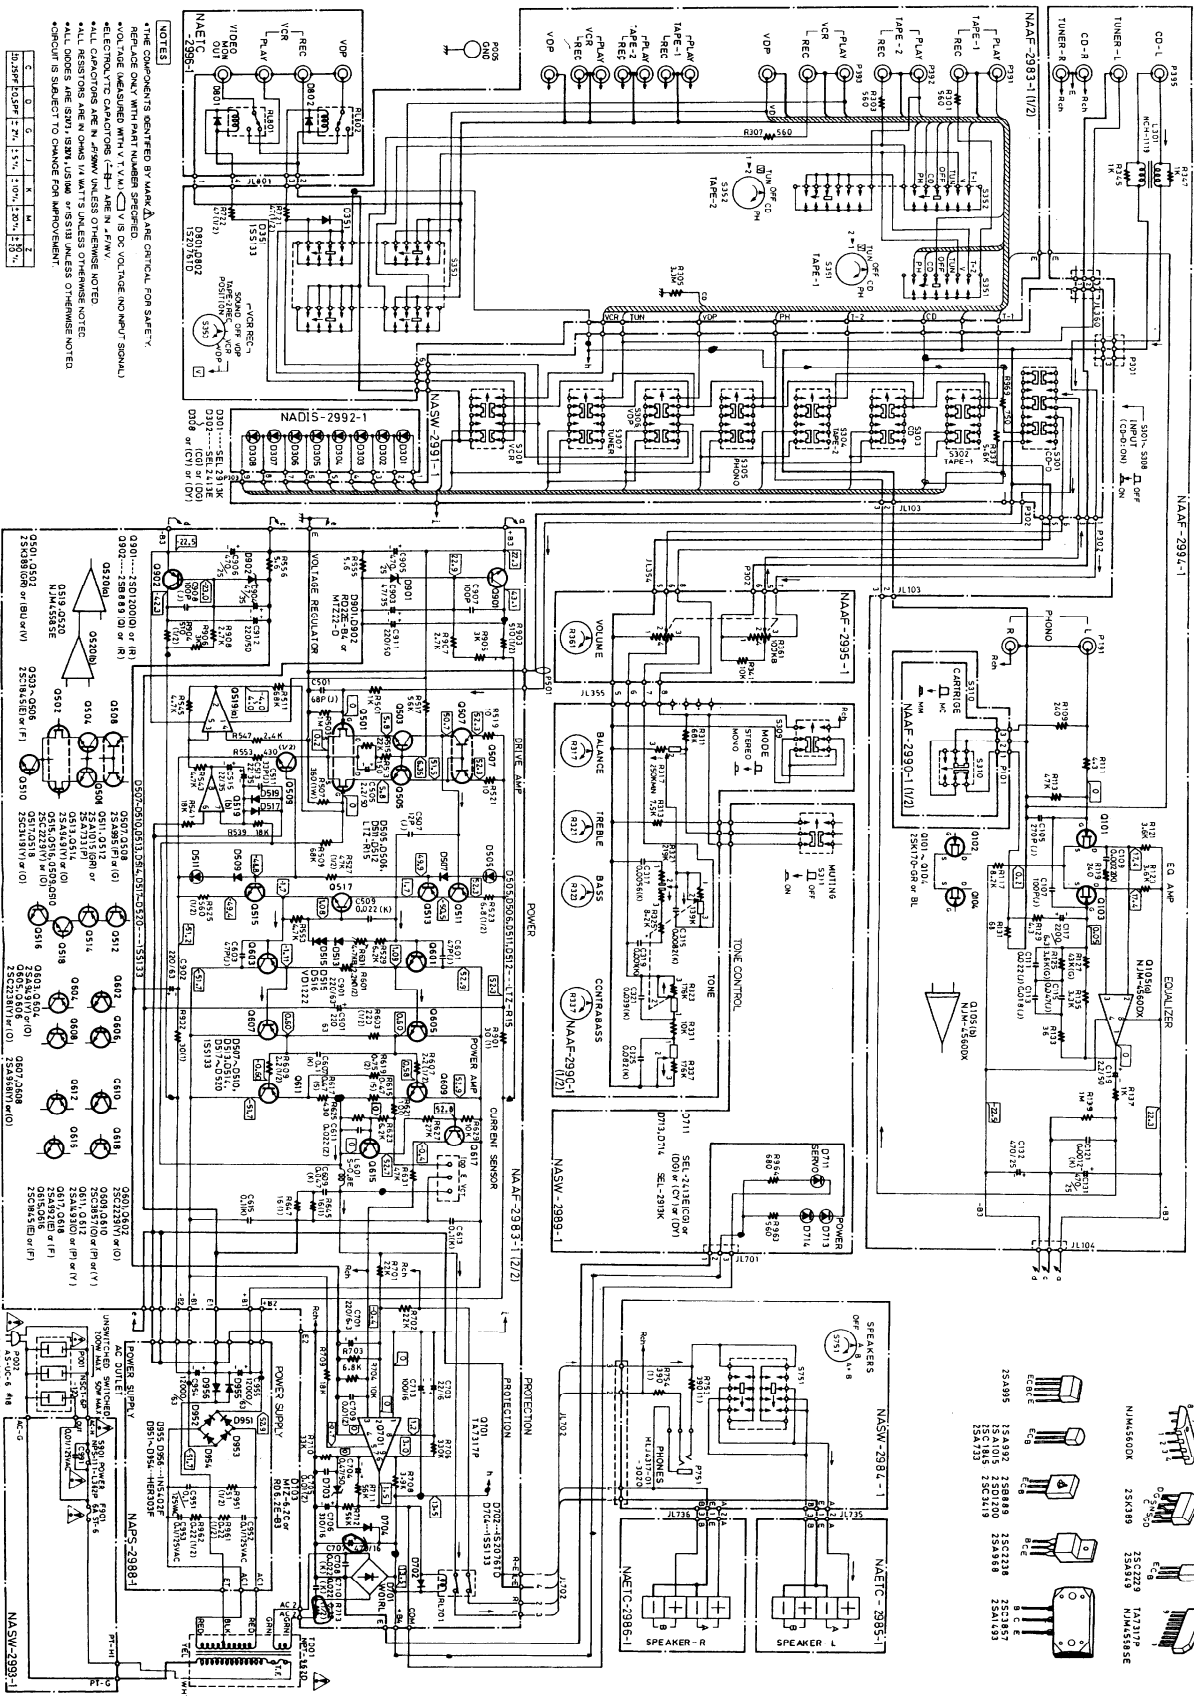


FRONT PANEL FACILITIES

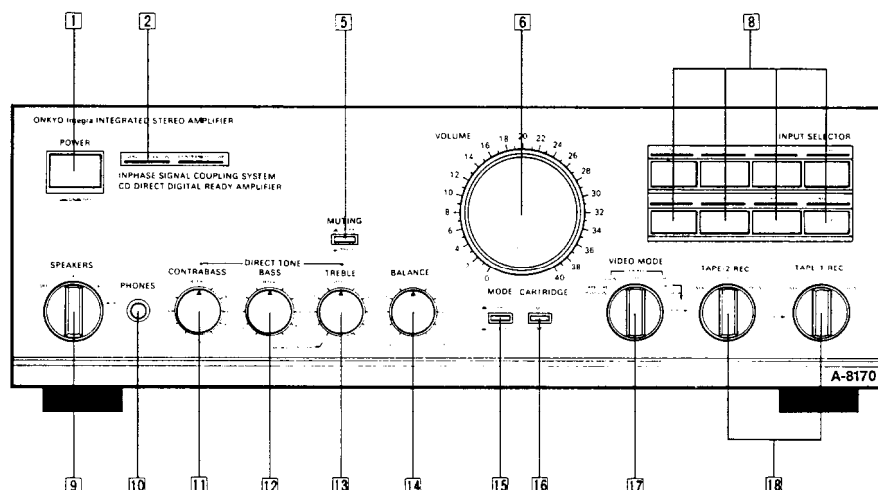

1. Power switch (POWER)
2. Servo operation indicator (SERVO OPERATION)
5. Muting switch (MUTING)
6. Volume control (VOLUME)
8. Input selector switches and indicator (INPUT SELECTOR)
CD DIRECT, CD, PHONO, TUNER, TAPE-1/DAT, TAPE-2, VDP, VCR
9. Speaker selector (SPEAKERS)
OFF, A, B, A+B
10. Headphone jack (PHONES)
11. Contra bass (CONTRA BASS)
12. Bass control (BASS)
13. Treble control (TREBLE)
14. Balance control (BALANCE)
15. Mode selector (MODE)
STEREO, MONO
16. Cartridge selector (CARTRIDGE)
MC, MM
17. Video mode switch (VIDEO MODE)
SOUND, OFF, VDP-VCR, VDP
18. Recording source selectors (TAPE-1 REC, TAPE-2 REC)
TAPE-1 DVB 2 ► 1, V,
TUNER, OFF, PHONO, CD
TAPE-2 DVB 1 ► 2, V,
TUNER, OFF, PHONO, CD

SYSTEM CONNECTIONS

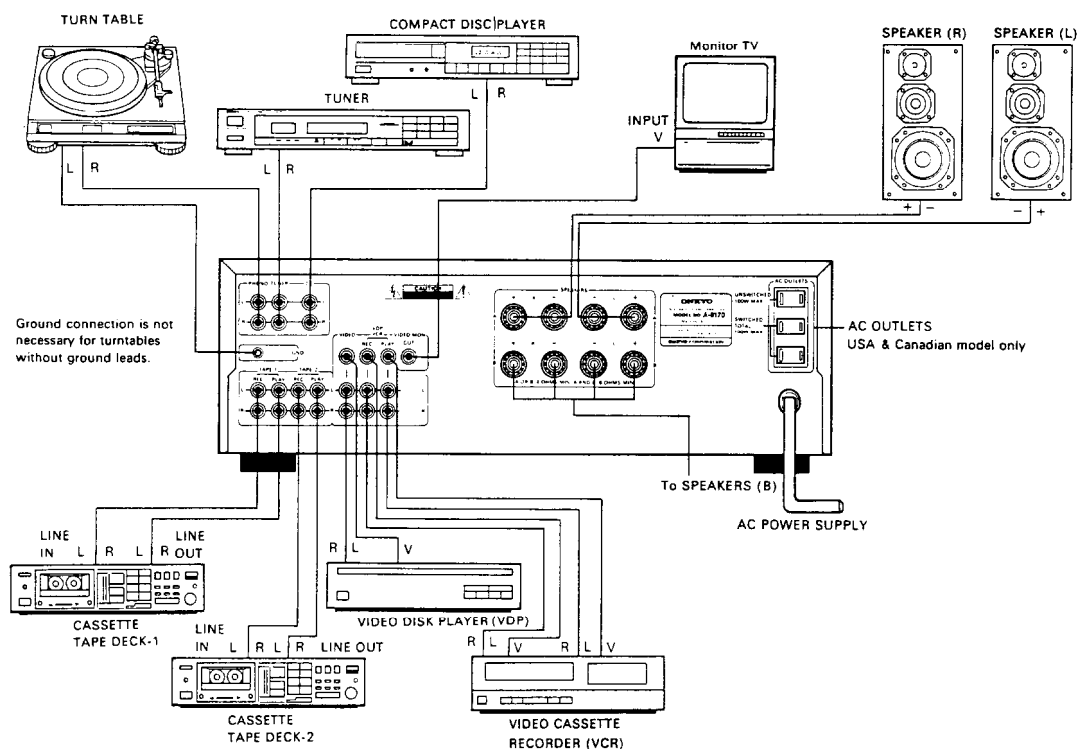

PRINTED CIRCUIT BOARD PARTS LIST

REC.SELECTOR AND POWER AMPLIFIER CIRCUIT PC BOARD (NAAF-2983-1)-PART LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
ICs		
Q519, Q520	222942	NJM4558SE
Q701	222584	TA7317P
Transistors		
Q501, Q502	2212805 or	2SK389 GR or
	2212806 or	2SK389 BL or
	2212807	2SK389 V
Q503~Q506, Q615	2211733 or	2SC1845 E or
Q616	2211732	2SC1845 F
Q507, Q508	2211515 or	2SA995 F or
	2211516	2SA995 G
Q509, Q510, Q515	2211634 or	2SC2229 Y or
Q516, Q601, Q602	2211633	2SC2229 O
Q511, Q512	2211455 or	2SA1015 GR or
	2210803	2SA733 P
Q513, Q514, Q603	2211354 or	2SA949 Y or
Q604	2211353	2SA949 O
Q605, Q606	2200864 or	2SC2238 Y or
	2200863	2SC2238 O
Q607, Q608	2200874 or	2SA968 Y or
	2200873	2SA968 O
Q617, Q618	2211793 or	2SA992 E or
	2211792	2SA992 F
Q901	2201512 or	2SD1200 Q or
	2201513	2SD1200 R
Q902	2201502 or	2SB889 Q or
	2201503	2SB889 R
Diodes		
D507~D510, D351	223163	1SS133
D513, D514, D704		
D517~D520		
D505, D506, D511	225232	LTZ-R15, LED
D512		
D515, D516	4000068	VD1222
D701	223890	W01RL
D702	223145	1S2076TD
D703	2239493 or	RD6.2E B3 or
	2243163	MTZ6.2-C
D901, D902	2239754 or	RD22E-B4 or
	2243294	MTZ22-D
Coils		
L601, L602	231134S	S-0.8E
Capacitors		
C501, C502	372126804	68pF, 50V, Styrene
C505, C506	354780229	2.2μF, 50V, Elect.
C509, C510	379122235	0.022μF, 50V, Film (DEW)
C511, C512	372123304	33pF, 50V, Styrene
C513~C516	354762209	22μF, 35V, Elect.
C607, C608	379121045	0.1μF, 50V, Film (DEW)
C613~D616		
C609, C610	379124735	0.047μF, 50V, Film (DEW)
C701	354722219	220μF, 6.3V, Elect.
C703	354742209	22μF, 16V, Elect.
C704	354784799	0.47μF, 50V, Elect.
C706	354743319	330μF, 16V, Elect.
C707	354744719	470μF, 16V, Elect.
C708, C710	379122235	0.022μF, 50V, Film (DEW)
C713	354741019	100μF, 16V, Elect.
C901, C902	354772219	220μF, 63V, Elect.
C903, C904	354764709	47μF, 35V, Elect.
C905, C906	354754719	470μF, 25V, Elect.
C911, C912	354782219	220μF, 50V, Elect.

CIRCUIT NO.	PART NO.	DESCRIPTION
Resistors		
R507, R508	441623614NF	360Ω, 1W, Metal oxide film
R523, R524	442520684F	6.8Ω, 1/2W, Metal oxide film
R525, R526	442525614F	560Ω, 1/2W, Metal oxide film
R527, R528	442524734F	47 kΩ, 1/2W, Metal oxide film
R531, R532	5210062	N06HR4.7KBD, Semi-fixed
R533, R534	442524314F	430Ω, 1/2W, Metal oxide film
R601, R602	442522224F	2.2kΩ, 1/2W, Metal oxide film
R603, R604	442522214F	220Ω, 1/2W, Metal oxide film
R607~R610	442520224F	2.2Ω, 1/2W, Metal oxide film
R615~R618	4000080	0.47Ω, 5W, Metal plate
R619, R620	441727594NF	0.75Ω, 2W, Metal oxide film
R645~R648	441621604NF	16Ω, 1W, Metal oxide film
R713	442522294F	0.22Ω, 1/2W, Metal oxide film
R721, R722	442524704F	47Ω, 1/2W, Metal oxide film
R901, R902	441623004NF	30Ω, 1W, Metal oxide film
R903, R904	442525114F	510Ω, 1/2W, Metal oxide film
Relay		
RL701	25065316	NRL-2P7 A-DC12-43
Switches		
S351, S352	25030261	NRSM-146-15SS
S353	25030259	NRSM-164-15SS
Terminals		
P391, P392	25045165	NPJ-4PDBL-59
P393	25045166	NPJ-6PDBL-60
Socket		
P501	2000551	NSAS-6P507
Plate		
	27300877	Bus

SPEAKER SWITCH PC BOARD (NASW-2984-1)-PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
Resistors		
R753, R754	441623914F	390Ω, 1W, Metal oxide film
Switch		
S751	25030275	NRSM-144-15SS
Stereo jack		
P751	25045164	HLJ-4317-01-3020

SPEAKER TERMINAL PC BOARD (NAETC-2985-1) PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
Terminal		
P751	25060110	NTM-4PDMN44

SPEAKER TERMINAL PC BOARD (NAETC-2986-1) PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
Terminal		
P752	25060110	NTM-4PDMN44

POWER SUPPLY PC BOARD (NAPS-2988-1)-PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
Diodes		
D951~D954	22380012	HER303F
D955, D956	22380003F	1N5402F
Capacitors		
C951~C953	375101045	0.01 μ F, 125V, Film (ME)
C954, C955	3504209	12000 μ F, 63V, Elect.
Resistors		
R951	442525104F	51 Ω , 1/2W, Metal oxide film
R961, R962	442522294F	0.22 Ω , 1/2W, Metal oxide film
Plate		
	27300732	Bus

MUTING SWITCH PC BOARD (NASW-2989-1)-PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
Diodes		
D711	225137CG or	SEL2413E CG, LED
	225137CY or	SEL2413E CY, LED
	225137DG or	SEL2413E DG, LED
	225137DY	SEL2413E DY, LED
D713, D714	225142DX2	SEL2913K DX2, LED
Switches		
S311, S312	25035563	NPS-122-L525
Socket		
JL701	25050267	NSCT-3P95
Holder		
	27190493-1	(LED-3)

TONE CONTROL CIRCUIT PC BOARD (NAAF-2990-1) PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
Capacitors		
C315, C316	379128225	8200pF, 50V, Film (DEW)
C317, C318	379125625	5600pF, 50V, Film (DEW)
C319, C320	379121025	1000pF, 50V, Film (DEW)
C321, C322	379123935	0.039 μ F, 50V, Film (DEW)
C325, C326	379128235	0.082 μ F, 50V, Film (DEW)
Resistors		
R317	5148107	N16RGM250KMN25, Variable
R321	5148108	N16RGM11C219K25, Variable
R323	5144001	N16RQM11C139K176K25, Variable
R337	5148109	N16RGM11C176K25, Variable
Switches		
S309, (S310)	25035539	NPS-142-122-L501
Sockets		
P101, P102	2000676	NSAS-6P632

INPUT SELECTOR SWITCH PC BOARD (NASW-2991-1)-PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
Switches		
S301~S308	25035538	NPS-742-162-L500
Sockets		
P301	2000564	NSAS-6P520
P303	2000607	NSAS-18P563
P351, P354	25050272	NSCT-8P100
P352	25050271	NSCT-7P99
P353, P356	25050267	NSCT-3P95
P355	25050273	NSCT-9P101
JL352-1	25050267	NSCT-3P95
Plugs		
P302	25055137	NPLG-7P121
P501	25055133	NPLG-3P117

DISPLAY LED PC BOARD (NADIS-2992-1)-PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
Diodes		
D301	225142	SEL2913K, LED
D302~D308	225137DG or	SEL2413E DG, LED or
	225137DY or	SEL2413E DY, LED or
	225137CG or	SEL2413E CG, LED or
	225137CY	SEL2413E CY, LED
Plug		
P303	25055190	NPLG-9P174
Holder		
	27190531	(LED-8)

POWER SWITCH PC BOARD (NASW-2993-1, NASW-2993-1A, NASW-2993-1B, NASW-2993-1C)-PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
Switch		
S901	25035398	NPS-111-L362P
Capacitor		
C991	3500065A	0.01 μ F, AC400V/125V, (IS)
Fuse holders		
F901a	250113	S-N5051 [D][W][X]
F902a	25050065	YSH403T [G][W][X][A][B]

EQUALIZER CIRCUIT PC BOARD (NAAF-2994-1, NAAF-2994-1B)-PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
IC		
Q105	222570	NJM4560DX
Transistors		
Q101~Q104	2212185 or 2212186	2SK170 GR or 2SK170 BL
Coils		
L301, L302	231069A	NCH-1119
Capacitors		
C105, C106	372122714	270pF, 50V, Styrene
C107, C108	372121014	100pF, 50V, Styrene
C109, C110	379122225	2200pF, 50V, Film (DEW)
C111, C112	379122234	0.022μF, 50V, Film (DEW)
C113, C114	379121834	0.018μF, 50V, Film (DEW)
C115, C116	379124734	0.047μF, 50V, Film (DEW)
C117, C118	391222227	2200μF, 6.3V, Elect.(MUSE)
C119, C120	39280227	2.2μF, 50V, Elect.(MUSE)
C121, C122	379121225	1200 pF, 50V, Film (DEW)
C131, C132	354754719	470μF, 25V, Elect.
Terminals		
P191	25045171	NPJ-4PDBL-65
P395	25045180	NPJ-2PDBL70
Plugs		
P101, P102, P301	25055133	NPLG-3P117
Socket		
JL104, JL360	25050267	NSCT-3P95

VOLUME CONTROL PC BOARD (NAAF-2995-1)-PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
Resistors		
R361	5144004	N16RQM100KBT100KBT25, Variable
Socket		
P302	2000622A	NSAS-14P578

VIDEO TERMINAL PC BOARD (NAETC-2996-1)-PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
Diodes		
D801, D802	223145	1S2076TD
Relays		
RL801, RL802	25065298	NRL-1P1 A-DC12-40
Socket		
JL801	25050268	NSCT-4P96
Terminal		
	25045207	NPJ-4PDBL87

NOTE

[D]: Only 220V model
[G]: Only 240V model
[W]: Only 120V/220V model
[X]: Only Military market model
[A]: Only Australian model
[B]: Only British model