

HCD-RG221

SERVICE MANUAL

E Model

Ver 1.0 2004.04



- HCD-RG221 is the tuner, deck, CD and amplifier section in MHC-RG221.

CD Section	Model Name Using Similar Mechanism	New
	CD Mechanism Type	CDM74-F1BD81
	Optical Pick-up Name	KSM-215DCP/C2NP
Tape deck Section	Model Name Using Similar Mechanism	New
	Tape Transport Mechanism Type	CWM43FF-05

SPECIFICATIONS

Amplifier section

The following measured at AC 120, 127, 220, 240 V
50/60 Hz

DIN power output (rated): 100 + 100 watts (6 ohms at
1 kHz, DIN)

Continuous RMS power output (reference):
120 + 120 watts (6 ohms at
1 kHz, 10% THD)

CD player section

System Compact disc and digital
audio system

Laser Semiconductor laser
($\lambda=780$ nm)

Emission duration:
continuous

Frequency response 2 Hz – 20 kHz (± 0.5 dB)

Wavelength 780 – 790 nm

Signal-to-noise ratio More than 90 dB

Dynamic range More than 90 dB

Tape deck section

Recording system 4-track 2-channel, stereo

Frequency response 50 – 13,000 Hz (± 3 dB),
using Sony TYPE I
cassettes

Tuner section

FM stereo, FM/AM superheterodyne tuner

FM tuner section

Tuning range 87.5 – 108.0 MHz
(50-kHz step)

Antenna FM lead antenna

Antenna terminals 75 ohms unbalanced

Intermediate frequency 10.7 MHz

AM tuner section

Tuning range 530 – 1,710 kHz
(with the tuning interval
set at 10 kHz)

531 – 1,602 kHz
(with the tuning interval
set at 9 kHz)

Antenna AM loop antenna

Antenna terminals External antenna terminal

Intermediate frequency 450 kHz

General

Power requirements

Argentine models: 220 V AC, 50/60 Hz

Mexican models: 127 V AC, 60 Hz

Other models: 120 V, 220 V or

230 – 240 V AC, 50/60 Hz

Adjustable with voltage selector

Power consumption 180 watts

Dimensions (w/h/d) incl. projecting parts and controls

Amplifier/Tuner/Tape/CD section:
Approx. 280 × 327 ×
425 mm

Mass Approx. 10.0 kg

Design and specifications are subject to change
without notice.

MINI HI-FI COMPONENT SYSTEM

9-877-659-01

2004D1678-1

© 2004.04

Sony Corporation

Home Audio Company

Published by Sony Engineering Corporation

SONY®


NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts. The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

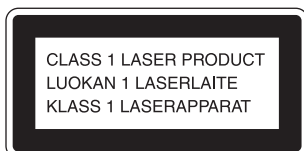

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.







Flexible Circuit Board Repairing

- Keep the temperature of soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

The release method of a CD disc tray LOCK function

There is a disc lock function for the disc theft prevention for a demonstration at a shop front in this machine.

Procedue:

1. Press the  button to turn the set on.
2. Press two buttons of  and  simultaneously for five seconds.
3. The message "LOCKED" is displayed and the tray is locked. (Even if exiting from this mode, the tray is still locked.)
4. Press two buttons of  and  simultaneously for five seconds again.
5. The message "UNLOCKED" is displayed and the tray is unlocked.
6. To exit from this mode, press the  button to turn the set off.

Unleaded solder

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size.)





: LEAD FREE MARK

Unleaded solder has the following characteristics.


- Unleaded solder melts at a temperature about 40°C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time. Soldering irons using a temperature regulator should be set to about 350°C.
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

MODEL IDENTIFICATION

– Back Panel –

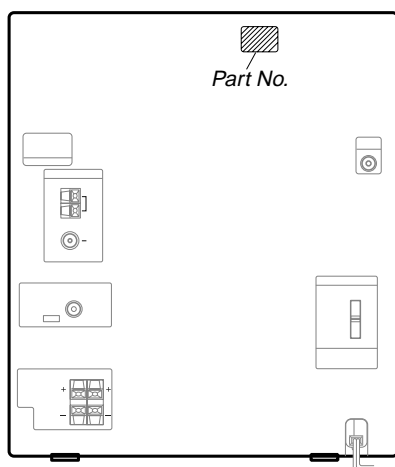

Model Name	Part No.
Argentina model	4-254-506-0□
Chilean and Peruvian models	4-254-507-0□
Mexican model	4-254-509-0□
120V AC Area in E model	4-254-799-0□


TABLE OF CONTENTS

1. SERVICING NOTE	4
2. GENERAL	5
3. DISASSEMBLY	
3-1. Cover (Top)	8
3-2. CD Door	8
3-3. Front Panel Section	9
3-4. CD Mechanism Deck (CDM74-F1BD81)	9
3-5. Tape Mechanism Deck, GAME JACK Board	10
3-6. PANEL Board	10
3-7. BACK PANEL Section, SUB-TRANS Board	11
3-8. Power Transformer	11
3-9. MAIN Board	12
3-10. AMP Board	12
3-11. BD81A Board	13
3-12. CONNECT Board	13
3-13. DRIVER Board, SW Board	14
3-14. Optical Pick-up (KSM-215DCP/C2NP)	14
3-15. SENSOR Board	15
3-16. MOTOR (TB) Board	15
3-17. MOTOR (LD) Board	16
4. TEST MODE	17
5. DIAGRAMS	
5-1. Block Diagrams – PANEL Section –	22
– MAIN Section –	23
– BD/DRIVER Section –	24
5-2. Printed Wiring Board – BD81A Section –	25
5-3. Schematic Diagram – BD81A Section –	26
5-4. Printed Wiring Board – CD MECHANISM Section –	27
5-5. Schematic Diagram – CD MECHANISM Section –	28
5-6. Printed Wiring Board – MAIN Section –	29
5-7. Schematic Diagram – MAIN Section (1/2) –	30
5-8. Schematic Diagram – MAIN Section (2/2) –	31
5-9. Printed Wiring Board – PANEL COMB Section –	32
5-10. Schematic Diagram – PANEL COMB Section –	33
5-11. Printed Wiring Board – PANEL Section –	34
5-12. Schematic Diagram – PANEL Section (1/2) –	35
5-13. Schematic Diagram – PANEL Section (2/2) –	36
5-14. Printed Wiring Board – TRANS Section –	37
5-15. Printed Wiring Board – AMP Section –	38
5-16. Schematic Diagram – AMP POWER Section –	39
5-17. IC Pin Function Description	42
6. EXPLODED VIEWS	
6-1. MAIN Section	47
6-2. Front Panel Section	48
6-3. MAIN Board Section	49
6-4. CD Mechanism Deck Section -1 (CDM74-F1BD81) ...	50
6-4. CD Mechanism Deck Section -2 (CDM74-F1BD81) ...	51
7. ELECTRICAL PARTS LIST	52

SECTION 1 SERVICING NOTE


• SERVICE POSITION -1 (AMP BOARD)

To inspect the AMP board, turn both of the front panel and the CD mechanism deck so that the left side of the product faces down.

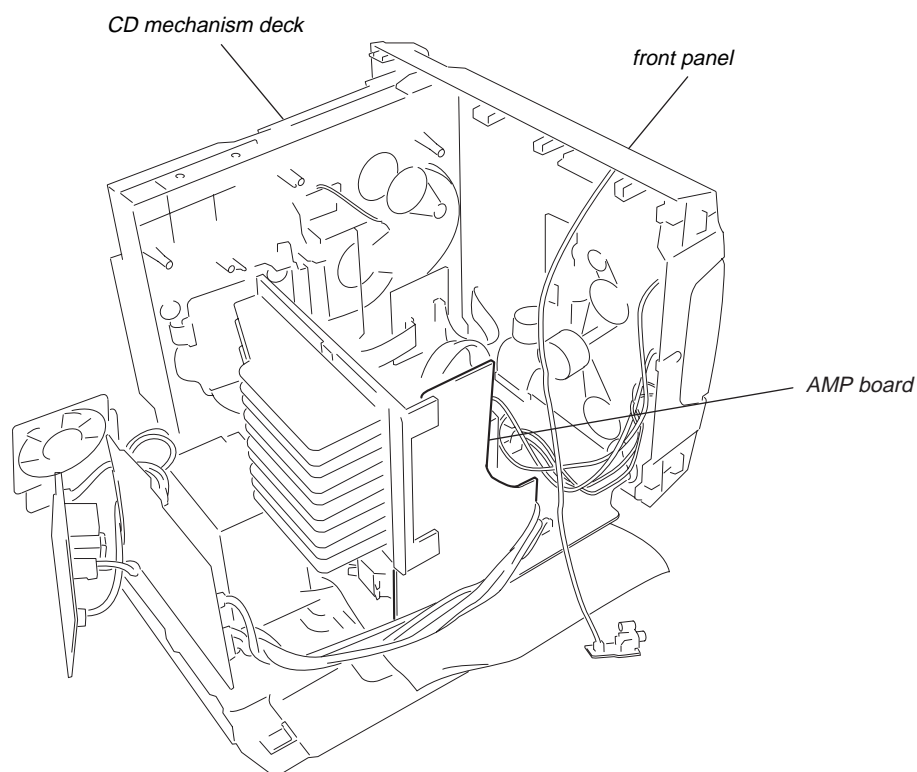

• SERVICE POSITION -2 (BD81A BOARD)

Remove the CD mechanism deck and place it on top of the pedestal as shown. Inspect the BD81A board in this set up.

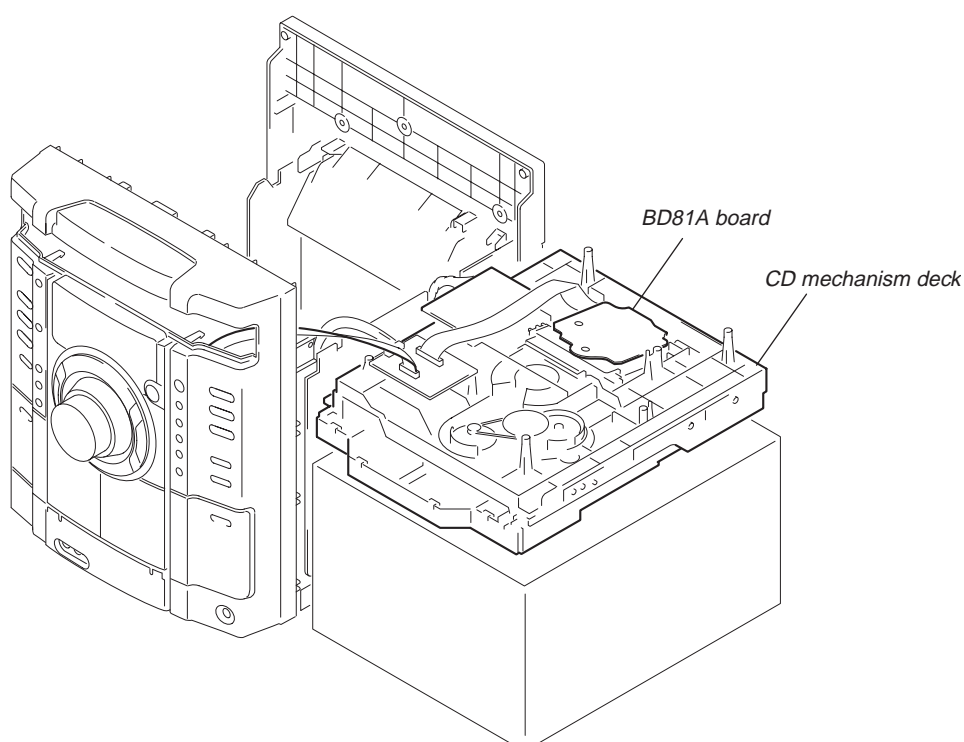

Remote control

ALPHABETICAL ORDER

A - E


ALBUM+ **13** (12, 14)
 ALBUM- **11** (12, 14)
 CD **18** (11, 14)
 CLEAR **15** (14)
 CLOCK/TIMER SELECT **2**
 (26, 27)
 CLOCK/TIMER SET **3** (10, 25,
 26)
 DISC SKIP **10** (12, 14)
 DISPLAY **21** (17, 27, 28)
 ENTER **9** (10, 14, 15, 25, 26)
 EQ **14** (22)

F - Z

FM MODE **4** (17)
 FUNCTION **6** (11, 14, 15, 16)
 PLAY MODE **20** (12, 14, 18)
 REPEAT **4** (13)
 SLEEP **22** (25)
 TAPE **17**
 TUNER BAND **5** (15, 16)
 TUNER MEMORY **19** (15)
 TUNING MODE **20** (15, 16)
 VOLUME +/- **12** (21, 25)

BUTTON DESCRIPTIONS

I/⏻ (power) **1** (8, 26)
 ◀◀/▶▶ (rewind/fast forward)
7 (12, 19)
 +/- (tuning) **16** (15)
 ◀◀/▶▶ (go back/go forward)
16 (10, 12, 19)
 ▶ (play) **8** (12, 18)
 || (pause) **8** (12, 19)
 ■ (stop) **8** (12, 19)

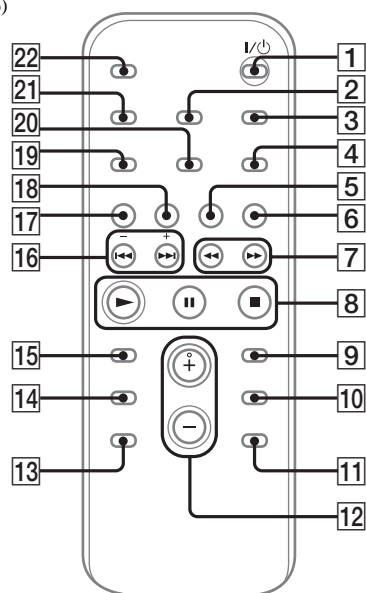

Setting the clock

Use buttons on the remote for the operation.

- 1** Press I/⏻ to turn on the system.
- 2** Press CLOCK/TIMER SET.
- 3** Press ◀◀ or ▶▶ repeatedly to set the hour.
- 4** Press ENTER.
- 5** Press ◀◀ or ▶▶ repeatedly to set the minute.
- 6** Press ENTER.
The clock starts working.

To adjust the clock


- 1** Press CLOCK/TIMER SET.
- 2** Press ◀◀ or ▶▶ repeatedly to select "CLOCK SET", then press ENTER.
- 3** Do the same procedures as step 3 to 6 above.

Notes

The clock settings are canceled when you disconnect the power cord or if a power failure occurs.


SECTION 3 DISASSEMBLY

Note: Disassemble the unit in the order as shown below.

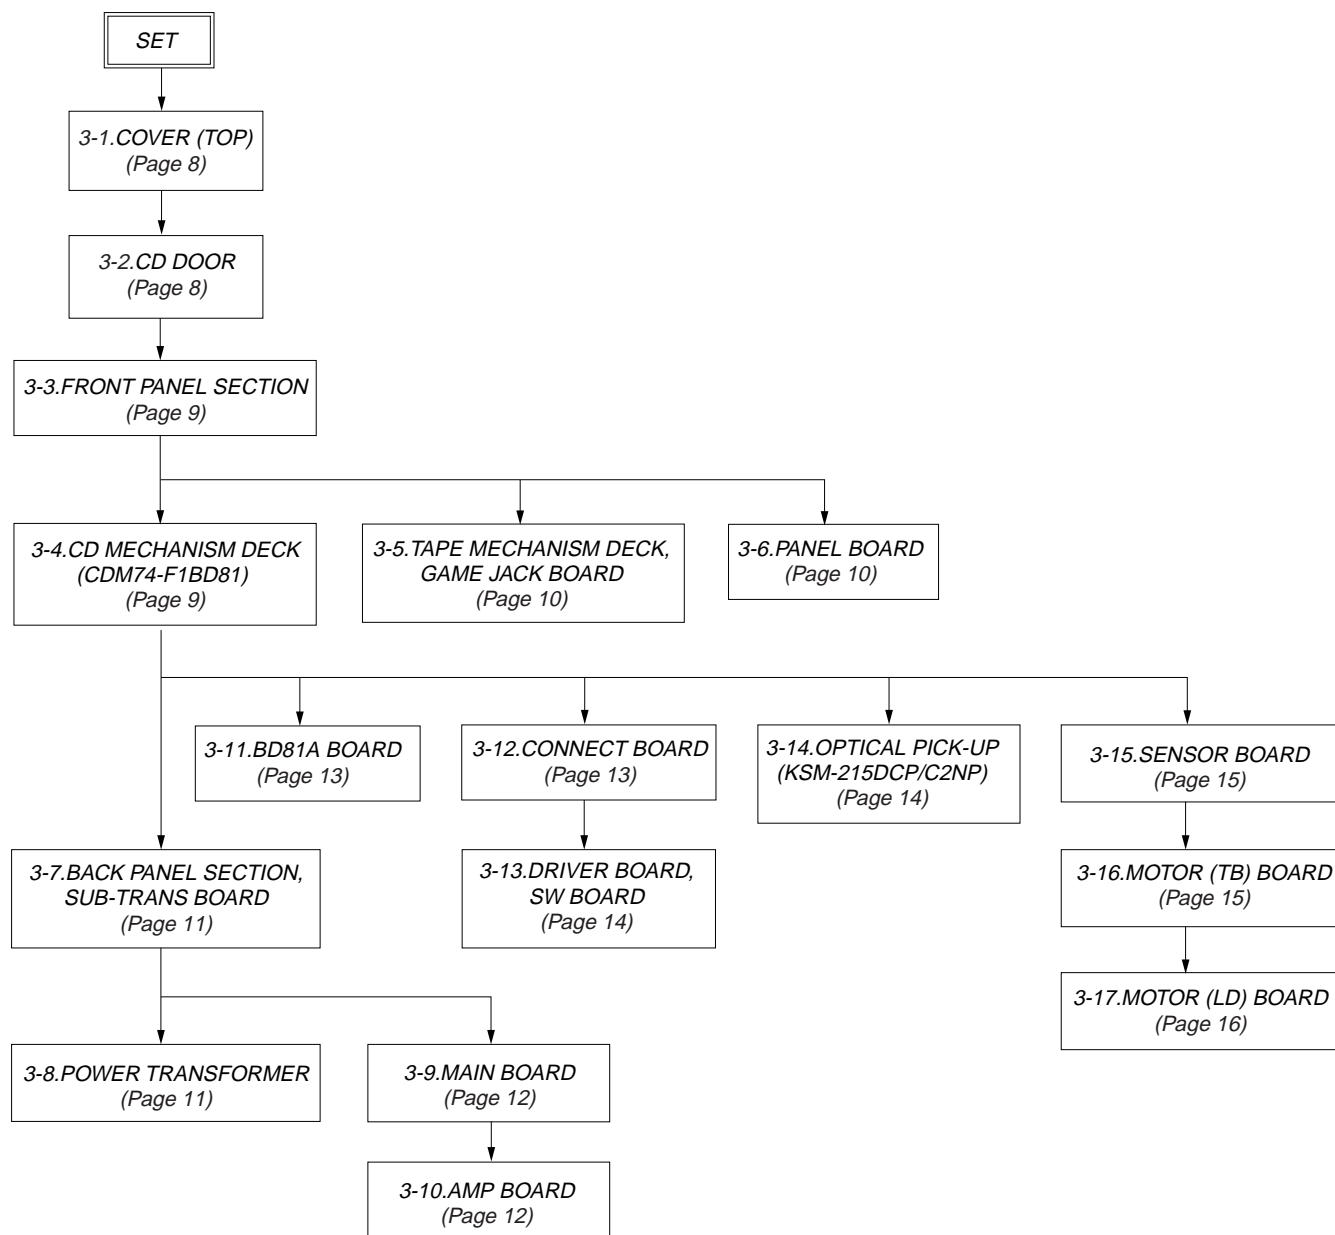


Note: Follow the disassembly procedure in the numerical order given.


3-1. COVER (TOP)

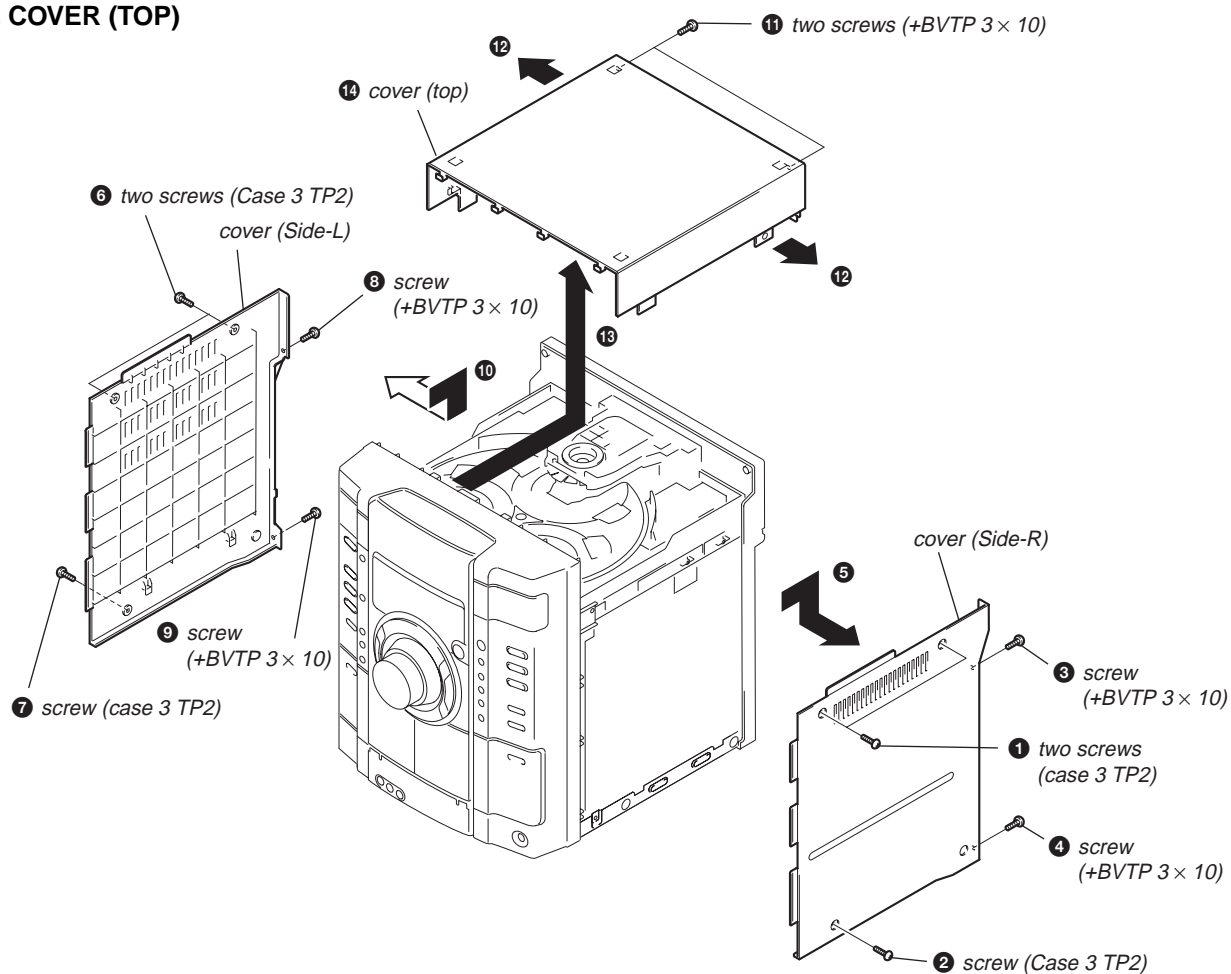


3-2. CD DOOR

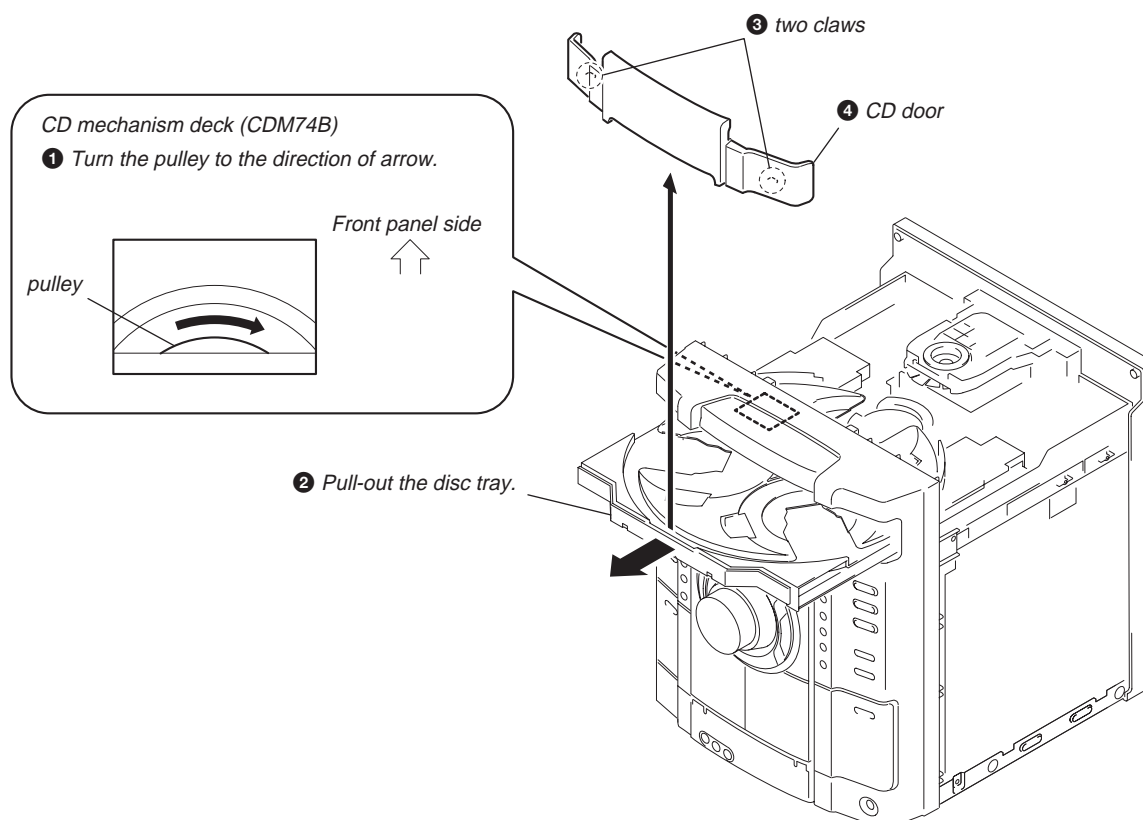


3-3. FRONT PANEL SECTION

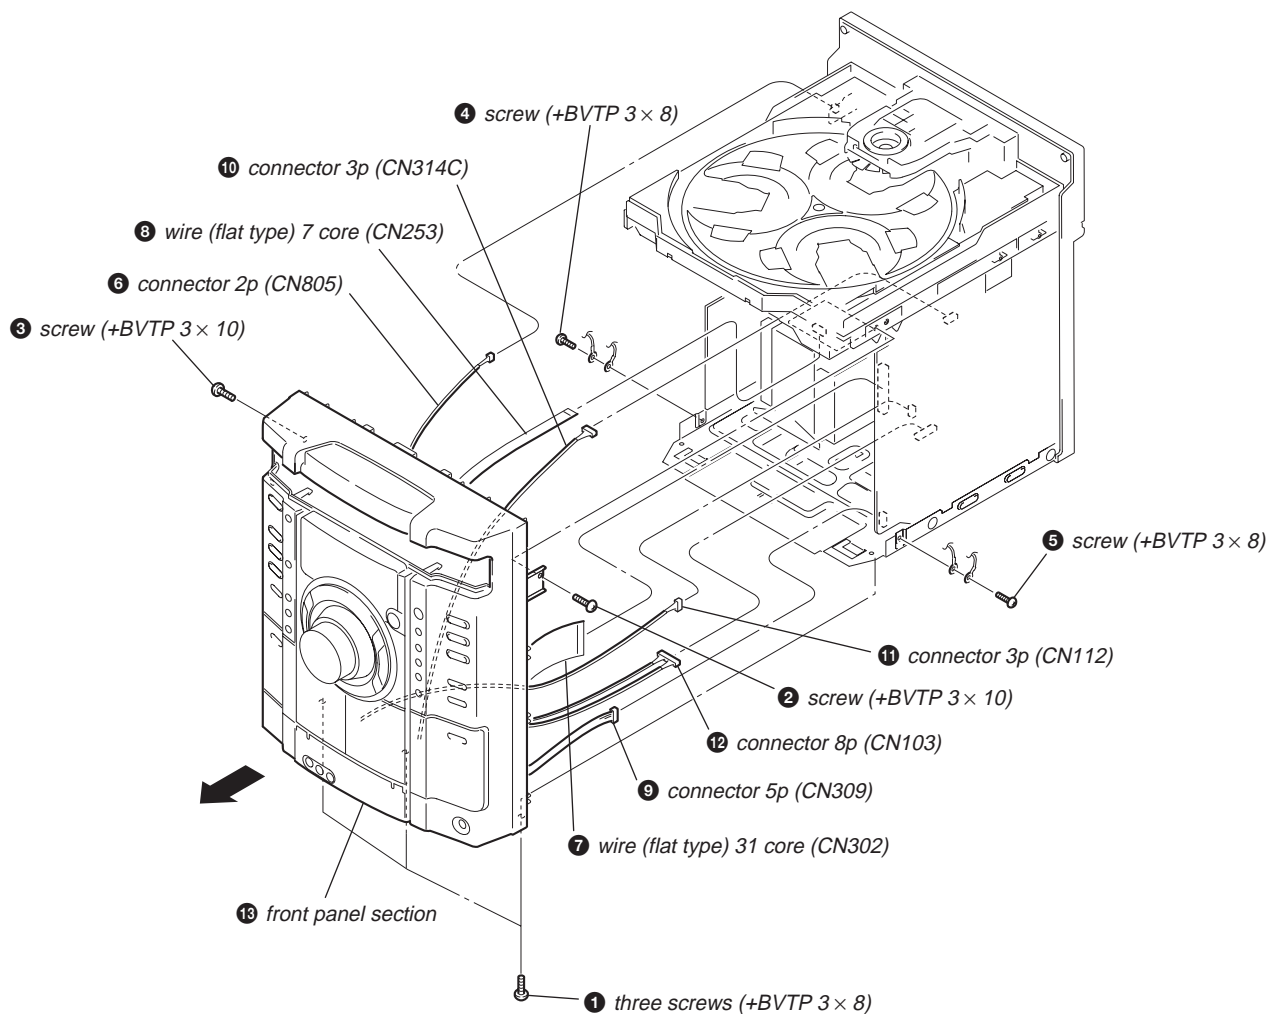


3-4. CD MECHANISM DECK (CDM74-F1BD81)

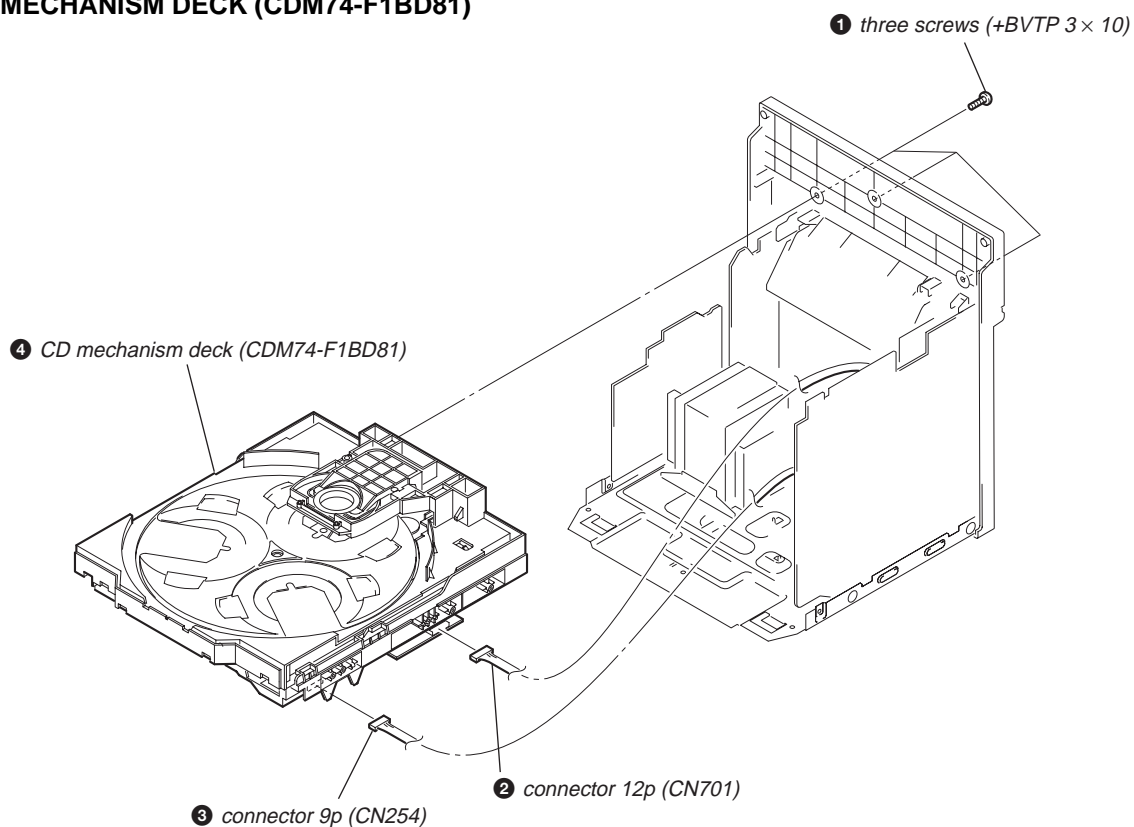


3-5. TAPE MECHANISM DECK, GAME JACK BOARD

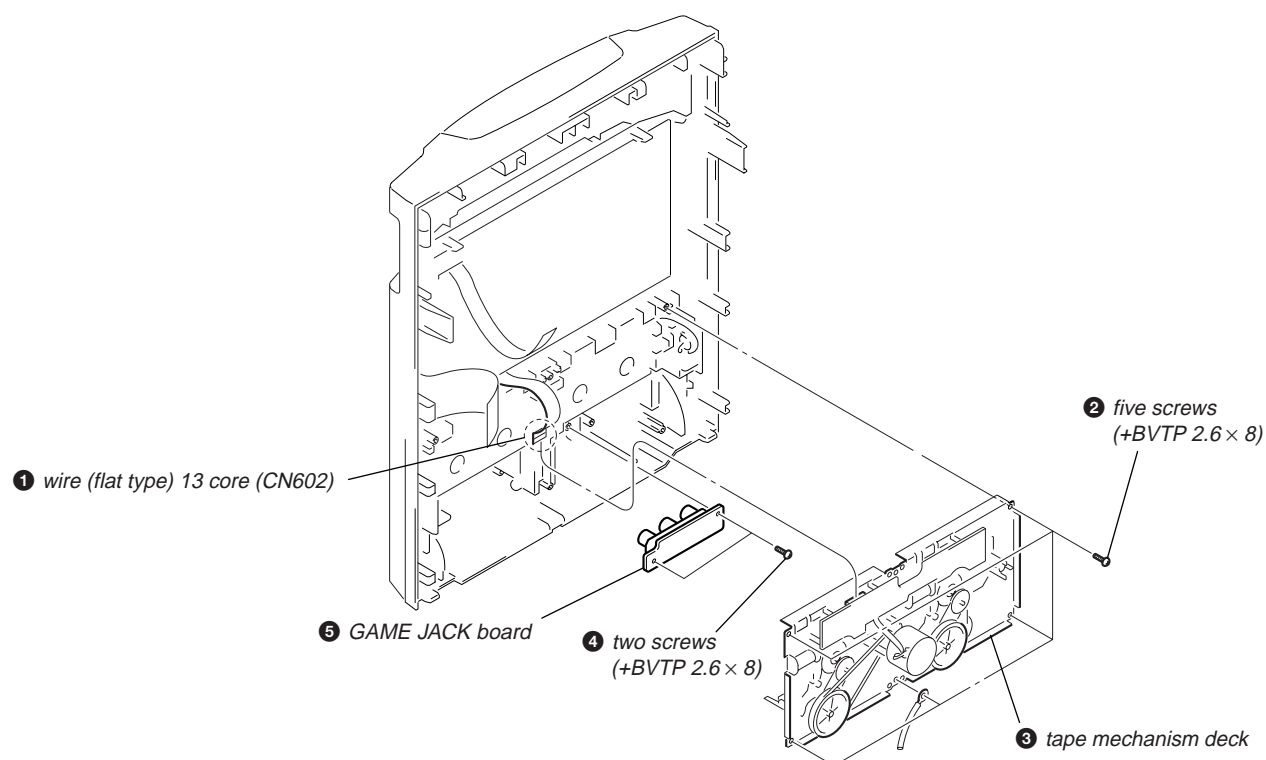


3-6. PANEL BOARD

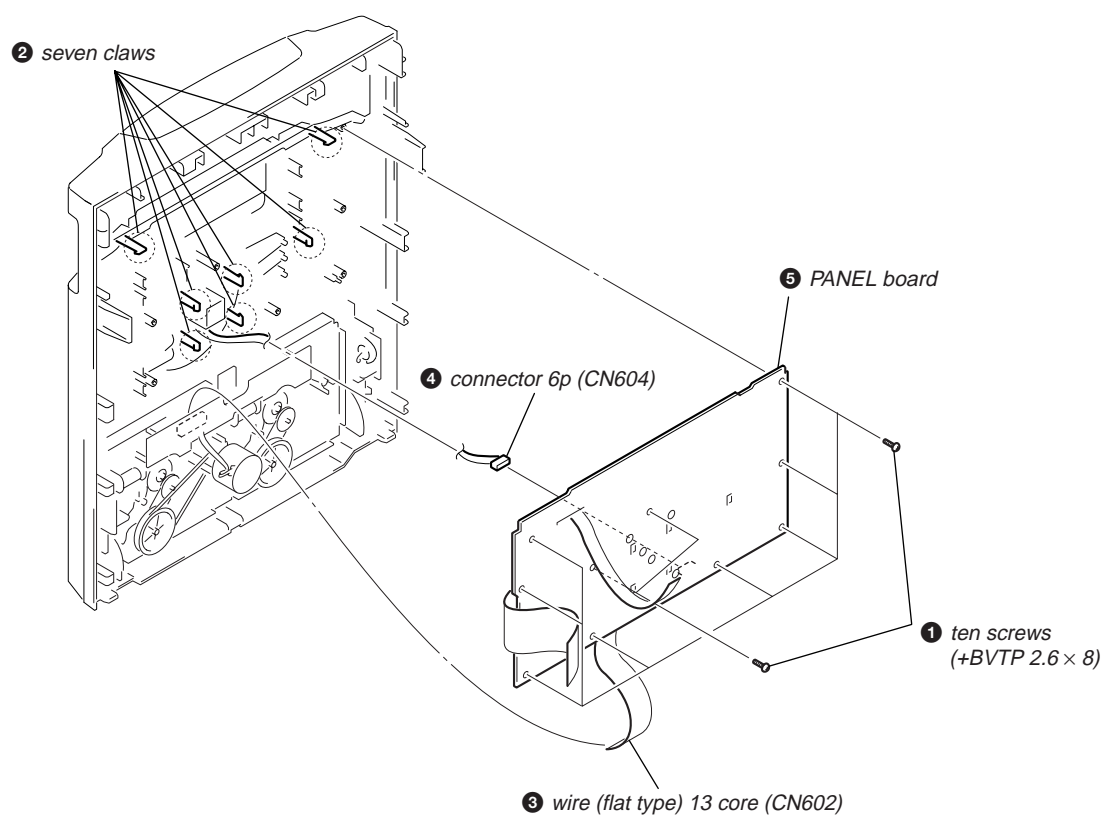


3-7. BACK PANEL SECTION, SUB-TRANS BOARD

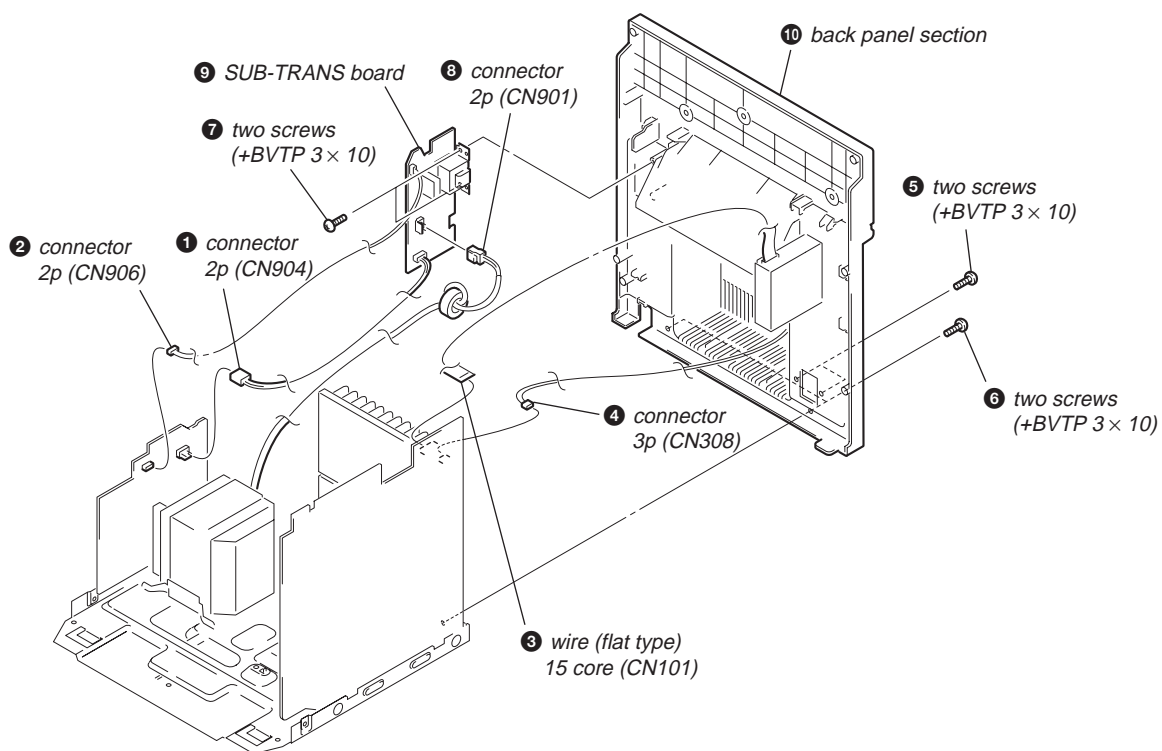


3-8. POWER TRANSFORMER

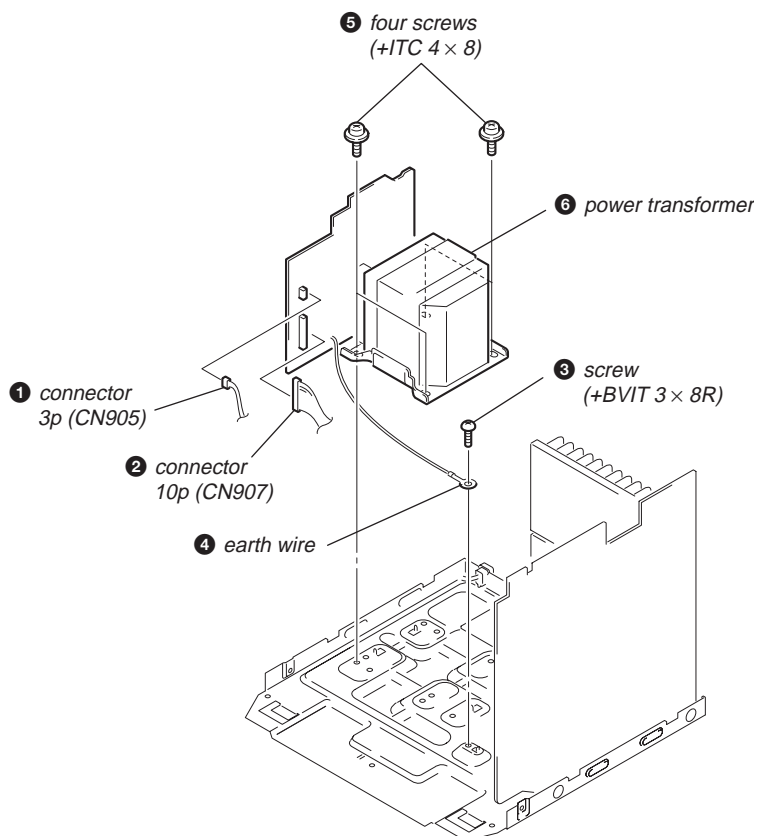


3-9. MAIN BOARD

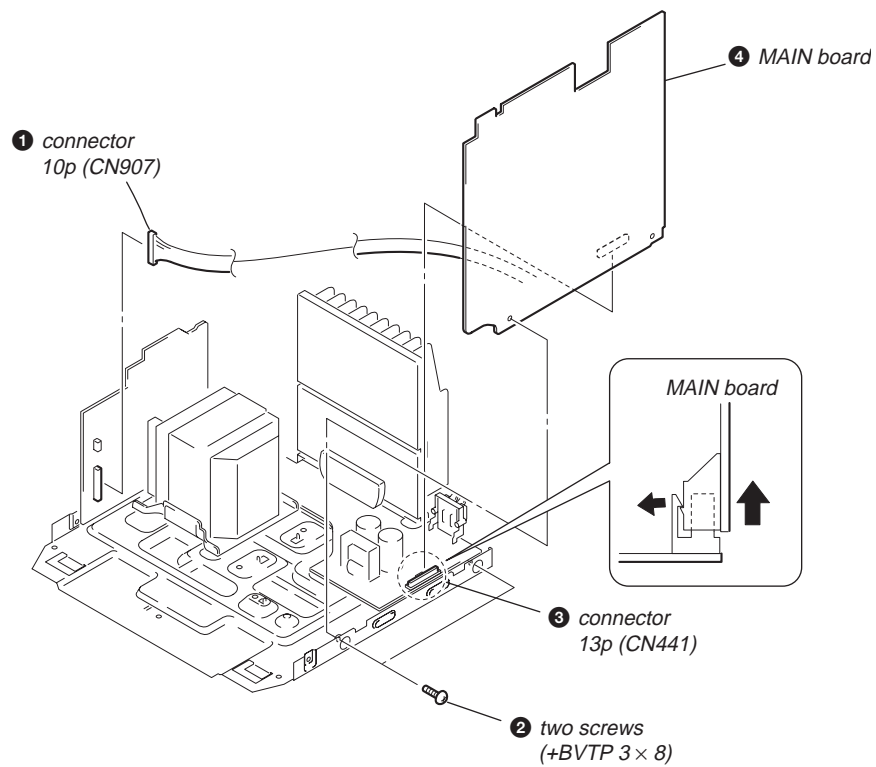


3-10. AMP BOARD

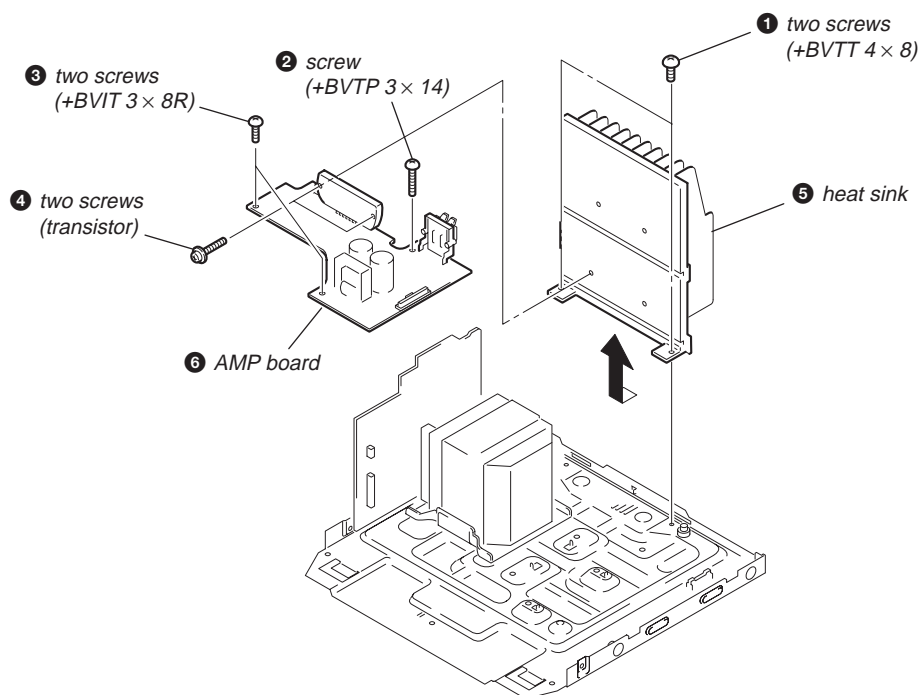


3-11. BD81A BOARD

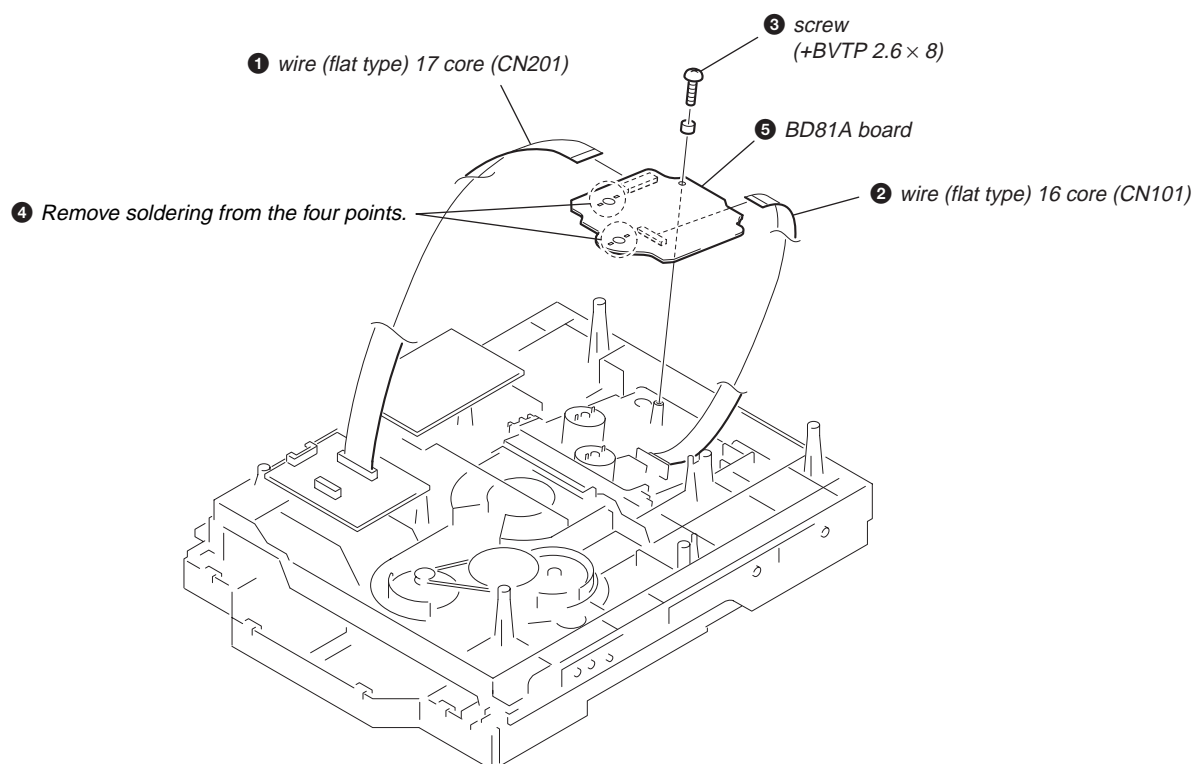


3-12. CONNECT BOARD

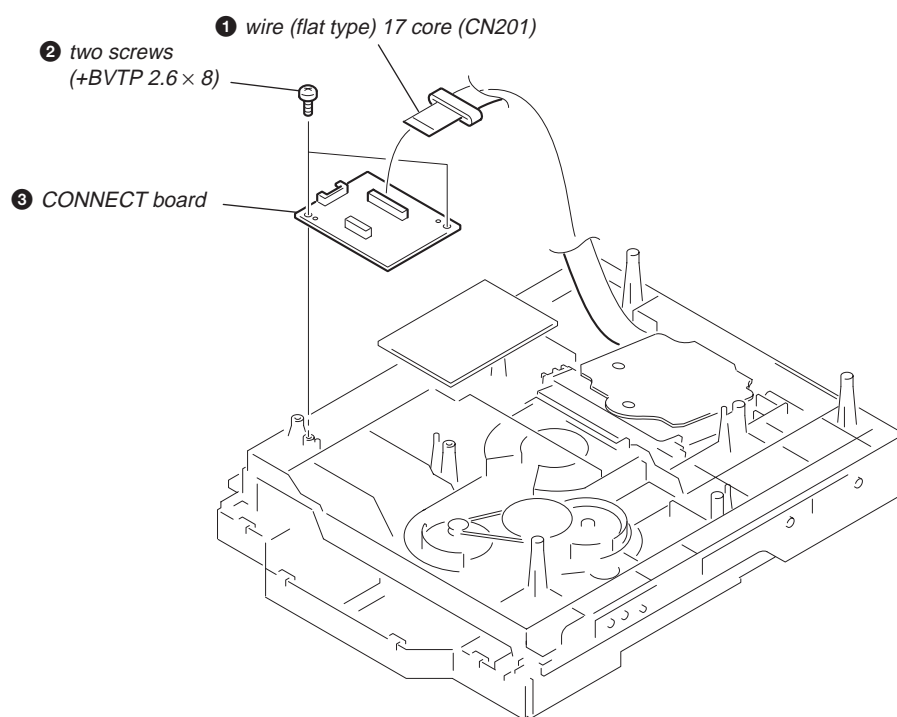


3-13. DRIVER BOARD, SW BOARD

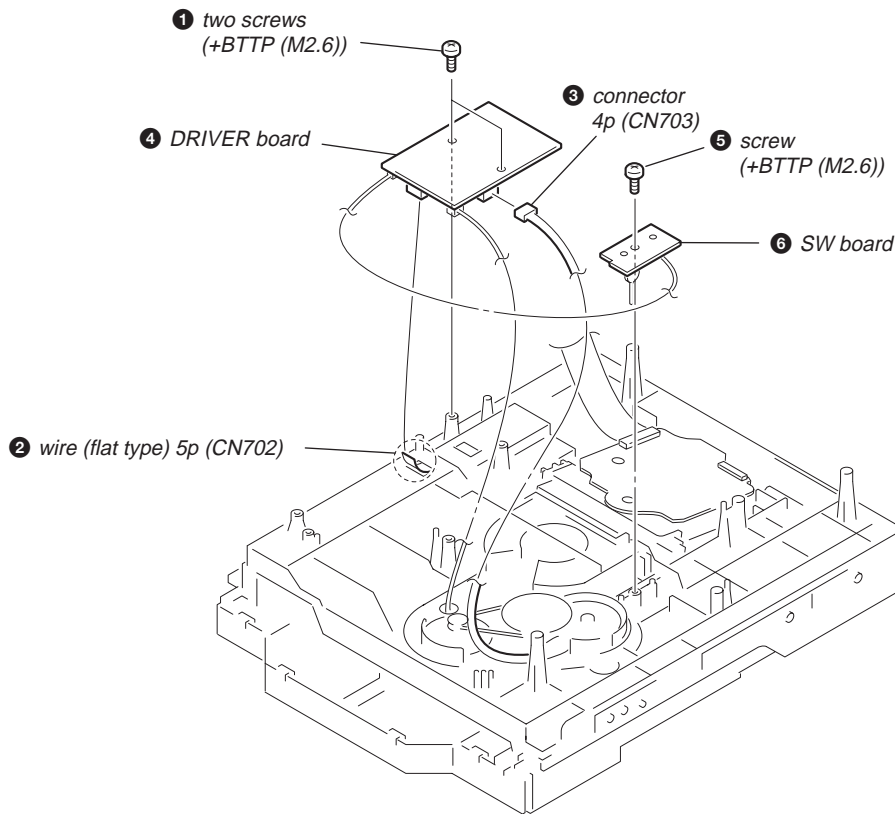


3-14. OPTICAL PICK-UP (KSM-215DCP/C2NP)

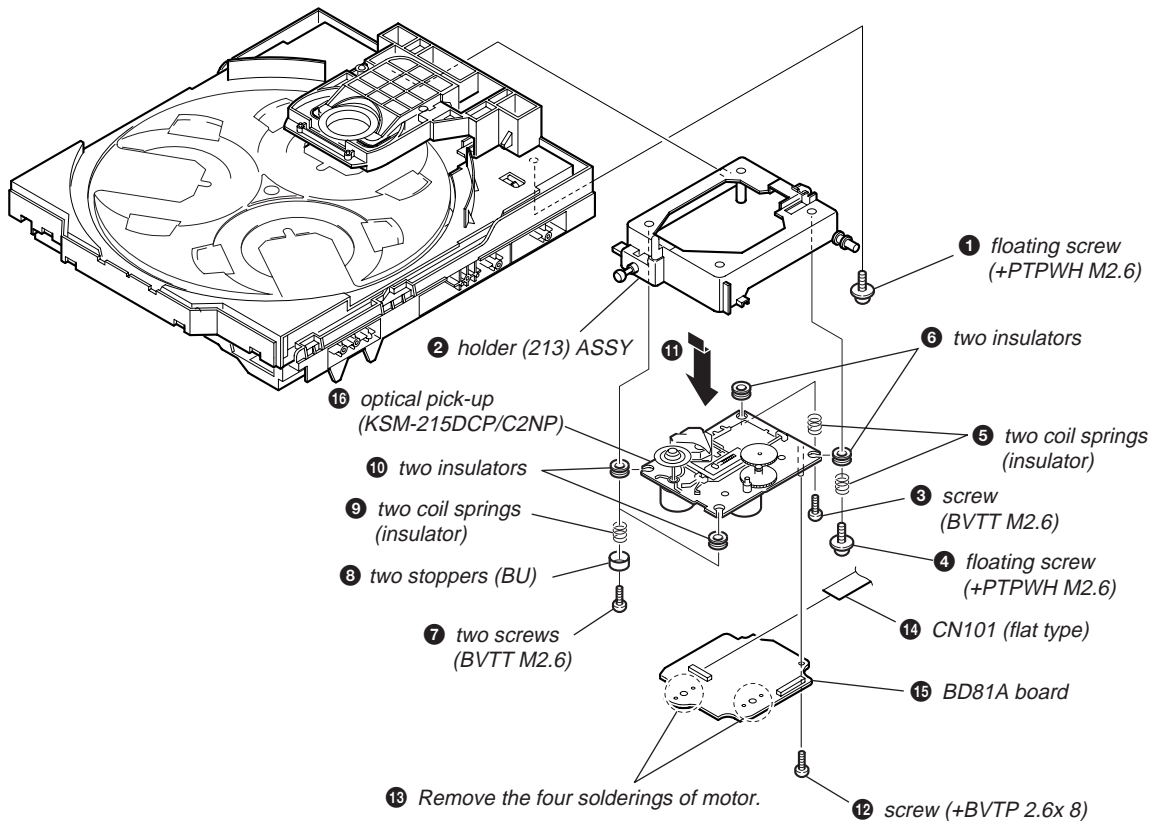


3-15. SENSOR BOARD

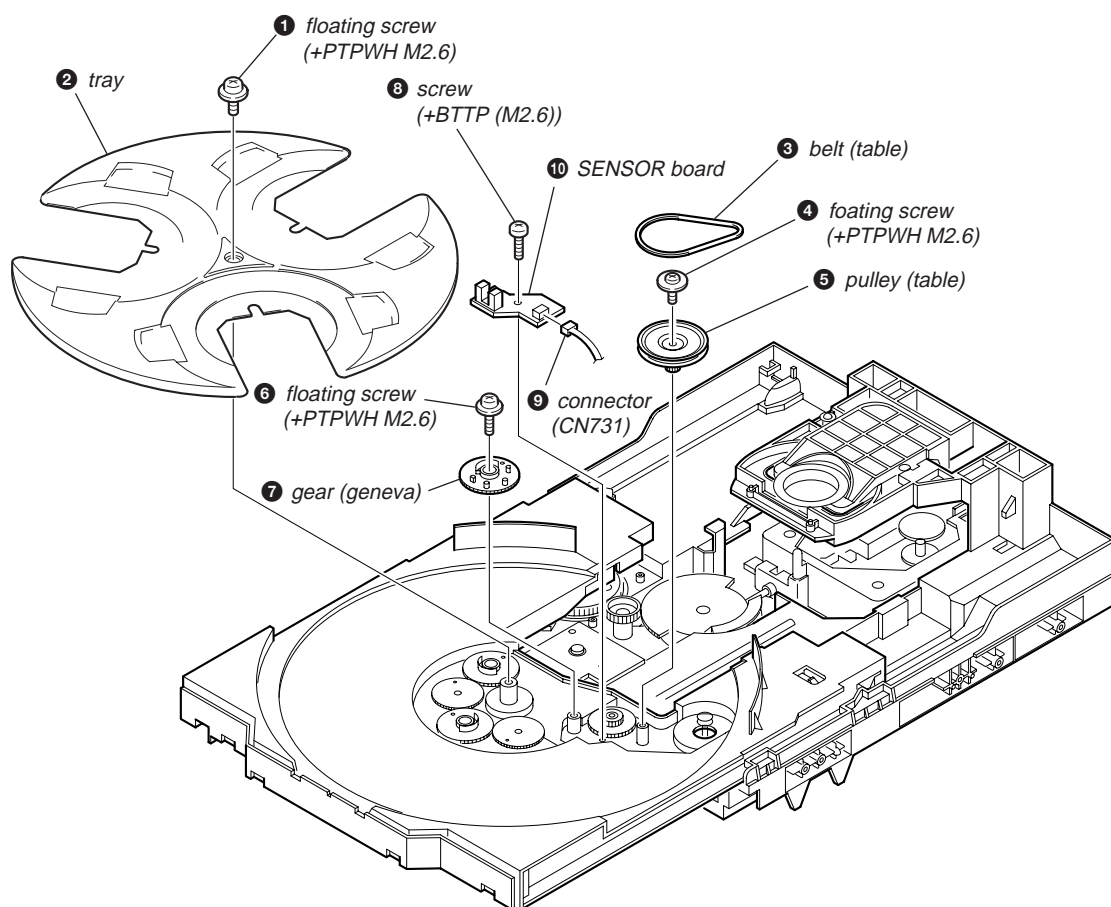

3-16. MOTOR (TB) BOARD

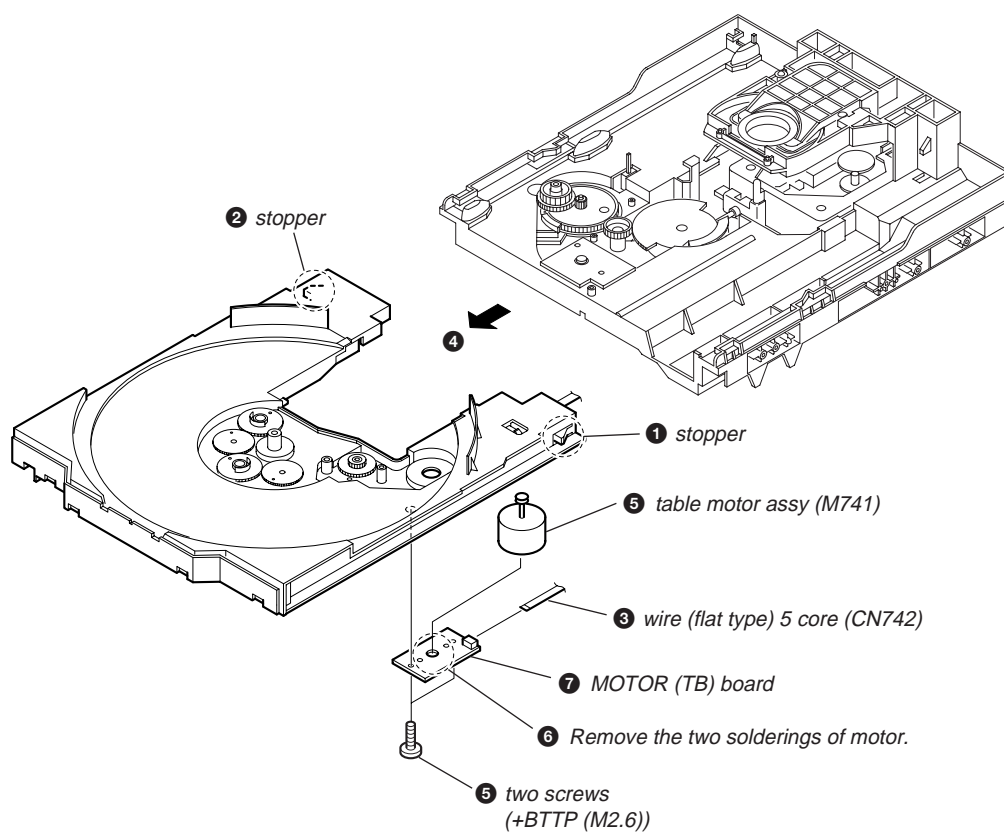

3-17. MOTOR (LD) BOARD

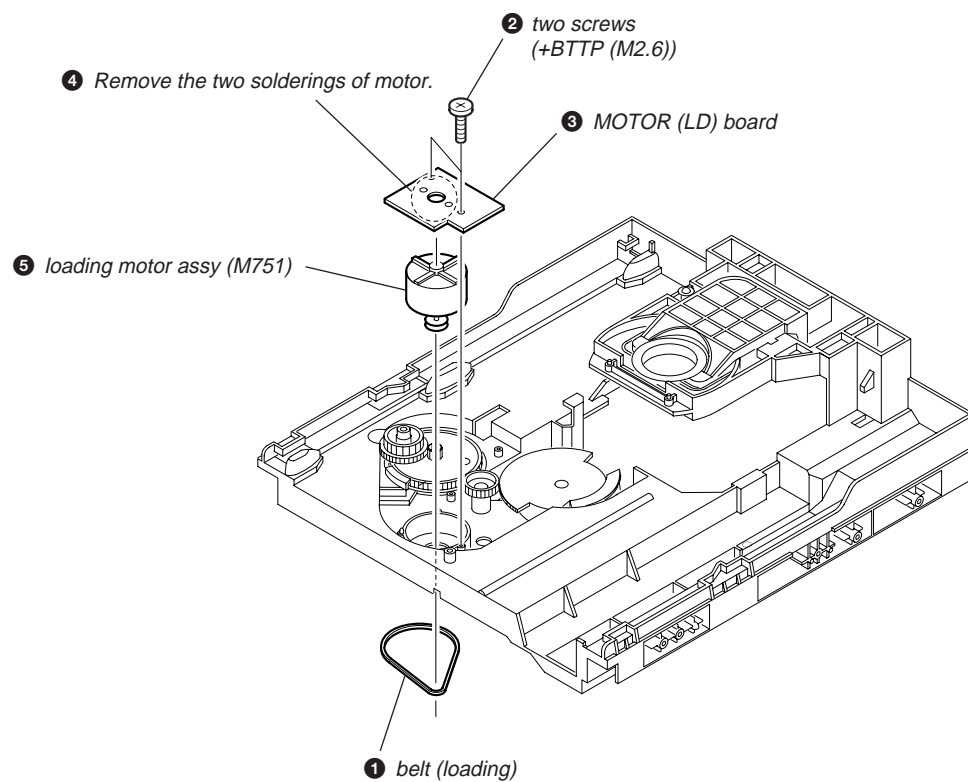






SECTION 4

TEST MODE

[Change-over of AM Tuner Step between 9 kHz and 10 kHz]

- A step of AM channels can be changed over between 9 kHz and 10 kHz.




Procedure:

- Press  button to turn the set ON.
- Select the function "TUNER", and press  button to select the BAND "AM".
- Press  button to turn the set OFF.
- Press  and  buttons simultaneously, and the display of fluorescent indicator tube changes to "AM 9 k STEP" or "AM 10 k STEP", and thus the channel step is changed over.

[Cold Reset]

- The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customer.

Procedure:

- Press three buttons , , and  simultaneously.
- The fluorescent indicator tube displays "COLD RESET" and the set is reset.




[Aging Mode]

This mode can be used for operation check of CD section and tape deck section.

- If an error occurred:
The aging operation stops and is displayed status.
- If no error occurs:
The aging operation continues repeatedly.

1. Operating method of Aging Mode

Turn on the main power and select "CD" of the function.

- Set three discs in tray. Select ALL DISCS, and REPEAT OFF.
- Load the tapes recording use into both decks.
- Press three buttons , , and  simultaneously.
- Aging operations of CD and tape are started at the same time.
- To exit the aging mode, perform [Cold Reset].

2. Aging mode in CD section

1) Operation during aging mode

- In the aging mode, the program is executed in the following sequence.
 - The disc tray opens and closes.
 - The disc tray turns to select a disc 3.
 - The pick-up accesses to the first track, and plays 3 seconds.
 - The pick-up accesses to the last track, and plays 3 seconds.
 - The disc tray opens and closes.
 - The disc tray turns to select a disc 1.
 - The same operation starts like step (3).
 - After a disc 1 aging operation, a disc 2 is selected.
 - When an aging operation of a disc 3 is completed, the display "AGING ****" value increases.
 - If no error occurs, the aging operation continues repeatedly.

2) Error display

Disc error	
Display	Error
E00D01022	Focus error (No disc)
E00D02022	Sub Q error (Focus is good)
E00D02023	TOC reading error
E00D02014	Access error (Unable within regular time)

Mechanism error	
Display	Error
E00M__E_0	Error during opening tray
E00M__C_2	EX-CHANGE disc error
E00M__D_0	Error during closing tray
E00M__F_3	EX-OPEN error
E00M__D_5	EX-CLOSE error
E00M__C_2	Chuck-up error
E00M__C_3	Unchucking error

3. Aging mode in Tape Deck section

1) Operation during aging mode

- In the aging mode, the program is executed in the following sequence.

Step	Operation	Display
1	Rewind the TAPE A	TAPE AAG-1
2	Rewind the TAPE B	TAPE BAG-2
3	Play the TAPE A (1 minute)	TAPE AAG-2
4	Stop the TAPE A (1 second)	TAPE AAG-3
5	Play the TAPE A (3 minutes)	TAPE AAG-4
6	Rewind(AMS) the TAPE A	TAPE AAG-5
7	F.F.(AMS) the TAPE A	TAPE AAG-6
8	Play the TAPE B (1 minute)	TAPE BAG-2
9	Stop the TAPE B (1 second)	TAPE BAG-3
10	Record the TAPE B (3 minutes)	TAPE BAG-4
11	Rewind(AMS) the TAPE B	TAPE BAG-5
12	F.F.(AMS) the TAPE B	TAPE BAG-6

2) Error display

- If error occurred, the display remains like "TAPE BAG-2".

















4. Exiting from the aging mode

- Be sure to perform Cold Reset to exit from the aging mode.

[PANEL Test Mode]

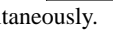- All fluorescent segments and LEDs are tested.
- Keyboard check.








Procedure:

1. Press  button to turn the set ON.
2. To enter the test mode, press the three buttons ,   and  simultaneously.
3. All segments and LEDs (without STANDBY LED) are turned on.
4. Press  and  buttons simultaneously, and the key check mode is activated.
5. The message “KEY 0 0 0” is displayed.
Each time a button is pressed, the key code number is displayed.
6. Press  and  buttons simultaneously, and the key count mode is activated.
7. The message “KEYCNT 0” is displayed.
Each time a button is pressed, “KEYCNT 0” value increased.
However, once a button is pressed, it is no longer taken into account.
8. Press  and  buttons simultaneously, and the head phone detect mode is activated.
9. The message “H_P OFF” is displayed when a headphone jack is not inserted.
“H_P ON ” is displayed when a headphone jack is inserted.
10. Press  and  buttons simultaneously, and the volume control detect mode is activated.
11. The message “VOLUME FLAT” is displayed.
“VOLUME UP” is displayed if rotating  knob clockwise, or “VOLUME DOWN” is displayed if rotating counterclockwise.
12. To exit from the GC test mode after the head phone detect mode, press  and  buttons simultaneously.

[Version and Destination Display Mode]

- The version or destination is displayed.

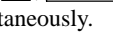







Procedure:

1. Press  button to turn the set ON.
2. To enter the test mode, press the three buttons ,   and  simultaneously.
3. The destination is displayed.
4. Press  buttons simultaneously.
5. The version is displayed.
6. To exit from this mode, press  button to turn the set OFF.

[CD Service Mode]

- This mode can run the CD sled motor freely. Use this mode, for instance, when cleaning the pick-up.

Procedure:












1. Press  button to turn the set ON.
2. Select the function “CD”.
3. To enter the test mode, press three buttons ,  , and  simultaneously.
4. The CD service mode is selected.
5. With the CD in stop status, press  button to move the pick-up to outside track, or press  button to inside track.
6. To exit from this mode, perform as follows:
 - 1) Move the pick-up to the most inside track.
 - 2) Press  button to turn the set OFF.

- Note:**
- Always move the pick-up to most inside track when exiting from this mode. Otherwise, a disc will not be unloaded.
 - Do not run the sled motor excessively, otherwise the gear can be chipped.

[MC Test Mode]

- This mode is used to test the function of the equalizer.


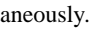


Procedure:

1. Press  button to turn the set ON.
2. To enter the test mode, press the three buttons ,   and  simultaneously.
3. Press the  button.
The function of the equalizer is set to “MIN”.
4. Press the  button.
The function of the equalizer is set to “MAX”.
5. Press the  button.
The function of the equalizer is set to “EQ FLAT”.
6.  up and down.
“VOLUME MIN” “VOLUME 16” “VOLUME MAX” is displayed.
7. Press the  button.
The message “VACS OFF” or “VACS ON” is displayed.
8. To exit from this mode, press  button to turn the set OFF.

[CD Ship Mode (LOCK)]






- This mode moves the pick-up to the position durable to vibration. Use this mode when returning the set to the customer after repair.

Procedure:

1. Press  button to turn the set ON.
2. Select the function “CD”.
3. Press  button to turn the set OFF.
4. Press  button and  button simultaneously.
5. The “STANDBY” display blinks instantaneously, and the CD ship mode is set.







[CD Ship (LOCK) & COLD RESET MODE]

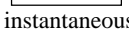Procedure:






1. Press  button to turn the set ON.
2. Select the function “CD”.
3. Press  button to turn the set OFF.
4. Press three buttons ,  and  simultaneously.
5. The “STANDBY” display blinks instantaneously and CD ship mode is set.
6. To fluorescent indicator tube displays “COLD RESET” and the set is reset.

[Disc Tray Lock]











Procedure:

1. Press the  button to turn the set ON.
2. Press two buttons of  and  simultaneously for five seconds.
3. The message “LOCKED” is displayed and the tray is locked.
(Even if exiting from this mode, the tray is still locked.)
4. Press two buttons of  and  simultaneously for five seconds again.
5. The message “UNLOCKED” is displayed and the tray is unlocked.
6. To exit from this mode, press the  button to turn the set OFF.

[CD Repeat 5 Times Limit Release Mode]**Procedure:**

1. Press  button to turn the set ON.
2. Select the function "CD".
3. Press three buttons ,  and  simultaneously.
4. The message "LIMIT OFF" is displayed.
5. Press  button the set OFF.

[AMP TEST MODE]**Procedure:**

1. Press  button to turn the set ON.
2. To enter the test mode, press three buttons ,   and  simultaneously.
3. Press the  button.
The message "V0 0 0" " 000" is displayed.
4. Press the  button.
The message "DBFB ON" "DBFB OFF" is displayed.
5. Press the  button.
The message "SURROUND ON" "SURROUND OFF" is displayed.
6. Press the  button.
The message "LOW" "MID" "HIGH" is displayed.
7. Press  button to turn the set OFF.

MEMO

SECTION 5
DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF : $\mu\mu\text{F}$ 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- Δ : internal component.
- \square : panel designation.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.


- — : B+ Line.
- - - - : B- Line.
- : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
no mark : FM
() : CD STOP
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
➡ : TUNER
➡ : PB (DECK A)
➡ : PB (DECK B)
➡ : REC (DECK B)
➡ : CD
➡ : AUDIO

Note on Printed Wiring Boards:

- \circ : parts extracted from the component side.
- : Pattern from the side which enables seeing.

Caution:
Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: Parts on the parts face side seen from the parts face are indicated.


- Indication of transistor.

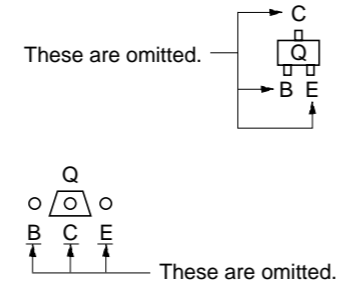



- Abbreviation
AR : Argentina model
E2 : 120V AC Area in E model
E51 : Chilean and Peruvian models
MX : Mexican model


• Waveforms

– PANEL BOARD –

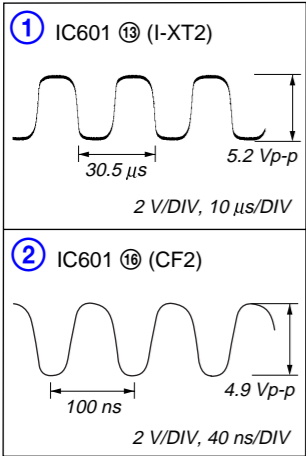


Circuit Boards Location

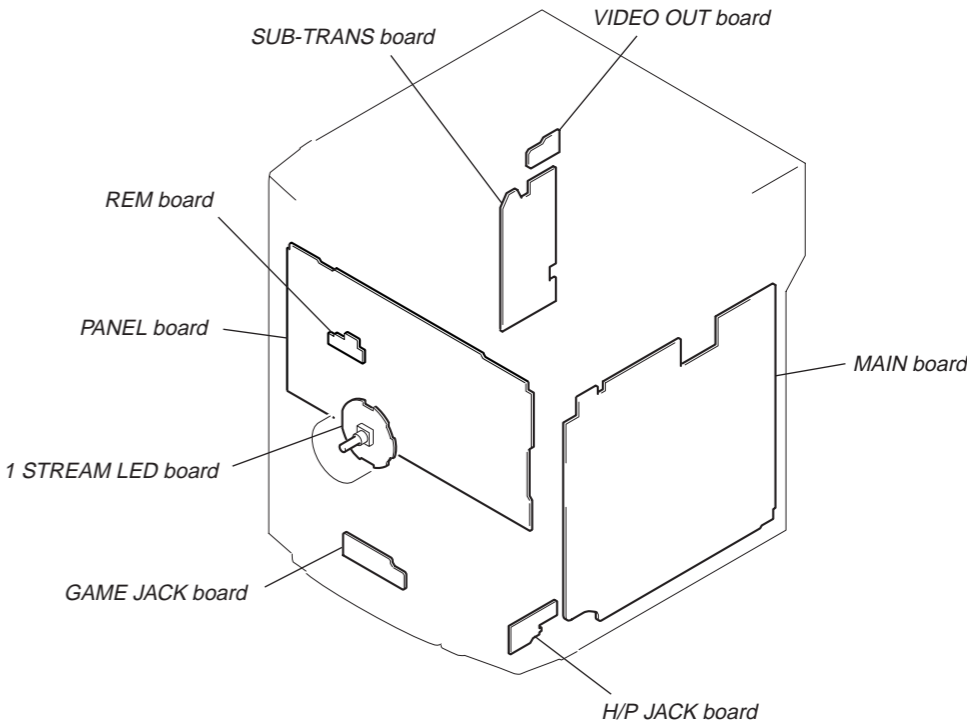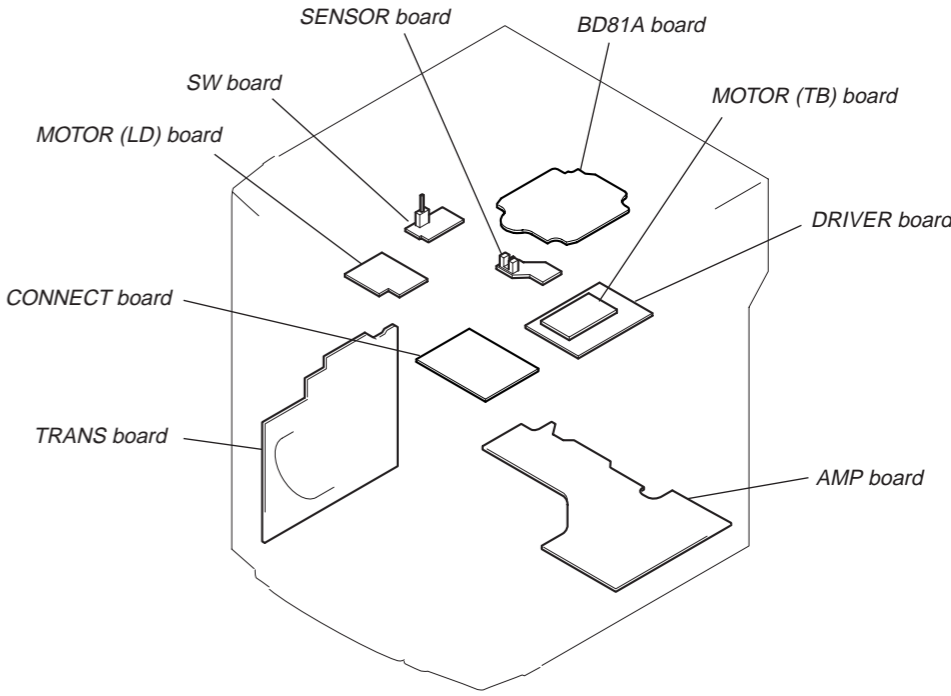

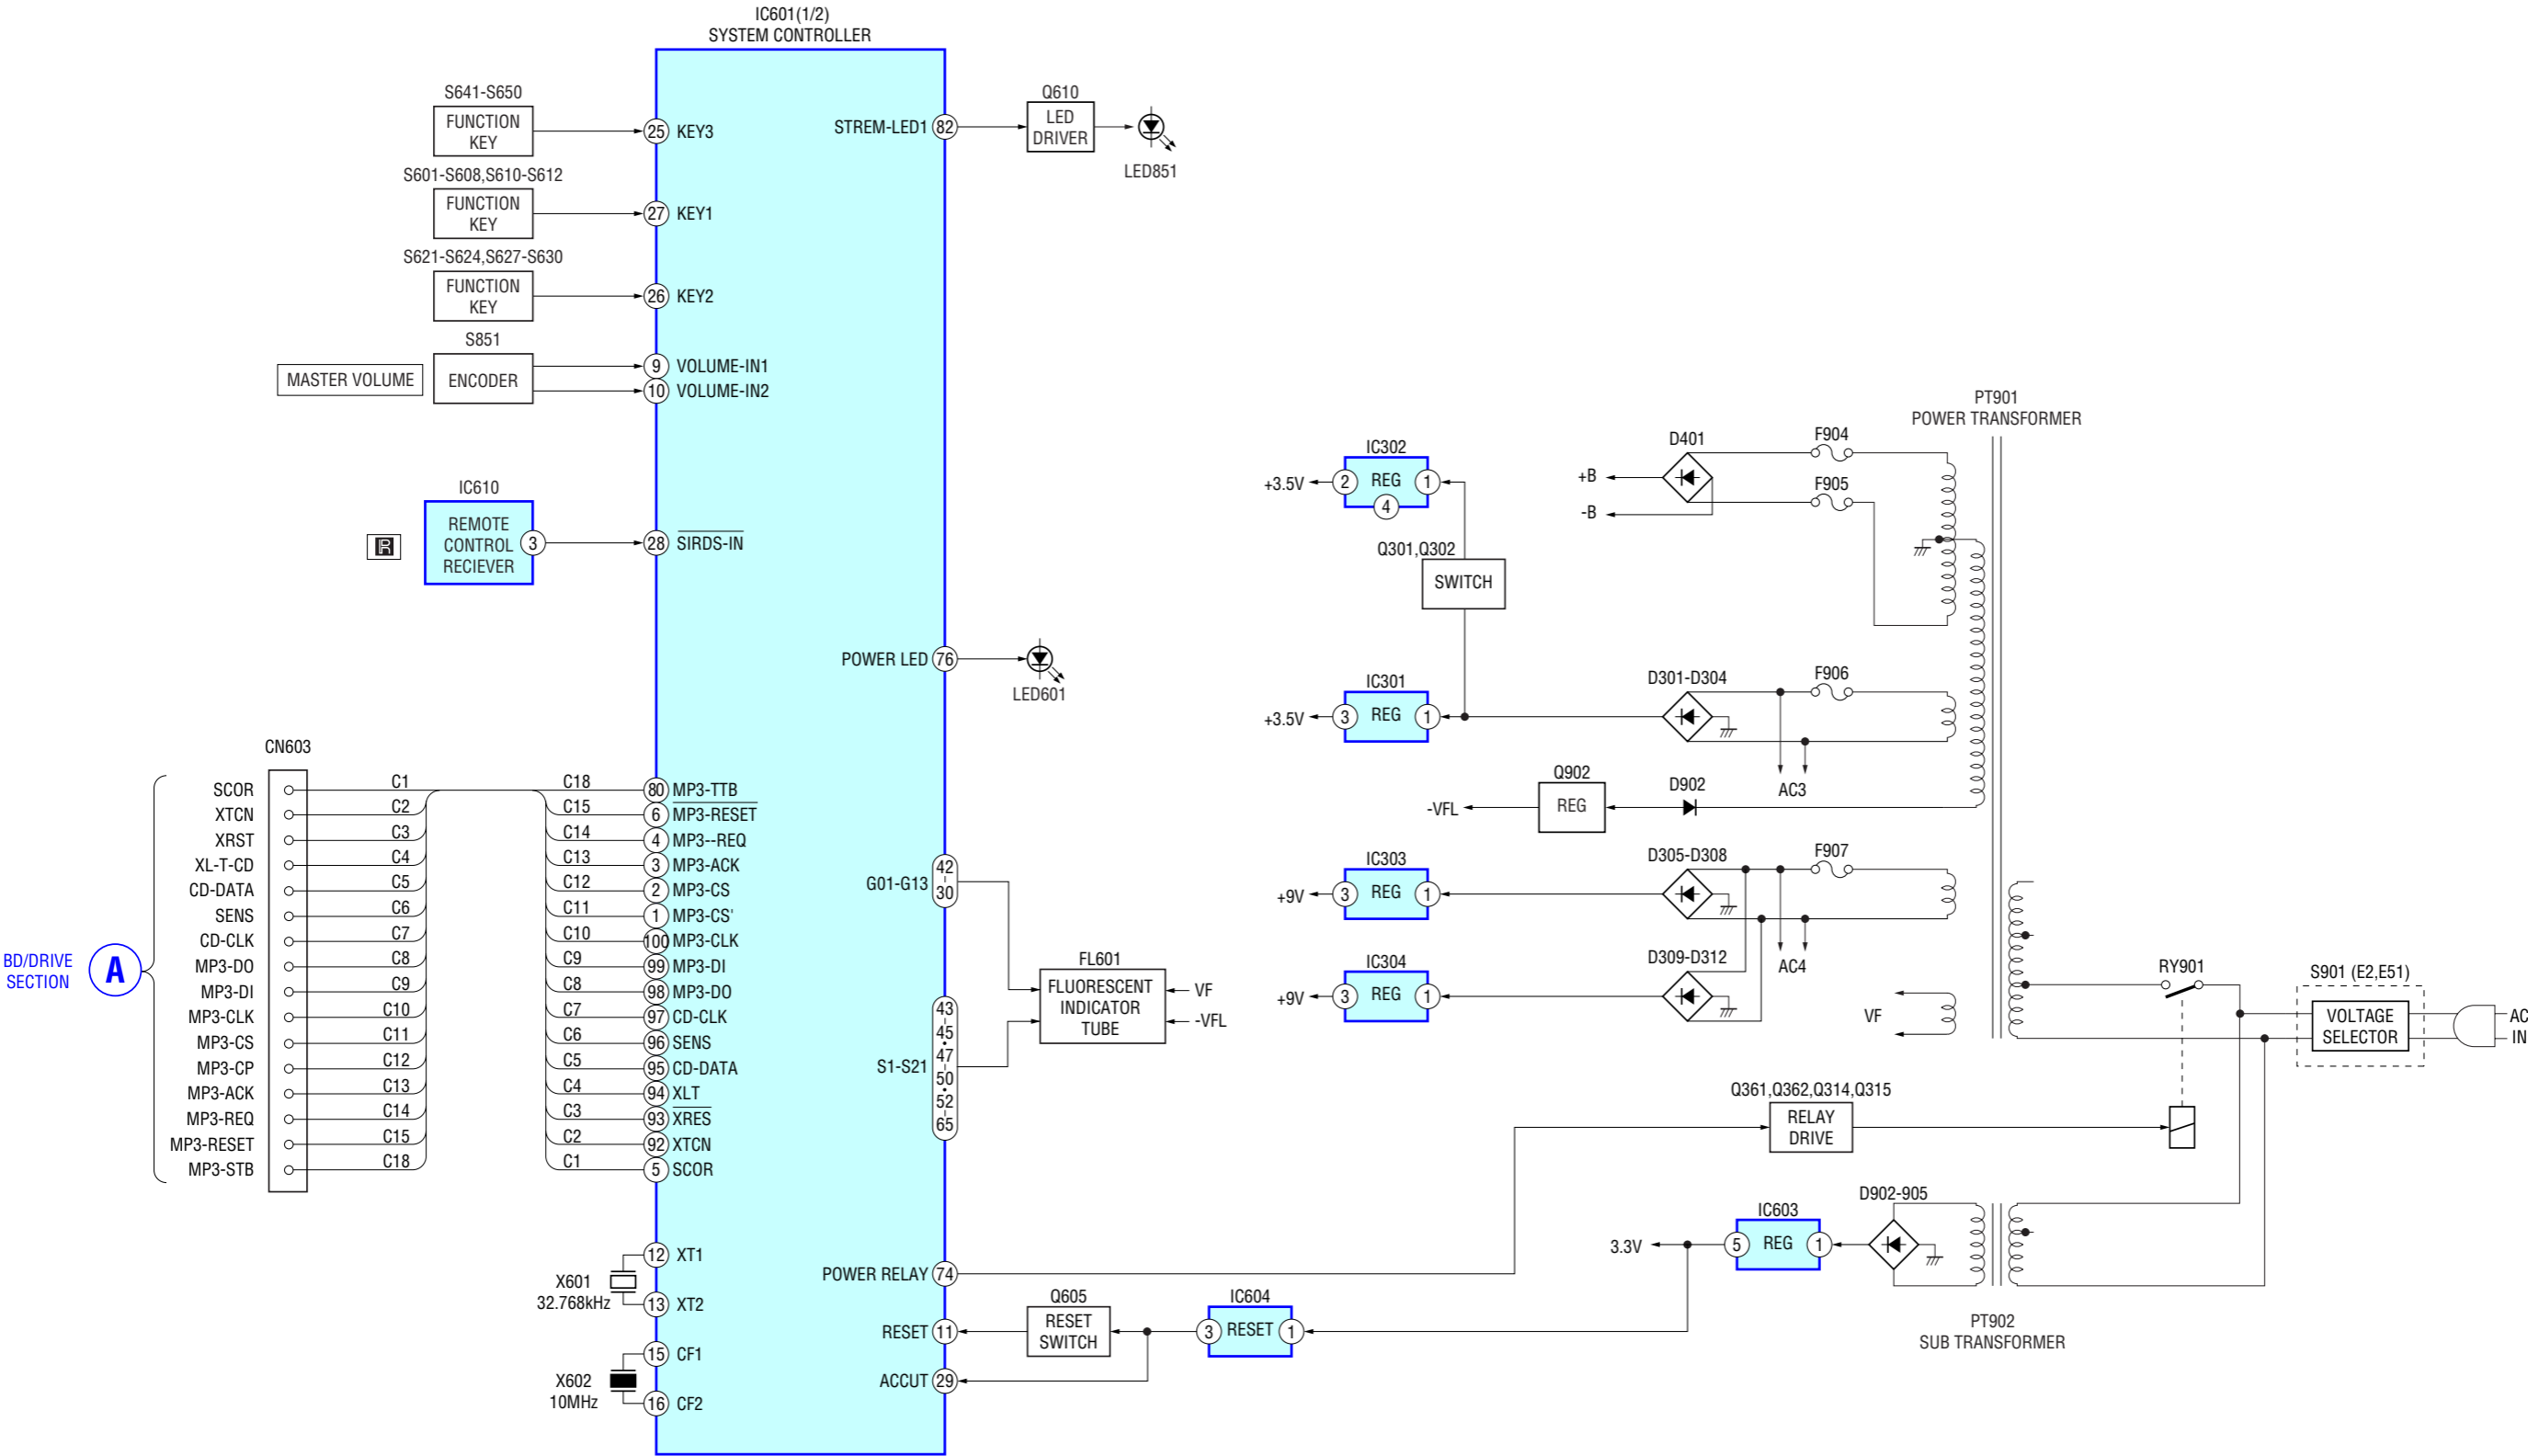

– MAIN SECTION –

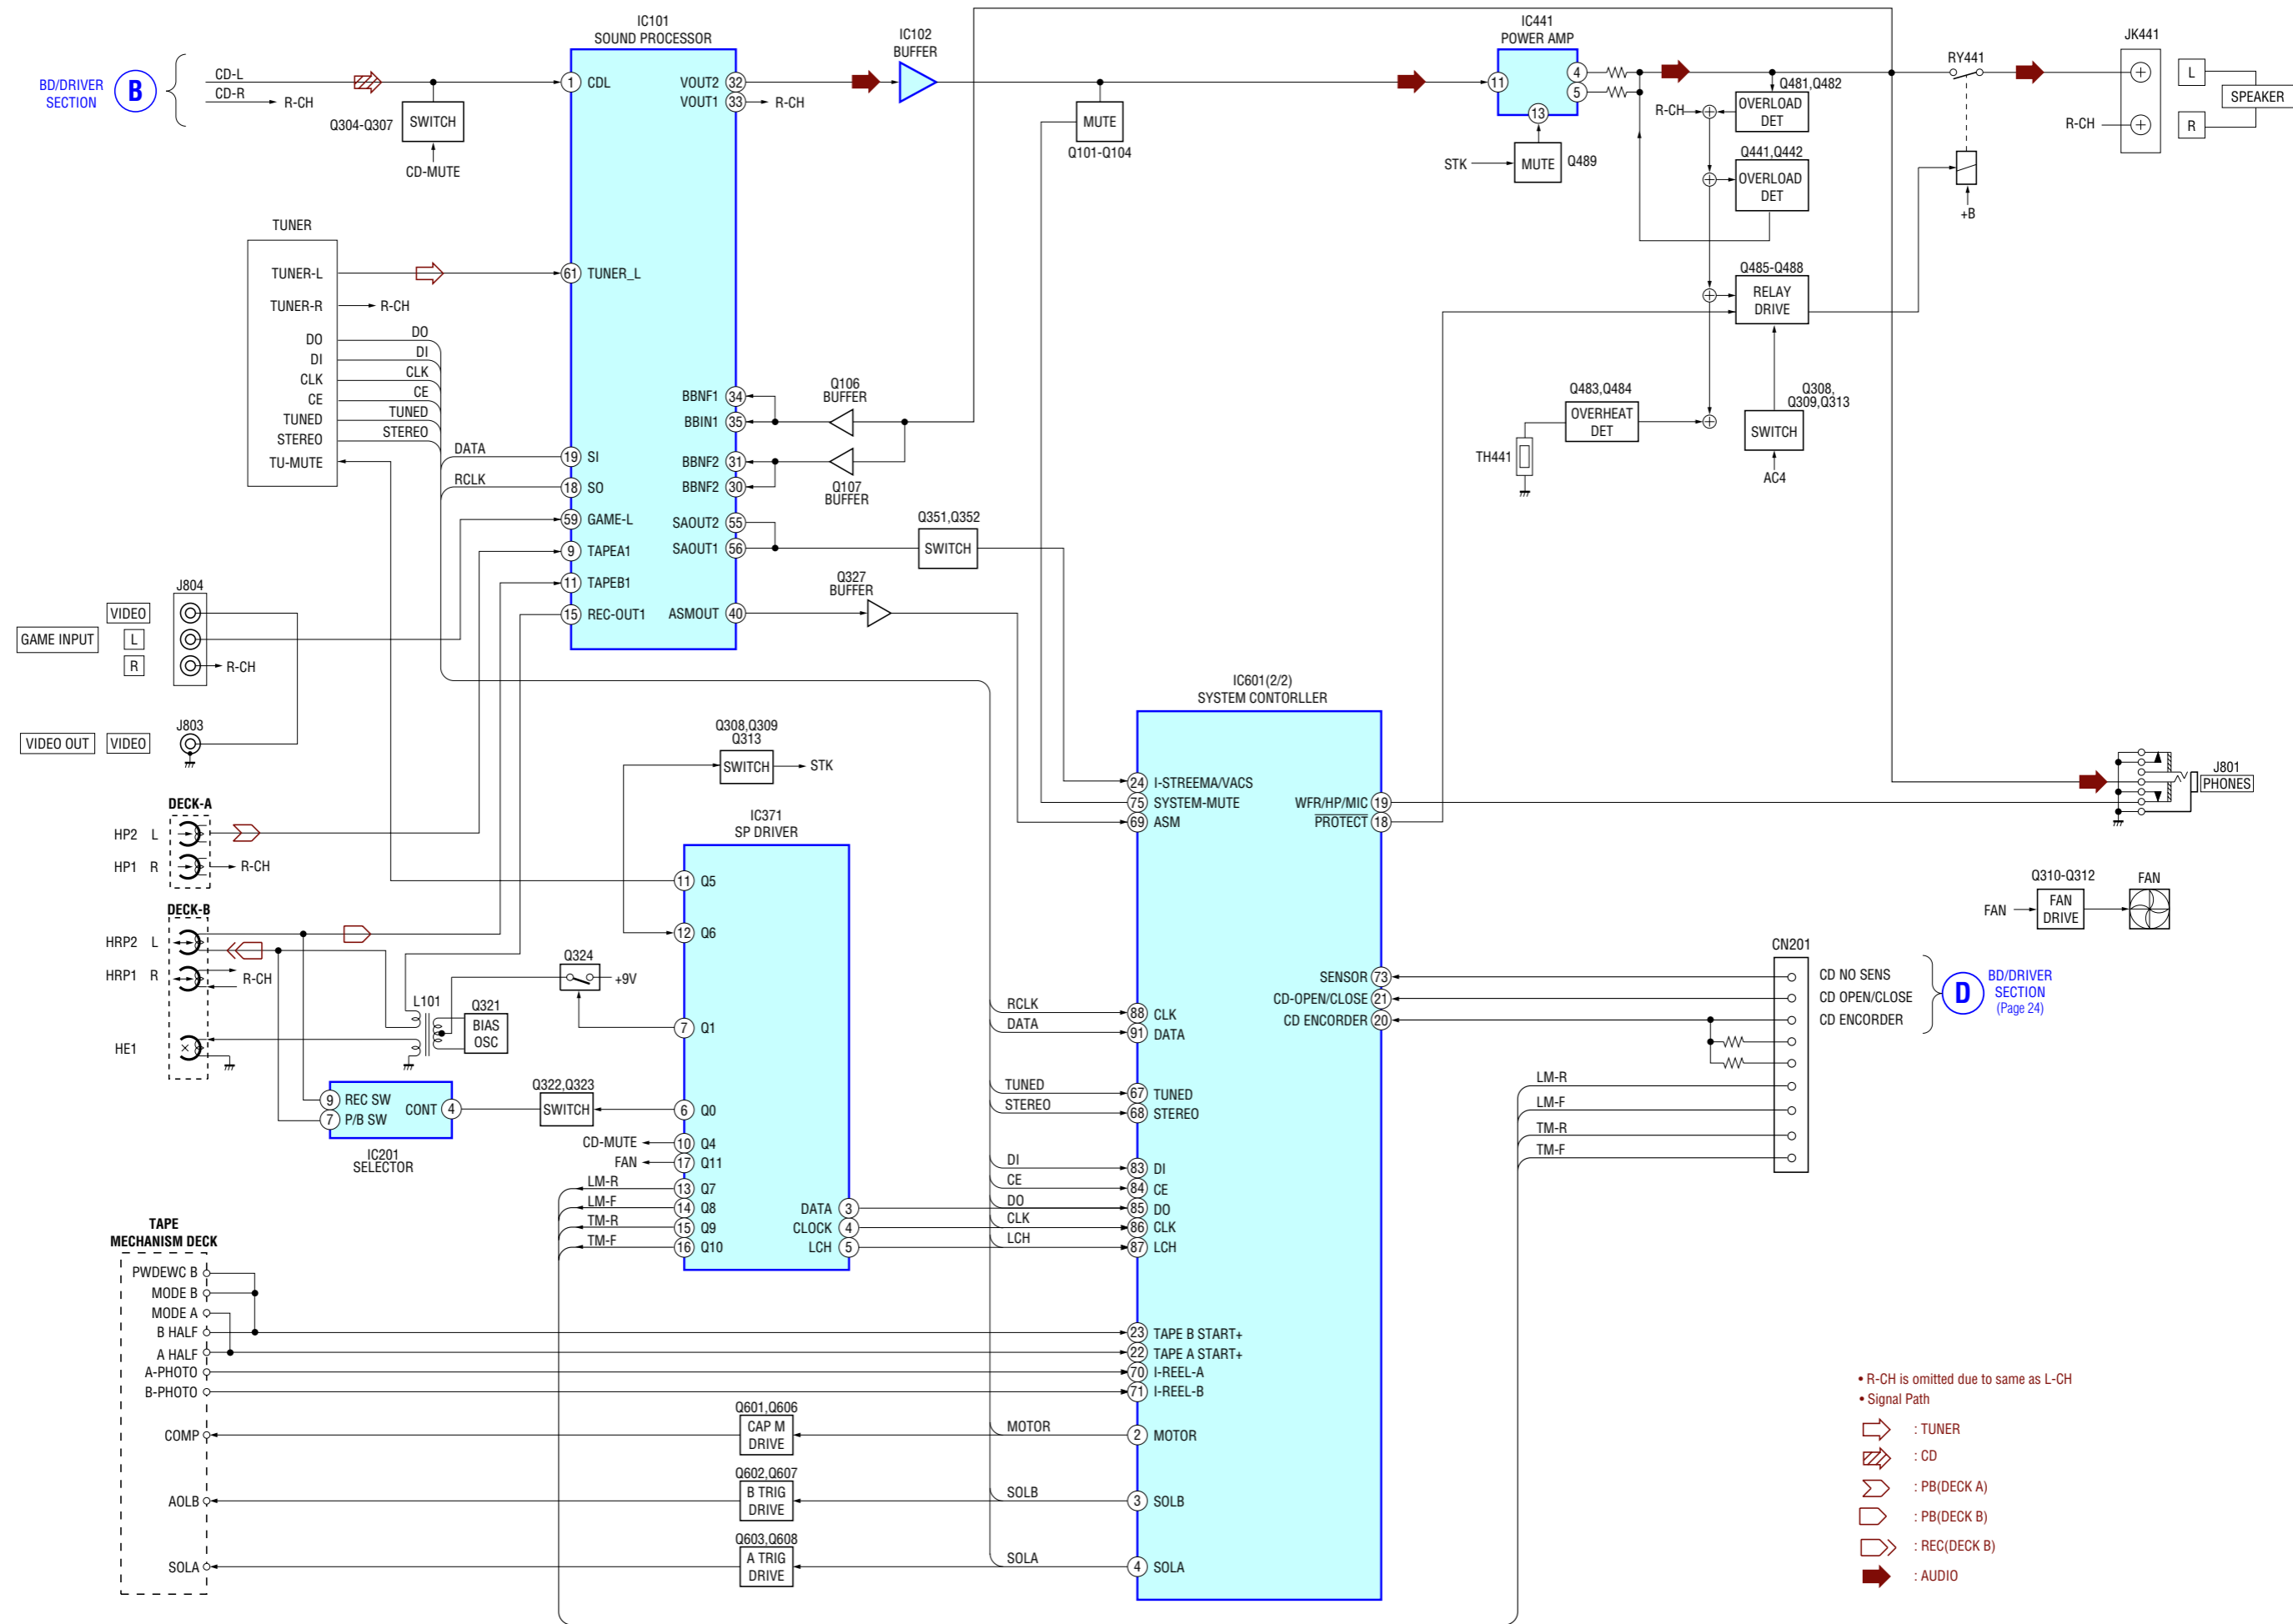

– BD/DRIVER SECTION –







5-3. SCHEMATIC DIAGRAM – BD81A SECTION – • See page 42 for IC PIN FUNCTION DESCRIPTION.




5-4. PRINTED WIRING BOARD – CD MECHANISM SECTION – • See page 21 for Circuit Boards Location.

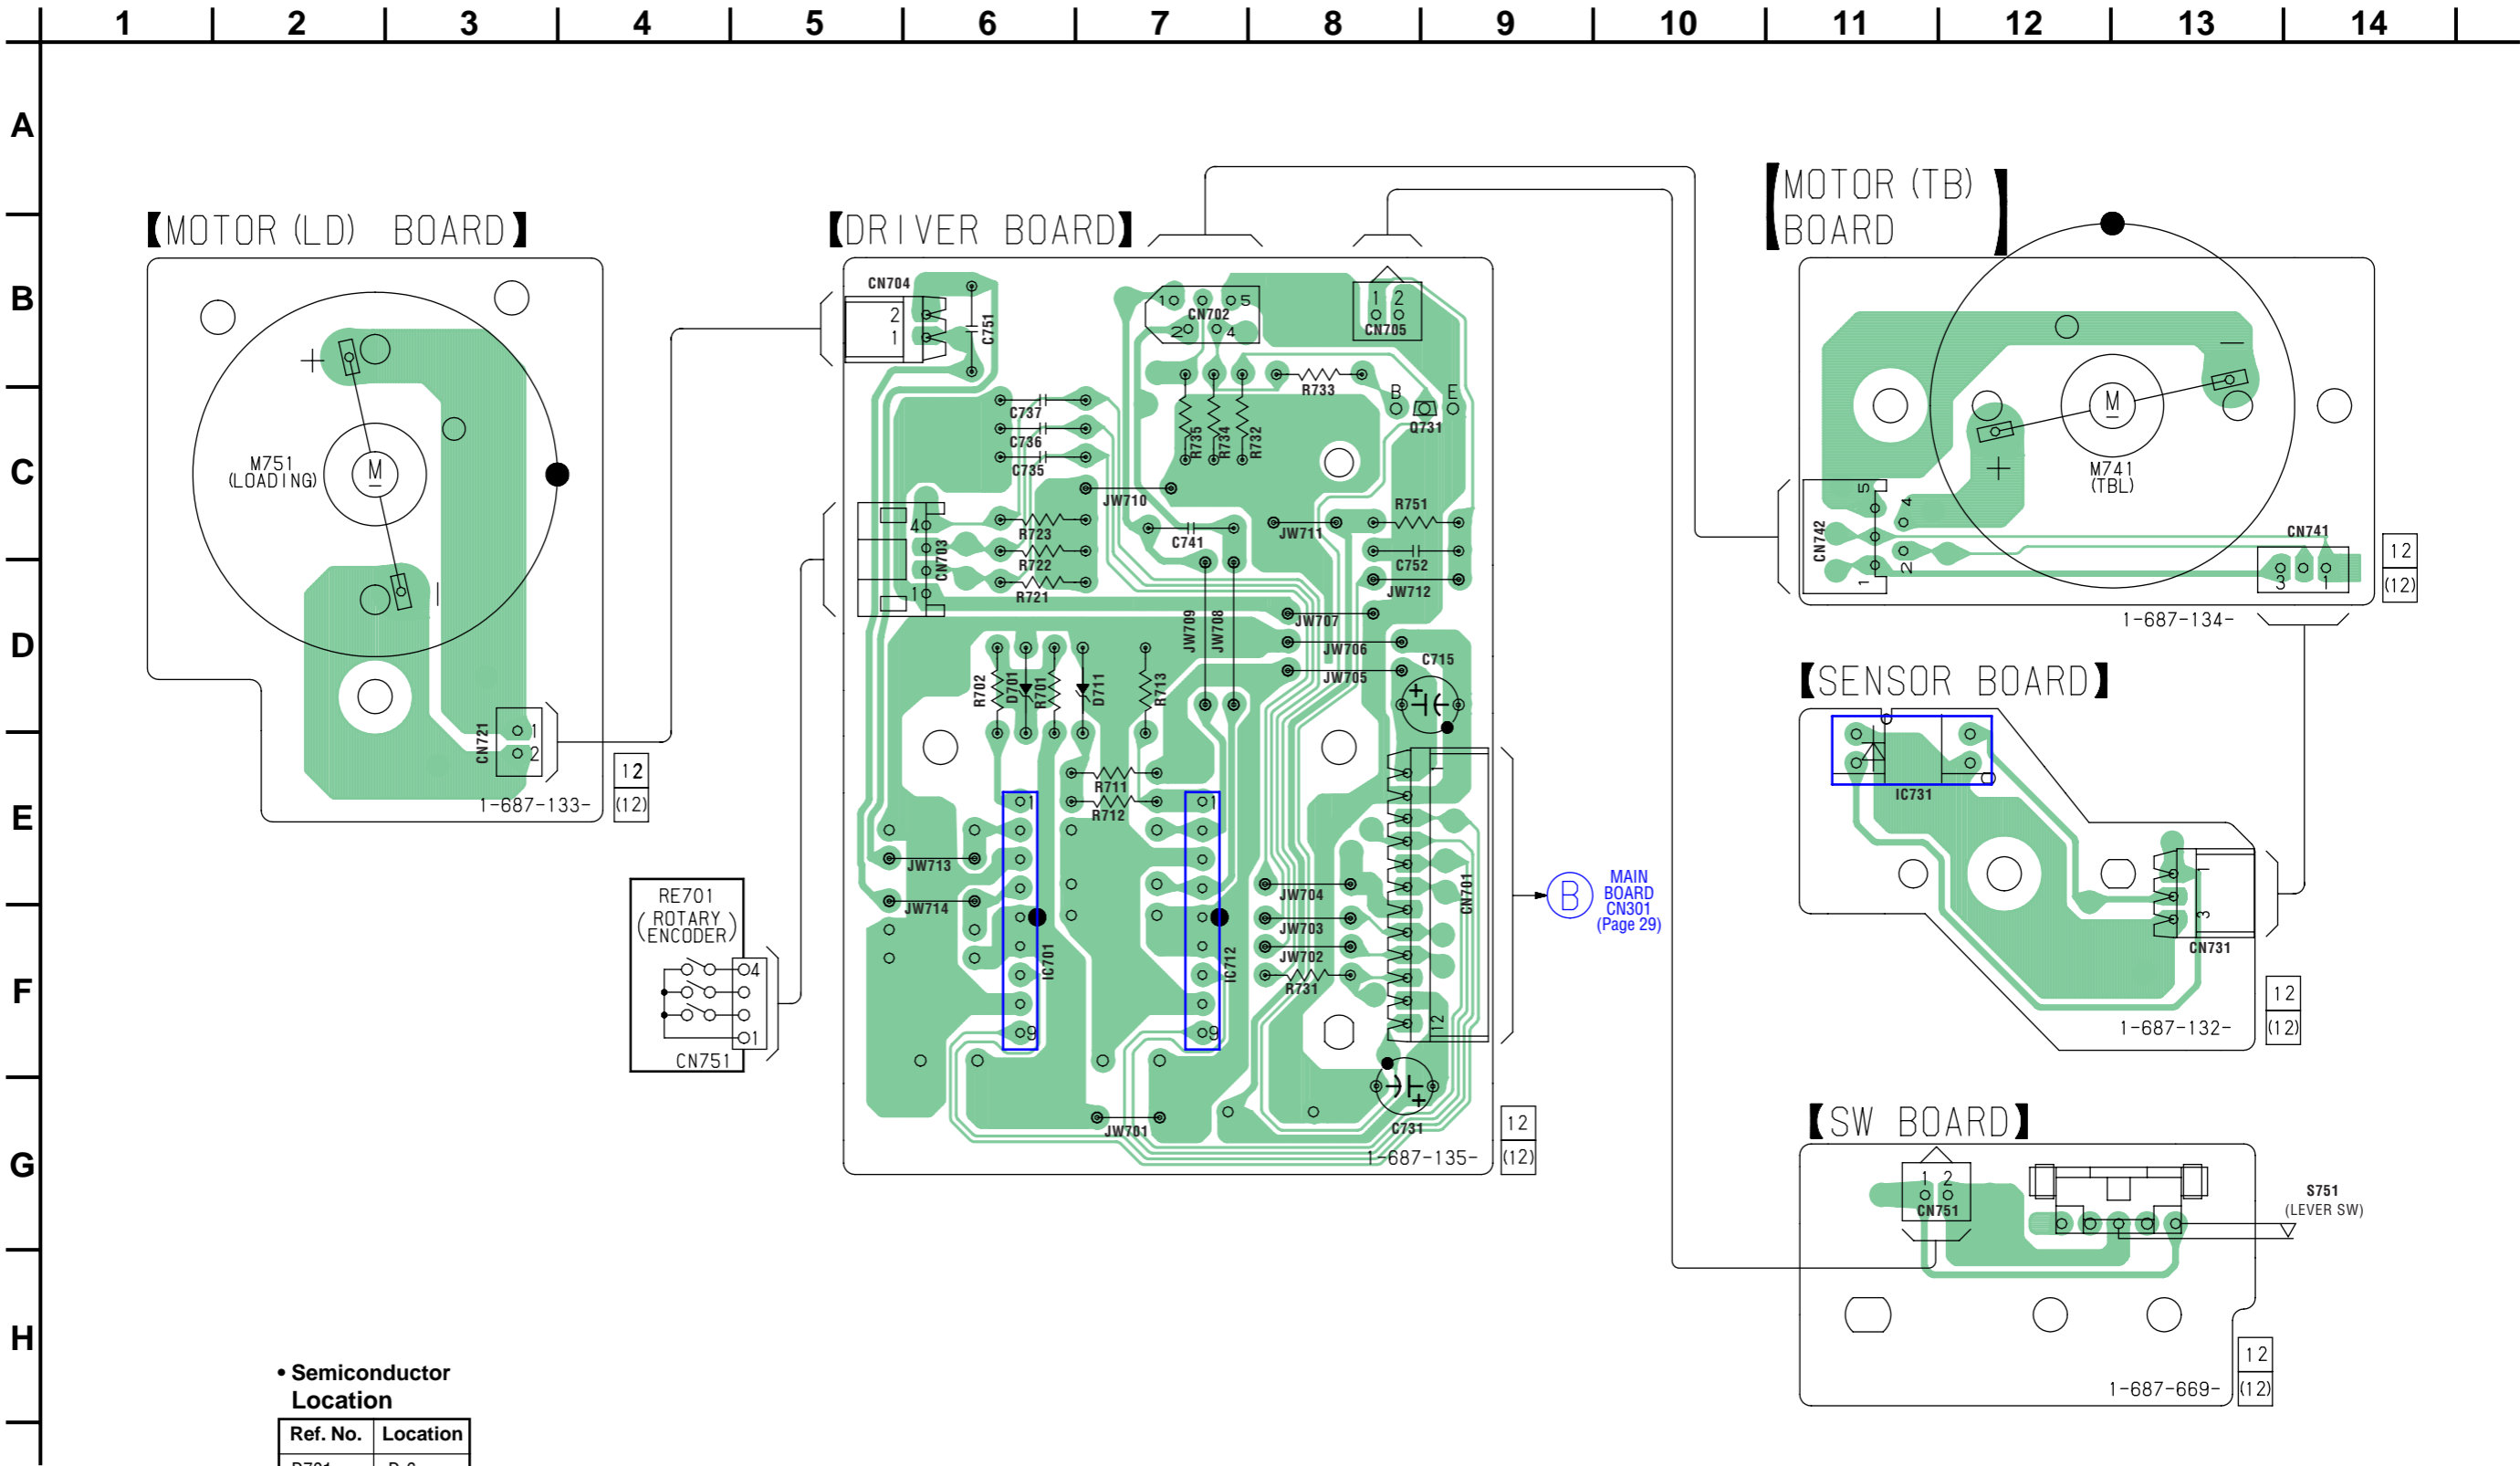


5-5. SCHEMATIC DIAGRAM – CD MECHANISM SECTION –

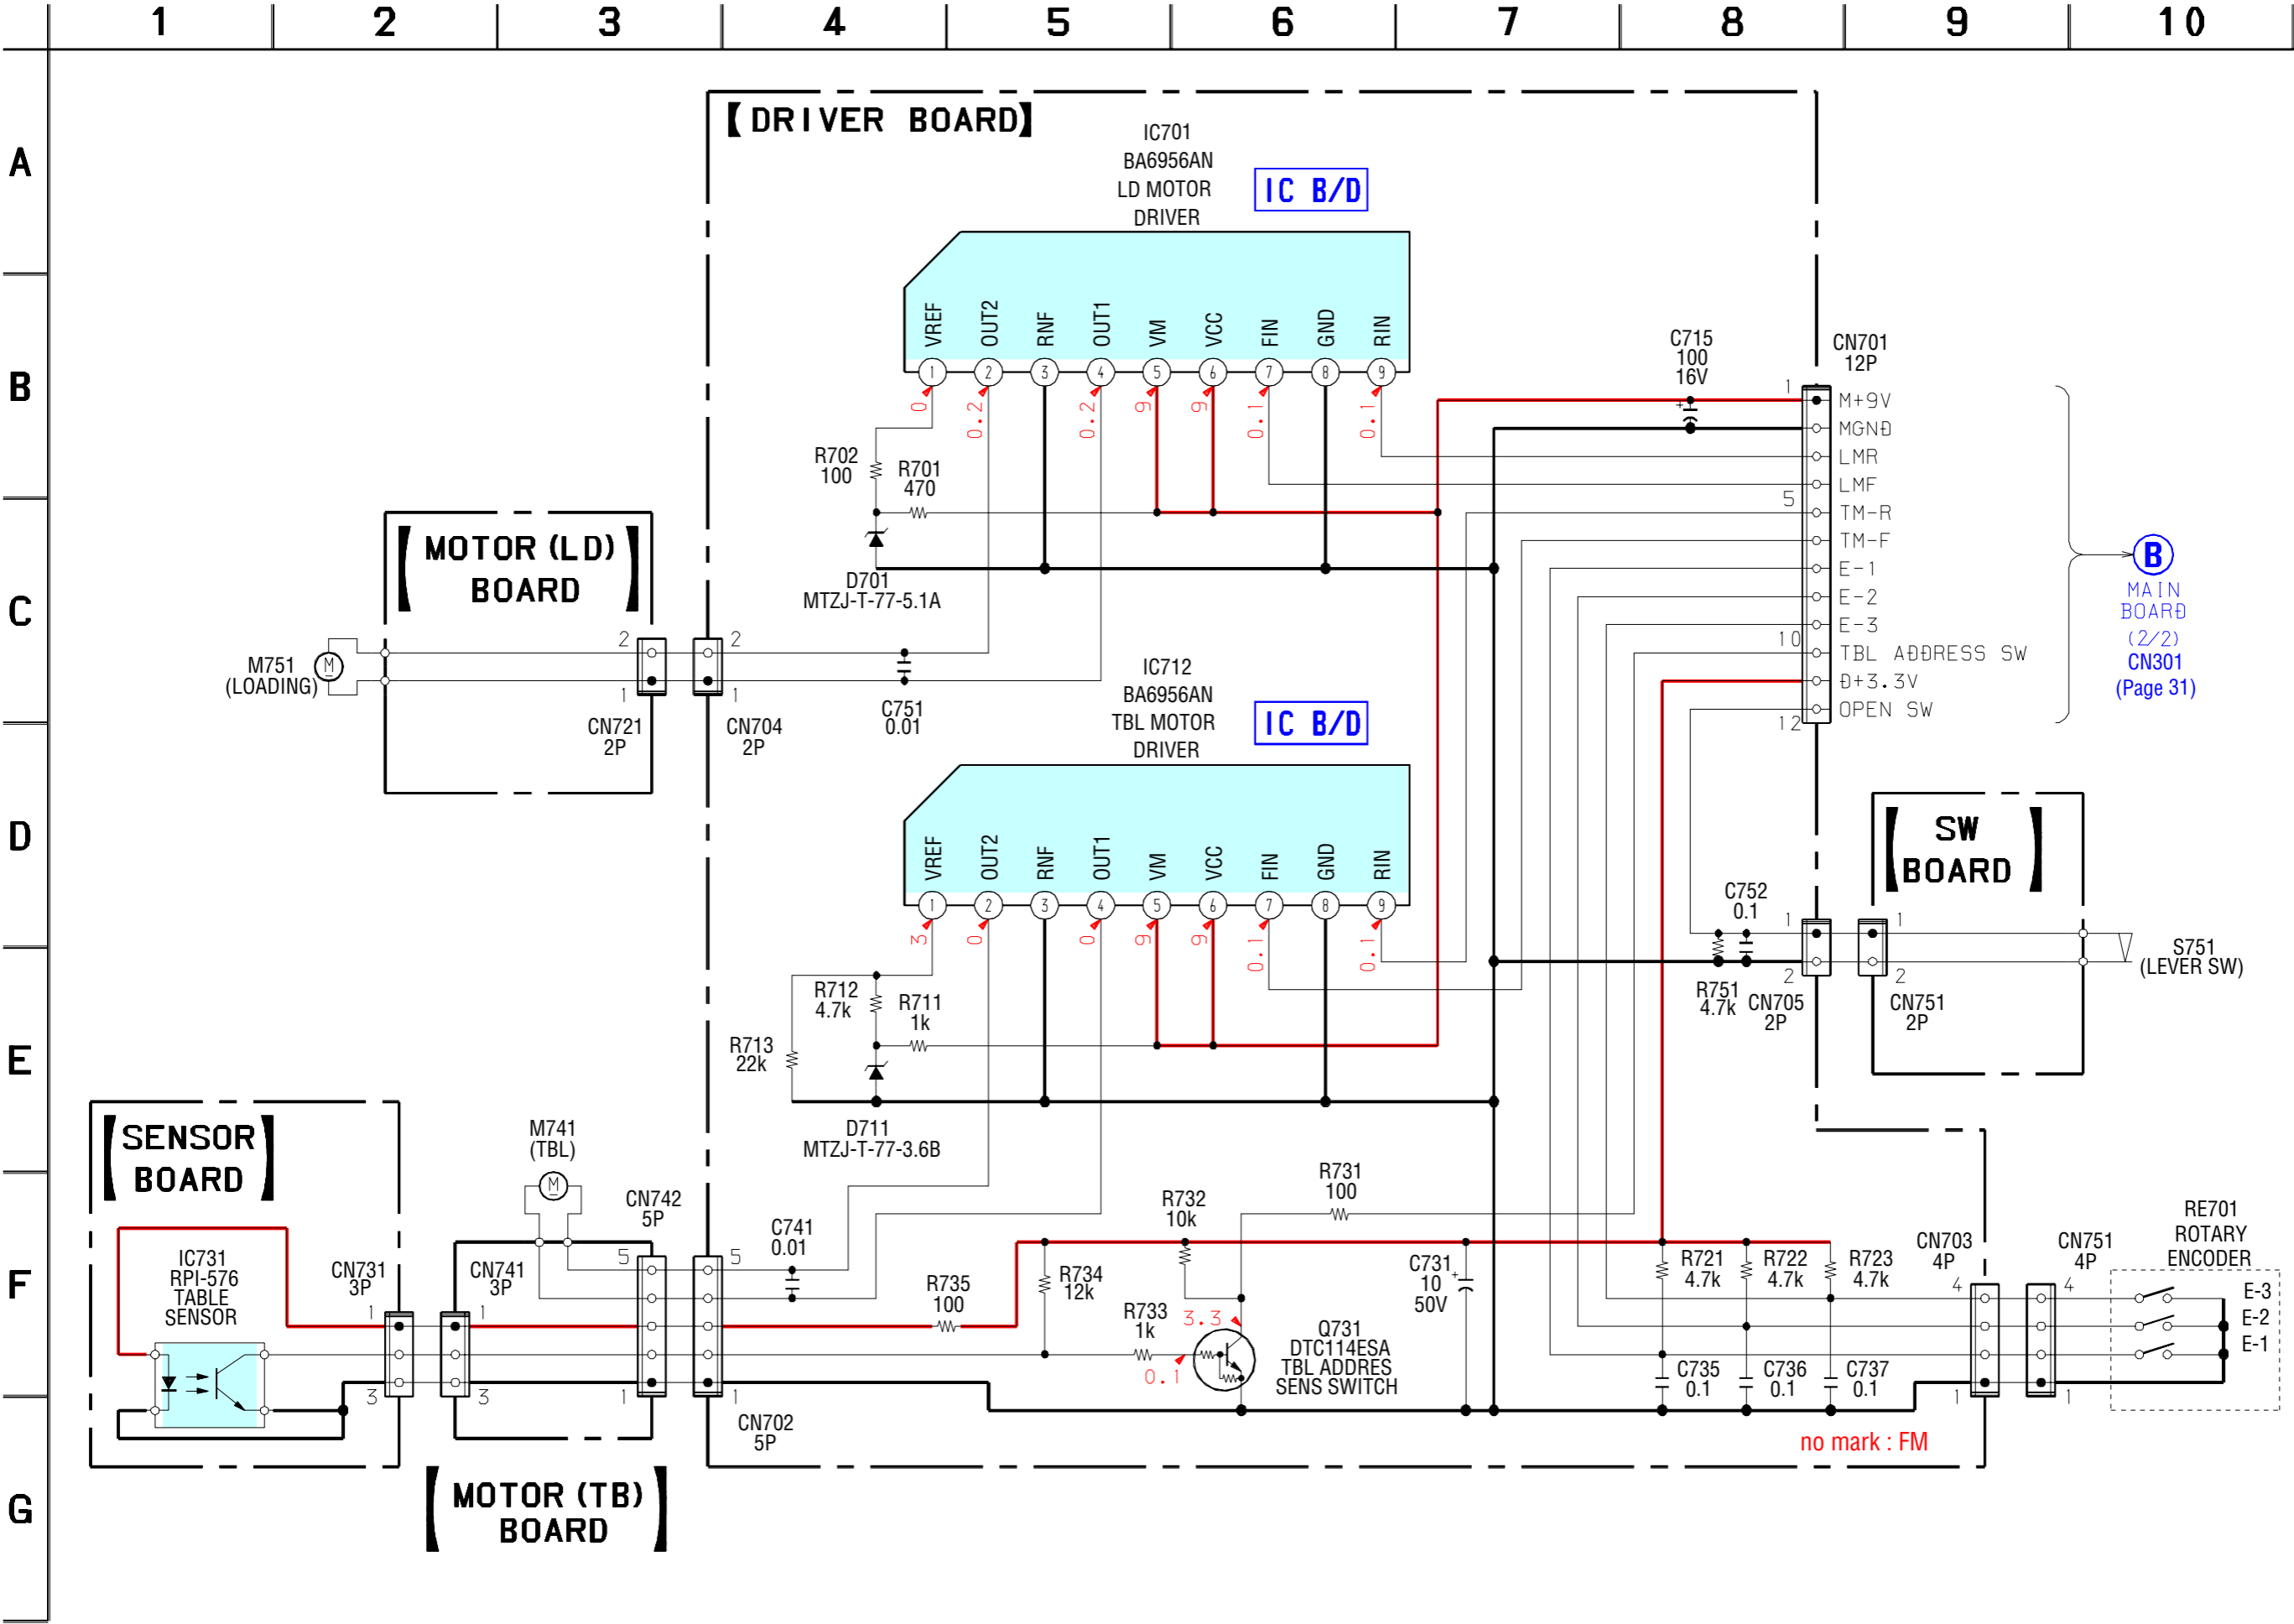




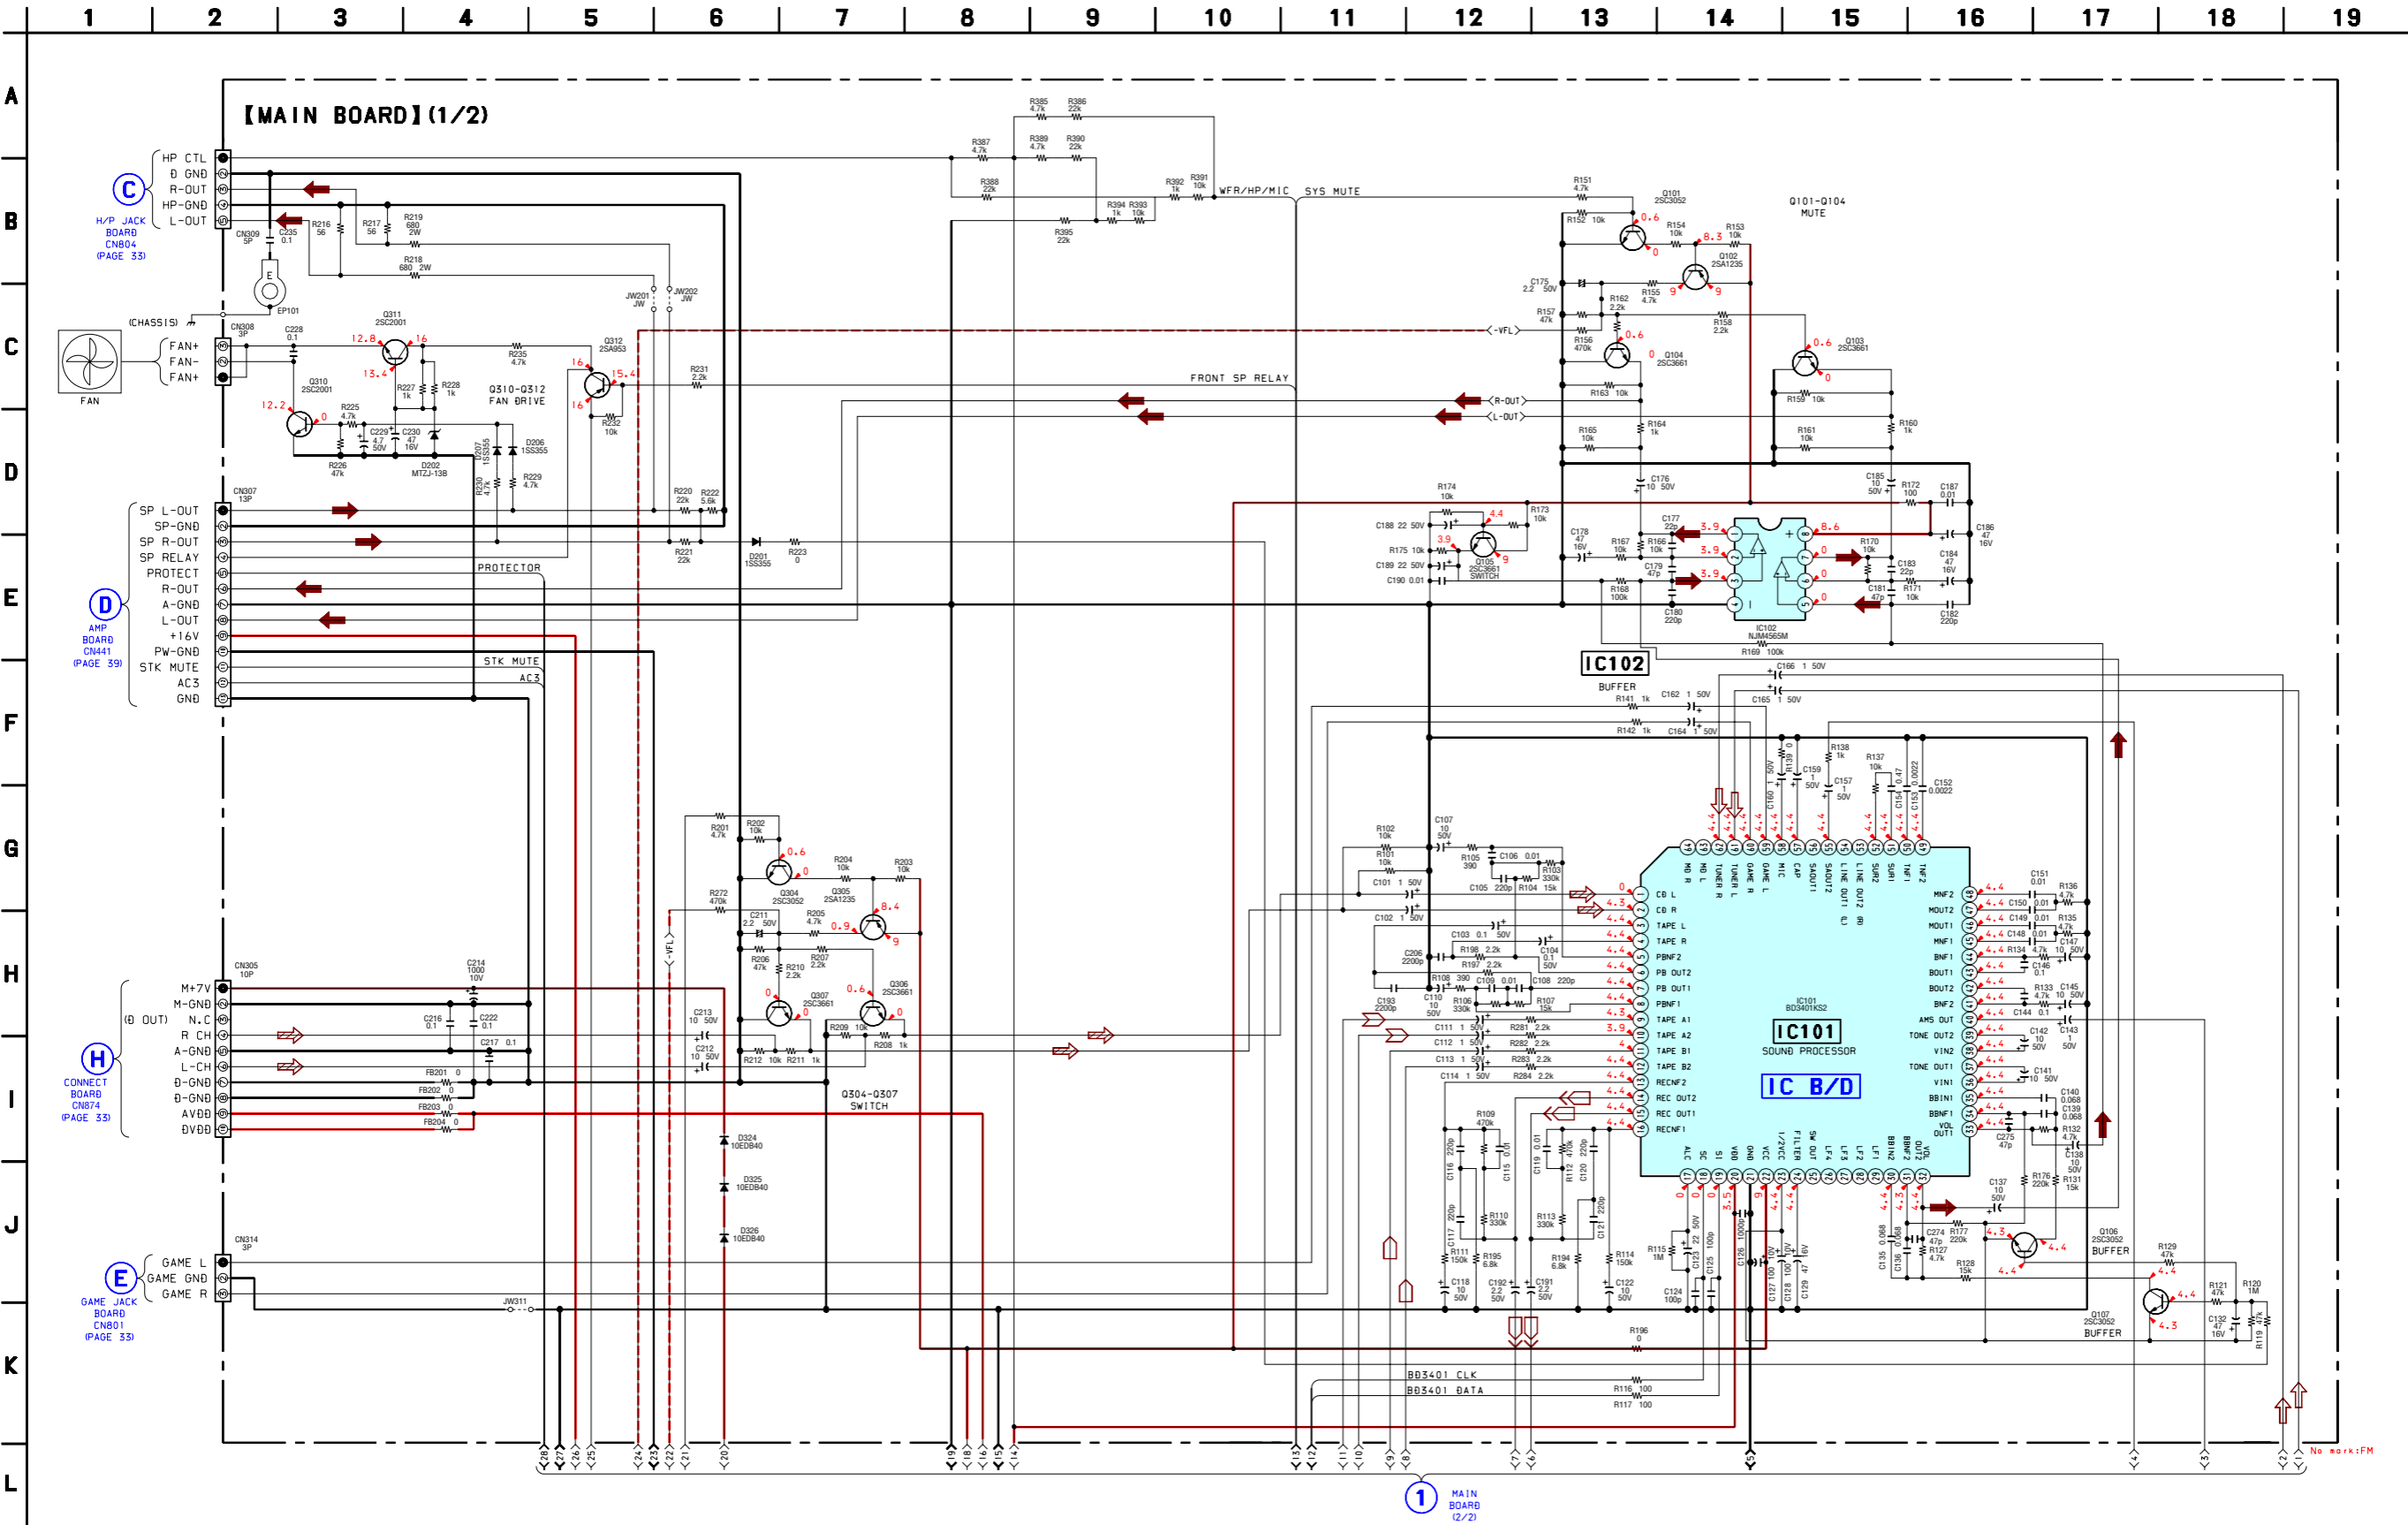



5-8. SCHEMATIC DIAGRAM – MAIN SECTION (2/2) –

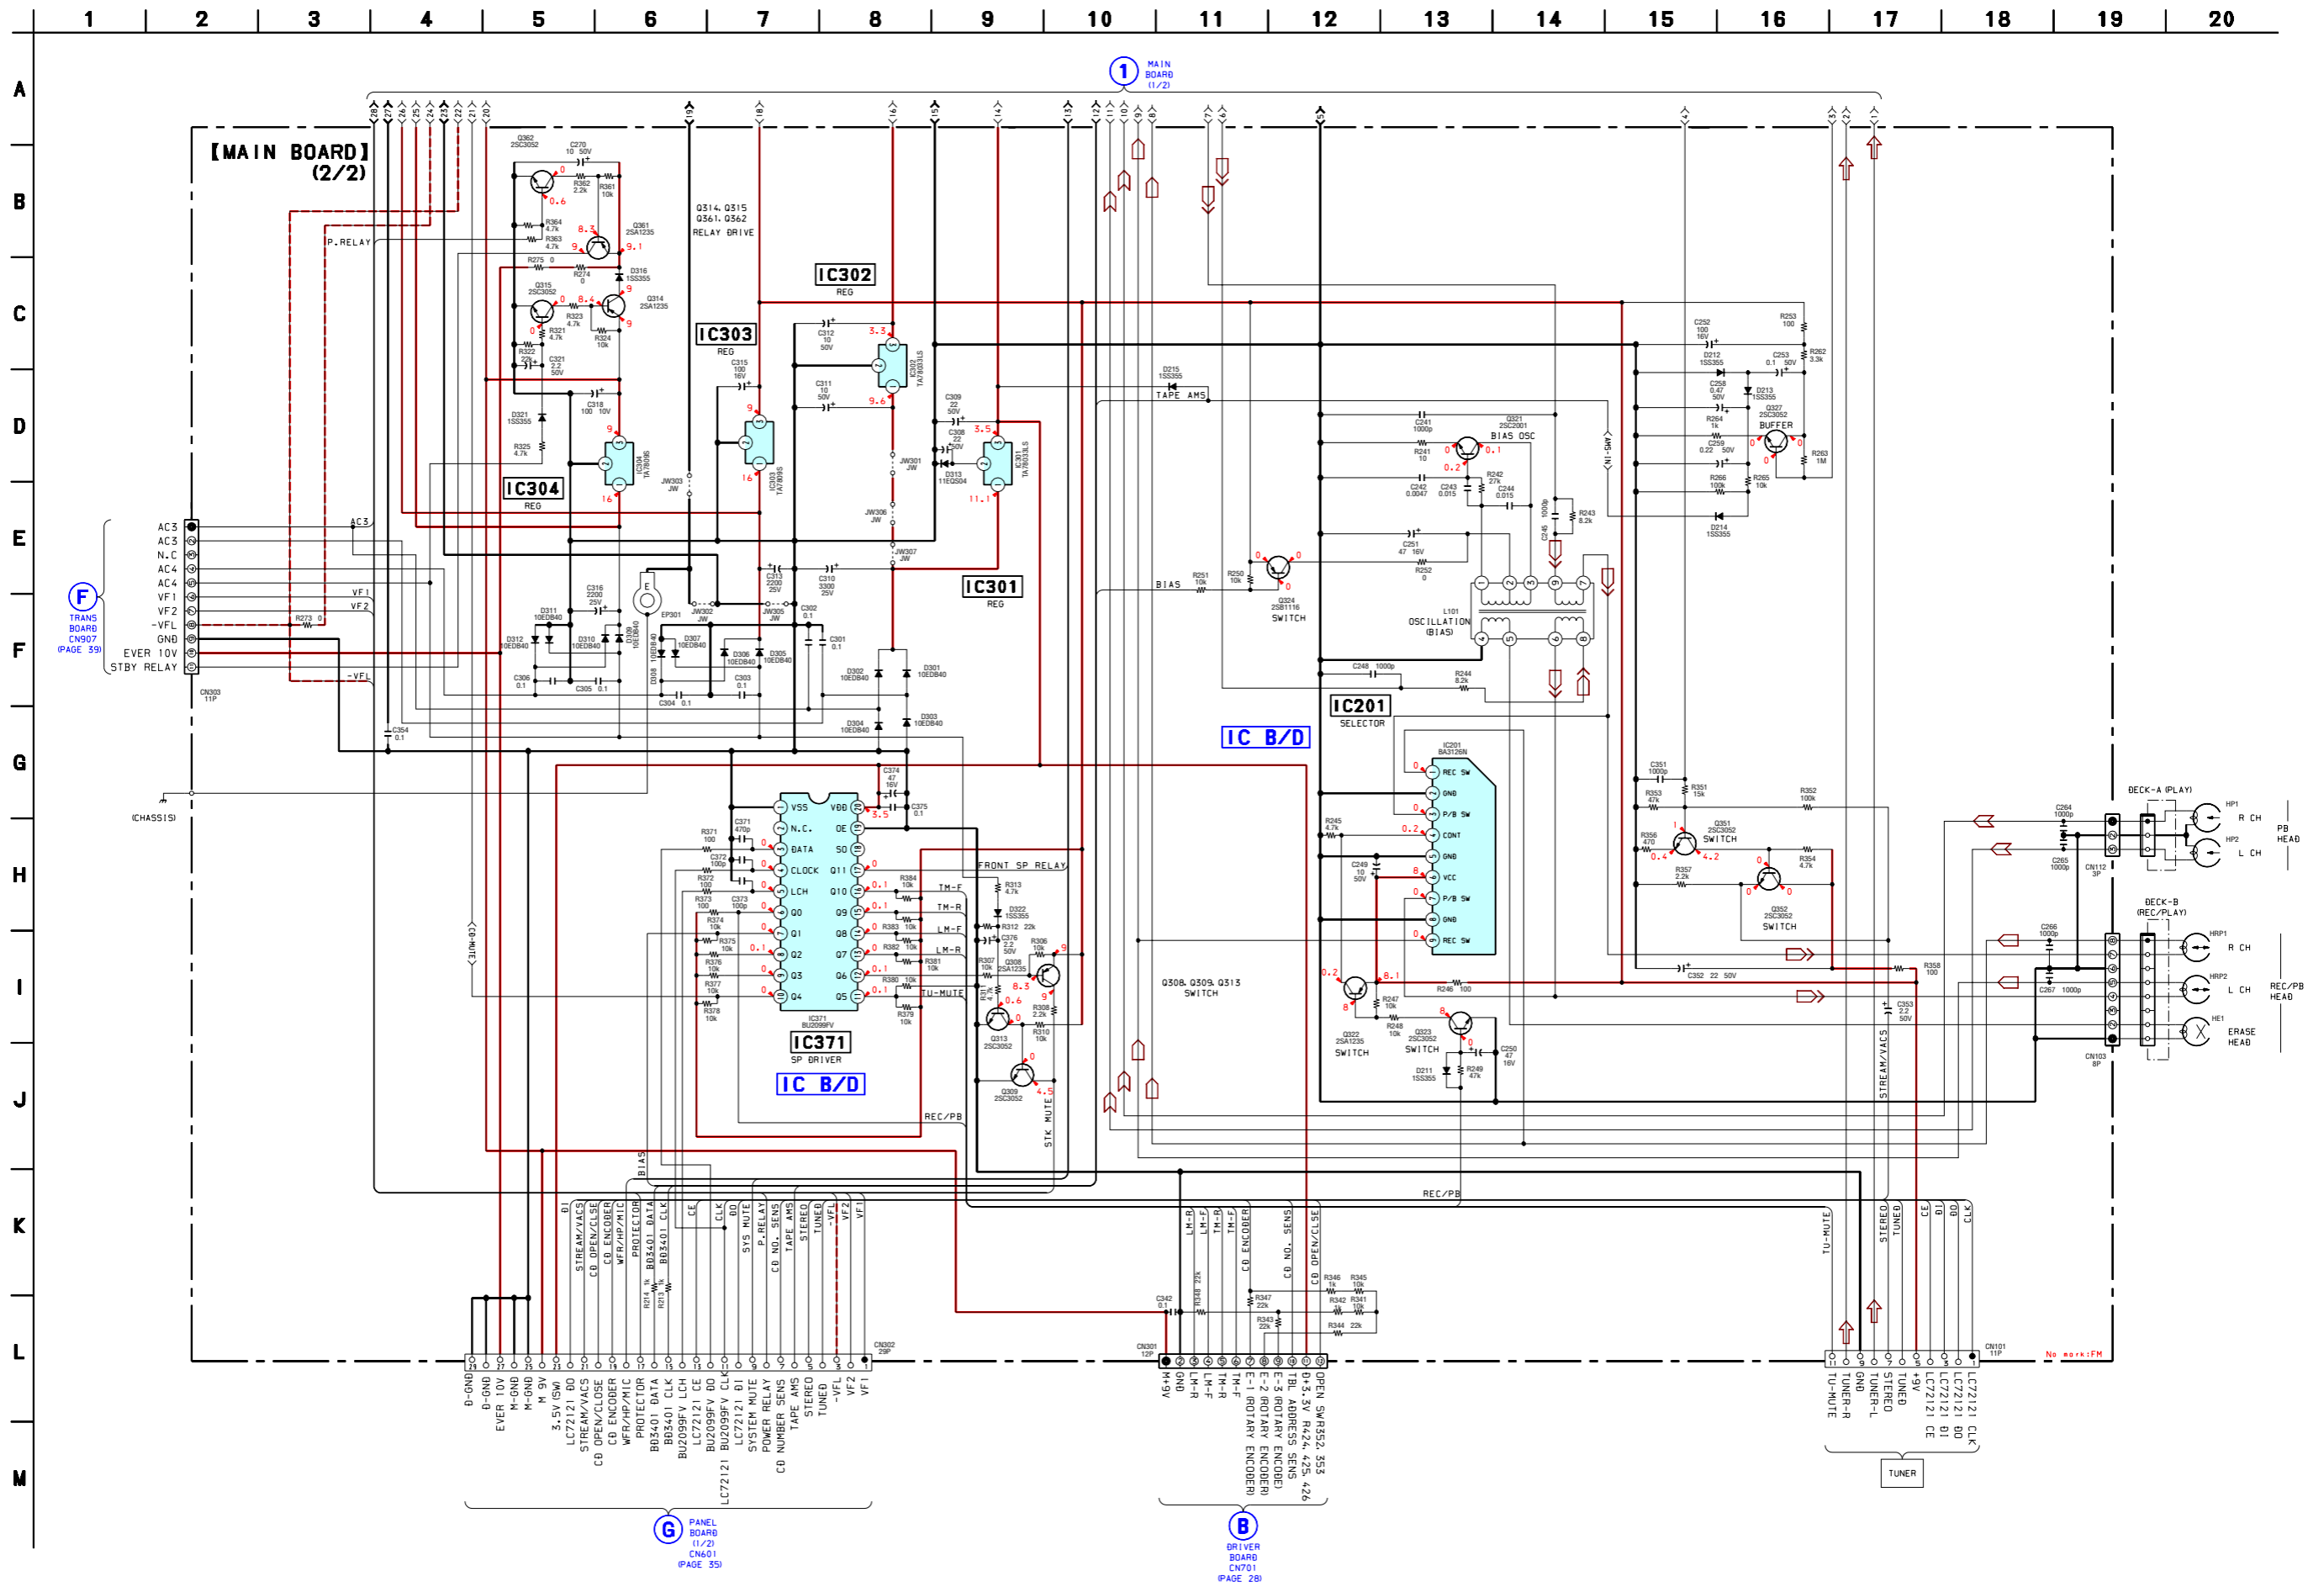

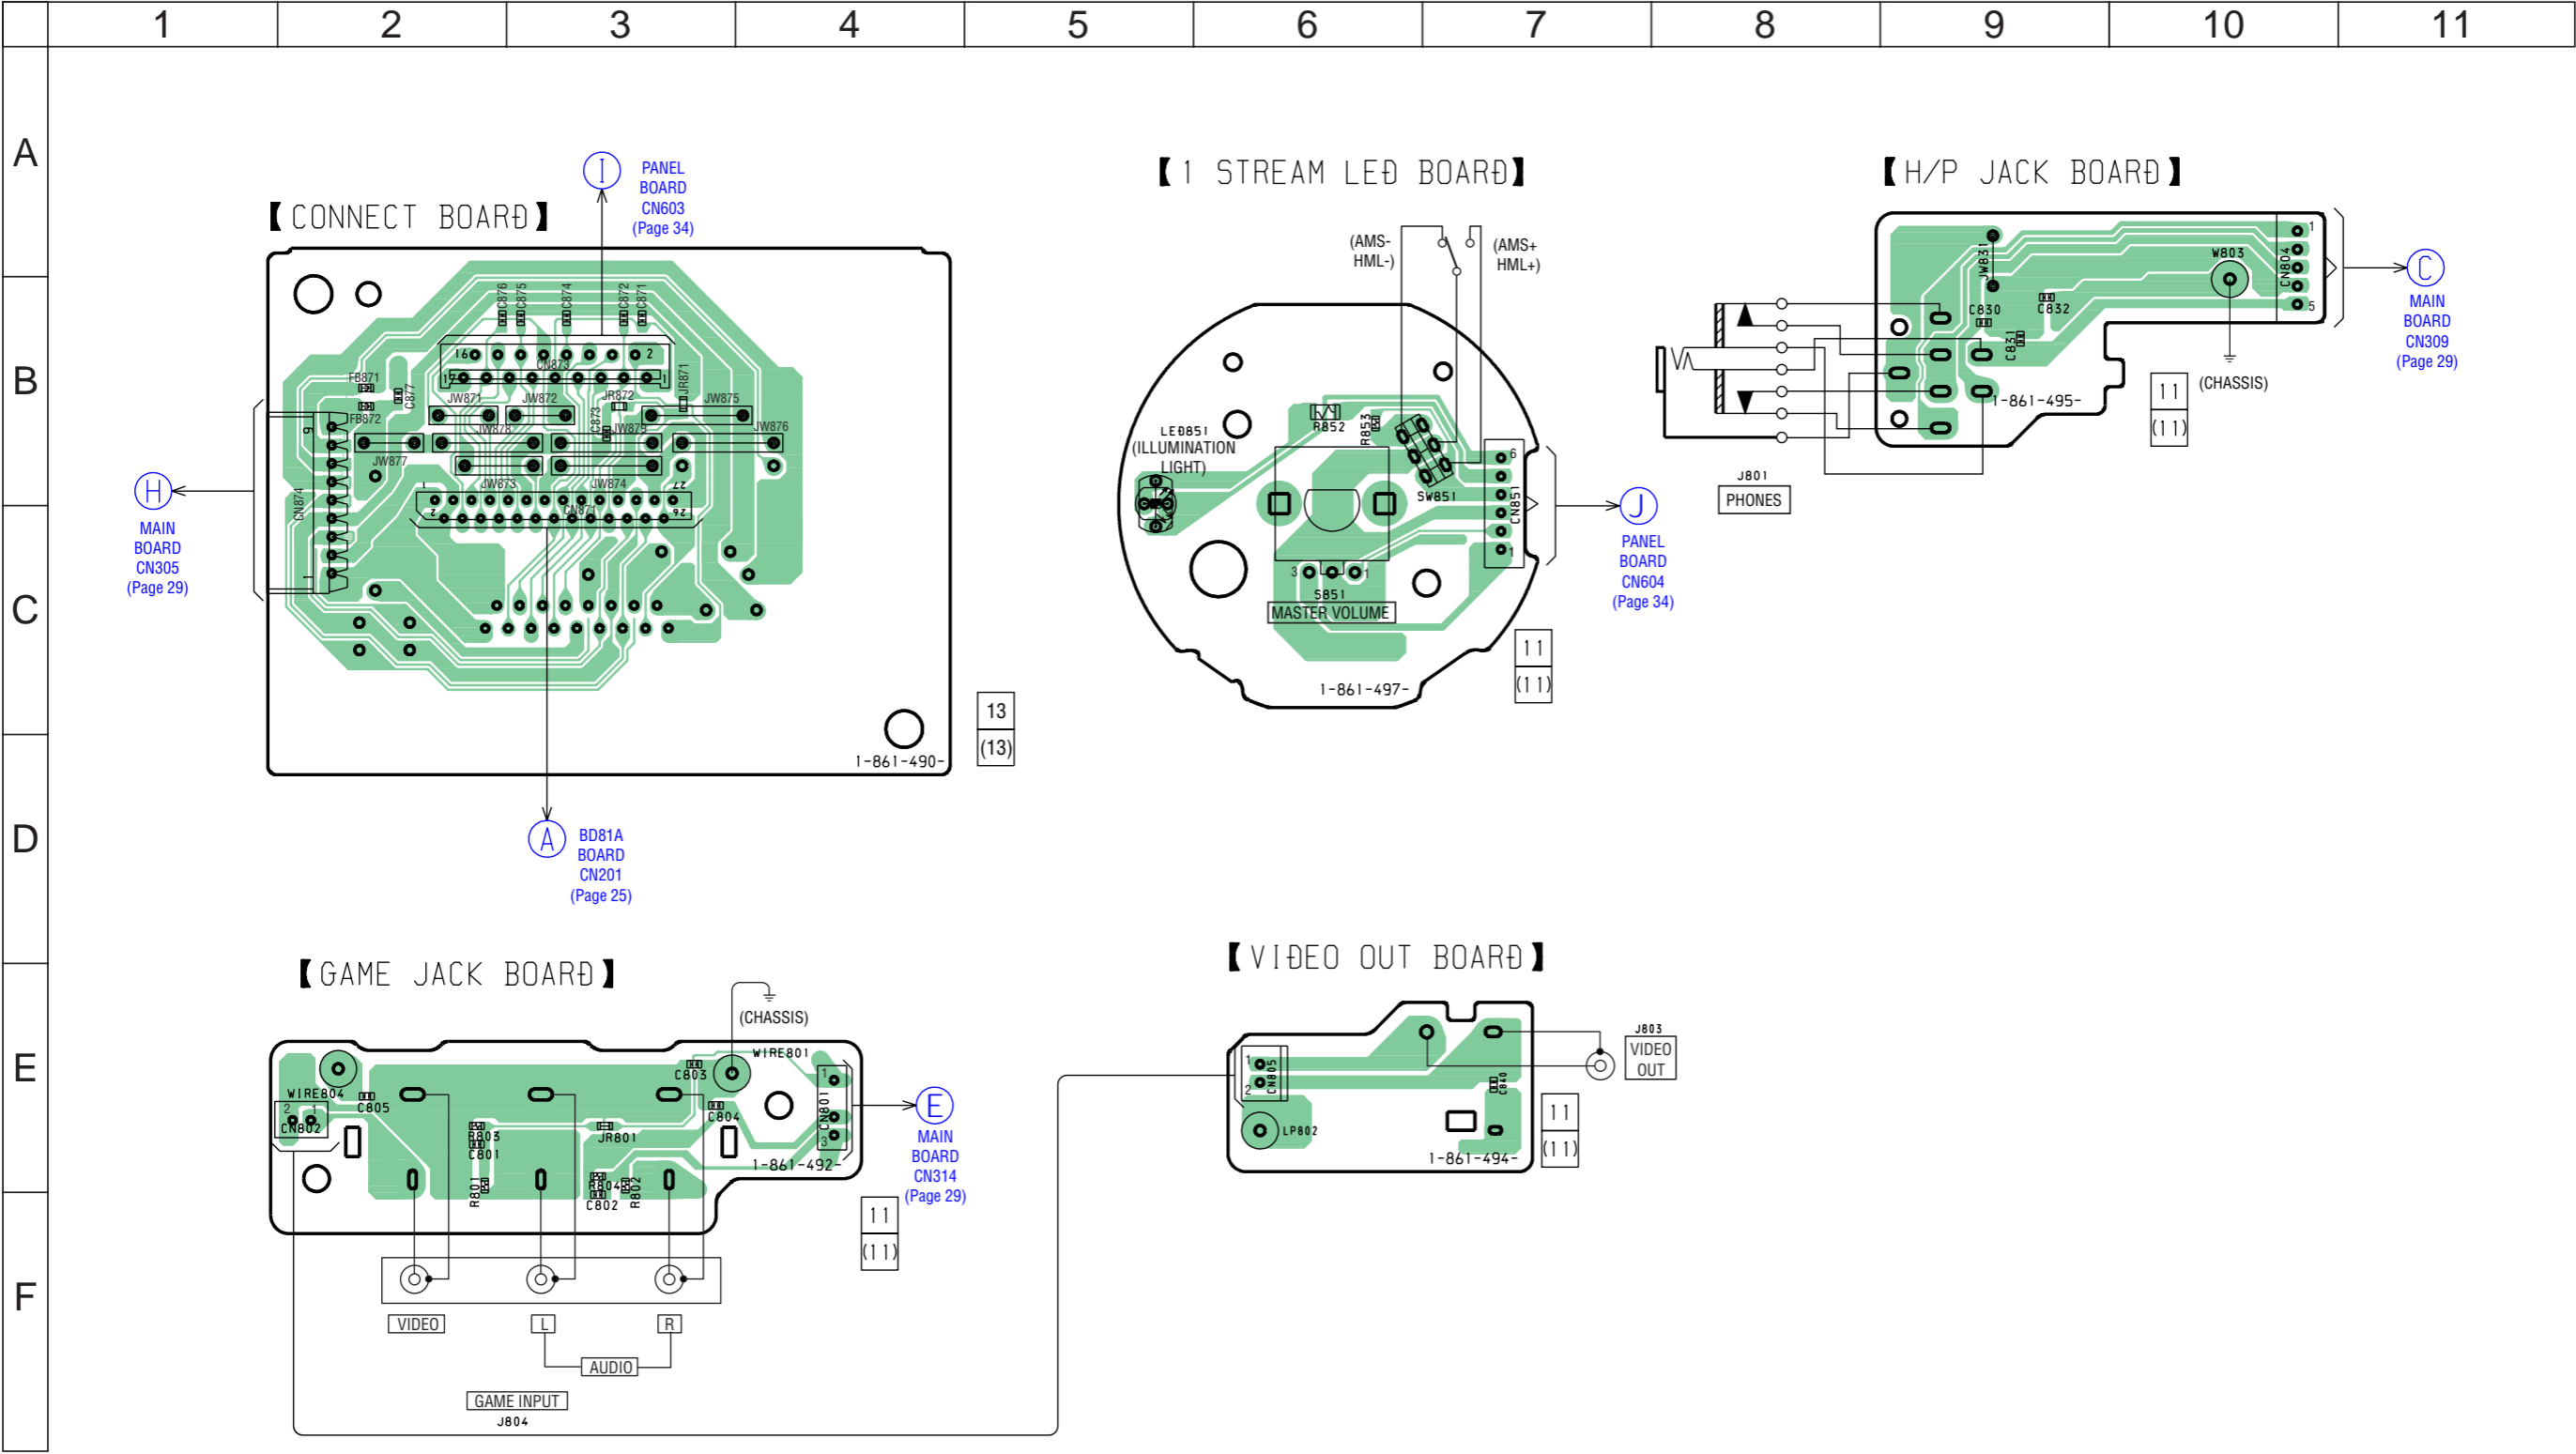



5-10. SCHEMATIC DIAGRAM – PANEL COMB SECTION –

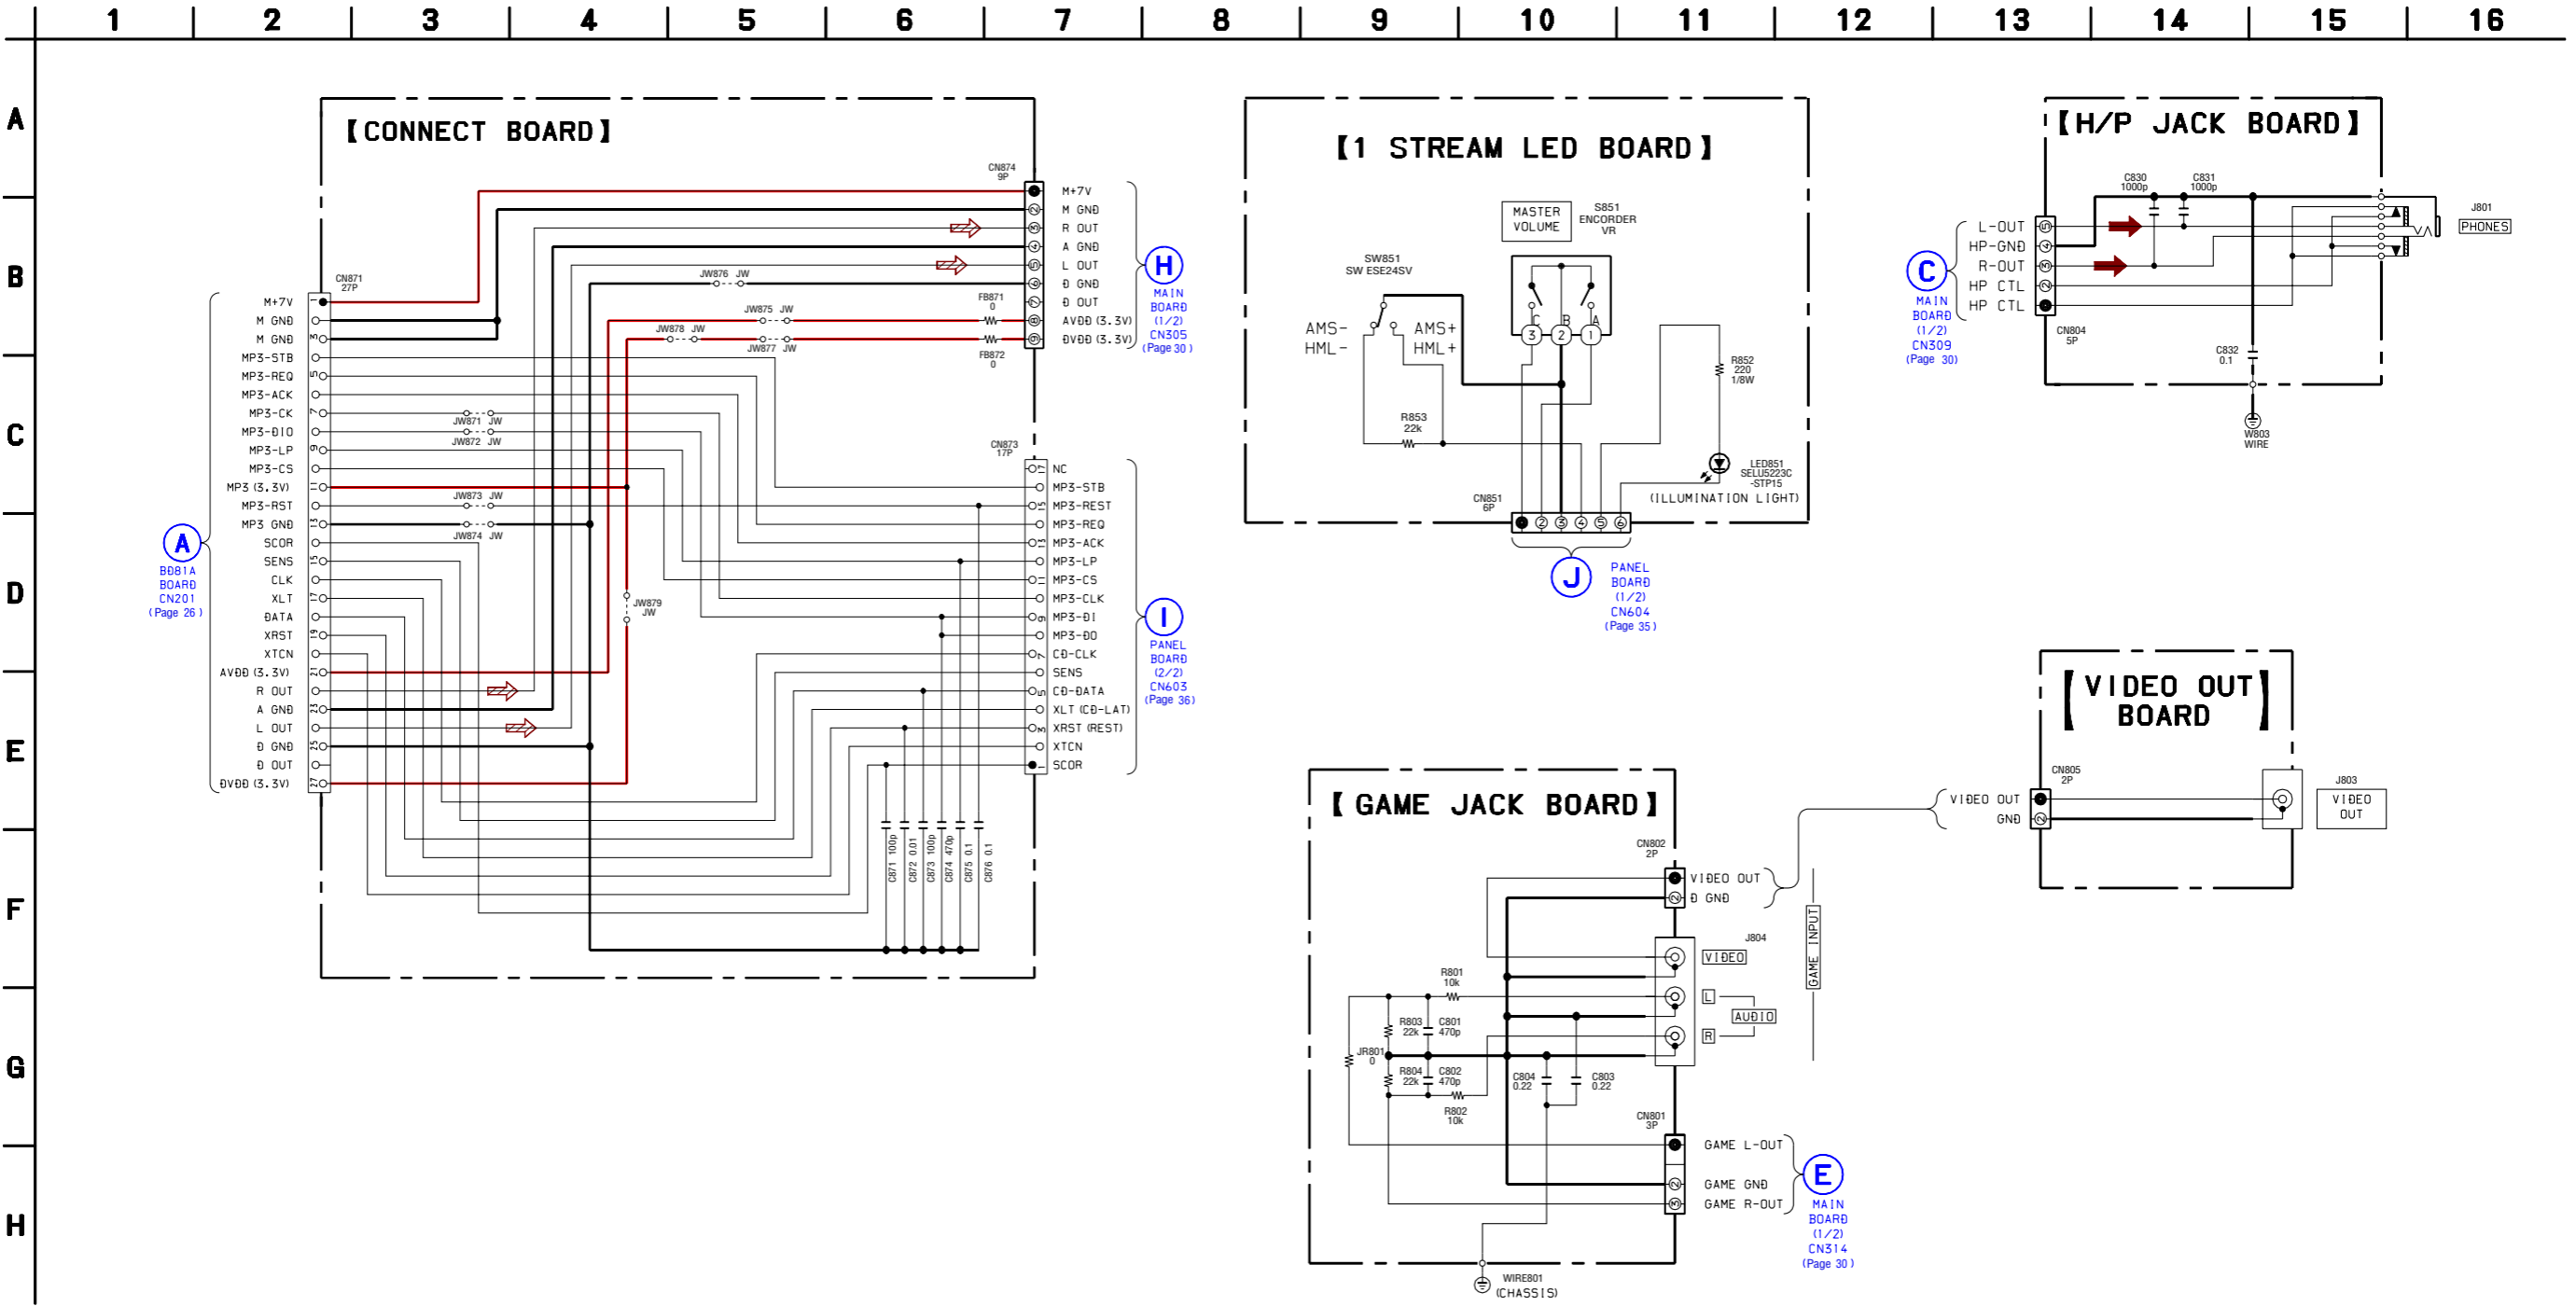

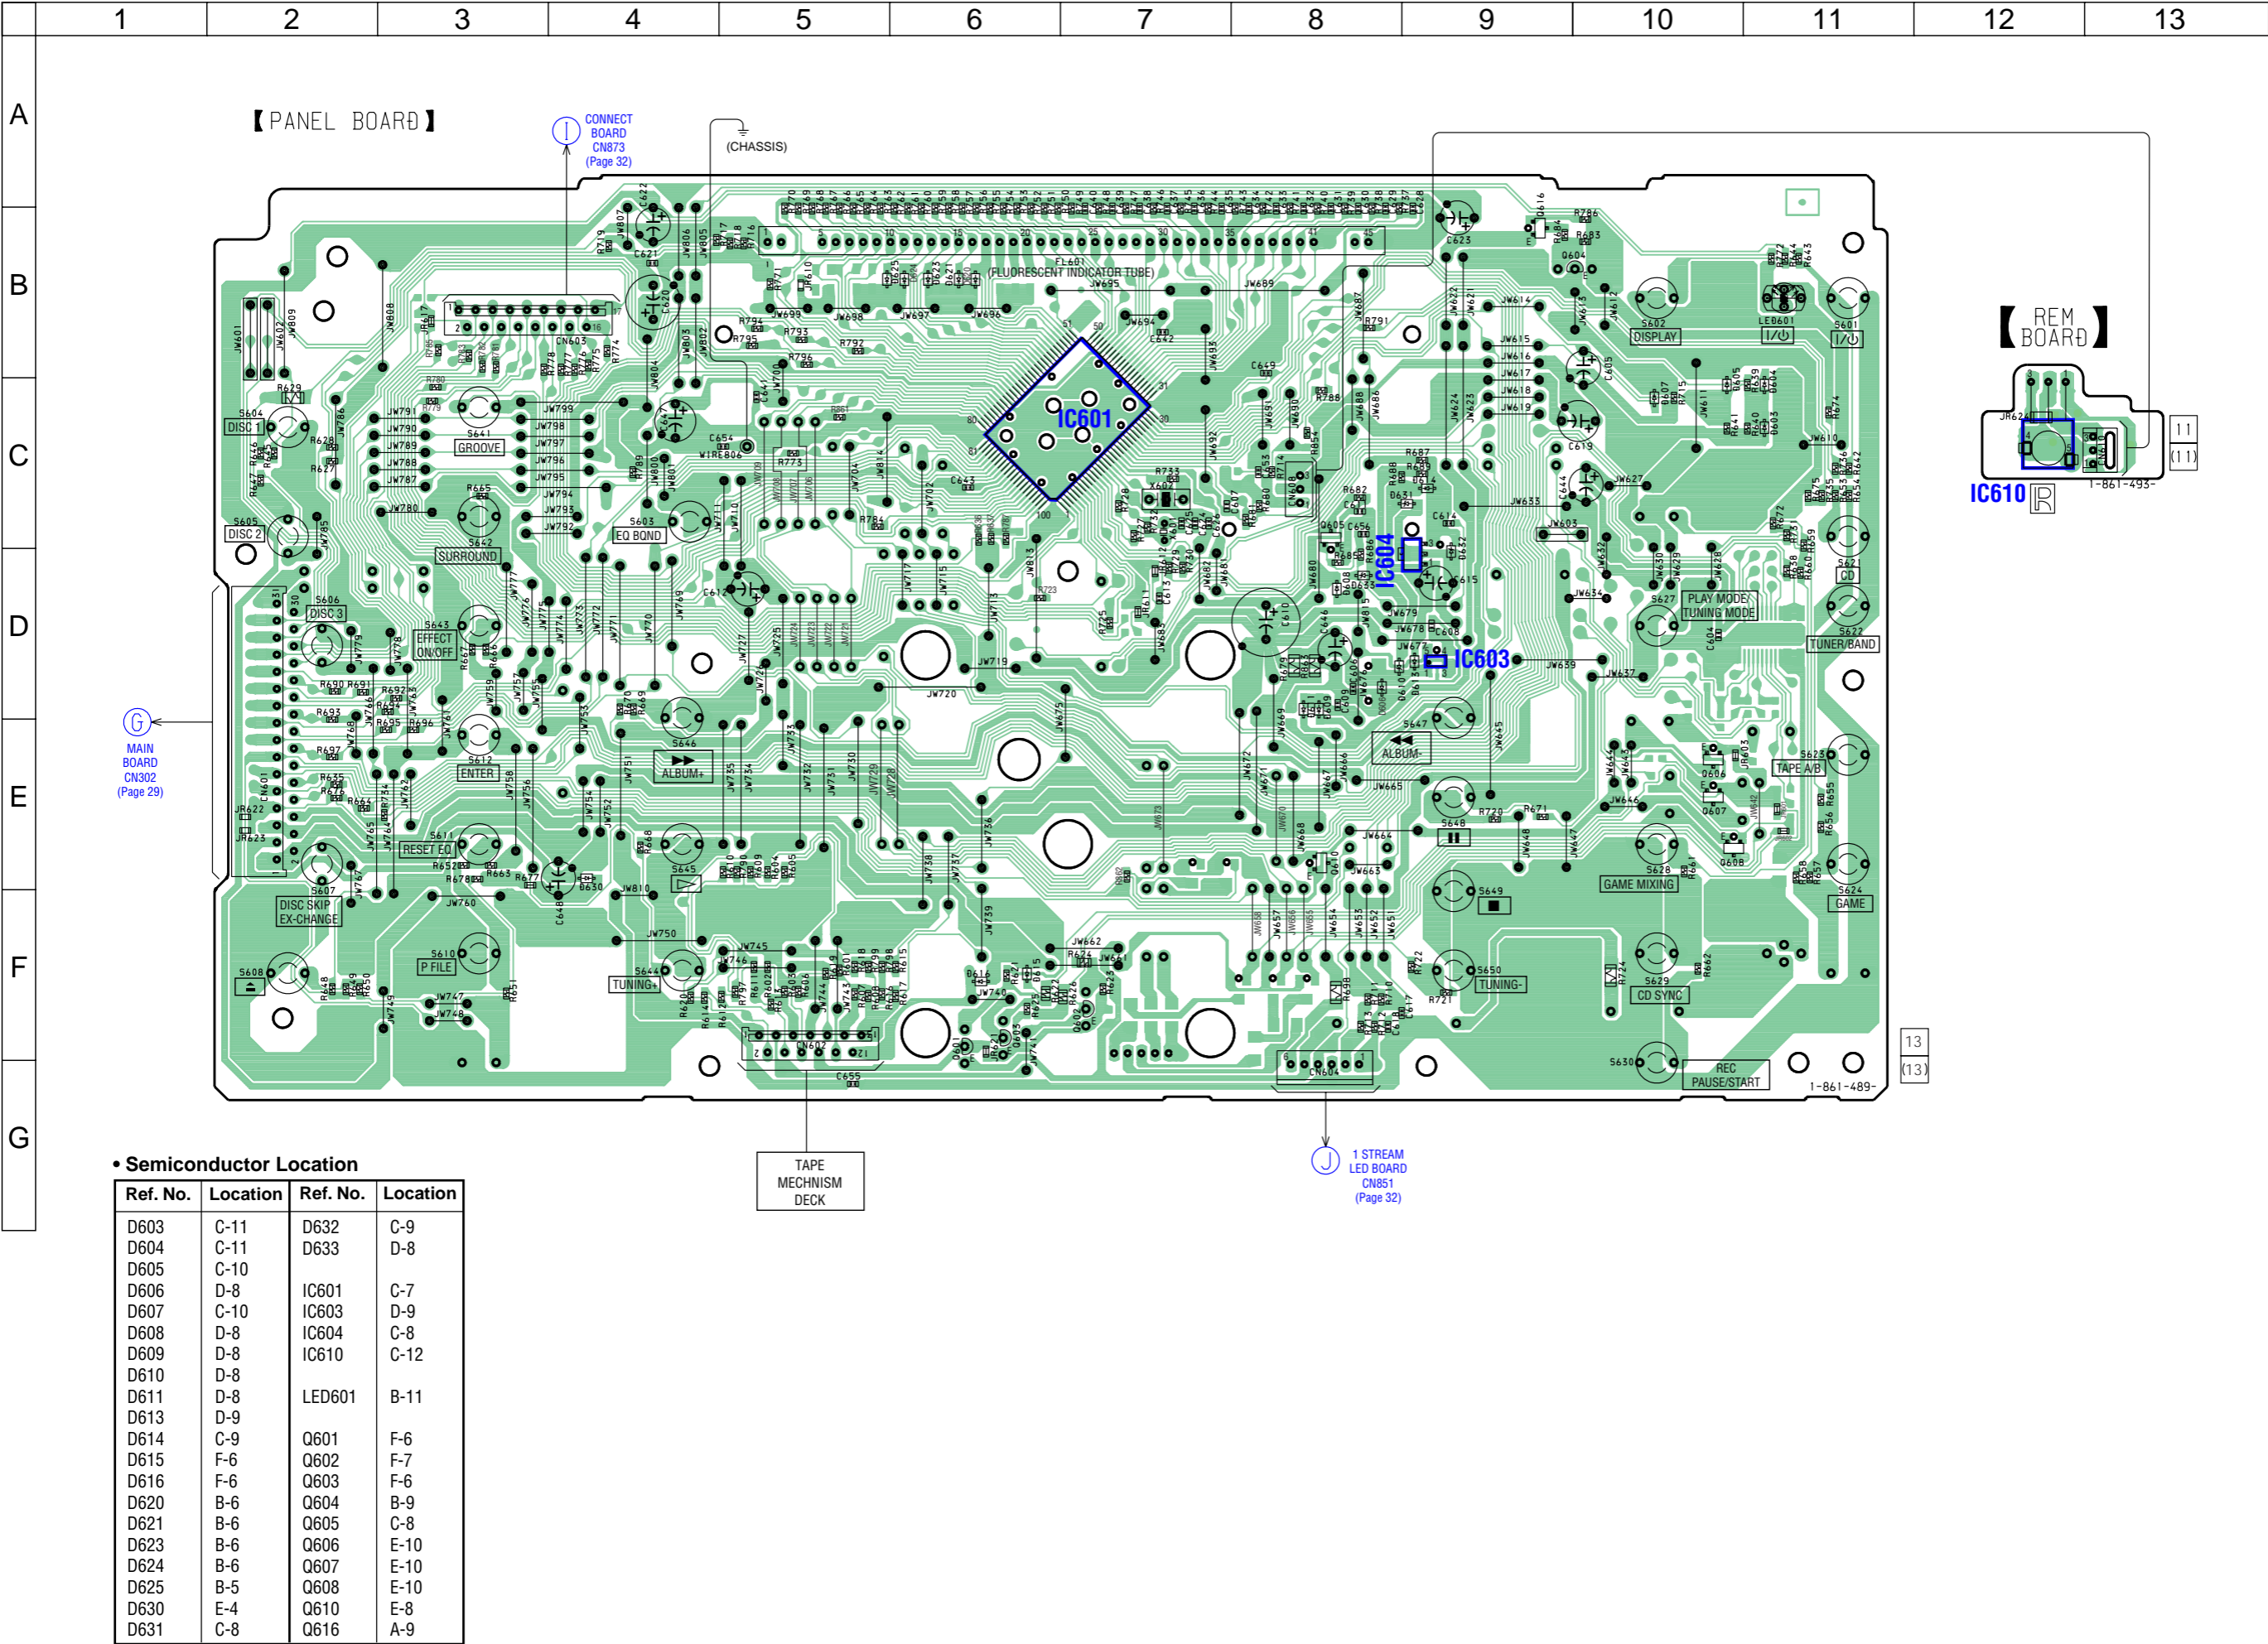


5-12. SCHEMATIC DIAGRAM – PANEL SECTION (1/2) –

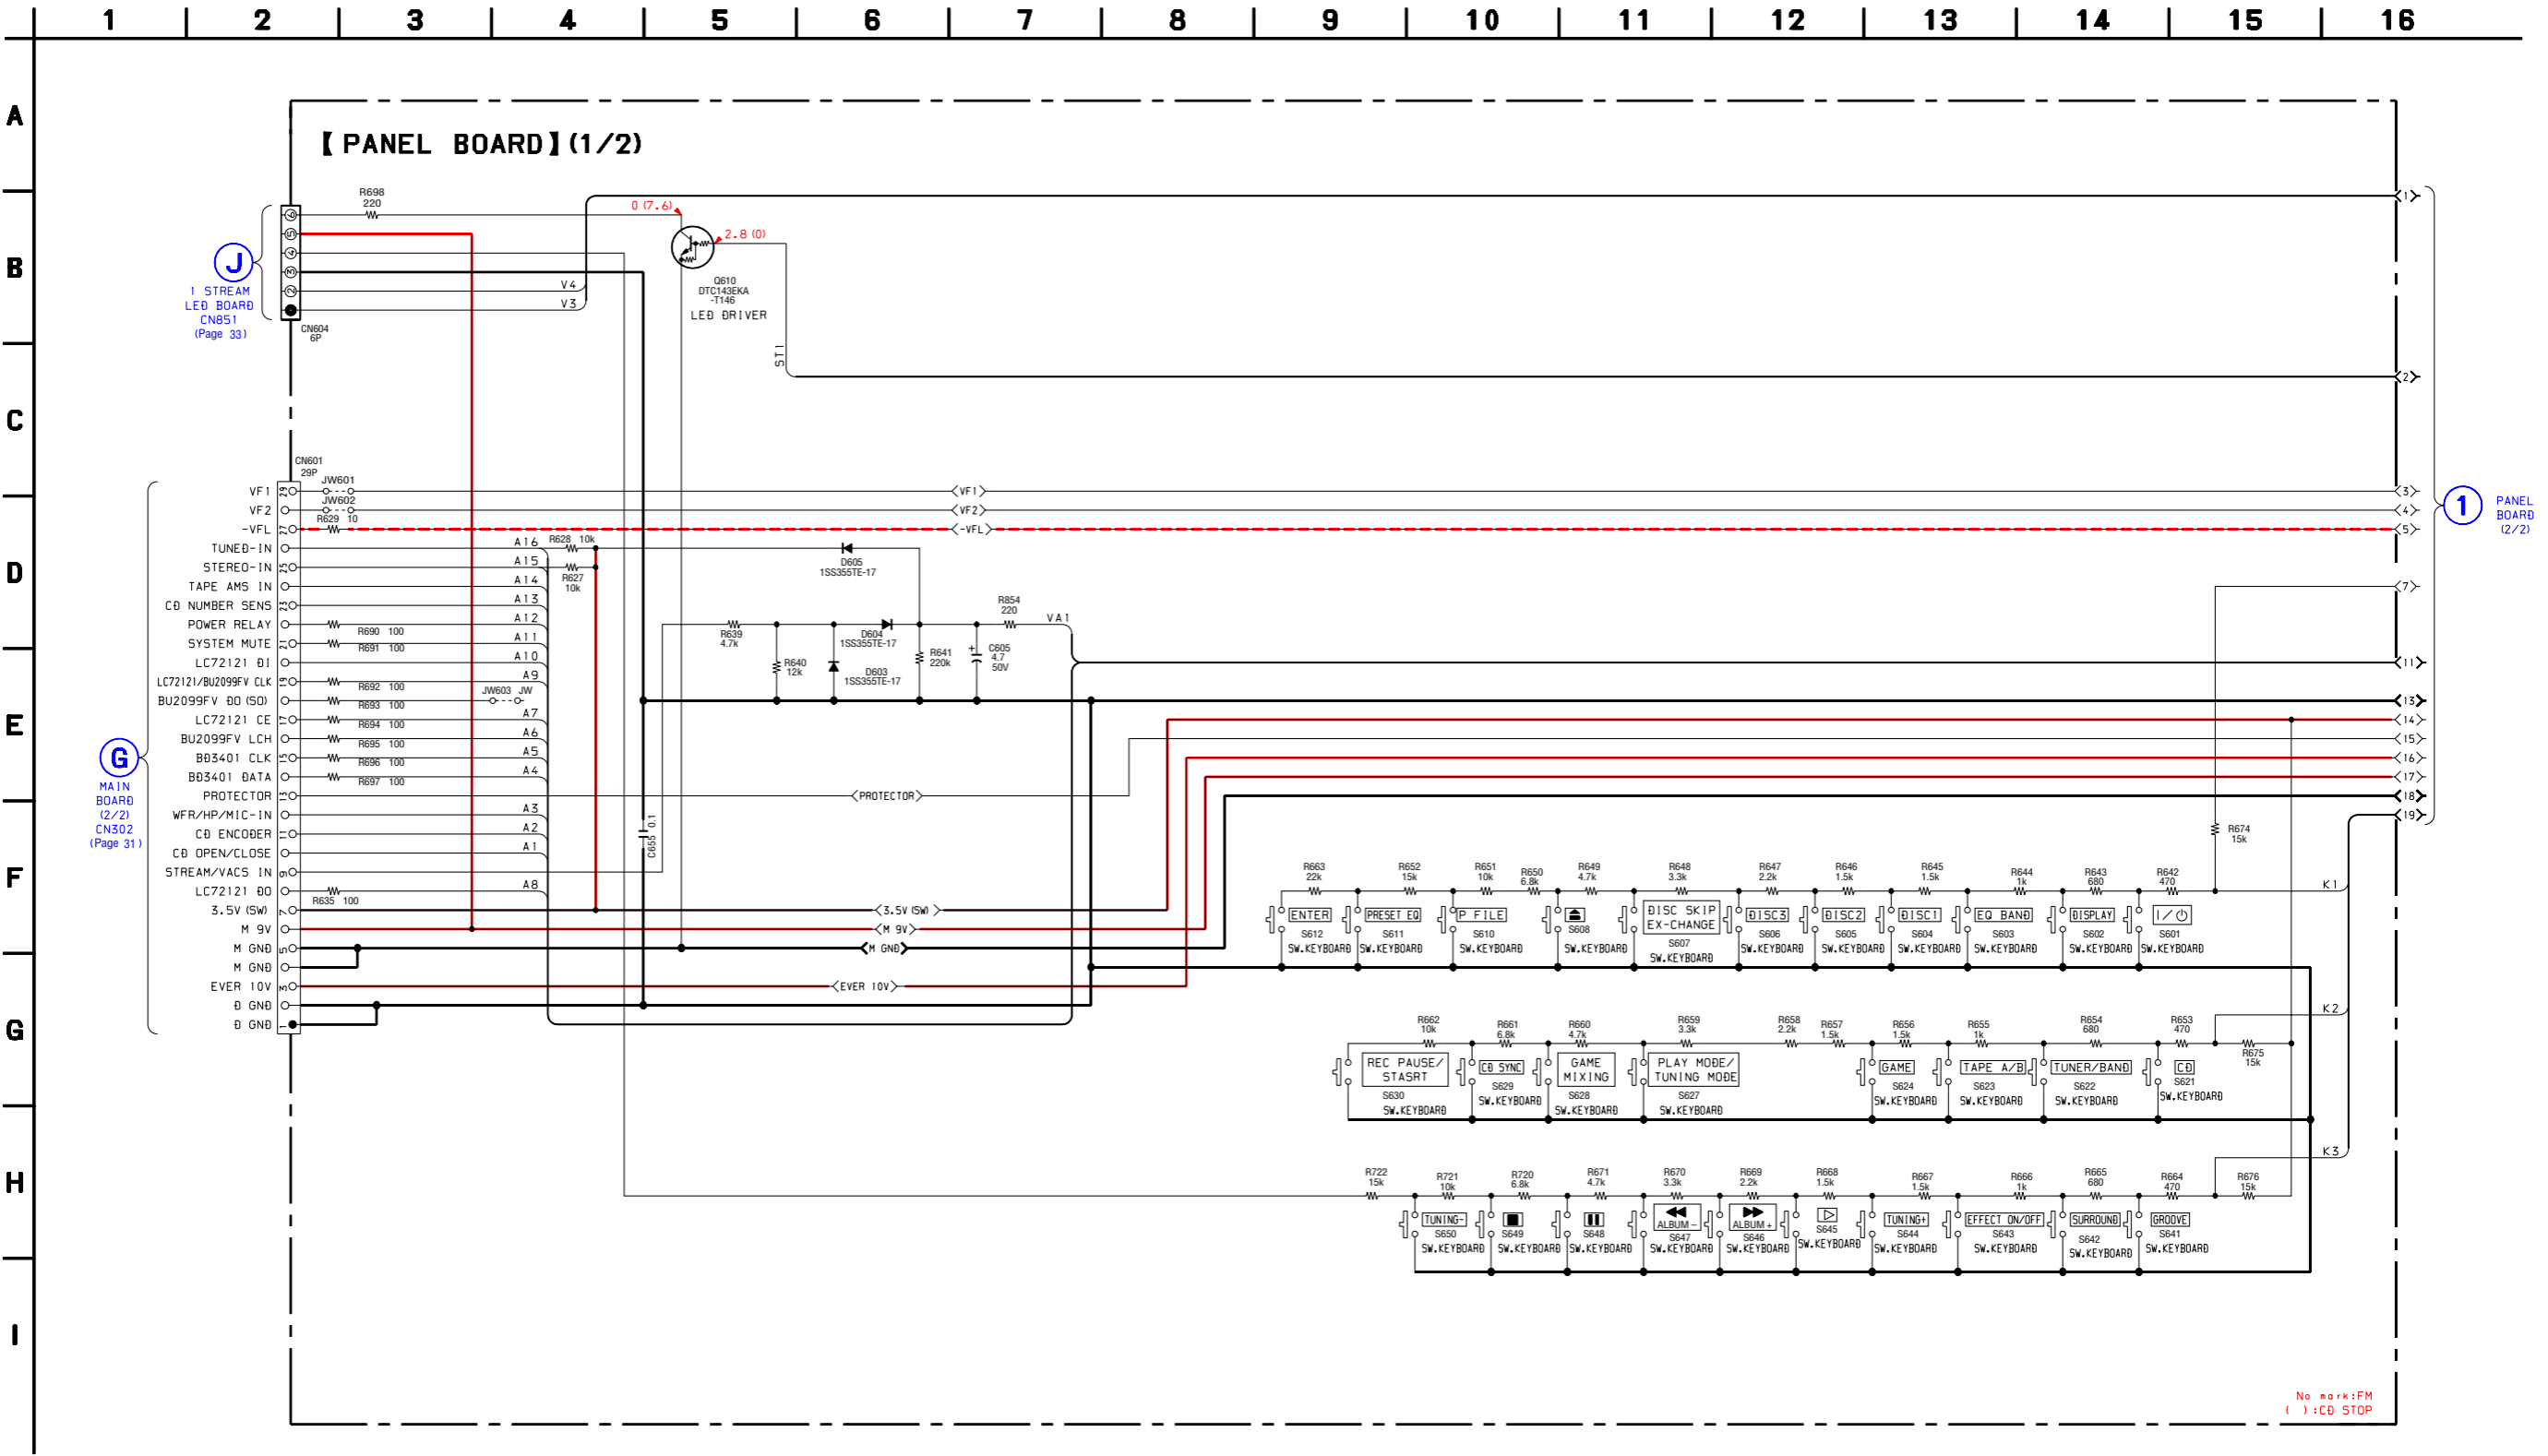

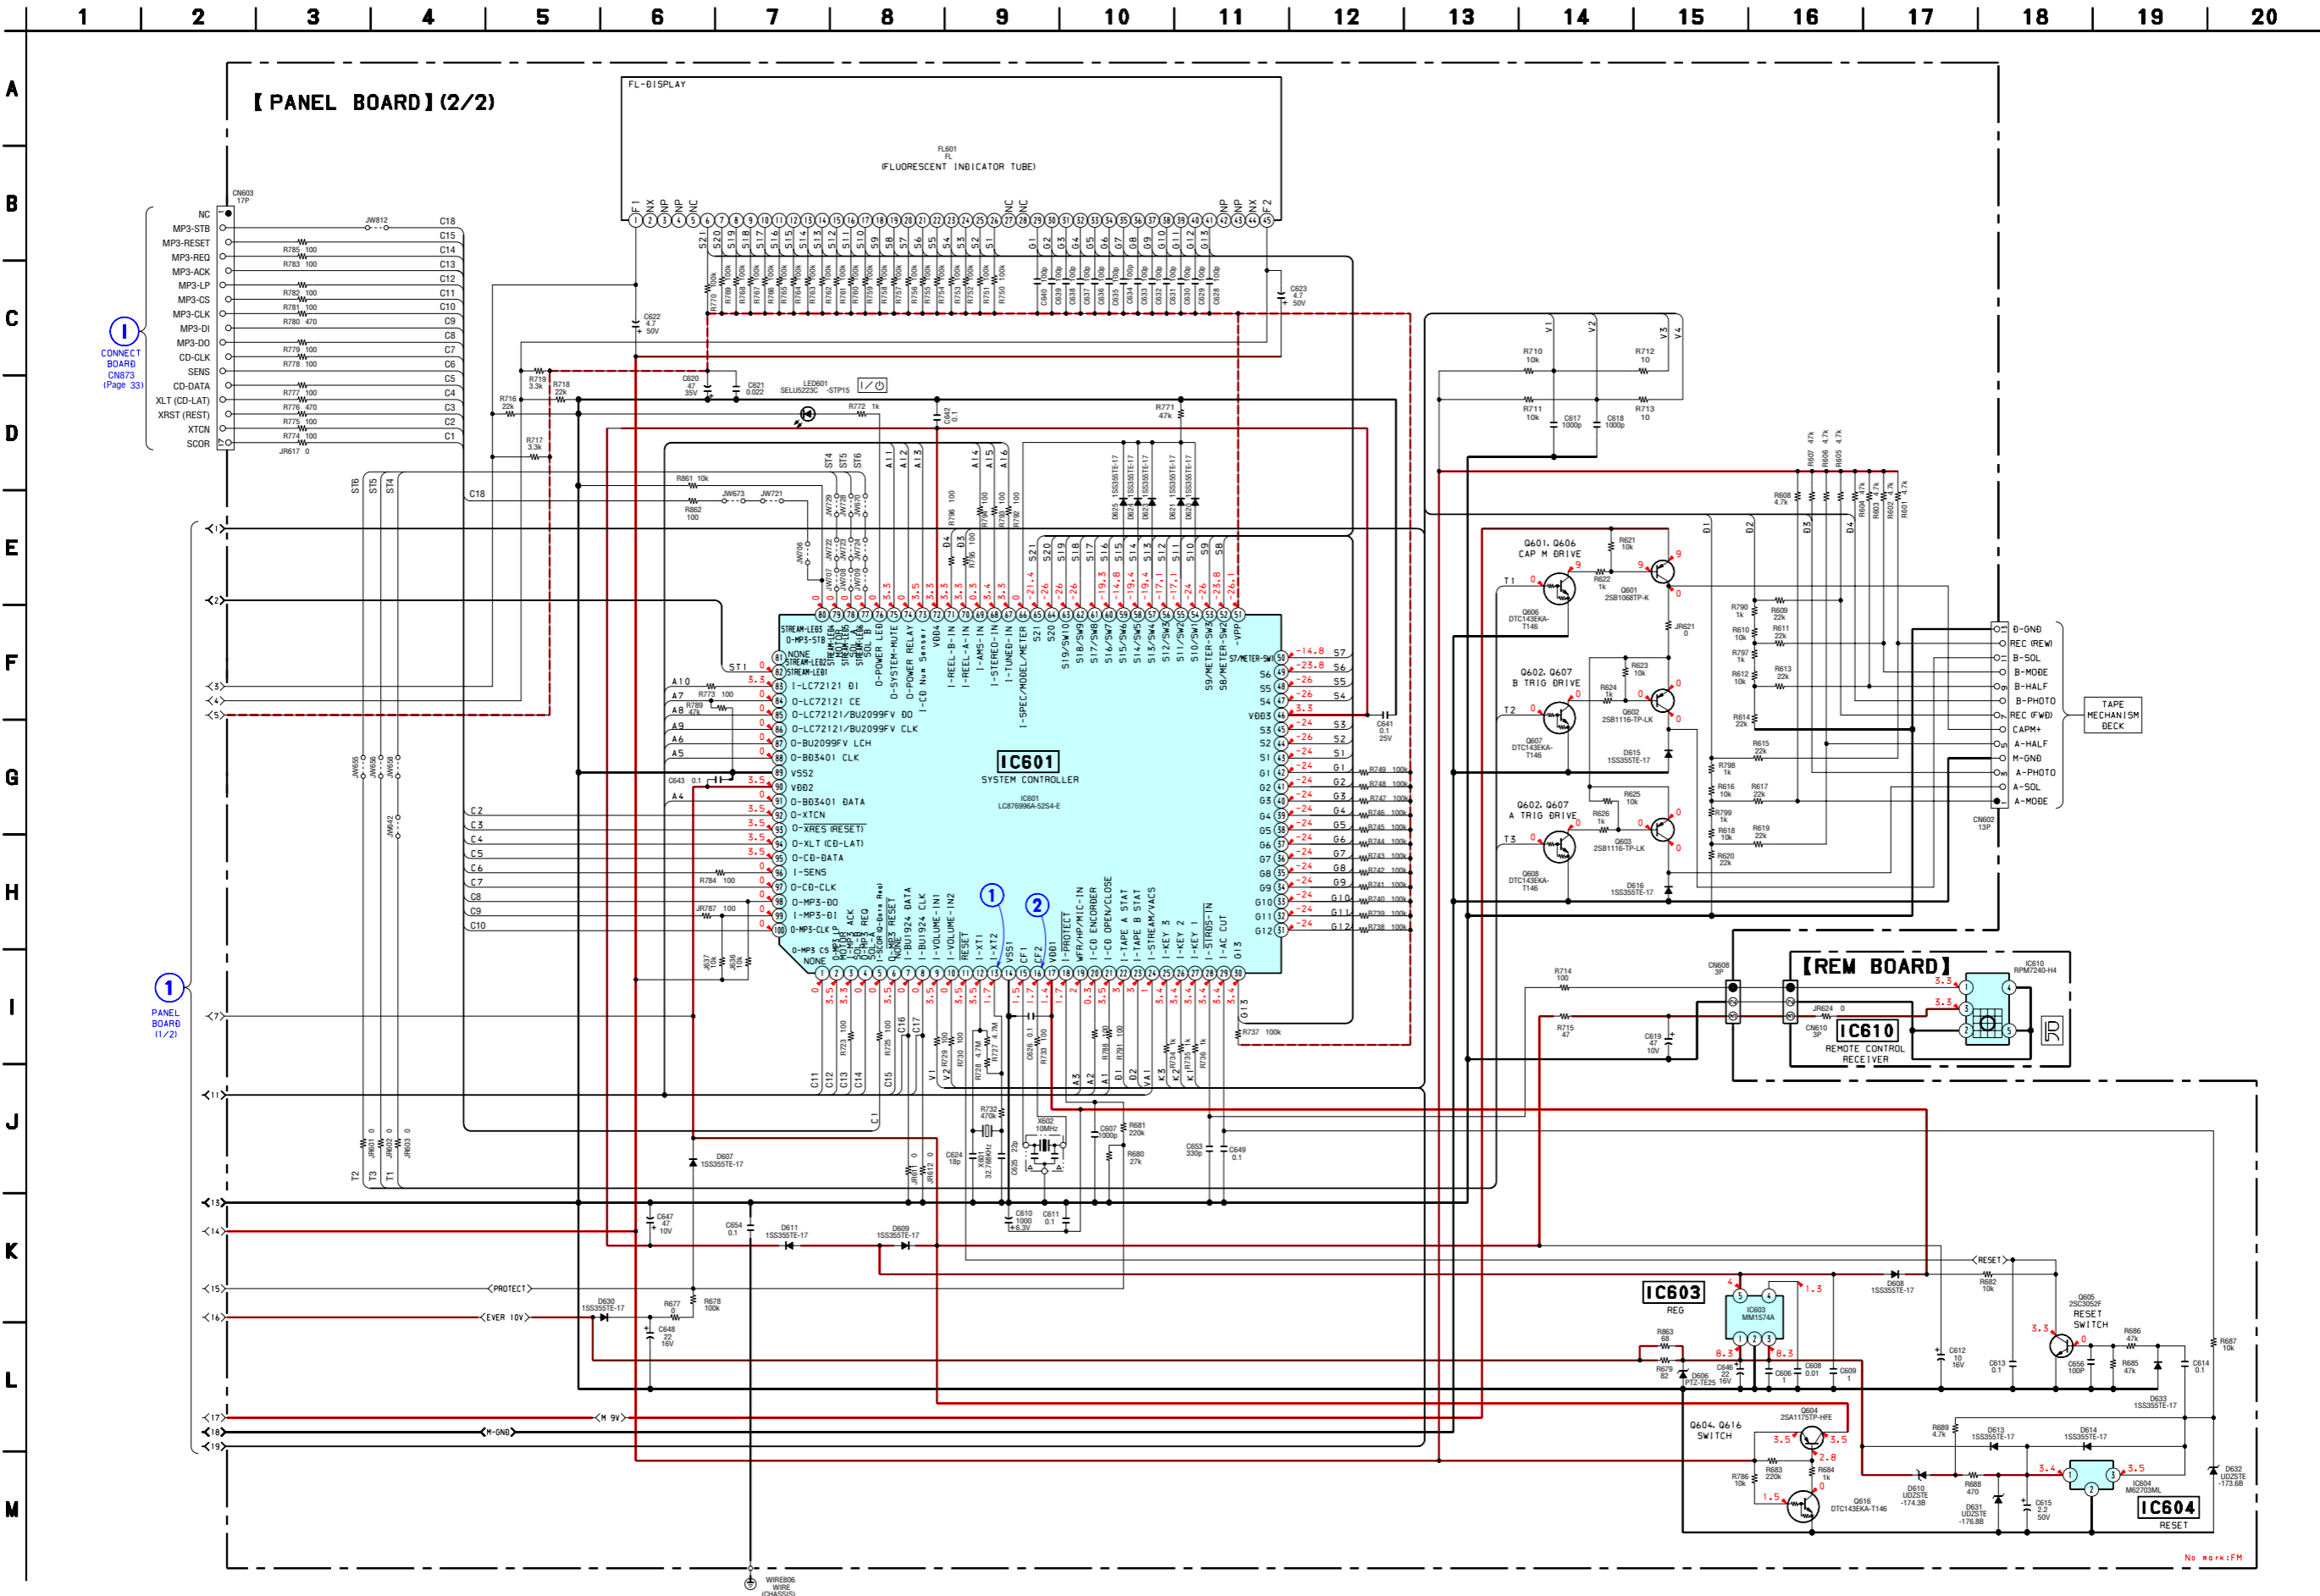


5-14. PRINTED WIRING BOARD – TRANS SECTION – • See page 21 for Circuit Boards Location. •  : Uses unleaded solder.

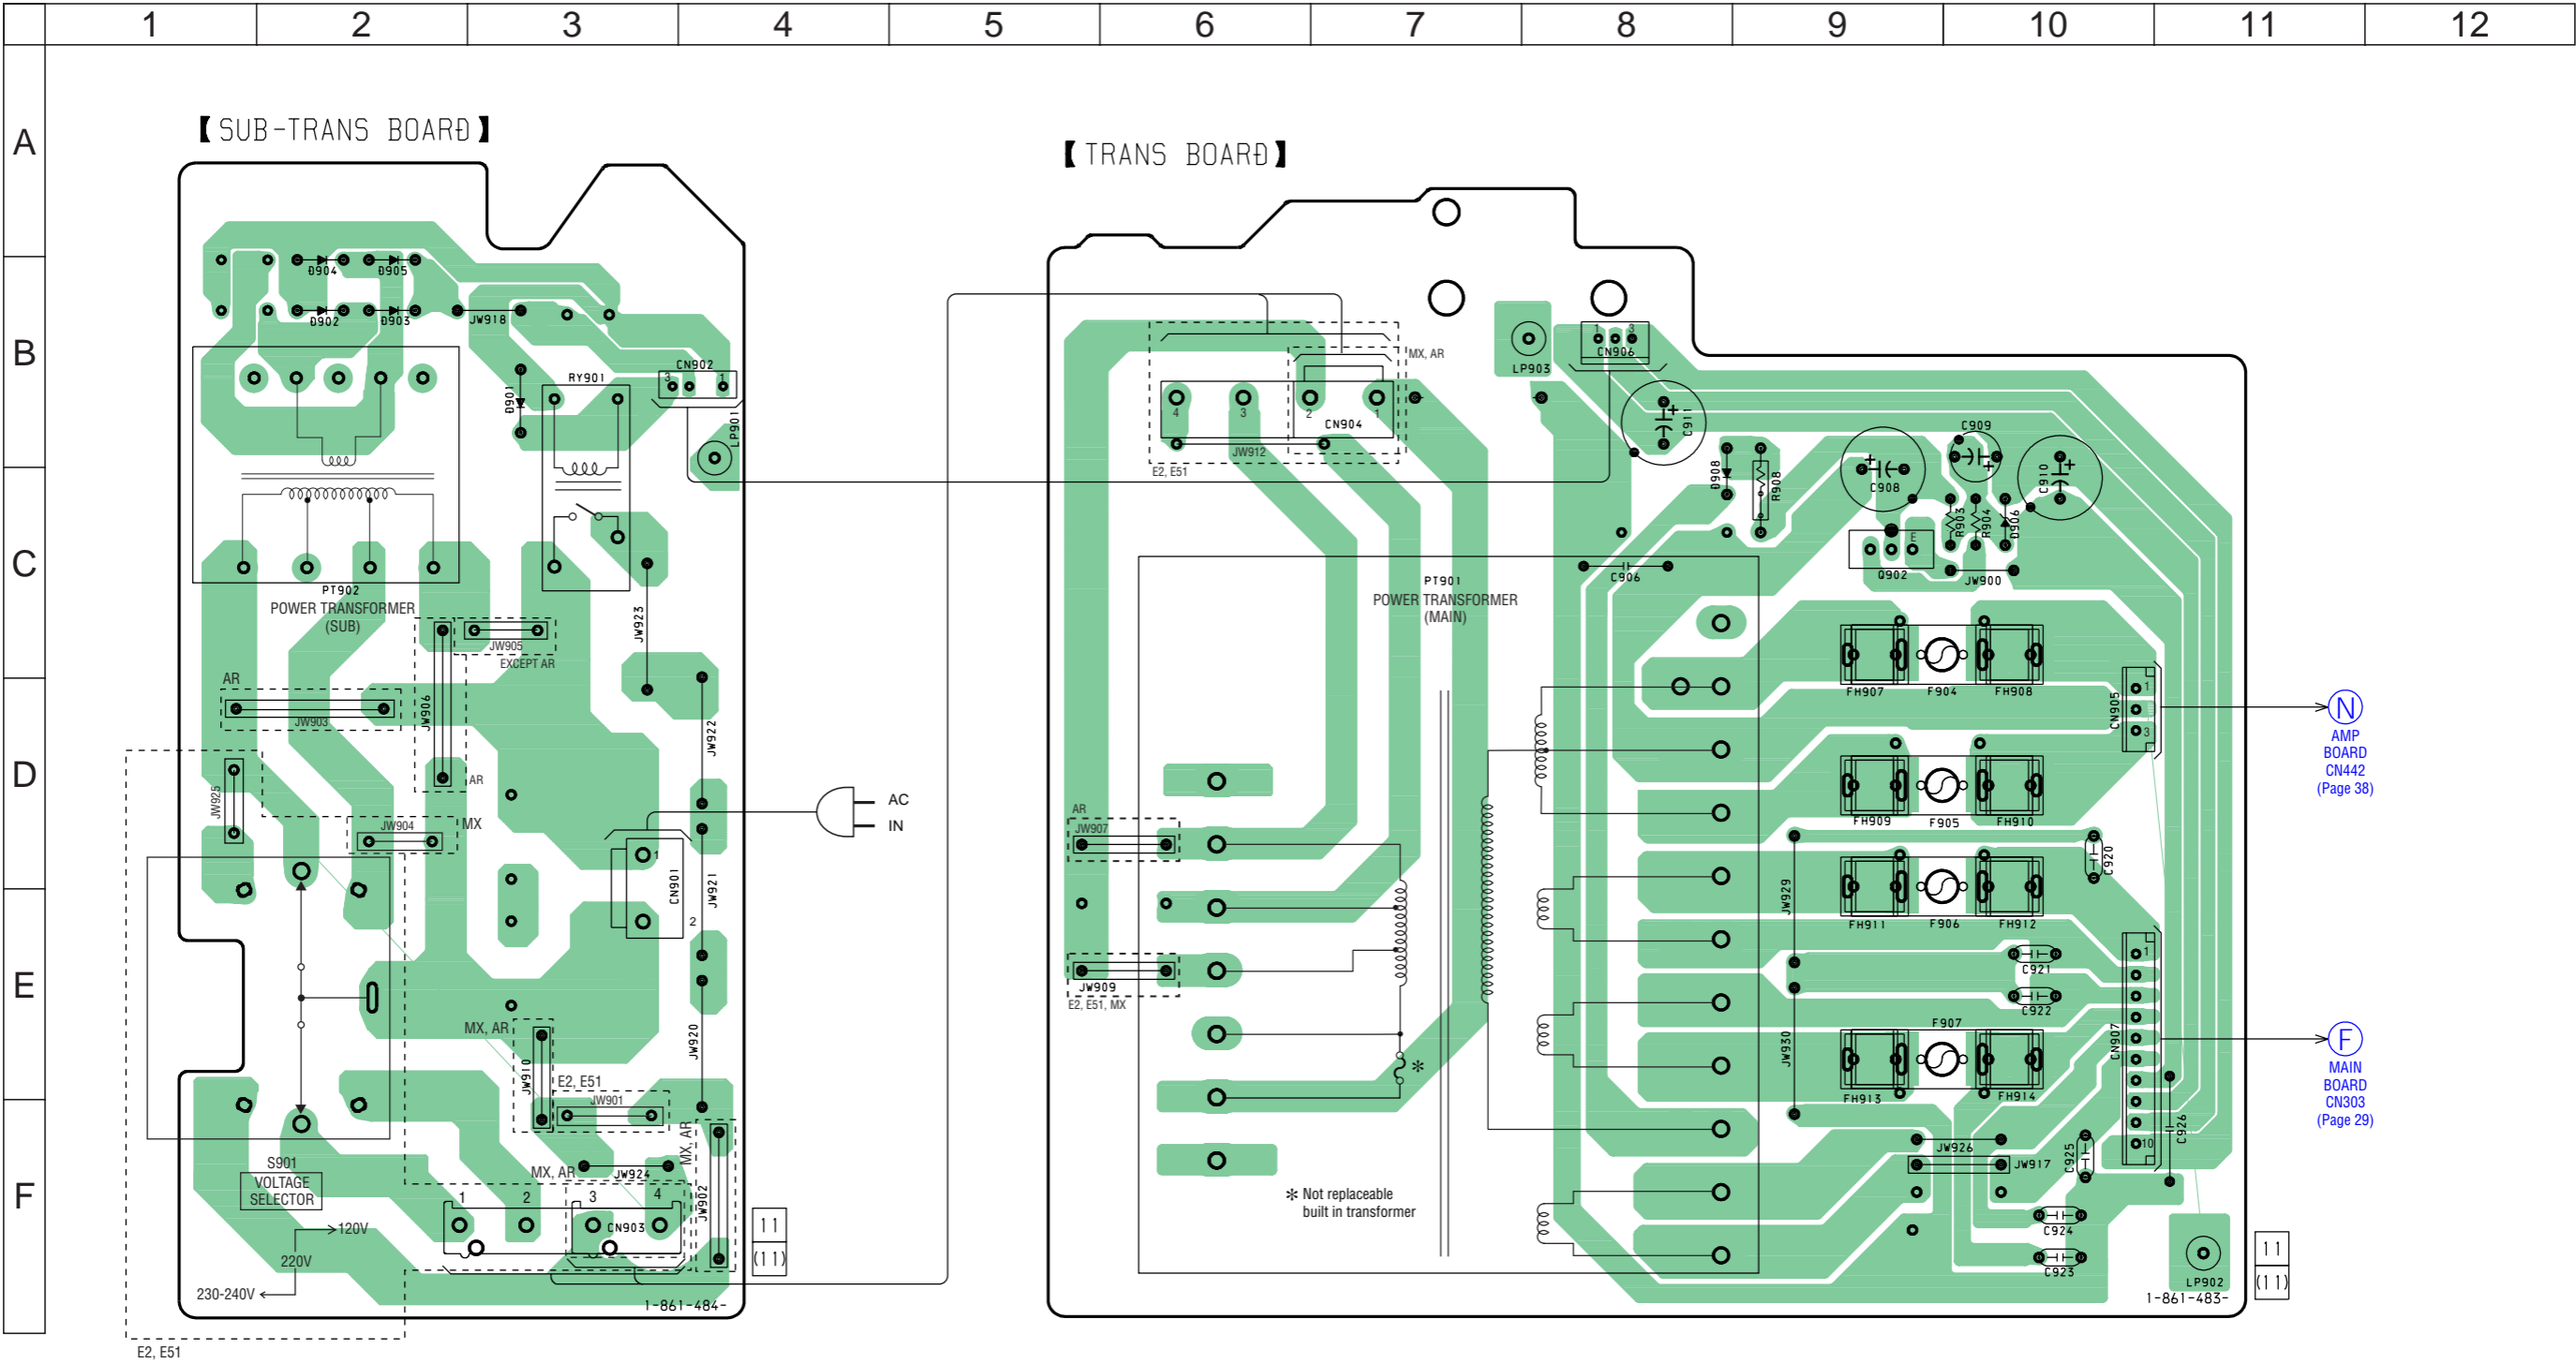




• Semiconductor Location

Ref. No.	Location
D901	B-3
D902	B-2
D903	B-2
D904	B-2
D905	B-2
D906	C-10
D908	C-8
Q902	C-9

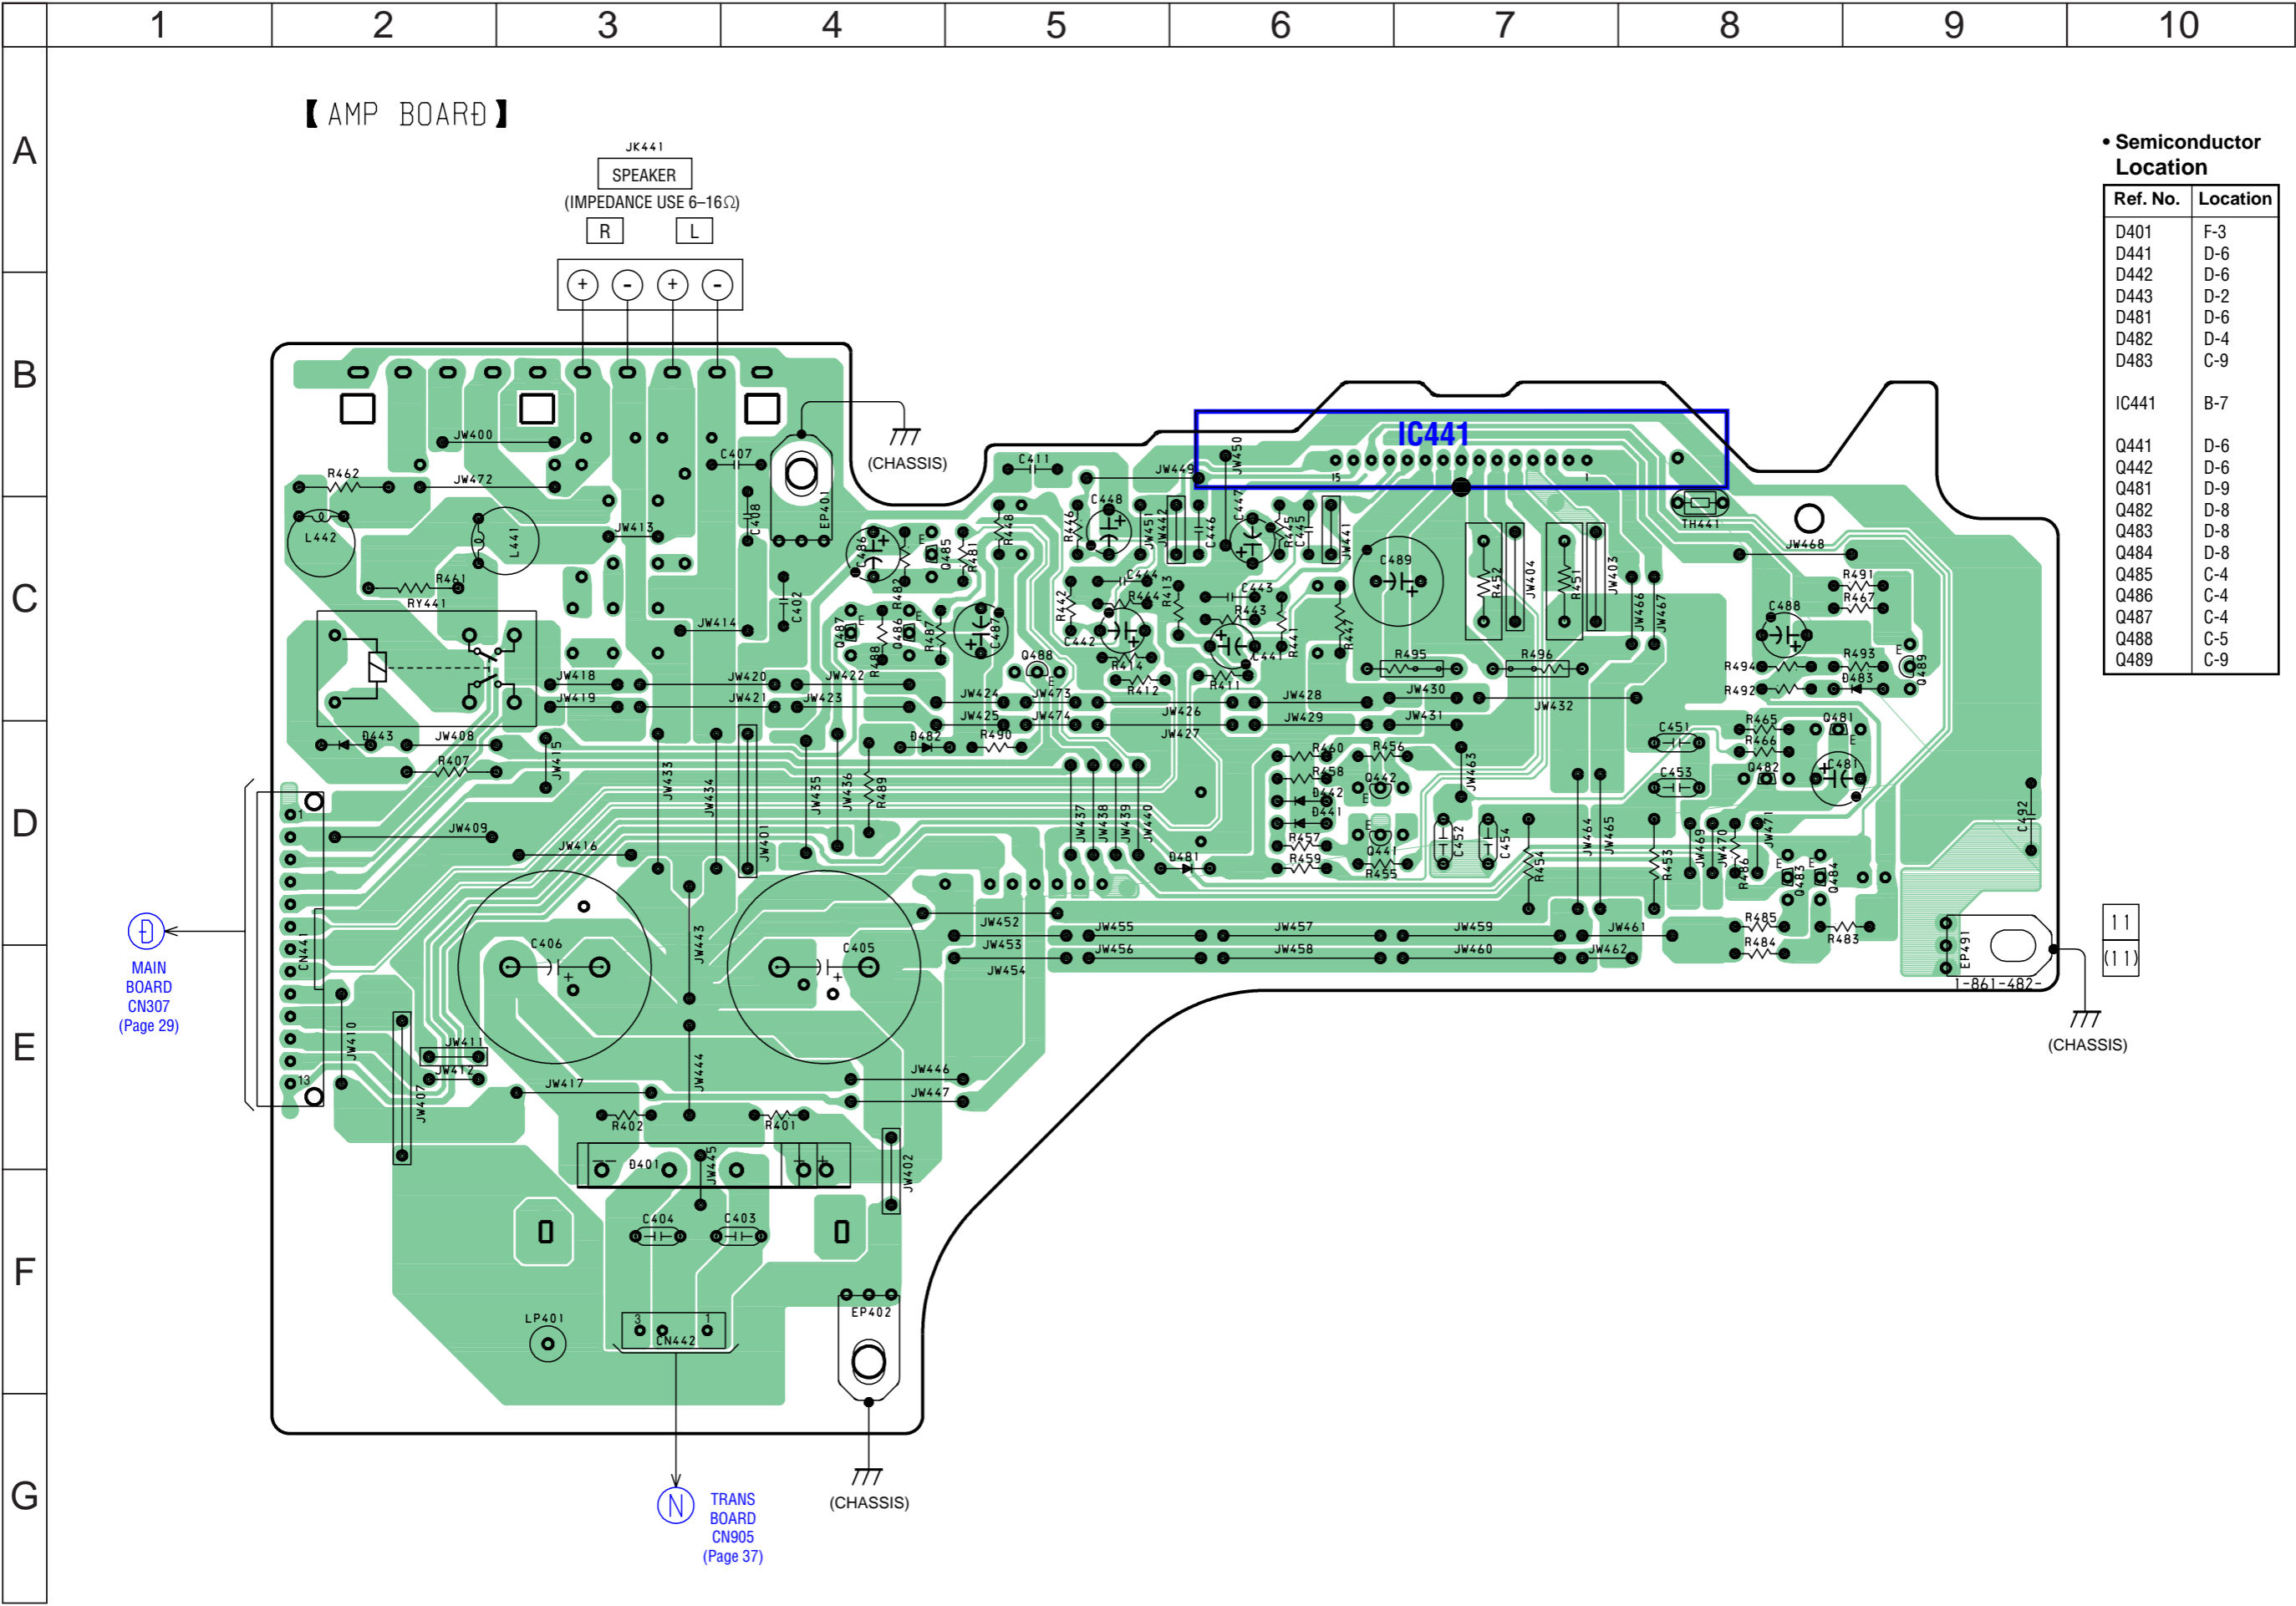





• IC BLOCK DIAGRAMS

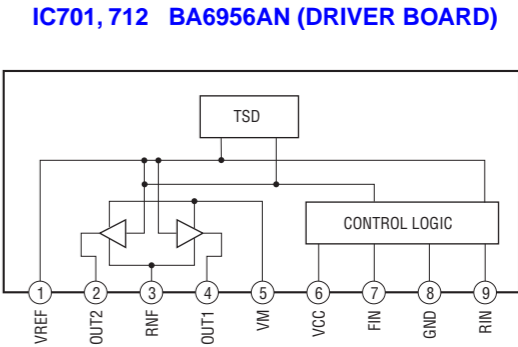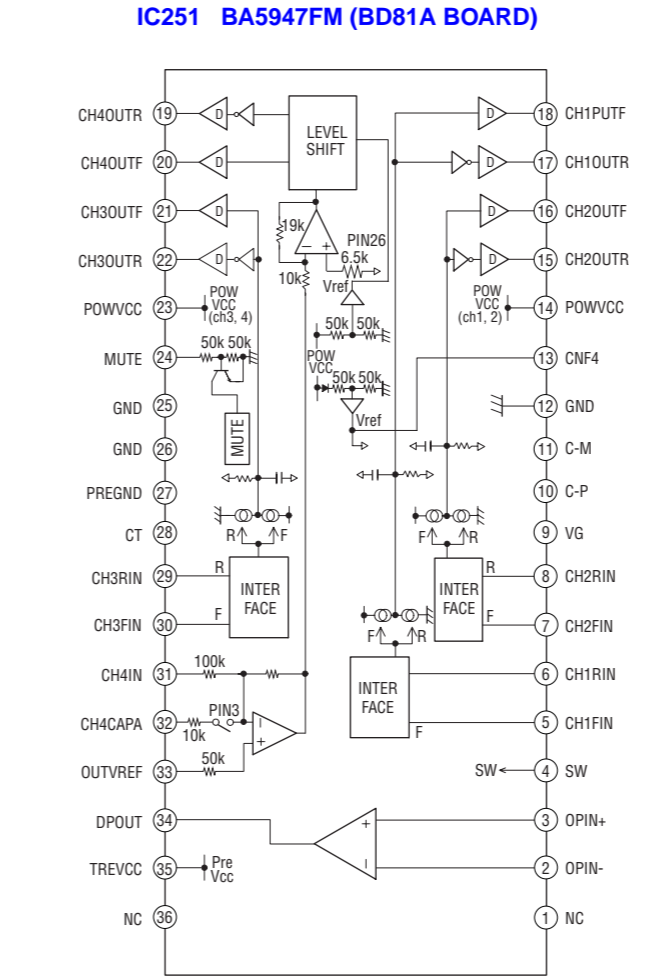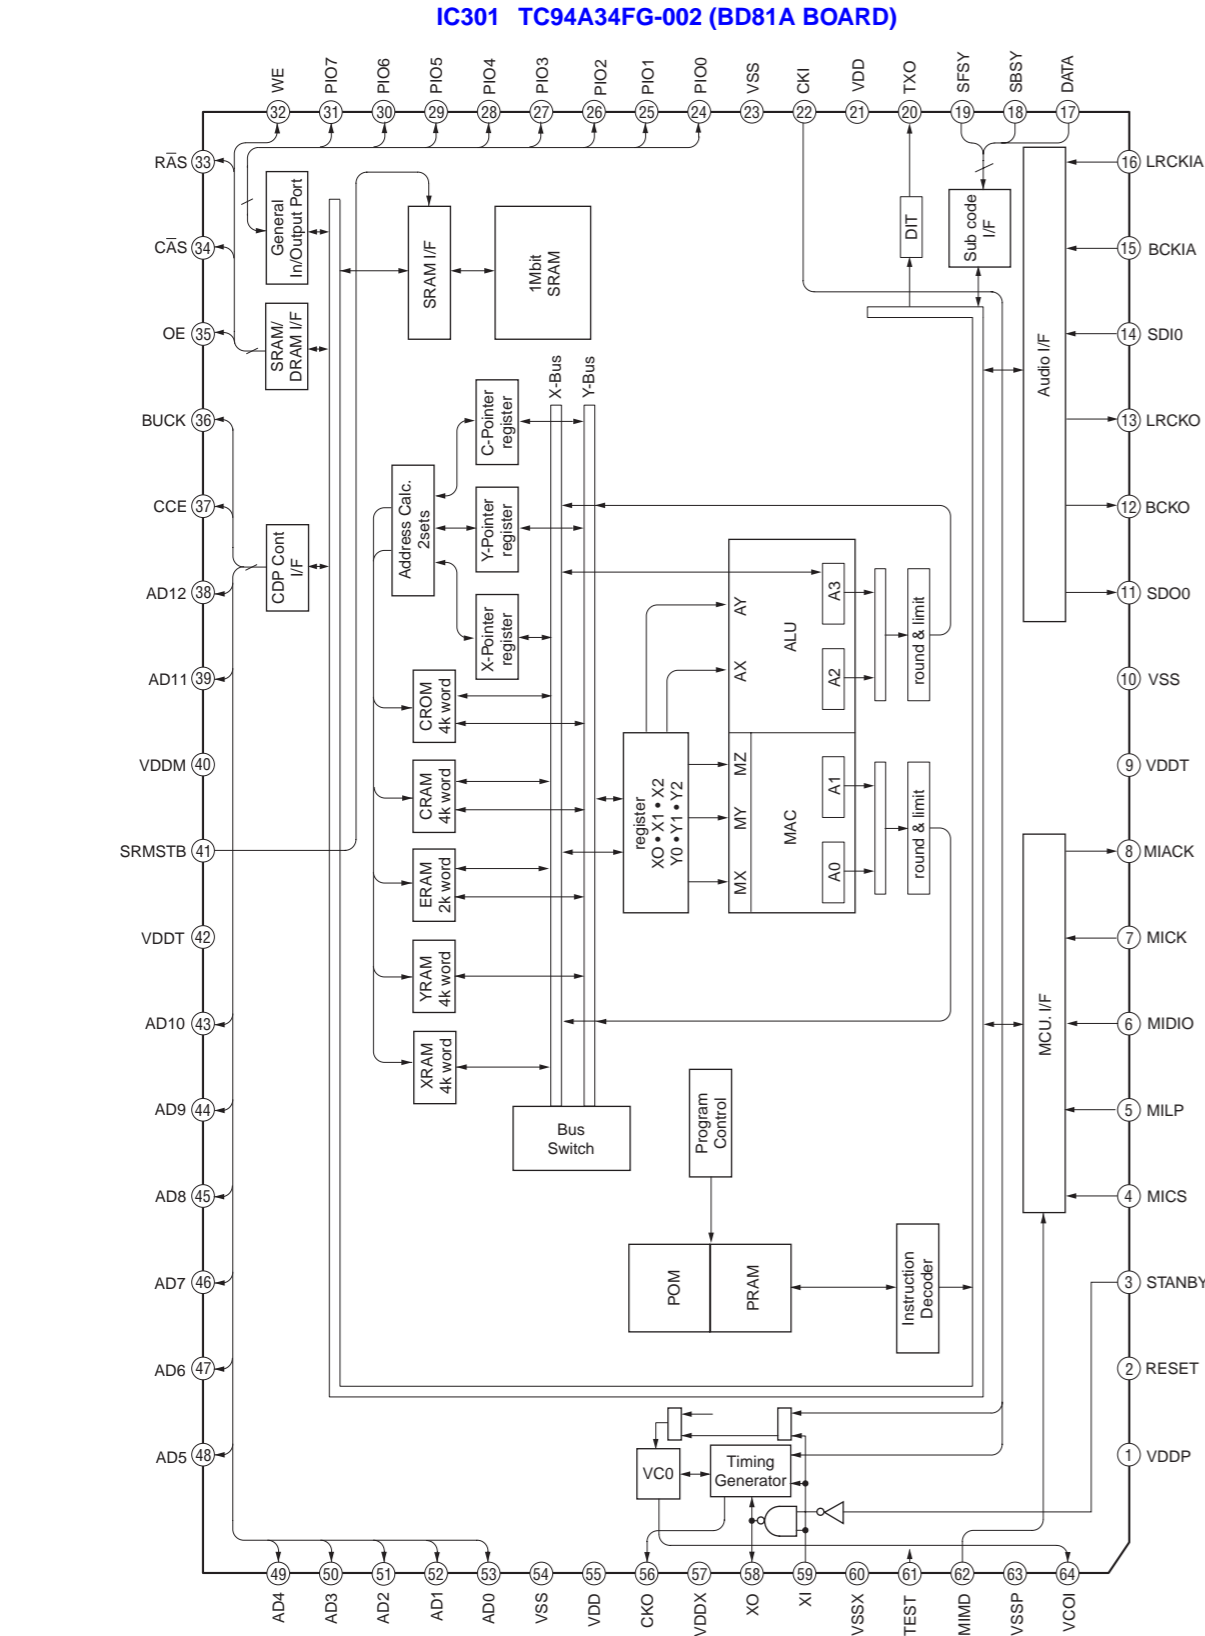


IC101 BD3401KS2 (MAIN BOARD)

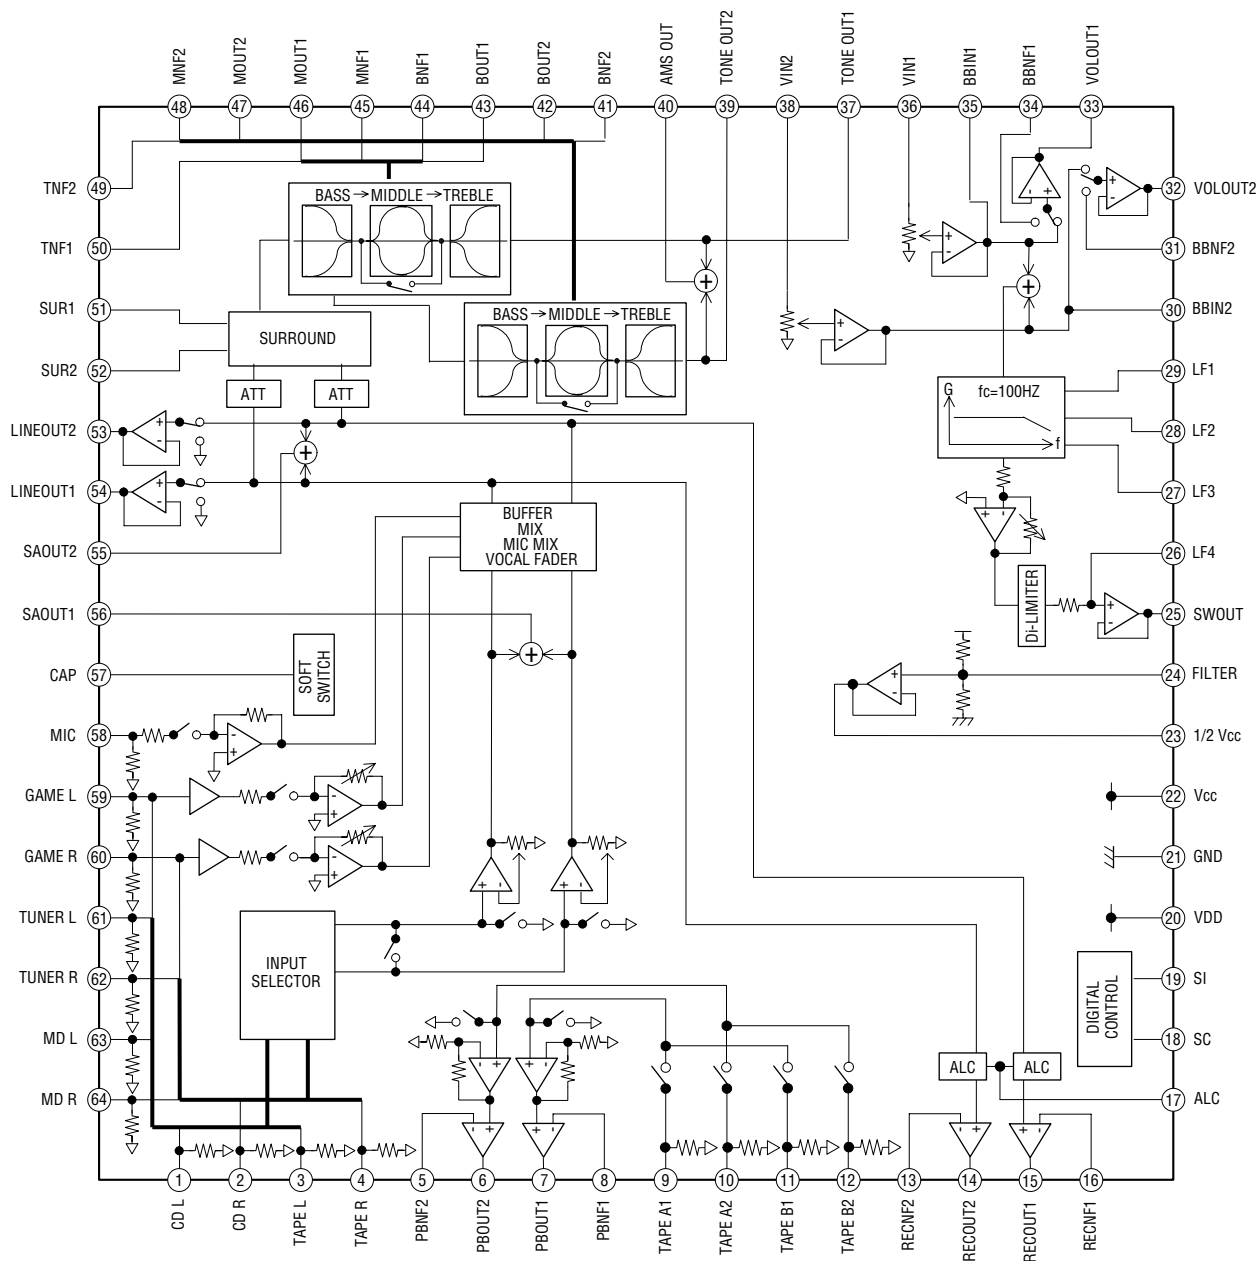

IC201 BA3126N (MAIN BOARD)

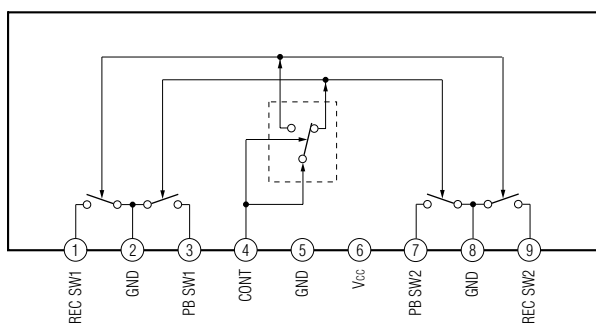

IC371 BU2099FV (MAIN BOARD)

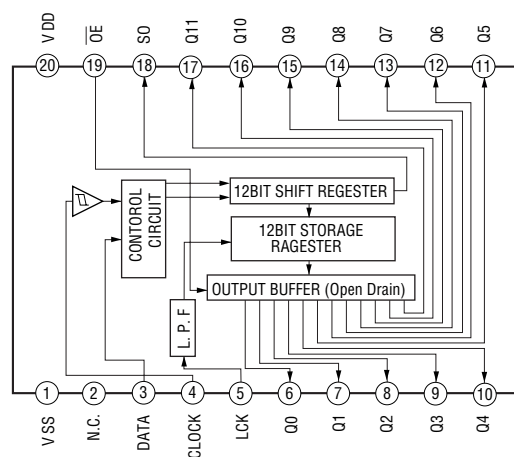

5-17. IC PIN FUNCTION DESCRIPTION

• IC101 CXD3059AR (RF AMP) (BD81A BOARD)

Pin No	Pin Name	I/O	Description
1	MIRR	I/O	Mirror signal input/output (Not used)
2	DFCT	I/O	Defect signal input/output (Not used)
3	FOK	I/O	Focus OK signal input/output (Not used)
4	VSS	—	Internal digital ground
5	LOCK	I/O	GFS is sampled at 460Hz; when GFS is high , this pin outputs a high signal If GFS is low eight consecutive
6	MDP	O	Spindle motor servo control output
7	SSTP	I	Disk innermost detection signal input
8	IOVSS1	—	I/O digital ground
9	SFDR	O	Sled drive output
10	SRDR	O	Sled drive output
11	TFDR	O	Tracking drive output
12	TRDR	O	Tracking drive output
13	FFDR	O	Focus drive output
14	FRDR	O	Focus drive output
15	IOVDD1	—	I/O digital power supply
16	AVDD0	—	Analog power supply
17	AVSS0	—	Analog ground
18	NC	—	Not used
19	E	I	E signal input
20	F	I	F signal input
21	TEI	I	Tracking error signal input to DSSP block
22	TEO	O	Tracking error signal output from RF amplifier block
23	FEI	I	Focus error signal input to DSSP block
24	FEO	O	Focus error signal output from RF amplifier block
25	VC	I/O	Center voltage output from RF amplifier block
26	A	I	A signal input
27	B	I	B signal input
28	C	I	C signal input
29	D	I	D signal input
30	NC	—	Not used
31	AVDD4	—	Analog power supply
32	RFDCO	O	RFDC signal output (Not used)
33	PDSSENS	I	Reference voltage pin for PD
34	AC_SUM	O	RFAC summing amplifier output
35	EQ_IN	I	Equalizer circuit input
36	LD	O	APC amplifier output
37	PD	I	APC amplifier input
38	NC	—	Not used
39	RFC	I	Equalizer cut-off frequency adjustment pin
40	AVSS4	—	Analog ground
41	RFACO	O	RFAC signal output
42	RFACI	I	RFAC signal input or EFM signal input
43	AVDD3	—	Analog power supply
44	BIAS	I	Asymmetry circuit constant current input
45	ASYI	I	Asymmetry comparator voltage input
46	ASYO	O	EFM full-swing output (Low = VSS, High = VDD)
47	VPCO	O	Wide-band EFM PLL charge pump output
48	VCTL	I	Wide-band EFM PLL VCO2 control voltage input
49	AVSS3	—	Analog ground

Pin No.	Pin Name	I/O	Description
50	CLTV	I	Multiplier VCO1 control voltage input
51	FILO	O	Master PLL (slave = digital PLL) filter output
52	FILI	I	Master PLL filter input
53	PCO	O	Master PLL charge pump output
54	AVDD5	—	Analog power supply
55	DDVROUT	O	DC/DC converter output
56	DDVRSEN	I	DC/DC converter output voltage monitor pin
57	AVSS5	—	Analog ground
58	DDCR	I	DC/DC converter reset pin
59	NC	—	Not used
60	BCKI	I	D/A interface bit clock input
61	PCMDI	I	D/A interface serial data input (2's COMP, MSB first)
62	LRCKI	I	D/A interface LR clock input
63	LRCK	O	D/A interface LR clock output $f = F_s$
64	VSS	—	Internal digital ground
65	PCMD	O	D/A interface serial data output (2's COMP, MSB first)
66	BCK	O	D/A interface bit clock output
67	VDD	—	Internal digital power supply
68	EMPH	O	High when the playback disc has emphasis, low it has not
69	EMPHI	I	High when de-emphasis is ON, low when input OFF
70	IOVDD2	—	I/O digital power supply
71	DOUT	O	Digital Out output
72	TEST	I	Test pin Normally ground
73	TES1	I	Test pin Normally ground
74	IOVss2	—	I/O digital ground
75	NC	—	Not used
76	XVSS	—	Master clock ground
77	XTAO	O	Crystal oscillation circuit output
78	XTAI	I	Crystal oscillation circuit input
79	XVDD	—	Master clock power supply
80	AVDD1	—	Analog power supply
81	AOUT1	O	Lch analog output
82	VREFL	O	Lch reference voltage
83	AVSS1	—	Analog ground
84	AVSS2	—	Analog ground
85	VREFR	O	Rch reference voltage
86	AOUT2	O	Rch analog output
87	AVDD2	—	Analog power supply
88	NC	—	Not used
89	IOVDD0	—	I/O digital power supply
90	RMUT	O	Rch "0" detection flag (Not used)
91	LMUT	O	Lch "0" detection flag (Not used)
92	NC	—	Not used
93	XTSL	I	Crystal selection input (Not used)
94	IOVSS0	—	I/O digital ground
95	XTACN	I	Oscillation circuit control Self-oscillation when high, oscillation stop when low
96	SQSO	O	Subcode Q 80-bit and PCM peak and level data output CD TEXT data output
97	SQCK	I	SQSO readout clock input

Pin No.	Pin Name	I/O	Description
98	SBSO	O	Subcode P to W serial output
99	EXCK	I	SBSO readout clock input
100	XRST	I	System reset Reset when low
101	SYSM	I	Mute input Muted when high
102	D ATA	I	Serial data input from CPU
103	VSS	—	Internal digital ground
104	XLAT	I	Latch input from CPU The serial data is latched at the falling edge
105	CLOCK	I	Serial data transfer clock input from CPU
106	VDD	—	Internal digital power supply
107	SENS	O	SENS output to CPU
108	SCLK	I	SENS serial data readout clock input
109	ATSK	I/O	Anti-shock input/output
110	WFCK	O	WFCK output (Not used)
111	XUGF	O	XUGF output (Not used)
112	XPCK	O	XPCK output (Not used)
113	GFS	O	GFS output (Not used)
114	C2PO	O	C2PO output (Not used)
115	SCOR	O	High output when the subcode sync, S0 or S1, is detected
116	VDD	—	Internal digital power supply
117	C4M	O	4 2336MHz output (Not used)
118	WDCK	O	Word clock output $f = 2Fs$ (Not used)
119	COUT	I/O	Track number count signal input/output (Not used)
120	NC	—	Not used

• IC601 LC876996A-52S4-E (SYSTEM CONTROLLER) (PANEL BOARD)

Pin No	Pin Name	I/O	Description
1	O-MP3 CS	O	CS output to CD Digital Processor(Not used)
2	O-MP3 LP MOTER	O	Motor signal output
3	I-MP3 ACK SOL-B	I	Motor signal input
4	O-MP3 REQ SOL-A	O	Motor signal output
5	I-SCOR	I	CD Scor input
6	O-MP3 RESET	O	RESET output to CD Digital Processor
7	I-BU1924 DATA	I	Data input(Not used)
8	I-BU1924 CLK	I	Clock input(Not used)
9	I-VOLUME-IN1	I	Volume signal input from the encoder
10	I-VOLUME-IN2	I	Volume signal input from the encoder
11	RESET	I	Reset input
12	I-XT1	I	Connection for input a crystal resonator
13	I-XT2	O	Connection for input a crystal resonator
14	VSS1	—	Ground
15	CF1	I	Connection for input a ceramic resonator
16	CF2	O	Connection for input a ceramic resonator
17	VDD1	—	Power supply
18	I-PROTECT	I	Power amplifier circuit protection signal input
19	WFR/HP/MIC-IN	I	SubWoofor or Headphone detection signal input
20	I-CD ENCODER	I	Signal input from the CD encoder
21	I-CD OPEN/CLOSE	I	CD tray open switch signal input
22	I-TAPE A START	I	TAPE A switches signal input
23	I-TAPE B START	I	TAPE B switches signal input
24	I-STREAM/VACS	I	Stream/Vacs signal input
25	I-KEY 3	I	Function key input
26	I-KEY 2	I	Function key input
27	I-KEY 1	I	Function key input
28	I-SIRDS-IN	I	Data input from the remote contorol receiver
29	I-AC CUT	I	Power down signal input
30	G13	O	FL tube grid signal output
31	G12	O	FL tube grid signal output
32	G11	O	FL tube grid signal output
33	G10	O	FL tube grid signal output
34	G9	O	FL tube grid signal output
35	G8	O	FL tube grid signal output
36	G7	O	FL tube grid signal output
37	G6	O	FL tube grid signal output
38	G5	O	FL tube grid signal output
39	G4	O	FL tube grid signal output
40	G3	O	FL tube grid signal output
41	G2	O	FL tube grid signal output
42	G1	O	FL tube grid signal output
43	S1	O	FL tube segment signal output
44	S2	O	FL tube segment signal output
45	S3	O	FL tube segment signal output
46	VDD3	—	Power supply
47	S4	O	FL tube segment signal output
48	S5	O	FL tube segment signal output
49	S6	O	FL tube segment signal output
50	S7/METER-SW1	O	FL tube segment signal output

Pin No	Pin Name	I/O	Description
51	-VPP	—	Power supply (-)
52	S8/METER-SW2	O	FL tube segment signal output
53	S9/METER-SW3	O	FL tube segment signal output
54	S10/SW1	O	FL tube segment signal output
55	S11/SW2	O	FL tube segment signal output
56	S12/SW3	O	FL tube segment signal output
57	S13/SW4	O	FL tube segment signal output
58	S14/SW5	O	FL tube segment signal output
59	S15/SW6	O	FL tube segment signal output
60	S16/SW7	O	FL tube segment signal output
61	S17/SW8	O	FL tube segment signal output
62	S18/SW9	O	FL tube segment signal output
63	S19/SW10	O	FL tube segment signal output
64	S20	O	FL tube segment signal output
65	S21	O	FL tube segment signal output
66	I-SPEC/MODE/METER	I	METER swich input
67	I-TUNED-IN	I	Tuning a frequency signal input
68	I-STEREO-IN	I	Stereo tuning signal input
69	I-ASM-IN	I	ASM signal input
70	I-REEL-A-IN	I	A deck photo sensor signal input
71	I-REEL-B-IN	I	B deck photo sensor signal input
72	VDD4	—	Power supply
73	I-CD Num Sensor	O	Table address sensor swich signal input
74	O-POWER-RELAY	O	POWER RELAY control output
75	O-SYSTEM-MUTE	O	System muting signal output
76	O-POWER-LED	O	POWER LED control signal output
77	STREAM-LED6 SOLB	O	Illumination LED control signal output(Not used)
78	STREAM-LED5 SOLA	O	Illumination LED control signal output(Not used)
79	STREAM-LED4 MOTOR	O	Illumination LED control signal output(Not used)
80	STREAM-LED3 MP3-STB	O	Illumination LED control signal output(Not used)
81	STREAM-LED2	O	Illumination LED control signal output(Not used)
82	STREAM-LED1	O	Illumination LED control signal output(Not used)
83	I-LC72121 DI	I	Data input from Tuner
84	O-LC72121 CE	O	Chip select output to Tuner
85	O-LC72121/BU2099FV DO	O	Data input from Tuner and SP Driver
86	O-LC72121/BU2099FV CLK	O	Clock output to Tuner and SP Driver
87	O-BU2099FV LCH	O	LCH output to SP Driver
88	O-BD3401 CLK	O	Clock output to Sound Processor
89	VSS2	—	Ground
90	VDD2	—	Power supply
91	O-BD3401 DATA	O	Data output toSound Processor
92	O-XTCN	O	CD xtcn signal output
93	O-XRES(RESET)	O	CD reset signal output
94	O-XLT(CD-LAT)	O	CD xlt signal output
95	O-CD-DATA	O	CD data output
96	I-SENS	I	CD sens input
97	O-CD-CLK	O	CD clk output
98	O-MP3-DO	O	Clock output to CD Digital Processor(Not used)
99	I-MP3-DI	I	Data input from CD Digital Processor(Not used)
100	O-MP3-CLK	O	Clock output to CD Digital Processor(Not used)

SECTION 6 EXPLODED VIEWS

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation

AR : Argentina model


E2 : 120V AC Area in E model

E51 : Chilean and Peruvian models

MX : Mexican model


The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

6-1. MAIN SECTION

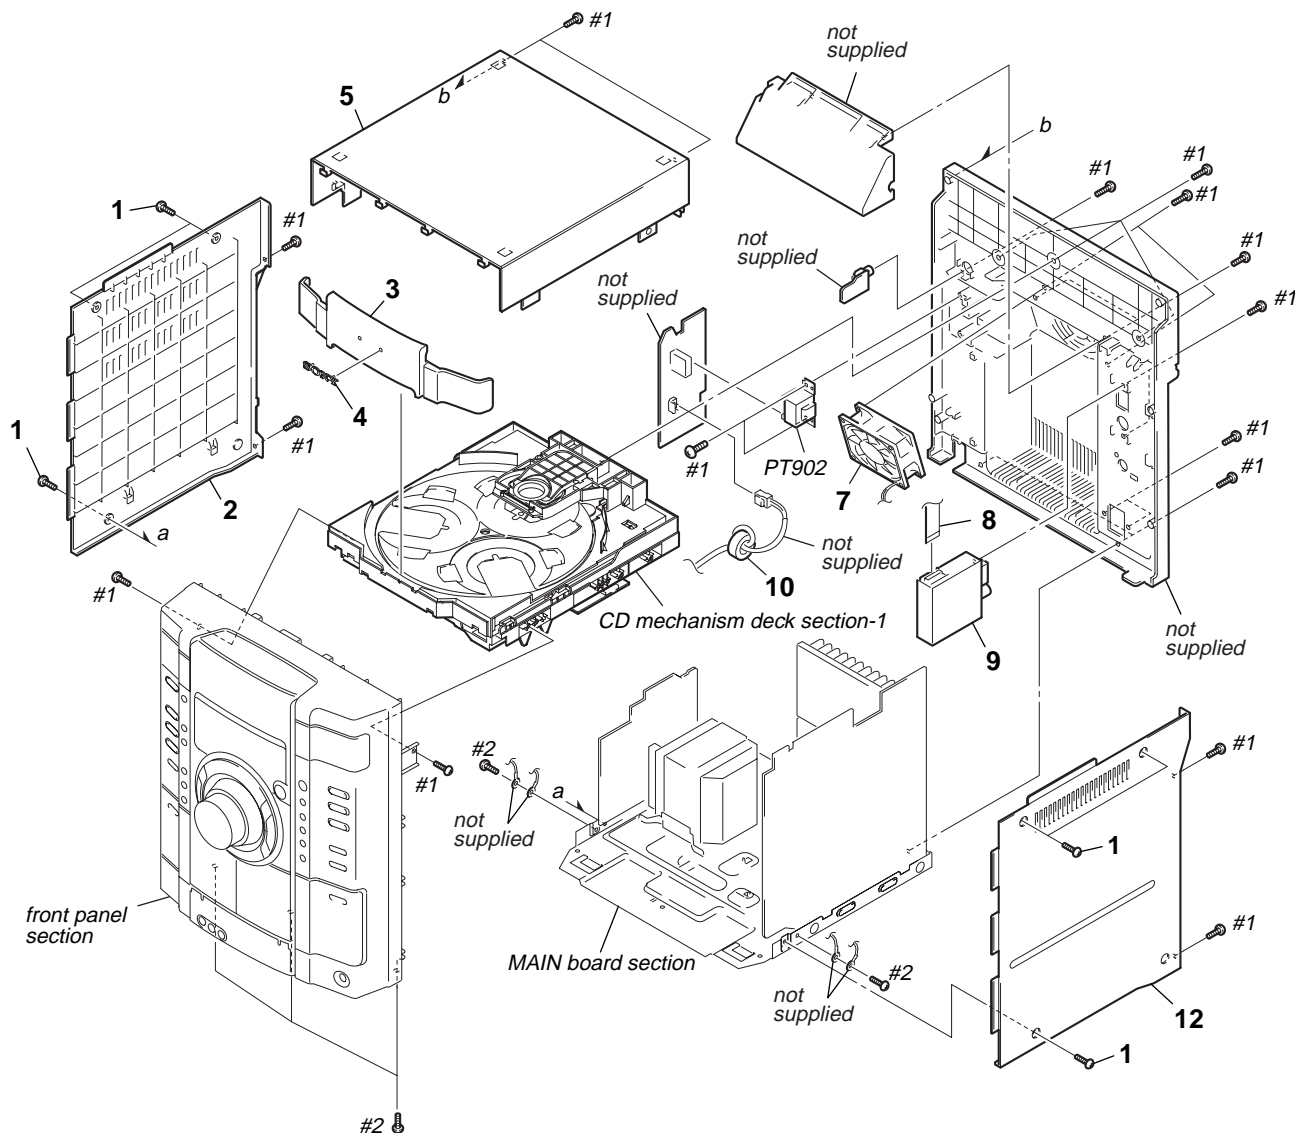


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	3-363-099-32	SCREW (CASE 3 TP2)		9	1-693-615-11	TUNER (FM/AM)	
2	4-245-183-71	CASE (SIDE-L)		10	1-400-285-11	F-BEAD, E2515MRT	
3	4-253-803-21	DOOR, CD		12	4-245-184-71	CASE (SIDE-R)	
4	3-038-018-01	EMBLEM, SONY		Δ PT902	X-4956-294-1	TRANS ASSY, SUB (EXCEPT MX)	
5	4-244-849-71	CASE (TOP)		Δ PT902	X-4956-322-1	SUB TRANS ASSY (MX)	
7	1-763-117-13	FAN, DC		#1	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
8	1-769-940-11	WIRE (FLAT TYPE) (11 CORE)		#2	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

6-2. FRONT PANEL SECTION

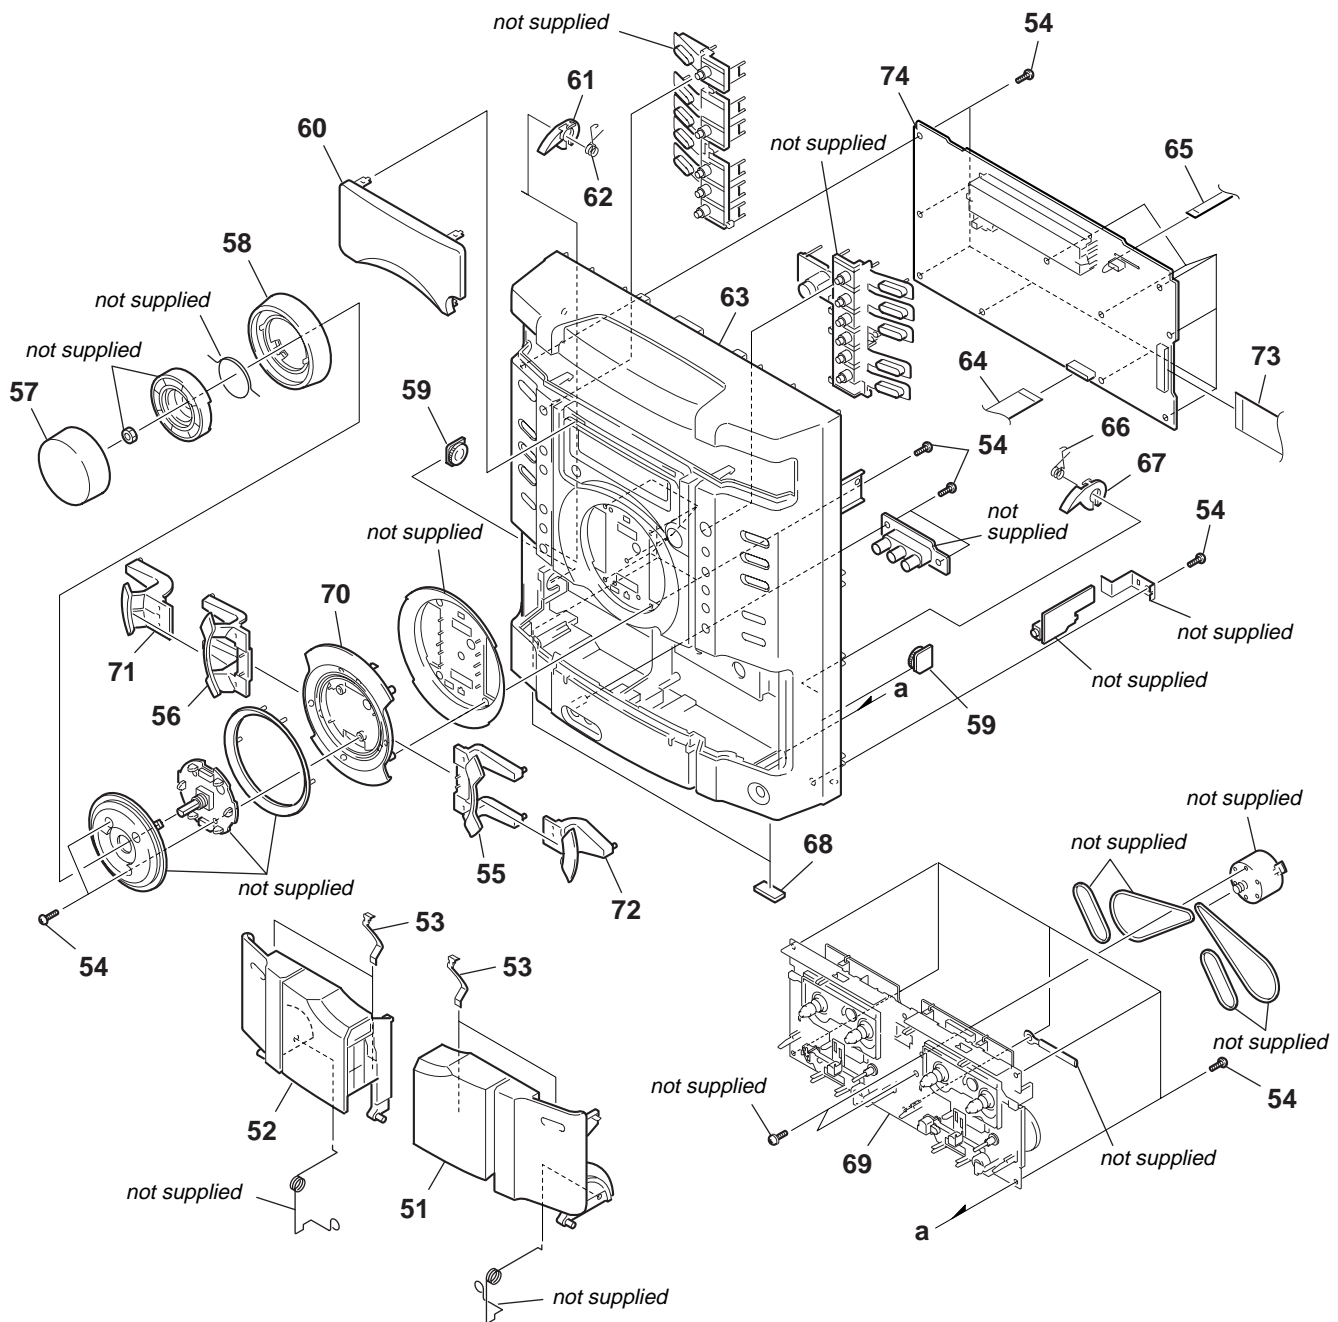

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	4-252-202-01	DOOR (B), CASS		63	4-252-195-11	PANEL, FRONT	
52	4-252-201-01	DOOR (A), CASS		64	1-769-975-11	WIRE (FLAT TYPE) (13 CORE)	
53	4-238-631-01	TAPE SPRING		65	1-769-883-11	WIRE (FLAT TYPE) (7 CORE)	
54	4-951-620-01	SCREW (2.6X8), +BVTP		66	4-231-841-01	SPRING (HEART CAM-B)	
55	4-252-207-11	BUTTON, FF/ALBUM+		67	4-231-825-01	CAM (B), HEART	
56	4-252-208-11	BUTTON, FR/ALBUM-		68	4-225-252-01	CUSHION (FOOT)	
57	4-252-214-01	KNOB, VOLUME		69	1-796-485-51	DECK, MECHANICAL (CWM43FF-05)	
58	X-4956-295-1	RING ASSY, KNOB		70	4-252-200-01	BUTTON COVER	
59	4-224-104-41	DAMPER		71	4-252-206-01	BUTTON, STOP	
60	4-252-198-01	WINDOW, DISPLAY		72	4-252-205-01	BUTTON, PLAY	
61	4-231-824-01	CAM (A), HEART		73	1-775-251-11	WIRE (FLAT TYPE) (27 CORE)	
62	4-231-836-01	SPRING (HEART CAM-A)		74	A-4752-221-A	PANEL BOARD, COMPLETE	


6-3. MAIN BOARD SECTION

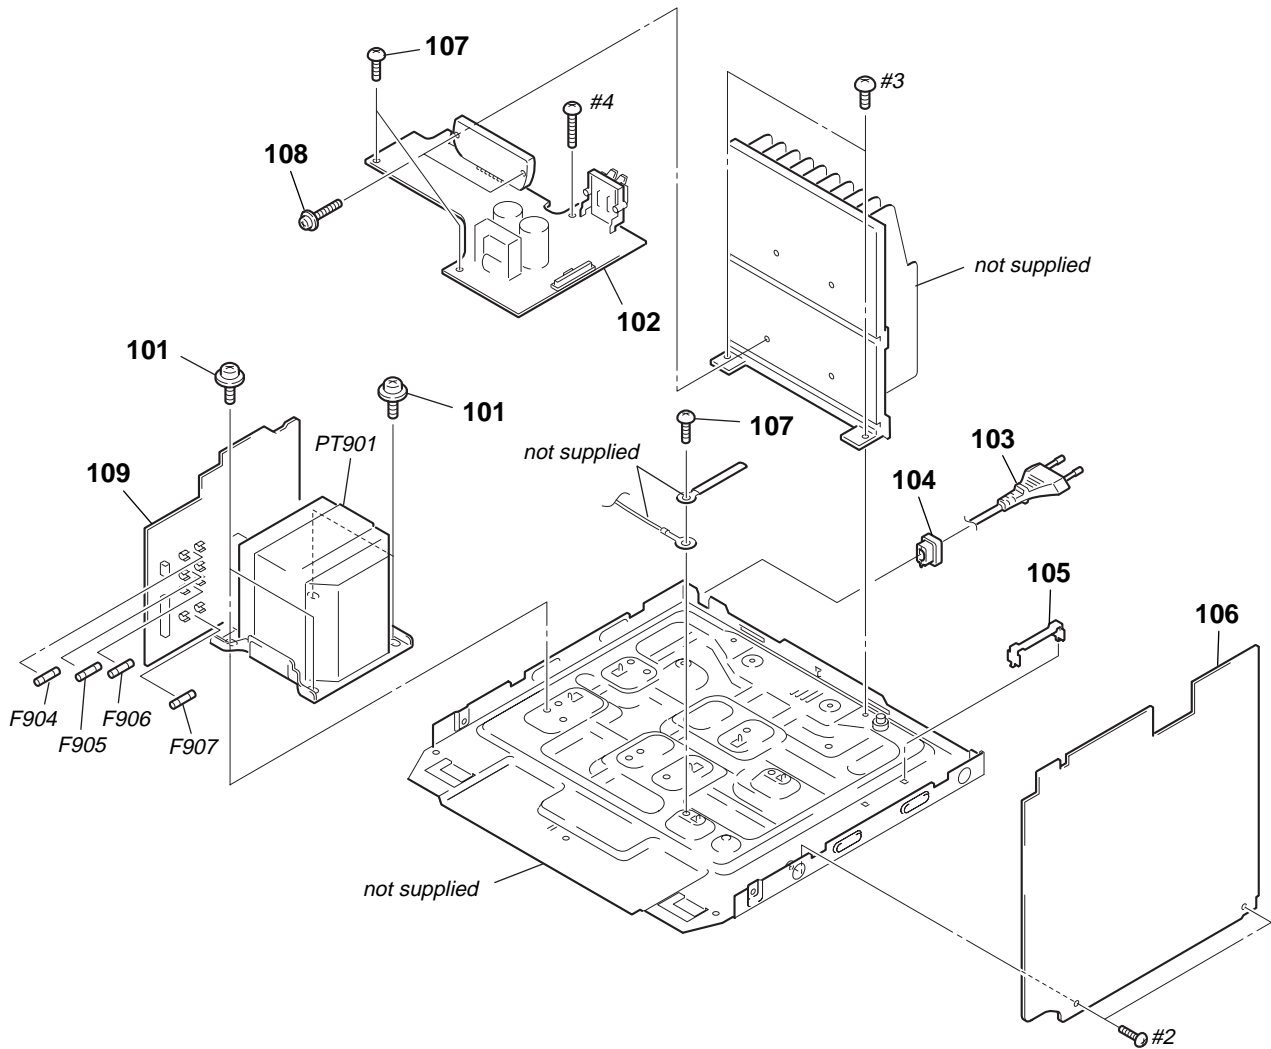

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
101	4-242-527-01	S-SCREW, ITC+4-8 R		108	3-905-609-41	SCREW (TRANSISTOR)	
102	A-4750-799-A	AMP BOARD, COMPLETE (E2, E51)		109	A-4752-215-A	TRANS BOARD, COMPLETE (AR)	
102	A-4752-217-A	AMP BOARD, COMPLETE (AR)		109	A-4752-620-A	TRANS BOARD, COMPLETE (E2, E51)	
102	A-4752-226-A	AMP BOARD, COMPLETE (MX)		△ F904	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8.0AL/250V)	
△ 103	1-777-071-83	CORD, POWER (E51)		△ F905	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8.0AL/250V)	
△ 103	1-783-941-22	CORD, POWER (AR)		△ F906	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15AL/250V)	
△ 103	1-827-226-11	CORD, POWER (MX, E2)		△ F907	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15AL/250V)	
* 104	3-703-244-00	BUSHING (2104), CORD (AR, E51)		#2	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
104	3-703-571-11	BUSHING (S) (4516), CORD (MX, E2)		#3	7-685-881-09	SCREW +BVTT 4X8	
105	4-988-533-01	HOLDER, PWB		#4	7-685-649-79	SCREW +BVTP 3X14 TYPE2 IT-3	
106	A-4750-771-A	MAIN BOARD, COMPLETE		△ PT901	1-443-237-11	TRANSFORMER, POWER (EXCEPT MX)	
107	4-242-539-01	BVIT3B+3-8R W/O SLOT		△ PT901	1-443-284-11	TRANSFORMER, POWER (MX)	


The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

6-4. CD MECHANISM DECK SECTION -1 (CDM74-F1BD81)

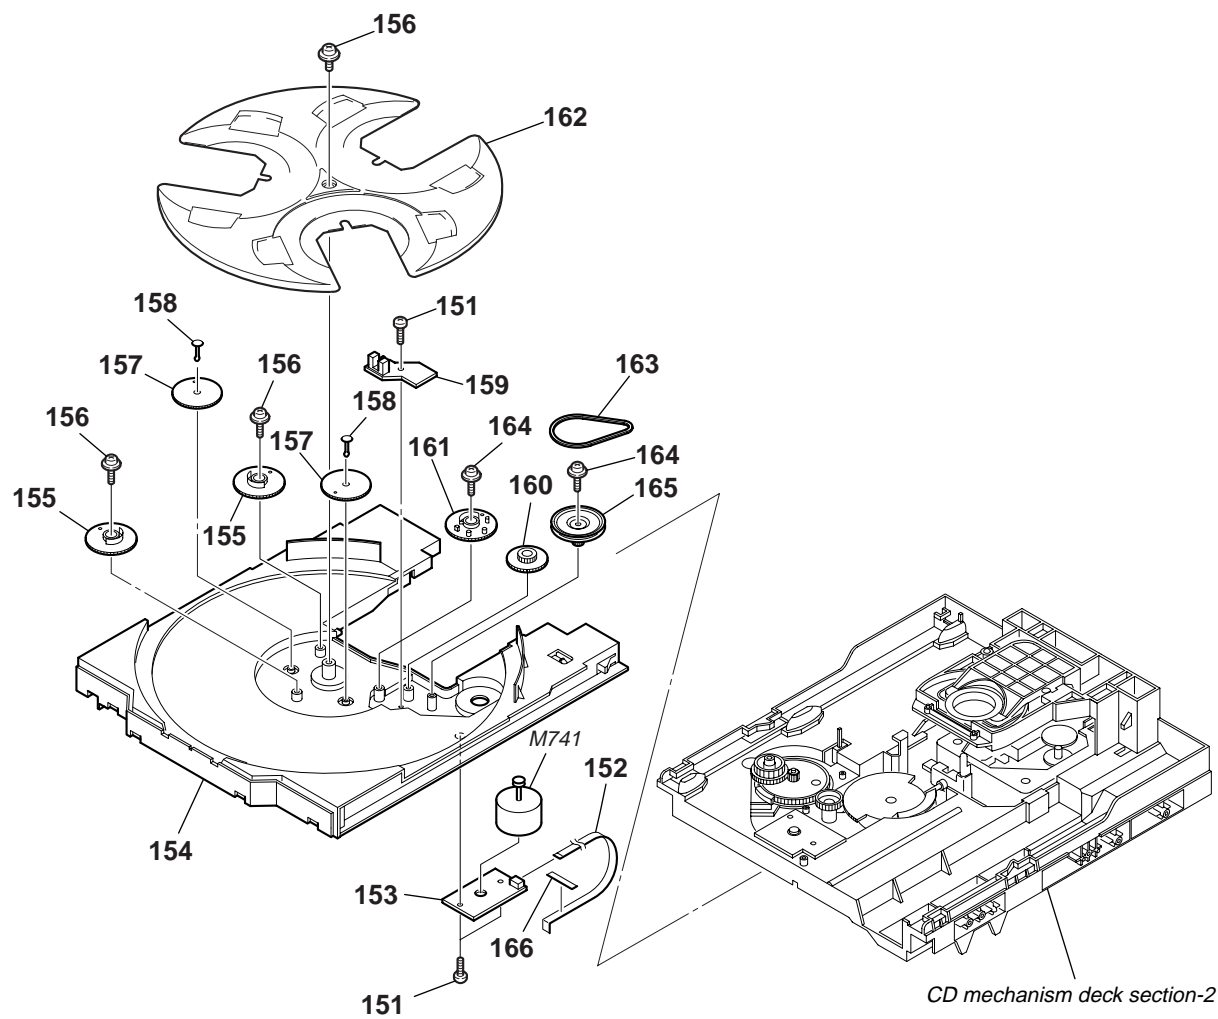

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
151	4-218-253-21	SCREW (M2.6), +BTTP5		160	4-243-820-01	GEAR (TABLE)	
152	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)		161	4-243-819-01	GEAR (GENEVA)	
153	1-687-134-12	MOTOR (TB) BOARD		162	4-243-816-01	TRAY	
154	4-243-815-01	TABLE (LOADING)		163	4-243-823-01	BELT (TABLE)	
155	4-245-571-02	GEAR (STOPPER)		164	4-985-672-01	SCREW (+PTPWHM2.6), FLOATING	
156	4-218-252-61	SCREW (+PTPWH M2.6), FLOATING		165	4-243-821-01	PULLEY (TABLE)	
157	4-245-570-01	GEAR (JOINT)		166	3-231-598-01	SHEET (BA)	
158	4-245-572-01	BUSHING (GEAR)		M741	A-4723-963-A	MOTOR ASSY, TABLE	
159	1-687-132-12	SENSOR BOARD					

6-5. CD MECHANISM DECK SECTION -2 (CDM74-F1BD81)

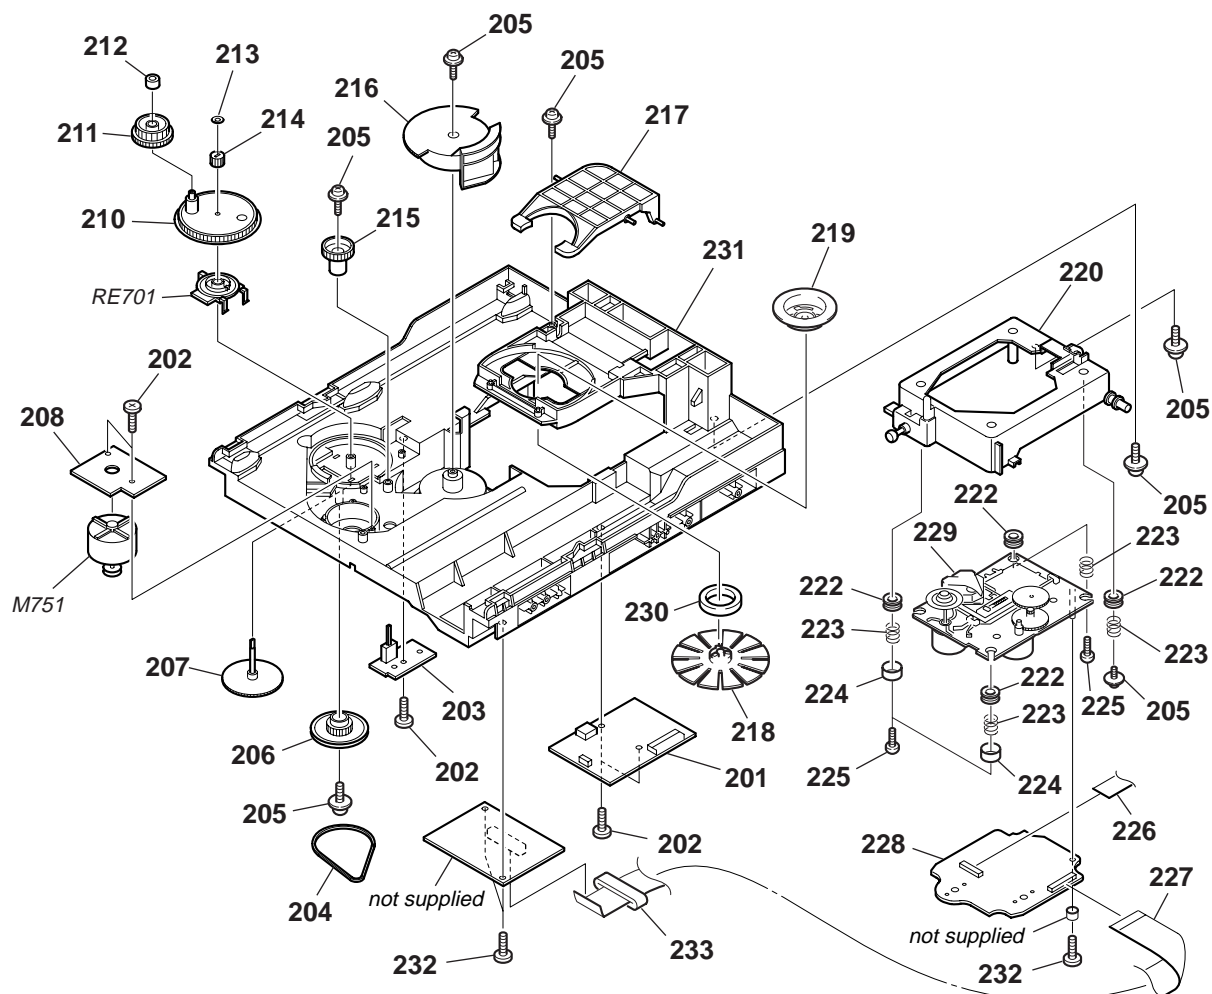

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
201	1-687-135-12	DRIVER BOARD		219	4-231-189-01	PULLEY (B), CHUCKING	
202	4-218-253-31	SCREW (M2.6), +BTTP		220	X-4955-536-1	HOLDER (213) ASSY	
203	1-687-669-12	SW BOARD		222	4-227-549-11	INSULATOR	
204	4-244-034-01	BELT (LOADING)		223	4-227-045-31	SPRING (INSULATOR), COIL	
205	4-218-252-61	SCREW (+PTPWH M2.6), FLOATING		224	4-231-151-01	STOPPER (BU)	
206	4-225-844-01	GEAR (LOADING A)		225	4-218-253-31	SCREW (M2.6), +BTTP	
207	4-224-613-01	GEAR (SHAFT)		226	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)	
208	1-687-133-12	MOTOR (LD) BOARD		227	1-773-048-11	WIRE (FLAT TYPE) (17 CORE)	
210	4-244-108-01	GEAR, SWING		△229	8-820-244-01	OPTICAL PICK-UP (KSM-215DCP/C2NP)	
211	4-224-609-01	GEAR (LOADING C)		228	A-4751-431-A	BD81A BOARD, COMPLETE	
212	4-224-608-01	COLLAR, SWING		230	1-471-035-11	MAGNET ASSY	
213	3-016-533-11	WASHER (FR), STOPPER		231	4-243-817-01	CHASSIS	
214	4-224-611-01	GEAR (LOADING B)		232	4-951-620-01	SCREW (2.6X8), +BVTP	
215	4-224-606-01	GEAR (RV)		233	1-469-854-11	CORE, FERRITE	
216	4-243-818-01	GEAR (U/D)		M751	A-4736-655-A	MOTOR ASSY, LOADING	
217	4-243-822-02	LEVER (LIFTER)		RE701	1-477-680-12	ENCODER, ROTARY	
218	X-4955-707-2	PULLEY (A5) ASSY, CHUCKING					

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

SECTION 7
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
 - -XX, -X mean standardized parts, so they may have some difference from the original one.
 - Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
 - CAPACITORS:
uF: μF
- COILS
uH: μH
 - RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
 - SEMICONDUCTORS
In each case, u: μ, for example:
uA..., uA..., uPA..., μPA...,
uPB..., μPB..., uPC..., μPC...,
uPD..., μPD...

When indicating parts by reference number, please include the board name.

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

- Abbreviation
AR : Argentina model
E2 : 120V AC Area in E model
E51 : Chilean and Peruvian models
MX : Mexican model

Ref. No.	Part No.	Description	Remarks			
		1 STREAM LED BOARD *****				
		< LED >				
LED851	6-500-809-01	DIODE SELU5223C-STP15 (ILLUMINATION LIGHT)				
		< RESISTOR >				
R852	1-216-182-00	RES-CHIP	220	5%	1/8W	
R853	1-216-837-11	METAL CHIP	22K	5%	1/10W	
		< SWITCH >				
S851	1-418-632-11	ENCODER, ROTARY (MASTER VOLUME)				
		< SWITCH >				
SW851	1-786-289-11	SWITCH, DETECTION *****				
	A-4750-799-A	AMP BOARD, COMPLETE (E2, E51)				
	A-4752-217-A	AMP BOARD, COMPLETE (AR)				
	A-4752-226-A	AMP BOARD, COMPLETE (MX) *****				
	7-685-872-09	SCREW +BVTT 3X8 (S)				
		< CAPACITOR >				
C402	1-162-306-11	CERAMIC	0.01uF	20%	16V	
C403	1-137-749-11	MYLAR	0.1uF		100V	
C404	1-137-749-11	MYLAR	0.1uF		100V	
C405	1-127-812-11	ELECT	3300uF	20%	63V	
C406	1-127-812-11	ELECT	3300uF	20%	63V	
C407	1-162-306-11	CERAMIC	0.01uF	20%	16V	
C408	1-162-306-11	CERAMIC	0.01uF	20%	16V	
C411	1-162-306-11	CERAMIC	0.01uF	20%	16V	
C441	1-126-964-11	ELECT	10uF	20%	50V	
C442	1-126-964-11	ELECT	10uF	20%	50V	
C443	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C444	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C445	1-162-282-31	CERAMIC	100PF	10%	50V	
C446	1-162-282-31	CERAMIC	100PF	10%	50V	
C447	1-126-965-11	ELECT	22uF	20%	50V	
C448	1-126-965-11	ELECT	22uF	20%	50V	
C451	1-136-497-81	FILM	0.1uF	5%	50V	
C452	1-136-497-81	FILM	0.1uF	5%	50V	
C453	1-136-497-81	FILM	0.1uF	5%	50V	
C454	1-136-497-81	FILM	0.1uF	5%	50V	

Ref. No.	Part No.	Description	Remarks			
C481	1-104-658-91	ELECT	100uF	20%	10V	
C486	1-126-961-11	ELECT	2.2uF	20%	50V	
C487	1-126-963-11	ELECT	4.7uF	20%	50V	
C488	1-126-965-11	ELECT	22uF	20%	50V	
C489	1-128-563-11	ELECT	100uF	20%	100V	
C492	1-162-306-11	CERAMIC	0.01uF	20%	16V	
		< CONNECTOR >				
CN441	1-778-981-21	CONNECTOR, BOARD TO BOARD 13P				
		< DIODE >				
D401	6-500-360-01	DIODE D10XB20				
D441	8-719-991-33	DIODE 1SS133T-77				
D442	8-719-991-33	DIODE 1SS133T-77				
D443	8-719-991-33	DIODE 1SS133T-77				
D481	8-719-991-33	DIODE 1SS133T-77				
D482	8-719-991-33	DIODE 1SS133T-77				
D483	8-719-991-33	DIODE 1SS133T-77				
		< EARTH TERMINAL >				
* EP401	1-537-738-21	TERMINAL, EARTH				
* EP402	1-537-738-21	TERMINAL, EARTH				
* EP491	1-537-738-21	TERMINAL, EARTH				
		< IC >				
\triangle IC441	6-600-221-01	IC STK403-130				
		< TERMINAL BOARD >				
JK441	1-694-884-11	TERMINAL BOARD (4P) (SPEAKER)				
		< COIL >				
L441	1-422-009-13	COIL, AIR-CORE				
L442	1-422-009-13	COIL, AIR-CORE				
		< TRANSISTOR >				
Q441	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA				
Q442	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA				
Q481	8-729-119-79	TRANSISTOR 2SC2785-FEK				
Q482	8-729-119-79	TRANSISTOR 2SC2785-FEK				
Q483	8-729-119-79	TRANSISTOR 2SC2785-FEK				
Q484	8-729-119-79	TRANSISTOR 2SC2785-FEK				
Q485	8-729-119-76	TRANSISTOR 2SA1175-HFE				
Q486	8-729-119-79	TRANSISTOR 2SC2785-FEK				
Q487	8-729-119-79	TRANSISTOR 2SC2785-FEK				

AMP

BD81A

Ref. No.	Part No.	Description	Remarks		
Q488	8-729-119-79	TRANSISTOR	2SC2785-FEK		
Q489	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA		
< RESISTOR >					
R401	1-249-441-11	CARBON	100K	5%	1/4W
R402	1-249-441-11	CARBON	100K	5%	1/4W
R407	1-260-087-11	CARBON	100	5%	1/2W
R411	1-249-421-11	CARBON	2.2K	5%	1/4W
R412	1-249-421-11	CARBON	2.2K	5%	1/4W
R413	1-249-425-11	CARBON	4.7K	5%	1/4W
R414	1-249-425-11	CARBON	4.7K	5%	1/4W
R441	1-249-417-11	CARBON	1K	5%	1/4W
R442	1-249-417-11	CARBON	1K	5%	1/4W
R443	1-249-437-11	CARBON	47K	5%	1/4W
R444	1-249-437-11	CARBON	47K	5%	1/4W
R445	1-249-417-11	CARBON	1K	5%	1/4W
R446	1-249-417-11	CARBON	1K	5%	1/4W
R447	1-249-437-11	CARBON	47K	5%	1/4W
R448	1-249-437-11	CARBON	47K	5%	1/4W
△ R451	1-217-156-00	METAL	0.22	10%	5W
△ R452	1-217-156-00	METAL	0.22	10%	5W
R453	1-260-076-11	CARBON	10	5%	1/2W
R454	1-260-076-11	CARBON	10	5%	1/2W
R455	1-249-417-11	CARBON	1K	5%	1/4W
R456	1-249-417-11	CARBON	1K	5%	1/4W
R457	1-249-433-11	CARBON	22K	5%	1/4W
R458	1-249-433-11	CARBON	22K	5%	1/4W
R459	1-249-437-11	CARBON	47K	5%	1/4W
R460	1-249-437-11	CARBON	47K	5%	1/4W
R461	1-260-076-11	CARBON	10	5%	1/2W
R462	1-260-076-11	CARBON	10	5%	1/2W
R465	1-249-437-11	CARBON	47K	5%	1/4W
R466	1-249-438-11	CARBON	56K	5%	1/4W
R467	1-249-435-11	CARBON	33K	5%	1/4W
R481	1-249-425-11	CARBON	4.7K	5%	1/4W
R482	1-249-429-11	CARBON	10K	5%	1/4W
R483	1-247-791-91	CARBON	22	5%	1/4W
R484	1-249-438-11	CARBON	56K	5%	1/4W
R485	1-249-441-11	CARBON	100K	5%	1/4W
R486	1-249-441-11	CARBON	100K	5%	1/4W
R487	1-249-435-11	CARBON	33K	5%	1/4W
R488	1-249-433-11	CARBON	22K	5%	1/4W
R489	1-249-425-11	CARBON	4.7K	5%	1/4W
R490	1-249-425-11	CARBON	4.7K	5%	1/4W
R491	1-249-433-11	CARBON	22K	5%	1/4W
R492	1-249-417-11	CARBON	1K	5%	1/4W
R493	1-249-435-11	CARBON	33K	5%	1/4W
R494	1-249-421-11	CARBON	2.2K	5%	1/4W
△ R495	1-217-831-11	FUSIBLE	1	5%	1/4W
△ R496	1-212-881-11	FUSIBLE	100	5%	1/4W
< RELAY >					
RY441	1-755-373-11	RELAY			
< THERMISTOR >					
TH441	1-807-796-11	THERMISTOR			

Ref. No.	Part No.	Description	Remarks		
	A-4751-431-A	BD81A BOARD, COMPLETE			

		< CAPACITOR >			
C10	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V
C11	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V
C14	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C15	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C16	1-115-156-11	CERAMIC CHIP	1uF		10V
C17	1-126-246-11	ELECT CHIP	220uF	20%	4V
C18	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C111	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C112	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C113	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C114	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C115	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C116	1-128-995-21	ELECT CHIP	100uF	20%	10V
C122	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C123	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C124	1-162-959-11	CERAMIC CHIP	330PF	5%	50V
C125	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C131	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C132	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C133	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C134	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C141	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C142	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C143	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C151	1-128-995-21	ELECT CHIP	100uF	20%	10V
C161	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C162	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C163	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C171	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C172	1-162-920-11	CERAMIC CHIP	27PF	5%	50V
C174	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C181	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C182	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C183	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C184	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C185	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C186	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C194	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C195	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C196	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C201	1-128-995-21	ELECT CHIP	100uF	20%	10V
C203	1-128-995-21	ELECT CHIP	100uF	20%	10V
C209	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C210	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C211	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C212	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C213	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C251	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C252	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C255	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C257	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C258	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C259	1-164-360-11	CERAMIC CHIP	0.1uF		16V

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

BD81A

CONNECT

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C260	1-128-394-11	ELECT CHIP	220uF 20% 10V	R171	1-216-817-11	METAL CHIP	470 5% 1/10W
C302	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R172	1-216-857-11	METAL CHIP	1M 5% 1/10W
C303	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R173	1-216-295-91	SHORT CHIP	0
C305	1-126-246-11	ELECT CHIP	220uF 20% 4V	R181	1-216-809-11	METAL CHIP	100 5% 1/10W
C306	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R182	1-216-809-11	METAL CHIP	100 5% 1/10W
C307	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R191	1-216-864-11	SHORT CHIP	0
C308	1-126-208-21	ELECT CHIP	47uF 20% 4V	R201	1-500-445-21	FERRITE, EMI (SMD) (2012)	
C309	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R203	1-216-864-11	SHORT CHIP	0
C310	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R204	1-500-445-21	FERRITE, EMI (SMD) (2012)	
C311	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R205	1-216-864-11	SHORT CHIP	0
C312	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R251	1-216-833-11	METAL CHIP	10K 5% 1/10W
C313	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R252	1-216-837-11	METAL CHIP	22K 5% 1/10W
C314	1-126-208-21	ELECT CHIP	47uF 20% 4V	R253	1-216-833-11	METAL CHIP	10K 5% 1/10W
C315	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	R301	1-216-845-11	METAL CHIP	100K 5% 1/10W
C316	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	R302	1-216-833-11	METAL CHIP	10K 5% 1/10W
C317	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	R303	1-216-845-11	METAL CHIP	100K 5% 1/10W
C318	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	R305	1-216-845-11	METAL CHIP	100K 5% 1/10W
C320	1-216-864-11	SHORT CHIP	0	R306	1-216-864-11	SHORT CHIP	0
		< CONNECTOR >		R307	1-216-833-11	METAL CHIP	10K 5% 1/10W
CN101	1-770-425-11	CONNECTOR, FFC/FPC 16P		R313	1-216-813-11	METAL CHIP	220 5% 1/10W
CN201	1-818-350-11	CONNECTOR (FFC) 27P		R351	1-216-809-11	METAL CHIP	100 5% 1/10W
		< FERRITE BEAD >		R352	1-216-809-11	METAL CHIP	100 5% 1/10W
FB301	1-500-445-21	FERRITE, EMI (SMD) (2012)		R353	1-216-809-11	METAL CHIP	100 5% 1/10W
		< IC >		R354	1-216-809-11	METAL CHIP	100 5% 1/10W
IC101	8-752-425-12	IC CXD3059AR		R401	1-216-809-11	METAL CHIP	100 5% 1/10W
IC251	6-705-808-01	IC BA5947FM		R402	1-216-809-11	METAL CHIP	100 5% 1/10W
IC301	6-705-365-01	IC TC94A34FG-002		R403	1-216-809-11	METAL CHIP	100 5% 1/10W
IC303	6-705-807-01	IC BH15FB1WG		R404	1-216-809-11	METAL CHIP	100 5% 1/10W
		< TRANSISTOR >		R405	1-216-809-11	METAL CHIP	100 5% 1/10W
Q10	6-550-363-01	TRANSISTOR	2SB1690KT146	R406	1-216-809-11	METAL CHIP	100 5% 1/10W
		< RESISTOR >		R407	1-216-809-11	METAL CHIP	100 5% 1/10W
R10	1-216-791-11	METAL CHIP	3.3 5% 1/10W	R408	1-216-809-11	METAL CHIP	100 5% 1/10W
R11	1-216-864-11	SHORT CHIP	0	R409	1-216-809-11	METAL CHIP	100 5% 1/10W
R12	1-216-845-11	METAL CHIP	100K 5% 1/10W	R410	1-216-809-11	METAL CHIP	100 5% 1/10W
R13	1-218-446-11	METAL CHIP	1 5% 1/10W	R411	1-216-809-11	METAL CHIP	100 5% 1/10W
R111	1-216-821-11	METAL CHIP	1K 5% 1/10W	R412	1-216-809-11	METAL CHIP	100 5% 1/10W
R112	1-216-835-11	METAL CHIP	15K 5% 1/10W	R419	1-216-809-11	METAL CHIP	100 5% 1/10W
R113	1-216-821-11	METAL CHIP	1K 5% 1/10W			< SWITCH >	
R114	1-216-835-11	METAL CHIP	15K 5% 1/10W	S101	1-771-853-11	SWITCH, DETECTION (LIMIT)	
R121	1-216-835-11	METAL CHIP	15K 5% 1/10W			< VIBRATOR >	
R131	1-216-857-11	METAL CHIP	1M 5% 1/10W	X171	1-767-408-21	VIBRATOR, CRYSTAL (16.9MHz)	
R132	1-216-833-11	METAL CHIP	10K 5% 1/10W			CONNECT BOARD	
R133	1-216-848-11	METAL CHIP	180K 5% 1/10W			*****	
R141	1-216-829-11	METAL CHIP	4.7K 5% 1/10W			< CAPACITOR >	
R142	1-216-821-11	METAL CHIP	1K 5% 1/10W	C871	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R143	1-216-827-11	METAL CHIP	3.3K 5% 1/10W	C872	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
R151	1-216-864-11	SHORT CHIP	0	C873	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R161	1-216-809-11	METAL CHIP	100 5% 1/10W	C874	1-164-315-11	CERAMIC CHIP	470PF 5% 50V
R162	1-216-841-11	METAL CHIP	47K 5% 1/10W	C875	1-164-156-11	CERAMIC CHIP	0.1uF 25V
R163	1-216-809-11	METAL CHIP	100 5% 1/10W	C876	1-164-156-11	CERAMIC CHIP	0.1uF 25V
R165	1-216-864-11	SHORT CHIP	0				

CONNECT

DRIVER

GAME JACK

H/P JACK

MAIN

Ref. No.	Part No.	Description	Remarks
		< CONNECTOR >	
CN871	1-779-295-11	CONNECTOR, FFC (LIF (NON-ZIF)) 27P	
CN873	1-784-778-11	CONNECTOR, FFC 17P	
* CN874	1-564-725-11	PIN, CONNECTOR (SMALL TYPE) 9P	
		< FERRITE BEAD >	
FB871	1-216-864-11	SHORT CHIP 0	
FB872	1-216-864-11	SHORT CHIP 0	
		< SHORT >	
JR871	1-216-864-11	SHORT CHIP 0	
JR872	1-216-864-11	SHORT CHIP 0	

	1-687-135-12	DRIVER BOARD	

		< CAPACITOR >	
C715	1-126-933-11	ELECT 100uF 20% 16V	
C731	1-126-964-11	ELECT 10uF 20% 50V	
C735	1-164-159-21	CERAMIC 0.1uF 50V	
C736	1-164-159-21	CERAMIC 0.1uF 50V	
C737	1-164-159-21	CERAMIC 0.1uF 50V	
C741	1-162-306-11	CERAMIC 0.01uF 20% 16V	
C751	1-162-306-11	CERAMIC 0.01uF 20% 16V	
C752	1-164-159-21	CERAMIC 0.1uF 50V	
		< CONNECTOR >	
CN701	1-785-338-11	PIN, CONNECTOR (LIGHT ANGLE) 12P	
CN702	1-784-766-11	CONNECTOR, FFC 5P	
* CN703	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P	
CN704	1-785-328-11	PIN, CONNECTOR (LIGHT ANGLE) 2P	
		< DIODE >	
D701	8-719-921-42	DIODE MTZJ-5.1A	
D711	8-719-109-69	DIODE RD3.6ESB2	
		< IC >	
IC701	8-759-598-69	IC BA6956AN	
IC712	8-759-598-69	IC BA6956AN	
		< TRANSISTOR >	
Q731	8-729-029-66	TRANSISTOR DTC114ESA	
		< RESISTOR >	
R701	1-249-413-11	CARBON 470 5% 1/4W	
R702	1-247-807-31	CARBON 100 5% 1/4W	
R711	1-249-417-11	CARBON 1K 5% 1/4W	
R712	1-249-425-11	CARBON 4.7K 5% 1/4W	
R713	1-249-433-11	CARBON 22K 5% 1/4W	
R721	1-249-425-11	CARBON 4.7K 5% 1/4W	
R722	1-249-425-11	CARBON 4.7K 5% 1/4W	
R723	1-249-425-11	CARBON 4.7K 5% 1/4W	
R731	1-247-807-31	CARBON 100 5% 1/4W	
R732	1-249-429-11	CARBON 10K 5% 1/4W	
R733	1-249-417-11	CARBON 1K 5% 1/4W	
R734	1-249-430-11	CARBON 12K 5% 1/4W	

Ref. No.	Part No.	Description	Remarks
R735	1-247-807-31	CARBON 100 5% 1/4W	
R751	1-249-425-11	CARBON 4.7K 5% 1/4W	

		GAME JACK BOARD	

		< CAPACITOR >	
C801	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C802	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C803	1-165-128-11	CERAMIC CHIP 0.22uF 16V	
C804	1-165-128-11	CERAMIC CHIP 0.22uF 16V	
		< JACK >	
J804	1-815-684-11	JACK, PIN 3P (GAME INPUT)	
		< SHORT >	
JR801	1-216-864-11	SHORT CHIP 0	
		< RESISTOR >	
R801	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R802	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R803	1-216-837-11	METAL CHIP 22K 5% 1/10W	
R804	1-216-837-11	METAL CHIP 22K 5% 1/10W	

		H/P JACK BOARD	

		< CAPACITOR >	
C830	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C831	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C832	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
		< JACK >	
J801	1-793-829-11	JACK, HEADPHONE (PHONES)	

	A-4750-771-A	MAIN BOARD, COMPLETE	

	7-685-872-09	SCREW +BVTT 3X8 (S)	
		< CAPACITOR >	
C101	1-126-960-11	ELECT 1uF 20% 50V	
C102	1-126-960-11	ELECT 1uF 20% 50V	
C103	1-126-956-91	ELECT 0.1uF 20% 50V	
C104	1-126-956-91	ELECT 0.1uF 20% 50V	
C105	1-164-816-11	CERAMIC CHIP 220PF 2% 50V	
C106	1-131-679-31	FILM 0.01uF 5% 50V	
C107	1-126-964-11	ELECT 10uF 20% 50V	
C108	1-164-816-11	CERAMIC CHIP 220PF 2% 50V	
C109	1-131-679-31	FILM 0.01uF 5% 50V	
C110	1-126-964-11	ELECT 10uF 20% 50V	
C111	1-126-960-11	ELECT 1uF 20% 50V	
C112	1-126-960-11	ELECT 1uF 20% 50V	
C113	1-126-960-11	ELECT 1uF 20% 50V	
C114	1-126-960-11	ELECT 1uF 20% 50V	
C115	1-131-679-31	FILM 0.01uF 5% 50V	

MAIN

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
C116	1-164-816-11	CERAMIC CHIP	220PF	2%	50V	C191	1-126-961-11	ELECT	2.2uF	20%	50V
C117	1-164-816-11	CERAMIC CHIP	220PF	2%	50V	C192	1-126-961-11	ELECT	2.2uF	20%	50V
C118	1-126-964-11	ELECT	10uF	20%	50V						
C119	1-131-679-31	FILM	0.01uF	5%	50V	C193	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C120	1-164-816-11	CERAMIC CHIP	220PF	2%	50V	C206	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
						C211	1-109-953-11	ELECT	2.2uF	20%	50V
C121	1-164-816-11	CERAMIC CHIP	220PF	2%	50V	C212	1-126-964-11	ELECT	10uF	20%	50V
C122	1-126-964-11	ELECT	10uF	20%	50V	C213	1-126-964-11	ELECT	10uF	20%	50V
C123	1-126-965-91	ELECT	22uF	20%	50V						
C124	1-162-953-11	CERAMIC CHIP	100PF	5%	50V	C214	1-126-926-11	ELECT	1000uF	20%	10V
C125	1-162-953-11	CERAMIC CHIP	100PF	5%	50V	C216	1-164-156-11	CERAMIC CHIP	0.1uF		25V
						C217	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C126	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V	C222	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C127	1-104-658-91	ELECT	100uF	20%	10V	C228	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C128	1-104-658-91	ELECT	100uF	20%	10V						
C129	1-126-947-11	ELECT	47uF	20%	35V	C229	1-126-963-11	ELECT	4.7uF	20%	50V
C132	1-126-947-11	ELECT	47uF	20%	35V	C230	1-126-947-11	ELECT	47uF	20%	35V
						C231	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C135	1-131-690-31	FILM	0.068uF	5%	50V	C235	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C136	1-131-690-31	FILM	0.068uF	5%	50V	C241	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C137	1-126-964-11	ELECT	10uF	20%	50V						
C138	1-126-964-11	ELECT	10uF	20%	50V	C242	1-130-479-00	MYLAR	0.0047uF	5%	50V
C139	1-131-690-31	FILM	0.068uF	5%	50V	C243	1-131-681-31	FILM	0.015uF	5%	50V
						C244	1-131-681-31	FILM	0.015uF	5%	50V
C140	1-131-690-31	FILM	0.068uF	5%	50V	C245	1-131-681-31	FILM	0.015uF	5%	50V
C141	1-126-964-11	ELECT	10uF	20%	50V	C248	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C142	1-126-964-11	ELECT	10uF	20%	50V						
C143	1-126-960-11	ELECT	1uF	20%	50V	C249	1-126-964-11	ELECT	10uF	20%	50V
C144	1-136-165-00	FILM	0.1uF	5%	50V	C250	1-126-947-11	ELECT	47uF	20%	35V
						C251	1-126-947-11	ELECT	47uF	20%	35V
C145	1-126-964-11	ELECT	10uF	20%	50V	C252	1-126-933-11	ELECT	100uF	20%	16V
C146	1-136-165-00	FILM	0.1uF	5%	50V	C253	1-126-956-91	ELECT	0.1uF	20%	50V
C147	1-126-964-11	ELECT	10uF	20%	50V						
C148	1-131-679-31	FILM	0.01uF	5%	50V	C258	1-126-959-11	ELECT	0.47uF	20%	50V
C149	1-131-679-31	FILM	0.01uF	5%	50V	C259	1-126-957-11	ELECT	0.22uF	20%	50V
						C264	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C150	1-131-679-31	FILM	0.01uF	5%	50V	C265	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C151	1-131-679-31	FILM	0.01uF	5%	50V	C266	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C152	1-130-475-00	MYLAR	0.0022uF	5%	50V						
C153	1-130-475-00	MYLAR	0.0022uF	5%	50V	C267	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C154	1-131-700-31	FILM	0.47uF	5%	50V	C270	1-126-964-11	ELECT	10uF	20%	50V
						C274	1-162-949-11	CERAMIC CHIP	47PF	5%	50V
C157	1-126-960-11	ELECT	1uF	20%	50V	C275	1-162-949-11	CERAMIC CHIP	47PF	5%	50V
C159	1-126-960-11	ELECT	1uF	20%	50V	C301	1-136-165-00	FILM	0.1uF	5%	50V
C160	1-126-960-11	ELECT	1uF	20%	50V						
C162	1-126-960-11	ELECT	1uF	20%	50V	C302	1-136-165-00	FILM	0.1uF	5%	50V
C164	1-126-960-11	ELECT	1uF	20%	50V	C303	1-136-165-00	FILM	0.1uF	5%	50V
						C304	1-136-165-00	FILM	0.1uF	5%	50V
C165	1-126-960-11	ELECT	1uF	20%	50V	C305	1-136-165-00	FILM	0.1uF	5%	50V
C166	1-126-960-11	ELECT	1uF	20%	50V	C306	1-136-165-00	FILM	0.1uF	5%	50V
C175	1-109-953-11	ELECT	2.2uF	20%	50V						
C176	1-126-964-11	ELECT	10uF	20%	50V	C308	1-126-965-91	ELECT	22uF	20%	50V
C177	1-162-945-11	CERAMIC CHIP	22PF	5%	50V	C309	1-126-965-91	ELECT	22uF	20%	50V
						C310	1-126-944-11	ELECT	3300uF	20%	25V
C178	1-126-947-11	ELECT	47uF	20%	35V	C311	1-126-964-11	ELECT	10uF	20%	50V
C179	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	C312	1-126-964-11	ELECT	10uF	20%	50V
C180	1-162-957-11	CERAMIC CHIP	220PF	5%	50V						
C181	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	C313	1-126-943-11	ELECT	2200uF	20%	25V
C182	1-162-957-11	CERAMIC CHIP	220PF	5%	50V	C315	1-126-933-11	ELECT	100uF	20%	16V
						C316	1-126-943-11	ELECT	2200uF	20%	25V
C183	1-162-945-11	CERAMIC CHIP	22PF	5%	50V	C318	1-104-658-91	ELECT	100uF	20%	10V
C184	1-126-947-11	ELECT	47uF	20%	35V	C321	1-126-961-11	ELECT	2.2uF	20%	50V
C185	1-126-964-11	ELECT	10uF	20%	50V						
C186	1-126-947-11	ELECT	47uF	20%	35V	C342	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C187	1-162-974-11	CERAMIC CHIP	0.01uF		50V	C351	1-164-357-11	CERAMIC CHIP	0.001uF	5%	50V
						C352	1-126-965-91	ELECT	22uF	20%	50V
C188	1-126-965-91	ELECT	22uF	20%	50V	C353	1-126-961-11	ELECT	2.2uF	20%	50V
C189	1-126-965-91	ELECT	22uF	20%	50V	C354	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C190	1-162-974-11	CERAMIC CHIP	0.01uF		50V						

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C371	1-164-362-11	CERAMIC CHIP 470PF 5%	50V	< IC >			
C372	1-162-953-11	CERAMIC CHIP 100PF 5%	50V	IC101	6-705-852-01	IC BD3401KS2	
C373	1-162-953-11	CERAMIC CHIP 100PF 5%	50V	IC102	8-759-710-97	IC NJM4565M-D	
C374	1-126-947-11	ELECT 47uF 20%	35V	IC201	8-759-508-69	IC BA3126N	
C375	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC301	6-702-771-01	IC TA78033LS	
C376	1-126-961-11	ELECT 2.2uF 20%	50V	IC302	6-702-771-01	IC TA78033LS	
< CONNECTOR >				IC303	8-759-701-59	IC NJM78M09FA	
CN101	1-568-830-11	CONNECTOR FFC 11P		IC304	8-759-701-59	IC NJM78M09FA	
* CN103	1-564-710-11	PIN, CONNECTOR (SMALL TYPE) 8P		IC371	6-704-046-01	IC BU2099FV	
* CN112	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P		< COIL >			
* CN301	1-568-950-11	PIN, CONNECTOR 12P		L101	1-424-849-11	COIL, OSCILLATION (BIAS)	
CN302	1-568-844-11	CONNECTOR FFC 29P		< TRANSISTOR >			
CN305	1-568-937-11	PIN, CONNECTOR (STRIGHT) 10P		Q101	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
CN307	1-778-982-21	CONNECTOR, BOARD TO BOARD 13P		Q102	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
CN308	1-564-506-11	PLUG, CONNECTOR 3P		Q103	8-729-802-80	TRANSISTOR 2SC3661	
CN309	1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P		Q104	8-729-802-80	TRANSISTOR 2SC3661	
* CN314	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P		Q105	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
< DIODE >				Q106	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D201	8-719-988-61	DIODE 1SS355TE-17		Q107	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D202	8-719-083-63	DIODE UDZSTE-1713B		Q304	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D206	8-719-988-61	DIODE 1SS355TE-17		Q305	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
D207	8-719-988-61	DIODE 1SS355TE-17		Q306	8-729-802-80	TRANSISTOR 2SC3661	
D211	8-719-988-61	DIODE 1SS355TE-17		Q307	8-729-802-80	TRANSISTOR 2SC3661	
D212	8-719-988-61	DIODE 1SS355TE-17		Q308	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
D213	8-719-988-61	DIODE 1SS355TE-17		Q309	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D214	8-719-988-61	DIODE 1SS355TE-17		Q310	8-729-142-46	TRANSISTOR 2SC2001-LK	
D215	8-719-988-61	DIODE 1SS355TE-17		Q311	8-729-142-46	TRANSISTOR 2SC2001-LK	
D301	6-500-522-21	DIODE 10EDB40-TB3		Q312	8-729-041-19	TRANSISTOR 2SA953-T-K	
D302	6-500-522-21	DIODE 10EDB40-TB3		Q313	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D303	6-500-522-21	DIODE 10EDB40-TB3		Q314	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
D304	6-500-522-21	DIODE 10EDB40-TB3		Q315	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D305	6-500-522-21	DIODE 10EDB40-TB3		Q321	8-729-142-46	TRANSISTOR 2SC2001-LK	
D306	6-500-522-21	DIODE 10EDB40-TB3		Q322	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
D307	6-500-522-21	DIODE 10EDB40-TB3		Q323	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D308	6-500-522-21	DIODE 10EDB40-TB3		Q324	8-729-140-04	TRANSISTOR 2SB1116A-L	
D309	6-500-522-21	DIODE 10EDB40-TB3		Q327	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D310	6-500-522-21	DIODE 10EDB40-TB3		Q351	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D311	6-500-522-21	DIODE 10EDB40-TB3		Q352	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D312	6-500-522-21	DIODE 10EDB40-TB3		Q361	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
D313	8-719-085-36	DIODE 11EQS04-TB5		Q362	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D316	8-719-988-61	DIODE 1SS355TE-17		< RESISTOR >			
D321	8-719-988-61	DIODE 1SS355TE-17		R101	1-216-833-11	METAL CHIP 10K 5%	1/10W
D322	8-719-988-61	DIODE 1SS355TE-17		R102	1-216-833-11	METAL CHIP 10K 5%	1/10W
D324	6-500-522-21	DIODE 10EDB40-TB3		R103	1-216-851-11	METAL CHIP 330K 5%	1/10W
D325	6-500-522-21	DIODE 10EDB40-TB3		R104	1-216-835-11	METAL CHIP 15K 5%	1/10W
D326	6-500-522-21	DIODE 10EDB40-TB3		R105	1-216-816-11	METAL CHIP 390 5%	1/10W
< EARTH TERMINAL >				R106	1-216-851-11	METAL CHIP 330K 5%	1/10W
EP101	1-537-770-21	TERMINAL BOARD, GROUND		R107	1-216-835-11	METAL CHIP 15K 5%	1/10W
EP301	1-537-770-21	TERMINAL BOARD, GROUND		R108	1-216-816-11	METAL CHIP 390 5%	1/10W
< FERRITE BEAD >				R109	1-216-853-11	METAL CHIP 470K 5%	1/10W
FB201	1-216-864-11	SHORT CHIP 0		R110	1-216-851-11	METAL CHIP 330K 5%	1/10W
FB202	1-216-864-11	SHORT CHIP 0		R111	1-216-847-11	METAL CHIP 150K 5%	1/10W
FB203	1-216-864-11	SHORT CHIP 0		R112	1-216-853-11	METAL CHIP 470K 5%	1/10W
FB204	1-216-864-11	SHORT CHIP 0		R113	1-216-851-11	METAL CHIP 330K 5%	1/10W

HCD-RG221

MAIN

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R114	1-216-847-11	METAL CHIP	150K	5%	1/10W	R205	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R115	1-216-857-11	METAL CHIP	1M	5%	1/10W	R206	1-216-841-11	METAL CHIP	47K	5%	1/10W
						R207	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R116	1-216-809-11	METAL CHIP	100	5%	1/10W	R208	1-216-821-11	METAL CHIP	1K	5%	1/10W
R117	1-216-809-11	METAL CHIP	100	5%	1/10W	R209	1-216-833-11	METAL CHIP	10K	5%	1/10W
R119	1-216-841-11	METAL CHIP	47K	5%	1/10W						
R120	1-216-857-11	METAL CHIP	1M	5%	1/10W	R210	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R121	1-216-841-11	METAL CHIP	47K	5%	1/10W	R211	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R212	1-216-833-11	METAL CHIP	10K	5%	1/10W
R127	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R213	1-216-821-11	METAL CHIP	1K	5%	1/10W
R128	1-216-835-11	METAL CHIP	15K	5%	1/10W	R214	1-216-821-11	METAL CHIP	1K	5%	1/10W
R129	1-216-841-11	METAL CHIP	47K	5%	1/10W						
R131	1-216-835-11	METAL CHIP	15K	5%	1/10W	R216	1-216-806-11	METAL CHIP	56	5%	1/10W
R132	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R217	1-216-806-11	METAL CHIP	56	5%	1/10W
						R218	1-215-916-00	METAL OXIDE	680	5%	3W
R133	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R219	1-215-916-00	METAL OXIDE	680	5%	3W
R134	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R220	1-216-837-11	METAL CHIP	22K	5%	1/10W
R135	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
R136	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R221	1-216-837-11	METAL CHIP	22K	5%	1/10W
R137	1-216-833-11	METAL CHIP	10K	5%	1/10W	R222	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
						R223	1-216-864-11	SHORT CHIP	0		
R138	1-216-821-11	METAL CHIP	1K	5%	1/10W	R225	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R139	1-216-864-11	SHORT CHIP	0			R226	1-216-841-11	METAL CHIP	47K	5%	1/10W
R141	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R142	1-216-821-11	METAL CHIP	1K	5%	1/10W	R227	1-216-821-11	METAL CHIP	1K	5%	1/10W
R151	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R228	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R229	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R152	1-216-833-11	METAL CHIP	10K	5%	1/10W	R230	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R153	1-216-833-11	METAL CHIP	10K	5%	1/10W	R231	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R154	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R155	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R232	1-216-833-11	METAL CHIP	10K	5%	1/10W
R156	1-216-853-11	METAL CHIP	470K	5%	1/10W	R235	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						R241	1-216-797-11	METAL CHIP	10	5%	1/10W
R157	1-216-841-11	METAL CHIP	47K	5%	1/10W	R242	1-216-838-11	METAL CHIP	27K	5%	1/10W
R158	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R243	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R159	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R160	1-216-821-11	METAL CHIP	1K	5%	1/10W	R244	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R161	1-216-833-11	METAL CHIP	10K	5%	1/10W	R245	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						R246	1-216-809-11	METAL CHIP	100	5%	1/10W
R162	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R247	1-216-833-11	METAL CHIP	10K	5%	1/10W
R163	1-216-833-11	METAL CHIP	10K	5%	1/10W	R248	1-216-833-11	METAL CHIP	10K	5%	1/10W
R164	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R165	1-216-833-11	METAL CHIP	10K	5%	1/10W	R249	1-216-841-11	METAL CHIP	47K	5%	1/10W
R166	1-216-833-11	METAL CHIP	10K	5%	1/10W	R250	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R251	1-216-833-11	METAL CHIP	10K	5%	1/10W
R167	1-216-833-11	METAL CHIP	10K	5%	1/10W	R252	1-216-864-11	SHORT CHIP	0		
R168	1-216-845-11	METAL CHIP	100K	5%	1/10W	R253	1-216-809-11	METAL CHIP	100	5%	1/10W
R169	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R170	1-216-833-11	METAL CHIP	10K	5%	1/10W	R262	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R171	1-216-833-11	METAL CHIP	10K	5%	1/10W	R263	1-216-857-11	METAL CHIP	1M	5%	1/10W
						R264	1-216-821-11	METAL CHIP	1K	5%	1/10W
R172	1-216-809-11	METAL CHIP	100	5%	1/10W	R265	1-216-833-11	METAL CHIP	10K	5%	1/10W
R173	1-216-833-11	METAL CHIP	10K	5%	1/10W	R266	1-216-845-11	METAL CHIP	100K	5%	1/10W
R174	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R175	1-216-833-11	METAL CHIP	10K	5%	1/10W	R272	1-216-853-11	METAL CHIP	470K	5%	1/10W
R176	1-216-849-11	METAL CHIP	220K	5%	1/10W	R273	1-216-864-11	SHORT CHIP	0		
						R274	1-216-864-11	SHORT CHIP	0		
R177	1-216-849-11	METAL CHIP	220K	5%	1/10W	R275	1-216-864-11	SHORT CHIP	0		
R194	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R281	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R195	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W						
R196	1-216-864-11	SHORT CHIP	0			R282	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R197	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R283	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
						R284	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R198	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R306	1-216-833-11	METAL CHIP	10K	5%	1/10W
R201	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R307	1-216-833-11	METAL CHIP	10K	5%	1/10W
R202	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R203	1-216-833-11	METAL CHIP	10K	5%	1/10W	R308	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R204	1-216-833-11	METAL CHIP	10K	5%	1/10W	R310	1-216-833-11	METAL CHIP	10K	5%	1/10W

MAIN

MOTOR (LD)

MOTOR (TB)

PANEL

Ref. No.	Part No.	Description			Remarks
R311	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R312	1-216-837-11	METAL CHIP	22K	5%	1/10W
R313	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R321	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R322	1-216-837-11	METAL CHIP	22K	5%	1/10W
R323	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R324	1-216-833-11	METAL CHIP	10K	5%	1/10W
R325	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R341	1-216-833-11	METAL CHIP	10K	5%	1/10W
R342	1-216-821-11	METAL CHIP	1K	5%	1/10W
R343	1-216-837-11	METAL CHIP	22K	5%	1/10W
R344	1-216-837-11	METAL CHIP	22K	5%	1/10W
R345	1-216-833-11	METAL CHIP	10K	5%	1/10W
R346	1-216-821-11	METAL CHIP	1K	5%	1/10W
R347	1-216-837-11	METAL CHIP	22K	5%	1/10W
R348	1-216-837-11	METAL CHIP	22K	5%	1/10W
R351	1-216-835-11	METAL CHIP	15K	5%	1/10W
R352	1-216-845-11	METAL CHIP	100K	5%	1/10W
R353	1-216-841-11	METAL CHIP	47K	5%	1/10W
R354	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R356	1-216-817-11	METAL CHIP	470	5%	1/10W
R357	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R358	1-216-809-11	METAL CHIP	100	5%	1/10W
R361	1-216-833-11	METAL CHIP	10K	5%	1/10W
R362	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R363	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R364	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R371	1-216-809-11	METAL CHIP	100	5%	1/10W
R372	1-216-809-11	METAL CHIP	100	5%	1/10W
R373	1-216-809-11	METAL CHIP	100	5%	1/10W
R374	1-216-833-11	METAL CHIP	10K	5%	1/10W
R375	1-216-833-11	METAL CHIP	10K	5%	1/10W
R376	1-216-833-11	METAL CHIP	10K	5%	1/10W
R377	1-216-833-11	METAL CHIP	10K	5%	1/10W
R378	1-216-833-11	METAL CHIP	10K	5%	1/10W
R379	1-216-833-11	METAL CHIP	10K	5%	1/10W
R380	1-216-833-11	METAL CHIP	10K	5%	1/10W
R381	1-216-833-11	METAL CHIP	10K	5%	1/10W
R382	1-216-833-11	METAL CHIP	10K	5%	1/10W
R383	1-216-833-11	METAL CHIP	10K	5%	1/10W
R384	1-216-833-11	METAL CHIP	10K	5%	1/10W
R385	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R386	1-216-837-11	METAL CHIP	22K	5%	1/10W
R387	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R388	1-216-837-11	METAL CHIP	22K	5%	1/10W
R389	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R390	1-216-837-11	METAL CHIP	22K	5%	1/10W
R391	1-216-833-11	METAL CHIP	10K	5%	1/10W
R392	1-216-821-11	METAL CHIP	1K	5%	1/10W
R393	1-216-833-11	METAL CHIP	10K	5%	1/10W
R394	1-216-821-11	METAL CHIP	1K	5%	1/10W
R395	1-216-837-11	METAL CHIP	22K	5%	1/10W

1-687-133-12 MOTOR (LD) BOARD

Ref. No.	Part No.	Description			Remarks
	1-687-134-12	MOTOR (TB) BOARD			*****
		< CONNECTOR >			
CN742	1-784-727-11	CONNECTOR, FFC 5P			*****
	A-4752-221-A	PANEL BOARD, COMPLETE			*****
		< CAPACITOR >			
C605	1-126-163-11	ELECT	4.7uF	20%	50V
C606	1-115-156-11	CERAMIC CHIP	1uF		10V
C607	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C608	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C609	1-115-156-11	CERAMIC CHIP	1uF		10V
C610	1-126-916-11	ELECT	1000uF	20%	6.3V
C611	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C612	1-126-157-11	ELECT	10uF	20%	16V
C613	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C614	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C615	1-124-257-00	ELECT	2.2uF	20%	50V
C617	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C618	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C619	1-124-589-11	ELECT	47uF	20%	16V
C620	1-119-772-91	ELECT	47uF	20%	35V
C621	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C622	1-126-163-11	ELECT	4.7uF	20%	50V
C623	1-126-163-11	ELECT	4.7uF	20%	50V
C624	1-162-918-11	CERAMIC CHIP	18PF	5%	50V
C625	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C626	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C628	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C629	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C630	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C631	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C632	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C633	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C634	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C635	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C636	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C637	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C638	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C639	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C640	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C641	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C642	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C643	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C646	1-124-234-00	ELECT	22uF	20%	16V
C647	1-124-589-11	ELECT	47uF	20%	16V
C648	1-124-234-00	ELECT	22uF	20%	16V
C649	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C653	1-162-959-11	CERAMIC CHIP	330PF	5%	50V
C654	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C655	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C656	1-162-927-11	CERAMIC CHIP	100PF	5%	50V

HCD-RG221

PANEL

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
< CONNECTOR >				Q605	8-729-120-28	TRANSISTOR	2SC1623-L5L6
CN601	1-784-751-11	CONNECTOR, FFC 29P		Q606	8-729-027-55	TRANSISTOR	DTC143EKA-T146
CN602	1-784-774-11	CONNECTOR, FFC 13P		Q607	8-729-027-55	TRANSISTOR	DTC143EKA-T146
CN603	1-784-778-11	CONNECTOR, FFC 17P		Q608	8-729-027-55	TRANSISTOR	DTC143EKA-T146
* CN604	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P		Q610	8-729-027-55	TRANSISTOR	DTC143EKA-T146
CN608	1-818-282-11	PIN, CONNECTOR 3P		Q616	8-729-027-55	TRANSISTOR	DTC143EKA-T146
< DIODE >				< RESISTOR >			
D603	8-719-988-61	DIODE 1SS355TE-17		R601	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
D604	8-719-988-61	DIODE 1SS355TE-17		R602	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
D605	8-719-988-61	DIODE 1SS355TE-17		R603	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
* D606	6-500-486-01	DIODE PTZ-TE25-11B		R604	1-216-841-11	METAL CHIP	47K 5% 1/10W
D607	8-719-988-61	DIODE 1SS355TE-17		R605	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
D608	8-719-988-61	DIODE 1SS355TE-17		R606	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
D609	8-719-988-61	DIODE 1SS355TE-17		R607	1-216-841-11	METAL CHIP	47K 5% 1/10W
D610	8-719-056-78	DIODE UDZ-TE-17-4.3B		R608	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
D611	8-719-988-61	DIODE 1SS355TE-17		R609	1-216-837-11	METAL CHIP	22K 5% 1/10W
D613	8-719-988-61	DIODE 1SS355TE-17		R610	1-216-833-11	METAL CHIP	10K 5% 1/10W
D614	8-719-988-61	DIODE 1SS355TE-17		R611	1-216-837-11	METAL CHIP	22K 5% 1/10W
D615	8-719-988-61	DIODE 1SS355TE-17		R612	1-216-833-11	METAL CHIP	10K 5% 1/10W
D616	8-719-988-61	DIODE 1SS355TE-17		R613	1-216-837-11	METAL CHIP	22K 5% 1/10W
D620	8-719-988-61	DIODE 1SS355TE-17		R614	1-216-837-11	METAL CHIP	22K 5% 1/10W
D621	8-719-988-61	DIODE 1SS355TE-17		R615	1-216-837-11	METAL CHIP	22K 5% 1/10W
D623	8-719-988-61	DIODE 1SS355TE-17		R616	1-216-833-11	METAL CHIP	10K 5% 1/10W
D624	8-719-988-61	DIODE 1SS355TE-17		R617	1-216-837-11	METAL CHIP	22K 5% 1/10W
D625	8-719-988-61	DIODE 1SS355TE-17		R618	1-216-833-11	METAL CHIP	10K 5% 1/10W
D630	8-719-988-61	DIODE 1SS355TE-17		R619	1-216-837-11	METAL CHIP	22K 5% 1/10W
D631	8-719-978-33	DIODE DTZ-TT11-6.8B		R620	1-216-837-11	METAL CHIP	22K 5% 1/10W
D632	8-719-083-57	DIODE UDZSTE-173.6B		R621	1-216-833-11	METAL CHIP	10K 5% 1/10W
D633	8-719-988-61	DIODE 1SS355TE-17		R622	1-216-049-11	RES-CHIP	1K 5% 1/10W
< FILTER >				R623	1-216-833-11	METAL CHIP	10K 5% 1/10W
FL601	1-518-976-11	INDICATOR TUBE, FLUORESCENT		R624	1-216-049-11	RES-CHIP	1K 5% 1/10W
< IC >				R625	1-216-833-11	METAL CHIP	10K 5% 1/10W
IC601	6-804-130-01	IC LC876996A-52S4-E		R626	1-216-049-11	RES-CHIP	1K 5% 1/10W
IC603	6-704-045-01	IC MM1574ANLE		R627	1-216-833-11	METAL CHIP	10K 5% 1/10W
IC604	8-759-533-04	IC M62703ML-E1		R628	1-216-833-11	METAL CHIP	10K 5% 1/10W
< SHORT >				R629	1-216-150-91	RES-CHIP	10 5% 1/8W
JR601	1-216-864-11	SHORT CHIP	0	R635	1-216-809-11	METAL CHIP	100 5% 1/10W
JR602	1-216-864-11	SHORT CHIP	0	R636	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR603	1-216-864-11	SHORT CHIP	0	R637	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR611	1-216-864-11	SHORT CHIP	0	R639	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
JR612	1-216-864-11	SHORT CHIP	0	R640	1-216-834-11	METAL CHIP	12K 5% 1/10W
JR617	1-216-864-11	SHORT CHIP	0	R641	1-216-849-11	METAL CHIP	220K 5% 1/10W
JR621	1-216-864-11	SHORT CHIP	0	R642	1-216-817-11	METAL CHIP	470 5% 1/10W
JR622	1-216-864-11	SHORT CHIP	0	R643	1-216-819-11	METAL CHIP	680 5% 1/10W
JR623	1-216-864-11	SHORT CHIP	0	R644	1-216-821-11	METAL CHIP	1K 5% 1/10W
< LED >				R645	1-216-823-11	METAL CHIP	1.5K 5% 1/10W
LED601	6-500-809-01	DIODE SELU5223C-STP15 (I/C)		R646	1-216-823-11	METAL CHIP	1.5K 5% 1/10W
< TRANSISTOR >				R647	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
Q601	8-729-116-57	TRANSISTOR	2SB1068-K	R648	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
Q602	8-729-140-04	TRANSISTOR	2SB1116A-L	R649	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
Q603	8-729-140-04	TRANSISTOR	2SB1116A-L	R650	1-218-867-11	METAL CHIP	6.8K 0.5% 1/10W
Q604	8-729-119-76	TRANSISTOR	2SA1175-HFE	R651	1-216-833-11	METAL CHIP	10K 5% 1/10W
				R652	1-216-835-11	METAL CHIP	15K 5% 1/10W
				R653	1-216-817-11	METAL CHIP	470 5% 1/10W
				R654	1-216-819-11	METAL CHIP	680 5% 1/10W
				R655	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R656	1-216-823-11	METAL CHIP	1.5K 5% 1/10W

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R657	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R730	1-216-809-11	METAL CHIP	100	5%	1/10W
R658	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R732	1-216-853-11	METAL CHIP	470K	5%	1/10W
R659	1-216-827-11	METAL CHIP	3.3K	5%	1/10W						
R660	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R733	1-216-809-11	METAL CHIP	100	5%	1/10W
R661	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R734	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R735	1-216-821-11	METAL CHIP	1K	5%	1/10W
R662	1-216-833-11	METAL CHIP	10K	5%	1/10W	R736	1-216-821-11	METAL CHIP	1K	5%	1/10W
R663	1-216-837-11	METAL CHIP	22K	5%	1/10W	R737	1-216-845-11	METAL CHIP	100K	5%	1/10W
R664	1-216-817-11	METAL CHIP	470	5%	1/10W						
R665	1-216-819-11	METAL CHIP	680	5%	1/10W	R738	1-216-845-11	METAL CHIP	100K	5%	1/10W
R666	1-216-821-11	METAL CHIP	1K	5%	1/10W	R739	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R740	1-216-845-11	METAL CHIP	100K	5%	1/10W
R667	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R741	1-216-845-11	METAL CHIP	100K	5%	1/10W
R668	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R742	1-216-845-11	METAL CHIP	100K	5%	1/10W
R669	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R670	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R743	1-216-845-11	METAL CHIP	100K	5%	1/10W
R671	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R744	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R745	1-216-845-11	METAL CHIP	100K	5%	1/10W
R674	1-216-835-11	METAL CHIP	15K	5%	1/10W	R746	1-216-845-11	METAL CHIP	100K	5%	1/10W
R675	1-216-835-11	METAL CHIP	15K	5%	1/10W	R747	1-216-845-11	METAL CHIP	100K	5%	1/10W
R676	1-216-835-11	METAL CHIP	15K	5%	1/10W						
R677	1-216-864-11	SHORT CHIP	0			R748	1-216-845-11	METAL CHIP	100K	5%	1/10W
R678	1-216-845-11	METAL CHIP	100K	5%	1/10W	R749	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R750	1-216-845-11	METAL CHIP	100K	5%	1/10W
R679	1-216-172-00	RES-CHIP	82	5%	1/8W	R751	1-216-845-11	METAL CHIP	100K	5%	1/10W
R680	1-216-838-11	METAL CHIP	27K	5%	1/10W	R752	1-216-845-11	METAL CHIP	100K	5%	1/10W
R681	1-216-849-11	METAL CHIP	220K	5%	1/10W						
R682	1-216-833-11	METAL CHIP	10K	5%	1/10W	R753	1-216-845-11	METAL CHIP	100K	5%	1/10W
R683	1-216-849-11	METAL CHIP	220K	5%	1/10W	R754	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R755	1-216-845-11	METAL CHIP	100K	5%	1/10W
R684	1-216-821-11	METAL CHIP	1K	5%	1/10W	R756	1-216-845-11	METAL CHIP	100K	5%	1/10W
R685	1-216-841-11	METAL CHIP	47K	5%	1/10W	R757	1-216-845-11	METAL CHIP	100K	5%	1/10W
R686	1-216-841-11	METAL CHIP	47K	5%	1/10W						
R687	1-216-833-11	METAL CHIP	10K	5%	1/10W	R758	1-216-845-11	METAL CHIP	100K	5%	1/10W
R688	1-216-817-11	METAL CHIP	470	5%	1/10W	R759	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R760	1-216-845-11	METAL CHIP	100K	5%	1/10W
R689	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R761	1-216-845-11	METAL CHIP	100K	5%	1/10W
R690	1-216-809-11	METAL CHIP	100	5%	1/10W	R762	1-216-845-11	METAL CHIP	100K	5%	1/10W
R691	1-216-809-11	METAL CHIP	100	5%	1/10W						
R692	1-216-809-11	METAL CHIP	100	5%	1/10W	R763	1-216-845-11	METAL CHIP	100K	5%	1/10W
R693	1-216-809-11	METAL CHIP	100	5%	1/10W	R764	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R765	1-216-845-11	METAL CHIP	100K	5%	1/10W
R694	1-216-809-11	METAL CHIP	100	5%	1/10W	R766	1-216-845-11	METAL CHIP	100K	5%	1/10W
R695	1-216-809-11	METAL CHIP	100	5%	1/10W	R767	1-216-845-11	METAL CHIP	100K	5%	1/10W
R696	1-216-809-11	METAL CHIP	100	5%	1/10W						
R697	1-216-809-11	METAL CHIP	100	5%	1/10W	R768	1-216-845-11	METAL CHIP	100K	5%	1/10W
R698	1-216-182-00	RES-CHIP	220	5%	1/8W	R769	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R770	1-216-845-11	METAL CHIP	100K	5%	1/10W
R710	1-216-833-11	METAL CHIP	10K	5%	1/10W	R771	1-216-841-11	METAL CHIP	47K	5%	1/10W
R711	1-216-833-11	METAL CHIP	10K	5%	1/10W	R772	1-216-821-11	METAL CHIP	1K	5%	1/10W
R712	1-216-797-11	METAL CHIP	10	5%	1/10W						
R713	1-216-797-11	METAL CHIP	10	5%	1/10W	R773	1-216-809-11	METAL CHIP	100	5%	1/10W
R714	1-216-809-11	METAL CHIP	100	5%	1/10W	R774	1-216-809-11	METAL CHIP	100	5%	1/10W
						R775	1-216-809-11	METAL CHIP	100	5%	1/10W
R715	1-216-805-11	METAL CHIP	47	5%	1/10W	R776	1-216-817-11	METAL CHIP	470	5%	1/10W
R716	1-216-837-11	METAL CHIP	22K	5%	1/10W	R777	1-216-809-11	METAL CHIP	100	5%	1/10W
R717	1-216-827-11	METAL CHIP	3.3K	5%	1/10W						
R718	1-216-837-11	METAL CHIP	22K	5%	1/10W	R778	1-216-809-11	METAL CHIP	100	5%	1/10W
R719	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R779	1-216-809-11	METAL CHIP	100	5%	1/10W
						R780	1-216-817-11	METAL CHIP	470	5%	1/10W
R720	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R781	1-216-809-11	METAL CHIP	100	5%	1/10W
R721	1-216-833-11	METAL CHIP	10K	5%	1/10W	R782	1-216-809-11	METAL CHIP	100	5%	1/10W
R722	1-216-835-11	METAL CHIP	15K	5%	1/10W						
R723	1-216-809-11	METAL CHIP	100	5%	1/10W	R783	1-216-809-11	METAL CHIP	100	5%	1/10W
R725	1-216-809-11	METAL CHIP	100	5%	1/10W	R784	1-216-809-11	METAL CHIP	100	5%	1/10W
						R785	1-216-809-11	METAL CHIP	100	5%	1/10W
R727	1-220-397-11	METAL CHIP	4.7M	5%	1/10W	R786	1-216-833-11	METAL CHIP	10K	5%	1/10W
R728	1-220-397-11	METAL CHIP	4.7M	5%	1/10W	R787	1-216-809-11	METAL CHIP	100	5%	1/10W
R729	1-216-809-11	METAL CHIP	100	5%	1/10W						

HCD-RG221

PANEL	REM	SENSOR	SUB-TRANS	SW	TRANS
-------	-----	--------	-----------	----	-------

Ref. No.	Part No.	Description	Remarks
R788	1-216-809-11	METAL CHIP	100 5% 1/10W
R789	1-216-841-11	METAL CHIP	47K 5% 1/10W
R790	1-216-821-11	METAL CHIP	1K 5% 1/10W
R791	1-216-809-11	METAL CHIP	100 5% 1/10W
R792	1-216-809-11	METAL CHIP	100 5% 1/10W
R793	1-216-809-11	METAL CHIP	100 5% 1/10W
R794	1-216-809-11	METAL CHIP	100 5% 1/10W
R795	1-216-809-11	METAL CHIP	100 5% 1/10W
R796	1-216-809-11	METAL CHIP	100 5% 1/10W
R797	1-216-821-11	METAL CHIP	1K 5% 1/10W
R798	1-216-821-11	METAL CHIP	1K 5% 1/10W
R799	1-216-821-11	METAL CHIP	1K 5% 1/10W
R854	1-216-813-11	METAL CHIP	220 5% 1/10W
R861	1-216-833-11	METAL CHIP	10K 5% 1/10W
R862	1-216-809-11	METAL CHIP	100 5% 1/10W
R863	1-216-170-00	RES-CHIP	68 5% 1/8W
< SWITCH >			
S601	1-762-875-21	SWITCH, KEYBOARD (I/⏻)	
S602	1-762-875-21	SWITCH, KEYBOARD (DISLAY)	
S603	1-762-875-21	SWITCH, KEYBOARD (EQ BAND)	
S604	1-762-875-21	SWITCH, KEYBOARD (DISC 1)	
S605	1-762-875-21	SWITCH, KEYBOARD (DISC 2)	
S606	1-762-875-21	SWITCH, KEYBOARD (DISC 3)	
S607	1-762-875-21	SWITCH, KEYBOARD (DISC SKIP/EX-CHANGE)	
S608	1-762-875-21	SWITCH, KEYBOARD (▲)	
S610	1-762-875-21	SWITCH, KEYBOARD (P FILE)	
S611	1-762-875-21	EQSWITCH, KEYBOARD (PRESET EQ)	
S612	1-762-875-21	SWITCH, KEYBOARD (ENTER)	
S621	1-762-875-21	SWITCH, KEYBOARD (CD)	
S622	1-762-875-21	SWITCH, KEYBOARD (TUNER/BAND)	
S623	1-762-875-21	SWITCH, KEYBOARD (TAPE A/B)	
S624	1-762-875-21	SWITCH, KEYBOARD (GAME)	
S627	1-762-875-21	SWITCH, KEYBOARD (PLAY MODE/TUNING MODE)	
S628	1-762-875-21	SWITCH, KEYBOARD (GAME MIXING)	
S629	1-762-875-21	SWITCH, KEYBOARD (CD SYNC)	
S630	1-762-875-21	SWITCH, KEYBOARD (REC PAUSE/START)	
S641	1-762-875-21	SWITCH, KEYBOARD (GROOVE)	
S642	1-762-875-21	SWITCH, KEYBOARD (SURROUND)	
S643	1-762-875-21	SWITCH, KEYBOARD (EFFECT ON/OFF)	
S644	1-762-875-21	SWITCH, KEYBOARD (TUNING +)	
S645	1-762-875-21	SWITCH, KEYBOARD (▷)	
S646	1-762-875-21	SWITCH, KEYBOARD (▶▶ ALUBUM +)	
S647	1-762-875-21	SWITCH, KEYBOARD (◀◀ ALUBUM -)	
S648	1-762-875-21	SWITCH, KEYBOARD (⏮)	
S649	1-762-875-21	SWITCH, KEYBOARD (■)	
S650	1-762-875-21	SWITCH, KEYBOARD (TUNING -)	
< VIBRATOR >			
X601	1-760-252-12	VIBRATOR, CRYSTAL (32.768kHz)	
X602	1-795-004-21	VIBRATOR, CERAMIC (10MHz)	

REM BOARD			

< CONNECTOR >			
CN610	1-816-423-11	SOCKET, CONNECTOR 3P	

Ref. No.	Part No.	Description	Remarks
< IC >			
IC610	6-600-174-01	IC RPM7240-H4 (Ⓜ)	
< SHORT >			
JR624	1-216-296-11	SHORT CHIP	0

1-687-132-12 SENSOR BOARD			

< CONNECTOR >			
CN731	1-785-329-21	PIN, CONNECTOR (LIGHT ANGLE) 3P	
< IC >			
IC731	6-600-022-01	IC RPI-576	

SUB-TRANS BOARD			

< CONNECTOR >			
CN901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P	
< DIODE >			
D901	8-719-991-33	DIODE 1SS133T-77	
D902	6-500-522-21	DIODE 10EDB40-TB3	
D903	6-500-522-21	DIODE 10EDB40-TB3	
D904	6-500-522-21	DIODE 10EDB40-TB3	
D905	6-500-522-21	DIODE 10EDB40-TB3	
< TRANSFORMER >			
△ PT902	X-4956-294-1	TRANS ASSY, SUB (EXCEPT MX)	
△ PT902	X-4956-322-1	SUB TRANS ASSY (MX)	
< RELAY >			
△ RY901	1-755-276-21	RELAY, POWER	
< SWITCH >			
△ S901	1-786-055-21	SELECTOR,VOLTAGE (VOLTAGE SELECTOR)	(E2, E51)

1-687-669-12 SW BOARD			

< SWITCH >			
S751	1-786-514-11	SWITCH, LEVER (SLIDE) (LEVER)	

A-4752-215-A TRANS BOARD, COMPLETE (AR)			
A-4752-224-A TRANS BOARD, COMPLETE (MX)			
A-4752-620-A TRANS BOARD, COMPLETE (E2, E51)			

< CAPACITOR >			
C906	1-164-159-21	CERAMIC	0.1uF 50V
C908	1-128-553-11	ELECT	220uF 20% 63V

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

TRANS

VIDEO OUT

Ref. No.	Part No.	Description	Remarks		
C909	1-126-964-11	ELECT	10uF	20%	50V
C910	1-126-968-11	ELECT	100uF	20%	50V
C911	1-126-942-61	ELECT	1000uF	20%	25V
C920	1-131-679-31	FILM	0.01uF	5%	50V
C921	1-131-679-31	FILM	0.01uF	5%	50V
C922	1-131-679-31	FILM	0.01uF	5%	50V
C923	1-131-679-31	FILM	0.01uF	5%	50V
C924	1-136-165-00	FILM	0.1uF	5%	50V
C925	1-136-165-00	FILM	0.1uF	5%	50V
C926	1-164-159-21	CERAMIC	0.1uF		50V
< CONNECTOR >					
CN904	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P			
		(MX, AR)			
CN904	1-568-106-11	PIN, CONNECTOR (3.96mm PITCH) 4P			
		(E2, E51)			
CN905	1-564-506-11	PLUG, CONNECTOR 3P			
* CN906	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P			
* CN907	1-764-333-11	PLUG, CONNECTOR 10P			
< DIODE >					
D906	8-719-110-69	DIODE	RD27ESB4		
D908	6-500-522-21	DIODE	10EDB40-TB3		
< TRANSISTOR >					
Q902	8-729-048-52	TRANSISTOR	2SA1932 (TP)		
< RESISTOR >					
R903	1-249-430-11	CARBON	12K	5%	1/4W
R904	1-249-417-11	CARBON	1K	5%	1/4W
△ R908	1-217-831-11	FUSIBLE	1	5%	1/4W

VIDEO OUT BOARD					

< CONNECTOR >					
* CN805	1-564-704-11	PIN, CONNECTOR (SMALL TYPE) 2P			
< JACK >					
J803	1-774-227-11	JACK, PIN 1P (VIDEO OUT)			

MISCELLANEOUS					

7	1-763-117-13	FAN, DC			
8	1-769-940-11	WIRE (FLAT TYPE) (11 CORE)			
9	1-693-615-11	TUNER (FM/AM)			
10	1-400-285-11	F-BEAD, E2515MRT			
64	1-769-975-11	WIRE (FLAT TYPE) (13 CORE)			
65	1-769-883-11	WIRE (FLAT TYPE) (7 CORE)			
69	1-796-485-51	DECK, MECHANICAL (CWM43FF-05)			
73	1-775-251-11	WIRE (FLAT TYPE) (27 CORE)			
△ 103	1-777-071-83	CORD, POWER (E51)			
△ 103	1-783-941-22	CORD, POWER (AR)			
△ 103	1-827-226-11	CORD, POWER (MX, E2)			
152	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)			
153	1-687-134-12	MOTOR (TB) BOARD			

Ref. No.	Part No.	Description	Remarks
226	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)	
227	1-773-048-11	WIRE (FLAT TYPE) (17 CORE)	
△ 229	8-820-244-01	OPTICAL PICK-UP (KSM-215DCP/C2NP)	
230	1-471-035-11	MAGNET ASSY	
233	1-469-854-11	CORE, FERRITE	
△ F904	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8.0AL/250V)	
△ F905	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8.0AL/250V)	
△ F906	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15AL/250V)	
△ F907	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15AL/250V)	
M741	A-4723-963-A	MOTOR ASSY, TABLE	
△ PT901	1-443-237-11	TRANSFORMER, POWER (EXCEPT MX)	
△ PT901	1-443-284-11	TRANSFORMER, POWER (MX)	
△ PT902	X-4956-294-1	TRANS ASSY, SUB (EXCEPT MX)	
△ PT902	X-4956-322-1	SUB TRANS ASSY (MX)	
RE701	1-477-680-12	ENCODER, ROTARY	

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]